

Akuvox

VP-R47P User Manual

Content

1 Welcome.....	6
2 Product Overview.....	8
2.1 Instruction.....	8
2.2 Technical Specification.....	9
2.3 Equipment Appearance And Interface Description.....	10
2.3.1 Interface Description.....	11
2.3.2 Keypad Description.....	11
2.4 Indicators.....	12
3 Installation.....	13
3.1 Equipment Packaging.....	13
3.2 Connecting Video Phone.....	13
3.3 Installation Considerations.....	14
4 Getting Started.....	15
4.1 Basic Operation.....	15
4.1.1 Main Screen Instruction.....	15
4.1.2 Status And Notifications Instruction.....	16
4.1.3 Using The Touchscreen.....	17
4.1.4 Startup And Shutdown.....	17
4.1.5 View / Turn Off Notifications.....	18
4.2 Connecting To Network And Wi-Fi.....	18
4.2.1 Configuring Static IP.....	19
4.2.2 Configuring DHCP.....	20
4.2.3 Configuring PPPOE.....	21
4.2.4 Configuring Wi-Fi.....	22
4.3 SIP Account Configuration.....	26
4.3.1 Add Account.....	27
4.3.2 SIP Account ON/OFF.....	29
4.3.3 Modify/Remove SIP Account.....	29
4.4 Sound.....	30
4.4.1 Silent Mode.....	31
4.4.2 Volumes.....	32
4.4.3 Ringtone.....	32
4.4.4 System Sound.....	33
4.5 Audio Settings.....	33
4.6 Video Settings.....	34

4.7 Call Settings.....	35
4.7.1 Do Not Disturb.....	36
4.7.2 Call Waiting.....	36
4.7.3 Always forwarding&Forwarding Number.....	37
4.7.4 Call forwarding busy&Forwarding Number.....	37
4.7.5 No Answer Forwarding&Forwarding Number.....	37
4.7.6 Time out.....	38
4.7.7 Playtone.....	38
4.7.8 Intercom.....	38
4.8 Dial Plan.....	38
4.9 Auto Provision.....	39
4.10 Personalize.....	40
4.10.1 Log Level.....	40
4.10.2 Hook Mode.....	40
4.11 Reboot Manager.....	40
4.11.1 Reboot time.....	40
4.11.2 Status of time.....	41
4.11.3 Status of active.....	41
4.11.4 Reboot settings.....	41
4.12 Date & Time.....	41
4.13 Personalization Settings.....	44
4.13.1 Wallpaper.....	44
4.13.2 Widgets.....	45
4.13.3 Shortcuts.....	47
4.13.4 Modify Extended Bar.....	48
4.13.5 Ringtone.....	48
4.14 Backup & Reset.....	49
5 Function.....	50
5.1 Call Function.....	50
5.1.1 Make A Call.....	50
5.1.2 Dial Out From Contact.....	52
5.1.3 Receive A Call.....	53
5.1.4 Call Options.....	55
5.1.5 Call Records.....	56
5.2 Contacts.....	59
5.2.1 Local Phone Book.....	59
5.2.2 Broadsoft Phone Book.....	62
5.2.3 Remote Phone Book.....	62
5.2.4 LDAP.....	62
5.2.5 Group.....	63
5.3 BLF.....	64
5.4 Intercom.....	66
5.5 Call Return.....	67

5.6 BLFList.....	67
5.7 Pickup & Group Pickup.....	68
5.8 ACD.....	69
5.9 Hot Desking.....	70
5.10 Conference.....	71
5.10.1 Create 3-way conference.....	71
5.11 Transfer.....	72
5.11.1 Blind Transfer.....	72
5.11.2 Attended Transfer.....	73
5.12 Keypad Input.....	74
5.13 Webpage Browser.....	74
5.13.1 Open The Webpage.....	74
5.14 Camera.....	75
5.14.1 Photograph Mode.....	75
5.15 Gallery.....	77
5.15.1 View Photo & Picture & Video.....	77
5.16 Bluetooth.....	78
5.16.1 Turning Bluetooth On /Off.....	79
5.16.2 Changing Bluetooth Device Name.....	79
5.16.3 Paring VP-R47P With A Bluetooth Device.....	79
5.16.4 Un-pairing A Bluetooth Device.....	80
5.17 USB.....	80
5.18 Calendar.....	81
5.18.1 Add An Account.....	81
5.18.2 View Calendar.....	82
5.18.3 New Activities.....	82
5.18.4 Edit Activities.....	83
5.18.5 Delete Activities.....	83
5.19 Clock.....	84
5.19.1 Alarm.....	84
5.19.2 Countdown Timer.....	86
5.19.3 Stopwatch.....	87
5.20 Email.....	87
5.20.1 Add A New Email Account.....	87
5.21 Music.....	88
5.22 Explorer.....	89
5.23 Video Player.....	90
5.23.1 Floating Browse Mode.....	91
5.24 Others.....	92
5.24.1 Apk Installer.....	92
5.24.2 Ping Tool.....	93
6 Software Upgrade.....	97
6.1 Immediate Update.....	97

6.1.1 Select Other Upgrade Package.....	98
6.1.2 Local Update.....	98
6.1.3 Remote Update.....	99
6.2 Auto Update Period.....	101
6.3 Upgrade on the web.....	101
6.4 Check Update After System Power On.....	102
7 System Maintenance.....	103
7.1 System State Inspection.....	103
7.2 IP Query.....	103
7.3 SIP Account Registration Query.....	104
7.4 Backup & Reset.....	105
7.5 Failure Process.....	105
8 Web Interface.....	107
8.1 Web login.....	107
8.2 Status->Basic.....	107
8.3 Account->Basic.....	109
8.4 Account->Advanced.....	111
8.5 Network ->Advanced.....	114
8.6 Phone->Time.....	115
8.7 Phone->Preference.....	116
8.8 Phone ->Call Feature.....	117
8.9 Phone->Audio.....	120
8.10 Phone->Video.....	121
8.11 Phone->Ext Key.....	122
8.12 Phone->Replace Rule.....	123
8.13 Phone->Dial Plan.....	124
8.14 Phone->Action URL.....	125
8.15 Phone->Multicast.....	127
8.16 PhoneBook->Local Book.....	128
8.17 PhoneBook->Remote Book.....	129
8.18 PhoneBook->Call Log.....	130
8.19 PhoneBook->LDAP.....	131
8.20 PhoneBook->Broadsoft.....	132
8.21 Upgrade->Basic.....	133
8.22 Upgrade->Advanced.....	134
8.23 Security->Basic.....	136
8.24 Security->Advanced.....	137

1 Welcome

Thank you for purchasing Akuvox VP-R47P Multimedia VoIP Phone. The VP-R47P is an innovative smart desk phone loaded with tremendous value for business communications as well as unprecedented power for advanced custom business applications development and personalization. Featuring Android 4.2 system, a 7 inch capacitive touch screen TFT LCD, a 2M CMOS sensor camera, Bluetooth, integrated PoE and Wireless, VP-R47P provides excellent user experiences such as high quality video phone, smooth internet surfing, various 3rd party applications and daily information. Built with advanced security protection for privacy, this Multimedia VoIP Phone also features broad interoperability with most 3rd party SIP based devices, IPPBX and major IMS platforms. The VP-R47P represents the future multimedia terminal in modern Internet age.

This user manual is designed to help you understand how to configure and manage the VP-R47P Multimedia VoIP Phone. Besides demonstrating how to install this unit with ease, this manual will explain how to fully utilize the phone's voice calling features as well as explore all the built-in feature-rich applications.



FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with

minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ✓ Reorient or relocate the receiving antenna.
 - ✓ Increase the separation between the equipment and receiver.
 - ✓ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-

2 Product Overview

2.1 Instruction

VP-R47P is an Android-based multimedia terminal with a 7 inch touch screen and a 2M CMOS sensor camera. It supports H.264/H.263 codec with adaptive bandwidth adjustment. The 7 inch touch screen offers excellent user experiences such as high quality videophone, smooth internet surfing, various Android Apps and daily information.

VP-R47P provides 2 Ethernet ports, 1USB, 1HDMI, and one 3.5mm headset/audio port.



2.2 Technical Specification

Model	VP-R47P
Graphic Display	<ul style="list-style-type: none"> ● 7 inch capacitive touch screen TFT LCD, 1024x600 pixels, 16:9 wide screen aspect ratio
Camera	<ul style="list-style-type: none"> ● 2 mega pixels CMOS camera, free rotation
Network Protocol	<ul style="list-style-type: none"> ● SIP RFC3261,TCP/UDP/IP,PPPOE,RTP/RTCP
Operation System	<ul style="list-style-type: none"> ● Android 4.2
Voice Codec	<ul style="list-style-type: none"> ● G.711A/U, G.723, G.729a/b, G.722, iLBC, ● AMR-NB, AMR-WB, OPUS
Video Codec	<ul style="list-style-type: none"> ● H.263, H.264
DTMF Modes	<ul style="list-style-type: none"> ● Inband, RFC2833, SIP INFO
Audio Features	<ul style="list-style-type: none"> ● VAD, CNG, Echo Canceller G.165/G.168
Video Features	<ul style="list-style-type: none"> ● QCIF, CIF, 4CIF, VGA,720P ● Video bitrate: 64kbps~2Mbps ● PIP ● Full Screen ● local video ON/OFF control ● Image Codec: JPEG,GIF,PNG,BMP
Others	<ul style="list-style-type: none"> ● Download content from the specified server ● Information receiving, storing, and rendering capabilities ● Web browser ● Contacts and Call records management ● Support playing local or online video
Network Interface	<ul style="list-style-type: none"> ● Dual switched 10/100/1000Mbps port,supporting IEEE802.11af and IEEE802.az Energy Efficient Ethernet; optional PoE
Wi-Fi	<ul style="list-style-type: none"> ● IEEE802.11 b/g/n
Expansion Interface	<ul style="list-style-type: none"> ● USB 2.0, 3.5mm headset jack, HDMI
IP assignment	<ul style="list-style-type: none"> ● Static IP, DHCP, PPPoE
Management	<ul style="list-style-type: none"> ● LCD Menu Configuration,TR069, WebUI
Dimension	<ul style="list-style-type: none"> ● 240×192×106mm

2.3 Equipment Appearance And Interface Description

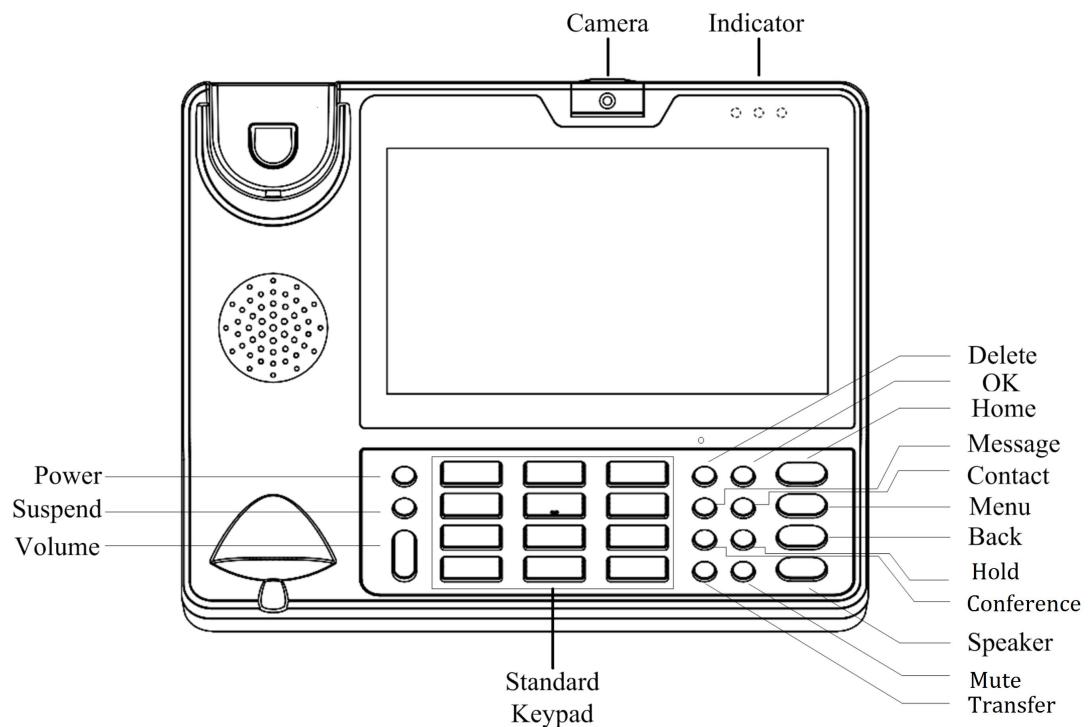


Figure 1-1 R47P Front View

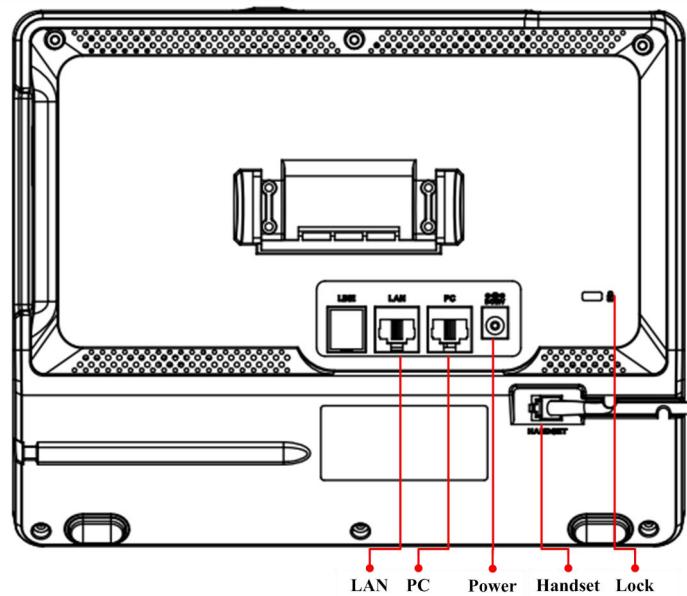


Figure 1-2 R47P Rear View

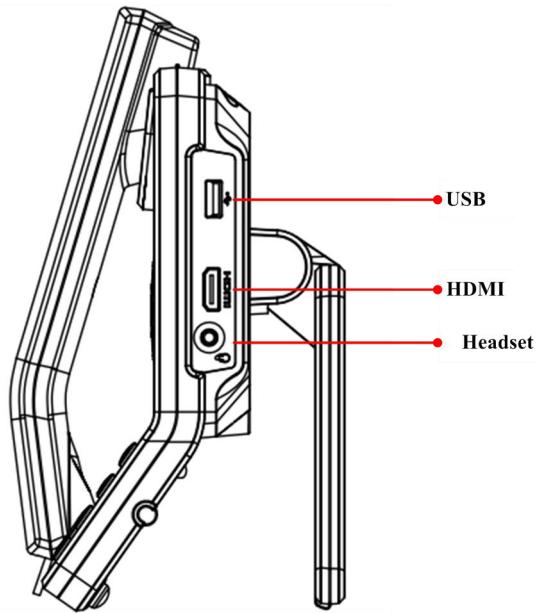


Figure 1-3 R47P Profile View

2.3.1 Interface Description

Interface	Description
Camera	Adjustable camera shooting angle, rotate down the camera to "off" angle.
USB interface	External USB storage device
Headset	Connect to 3.5mm stereo headphone, headset device
HDMI	Use HDMI cable to output the video to a TV screen
LAN	Network interface can be connected to a hub, switch or other network access devices. It also supports POE(Power over Ethernet) .
PC	Share the network access from LAN port, and for PC and other equipment connection
Power	Connect to 12V adapter, Power supply
Handset	Connect to handset
Lock	Lock the video phone with a Laptop lock

Note: If Power over Ethernet is being used, do not plug in the AC adapter.

2.3.2 Keypad Description

Interface	Description
Power	Turn on/off the LCD, Reboot, Silent mode
Suspend	Turn on/off the LCD, Reboot, Silent mode

Volume	Press + or – for the phone volume adjustment	
Standard Keypad	Input the number or symbol	
Function Key	Delete	Delete a character before the cursor
	OK	Same function with soft keyboard "Enter" key
	Message	Optional
	Contact	Enter Into the contacts list, you can view the local contact
	Conference	The first party is held in the case, according to a conference key, the first party can be combined to achieve a tripartite meeting
	Hold	To hold a call during the call
	Transfer	To transfer the current call to the third party
	Mute	The other party cannot heard the voice during the call
Home		Return to the main screen, and long press, it will display recently used applications
Menu		To call up the System or program setup menu
Back		Return to the previous menu
Speaker		Speaker

2.4 Indicators

Indicator Name	Icon	Status	Description
Power		ON	System is under working
		OFF	System is not working
Network Connection		ON	Network (LAN Port) is connected
		OFF	Network (LAN Port) is disconnected
Information		Flashing	Contains Miss Calls or Unread Message
		OFF	Normal status


3 Installation

3.1 Equipment Packaging

Name	Quantity
Main Case	1
Handset	1
Phone Cord	1
Power Adapter	1
Ethernet Cable	1
Quick Start Guide	1

3.2 Connecting Video Phone

- **Connection diagram**

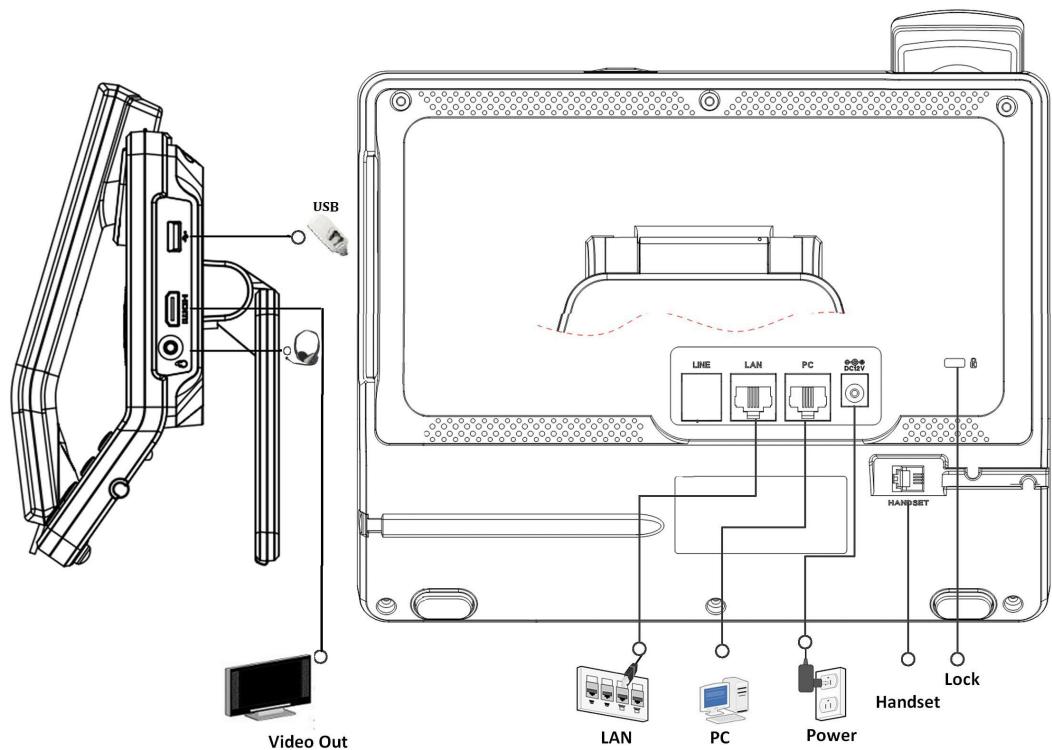

- **Connecting to Network**

Use the matched network cable to connect the LAN Port of the video phone to the Router or Switch. Viewing the top right corner of the screen, if the indicator light  is on, network cable is connected properly.

- **Connecting to PC**

Use the matched network cable to connect the PC Port of the video phone. The PC can access to the internet network via PC Port of the video phone.

3.3 Installation Considerations

This product is a desktop product, and here are some safety recommendations about the installation and the usage:

- Do not use this product near water, such as: bath, washbasin, kitchen sink and other damp places and so on;
- Place the device in a place away from heat;
- Place the device away from traffic areas to prevent collisions;
- Please use the equipment with the matching power adapter or POE;

4 Getting Started

4.1 Basic Operation

4.1.1 Main Screen Instruction



- Status bar, at the top of the screen, displaying the status of system information.
- Do Not Disturb plug-in, When enabled DND, prohibit incoming calls in; Incoming call will be normal when DND is closed.
- Accounts, R47P supports 6 lines. Accounts list will show the status of the current account.
- Extended Screen Prompt, Display the location of current screen page; and show how many pages extended.
- Shortcuts, at the bottom of the screen, user can drag a shortcut to this region to achieve the replacement of the shortcut. Supports max four shortcuts.

4.1.2 Status And Notifications Instruction

The status bar in main screen is divided into two zones, notification area and status area, as shown below:



Status Area

Icon	Description
	Network is connected
	Network is not connected
	Mute mode
	Alarm clock is set
	PPPOE is connected
	PPPOE is failed

Notification Area

Icon	Description
	SIP account is registered
	Missed call, number means how many missed calls
	downloading
	uploading
	Receives a new email
	An event is coming

4.1.3 Using The Touchscreen

- **Tap**

To select items on the screen (e.g., setting options, apps); to press onscreen buttons; to type letters and symbols using the onscreen keyboard.

- **Touch and Hold**

Touch the item on the screen and hold it without lifting your finger from the screen till an action occurs.

For example, touch and hold on a picture to bring up operation options.

- **Drag**

Touch and hold an item for a few seconds first. Once the item has a red frame activated, or a move option shows up, keep your finger on the screen and move it until the target position is reached. Then lift your finger up to release.

- **Slide**

Move your finger fast across the screen to slide. To view different idle screens or menu pages, slide left or right; to view the status bar on top of the screen, place your finger on the bar and slide it down. If your finger stays on the screen for too long, the item may be selected and sliding won't occur.

- **Double-click**

Click on the screen twice in quick succession, for example, when user surfs in browser, you can quickly click twice on the page, the page can be enlarged.

- **Pinch**

Place two fingers on the screen, then pinch them together (zoom out) or spread them apart (zoom in). This could be used in a picture.

4.1.4 Startup And Shutdown

- **Startup**

Connect to the power supply, the system automatically starts up.

- **Shutdown**

If you do not use the device, directly remove the power supply, to save electricity.


- **Reboot**

If you need to restart the device, according to the following steps:

- 1) Press and hold the "Power" button until the pop-up "Options" menu.
- 2) Click the "Reboot"

4.1.5 View / Turn Off Notifications

When viewing notifications, simply press and hold the status bar, drag down, as shown below:

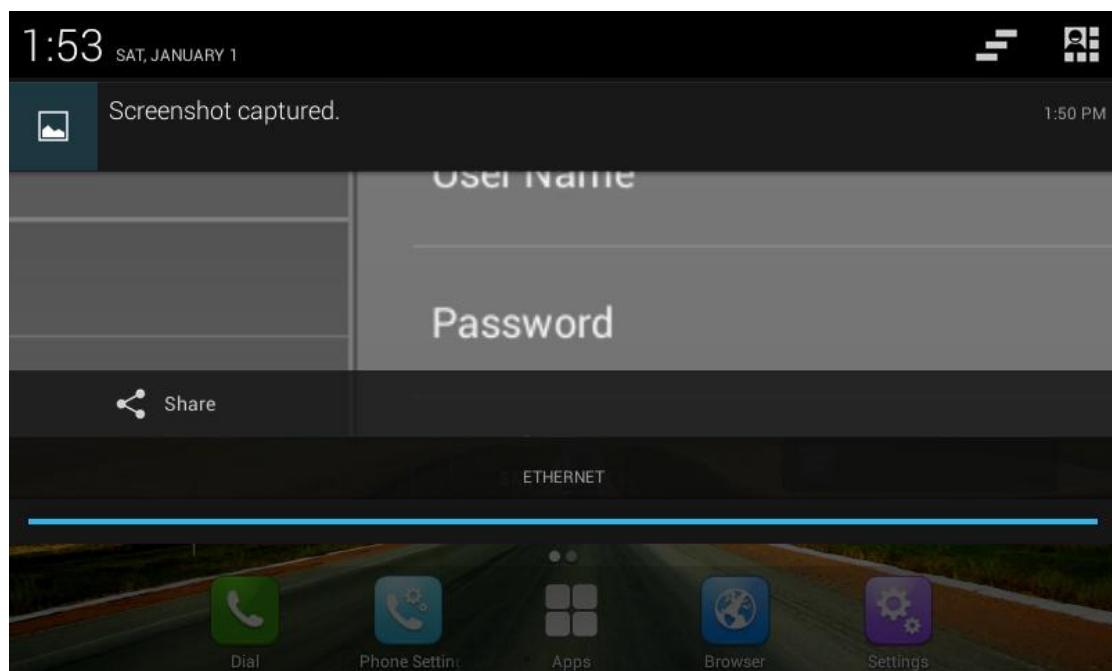

To turn off notifications, simply hold the notice at the bottom of the screen and then drag up or press the "Back" on the hard keyboard. Click on the icon to clear up the notice

4.2 Connecting To Network And Wi-Fi

VP-R47P supports a variety of network connections (Ethernet, Wireless) and device Network connections includes four modes, Static IP, DHCP, PPPoE, Wi-Fi access. DHCP is the default configuration. Device connections include EHS headset, USB and


Bluetooth device.

4.2.1 Configuring Static IP

You can select one of the following methods to enter the static IP configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks-> Ethernet-> Using static IP.
- Mode 2: In the main screen, tap  -> Settings-> Wireless & Networks-> Ethernet -> Using static IP.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar -> SETTINGS->  ->Wireless & Networks-> Ethernet->Use static IP.
- Mode 4: In the main screen, tap  ->Network Settings->LAN Connecting->Static IP.

Configuration page is shown as below:

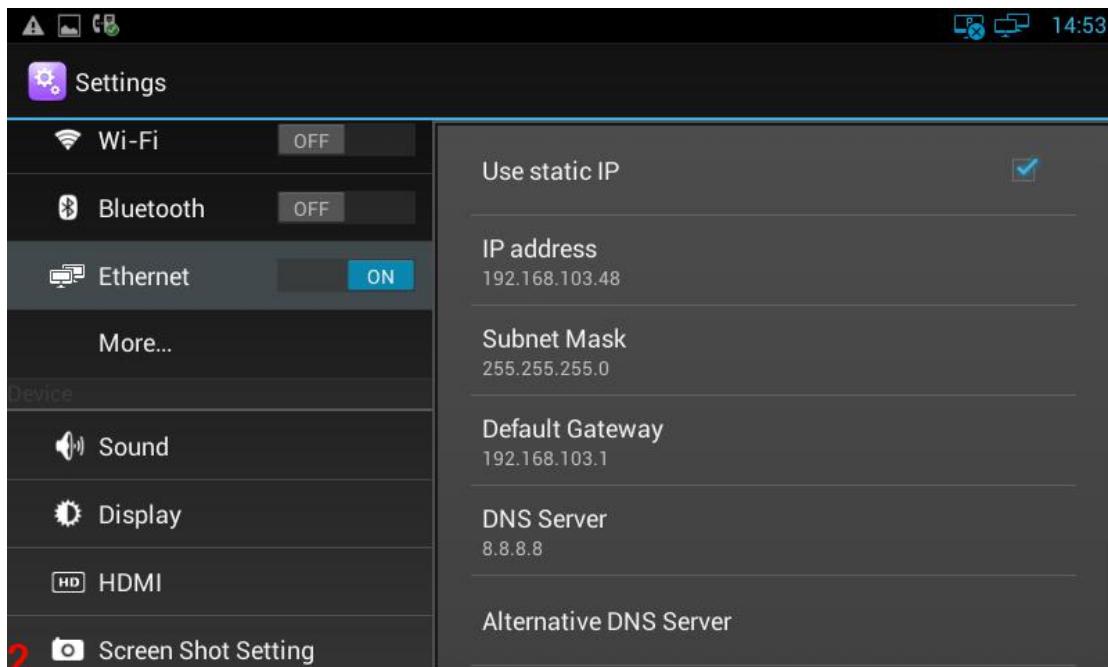

Configuration parameter specification:

Parameter	Specification
IP address	set the IP address of the device
Subnet Mask	set the subnet mask of the device


Default Gateway	set the default gateway
DNS Server	set the DNS address
Alternative DNS Server	set the backup DNS address

4.2.2 Configuring DHCP

You can select one of the following methods to enter the DHCP configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks-> Ethernet-> uncheck Using static IP.
- Mode 2: In the main screen, tap  -> Settings-> Wireless & Networks-> Ethernet -> uncheck Using static IP.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar ->click SETTINGS icon  ->Wireless & Networks-> Ethernet-> uncheck Use static IP.
- Mode 4: In the main screen, tap  ->Network Settings->LAN Connecting->DHCP.

Configuration page is shown as below:

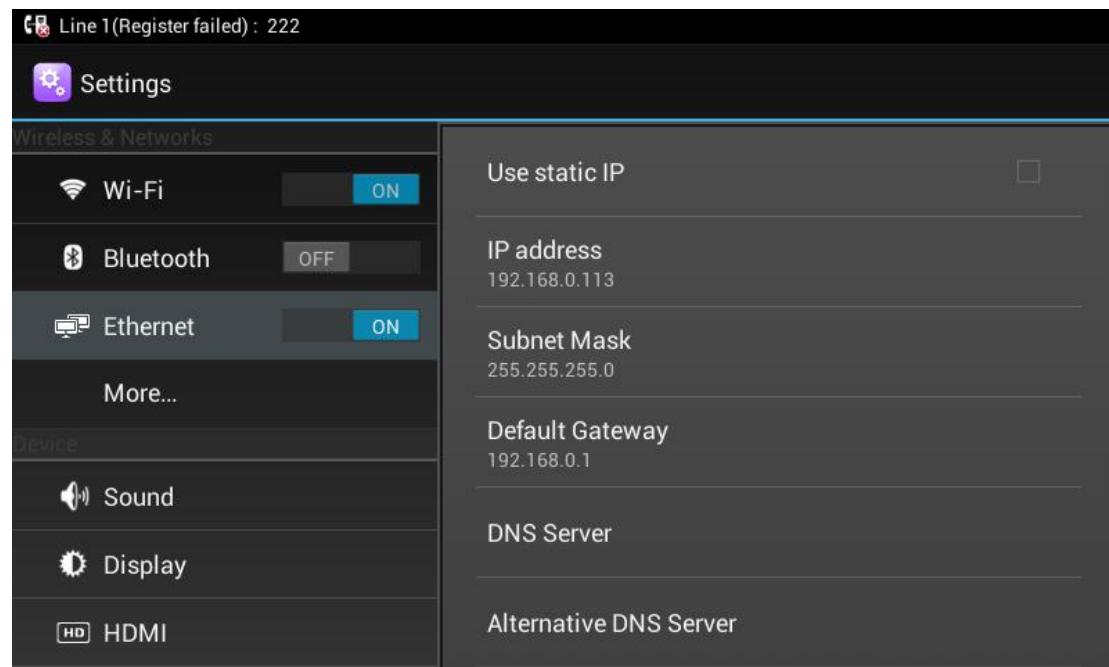

Note:


- 1) If DHCP acquired IP, it will display dynamic IP address information on the location of static IP configuration, cannot be modified, and there is a item of Use static DNS at the bottom the alternative DNS server, when checked, you can modify the primary DNS address and Secondary DNS address.
- 2) If DHCP is failed, the IP address will show as: 0.0.0.0.

4.2.3 Configuring PPPOE

You can select one of the following methods to enter the PPPOE configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks -> Ethernet ->More ->PPPOE.
- Mode 2: In the main screen, tap  -> Settings-> Wireless & Networks-> Ethernet -> More ->PPPOE.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar ->SETTINGS  ->Wireless & Networks-> Ethernet-> More ->PPPOE.
- Mode 4: In the main screen, tap  ->Network Settings->LAN Connecting->PPPOE

Configuration page is shown as below:

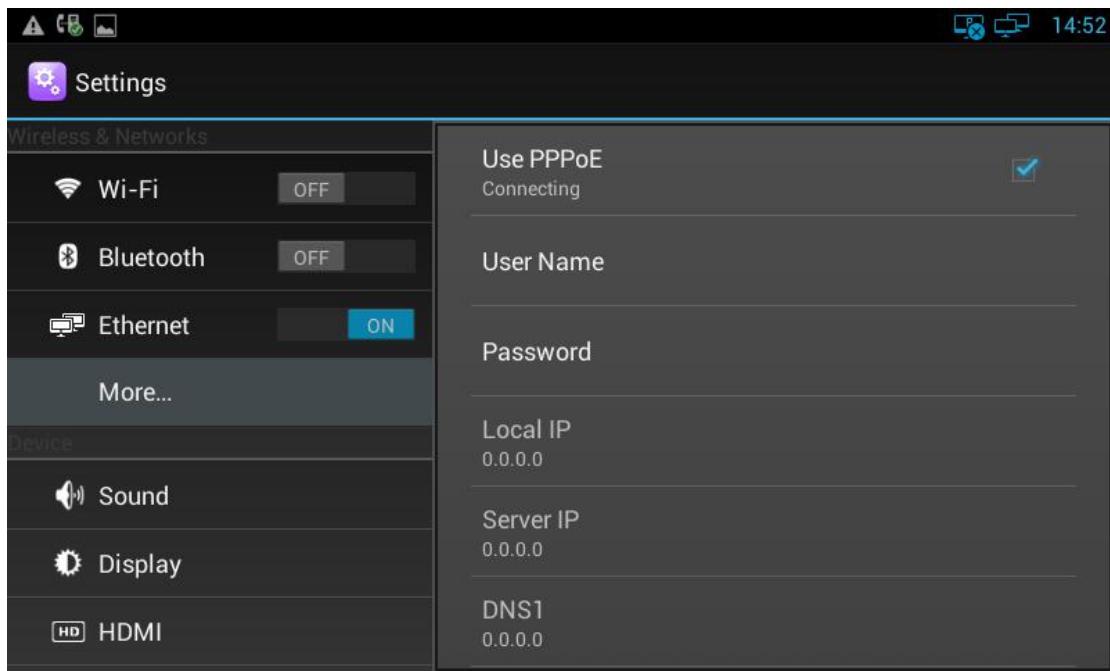

Parameter specification:

Parameter	Specification
Use PPPOE	Check <input checked="" type="checkbox"/> is to enable PPPOE, otherwise, disable.
User Name	PPPOE account, provided by ISP
Password	PPPOE password, provided by ISP

Proceed as follows:

- 1) Check Use PPPOE
- 2) Enter the correct user name and password of PPPOE

Note:

- 1) After dialing, can display the acquired IP address, server IP, the primary DNS, Secondary DNS information, status as connected
- 2) Not Dial, IP address information will be 0.0.0.0
- 3) There is a redial entry under Alternate DNS, click redial, then re-launch a PPPOE dial-up process, re-dial.


4.2.4 Configuring Wi-Fi

You can select one of the following methods to enter the Wi-Fi configuration:


- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks-> Ethernet- >Wi-Fi.
- Mode 2: In the main screen, tap  -> Settings-> Wireless & Networks-> Ethernet -> Wi-Fi.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar



Configuration page is shown as below:

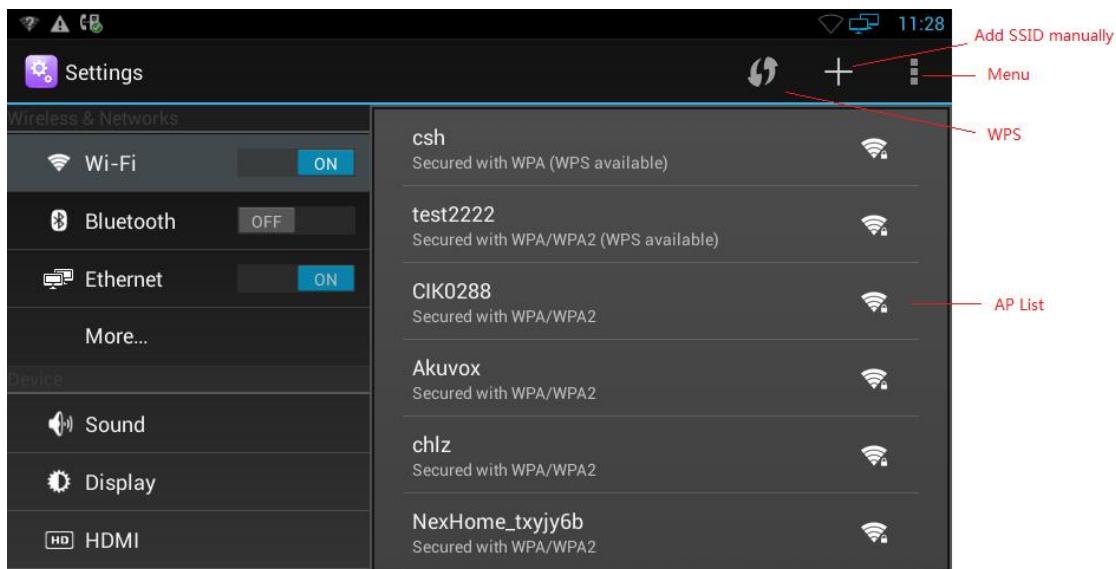


- 1) When the Wi-Fi switch is turned on, the video phone can list and display all Wi-Fi AP searched in the environment;
- 2) When connects to available AP in the environment, if a Wi-Fi AP is without password protection, there is no lock icon on Wi-Fi signal, it will automatically connect when clicked;
- 3) If a Wi-Fi AP is encryption, Wi-Fi signal will be added the lock icon, and when checked, it will pop up a dialog box to enter a password. If the password is incorrect, the connection will not be successful, as shown below:

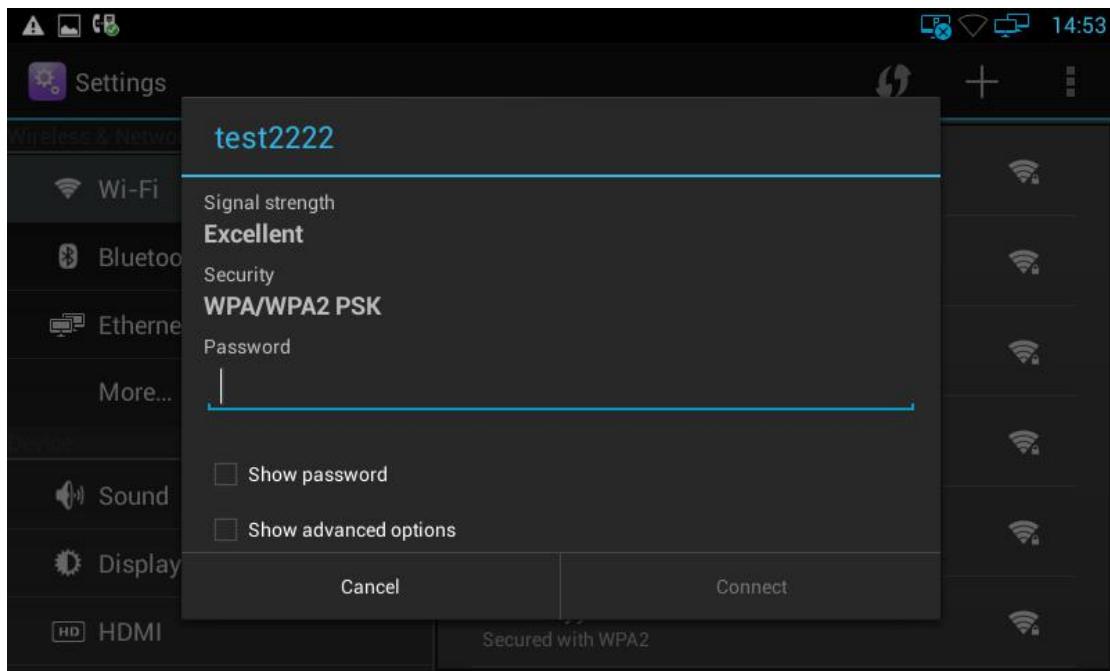


4) check Show advanced options, you can set Proxy server and IP mode.


- Proxy Settings

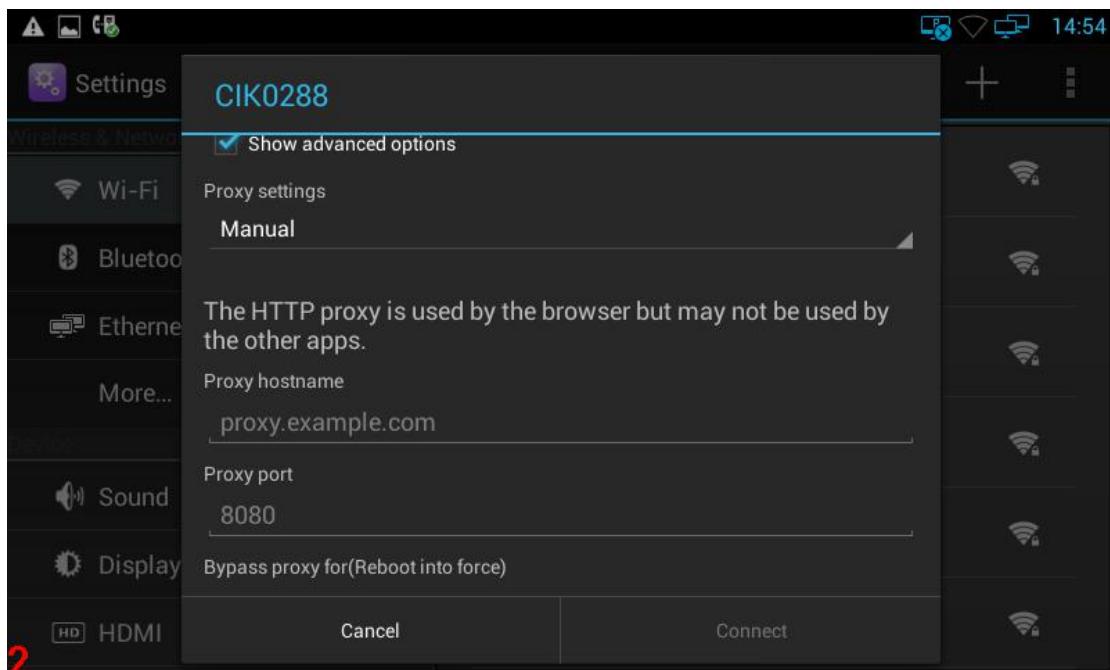

- IP settings(Static IP):

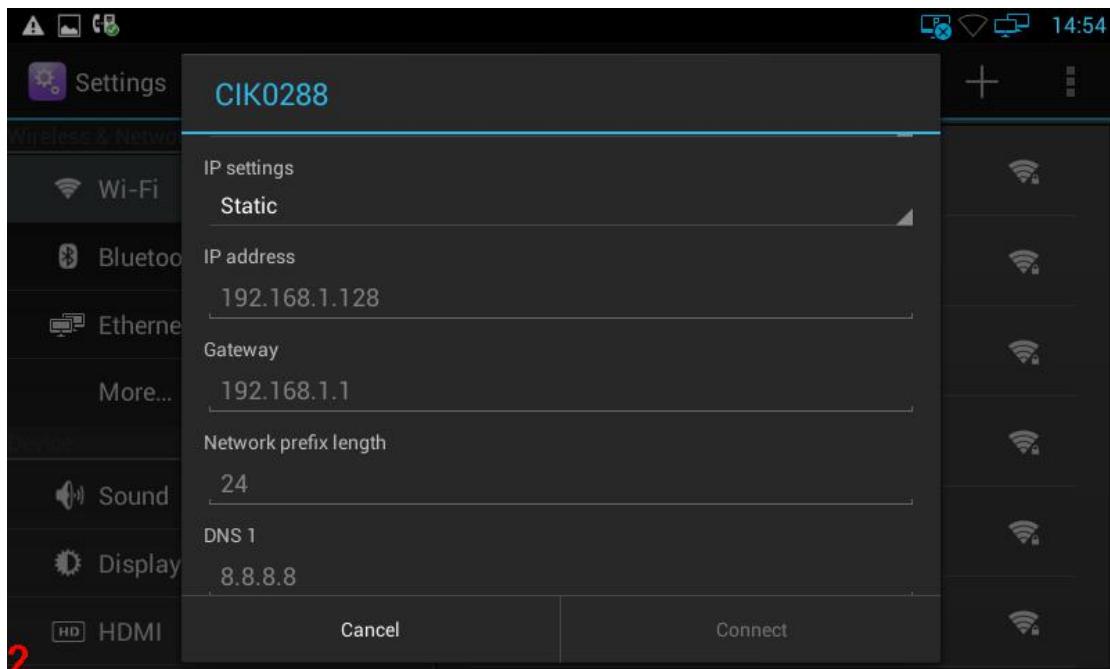

- 5) Long press on the connected Wi-Fi AP, it will pop-up a dialog box, you can forget the network or modify the network. Long press on the non-connected Wi-Fi AP, it will pop up a dialog box, and you can click and connect to network.
- 6) Click WPS(Wi-Fi Protected Setup) button, if the wireless router has WPS function, and the router WPS button is pressed, the video phone will be able to connect to the Wi-Fi without entering a password.
- 7) Press "+" symbol, you can add a SSID manually.
- 8) Click Menu, you can do the operations such as: Scan(scan the new wi-fi AP), WPS Pin Entry(enter the PIN on the Router, the phone will no need to input the wi-fi password), Wi-Fi Direct and Advanced.
- 9) In Advanced Menu, shown as below:

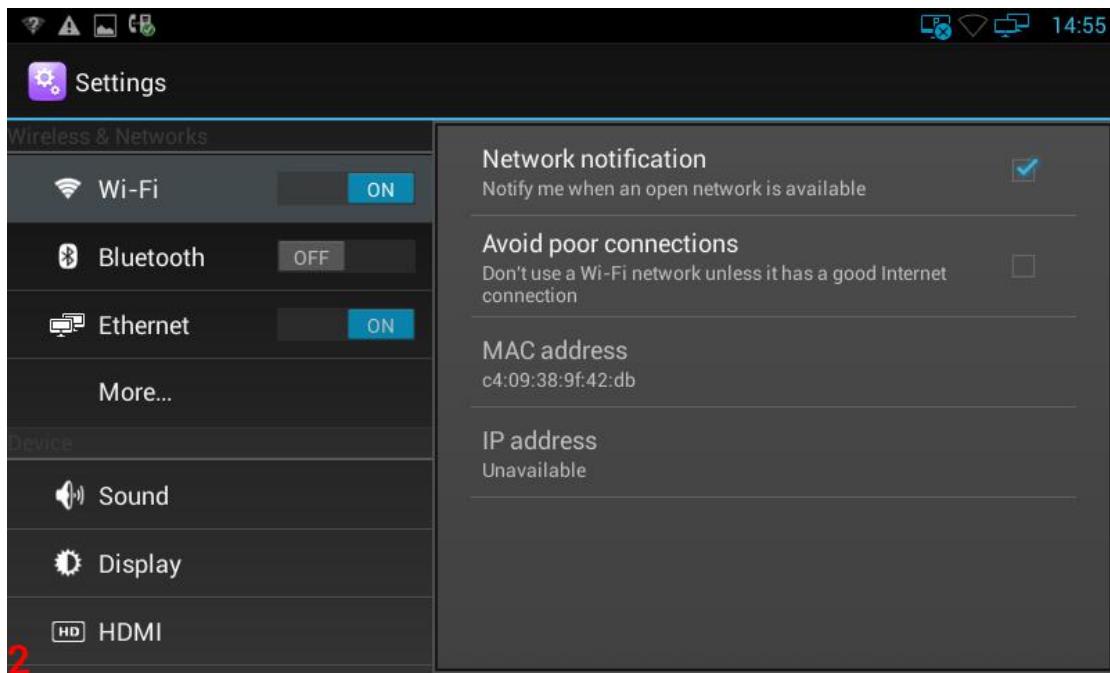


- 2
- a. Check Network notification, it will notify you when an open network is available;
 - b. Check Avoid poor connections, it will prompt that don't use a WiFi network unless it has a good internet connection;
 - c. View the Wi-Fi Mac address and IP address;

4.3 SIP Account Configuration


You can select one of the following methods to enter the SIP account configuration:


- Mode 1: In the main screen, click -> then click .
- Mode 2: In the main screen, click ->then Click ->and then click .
- Mode 3: Directly pick up the handset or press Speaker -> then click .
- Mode 4: Click Browser, input IP address to enter login interface. Input username: admin, password is admin, click Login into web, then click Account-Basic;

4.3.1 Add Account

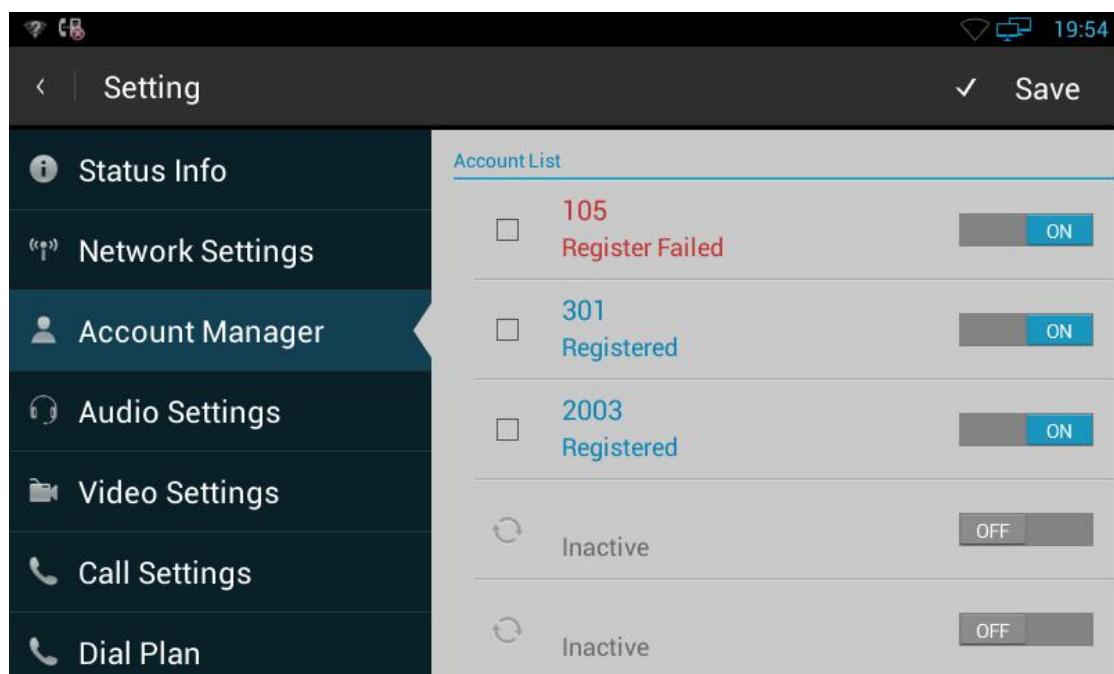

Click an account to enter Account Editor

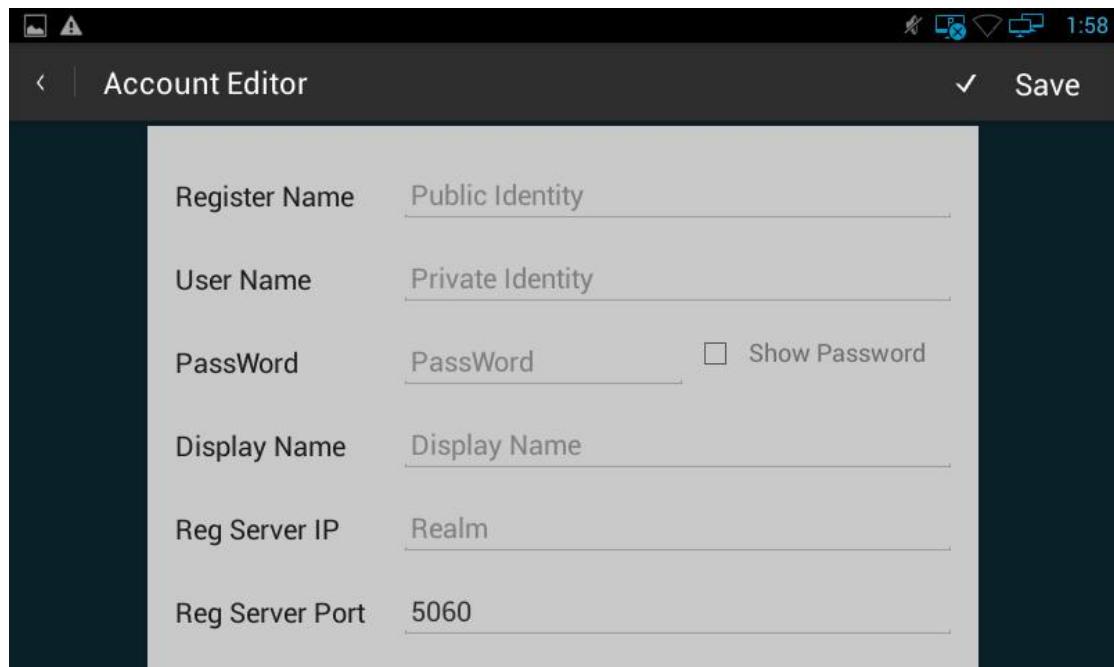

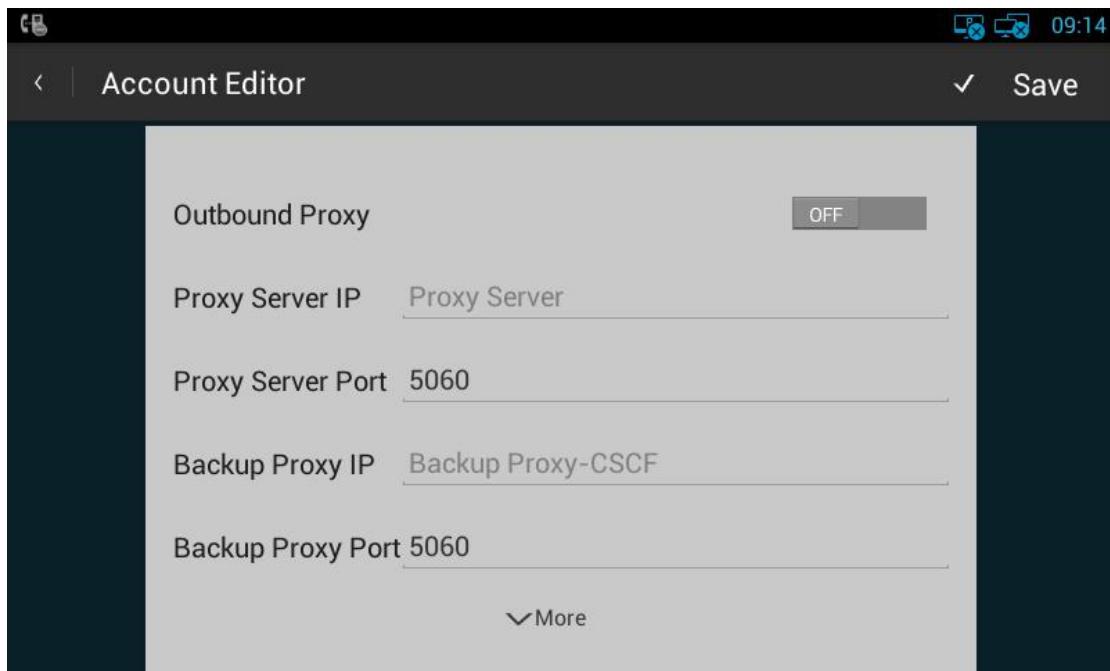

Configuration parameters are described as follows:

Parameter	Specification
Register Name	SIP Account ID provided by ISP
User Name	SIP User Name provided by ISP
Password	SIP Password provided by ISP
Display Name	SIP Display name
Reg Server IP	SIP Register Server, format: domain/IP, for example: 194.168.1.2
Reg Server Port	The default port is 5060.
Proxy Server IP	SIP Proxy Server, format: domain/IP, for example: 194.168.1.2
Proxy Server Port	The default port is 5060.
Backup Proxy IP	SIP Backup Proxy Server, format: domain/IP, for example: 194.168.1.2
Backup Proxy Port	The default port is 5060.


After all the parameters are configured, Click "save" button to save the configurations, then the sip account is added successfully. Then active the account.

4.3.2 SIP Account ON/OFF

After SIP account is configured and registered successfully, it will display the prompt "Registered" in the Account Manager, and the icon  will be displayed on the status bar.


If you want to disable the account, please click .

If the sip account is failed to register, the failure code will be displayed under the account, and then you can check with the account configuration or network connection. As shown below:

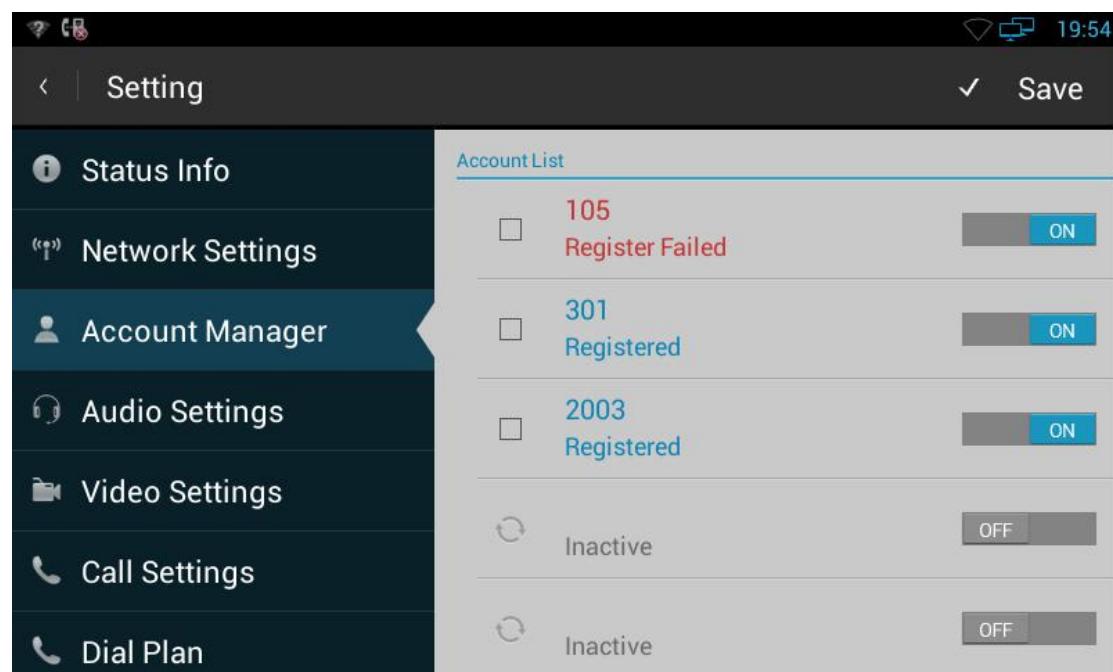

4.3.3 Modify/Remove SIP Account

- 1) Modify the sip account: Directly click the account to modify;
- 2) Remove the sip account: Click the box of the account which you want to delete, and then press "Clear Account".

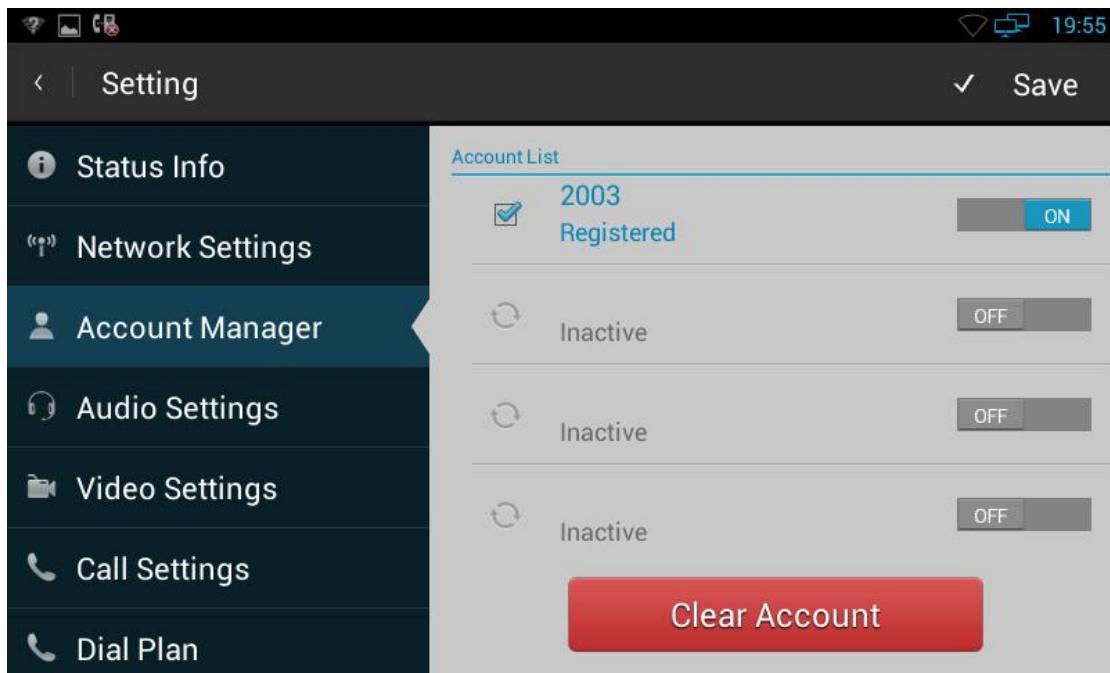


4.4 Sound

You can select one of the following methods to enter the Sound configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Sound.
- Mode 2: In the main screen, click -> Settings -> Sound.
- Mode 3: Drag down the status bar, click shortcut icon on the status bar -> SETTINGS -> Sound.


Configuration page is shown as below:

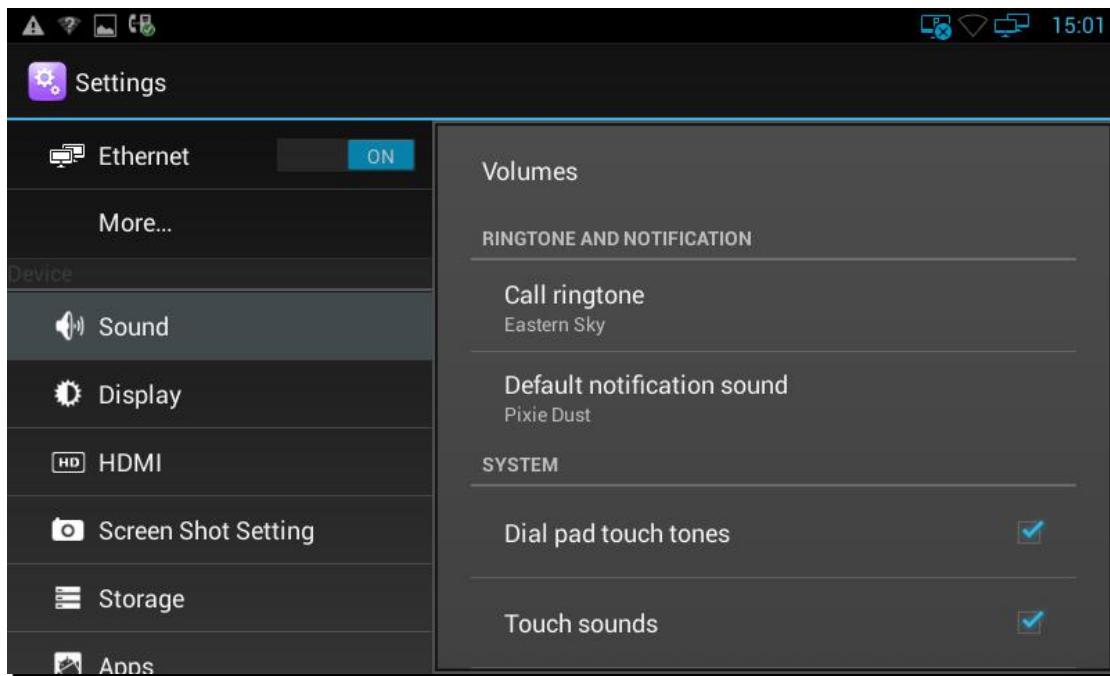

Including Volume, Ringtone and Notification, Dial pad touch tones and Touch sound.


4.4.1 Silent Mode

Long press the Power button, then choose Silent mode in the pop-up menu. In addition to the media and the alarm sound, the rest sound is mute. As shown in the picture below:

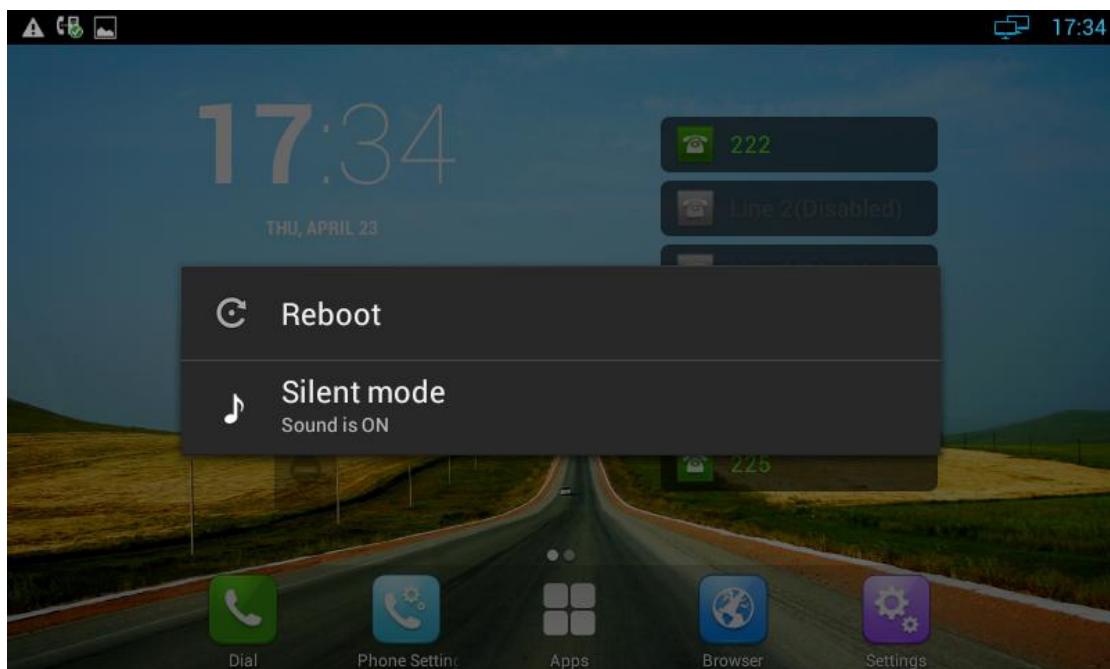

4.4.2 Volumes

In Sound configuration page, click “Volumes”, the volume configure is shown as below:

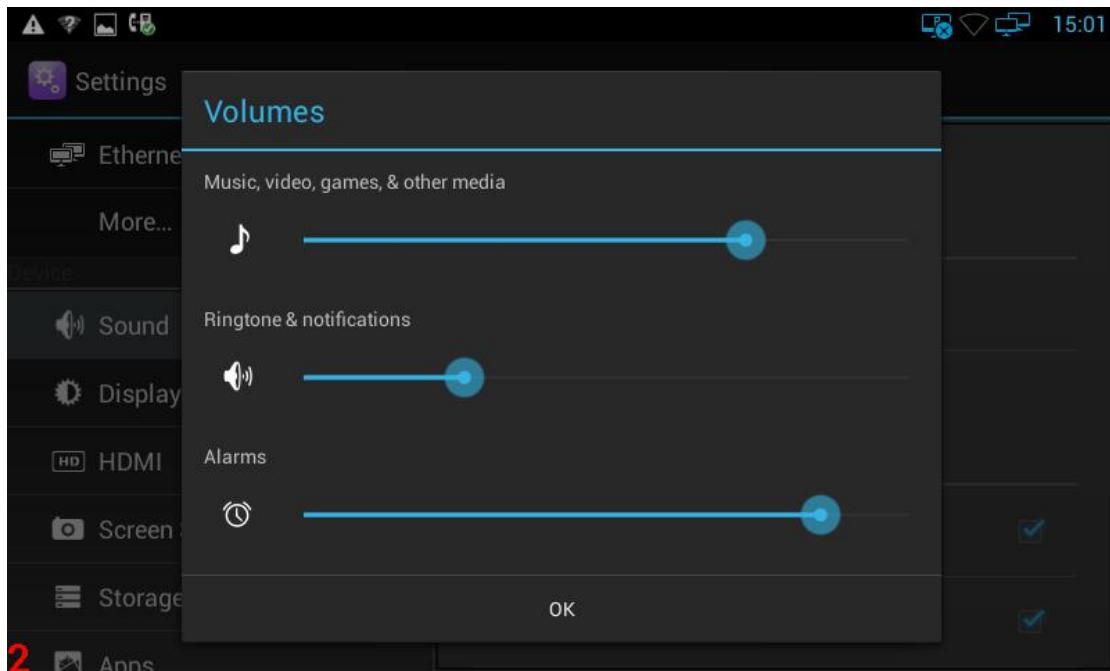

- Volume options include ringtones and notifications, Media, Alarm clock.
- You can hold and drag the slide button or just directly click a volume location to adjust the volume. Finally click "OK" button to save.
- The volume settings, you can also press the keyboard "volume+ -" button to increase or decrease the volume. Usually, "volume + -" button is to adjust for ringtone or notification volume, but in the broadcast media, pressing "volume + -" button is to adjust for media volume.

4.4.3 Ringtone

The ringtone settings, including the default ringtone and default notification tone.


In the sound interface, select the default ringtone or default notification tone, and then click the ringtone you want to set, after the selection, it will be a short play ring. Finally, click "OK".


4.4.4 System Sound

If you want to enable Dial pad touch tones and Touch sounds, please go to Sound configuration page to click the correspond sound. Dial pad touch tones and Touch sounds are enabled in default configuration.

4.5 Audio Settings


To setup the corresponding audio parameters and Volume.

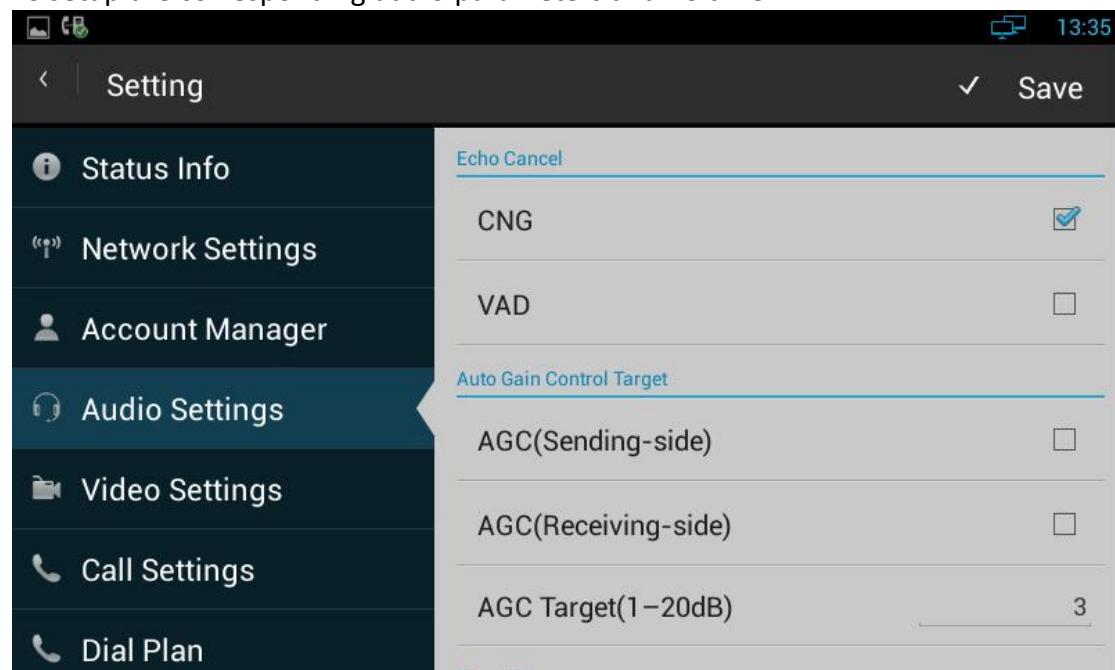


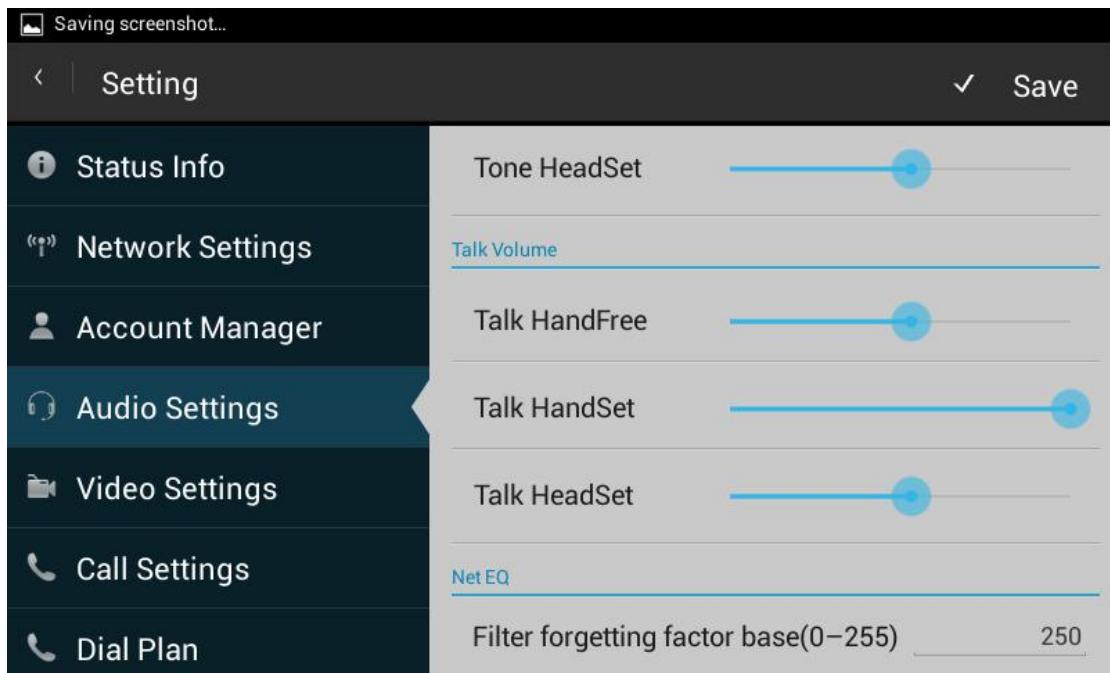


4.6 Video Settings


To configure the video corresponding parameters.

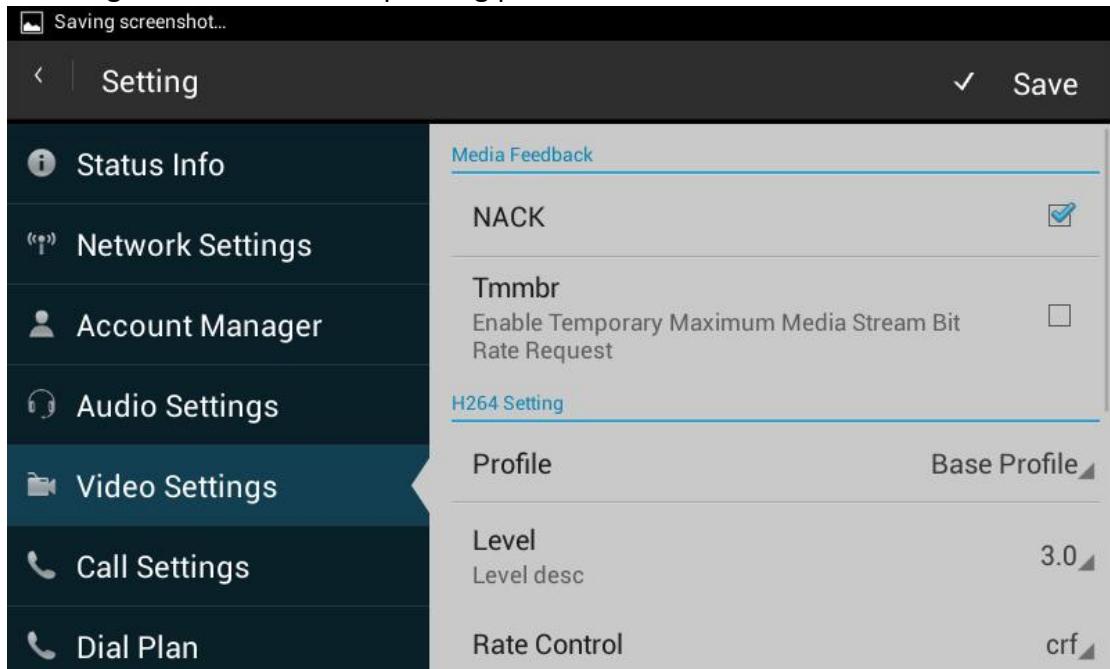

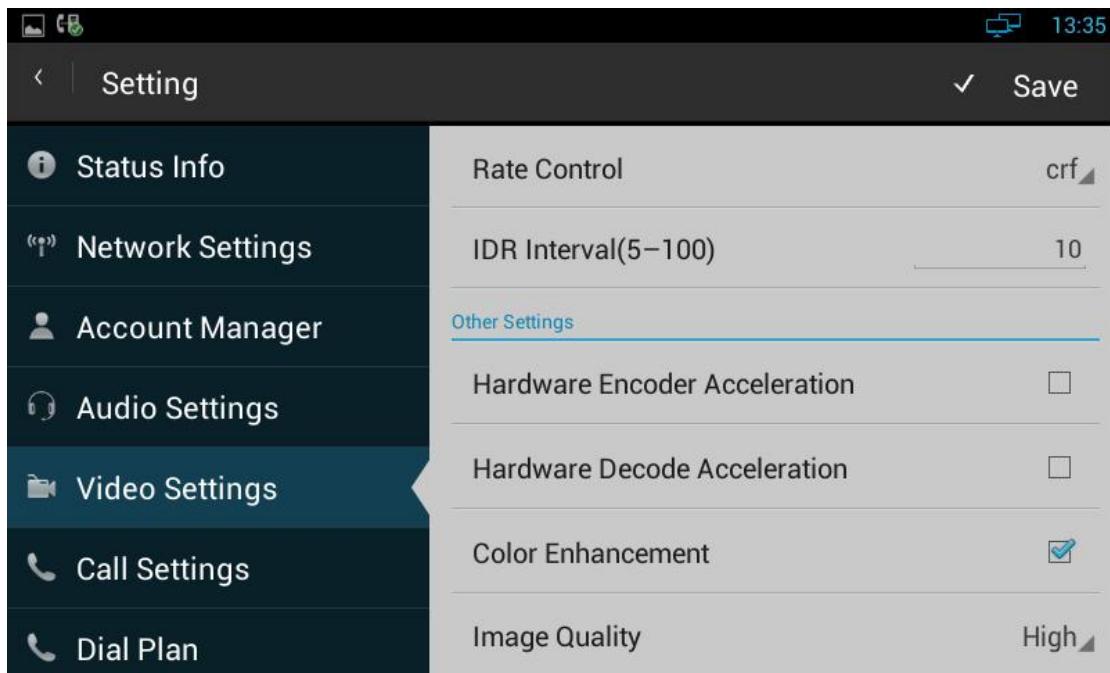

4.7 Call Settings

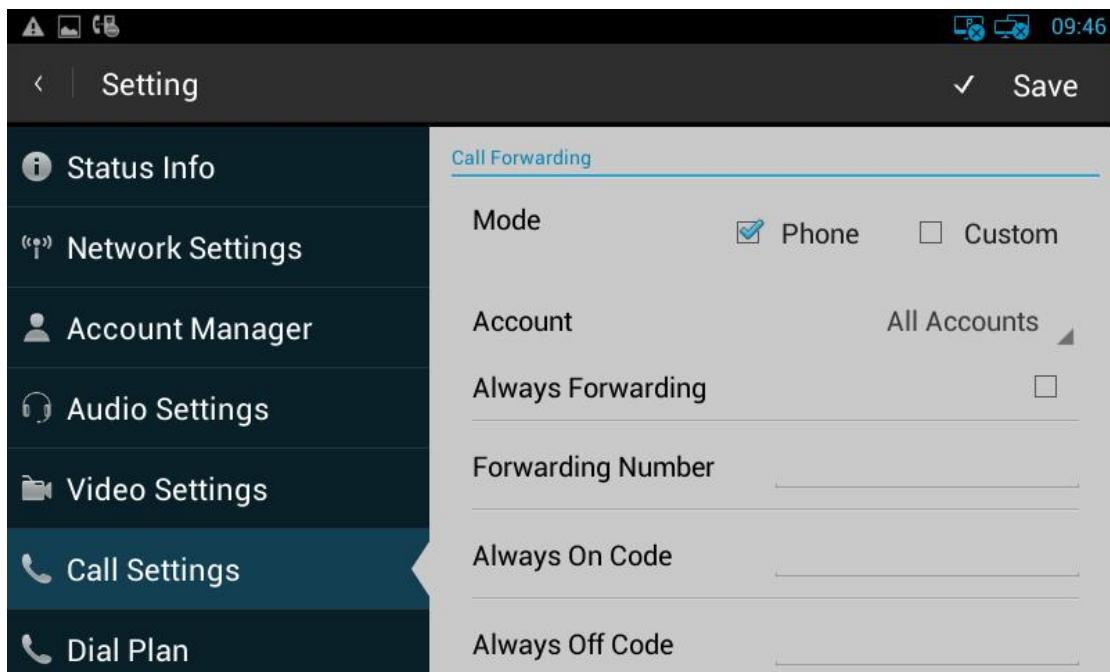

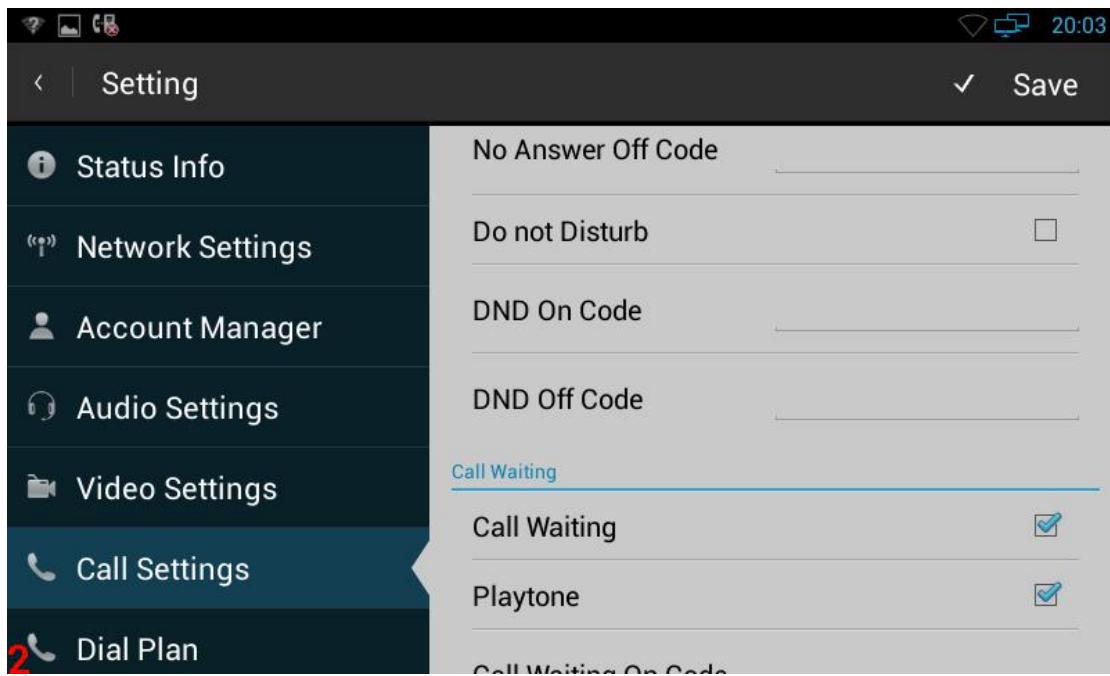

4.7.1 Do Not Disturb

DND function is to prevent foreign phone from disturbing, if open DND, external phone call is unable to call in, turned off by default.

Configuration on the phone:

1. Phone Settings-> Call Settings-> DND
2. Select the desired account.
3. Enable Do not Disturb.

4.7.2 Call Waiting

Open call waiting, if enable call waiting, after establishment of a conversation, there is a third party call in, then video phone will have a new call tips, you can choose to answer or reject the call. If you close the call waiting, then the third party cannot call in, will prompt a busy tone, turned on by default.

Configuration on the phone:

1. Phone Settings-> Call Settings-> Call Waiting
2. Enable Call Waiting.

4.7.3 Always forwarding&Forwarding Number

All the incoming calls will be forwarded unconditionally to specified number.

Configuration on the phone:

1. Phone Settings->Call Settings->Call Forwarding-> Always Forwarding
2. Select the desired account.
3. Enable Always Number.
4. Input the number you want to forward.

4.7.4 Call forwarding busy&Forwarding Number

The incoming calls will be forwarded to specified number when the phone is busy.

Configuration on the phone:

1. Phone Settings->Call Settings->Call Forwarding->Call Forwarding Busy
2. Select the desired account.
3. Enable Call Forwarding Busy.
4. Input the number you want to forward.

4.7.5 No Answer Forwarding&Forwarding Number

The incoming calls will be forwarded to the specified number when the ring tone is time out without answer.

Configuration on the phone:

1. Phone Settings->Call Settings->Call Forwarding->No Answer Forwarding
2. Select the desired account.
3. Enable No Answer Forwarding.
4. Input the number you want to forward.

4.7.6 Time out

Setup the no answer forwarding time. When the call is beyond the time(the default is 30 seconds)without answer ,it will transfer to the target number.

4.7.7 Playtone

The caller will hear the tone when waiting. Different SIP server supports different playtone.

4.7.8 Intercom

It is used to answer the incoming call automatically after users set up the intercom function. In default situation, the IP phone Akuvox R47P will answer the intercom incoming calling automatically and make a noise. You can set the phone to enable silent mode when picking up the intercom call so that the other will not hear you.


4.8 Dial Plan

Rules: Allow user to select Replace Rules or Dial Now to display or edit.

Rules Modify: Allow user to modify selected rules information, for replace rule, you can modify related accounts, prefix and replace.


Area Code: Area codes are also known as NPAs (Numbering Plan Areas). They usually indicate different geographical areas within one country. If entered numbers match the predefined area code rule, the IP phone will automatically prefix outgoing number with area code.

Note: There is only one area code rule supported.

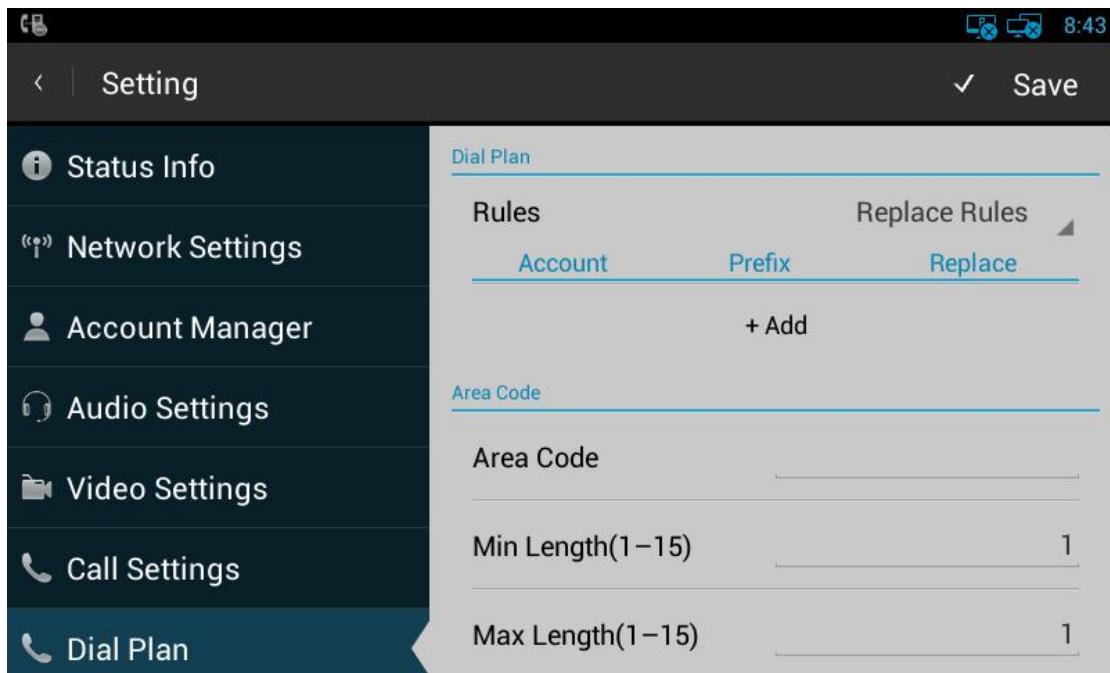


4.9 Auto Provision

R47P IP Phone can be configured to resynchronize its internal configuration state to match a remote profile periodically and on power up by contacting a normal provisioning server (NPS) or an access control server (ACS). In this document, we assume that the administrator knows how to set up the NPS and ACS (DHCP, PNP, TFTP, FTP, HTTP, and HTTPS servers).

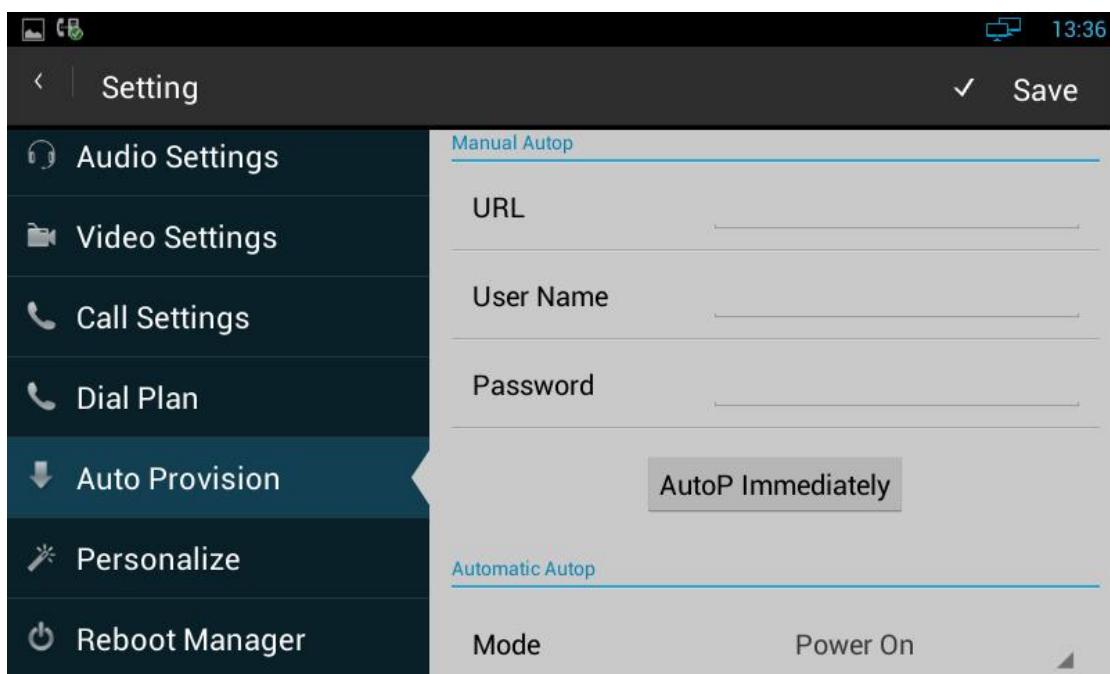

4.10 Personalize

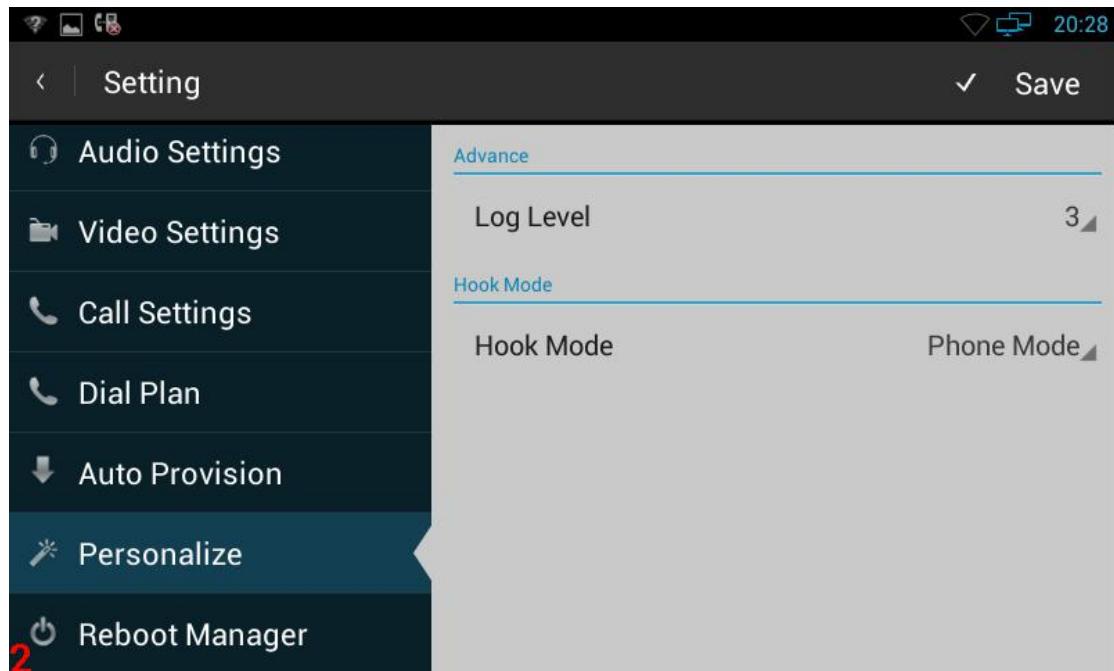

4.10.1 Log Level

The Log level is divided into seven levels: EMERG, ALERT, CRIT, ERR, WARNING, NOTICE, INFO, DEBUG, log class is from low to high. The default setting is EMERG, which is the lowest grade log.

4.10.2 Hook Mode

Hook Mode is divided into Phone Mode, Disable, App Mode, Auto Mode. The default mode is Phone Mode.

4.11 Reboot Manager

4.11.1 Reboot time


User can setup the reboot date and hour you want .

4.11.2 Status of time

If the status is enable ,users can edit the reboot time you want.

4.11.3 Status of active

Enable/disable the reboot function

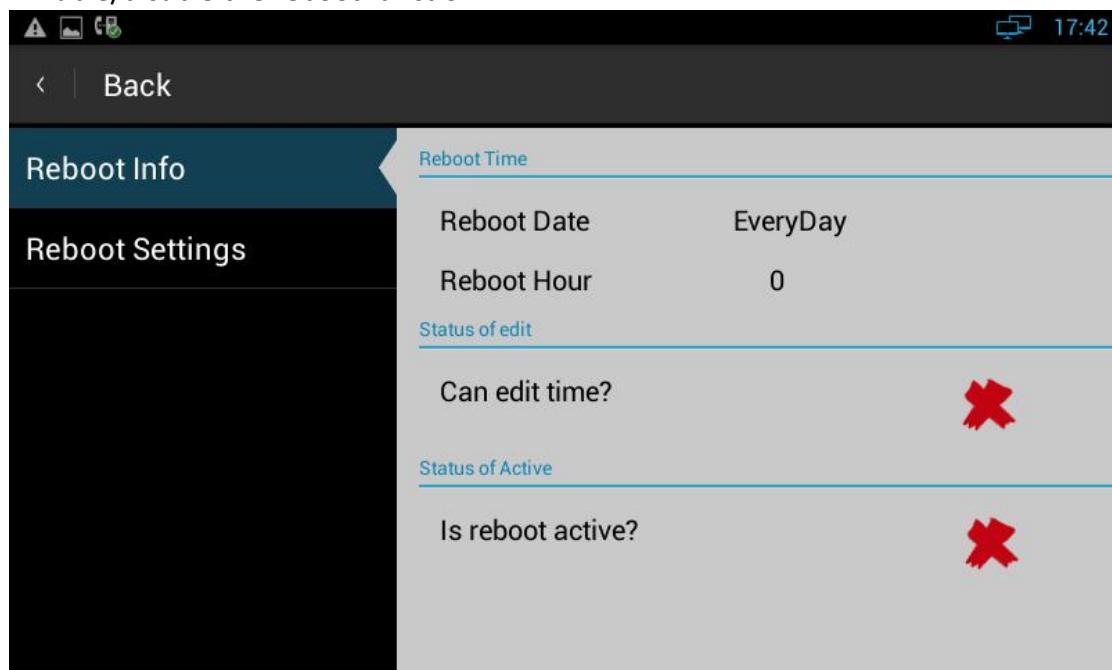

4.11.4 Reboot settings


Click the icon to reboot.

4.12 Date & Time

You can select one of the following methods to enter Date & Time configuration:


- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Date & time.
- Mode 2: In the main screen, tap -> Settings-> Date & time.
- Mode 3: Drag down the status bar, click shortcut icon on the status bar ->click SETTINGS icon -> Date & time.

The configuration page is shown as below:

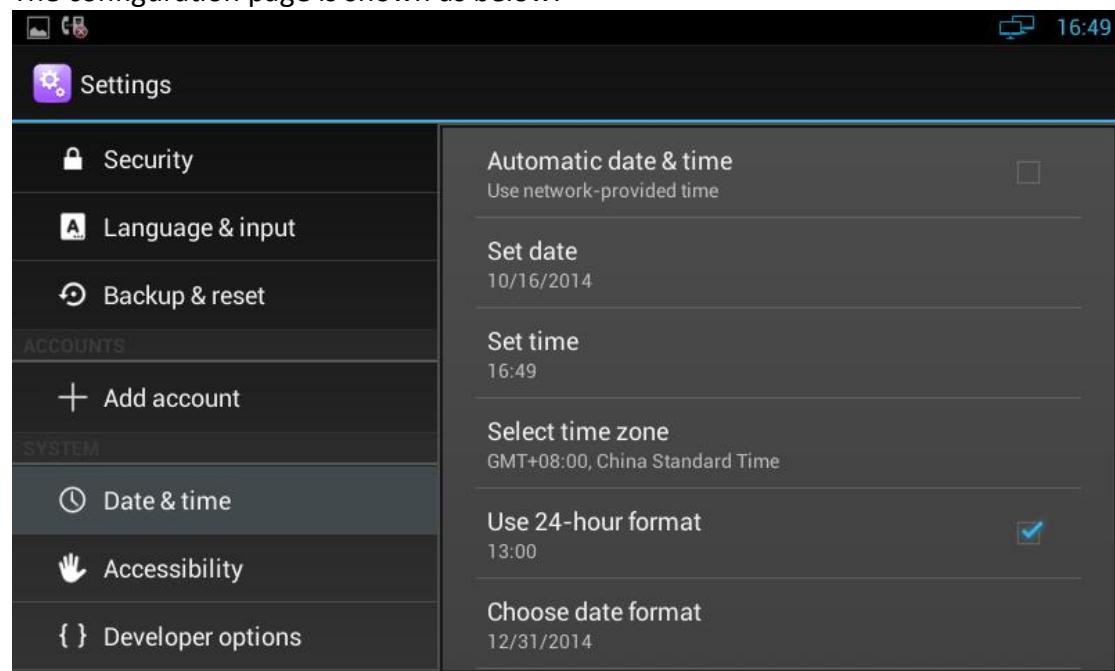


If you want to manually set the date and time, firstly, remove the click "Automatic data & time", and then set the date, time, select a time zone. Check Use 24-hour format, and then "1:00 PM" will change to "13:00".

Click "Set date", pop-up date set interface, as shown below:

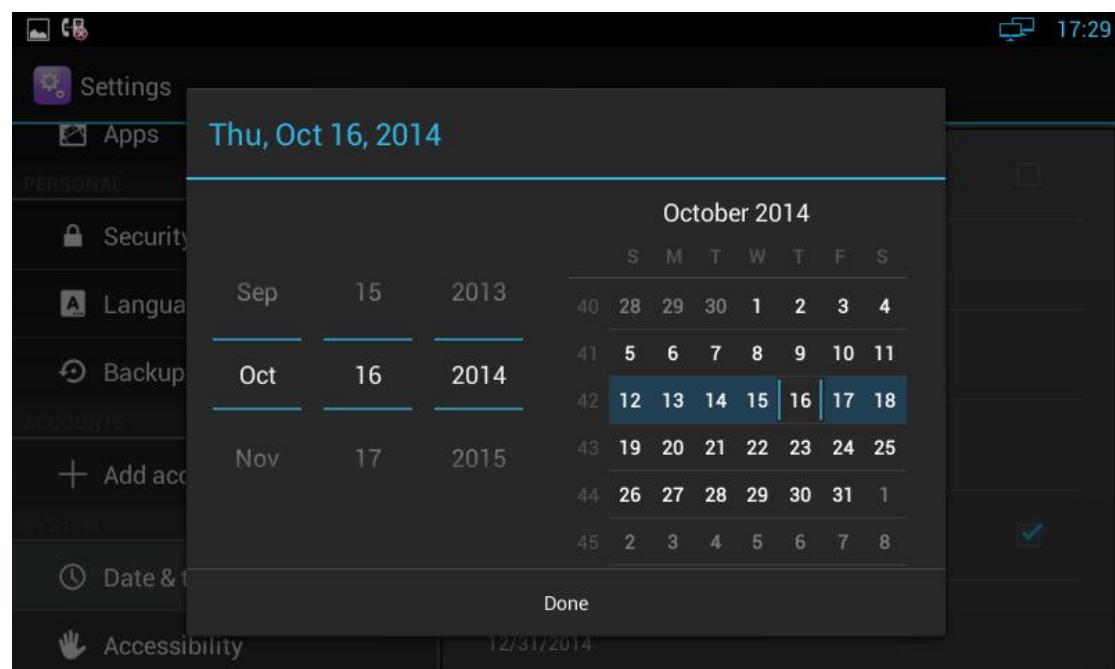


You can increase or decrease the corresponding value by dragging upper or lower, also can directly input corresponding value in input flied, and then click the "Done" button.

Click "Set time, time settings, as shown below:

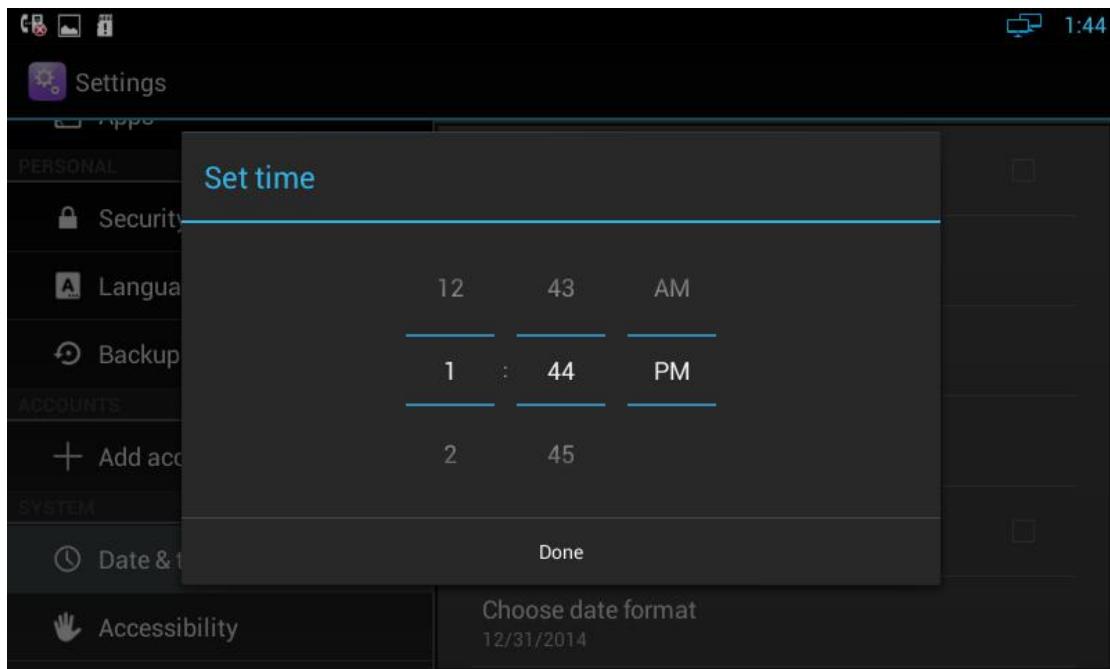

In the figure, uncheck Use 24-hour format, you can increase or decrease the corresponding time value by dragging upper and lower. Click "AM" button, it will change to "morning", and then click "PM" button, then changed back to "afternoon". If check Use 24-hour format, time setting interface as shown below:

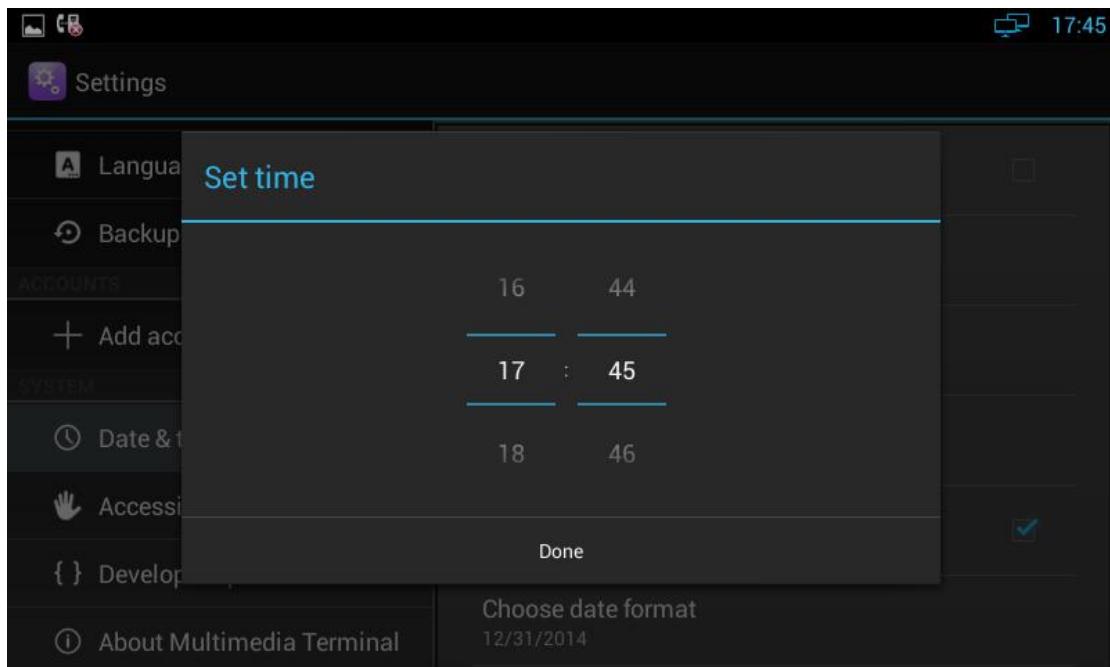

4.13 Personalization Settings

According to personalized settings, you can make the equipment more characteristic.

4.13.1 Wallpaper

You can use the following three ways to change your favorite wallpaper.

Mode 1:

1) You can choose one of the following steps to enter into the choice of wallpaper source:

- In the main screen, Press "Menu" on the keyboard-> wallpaper, it will pop up wallpaper selection interface to select a wallpaper source.
- In the main screen, Press on the blank part of desktop, it will pop up menu option, select "wallpaper".

2) Perform one of the following steps:

- In “Wallpapers”, click the picture you want to set as wallpaper, and then click “Set wallpaper”.
- Click “Gallery”, In the library, click the corresponding picture folder, select the picture you want to set as wallpaper, then press and hold the clip frame picture, drag the clip box, crop the picture finally click “OK”. When clipping, if you want to change clip size of the box, press clipping frame, the border follows the direction of the arrow to be shown in the figure, you can drag it to the border or outside the borders, to change the size of the crop box.



Mode 2:

Browse pictures in the gallery, and then follow the second step in mode 1 to set the wallpaper.

Mode 3:


- 1) Browse a picture In a browser (or pictures on the page), press and hold the picture.
- 2) Pop-up a new operation window, click on the "Set as wallpaper" and wait for a short time, you can set the picture as wallpaper.

4.13.2 Widgets

Applet can be convenient for your use, you can select from the available options

4.13.2.1 Add A Widget

- 1) In the main screen, Click , left-slide the screen, choose and add a widget. The following window:

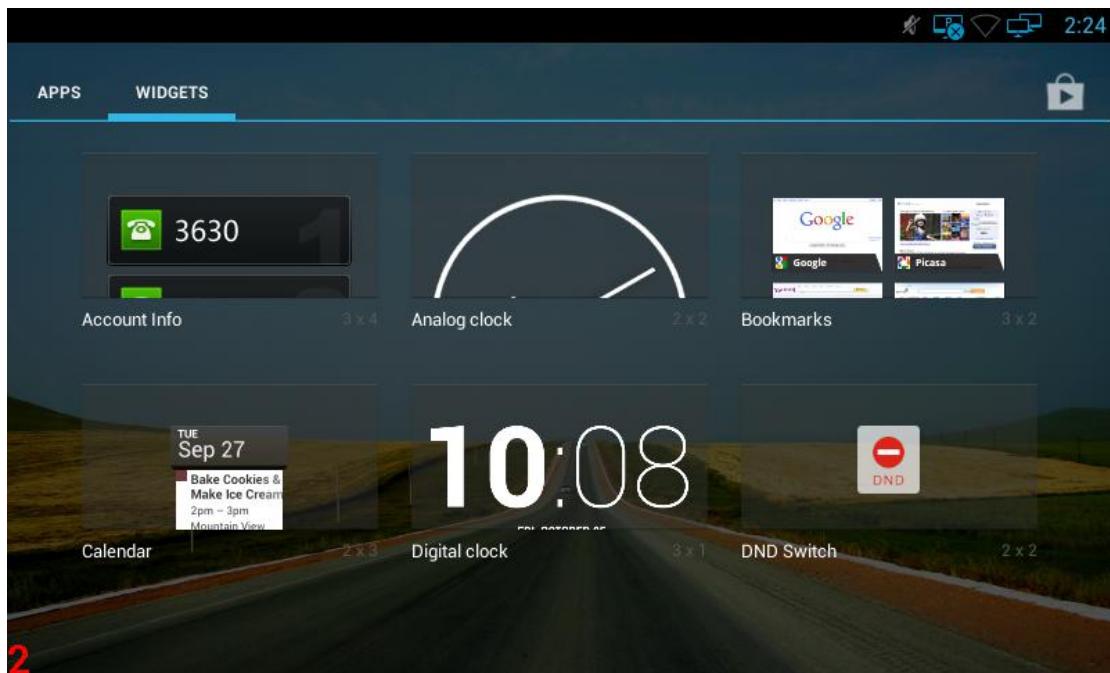

- 2) Each widget has indicated the name and the location, press and hold the component, put it to the designated location on the desktop.

4.13.2.2 Modify An Added Widget

If you want to modify the location of added widgets on the desktop, hold the widget until the icon appears on the upper left corner of the screen, you can drag the widget to the corresponding position of the desktop.

If you want to change the space size of added widgets on the desktop, press and hold the widget until the icon appears on the upper left corner of the screen, do not move, fingers away from the screen, the widget will appear frame border, as shown below:



At this time, you can control the blue point to drag the border to change the size of the widget frame. And then only need to press “Back” button on the keyboard to save the change.

4.13.2.3 Delete A Widget

Hold the widget until the icon  appears on the upper left corner of the screen, you can drag the widget to  to delete the widget.

4.13.3 Shortcuts

You can add the shortcuts such as Application, Webpage bookmarks and the other applications to the main screen desktop.

4.13.3.1 Add A Shortcut

In the main screen, click , left-slide the screen, choose and add a shortcut, press and hold the component, put it to the designated location on the desktop.

4.13.3.2 Modify A Shortcut


If you want to modify the location of shortcut on the desktop, hold the shortcut until the icon  appears on the upper left corner of the screen, you can drag the shortcut to the corresponding position of the desktop.

4.13.3.3 Delete A Shortcut

Hold the shortcut until the icon  appears on the upper left corner of the screen, you can drag the shortcut to  to delete the shortcut.

4.13.4 Modify Extended Bar

You can modify the quick start program on the extended bar at the bottom of the screen. The default extended bar as shown below:

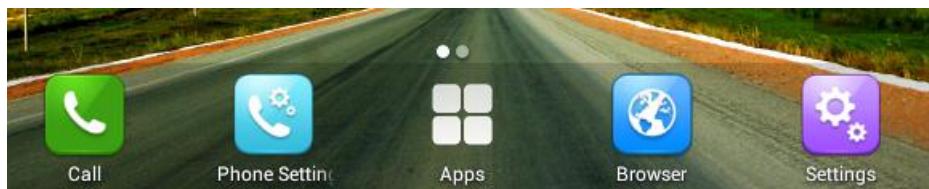

In the main screen, hold the shortcut until the icon  appears on the upper left corner of the screen, you can drag the shortcut to  to delete the shortcut or replace with another shortcut.

4.13.5 Ringtone

You can select the ringtone provided by video phone, and you can also download music from the Internet, and then set the favorite music as a ringtone.

If you choose the ringtone provided by video phone, please refer to Sound settings.

If you choose the music downloaded from the Internet as a ringtone, please follow the below steps:



- 1) Click Music(App).
- 2) See the music list in App, select and press a music, and then In the pop-up menu options, select "Ringtone" -> "Phone"

4.14 Backup & Reset



- 1) Click Setting;
- 2) Click “Backup & reset”;
- 3) Click “Factory data reset”;
- 4) Click “Reset Multimedia Terminal”
- 5) Click “Erase everything”.

5 Function

5.1 Call Function

R47P supports audio calls and video calls. Please ensure that the device has registered SIP account successfully before using the call function. SIP account configuration refers to chapter 4.3

5.1.1 Make A Call

You can directly dial from the keypad, from the contact or from call records.

5.1.1.1 Dial Out Directly

1) You can choose one of the following steps to enter into the dialing interface:

- Directly pick up the handset.
- Press “Speaker” button on the keypad.
- In the main screen, Click .
- In the main screen, select  -> .

Dialing interface is shown as below:




1) By pressing the number keys on the dial interface or directly pressing the number

on keypad. To delete a number, press the on the dial interface, or press Delete button on the keypad.

2) If you want to make an audio call, please click "Audio Call"; if you want to make a video call, please click "Video Call".

3) If you have registered a multiple of available SIP accounts, when finishing dialing,

you can click line button to choose the outgoing account for the number, as shown below:

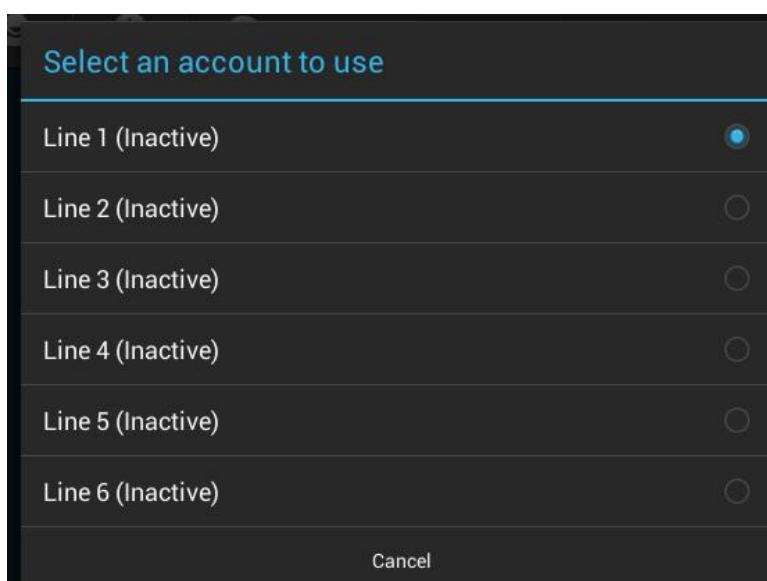


5.1.2 Dial Out From Contact

You can choose one of the following steps to enter into the contacts:

- In dialing interface, Click the icon 

Contact is shown as below:

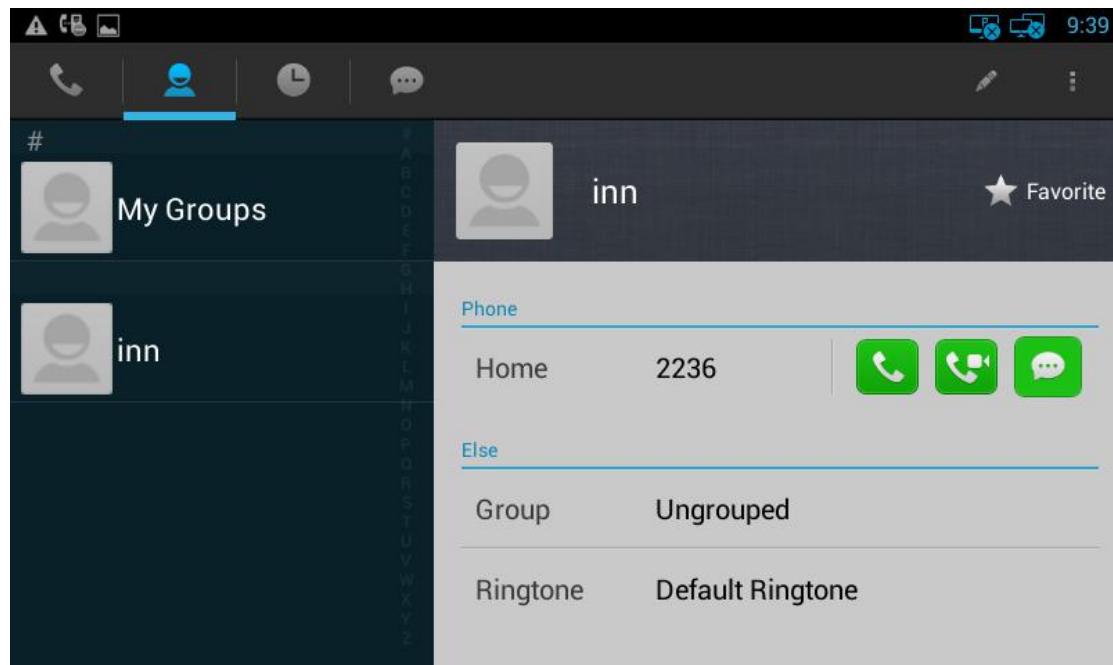

Contact supports rapid locating the contact through first letter.

- 1) Click the contact in Contacts, and you can view the details on the right side.

As shown in below picture:



- 2) You can click  to make an audio call, click  to make a video call, or click  to send the message.

5.1.2.1 Contacts Fuzzy Matching Query

Video phone supports contacts fuzzy matching queried, intuitive, concise dialing interface for the intelligent input, greatly reducing the number of buttons, achieve rapid, effective positioning search, avoid duplication of invalid operation, saving time.

For example, to find Inn, only press the number keys 22 to locate the contact quickly. When input no number, displaying the current call records; when input numbers, list the current matching results. Click the contact, and it will enter the telephone number to dial automatically.


5.1.3 Receive A Call

Incoming calls include audio and video calls. If the caller has been stored in the contacts, it will show the contact name, otherwise the caller number will be displayed.

5.1.3.1 Answer A Call

1) Answer an audio call


When receiving an audio call, as shown below:

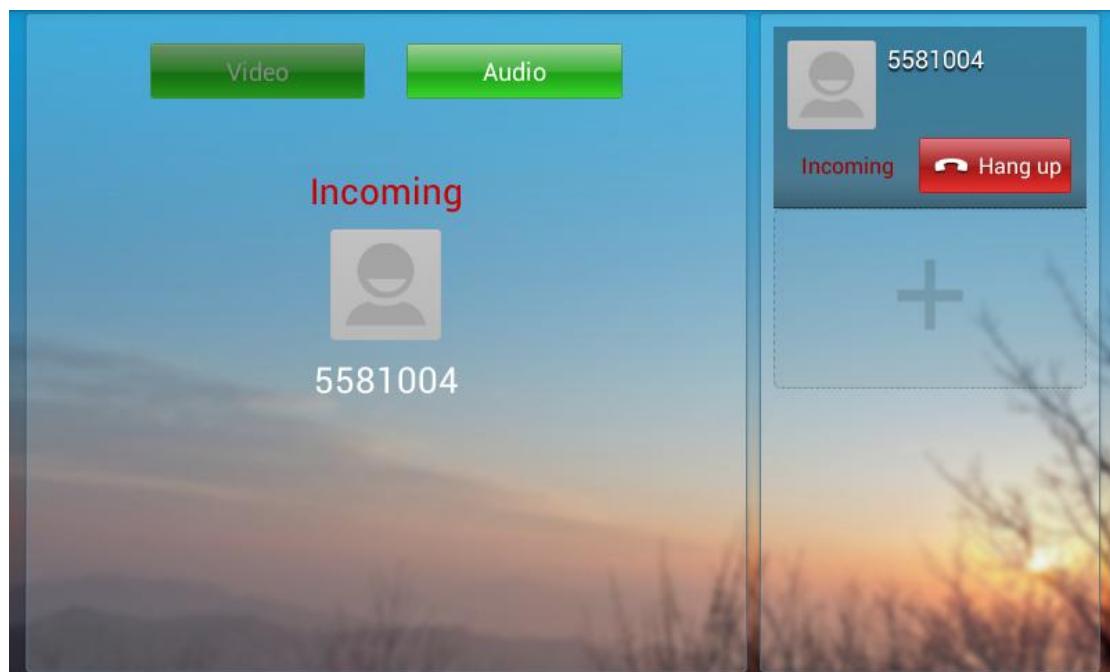

Click "Audio" or pick up the phone to answer.

2) Answer a video call


When receiving an video call, as shown below:

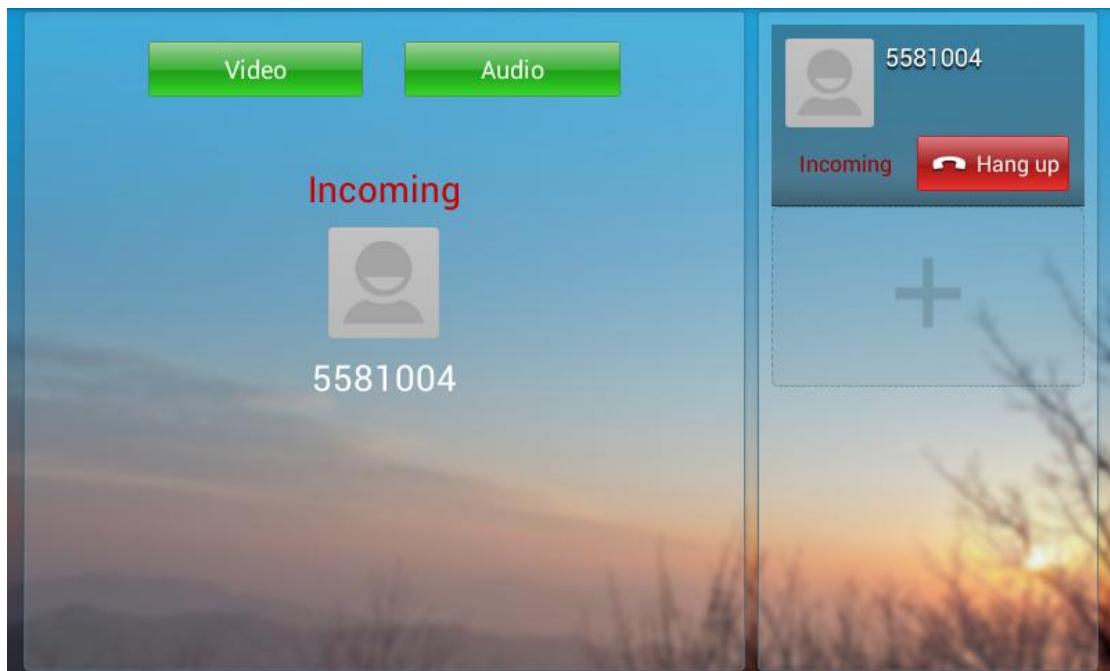

Click "Audio" to establish the audio call, and video is not visible; click "Video" to establish the video call, and video is visible. Pick up the handset to answer the call as a video call.

3) Answer a video invite

During an audio call, if a video invite is requested, it will pop up the following window:

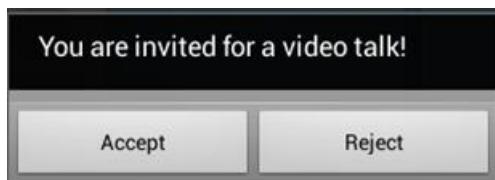

Click "Accept" to accept the video invite, and then the call will change to video call; Click "Reject" to reject the video invite, audio call will retain. 10s without any operation, the video invite will terminate.

5.1.3.2 Reject A Call

If you want to reject a call, click  in calling interface.

If you want to reject a call from a number, you can add the number to the blacklist.

5.1.4 Call Options

Call options as shown below:



Call options are described as below:

	Click the button to hold the current call.
	Click the button to resume the current call.
	Mute
	Click to switch to video call
	Click to switch to audio call
	Click to switch to Speaker
	Click to switch to handset
	Extended function
	Function under development

5.1.4.1 Dialing Interface

Click the " keyboard" in the conversation, screen will appear the soft keyboard. Input the number by soft keyboard or keypad on the phone.

5.1.4.2 Video Options

During video call you can switch picture through the button on the video interface.

	Switch to full screen
	View local video
	View the other part video

5.1.4.3 Multiple Calls

- The Phone supports more than 3 line calls. The line information is on the right side of call interface.
- During a call, you can click on the button to add a new call. And when click on this button, the current call will be hold.
- During a call, you can click on any line in the list to resume the call.



5.1.5 Call Records


5.1.5.1 View Call Records

When got a missed call, the screen will display the missed call notification in above status bar. You can hold the status bar and drag down to open the notification, and then click the missed call notification to view call records.

You can also directly through the dialing interface to view call records:

- 1) In the main screen, click or in the main screen, click ->

2) Click :

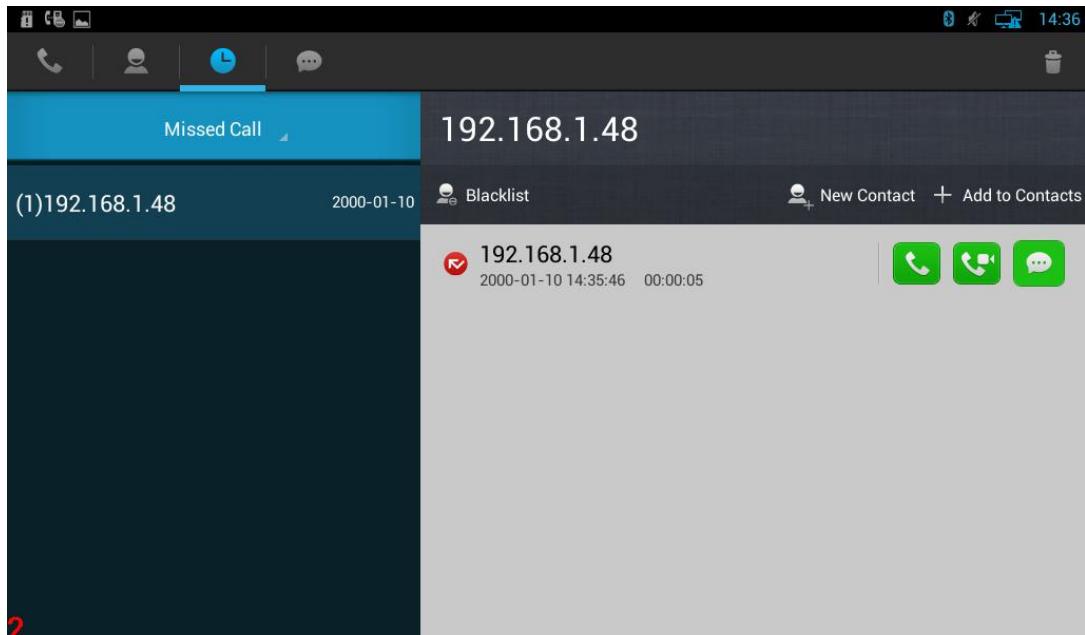

- 1) You can click the drop-down list  to choose the call record types, it supports for all call, missed call, received call, dialed call and forwarded call five types of call information.
- 2) Call records are shown on the left, and show the total number in the bracket. Click the number or contact, and you can view all the call records details on the right.

5.1.5.2 Call From Call Records

In Missed Call, Received Call, Dialed Call or Forwarded Call, you can choose one of the following steps to initiate a call:

- Click a contact or a number in the list
- If you want to initiate an audio call directly, please click the icon  in call records;
- If you want to initiate an audio call directly, please click the icon  in call records





- If you want to send a message directly, please click the icon  in call records;

5.1.5.3 Delete Call Records

- 1) If you want to delete one call record, steps as below:
 - Long press the call record you want to delete;
 - Pop-up a menu, press “Confirm” to confirm the deletion.
- 2) If you want to delete multiple call records, steps as below:
 - Press the icon  on the top right corner, then click Remove;
 - Click the call records you want to delete;
 - Click 
- 3) If you want to delete all call records, steps as below:
 - Press the icon  on the top right corner, then click Remove;
 - Click  to select all records;
 - Click 

5.1.5.4 Add A Contact From Call Records


If you want to save a contact from the call records, or merge the contact into the existing contact, you can do the following operations:

- Click the number in the call records list;
- If you want to add a new contact, click “New Contact” , a new contact page will pop up.
- If you want to merge the contact into the existing contact,, click “Add to Contacts” ,Choose the existing contact and then click "OK".

5.2 Contacts

You can choose the following method to enter into Contacts interface:

- Enter the dialing interface, and then click the icon

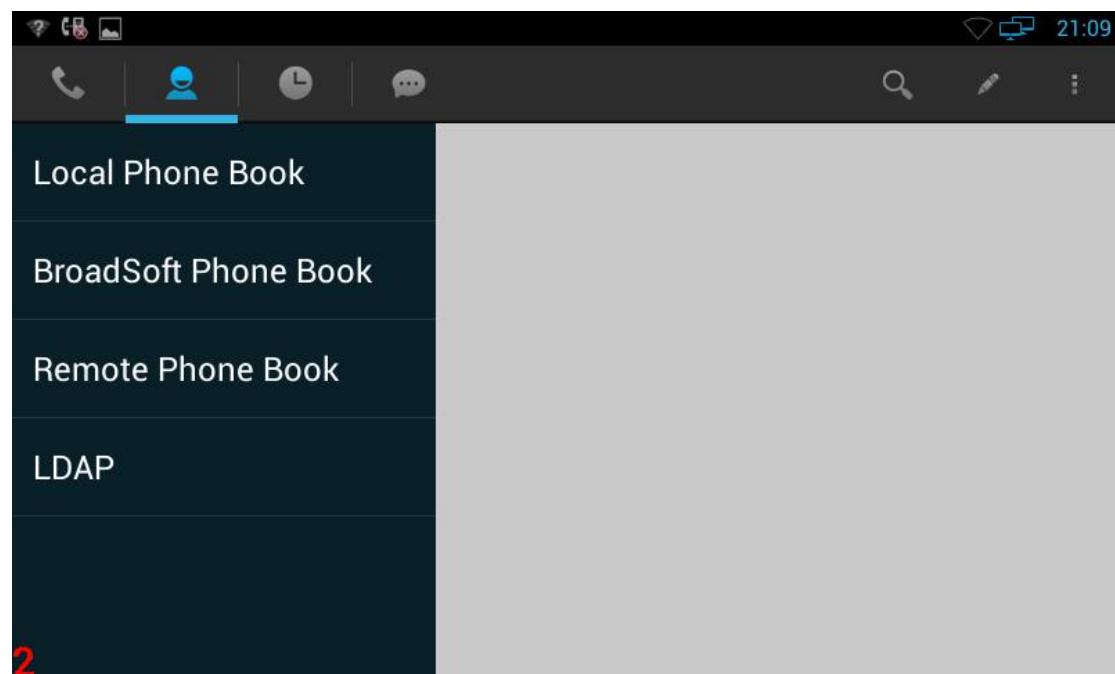


5.2.1 Local Phone Book


You can view, audio call, video call, add, edit, delete the Local contacts.

5.2.1.1 Add A New Contact

- 1) Click the icon on the top right corner, and click “New Contact” in the drop-down window;
- 2) The new contact interface is as shown:

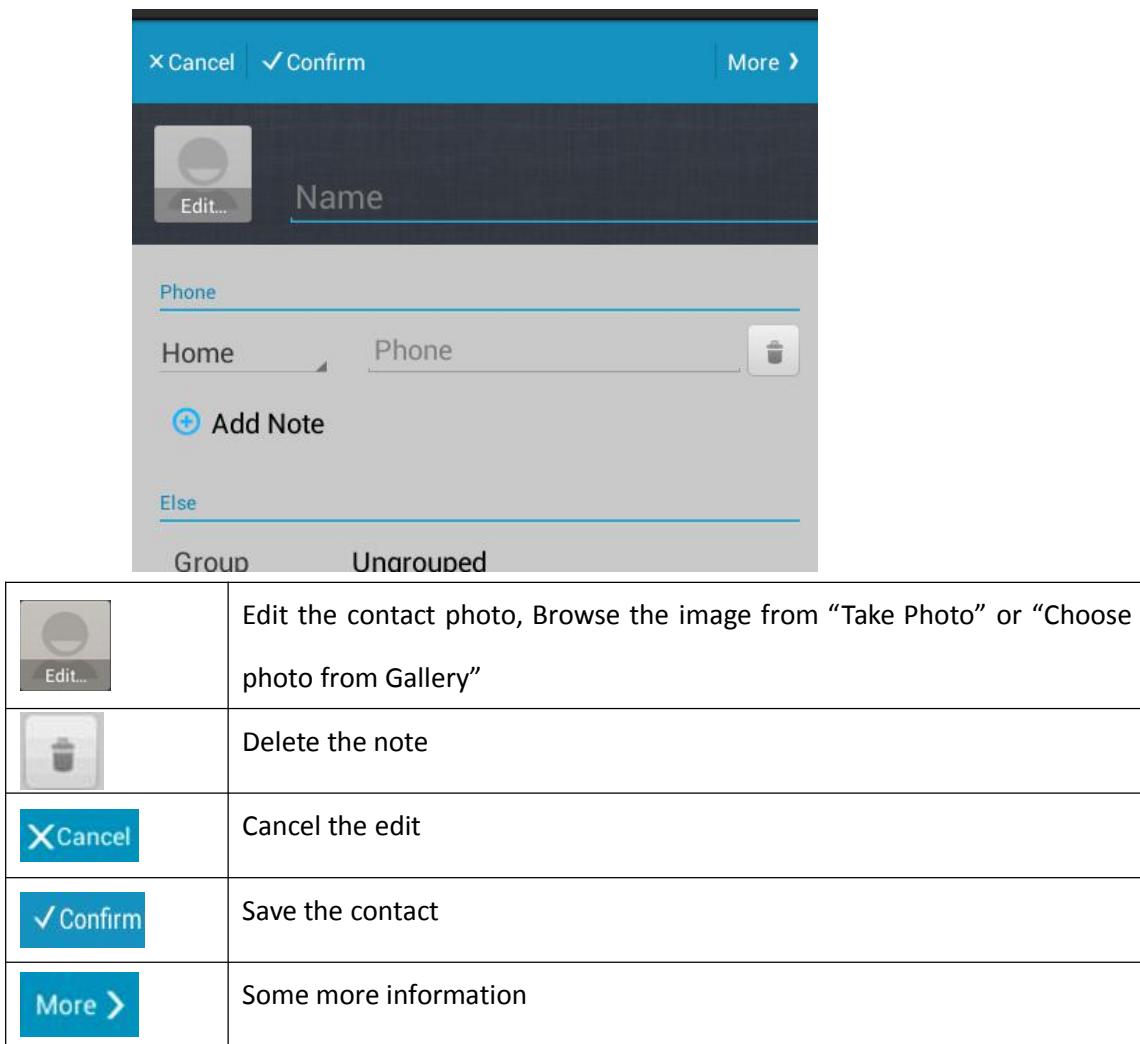

If you want to add some more information, please click More >, it will pop up the page of contact details, as shown:

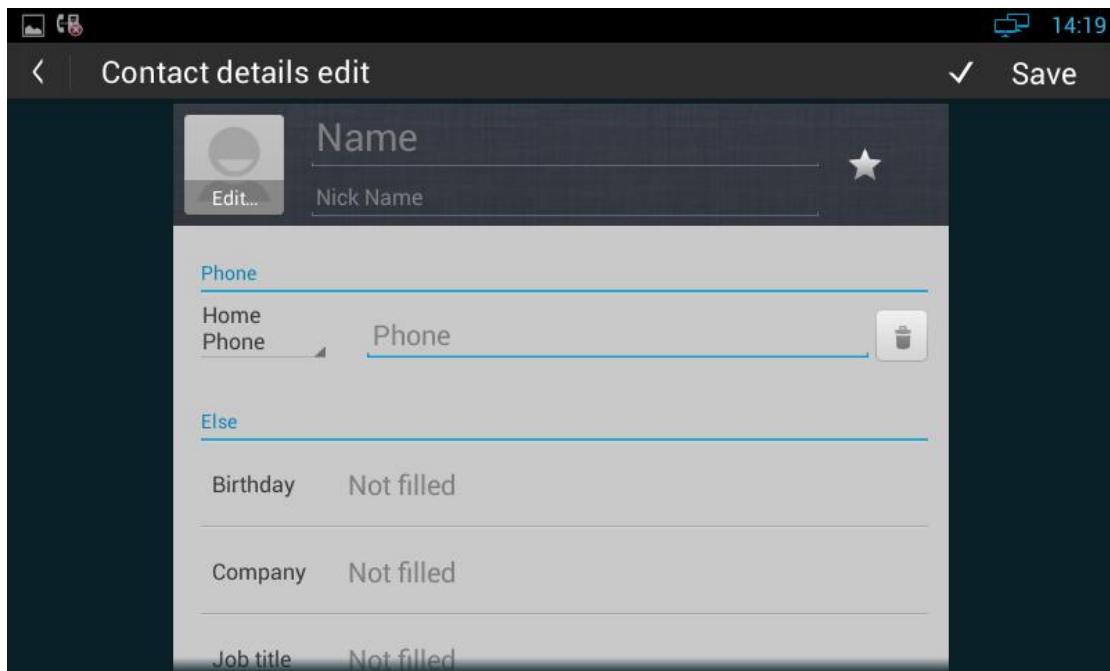

Click **✓ Save** to save the contact.

5.2.1.2 Modify The Contact

- 1) Select the contact you need to modify in the contact list;
- 2) Click 
- 3) Enter into contact edit page, you can edit the contact information.

5.2.1.3 Delete The Contact

You can choose one of the following methods to delete the contacts:

- Long press the contact you need to delete from your contact list, and tap "Confirm" in the pop-up Remove Contact dialog box;
- Select the contact, click , select "Remove", click "the contact" and "Confirm" to delete.

5.2.2 Broadsoft Phone Book

To setup Broadsoft contact. For Broadsoft PhoneBook's server address, port, username and password, you need to consult your Broadsoft service provider for further information.

5.2.3 Remote Phone Book

1. Access the remote phone book, add the contacts to the local phone book from the remote phone book or make calls from the remote phone book. 5 URLs of remote phone book is available to set.
2. Set the remote phone book via web interface.
3. Access Phone Book-> Remote Phone Book.
4. Input URL of phone book.
5. Input the phone book name.
6. Click the Submit key to save.
7. Access the remote phone book via phone interface.
8. Access Book->Remote phone book.
9. Select the relevant Remote Group and press the Enter softkey. The phone will load the remote group information, and the LCD will display the contacts of this remote group.
10. Press the  key or the Back softkey to unlink.
11. Press the Book softkey to enter the Phone Book Menu.

5.2.4 LDAP

To setup LDAP contact. It often use OpenLDAP server to get the contact. For setting

details, please consult with your system administrator for further information.

5.2.5 Group

Group, it will be convenient for you to have contact group management. Contacts should at least belong to a group, the default is no group.

5.2.5.1 Add A New Group

- 1) Click ;
- 2) Choose “New group”;
- 3) Input a new group name in pop-up dialog box;
- 4) Click “Confirm” to save.

5.2.5.2 Rename A Group

- 1) Click the group you want to rename in contact page;
- 2) Click ;
- 3) Input the new name you want directly;
- 4) Click “Confirm” to save.

5.2.5.3 Remove A Group

- 1) In Contact page, click the group you need to delete, and then click ;
 - 2) Click “Remove”, select the group you need to delete then click “OK”.
- (**Note:** the system default group cannot be deleted)

5.2.5.4 Edit A Group

- 1) In Contact page, click the group you need to edit.
- 2) Click Edit Member, or hold the existed member, it will pop up a prompt to


delete the member.

5.3 BLF


Busy Lamp Field (BLF) is used to monitor a specific user for status changes on IP phones. For example, you can configure a BLF key on a supervisor's phone to monitor the phone user status (busy or idle). When the monitored user places a call, a busy indicator on the supervisor's phone indicates that the user's phone is in use.

Enter the dial interface, click BLF button.



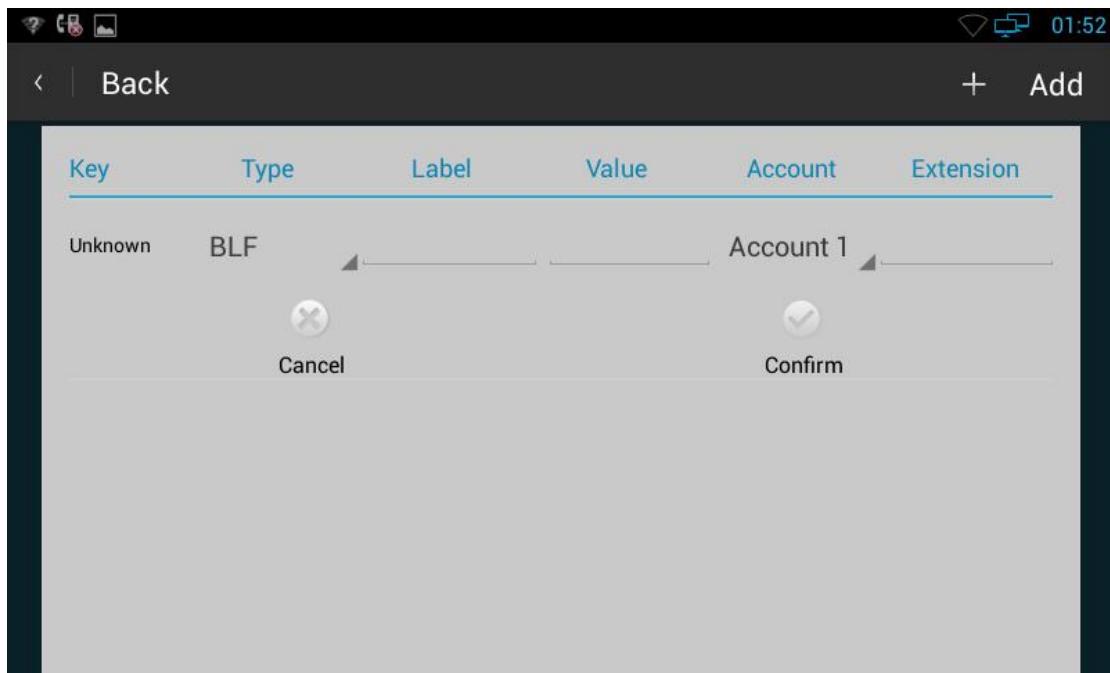

Note : After you finish BLF Key configuration, you need to drag ExtKey from the WIDGETS to the main interface. As shown below.

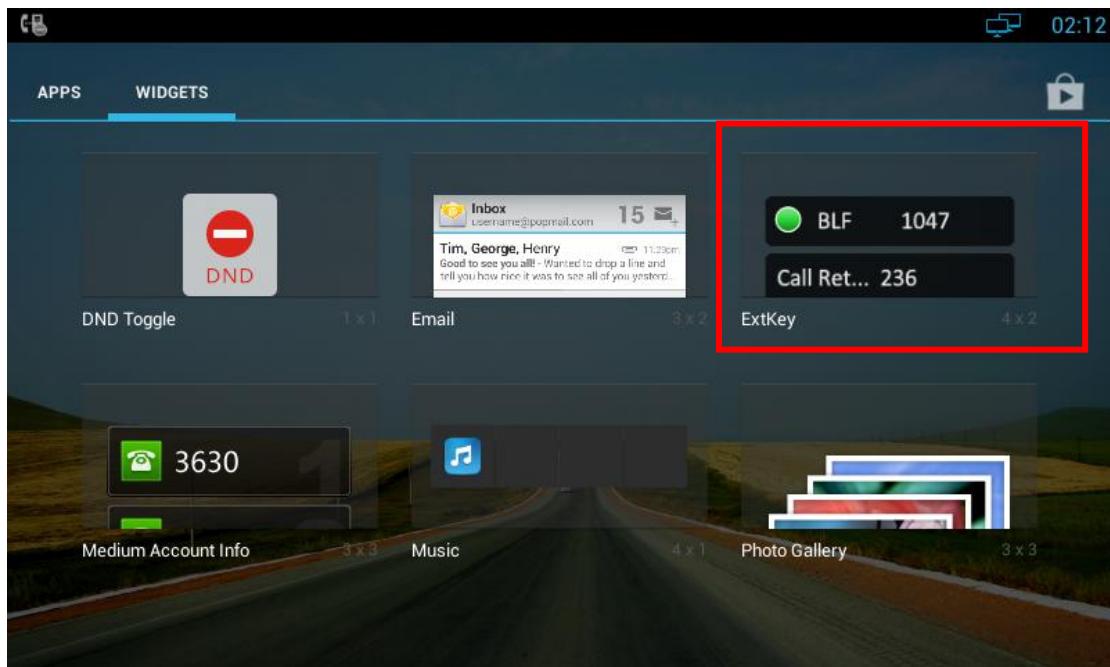




5.4 Intercom

Select Type as Intercom, enter intercom code in Value. Choose the availed account.

To click Confirm to save.

Note: Different SIP server has different codes.

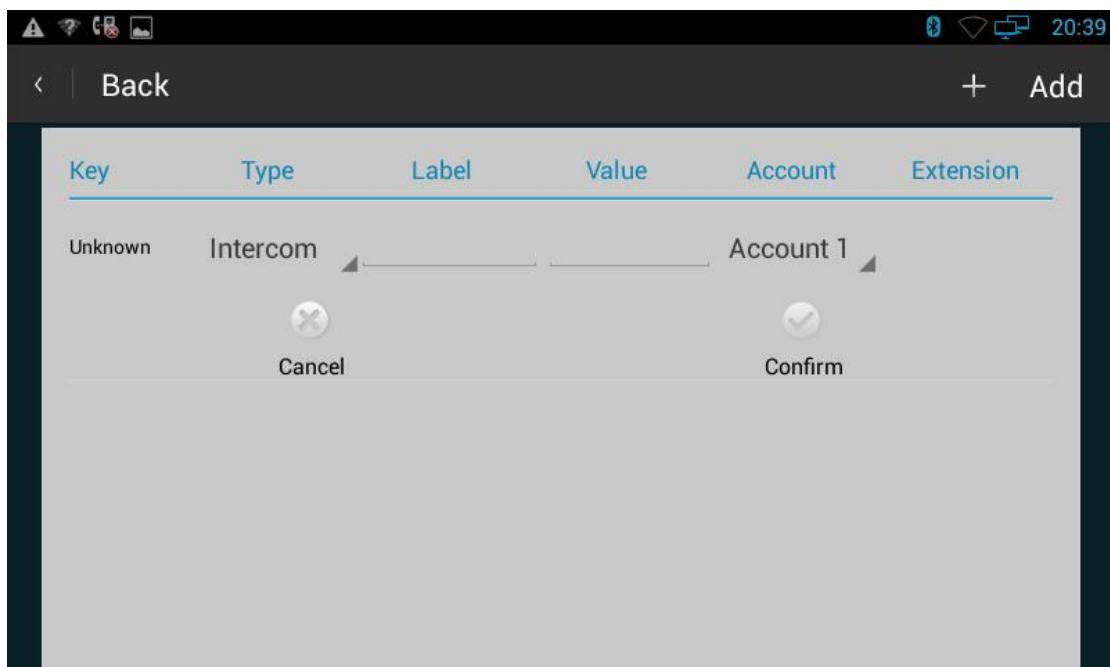


1. Press the Intercom key when the phone is available. The phone will connect the extension number of remote user automatically.

2. Answer the intercom incoming calling.
3. In default situation, the IP phone Akuvox R47P will answer the intercom
4. Incoming calling automatically and make a noise. You can set the phone to enable silent mode when picking up the intercom call so that the other will not hear you.

5.5 Call Return


This function can be used to call the latest dialed call record automatically.

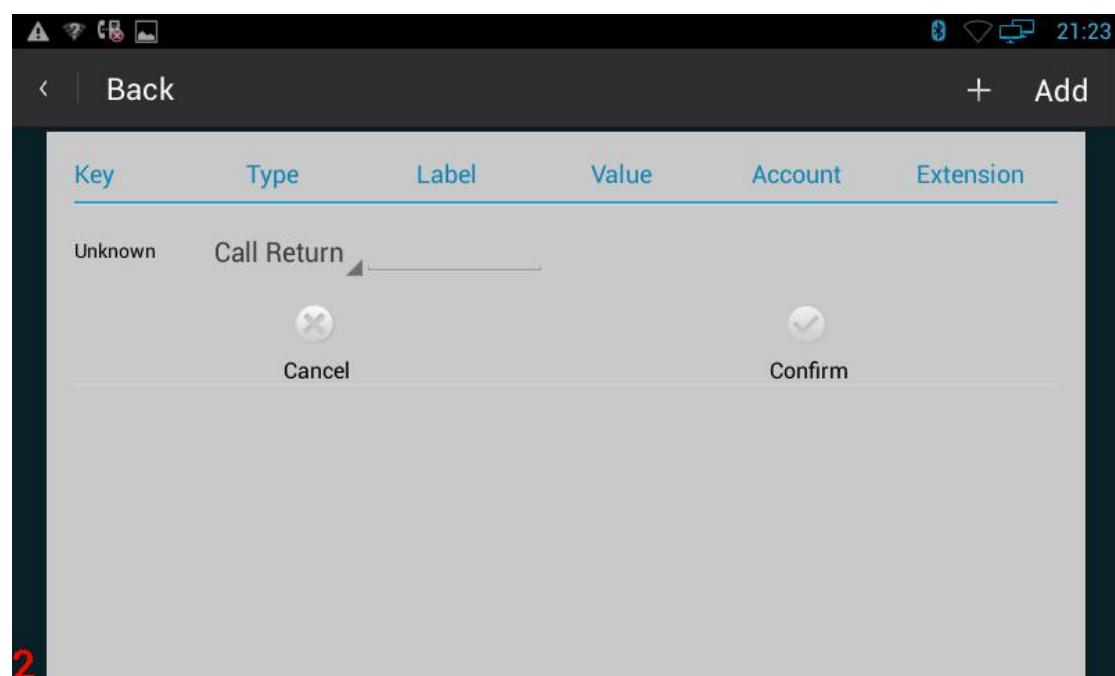

5.6 BLFList

BLF List: While using BroadSoft platform, the accounts which are monitored by the sip phone will reply the subscribe news in the form of xml list to improve efficiency.

BLF List Code: While using BroadSoft platform, configure the BLF LIST CODE, can Pick up call or Barge in call.

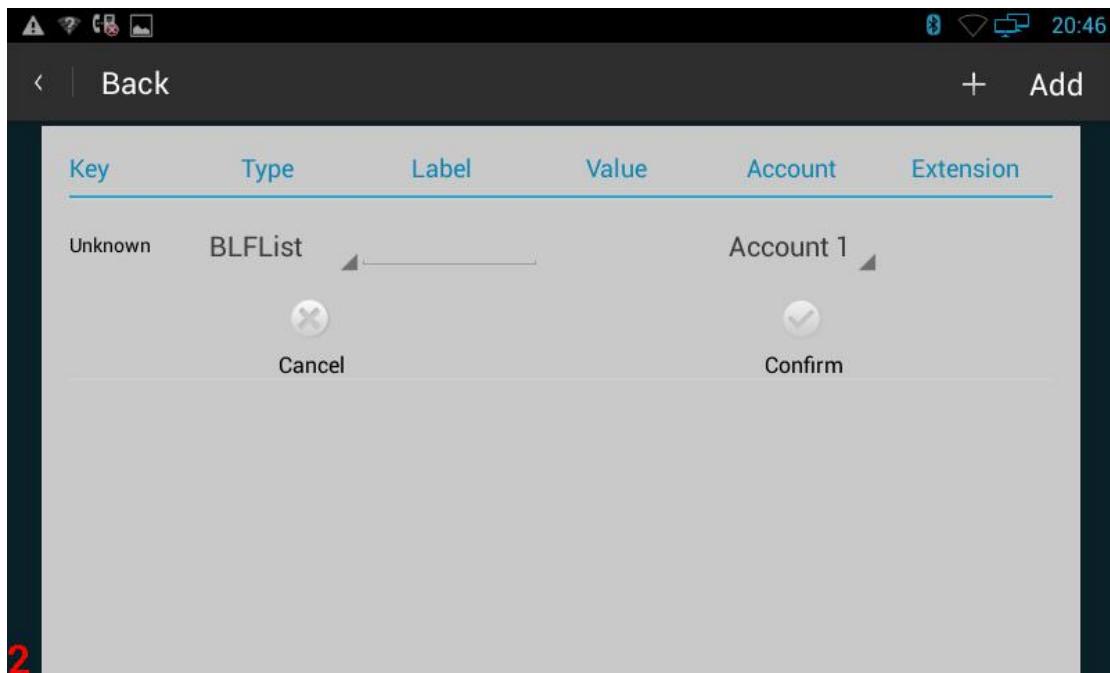

2


Note: BLFListCode is supported by Broadsoft platform, Please consult your administrator further information.

5.7 Pickup & Group Pickup

You can use pickup to answer other users' incoming call. The IP phone Akuvox R47P supports specified pickup and group pickup.

Specified pickup can answer specified user's incoming calls. When the user of specified pickup number is off or busy, you can press the pickup key to answer incoming call.


Group pickup can answer group's user incoming calls. When anyone in group receives an incoming call, you can press the group pickup key to answer.

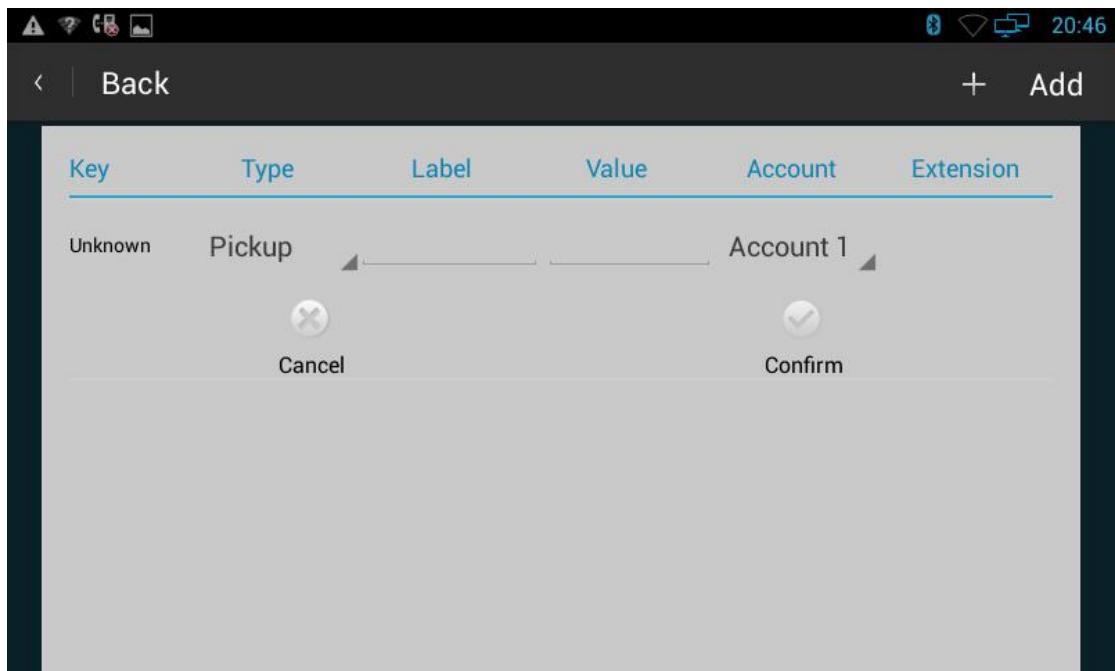

Note: Press the group pickup only to answer line 1 incoming call if there are many lines incoming calls in group.


5.8 ACD

Automatic Call Distribution (ACD) enables organizations to manage a large number of phone calls on an individual basis. ACD enables the use of IP phones in a call-center role by automatically distributing incoming calls to available users, or agents. ACD depends on support from a SIP server. ACD is disabled on the phone by default. You need to enable it on a per-line basis before logging into the ACD system.

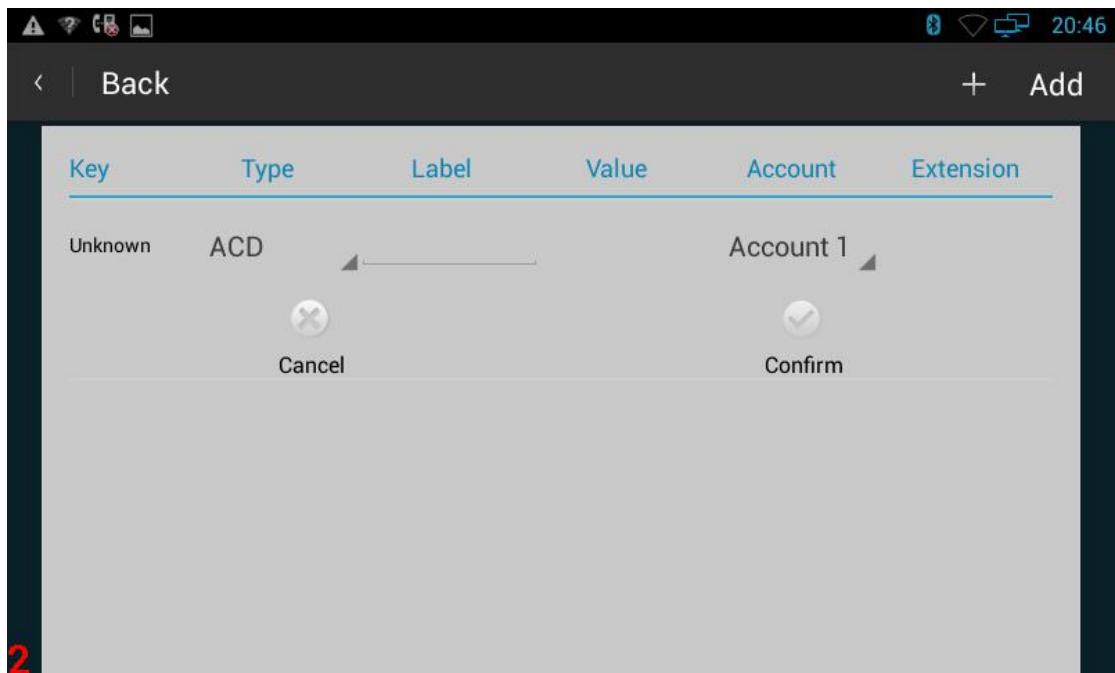

5.9 Hot Desking

In some working place, the people are always walking around. HotDesking feature will make the staffs login his account on any computer in the company. In some public places, the working people is not fixed, anyone can use HotDesking for logging his account, and setting the phones to the familiar mode, such as the remote function of the computer.

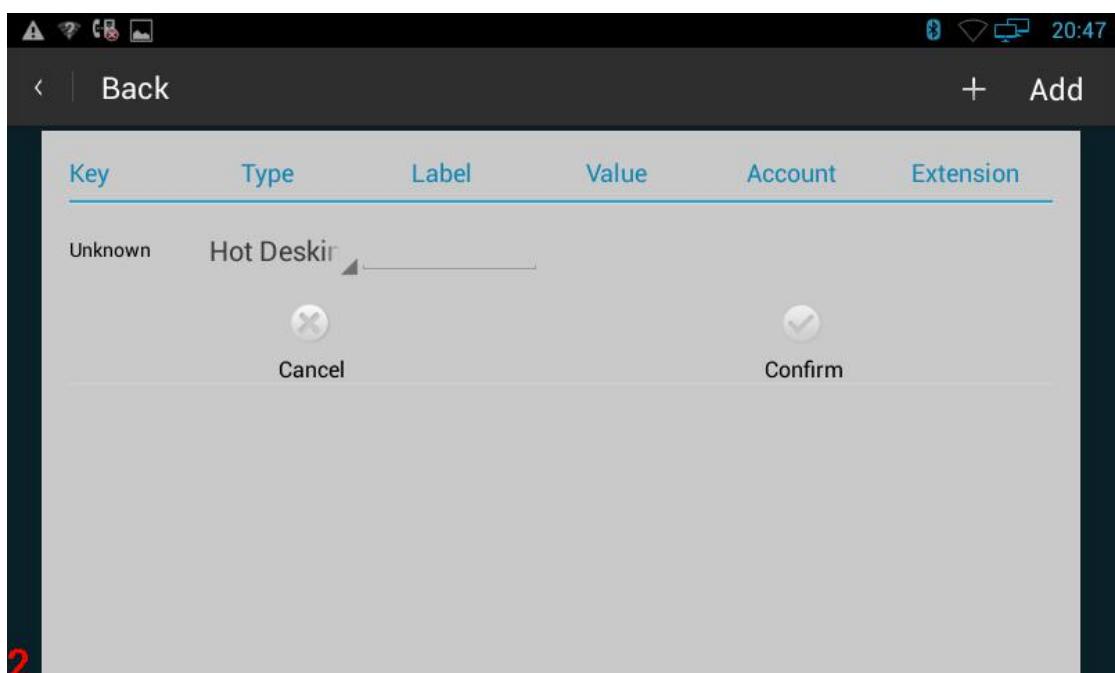


5.10 Conference



You can use the conference feature to hold a 3-way conference by pressing the Conference soft key to invite the current talking and one line talking held to attend conference.

5.10.1 Create 3-way conference

1. Create talking with first party;
2. Press  to create a new talking;
3. Input the number of second party and press the Video Call or Audio Call to make a call;

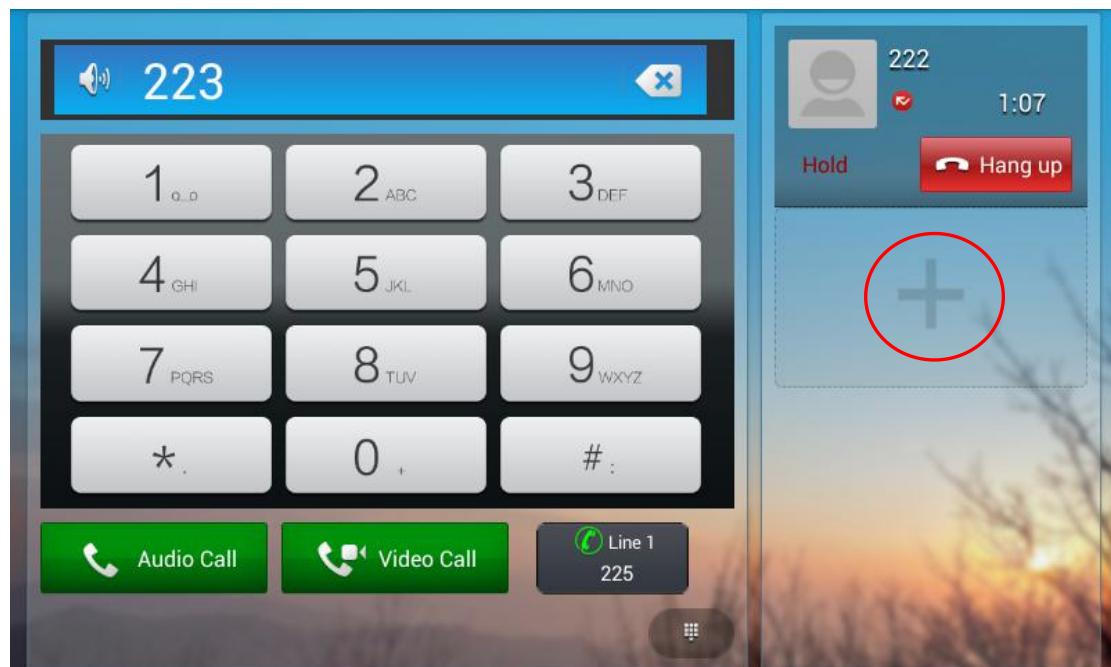


4. When the second party answers your call, press the Conference softkey or the Conference key on the keypad to start 3-way conference.

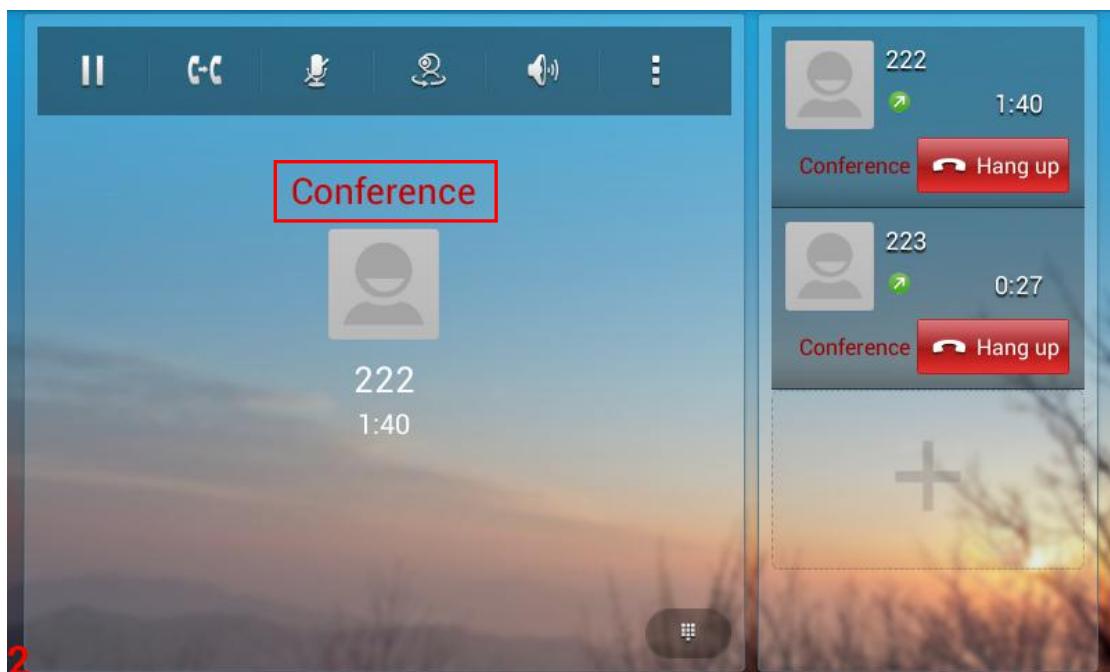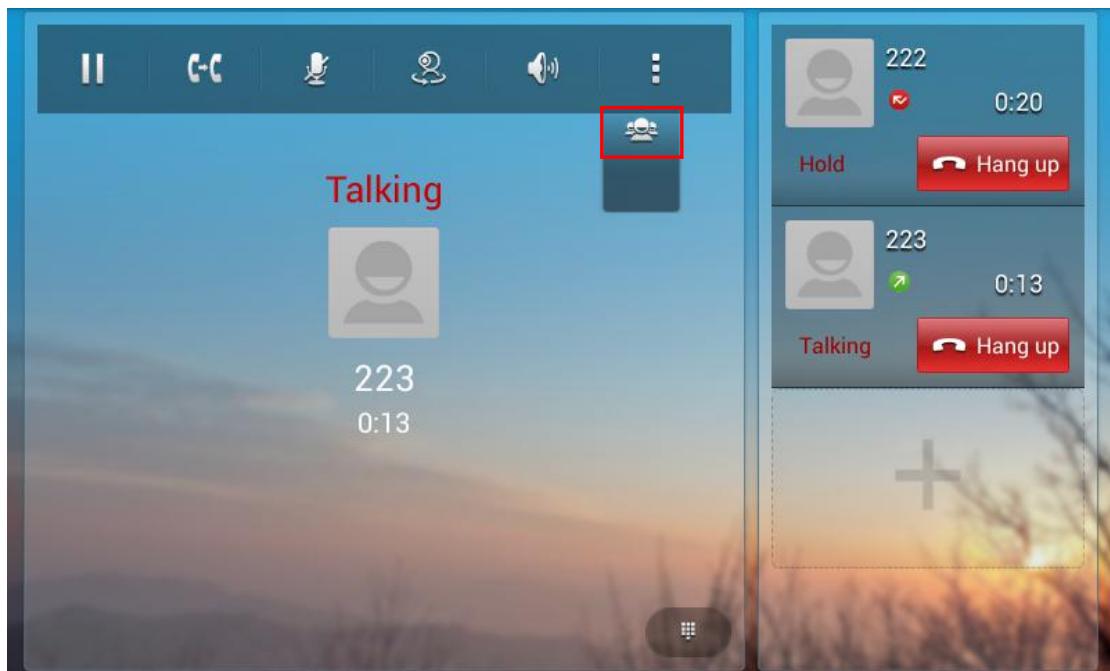

5.11 Transfer


5.11.1 Blind Transfer


- When the IP phone blind transfers a call.

2. Pick up a call, press transfer key on the keypad or click .
3. Drag down the current call into the gray box .
4. Press  to enter the target number, then click Confirm.
5. Click Blind to transfer the number.

5.11.2 Attended Transfer

1. Pick up a call, press transfer key on the keypad or click .
2. Drag down the current call into the gray box .
3. Press  to enter the target number, then click Confirm.
4. Click Attended to transfer the number.

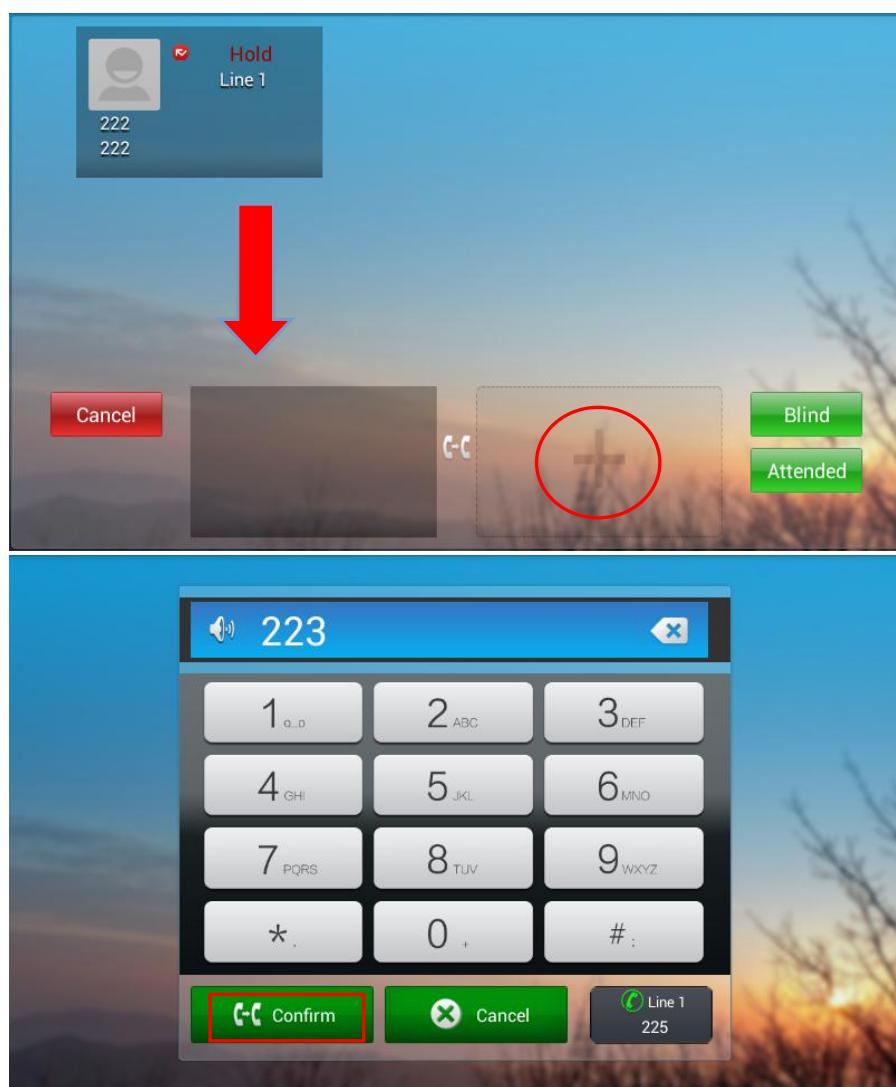

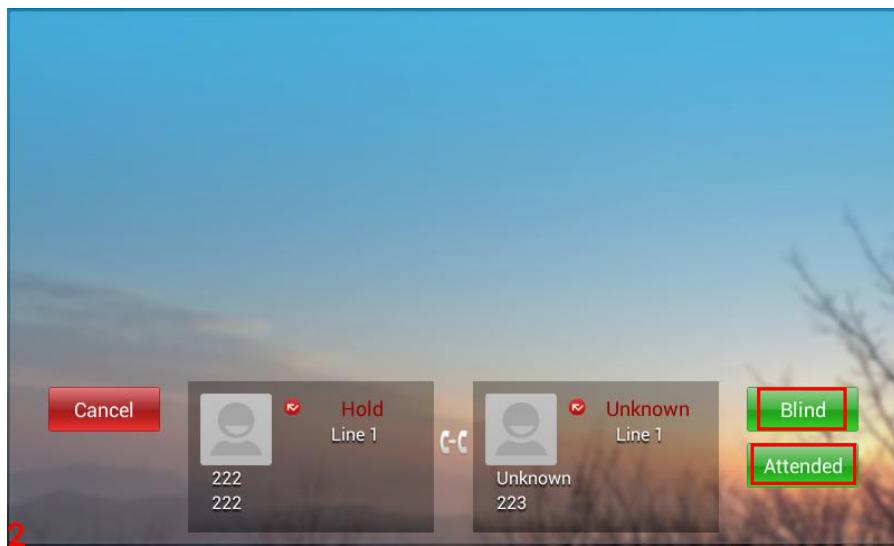

5.12 Keypad Input

Only numbers, * and # can be input by keypad. The default Input method is Android keyboard. You can also download your preferred input method from the internet.

5.13 Webpage Browser

This section describes the default web browser in the video phone, and you can also download your preferred browser through the internet.

You can use one of the following methods to run the browser:

- Mode 1: In the main screen, click ;
- Mode 2: In the main screen, click ->

5.13.1 Open The Webpage


5.13.1.1 Browser Address Bar

Run the browser, enter the URL in the address bar or direct input the information to search. After the input, you can click “Go” on the soft keyboard to complete.

5.13.1.2 Bookmark And Browsing History



Run the browser, click to view the “bookmark”:

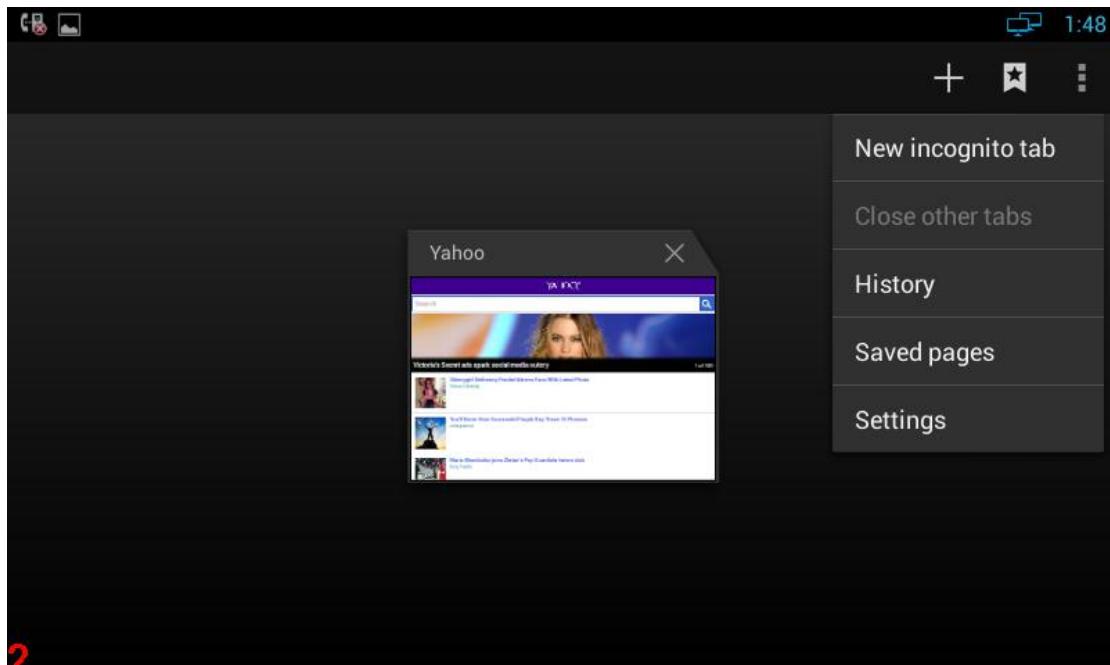

	Add a new webpage
	View the bookmark and browsing history
	Others

5.14 Camera



Open the camera: in the main screen, click -> .

You can view your photos and videos in “Gallery”

5.14.1 Photograph Mode

Turn on the camera, and the default mode is photograph mode.

5.14.1.1 Basic Setting



Click on the upper right corner or long press on the screen to pop up the menu

	Setting
	White balance setting

5.14.1.2 Mode Switch




Click on the lower right corner to switch the mode.

	Panoramic camera mode
	Video mode
	Photo mode

5.14.1.3 Take A Photograph



You can click on the center button on the right side to take pictures. It supports automatic focusing, if you want to adjust the focal length, please use two fingers to press on the screen, shrinkage or expansion to adjust the focal length.

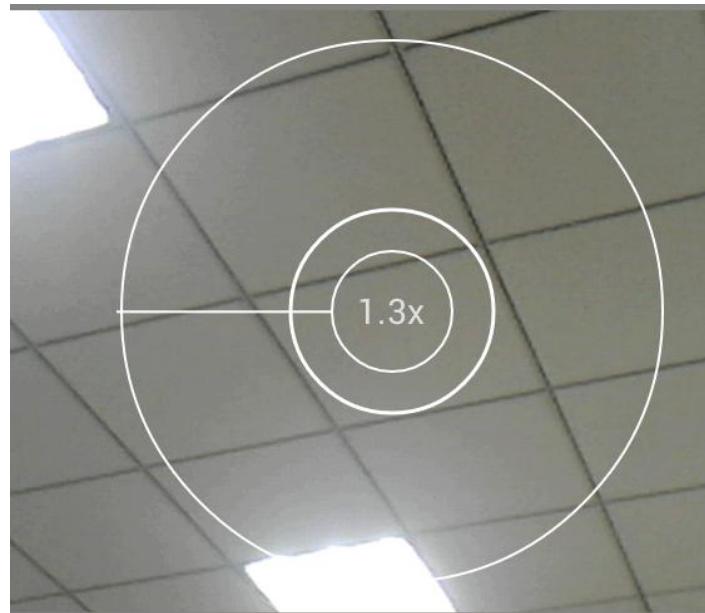

5.14.1.4 Take A Video

Click -> to switch to video mode.

Click , video starts when the icon turns to . And click to stop the video recording and save.

5.15 Gallery


You can use Gallery to view photos or videos, and you can also view the picture or video downloaded from the Internet. You can edit the photo or picture and set it as wallpaper.

You can follow the below method to enter into the gallery:

In the main screen, click ->

5.15.1 View Photo & Picture & Video

Enter the gallery, and you can view all photos, pictures in the device, as shown below:

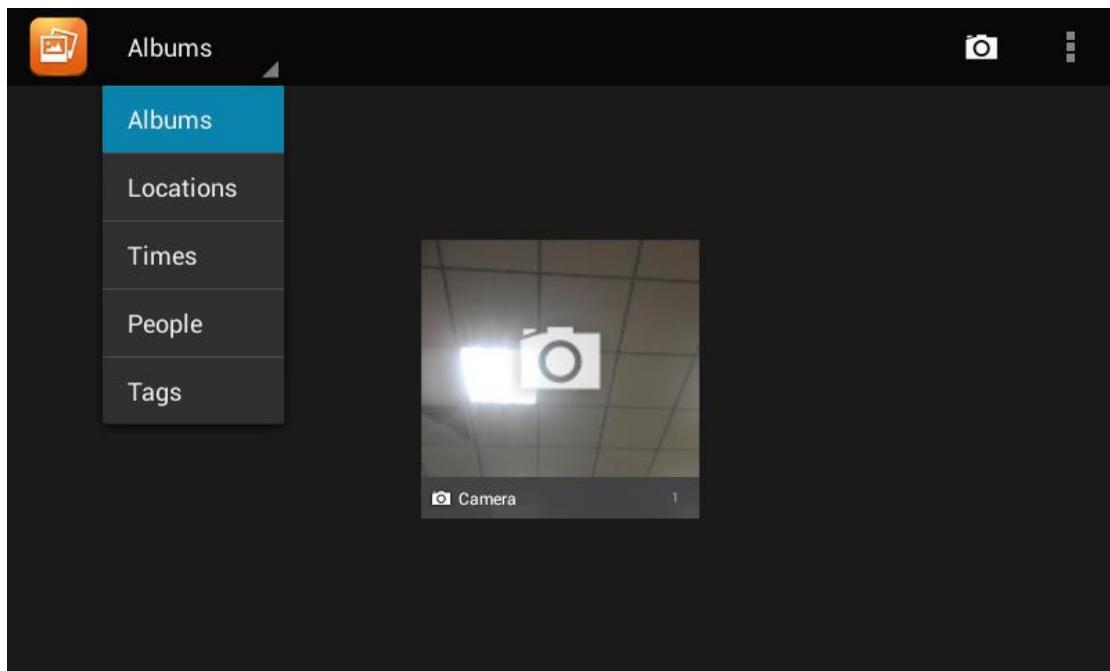

Click the icon on the upper left corner, and you can view photos and videos in groups in the drop-down list. Click on the folder to view all the photos.

While viewing photos, you can use two fingers to press on the screen, shrinkage or expansion to shrink or enlarge the image.

5.16 Bluetooth

Bluetooth is a proprietary, open wireless technology standard for exchanging data over short distances from fixed and mobile devices, creating personal area networks with high levels of security. On VP-R47P, users could use Bluetooth to transfer files, share contact information with other Bluetooth portable devices by installing Bluetooth Application, or use Bluetooth headset for making calls.

To connect to a Bluetooth device, turn on VP-R47P's Bluetooth radio first. The first time when using a new Bluetooth device with the VP-R47P, "pair" the device with VP-R47P so that both devices know how to connect securely to each other. After that, users could simply connect to a paired device. Turn off Bluetooth if it's not used.

Bluetooth related settings are under VP-R47P's Settings application → Wireless & networks. Users could access it via the following two ways:

- In the main Screen, press  button -> System Settings -> Wireless & Networks;
- Press on screen  and click on  -> Wireless & Networks.

5.16.1 Turning Bluetooth On /Off

- Go to VP-R47P's Settings;
- Click on Wireless & Networks;
- Click or untick the option for Bluetooth.

5.16.2 Changing Bluetooth Device Name

The VP-R47P uses “SVP3300” as Bluetooth device name by default. The device name will be visible to other devices when connecting them. Follow the steps below to change the name:

- Go to VP-R47P's Settings;
- Click on Wireless & Networks;
- Click on Bluetooth, and click Bluetooth to turn it on;
- Click on Bluetooth settings → Rename, and enter a new name. Once done, click “OK”.

5.16.3 Paring VP-R47P With A Bluetooth Device

Before connecting VP-R47P with other Bluetooth device, users must pare them first. They will stay paired afterwards unless they are unpaired.

- Go to VP-R47P's Settings;
- Click on Wireless & Networks;
- Click on Bluetooth, and tick Bluetooth to turn it on;
- Click on SEARCH FOR DEVICE;

- The VP-R47P scans and displays the IDs of all available Bluetooth devices in range. If the device you would like to pair with does not show up in the list, ensure that the other device is turned on and set to be discoverable;
- If the VP-R47P stops scanning before the other device is ready, touch SEARCH FOR DEVICE;
- The discovered device will show in the available devices list with device ID. If it's unpaired, it will show "Pairing" under the device ID. Make sure the Bluetooth device is active in pairing mode. Then tap on the device ID on the VP-R47P to pair them. Confirm the passkey in the prompted message (if any). Or if PIN is required, please refer to the device's documentation or other procedures to obtain the PIN.

5.16.4 Un-pairing A Bluetooth Device

After successfully paired, the VP-R47P will show item "PAIRED DEVICES" above the Bluetooth device ID in the scan list.

Once it's connected, users could also tap on to the Bluetooth device ID needed to be unpaired, then tap on Unpair in the prompted message.

5.17 USB

The video phone supports USB connection for keyboard and USB storage devices. To use USB keyboard, simply plug it into the USB port on the right side of the video phone and it will be ready to use.

To connect and access USB storage device:


- Insert USB storage device into USB port at the right side of video phone;
- It will take a few seconds for the video phone to prepare the connection;
- To access USB storage, click on the screen  -> Explorer -> USB, to access and manage your data.

5.18 Calendar

To start the calendar:

- In the main screen, click  -> Calendar;


As shown below:

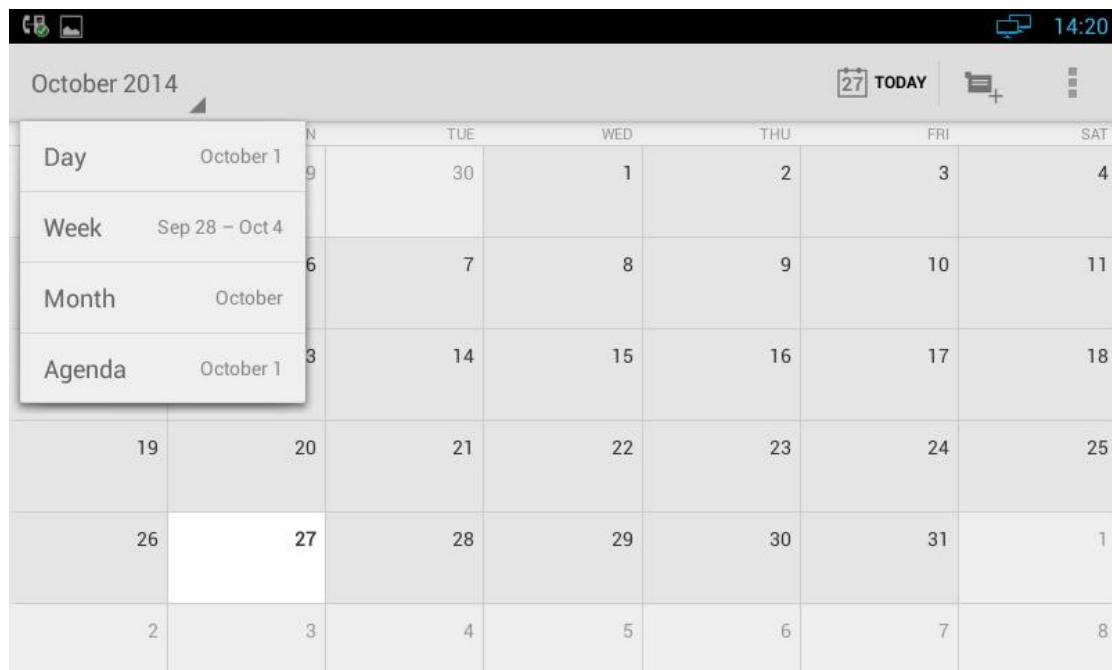

If one day has activity, color will appear on the calendar to remind.

5.18.1 Add An Account

While using the calendar at the first time, it will remind you to add an account.

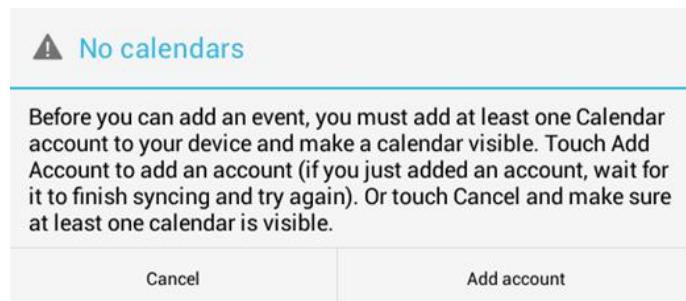

Click "Add account" to add an account, and then synchronize all the schedules of the account to the calendar.

5.18.2 View Calendar

The calendar will display weekly by default, and you can slide the calendar up and down to view the different weeks. In order to view the activities or create the new activities, you can also make the calendar display daily or monthly. While using daily or monthly displaying, you can slide the calendar left and right to view the different day or month.

Click the date on the upper left corner, it will display the drop-down list


Day	October 1
Week	Sep 28 – Oct 4
Month	October
Agenda	October 1

, Calendar displaying mode can be selected as daily, weekly or monthly.

5.18.3 New Activities

1) While Calendar is displaying as daily or weekly, you can use the following methods to create a the new activity:

- Click on the date, and then click on the time period;



- Click on ;

2) Input the details of the activity, as shown below:

The image shows two screenshots of a mobile calendar application interface.

Screenshot 1: Event Creation Screen

- Event name:** [Empty field]
- Location:** [Empty field]
- FROM:** Wed, Oct 1, 2014 | **TO:** 01:00
- TO:** Wed, Oct 1, 2014 | **From:** 02:00
- ALL DAY:** [unchecked]
- (GMT+8:00) Beijing:** [Empty field]
- GUESTS:** Guests

Screenshot 2: Event Edit Screen

- GUESTS:** Guests
- Description:** [Empty field]
- REPETITION:** One-time event
- REMINDERS:** 10 minutes | **Notification:** [X]
- Add reminder:** [Empty field]
- SHOW ME AS:** Busy
- PRIVACY:** Default

3) Click “Done” to finish.

5.18.4 Edit Activities

You can click on schedule needed to be modified to edit the schedule.

5.18.5 Delete Activities

While viewing the activity, you can click “DELETE” on the upper right corner to delete


the activity.

5.19 Clock

Enter the Clock:

- In the main screen, click  -> Clock;

As shown below:

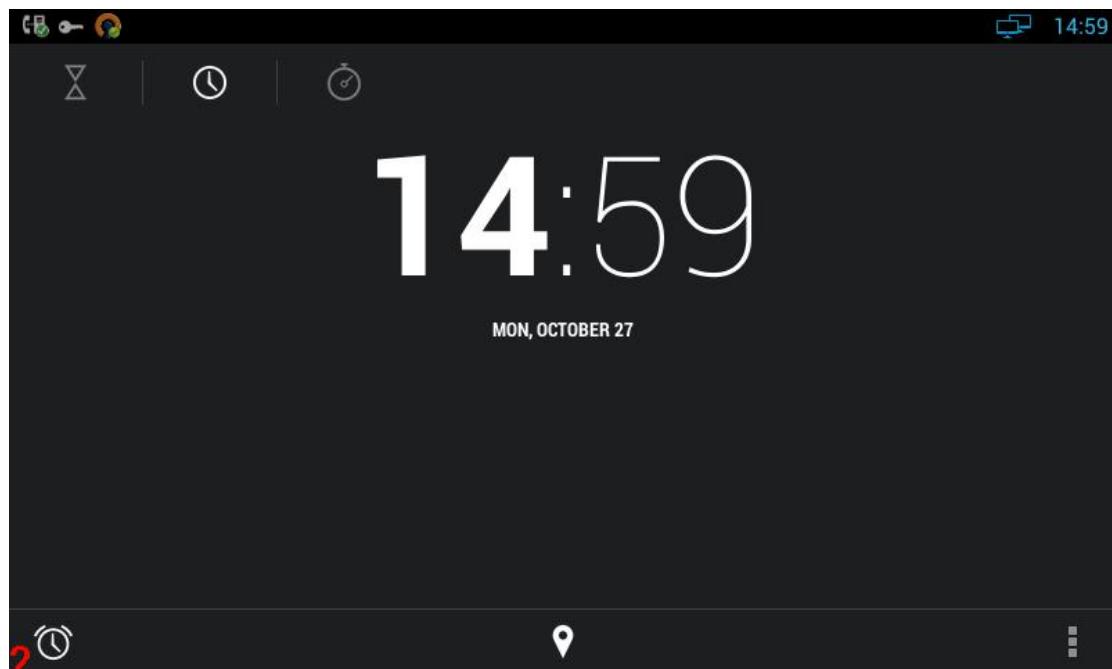


Description:

	Alarm
	Countdown timer
	Stopwatch
	Time zone
	Others

5.19.1 Alarm


You can add one or multiple alarms:

1) Click ;

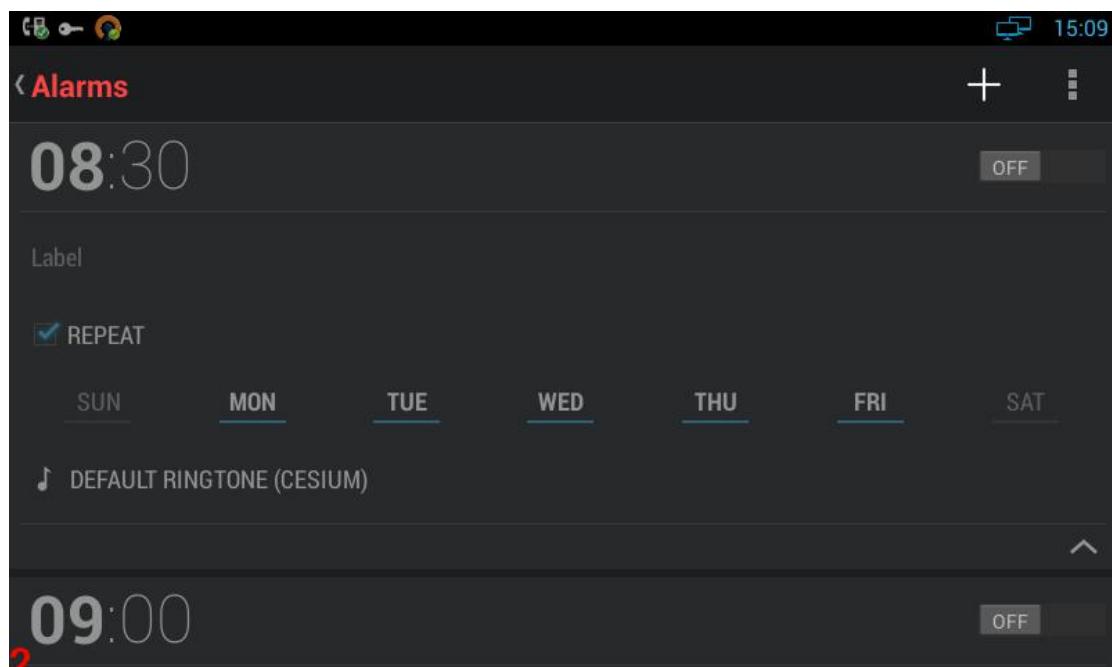

2) Click ;

3) Input the time of alarm;

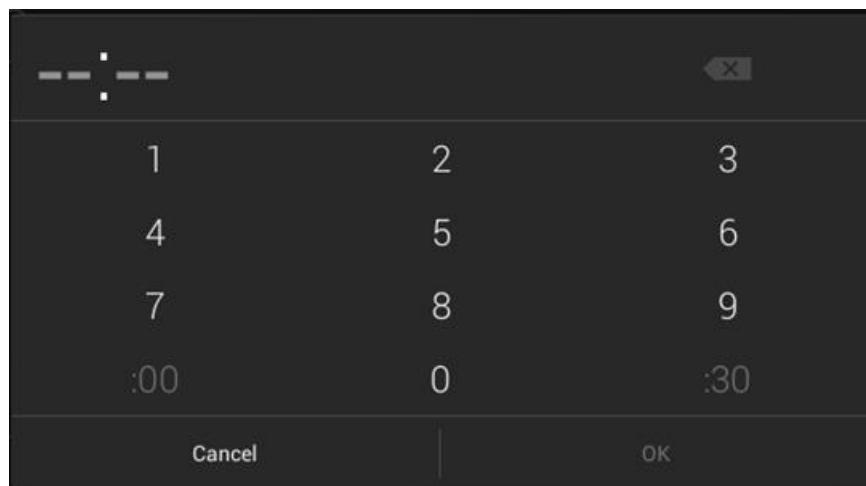

- 4) If you want to repeat the alarm in some days of a week, please click "REPEAT";
- 5) You can choose the ringtone of the alarm.

5.19.1.1 Enable/Disable Alarm

You can click ON/OFF to enable or disable the alarm.

Note: If power off the phone, the alarm will also be off.

5.19.1.2 Modify Alarm

If you want to modify the status of the alarm, including time, repeat data, alarm ringtone, you can directly click on the alarm.


5.19.1.3 Delete Alarm

In Alarm page, you can use the following method to delete the alarm:

- Press and hold the alarm, after pop-up the dialog box, click  , and then click “OK”.

5.19.2 Countdown Timer

- 1) Click 
- 2) Click the number to set the countdown time
- 3) Click “START”

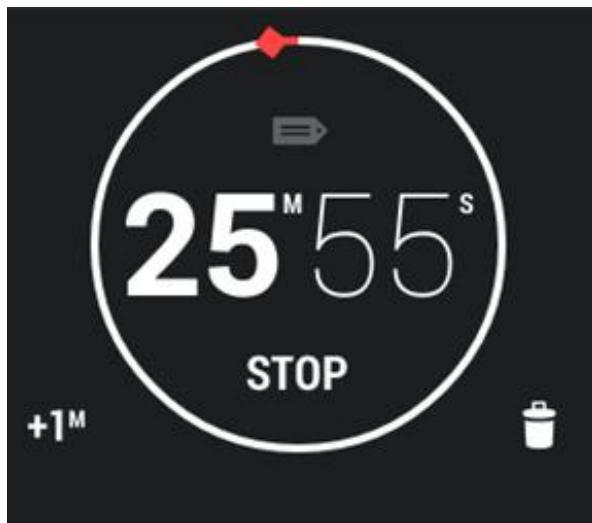

Click on the time in the page of countdown timer can stop or continue the time, and the other buttons are described as followed:

	Add one minute to countdown timer
	Delete the current countdown timer

5.19.3 Stopwatch



- 1) Click ;
- 2) Click “START” or “STOP” to start or stop the stopwatch;
- 3) Click the time icon to start a new time;
- 4) When the time is on hold, click to reset the timer.

5.20 Email

Email Application can let you use POP3 or IMAP service to send and receive e-mail.

Start Email:




- In the main screen, click ->Email

5.20.1 Add A New Email Account

Make sure the email account has enabled POP3 or IMAP service, and you can add many accounts.

- 1) Please choose one of the following methods to start:
 - If you haven't added an e-mail account yet, while starting the e-mail application, you will be asked to set up your account, as shown below

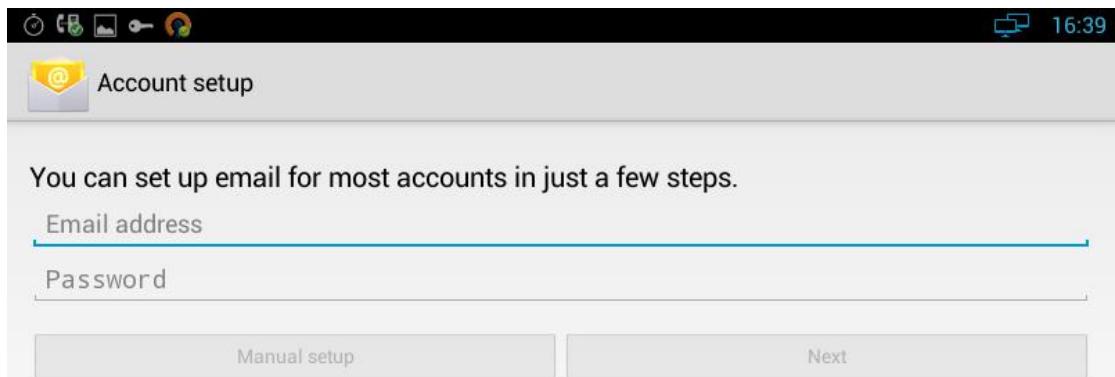

- If you have already set up an email account, In the main Email page, Press “Menu” button, and then click “Account”, and last press “Menu” to “Add Account”.

2) Input the email account and password, and then click “Next”;


If there is no account type in the equipment database you want to set, the device will require you to enter more detailed information (the receiving server settings and outgoing server settings).

3) Input the account name and your name, click OK.

5.21 Music

In the main screen, click ->Music.

The music page is shown as below:

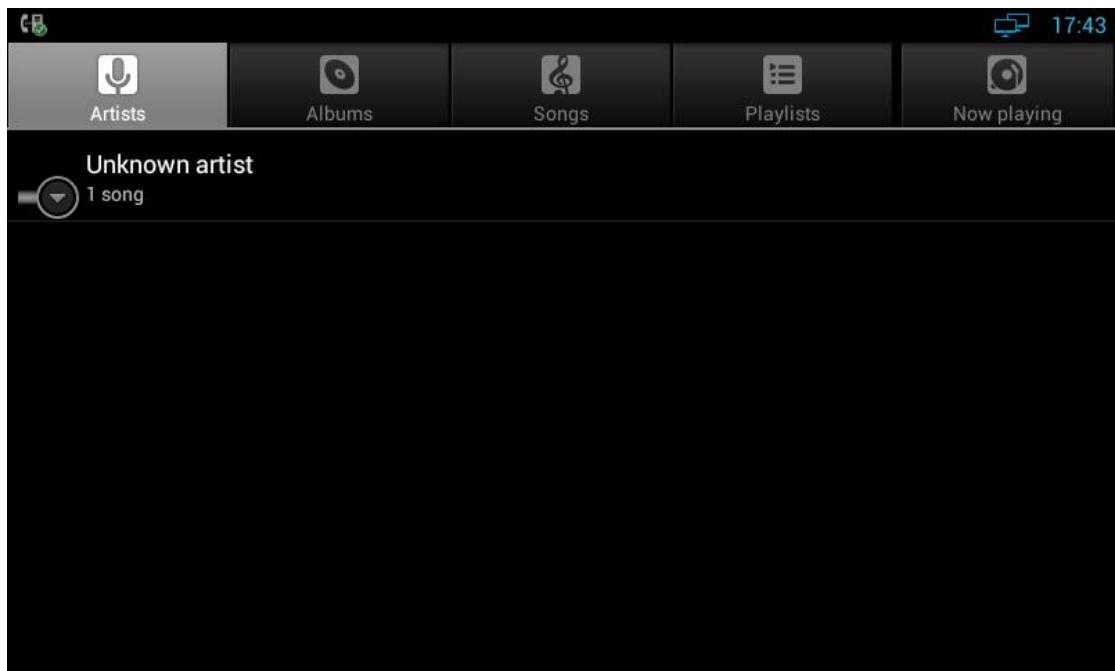


You can click the labels of Artists, Albums or Songs to view all songs. You can also view or play the songs from the playlists.



To view the currently playing song, please click the "now playing" label.

5.22 Explorer

You can use explorer to manage the files in the device.

In the main screen, click -> Explorer, as shown below:

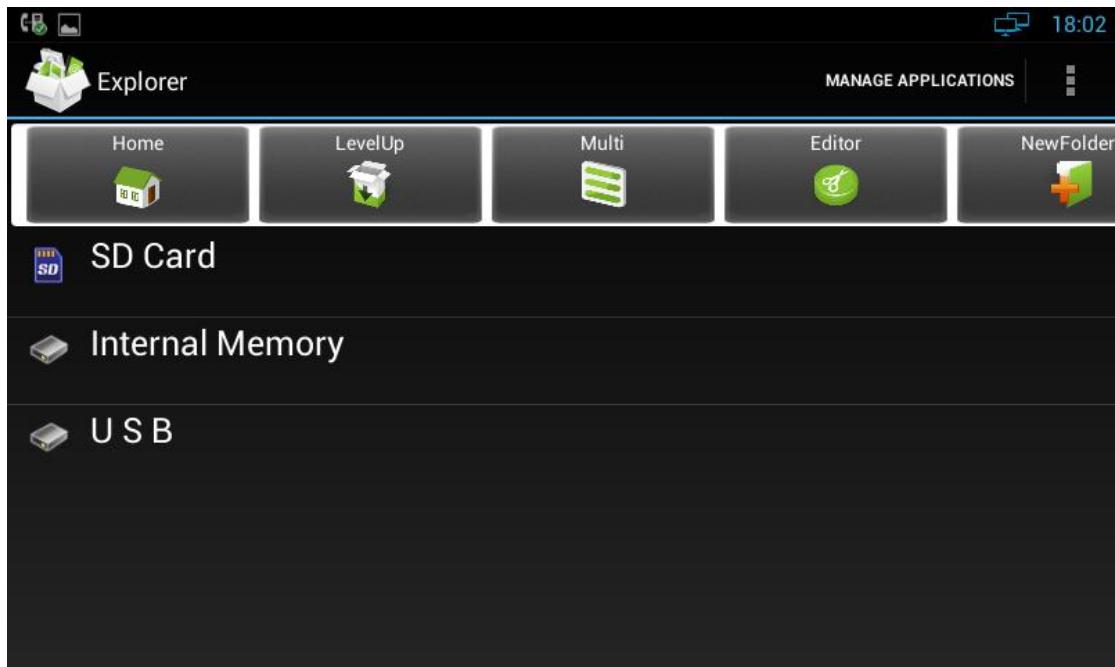

	Home Page
	Upper Layer
	Multiple Choices, And the selected file will change to blue color.
	Editor, you can do Copy, Delete, Move, Paste, Rename, Send, Create shortcut operations.
	New Folder
	Previous File
	Next File
	If you insert a SD card, you can view the files in SD card. (Optional)
	View the internal files of the device
	View the files in inserted USB device


5.23 Video Player

You can use video player to play local videos.



To run the video player: In the main screen, click  -> Video

After entering, you can click on the list of videos to watch. As shown below:

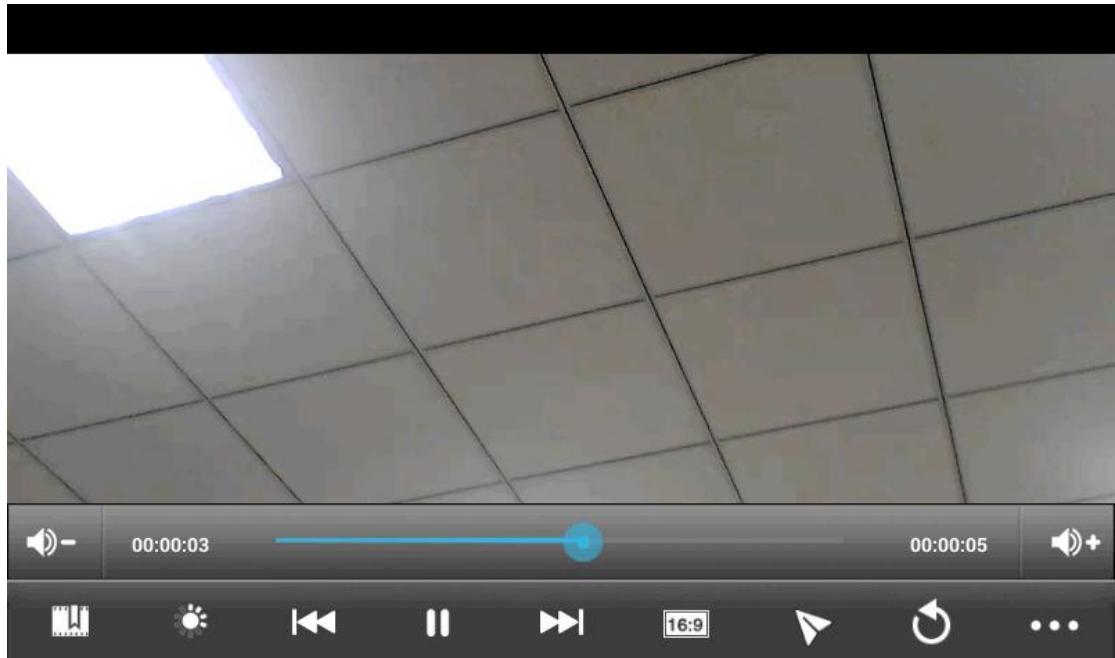

	Bookmark
	Screen Brightness Adjustment
	The previous video, and long press to make video fast backward.
	Hold/Play
	The next video, and long press to make video fast forward.
	Screen size adjustment, four type of video sizes: original size, full screen, 16:9, 4:3
	Floating browse mode
	Others

5.23.1 Floating Browse Mode

Click on during playing a video to enter the floating browse mode. As shown below:



You can click on to play the video, click to shrink the floating window. And use two fingers to press on the screen, shrinkage or expansion to adjust the window size.


If you want to close the floating window, please long press the floating window until it displays icon in the center, click on the icon to close the floating window.

5.24 Others

5.24.1 Apk Installer

You can use Apk Installer to install the apk application

In the main screen, click ->Apk Installer. As shown below:

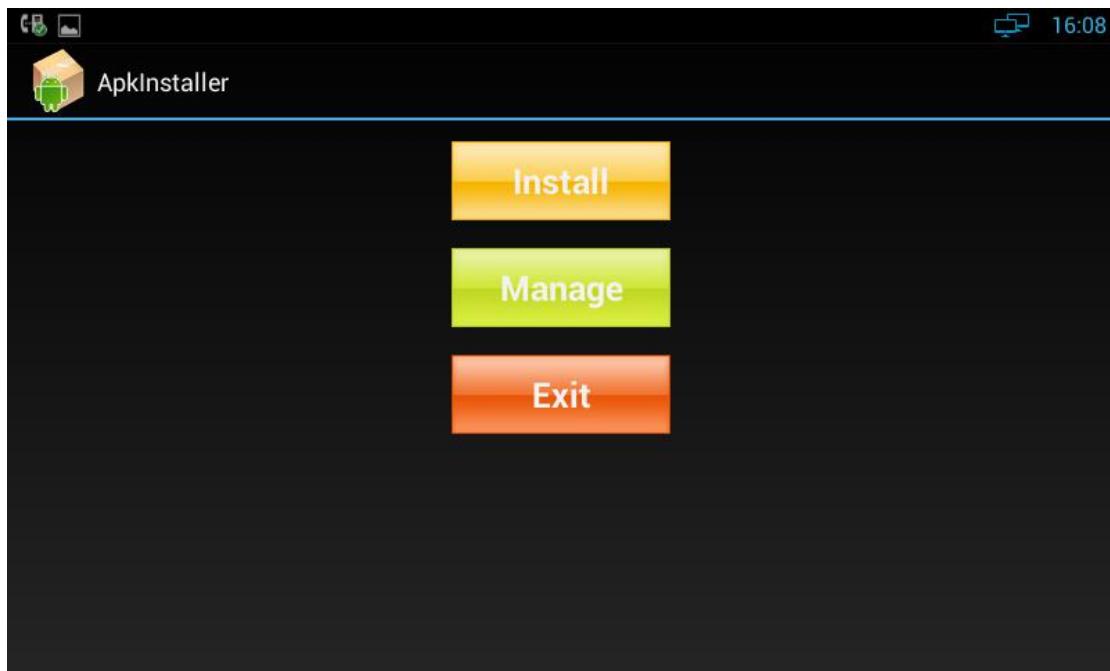

5.24.1.1 Install

You can click "Install", and then browse the path:



The system will list all the Apk applications under the path, click the Apk to install.

5.24.1.2 Manage


You can click on "Manage" button to browse the Apk installed in the system.

5.24.2 Ping Tool

You can use the Ping tool for Ping query, network packet capture and view the log information.

5.24.2.1 Ping Query


Ping query interface is as shown:

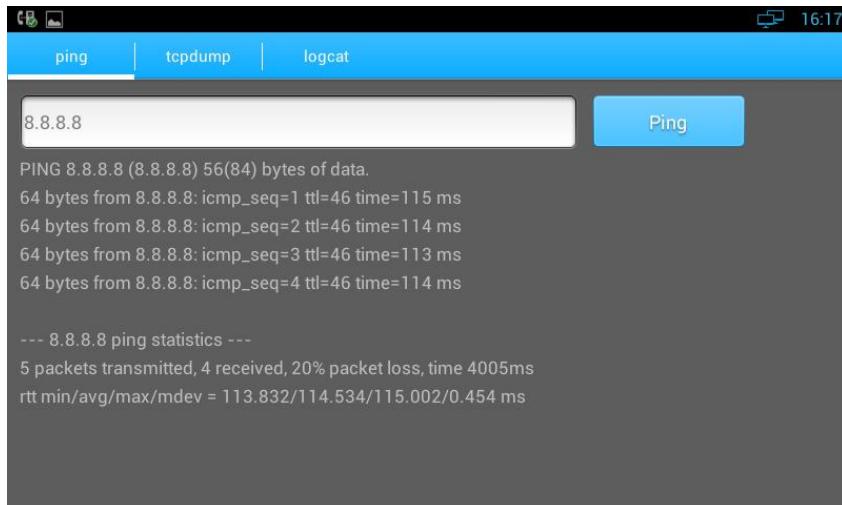

You can input the address you want to Ping, click the Ping button, you can view the Ping query results. If you take a long Ping query, in the input box, please manually enter the Ping + address, such as: , and then click the Ping button.

5.24.2.2 Tcpdump

Log captured tool interface is as shown:

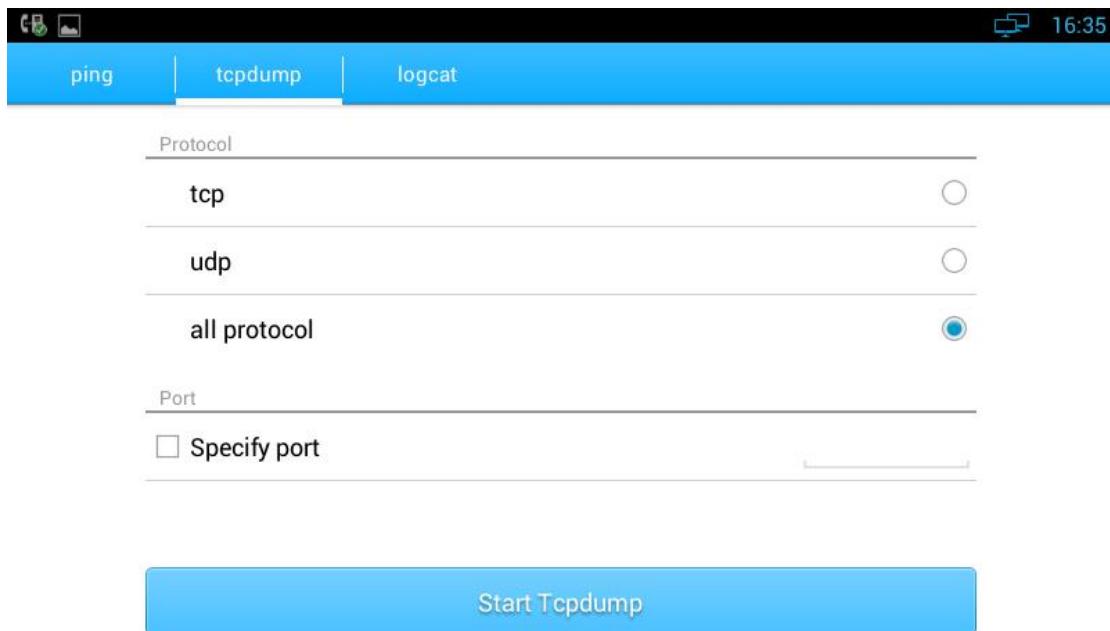


You can choose what type protocol and specified port you need to capture the logs. Press “Start Tcpdump” to start the log captured.


If you want to finish the log captured, you can press “Stop Tcpdump” to stop the capture, and the system will prompt the file saved path. You can use Wireshark and other tools on PC to read the logs.

5.24.2.3 Logcat

Logcat interface is as shown:

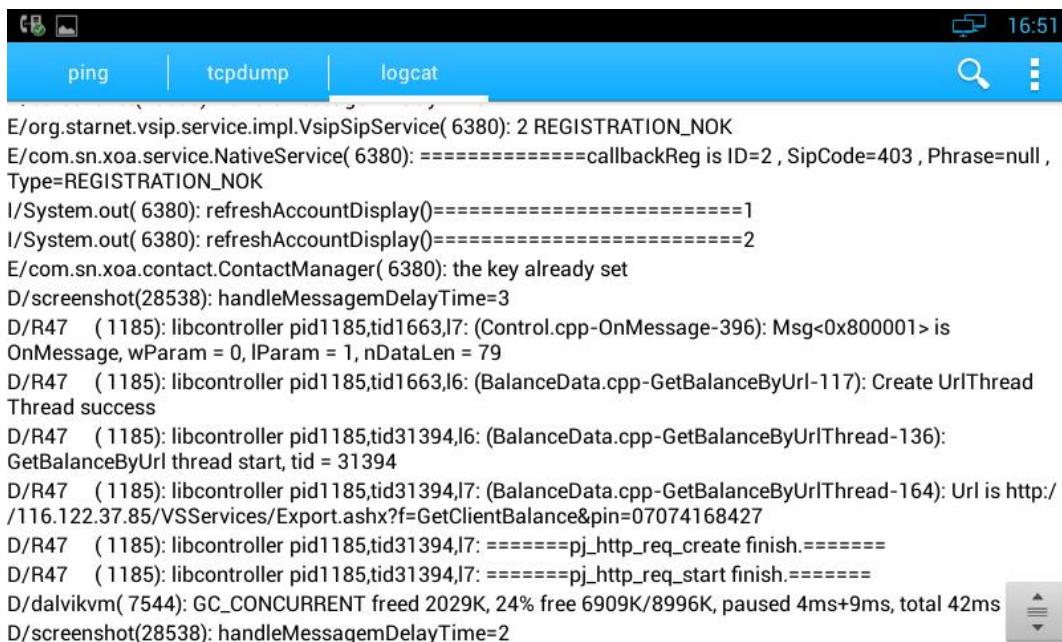

You can use  to search the log information, and select the log level through the drop-down list.

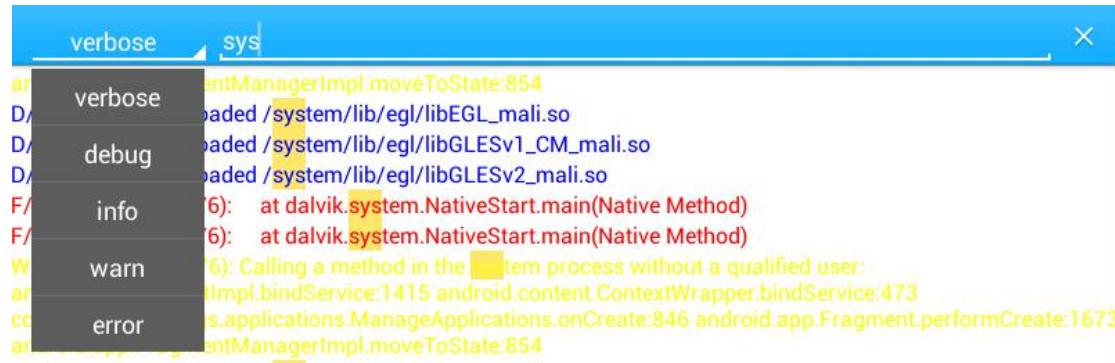

Or click  to see more options.

If you need to save the log, please click , select "Save"

If you need to highlight the log information, please click , select "highlight", and then the log will be showed as different color.

6 Software Upgrade

6.1 Immediate Update

Choose one way below to enter the system upgrade interface:

- In the main screen, press “Menu” on board -> System Settings -> System -> About Multimedia Terminal -> System Upgrade -> System Update Now
- In the main screen, tap on settings icon  -> System -> Multimedia Terminal -> System Upgrade -> System Update Now

Update interface as shown:


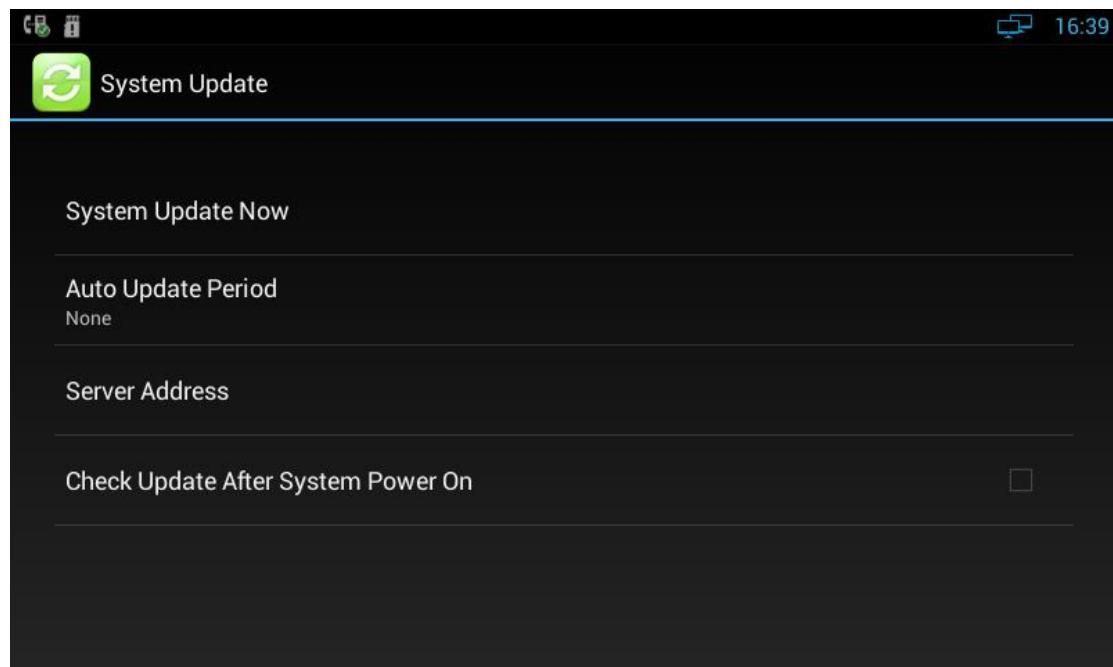


Figure 5-1

Three ways to update immediately: Select other upgrade package, Local Update, Remote Upgrade, as shown:

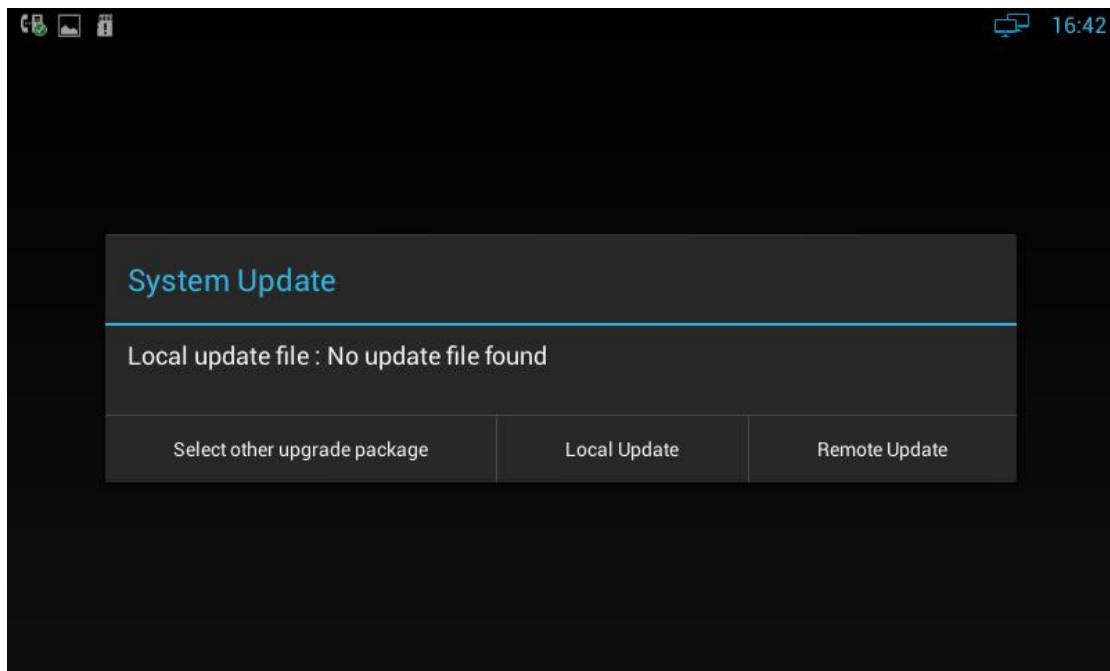

6.1.1 Select Other Upgrade Package

1) Via USB to Upgrade

Put upgrade package into USB, insert USB, then click “Select other upgrade package”, find “/mut/usb_storage”, find the upgrade package, then click “OK” to upgrade.


2) Via Internal Memory to Upgrade

Use USB to copy the upgrade package into Internal Memory, then press “Select other upgrade package”, find “/mnt/sdcard”, find upgrade document, then click “OK” to upgrade.

6.1.2 Local Update

1) Via USB to Upgrade

Change the name of upgrade package into upgrade.zip, then copy it into USB, insert USB, enter the upgrade interface, you will find the path of upgrade package, because video phone has searched it automatically, click “Local Update” to start upgrading, as shown below:

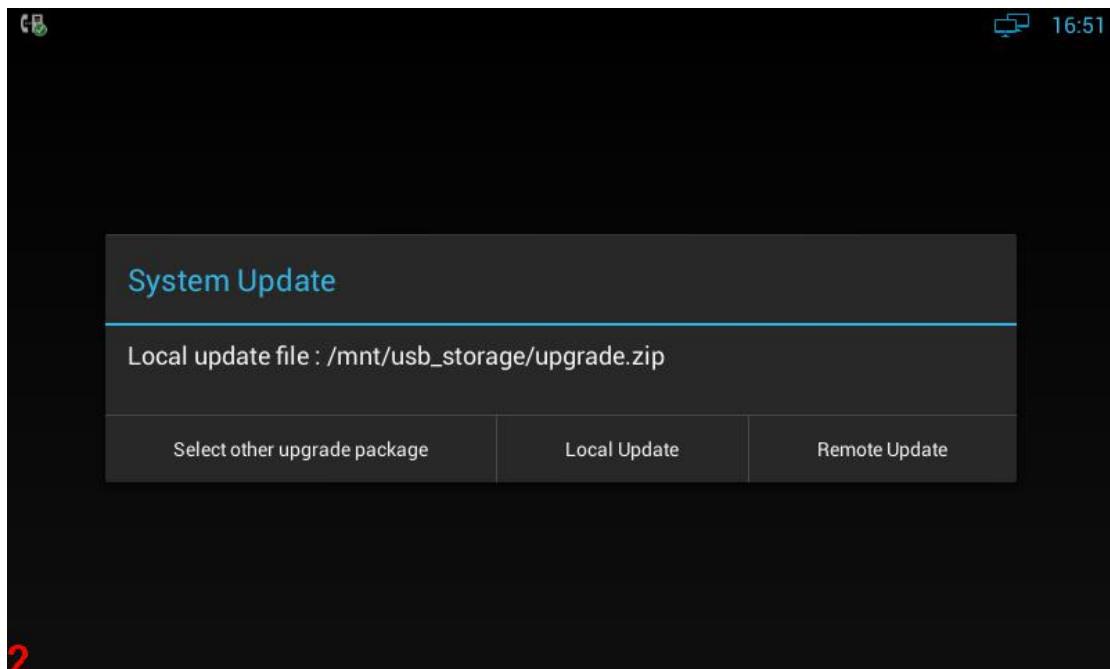


2

2) Via built-in SD Card to upgrade

First, change the name of upgrade package into upgrade.zip, then copy it into USB, and then use USB to copy the upgrade package into Internal Memory, enter the upgrade interface, you will find the path of upgrade package:/mut/sdcard/upgrade.zip, because video phone has searched it automatically, press “Local Update” to start upgrading.


6.1.3 Remote Update

1) Enter the interface in figure 5-1, click “Server Address”, and input the server address that contains upgrade package. As shown below:

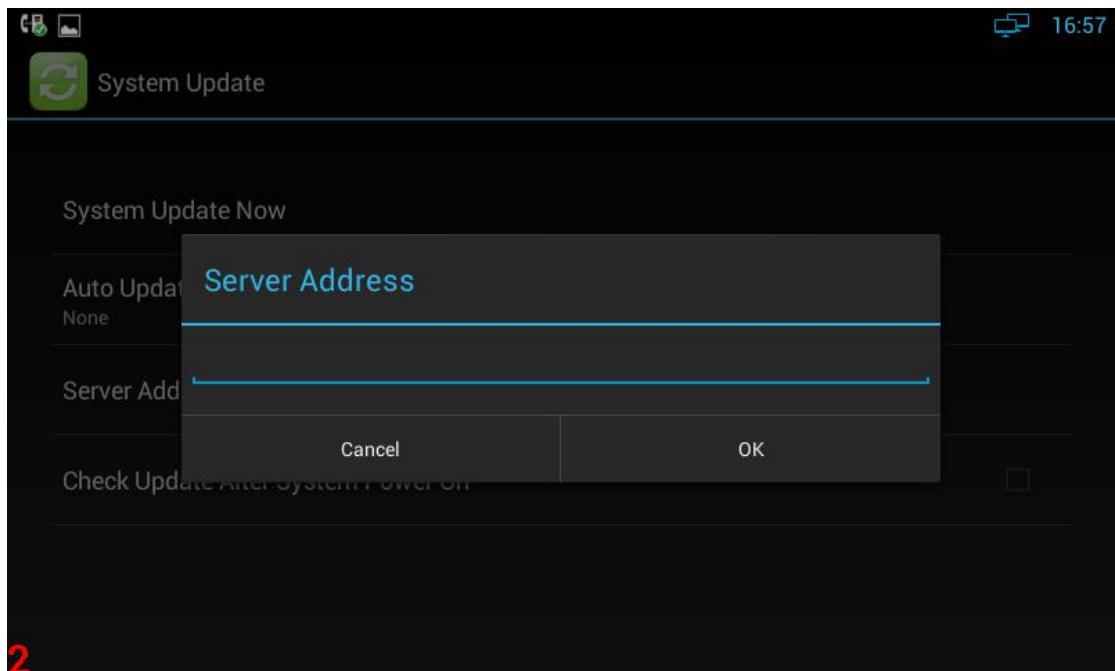

2

- 2) Click “Remote Upgrade”, video phone will check the new version automatically. If exist a new version, it will prompt. Press “OK” to download upgrade document.
- 3) After finish downloading, it prompts “Download update image success! You need to restart system for update! ”, press reboot now, and then system will upgrade automatically. As shown below:

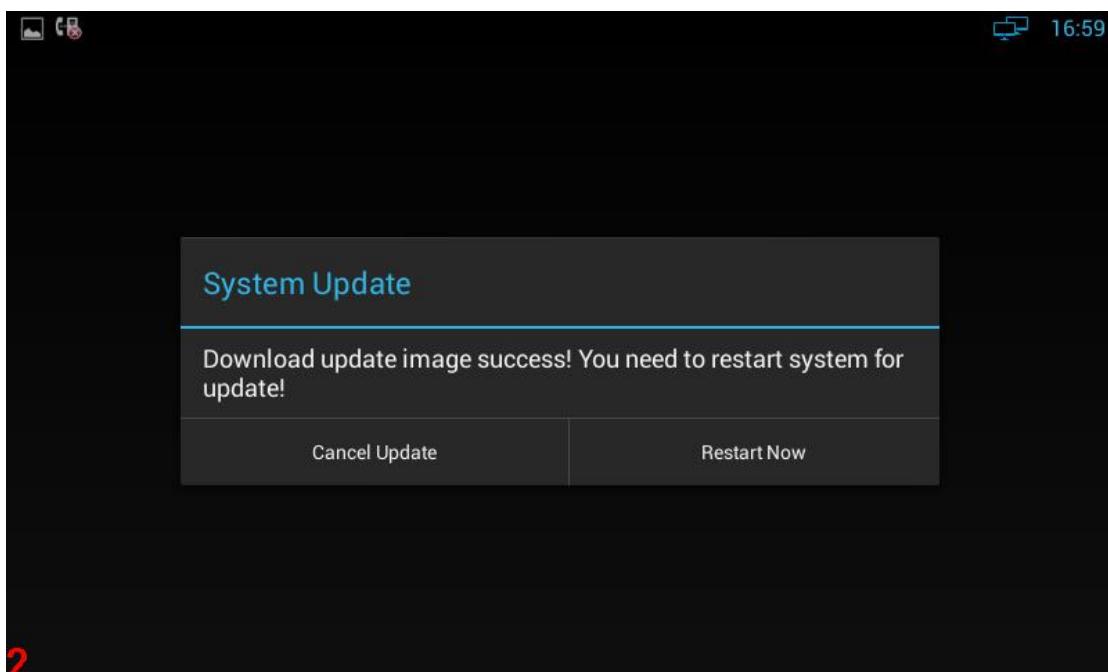


2

6.2 Auto Update Period

Auto Update Period includes four modes: None, One Day, One Week, and One Month. The terminal will detect the new version automatically in time, if there is, the status bar will show “There is a new version, please update!”. Click and download the image for upgrade.

As shown below:

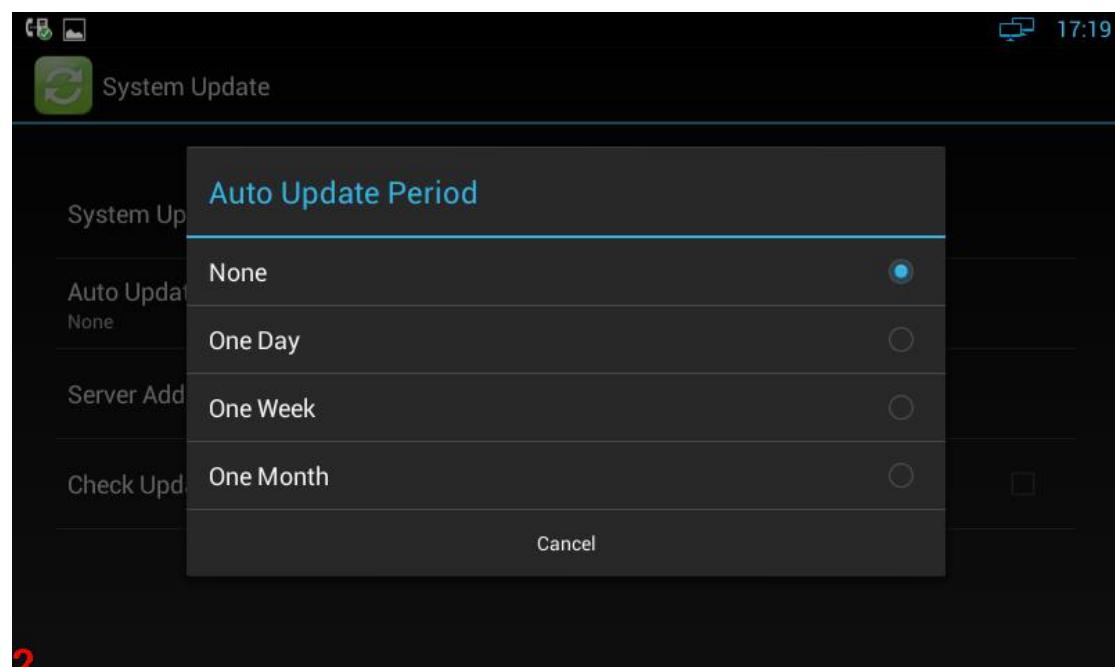


6.3 Upgrade on the web

- 1.Click Upgrade->Basic
- 2.Choose the software you want to update from the computer.
- 3.Click .

6.4 Check Update After System Power On

Click “Check Update After System Power On” in figure 5-1. Every time you power on, the system will check the new version automatically. If there is a new one, the status bar will notice: “System has new version, please update now！”, click and download the image for upgrade.

As shown:

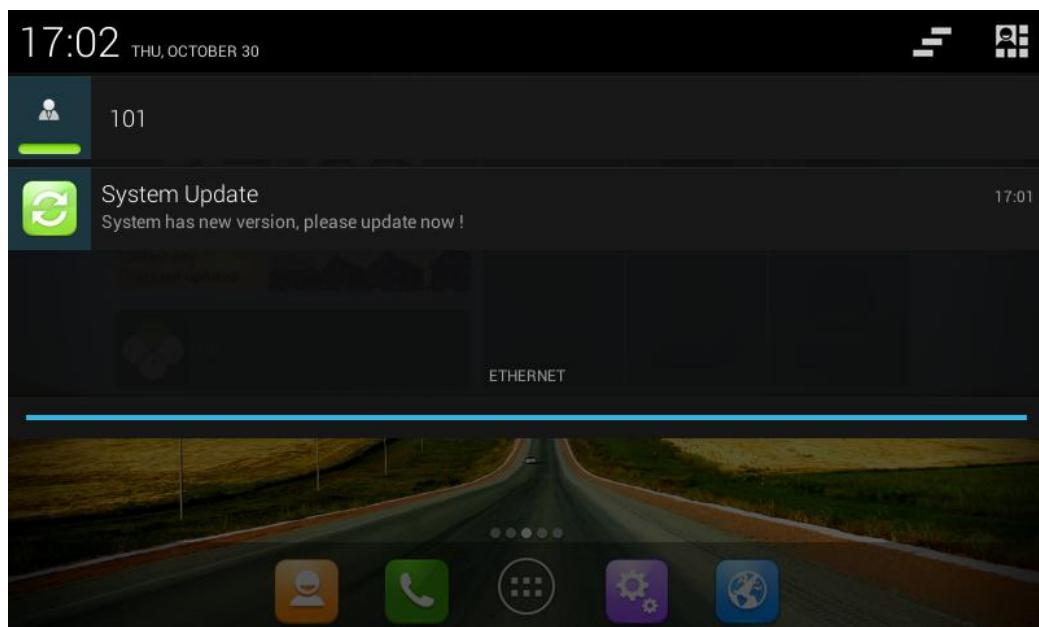

7 System Maintenance

7.1 System State Inspection

Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> About Multimedia Terminal



Mode 2: In the main screen, click  ->  -> About Multimedia Terminal

It will display phone status, software version and hardware version in this item.

7.2 IP Query

Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Ethernet



Mode 2: In the main screen, click  ->  -> Ethernet




Mode 3: Press Speaker button or pick up to enter the dialing interface, click on upper right corner -> enter the setting interface, check Status Info;




Mode 4: Slide down the top-left  , click the account, enter the setting interface, check Status Info;

Mode 1 and Mode 2 can check IP address, subnet mask, gateway, DNS server etc. in Ethernet.

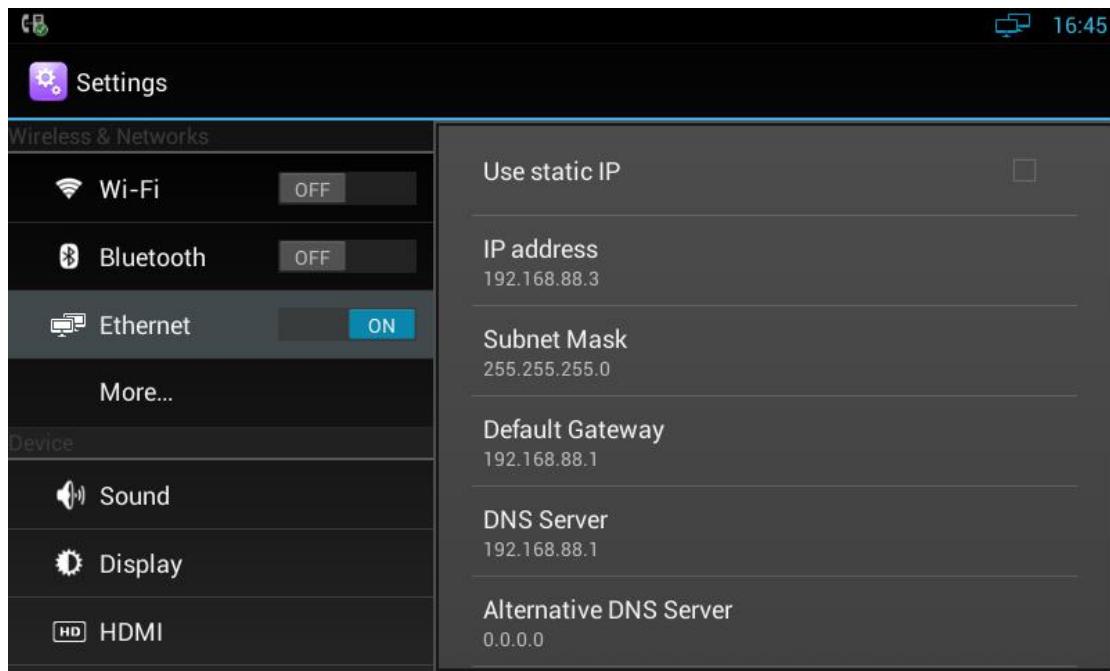

Mode 3 and Mode 4 can check the corresponding network information in setting interface.

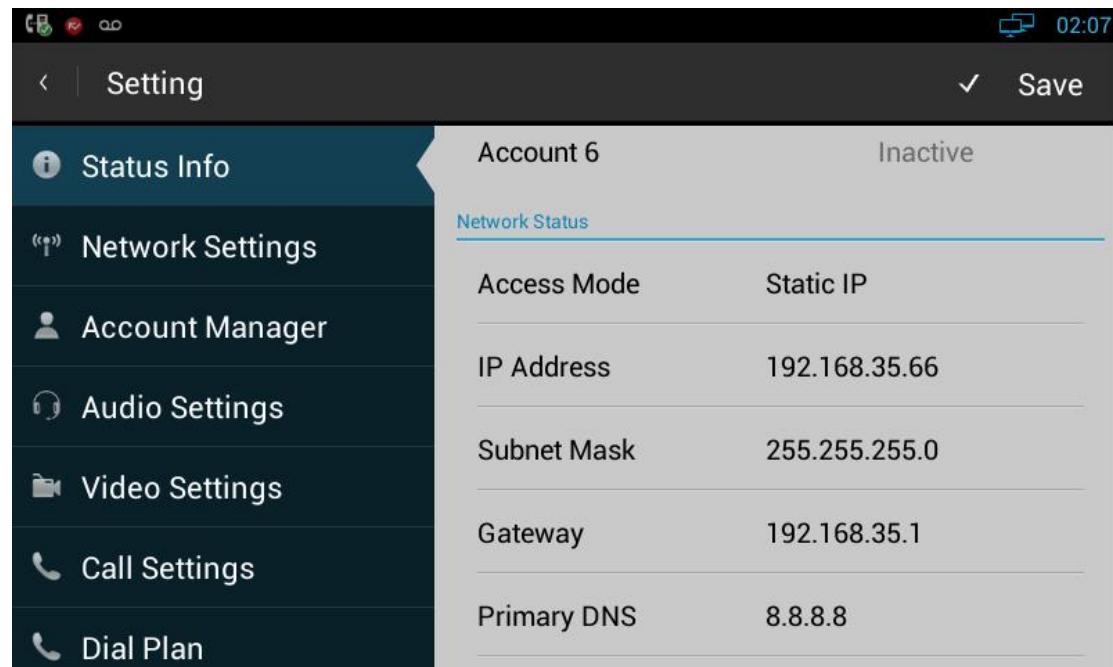

7.3 SIP Account Registration Query

You can choose one of the following methods to enter the SIP account registration query. If the account is successfully registered, the icon will be light up in notification area of phone.



Mode 1: Press Speaker button or pick up to enter the dialing interface, click on upper right corner, check Account Manager.



Mode 2: Slide down the top-left , click the account, enter the setup interface, check Account Manager.


7.4 Backup & Reset

Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Backup & reset



Mode 2: In the main screen, click -> Backup & reset

Click “Factory data reset”, click “Reset Multimedia Terminal”, then the phone will restore to factory settings.

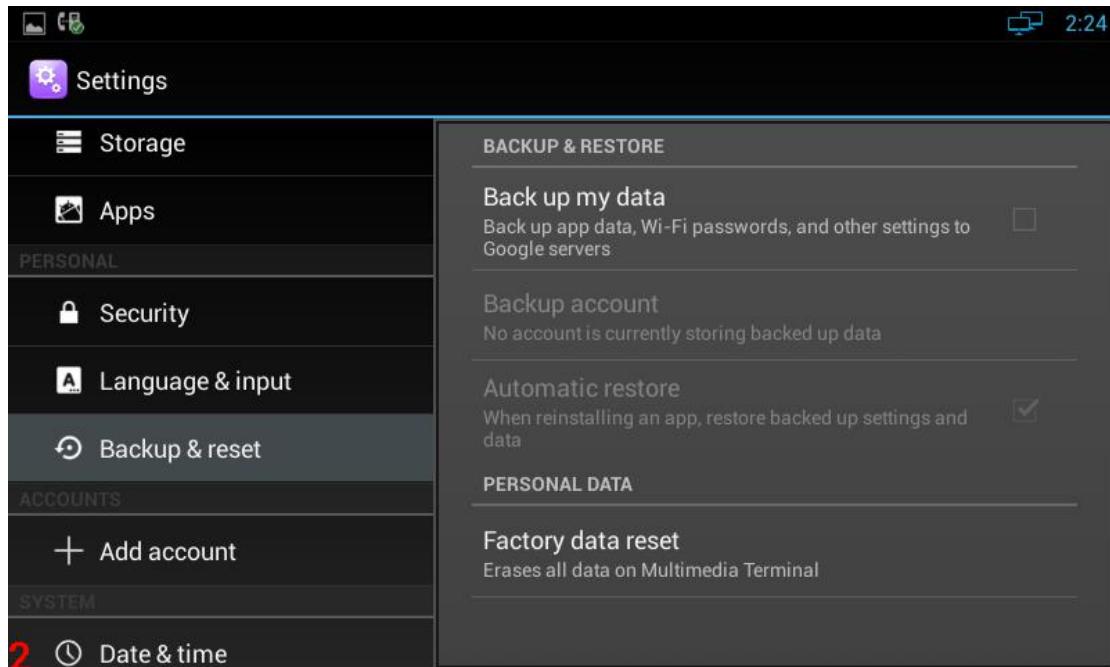

7.5 Failure Process

Failure 1: Power LED is off

- Please check whether the adapter fits this product requirement;
- Please check whether the outlet is working properly.

Failure 2: No voice when pick up the handset

- Please check whether the connection of handset is working properly;
- Please adjust the volume + key on keyboard when off-hook the phone, Observe the display of “volume” prompt. Please pay attention that the volume key in on-hook and off-hook situation is to adjust the ring volume and media volume (call volume) separately. These two adjustments are unrelated. Adjust the volume won’t change call volume when on-hook the phone.

Failure 3: Phone can't dial properly

- Please check whether there is  at the top-right of screen. If not, please check whether the cable in LAN port is loose;
- Please check the IP address of phone via configuration (go to 4.2, “network configuration”);
- If it’s now in LAN, please check whether the IP address of phone is conflict with other devices in the same LAN.
- If the network connection is properly, please check whether the icon  of successful registration is in the notification area. If there is no explanation of configuration failure, please contact network administrator to recover it.


Failure 4: No ringing when incoming a call

- Please make sure the handset is completely hung on the base
- Please adjust the volume + key on keyboard when on-hook the phone, Observe the display of “volume” prompt. Please pay attention that the volume key in on-hook and off-hook situation is to adjust the ring volume and media volume (call volume) separately. These two adjustments are unrelated. Adjust the volume won’t change ring volume when off-hook the phone.

8 Web Interface

8.1 Web login

1. Open the browser on your computer.
2. Input the IP address in the address bar.
3. Enter the user name and password (user name: admin, password: admin), then click .

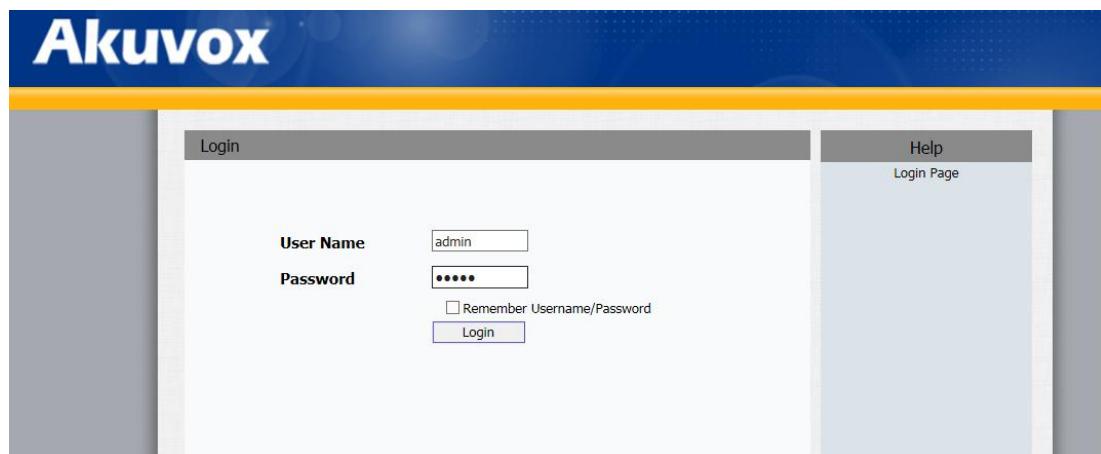

8.2 Status->Basic

Click Status->Basic to check the phone information.

The screenshot shows the Akuvox device management interface. On the left, a sidebar lists navigation options: Status (Basic), Account, Network, Phone, PhoneBook, Upgrade, and Security. The main content area is titled "Status" and contains three tabs: "Product Information", "Network Information", and "Account Information".

- Product Information:**

Model	VP-R47P
Hardware Model	VP-R47P
MAC Address	C409389F42DA
Firmware Version	47.0.7.425
Hardware Version	3.1
- Network Information:**


LAN Port Type	DHCP Auto
LAN Link Status	Connected
LAN IP Address	192.168.35.30
LAN Subnet Mask	255.255.255.0
LAN Gateway	192.168.35.1
LAN DNS1	192.168.35.1
LAN DNS2	
- Account Information:**

Account1	None@None Disabled
Account2	None@None Disabled
Account3	None@None Disabled
Account4	None@None Disabled
Account5	None@None Disabled
Account6	None@None Disabled

On the right side, there are "Help" and "Logout" buttons. A "Note" section provides input box length restrictions and server addresses. A "Warning" section is present, and a "Field Description" section is also available.

Sections	Description
Product Information	To display the device's information such as Model name, MAC address (IP device's physical address), Hardware Model, Firmware version and Hardware firmware.
Network Information	To display the device's Networking status(LAN Port),such as Port Type(which could be DHCP/Static/PPPoE), Link Status, IP Address, Subnet Mask, Gateway, Primary DNS server, Secondary DNS server.
Account Information	To display device's Account information and Registration status (account username, registered server's address, Register result).

8.3 Account->Basic

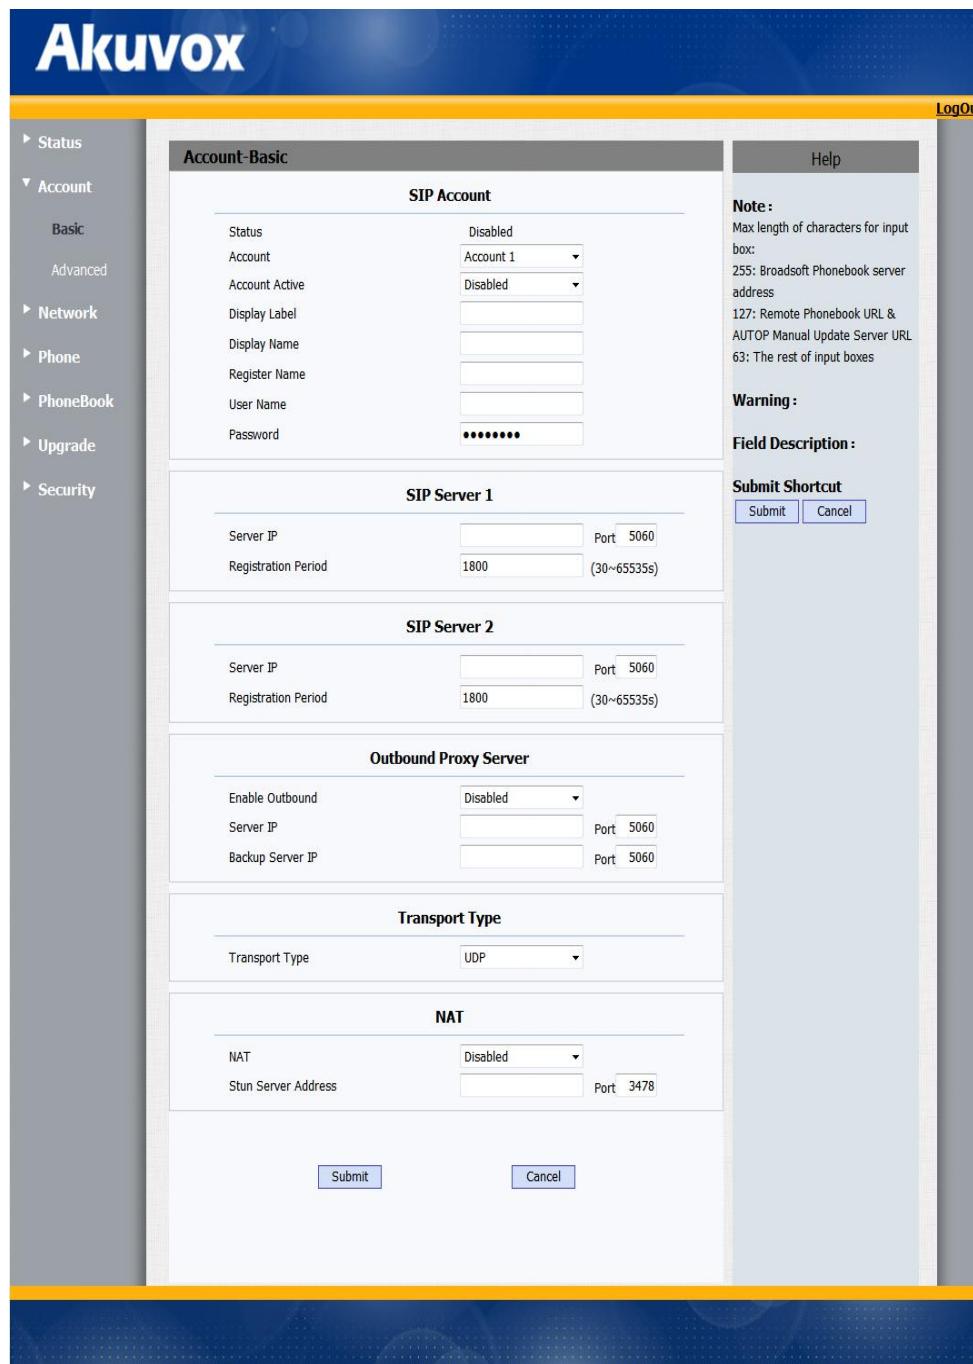

The screenshot shows the 'Account-Basic' configuration page for the Akuvox system. The left sidebar contains navigation links for Status, Account (Basic, Advanced), Network, Phone, PhoneBook, Upgrade, and Security. The main content area is titled 'Account-Basic' and contains several sections:

- SIP Account**:
 - Status: Disabled
 - Account: Account 1
 - Account Active: Disabled
 - Display Label: (empty)
 - Display Name: (empty)
 - Register Name: (empty)
 - User Name: (empty)
 - Password: *****
- SIP Server 1**:
 - Server IP: (empty)
 - Port: 5060
 - Registration Period: 1800 (30~65535s)
- SIP Server 2**:
 - Server IP: (empty)
 - Port: 5060
 - Registration Period: 1800 (30~65535s)
- Outbound Proxy Server**:
 - Enable Outbound: Disabled
 - Server IP: (empty)
 - Port: 5060
 - Backup Server IP: (empty)
 - Port: 5060
- Transport Type**:
 - Transport Type: UDP
- NAT**:
 - NAT: Disabled
 - Stun Server Address: (empty)
 - Port: 3478

At the bottom right are 'Submit' and 'Cancel' buttons. On the far right, there is a 'Help' section with notes and a 'Field Description' section.

Sections	Description
SIP Account	<p>To display and configure the specific Account settings.</p> <ul style="list-style-type: none"> ● Status: To display register result. ● Display Label: Which is displayed on the phone's LCD screen. ● Display Name: Which is sent to the other call party for displaying. ● Register Name: Allocated by SIP server provider, used for authentication. ● User Name: Allocated by your SIP server provider, used for authentication. ● Password: Used for authorization.
SIP Server 1	<p>To display and configure Primary SIP server settings.</p> <ul style="list-style-type: none"> ● Server IP: SIP server address, it could be an URL or IP address. ● Registration Period: The registration will expire after Registration period, the IP phone will re-register automatically within registration period.
SIP Server 2	<p>To display and configure Secondary SIP server settings.</p> <p>This is for redundancy, if registering to Primary SIP server fails, the IP phone will go to Secondary SIP server for registering.</p> <p>Note: Secondary SIP server is used for redundancy, it can be left blank if there is not redundancy SIP server in user's environment.</p>
Outbound Proxy Server	<p>To display and configure Outbound Proxy server settings.</p> <p>An outbound proxy server is used to receive all initiating request messages and route them to the designated SIP server.</p> <p>Note: If configured, all SIP request messages from the IP phone will be sent to the outbound proxy server forcefully.</p>
Transport Type	<p>To display and configure Transport type for SIP message</p> <ul style="list-style-type: none"> ● UDP: UDP is an unreliable but very efficient transport layer protocol. ● TCP: Reliable but less-efficient transport layer protocol.
NAT	<p>To display and configure NAT(Net Address Translator) settings.</p> <ul style="list-style-type: none"> ● STUN: Short for Simple Traversal of UDP over NATS, a solution to solve NAT issues. <p>Note: By default, NAT is disabled.</p>

8.4 Account->Advanced

Akuvox

Logout

Status

Account

- Basic
- Advanced

Network

Phone

PhoneBook

Upgrade

Security

Account-Advanced

SIP Account

Account: Account 1

Audio Codecs

Disabled Codecs	Enabled Codecs
>>	PCMU PCMA G729 G722
<<	T

Video Codecs

Disabled Codecs	Enabled Codecs
>>	H264 H263
<<	B

Video Codec

Codec Name	H263	H264
Codec Resolution	CIF	CIF
Codec Bitrate	320	320
Codec Payload	90	104

Subscribe

MWI Subscribe	Disabled
MWI Subscribe Period	1800 (120~65535s)
Voice Mail Number	
BLF Expire	1800 (120~65535s)
ACD Expire	1800 (120~65535s)

DTMF

Type	RFC2833
How To Notify DTMF	Disabled
DTMF Payload	101 (96~127)

Call

Max Local SIP Port	5062 (1024~65535)
Min Local SIP Port	5062 (1024~65535)
Caller ID Header	FROM
Auto Answer	Disabled
Provisional Response ACK	Disabled
Register with user=phone	Disabled
Invite with user=phone	Disabled
PTime	20
Anonymous Call	Disabled
Anonymous Call Rejection	Disabled
Missed Call Log	Enabled
Prevent SIP Hacking	Disabled

Session Timer

Active	Disabled
Session Expire	1800 (90~7200s)
Session Refresher	UAC

BLFList

BLFList URI	
BLFList Pickup Code	
BLFList BargeIn Code	

Broadsoft

AOC	Disabled
-----	----------

NAT

UDP Keep Alive Messages	Enabled
UDP Alive Msg Interval	30 (5~60s)
RPort	Disabled

Conference

Type	Local
Conference URI	

User Agent

User Agent	
------------	--

Remote User Agent

Separator	
NumberList DoorPhone	

Submit Cancel

Note:
Max length of characters for input
128: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning:

Field Description:

Sections	Description
SIP Account	To display current Account settings or to select which account to display.
Codecs	<p>To display and configure available/unavailable codecs list. Codec means coder-decoder which is used to transfer analog signal to digital signal or vice versa.</p> <p>Familiar codecs are PCMU(G711U), PCMA(G711A), G722 (wid-bandth codecs),G729 and so on.</p>
DTMF	<p>To display and configure DTMF settings.</p> <ul style="list-style-type: none"> ● Type: Support Inband,Info,RFC2833 or their combination. ● How To Notify DTMF: Only available when DTMF Type is Info/Info+Inband/Info+RFC2833. ● DTMF Payload: To configure payload type for DTMF. <p>Note: By default, DTMF type is RFC2833 which is the standard. Type Inband uses inband frequency to indicate DTMF tone which is most used to be compatible to traditional telephone server. Type Info use SIP Info message to indicate DTMF message.</p>
Call	<p>To display and configure call-related features.</p> <ul style="list-style-type: none"> ● Max Local SIP Port: To configure maximum local sip port for designated account. ● Min Local SIP Port: To configure minimum local sip port for designated account. ● Caller ID Header: To configure which Caller ID format to fetch for displaying on Phone UI. ● Auto Answer: If enabled, IP phone will be auto-answered when there is an incoming call for designated account. ● Provisional Response ACK: 100% reliability for all provisional message, this means it will send ACK every time the IP phone receive a provisional SIP message from SIP server. ● User=phone: If enabled, IP phone will send user=phone within SIP message. ● Anonymous Call: If enabled, all outgoing call for the designated account will be anonymous number. ● Anoymous Call Rejection: If enabled, all incoming anonym-out call for the designated account will be rejected. ● Missed Call Log: To display the miss call log. ● Prevent SIP Hacking: Enable to prevent SIP from hacking.
Session Timer	<p>To display or configure session timer settings.</p> <ul style="list-style-type: none"> ● Active: To enable or disable this feature, If enable, the

	<p>ongoing call will be disconnected automatically once the session expired unless it's been refreshed by UAC or UAS.</p> <ul style="list-style-type: none"> ● Session Expire: Configure session expire time. ● Session Refresher: To configure who should be responsible for refreshing a session. <p>Note: UAC means User Agent Client, here stands for IP phone. UAS means User Agent Server, here stands for SIP server.</p>
User Agent	<p>One can customize User Agent field in the SIP message; If user agent is set to specific value, user could see the information from PCAP. If user agent is not set by default, user could see the company name, model number and firmware version from PCAP</p>
Remote User Agent	<p>This feature need to be used with Auto Answer Doorphone Delay. Go to the path: Phone->Call Feature.</p> <ul style="list-style-type: none"> ● Separator: Setup a separator ,such as “,” , “*”or “#” to separate many door phone account. ● NumberList DoorPhone: Fill multiple doorphone number .

8.5 Network ->Advanced

Network-Advanced

Local RTP			
Max RTP Port	12000	(1024~65535)	
Starting RTP Port	11800	(1024~65535)	

VLAN			
LAN Port	Active	Disabled	(1~4095)
	VID	1	(1~4095)
	Priority	0	▼
PC Port	Active	Disabled	(1~4095)
	VID	1	(1~4095)
	Priority	0	▼

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning :


Field Description :

Submit Shortcut

Submit **Cancel**

Sections	Description
Local RTP	To display and configure Local RTP settings. <ul style="list-style-type: none"> ● Max RTP Port: Determine the maximum port that RTP stream can use. ● Min RTP Port: Determine the minimum port that RTP stream can use.
VLAN	To display and configure VLAN settings. <ul style="list-style-type: none"> ● LAN Port/PC Port: You can configure VLAN setting for both ports respectively. ● Active: To enable or disable VLAN feature for designated port. ● VID: To configure VLAN id for designated port. ● Priority: To select VLAN priority for designated port. <p>Note: Please consult your administrator for specific VLAN settings in your networking environment.</p>


8.6 Phone->Time

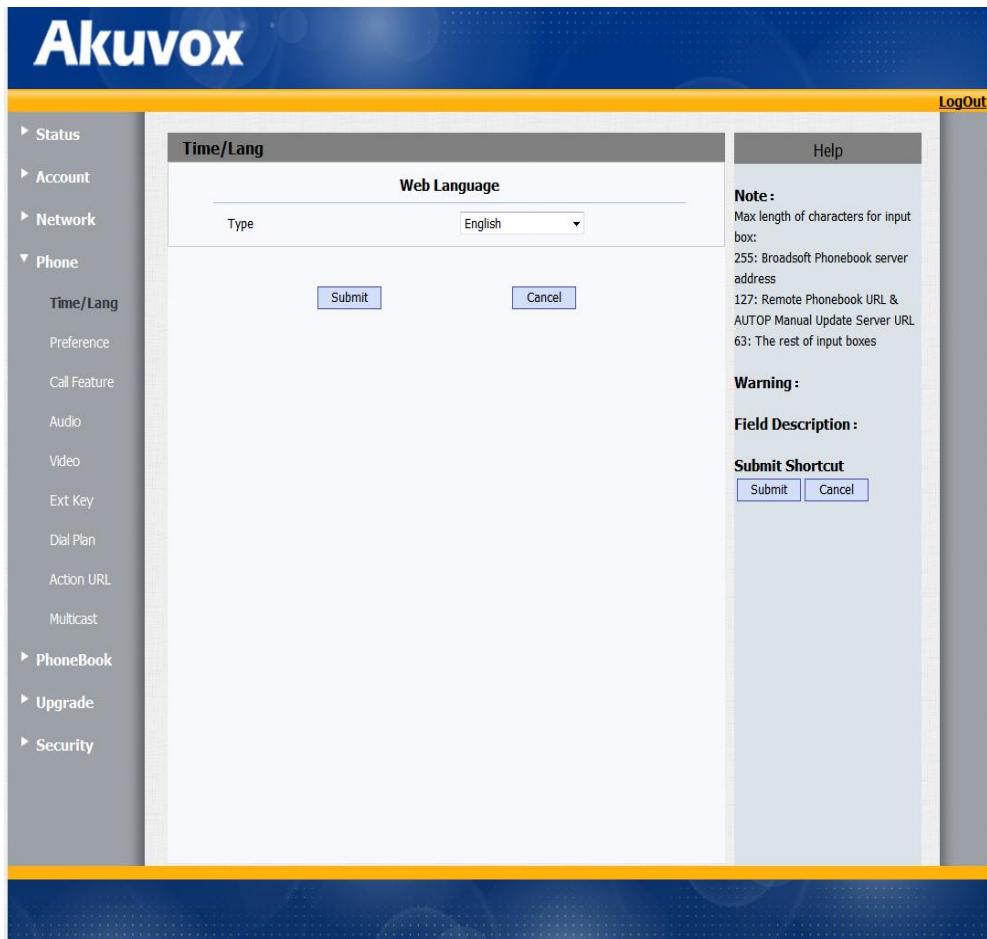

The screenshot shows the Akuvox web interface. The top navigation bar includes the Akuvox logo, a search bar, and links for Status, Account, Network, Phone, PhoneBook, Upgrade, and Security. The Phone section is currently selected, showing sub-links for Time/Lang, Preference, Cal Feature, Audio, Video, Ext Key, Dial Plan, Action URL, Multicast, PhoneBook, Upgrade, and Security. The main content area is titled "Time/Lang" and contains a "Web Language" section with a dropdown menu set to "English". Below this are "Submit" and "Cancel" buttons. To the right, there is a "Help" section with notes about input box lengths and specific URL fields, and a "Warning" section. At the bottom, there is a "Field Description" section for "Submit Shortcut" with its own "Submit" and "Cancel" buttons.

Sections	Description
Web Language	To choose the web language.

8.7 Phone->Preference

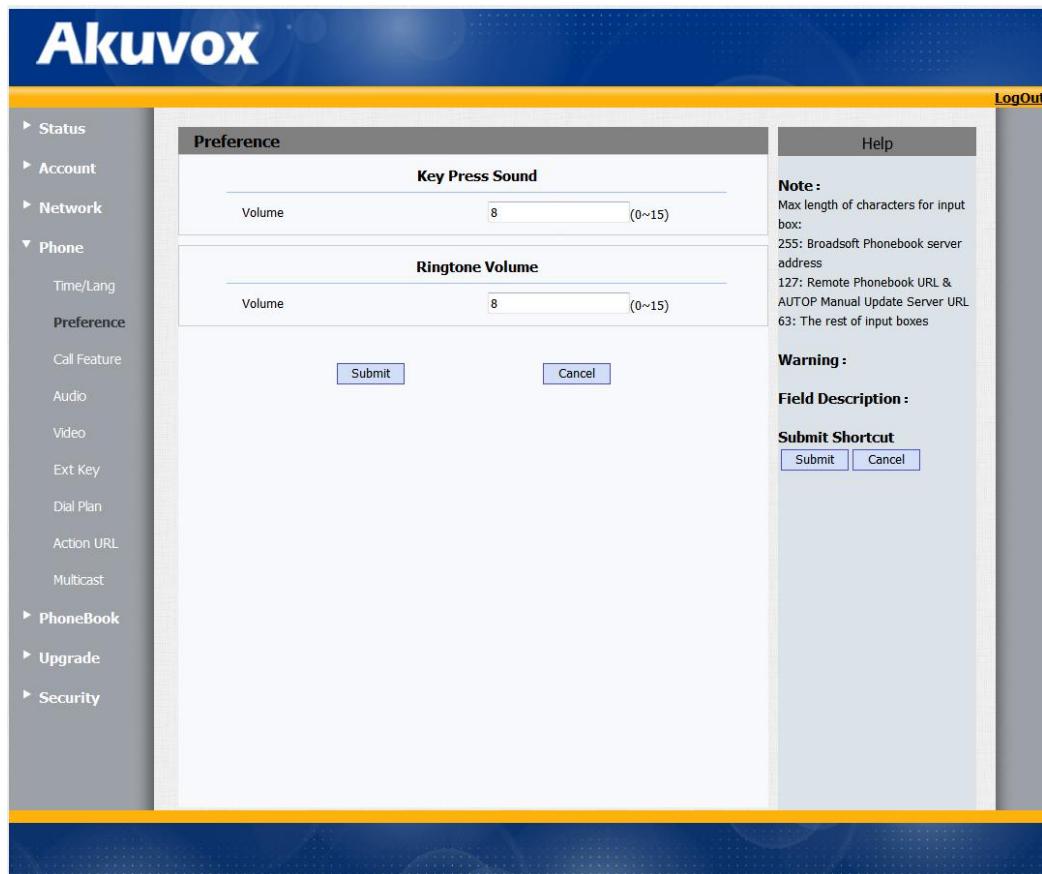

Sections	Description
Key Press Sound	To configure the sound volume for key press. ● Volume: The valid volume range is from 0~15, by default it's 8.
Ringtone Volume	To configure the sound volume for ringtone. ● Volume: The valid volume range is from 0~15, by default it's 8.

8.8 Phone ->Call Feature

Akuvox

[LogOut](#)

Phone Call Feature

Mode **Phone**

Feature Key Sync	Disabled
Mode	<input checked="" type="radio"/> Phone <input type="radio"/> Custom

Forward Transfer

Account	All Account
Always Forward	Disabled
Target Number	
On Code	
Off Code	
Busy Forward	Disabled
Target Number	
On Code	
Off Code	
No Answer Forward	Disabled
No Answer Ring Time	30
Target Number	
On Code	
Off Code	

DND

DND Emergency	Disabled
DND Authorized Number	
DND Priority	Disabled
Account	All Account
DND	Disabled
Return Code When DND	486(Busy Here)
DND On Code	
DND Off Code	

Call Waiting

Call Waiting Enable	Enabled
Call Waiting Tone	Enabled
On Code	
Off Code	

Auto Redial

Auto Redial	Disabled	
Auto Redial Interval	10	(1~300s)
Auto Redial Times	3	(1~100)

Intercom

Active	Enabled
Intercom Mute	Disabled

HotLine

Active	Disabled	
Number		
Delay Time	0	(0~5s)

ACD

ACD Activated Auto	Disabled	
ACD Activated Auto Timer	0	(0~180s)

Remote Control

Allowed Access IP List	
------------------------	--

Key As Send

Key As Send	#
-------------	---

SIP Config

SIP Session T1	0.5	(0.5~10s)
SIP Session T2	4	(2~40s)

UACSTA

UACSTA Active	Disabled	
Register Name		
Password	*****	
Server IP		Port 5060
Control Account	Account 1	

Door Phone

Auto Answer DoorPhone Delay	3	(3~30s)
-----------------------------	---	---------

Others

Return Code When Refuse	486(Busy Here)	
Auto Answer Delay	0	(0~5s)
Answer Mode	Audio	
Early DTMF	Disabled	
Multicast Codec	PCMU	
Direct IP	Enabled	

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning :

Field Description :


Submit Shortcut

[Submit](#) [Cancel](#)

Sections	Description
Mode Phone	<p>To enable or disable feature key sync.</p> <ul style="list-style-type: none"> ● Feature Key Sync: To enable or disable feature key sync. ● Mode: Select the desired mode.
Forward Transfer	<p>To display and configure Forward setting.</p> <p>Note: There are three types of forward: Always Forward, Busy Forward and No answer Forward.</p> <ul style="list-style-type: none"> ● Always Forward: Any incoming call will be forwarded in any situation. ● Busy Forward: Any incoming call will be forwarded if IP phone is busy. ● No answer Forward: Any incoming call will be forwarded if it's no answer after a specific time.
Call Waiting	<p>To enable or disable Call Waiting.</p> <ul style="list-style-type: none"> ● Call Waiting Enable: If enabled, it allows IP phones to receive a new incoming call when there is already an active call. ● Call Waiting Tone: If enabled, it allows IP phones to play the call waiting tone to the waiting callee.
DND	<ul style="list-style-type: none"> ● DND(Do Not Disturb) allows IP phones to ignore any incoming calls. ● Return Code when DND: Determine what response code should be sent back to server when there is an incoming call if DND on. ● DND On Code: The Code used to turn on DND on server's side, if configured, IP phone will send a SIP message to server to turn on DND on server side if you press DND when DND is off. ● DND Off Code: The Code used to turn off DND on server's side, if configured, IP phone will send a SIP message to server to turn off DND on server side if you press DND when DND is on.
Auto Redial	<p>Auto redial allows IP phones to redial an unsuccessful call for designated times within designated interval.</p> <ul style="list-style-type: none"> ● Auto Redial: To enable or disable auto redial feature. ● Auto Redial Interval: Determine the interval between two consecutive attempts. ● Auto Redial Times: Determine how many times to redial.
Intercom	<p>Intercom allow user to establish a call directly with the callee.</p> <ul style="list-style-type: none"> ● Active: To enable or disable Intercom feature. ● Intercom Mute: If enabled, once the call established, the callee will be muted.
Hot line	HotLine allows user to call out a defined number

	<p>automatically after hearing the dailtone without dialing any number.</p> <ul style="list-style-type: none"> ● Active: To enable or disable HotLine feature. ● Number: To set a defined HotLine number. ● Delay Time: To set the automatically call out interval after hearing the dailtone.
ACD	<p>ACD (Automatic Call Distribution) is most used in call-center market, it allows IP phone to login the system with multiple status so that the system could distribute an incoming calls to available user or agents.</p> <ul style="list-style-type: none"> ● ACD Activated Auto: If enabled, Agent status will turn to available automatically within a designated time(decided by ACD Activated Auto Timer). ● ACD Activated Auto Timer: To configure interval when will Agent status becomes available automatically. ● ACD Pwd Required: To enable the ACD password.
Remote Control	<p>Remote Control allows specific host to interact with IP phone by sending HTTP or HTTPS requests. The specific action could be answering an incoming call, hangup an ongoing call and so on.</p> <ul style="list-style-type: none"> ● Allowed Access IP List: To configure the allowed host address. ● Note: For now, IP phone can only support IP address, IP address list and IP address pattern as allowed hosts
Key As Send	<p>Key As Send allows you to disable send key or assign pound key as send key.</p>
SIP Config	<p>Setup the SIP protocol package interval. T2 is maximum. The interval should be larger the T1, but less then T2.</p>
UACSTA	<p>Using CSTA for SIP phone user agents. It can control some features of calling. UACSTA is used to send ECMA-323(CSTA XML) information during SIP calling. The default status is disabled.</p>
Door Phone	<p>when there is incoming call from doorphone, setup the delay auto answer time, R47P will auto answer the call after the timeout.</p> <p>Note: if you enable Auto Answer function, this feature will be not available.</p>
Others	<ul style="list-style-type: none"> ● Return Code When Refuse: Allows user to assign specific code as return code to SIP server when an incoming call is rejected. ● Auto Answer Delay: To configure delay time before an incoming call is automatically answered.

8.9 Phone->Audio

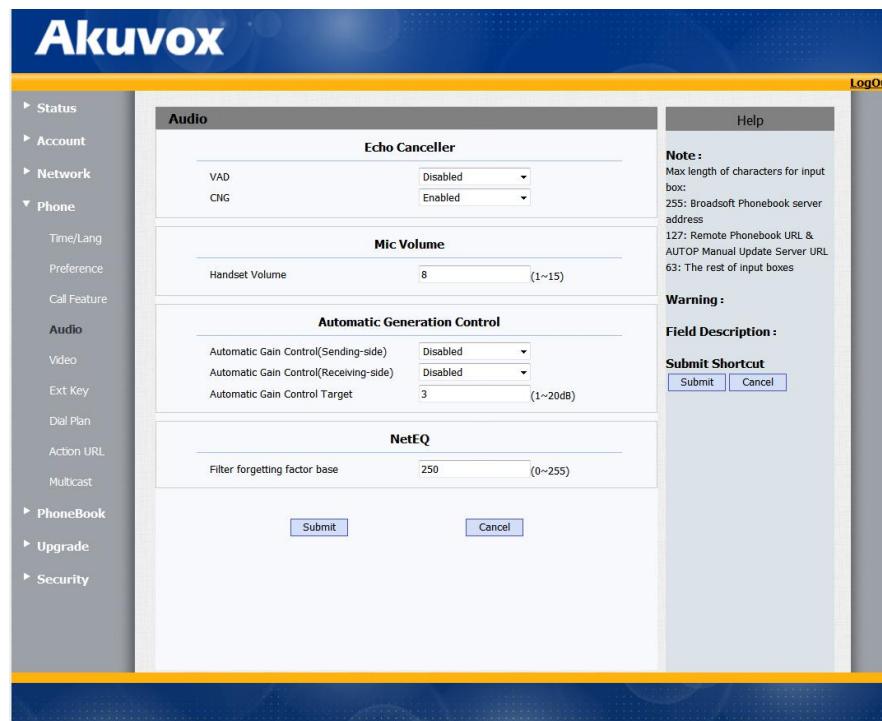

Sections	Description
Echo Canceller	<p>Echo Canceller: To remove acoustic echo from a voice communication in order to improve the voice quality .</p> <ul style="list-style-type: none"> ● VAD(Voice Activity Detection): Allow IP phone to detect the presence or absence of human speech during a call. When detecting period of “silence”, VAD replaces that silence efficiently with special packets that indicate silence is occurring. It can facilitate speech processing, and deactivate some processes during non-speech section of an audio session. It can avoid unnecessary coding or transmission of silence packets in VoIP applications, saving on computation and network bandwidth. ● CNG(Comfort Noise Generation): Allow IP phone to generate comfortable background noise for voice communications during periods of silence in a conversation. It is a part of the silence suppression or VAD handling for VoIP technology. CNG, in conjunction with VAD algorithms, quickly responds when periods of silence occur and inserts artificial noise until voice activity resumes. The insertion of artificial noise gives the illusion of a constant transmission stream, so that background sound is consistent throughout the call and

	the listener does not think the line has released.
Mic Volume	To configure Microphone volume for handset mode.
Automatical Generation Control	R47P will auto adjust amplification circuit gain via signal. <ul style="list-style-type: none"> ● Automatic Gain Control(Sending-side): Disabled by default ● Automatic Gain Control(Receiving-side): Disabled by default ● Automatic Gain Control Target: Range from 1 to 20 dB. 3dB by default.
NetEQ	Filter forgetting factor base: Range from 0~255. 250 by default.

8.10 Phone->Video

The screenshot shows the Akuvox configuration interface for video settings. The left sidebar has a tree view with 'Phone' expanded, showing 'Time/Lang', 'Preference', 'Call Feature', 'Audio', 'Video', 'Ext Key', 'Dial Plan', 'Action URL', and 'Multicast'. The 'Video' section is selected. The main content area has a 'Logout' link at the top right. It contains three main configuration sections:

- Media Feedback**: Contains dropdowns for 'NACK' (Enabled) and 'Tmmbr' (Disabled).
- H264 Settings**: Contains dropdowns for 'H264 Profile' (Base Profile), 'H264 Level' (3.0), 'IDR Interval' (10), and 'Rate Control' (crf).
- Others**: Contains dropdowns for 'Hardware Endec Acceleration' (Disabled), 'Hardware Decode Acceleration' (Disabled), 'Color Enhancement' (Enabled), and 'Image Quality' (High).

At the bottom of the form are 'Submit' and 'Cancel' buttons. On the right side of the main content area, there are 'Note', 'Warning', and 'Field Description' sections with detailed information about input fields.

Sections	Description
Media Feedback	<ul style="list-style-type: none"> ● NACK: Enabled by default. ● Tmmbr: Send the maximum temporary rate request. Disabled by default.
H264 Settings	H264: A video stream compression standard. Different from H263, it provides an approximately identical level of video stream quality but a half bit rate. This type of compression is sometimes called MPEG-4 part 10.

	<p>To setup corresponding H264 video parameters.</p> <ul style="list-style-type: none"> ● H264 Profile: There are 4 modes-Base、Main、High、Extend profile. Different profiles make different coding function and video quality. ● H264 Level: Different profiles have corresponding Level value. ● IDR Interval: IDR means Instantaneous Decoding Refresh. It is used to control the process of coding and decoding. ● Rate Control: Choose one H264 video rate.
Others	<ul style="list-style-type: none"> ● Hardware Endec Acceleration: User can enable the Hardware Endec Acceleration when you need. ● Hardware Decodec Acceleration: Disabled by default. ● Color Enhancement: To increase the phone display color. Enabled by default. ● Image Quality: User can select Low, Middle or High mode.

8.11 Phone->Ext Key

Key	Type	Label	Value	Account	Extension
Key 1	N/A			Account 1	
Key 2	N/A			Account 1	
Key 3	N/A			Account 1	
Key 4	N/A			Account 1	
Key 5	N/A			Account 1	
Key 6	N/A			Account 1	
Key 7	N/A			Account 1	
Key 8	N/A			Account 1	
Key 9	N/A			Account 1	
Key 10	N/A			Account 1	
Key 11	N/A			Account 1	
Key 12	N/A			Account 1	
Key 13	N/A			Account 1	
Key 14	N/A			Account 1	
Key 15	N/A			Account 1	
Key 16	N/A			Account 1	
Key 17	N/A			Account 1	
Key 18	N/A			Account 1	
Key 19	N/A			Account 1	
Key 20	N/A			Account 1	

Sections	Description
Current Page	R47P can support 4 pages Ext Key. 20 Ext Keys for each page.

Key	Allows user to assign specific feature to the designated key on expansion module. For keys, the available feature list: DND, Menu, MSG, Status, Book, Fwd, PickUp, Group PickUp, Intercom, Speed Dial, History, Favorites, Redial, Account, ACD, BLF, BLFLList, Call Return, Hot Desking, Record, XML Browser, DTMF.
------------	--

8.12 Phone->Replace Rule

Dial Plan

Index	Account	Prefix	Replace	
1				<input type="checkbox"/>
2				<input type="checkbox"/>
3				<input type="checkbox"/>
4				<input type="checkbox"/>
5				<input type="checkbox"/>
6				<input type="checkbox"/>
7				<input type="checkbox"/>
8				<input type="checkbox"/>
9				<input type="checkbox"/>
10				<input type="checkbox"/>

Add Edit Delete

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning :

Field Description :

Submit Shortcut

Submit Cancel

Sections	Description
Rules	Allow user to select Replace rule or Dial-now to display or edit.
Rules Modify	Allow user to modify selected rules information, for replace rule, you can modify related accounts, prefix and replace.
Area Code	Area codes are also known as NPAs (Numbering Plan Areas). They usually indicate different geographical areas within one country. If entered numbers match the predefined area code rule, the IP phone will automatically prefix outgoing

	number with area code. Note: There is only one area code rule supported.
--	--

8.13 Phone->Dial Plan

The screenshot shows the Akuvox web interface for managing a dial plan. The main content area is titled 'Dial Plan'. It contains three main sections: 'Rules', 'Dial Now Delay', and 'Area Code'. The 'Rules' section has a table with columns for Index, Account, and Dial Now Rule. The 'Dial Now Delay' section includes dropdowns for 'All Dial Delay' and 'Dial Now Delay'. The 'Area Code' section has input fields for 'Code', 'Min Length', 'Max Length', and 'Account'. A sidebar on the left provides navigation links for Status, Account, Network, Phone (Time/Lang, Preference, Call Feature, Audio, Video, Ext Key), PhoneBook, Upgrade, and Security. A note and warning box are also present on the right side of the page.

Sections	Description
Rules	Allow user to select Replace rule or Dial-now to display or edit.
Dial Now Delay	Allow user configure dial now delay time for dial now. It means user can configure the IP phone to dial out the phone number automatically after the designated delay time if it match any dial now rule.
Rules Modify	Allow user to modify selected rules information, for dial-now rule, user can modify related accounts, Dial now Rule itself.
Area Code	Area codes are also known as NPAs(Numbering Plan Areas). They usually indicate different geographical areas within one country. If entered numbers match the predefined area code rule, the IP phone will automatically prefix outgoing number with area code.

	Note: There is only one area code rule supported.
--	--

8.14 Phone->Action URL

Action URL

ActionURL	
Active	Disabled
Setup Completed	
Registered	
Unregistered	
Registered Failed	
Off Hook	
On Hook	
Incoming Call	
Outgoing Call	
Established	
Terminated	
Open DND	
Close DND	
Open Always FWD	
Close Always FWD	
Open Busy FWD	
Close Busy FWD	
Open No Answered FWD	
Close No Answered FWD	
Transfer Call	
Blind Transfer	
Attended Transfer	
Hold	
UnHold	
Mute	
UnMute	
MissedCall	
IP Changed	
FWD Incoming Call	
Reject Incoming Call	
Answer New Call	
Transfer Finished	
Transfer Failed	
Idle To Busy	
Busy To Idle	

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning :

Field Description :

Submit Shortcut

Submit Cancel

Sections	Description
Action URL	<p>To display and configure Action URL settings.</p> <p>Setup Completed: When the IP phone completes startup.</p> <ul style="list-style-type: none"> ● Registered: When the IP phone successfully registers an account. ● Unregistered: When the IP phone logs off the registered account. ● Register Failed: When the IP phone fails to register an account.

- Off Hook: When the IP phone is off hook.
- On Hook: When the IP phone is on hook.
- Incoming Call: When the IP phone receives an incoming call.
- Outgoing Call: When the IP phone places a call.
- Established: When the IP phone establishes a call.
- Terminated: When the IP phone terminates a call.
- Open DND: When the IP phone enables the DND mode.
- Close DND: When the IP phone disables the DND mode.
- Open Always Forward: When the IP phone enables the always forward.
- Close Always Forward: When the IP phone disables the always forward.
- Open Busy Forward: When the IP phone enables the busy forward.
- Close Busy Forward: When the IP phone disables the busy forward.
- Open No Answer Forward: When the IP phone enables the no answer forward.
- Close No Answer Forward: When the IP phone disables the no answer forward
- Transfer Call : When the IP phone transfers a call.
- Blind Transfer: When the IP phone blind transfers a call.
- Attended Transfer: When the IP phone performs the semi-attended/attended transfer.
- Hold: When the IP phone places a call on hold.
- UnHold: When the IP phone retrieves a hold call.
- Mute: When the IP phone mutes a call.
- UnMute: When the IP phone un-mutes a call.
- Missed Call: When the IP phone misses a call.
- IP Changed: When the IP address of the IP phone changes.
- FWD Incoming Call: When the IP phone forwards an incoming call.
- Reject Incoming Call: When the IP phone rejects an incoming call.
- Answer New Call: When the IP phone answers a new call.
- Transfer Finished: When the IP phone completes to transfer a call.
- Transfer Failed: When the IP phone fails to transfer a call.
- Idle To Busy: When the state of the IP phone changes from idle to busy.

	<ul style="list-style-type: none"> ● Busy To Idle: When the state of phone changes from busy to idle.
--	--

8.15 Phone->Multicast

Multicast Setting

Paging Barge	Disabled
Paging Priority Active	Enabled

Priority List

IP Address	Listening Address	Label	Priority
1 IP Address			1
2 IP Address			2
3 IP Address			3
4 IP Address			4
5 IP Address			5
6 IP Address			6
7 IP Address			7
8 IP Address			8
9 IP Address			9
10 IP Address			10

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of Input boxes

Warning :

Field Description :

Submit Shortcut

Submit **Cancel**

Sections	Description
Multicast Setting	To display and configure the Multicast setting. <ul style="list-style-type: none"> ● Paging Barge: Choose the multicast number ,the range is 1-10. ● Paging priority Active: Enable o disable the multicast.
Priority List	To setup the multicast parameters. <ul style="list-style-type: none"> ● Listening Address: Enter the IP address you need to listen ● Label: Input the label for each listening address

8.16 PhoneBook->Local Book

Note:
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning:

Field Description:

Index	Name	Number 1	Number 2	Number 3	Group
1					<input type="checkbox"/>
2					<input type="checkbox"/>
3					<input type="checkbox"/>
4					<input type="checkbox"/>
5					<input type="checkbox"/>
6					<input type="checkbox"/>
7					<input type="checkbox"/>
8					<input type="checkbox"/>
9					<input type="checkbox"/>
10					<input type="checkbox"/>

Page 1 ▾ Prev Next Move To All Contacts ▾ Delete Delete All

Contact Setting

Name
Number 1
Number 2
Number 3
Group Default ▾

Add Edit Cancel

Group

Index	Name	Description
1		<input type="checkbox"/>
2		<input type="checkbox"/>
3		<input type="checkbox"/>
4		<input type="checkbox"/>
5		<input type="checkbox"/>

Delete Delete All

Group Setting

Name
Add Edit Cancel


Import/Export

Contact 浏览... (.XML/.CSV)
Import Export Cancel

Sections	Description
Contact	To display and select local contact type. <ul style="list-style-type: none"> ● All Contacts: To display or edit all local contacts. ● Favorites: To display or edit favorites contacts. ● Black List: To display black list contacts.
Search	To search designated contacts from local phonebook.
Dial	To dial out a call or hangup an ongoing call from Web UI. Note: For this feature, you need to have the remote control privilege to control IP phone via Web UI. Please refer to section "Remote Control" in the Web UI->Phone->Call

	Feature page.
Group	To display or edit Group contacts.
Group Setting	To display or change Group name, related ringtone or description.
Import/Export	To import or export the contact or blacklist file.

8.17 PhoneBook->Remote Book

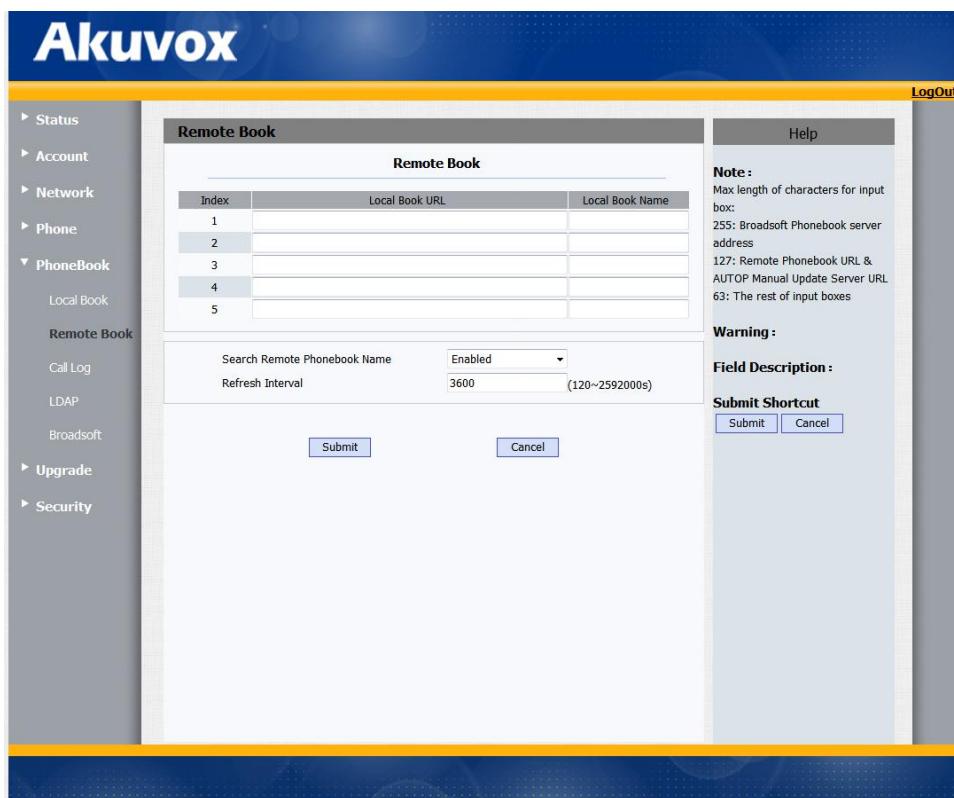

Sections	Description
Remote Book	<p>To display and configure Remote Book settings.</p> <ul style="list-style-type: none"> ● Index: To select desired Remote Book item to display and configure. ● Local Book URL: To configure remote book server address ● Local Book Name: To configure display remote book name on Phone UI ● Search Remote Phonebook Name: To enable or disable search remote phonebook name ● Search Flash Interval: To set interval (Range from 120s to 2592000s) <p>Note: IP phone supports at most 5 remote books. Please refer to your administrator for how to establish a remote</p>

	book server and how to create remote book xml file.
--	---

8.18 PhoneBook->Call Log

Sections	Description
Call History	<p>To display call history records.</p> <p>Available call history types are All calls, Dialed calls, Received calls, Missed calls, Forwarded calls.</p> <ul style="list-style-type: none"> ● HangUp: To click to hangup ongoing call on the IP phone. <p>Note: For “HangUp” feature, you need to have the remote control privilege to control IP phone via Web UI. Please refer to section “Remote Control” in the Web UI->Phone->Call Feature page.</p>

8.19 PhoneBook->LDAP

The screenshot shows the Akuvox configuration interface for setting up a LDAP phonebook. The left sidebar has a tree view with nodes like Status, Account, Network, Phone, PhoneBook (selected), Local Book, Remote Book, Call Log, LDAP (selected), Broadsoft, Upgrade, and Security. The main panel is titled 'LDAP' and contains a form with fields for Name Filter, Number Filter, Server, Port (1~65535), Base DN, User Name, Password (showing '*****'), Name Attribute, Number Attribute, Display Name, Max Hits (50, 1~500), and Search Delay Time (1000, 200~3000)ms. Below the form are 'Submit' and 'Cancel' buttons. To the right is a 'Help' section with notes about input box lengths and specific URL requirements, and a 'Warning' section. At the top right is a 'Logout' button.

Sections	Description
LDAP	<p>To display and configure LDAP phonebook settings.</p> <ul style="list-style-type: none"> ● Name Filter: The settings used to tell LDAP server what name attributes to search. ● Number Filter: The settings used to tell LDAP server what number attributes to search. ● Server: To configure LDAP server's address. ● Port: To configure LDAP server's port. ● Base DN: To configure searching base DN on LDAP server. ● User Name: To configure user name for accessing LDAP server. ● Password: To configure password for accessing LDAP server. ● Name Attribute: To configure which name attributes should be feedback from LDAP server. ● Number Attribute: To configure which number attributes should be feedback from LDAP server. ● Display Name: To configure display name on Phone UI when there is any searching result from LDAP server.

- Max Hits: To configure the maximum size of result response from LDAP server.
 - Search Delay Time: To configure delay time before initiate LDAP searching request after you input a value from Phone UI.
- Note:** For setting details,please consult with your system administrator for further information.


8.20 PhoneBook->Broadsoft

The screenshot shows the Akuvox web-based management interface. On the left, there's a vertical navigation menu with sections: Status, Account, Network, Phone, PhoneBook (which is expanded to show Local Book and Remote Book), Call Log, LDAP, and Broadsoft. The Broadsoft section is currently selected. The main content area is titled "Broadsoft" and "Broadsoft PhoneBook". It contains several input fields: "PhoneBook Item" (set to "Item1"), "Display Name", "Server Address", "Server Port" (set to "(1~65535)", "User Name", and "Password" (represented by a series of dots). Below these fields are "Submit" and "Cancel" buttons. To the right of the main content, there's a "Help" section with detailed notes about character length, server addresses, URLs, and input boxes. It also includes sections for "Warning", "Field Description", and "Submit Shortcut". At the top right of the main content area, there's a "Logout" link.

Sections	Description
Broadsoft PhoneBook	<p>To display and configure Broadsoft PhoneBook settings.</p> <ul style="list-style-type: none"> ● PhoneBook Item: To select specific item to configure. ● Display Name: The name displayed at IP phone's LCD screen when accessed via Phone UI. ● Server Address: Broadsoft PhoneBook server's address. ● Server Port: Broadsoft PhoneBook server's port. ● User Name: Username used to access Broadsoft PhoneBook server. ● Password: Password used to access Broadsoft

	<p>PhoneBook server.</p> <p>Note: IP phone supports at most 5 Broadsoft PhoneBook items. For Broadsoft PhoneBook's server address, port, username and password, you need to consult your Broadsoft service provider for further information.</p>
--	---

8.21 Upgrade->Basic

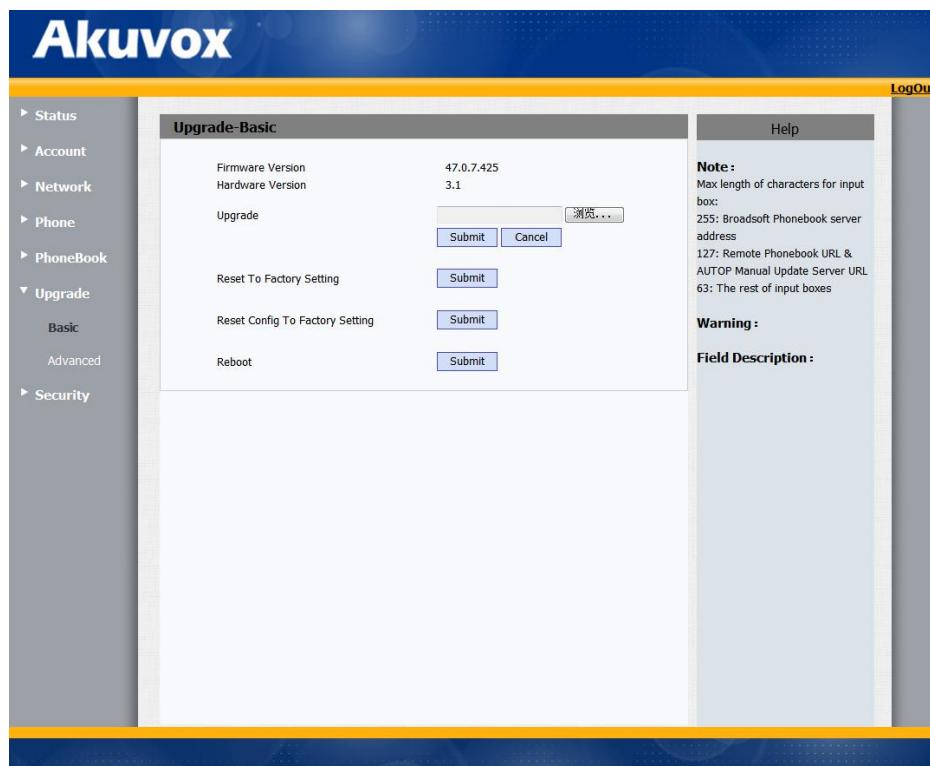

Sections	Description
Firmware version	To display firmware version, firmware version starts with MODEL name.
Hardware Version	To display Hardware version.
Upgrade	To select upgrading zip file from local or a remote server automatically. Note: Please make sure it's right file format for right model.

8.22 Upgrade->Advanced

The screenshot shows the Akuvox web-based management interface. The left sidebar contains navigation links for Status, Account, Network, Phone, PhoneBook, Upgrade (Basic and Advanced selected), and Security. The main content area is titled "Upgrade-Advanced". It includes several configuration sections:


- PNP Option:** A dropdown menu set to "Enabled".
- Manual Autop:** Fields for URL, User Name, Password (all masked), Common AES Key (masked), and AES Key(MAC) (masked). A "AutoP Immediately" button is present.
- Automatic Autop:** A dropdown for Mode set to "Power On", a dropdown for Schedule set to "Sunday", and input fields for "Hour(0~23)" (22) and "Min(0~59)" (0). Buttons for "Submit" and "Export" are available.
- System Log:** A dropdown for LogLevel set to "3", a "Export" button, and dropdowns for "Remote System Log" (set to "Disabled") and "Remote System Server" (empty).
- PCAP:** Buttons for "Start", "Stop", and "Export", and a dropdown for "PCAP Auto Refresh" set to "Disabled".
- Others:** A "Config File(.tgz/.conf/.cfg)" input field with a "浏览..." button, an "Export (Encrypted)" button, an "Import" button, and a "Cancel" button.

On the right side, there are "Help", "Logout", "Note", "Warning", and "Field Description" sections, along with "Submit Shortcut" buttons for "Submit" and "Cancel".

Sections	Description
PNP Option	To display and configure PNP setting for Auto Provisioning. ● PNP: Plug and Play, once PNP is enabled, the phone will send SIP subscription message to PNP server automatically to get Auto Provisioning server's address. By default, this SIP message is sent to multicast address

	224.0.1.75(PNP server address by standard).
Manual Update Server	<p>To display and configure manual update server's settings.</p> <ul style="list-style-type: none"> ● URL: Auto provisioning server address. ● User name: Configure if server needs an username to access, otherwise left blank. ● Password: Configure if server needs a password to access, otherwise left blank. ● Common AES Key: Used for IP phone to decipher common Auto Provisioning configuration file. ● AES Key (MAC): Used for IP phone to decipher MAC-oriented auto provisioning configuration file(for example, file name could be 0c1105888888.cfg if IP phone's MAC address is 0c1105888888). <p>Note: AES is one of many encryption, it should be configure only configure filed is ciphered with AES, otherwise left blank.</p>
AutoP	<p>To display and configure Auto Provisioning mode settings.</p> <p>This Auto Provisioning mode is actually self-explanatory.</p> <p>For example, mode "Power on" means IP phone will go to do Provisioning every time it powers on.</p>
System Log	<p>To display syslog level and export syslog file.</p> <p>Syslog level: From level 0~7.The higher level means the more specific syslog is saved to a temporary file.</p> <p>By default, it's level 3.</p> <p>Export Log: Click to export temporary syslog file to local PC.</p>
PCAP	<p>To start, stop packets capturing or to export captured Packet file.</p> <ul style="list-style-type: none"> ● Start: To start capturing all the packets file sent or received from IP phone. ● Stop: To stop capturing packets. <p>Note: IP phone will save captured packets file to a temporary file, this file maximum size is 1M(mega bytes), and will stop capturing once reaching this maximum size.</p>
Others	<p>To display or configure others features from this page.</p> <ul style="list-style-type: none"> ● Config file: To export or import config file for IP phone.

8.23 Security->Basic

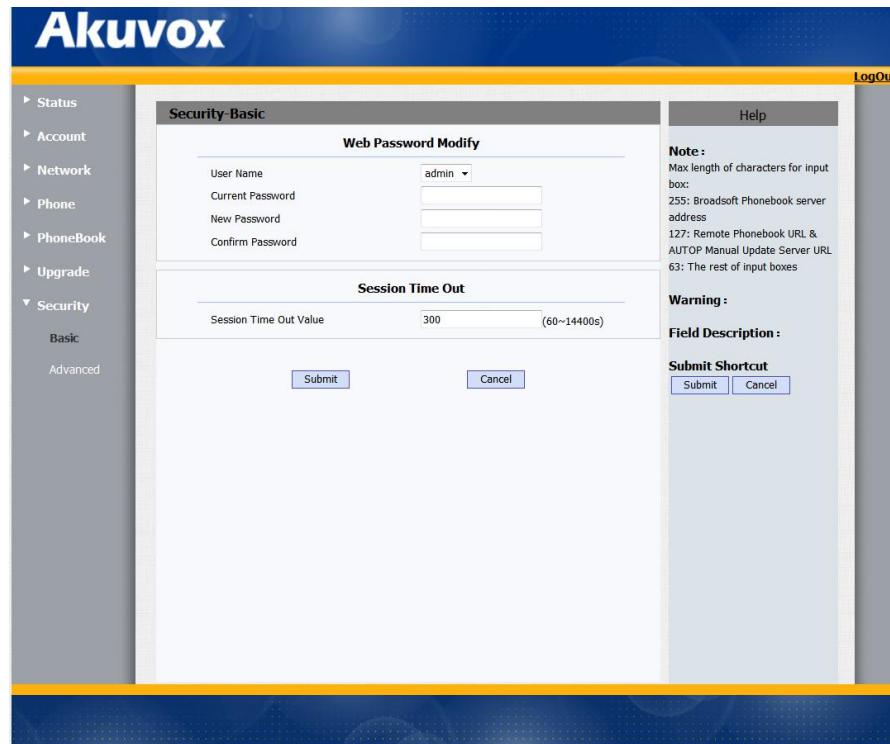

Sections	Description
Web Password Modify	To modify user's password. <ul style="list-style-type: none">● User Name: Choose the character you are.(admin or user)● Current Password: The current password you used.● New Password: Input new password you intend to use.● Confirm Password: Repeat the new password. Note: Security is configurable via web only.

8.24 Security->Advanced

Sections	Description
Web Server Certificate	To display or delete Certificate which is used when IP phone is connected from any incoming HTTPs request. Note: The default certificate could not be deleted.
Web Server Certificate Upload	To upload a certificate file which will be used as server certificate.
Client Certificate	To display or delete Certificates which is used when IP phone is connecting to any HTTPs server.
Client Certificate Upload	To upload certificate files, this is used as client certificate. <ul style="list-style-type: none"> ● Only Accept trusted Certificates: If this option is enabled, only trusted certificates will be accepted.

