PRODUCTION, QUALITY AND DISPATCH

Quality

What it is: The QC pages: the QC desk (what needs QC now), incoming inspection of GRN lots, in-process QC flags, holds, customer complaints, and the standards and stage rules that set the bands.
Who uses it: QC, Inward QC, In-process QC, Plant Manager (plant head), Store, Sales, Dispatch, Owner and Admin (each sees only the pages for their role).
Where: Sidebar > Quality > QC desk (/quality), Incoming QC (/quality/incoming), In-process QC (/quality/stage), Holds & inspections (/quality/results), Customer complaints (/quality/returns), Material standards (/quality/material-standards), Process stage rules (/quality/stage-rules), Quality analytics (/reports/quality)

At a glance

- **Incoming lots are held when out of band.** A GRN lot with every reading inside its band is released and can be issued at once. Any reading outside its band holds the lot until QC decides.
- **Floor readings are flagged, not held.** On Winding, Oven and Process a reading outside its band is saved and flagged; the run moves on. In-process QC traces every flag.
- **2 readings per required check** make a run "QC done" (moisture optional). The next stage takes only QC-done runs.
- **QC lists the checks; Masters set the inward bands; QC keeps the seasonal stage rules.** Every change is a new version; lots and cards keep the version they started with.
- **Holds** on job cards are raised by QC and released only by the plant head, Owner or Admin. An active hold stops the next stage and dispatch.

The flow

Incoming lot (GRN)

1. **GRN saved** — Store/GRN
2. **Lot waits for QC** — 24 h
3. **Enter readings** — Inward QC
4. **All in band**
5. **Released to issue desk**

If it goes wrong after **Enter readings**

1. **Out of band**
2. **Lot held** — Inward QC
3. **Re-check** — QC
4. **Released to issue desk**

If it goes wrong after **Lot held**

1. **Concession** — Plant head/Owner/Admin
2. **Released for limited use**

If it goes wrong after **Lot held**

1. **Return to supplier** — Store
   written out of stock

In-process QC

1. **Run logged** — Operator
2. **Log QC** — Operator/QC — 2 readings
3. **In band**
4. **QC done** — next stage takes it

If it goes wrong after **Log QC (2 readings)**

1. **Out of band**
2. **Flagged, not held**
3. **QC done** — next stage takes it

If it goes wrong after **Run logged**

1. **QC hold raised** — QC
2. **Release hold** — Plant head/Owner/Admin

Customer complaint

1. **New complaint** — Sales/QC/Store
2. **Goods held for QC**
3. **QC decision** — QC
4. **Rework or sort**
5. **Re-inspect** — QC
6. **Accept to stock or Scrap** — closed

If it goes wrong after **QC decision**

1. **Accept to stock** — closed

If it goes wrong after **QC decision**

1. **Scrap** — closed

Screen tour

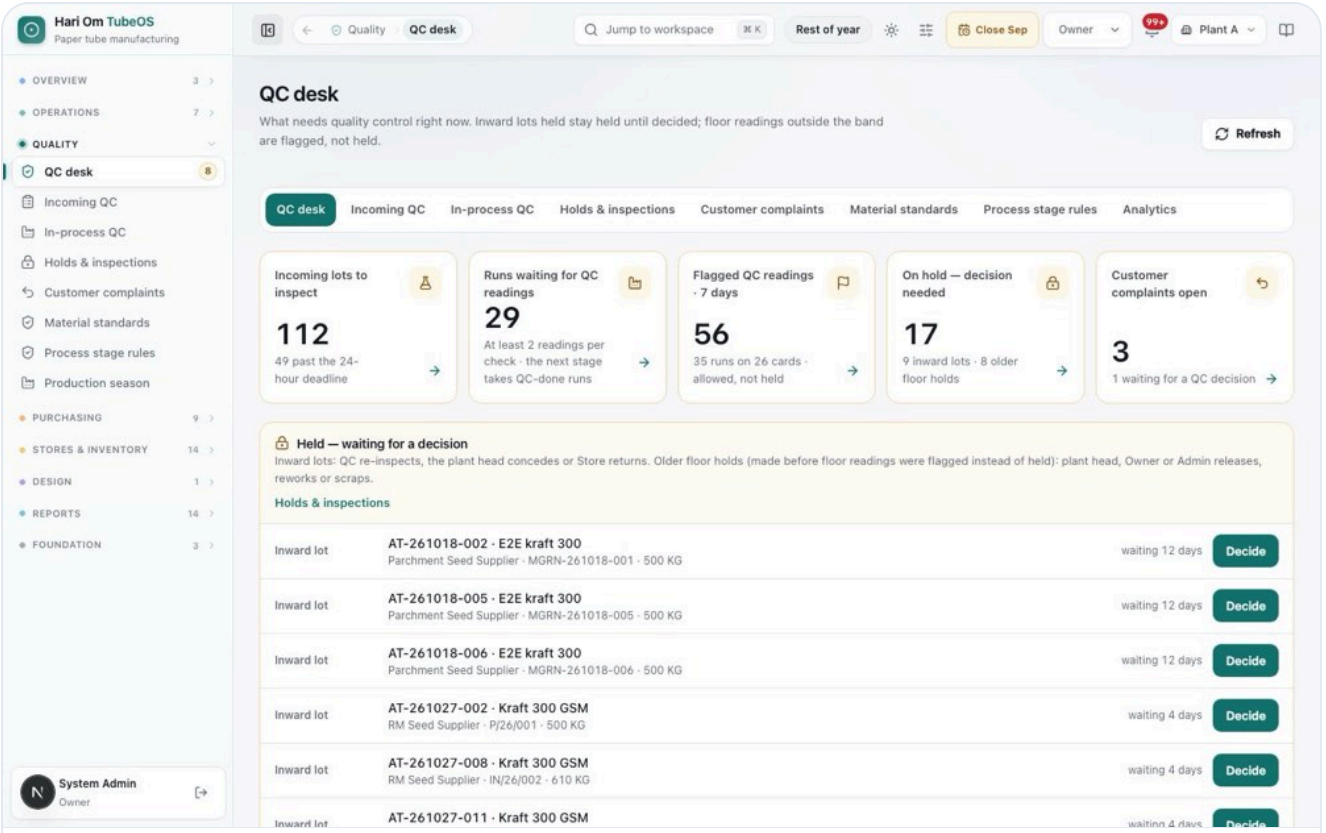


Figure: The QC desk. A tab row links all Quality pages; five tiles count incoming lots, runs waiting for readings, flagged readings, holds and open complaints; below, the held items each have a Decide button.

What you see:

1. **Tab row** (on every Quality page): **QC desk**, **Incoming QC**, **In-process QC**, **Holds & inspections**, **Customer complaints**, **Material standards**, **Process stage rules**, **Analytics**.
2. **Tiles**: **Incoming lots to inspect** (with how many are past the 24-hour deadline), **Runs waiting for QC readings** ("At least 2 readings per check · the next stage takes QC-done runs"), **Flagged QC readings · 7 days** ("allowed, not held"), **On hold — decision needed** (inward lots and older floor holds), **Customer complaints open**.
3. **Held — waiting for a decision**: inward lots (re-inspect, concession by the plant head, or return by Store) and older floor holds (made before floor readings were flagged instead of held; released, reworked or scrapped by the plant head, Owner or Admin). Each row shows lot, material, supplier, GRN, qty, days waiting and **Decide**.
4. Further down: **Incoming lots** (oldest due first, **Inspect**), **Runs waiting for QC readings** (**Log QC**), **Latest flagged readings**, **Latest checks**, and links to standards and analytics.

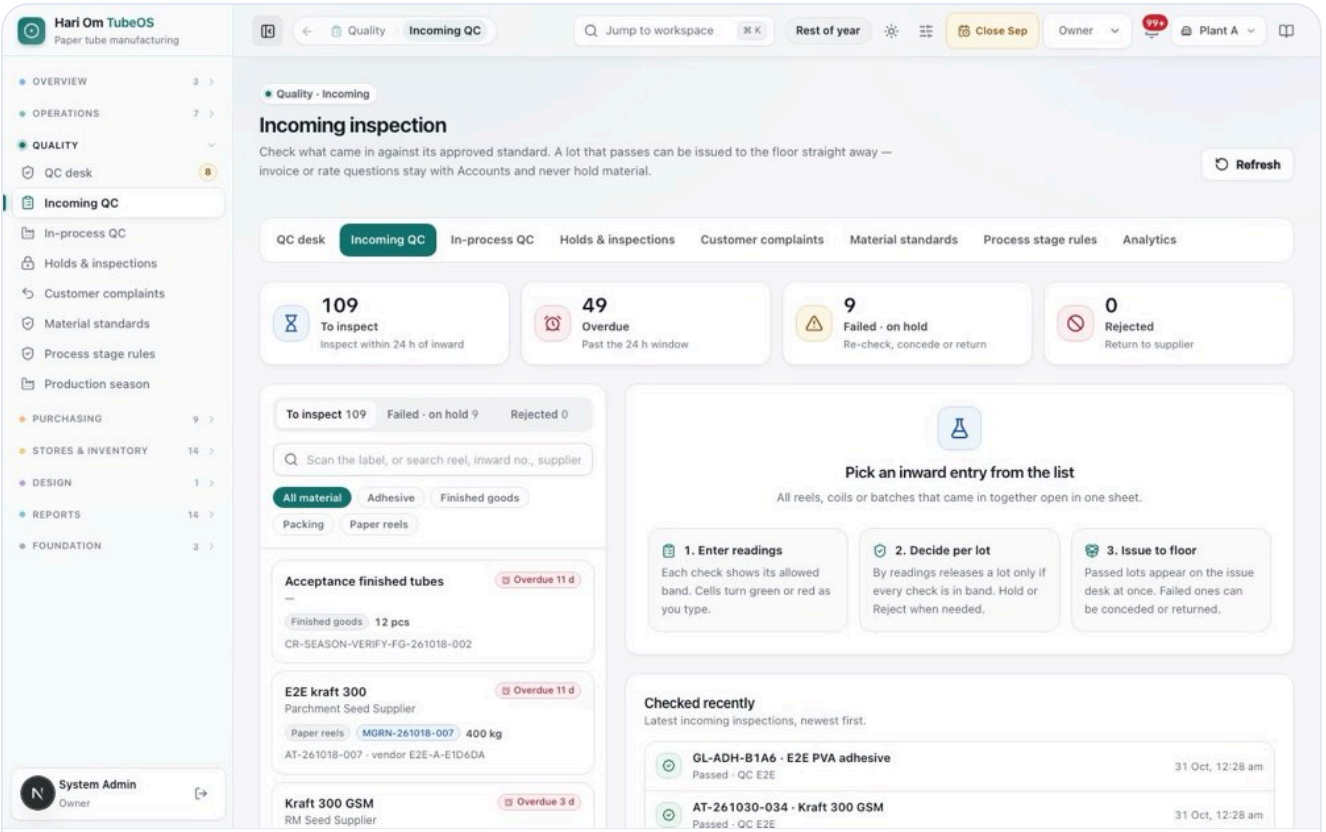


Figure: Incoming inspection. Tiles for To inspect, Overdue, Failed · on hold and Rejected; the inward list on the left; on the right a three-step guide until an entry is picked, and "Checked recently" below.

What you see:

1. **Tiles**: **To inspect** (inspect within 24 h of inward), **Overdue** (past the 24 h window), **Failed · on hold** (re-check, concede or return), **Rejected** (return to supplier).
2. **List tabs**: **To inspect**, **Failed · on hold**, **Rejected**. Search: "Scan the label, or search reel, inward no., supplier, PO…" (a label QR can be scanned here). Material chips: **All material**, **Adhesive**, **Finished goods**, **Packing**, **Paper reels**.
3. **Inward rows**: material, supplier, type, inward no. (for example P/26/014), qty and an **Overdue 3 d** or **Due in 5 h** chip.
4. **Right panel**: "Pick an inward entry from the list" with the three steps **1. Enter readings**, **2. Decide per lot**, **3. Issue to floor**. Picking an entry opens one sheet for all reels, coils or batches that came in together.
5. **Checked recently** and **Concessions** ("A measured FAIL stays FAIL; a concession only allows a limited use").

The inspection sheet (words only): one row per reel, coil or batch; for each check the **Allowed** band, the **Reading** box and the **Result** (**In band**, **Out of band**, **Not valid**, **Recorded** for checks without a band). Per lot a **Decision**: **By readings** (released only if every check is in band), **Hold** (keep out of issue for review), **Reject**. An out-of-band lot needs **Reason (required)**, for example "Why GSM is out of band". Then **Save N inspections**. The **Resolve a failed lot** box offers re-check, concession or return.

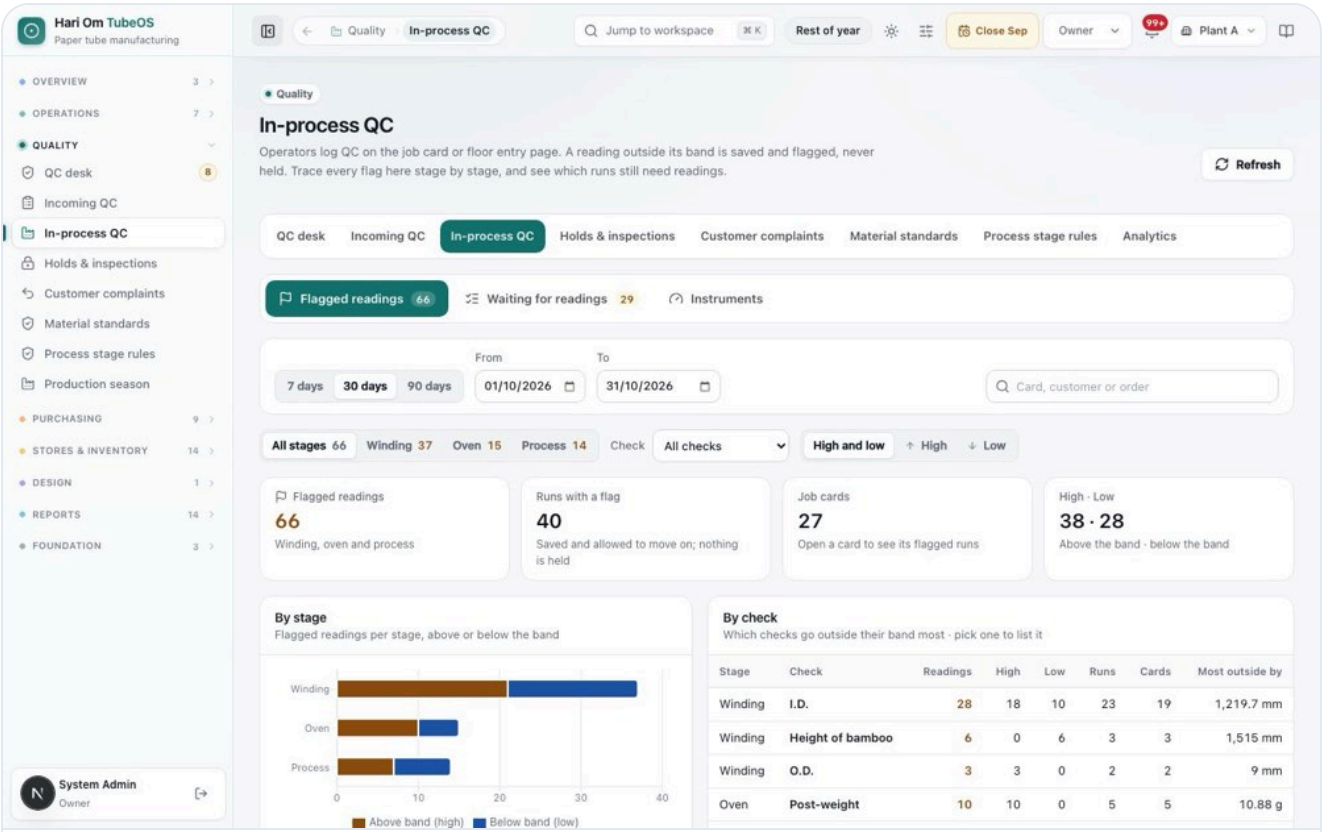


Figure: In-process QC, Flagged readings tab, last 30 days. 66 flagged readings on 40 runs of 27 cards, shown by stage and by check.

What you see:

1. **Tabs**: **Flagged readings**, **Waiting for readings** (count), **Instruments**.
2. **Filters**: **7 days / 30 days / 90 days**, **From** and **To**, search (card, customer or order), stage chips (**All stages**, **Winding**, **Oven**, **Process**), **Check**, and **High and low / High / Low**.
3. **Tiles**: **Flagged readings**, **Runs with a flag** ("Saved and allowed to move on; nothing is held"), **Job cards**, **High · Low**.
4. **By stage** chart (above band and below band) and **By check** table: Stage, Check, Readings, High, Low, Runs, Cards, **Most outside by**. Pick a check to list its readings.
5. **Waiting for readings** tab: Job card, Stage · run, Good, **Still needed (have / need)**, Waiting, and **Log QC** / **View**. Oldest first.
6. **Instruments** tab: the calibrated instrument register (gauges, balances, C.S. tester, moisture meters) with **Calibration due**, **Certificate** and **Status**. An expired instrument cannot back a check that needs one.

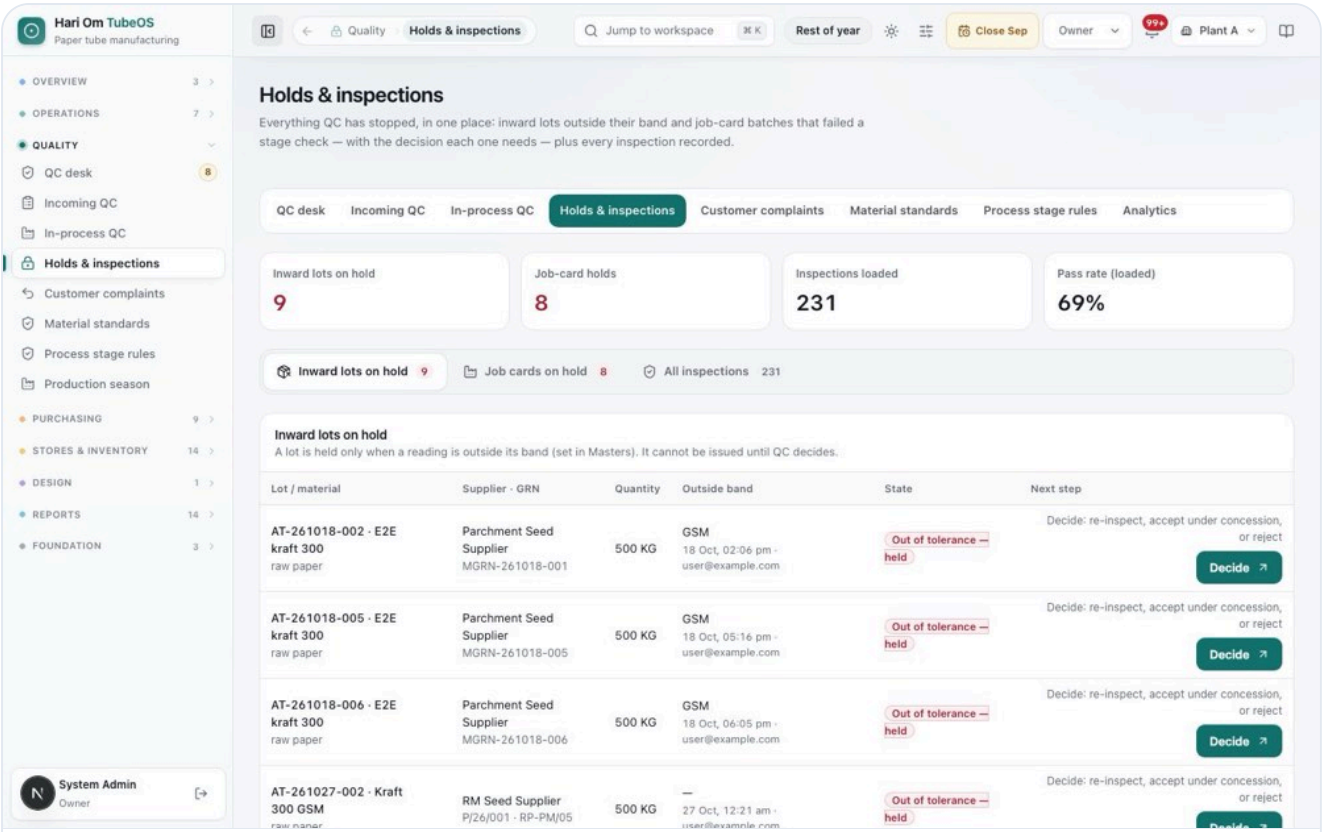


Figure: Holds & inspections. Tiles for inward lots on hold, job-card holds, inspections loaded and pass rate; the Inward lots on hold table with a Decide button per lot.

What you see:

1. **Tiles**: **Inward lots on hold**, **Job-card holds**, **Inspections loaded**, **Pass rate (loaded)**.
2. **Tabs**: **Inward lots on hold**, **Job cards on hold**, **All inspections**.
3. **Inward lots on hold** table: Lot / material, Supplier · GRN, Quantity, **Outside band** (which check, when, by whom), **State** ("Out of tolerance — held" or "Rejected"), **Next step** and **Decide** (opens Incoming QC on that lot).
4. **Job cards on hold**: each hold with its reason and **Release**; and **Put a job card on hold** (choose the card, write the reason, **Hold**).

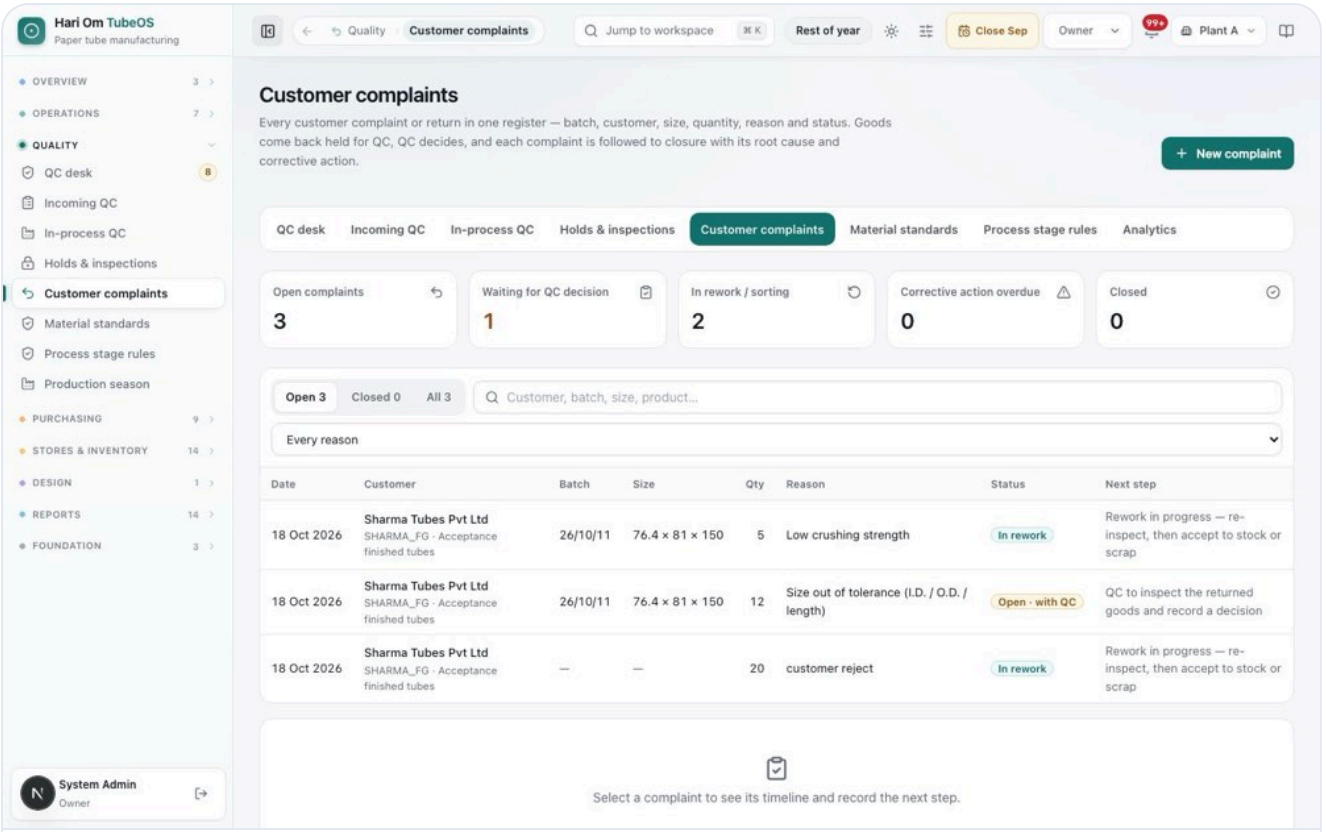


Figure: Customer complaints. Tiles for open, waiting for QC, in rework, overdue and closed; a register table with date, customer, batch, size, qty, reason, status and next step.

What you see:

1. **New complaint** button.
2. **Tiles**: **Open complaints**, **Waiting for QC decision**, **In rework / sorting**, **Corrective action overdue**, **Closed**.
3. **Open / Closed / All**, search ("Customer, batch, size, product...") and **Every reason**.
4. **Table**: Date, Customer (with finished good), Batch (job card), Size, Qty, Reason, **Status** (**Open · with QC**, **On hold**, **Blocked**, **In rework**, **Sorting**, **Closed · scrapped**, **Closed · accepted back**), **Next step**. "Action overdue" shows in red when the corrective action date has passed.
5. Selecting a row opens its **Timeline** and **Record the next decision**.

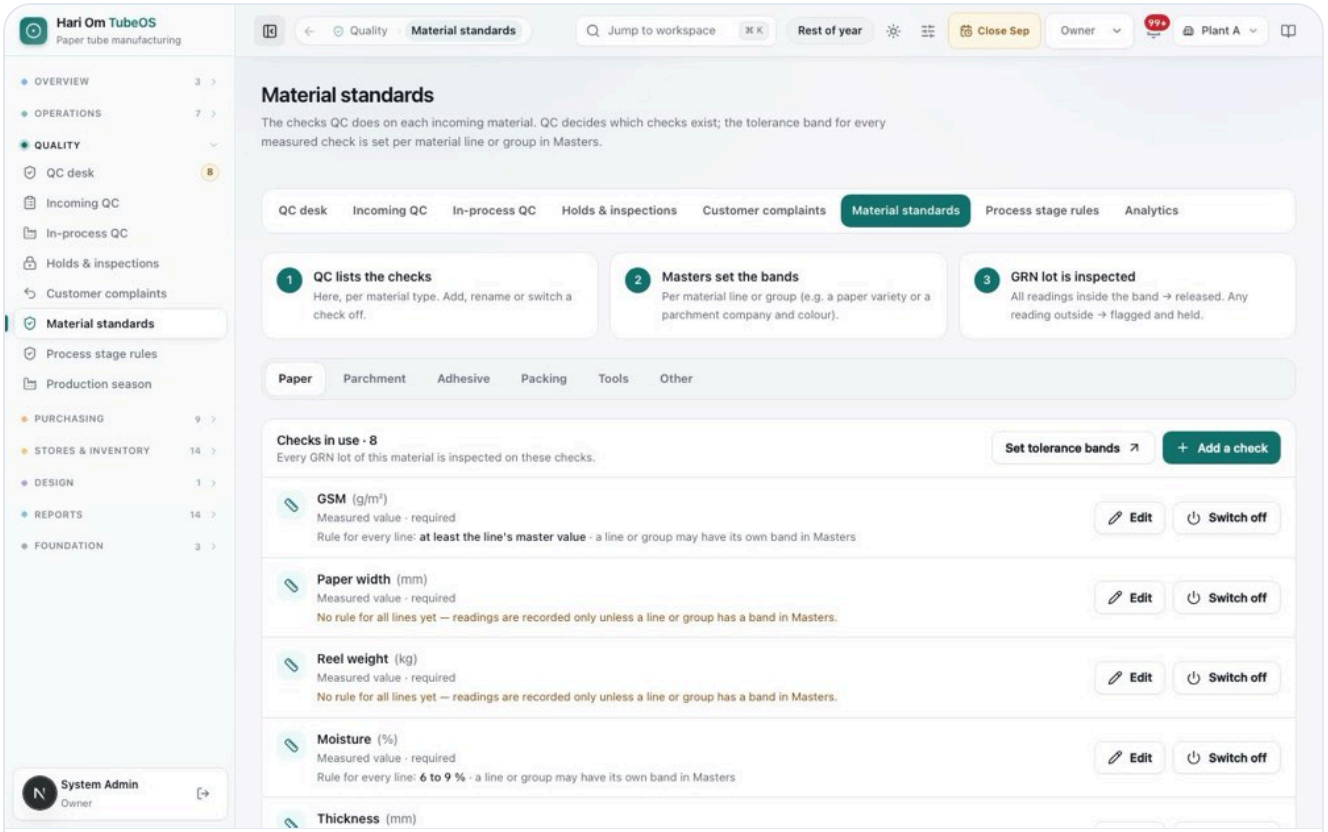


Figure: Material standards, Paper tab. Three steps explain how inward QC works; below, the 8 checks in use, each with its rule and Edit and Switch off buttons.

What you see:

1. **How inward QC works**: **1 QC lists the checks**, **2 Masters set the bands** (per material line or group, for example a paper variety or a parchment company and colour), **3 GRN lot is inspected** (all inside → released; any outside → flagged and held).
2. **Material tabs**: **Paper**, **Parchment**, **Adhesive**, **Packing**, **Tools**, **Other**.
3. **Checks in use · N** with **Set tolerance bands** (opens Masters) and **Add a check**.
4. Each check: name and unit (GSM (g/m²), Paper width (mm), Reel weight (kg), Moisture (%), Thickness (mm)…), kind (**Measured value**, **Pass / fail**, **Note**), required or not, and the rule for every line (for example "at least the line's master value", "6 to 9 %", or "No rule for all lines yet — readings are recorded only unless a line or group has a band in Masters"). Buttons **Edit** and **Switch off**.
5. Below: switched-off checks (**Add check** to bring one back) and **Change history**.

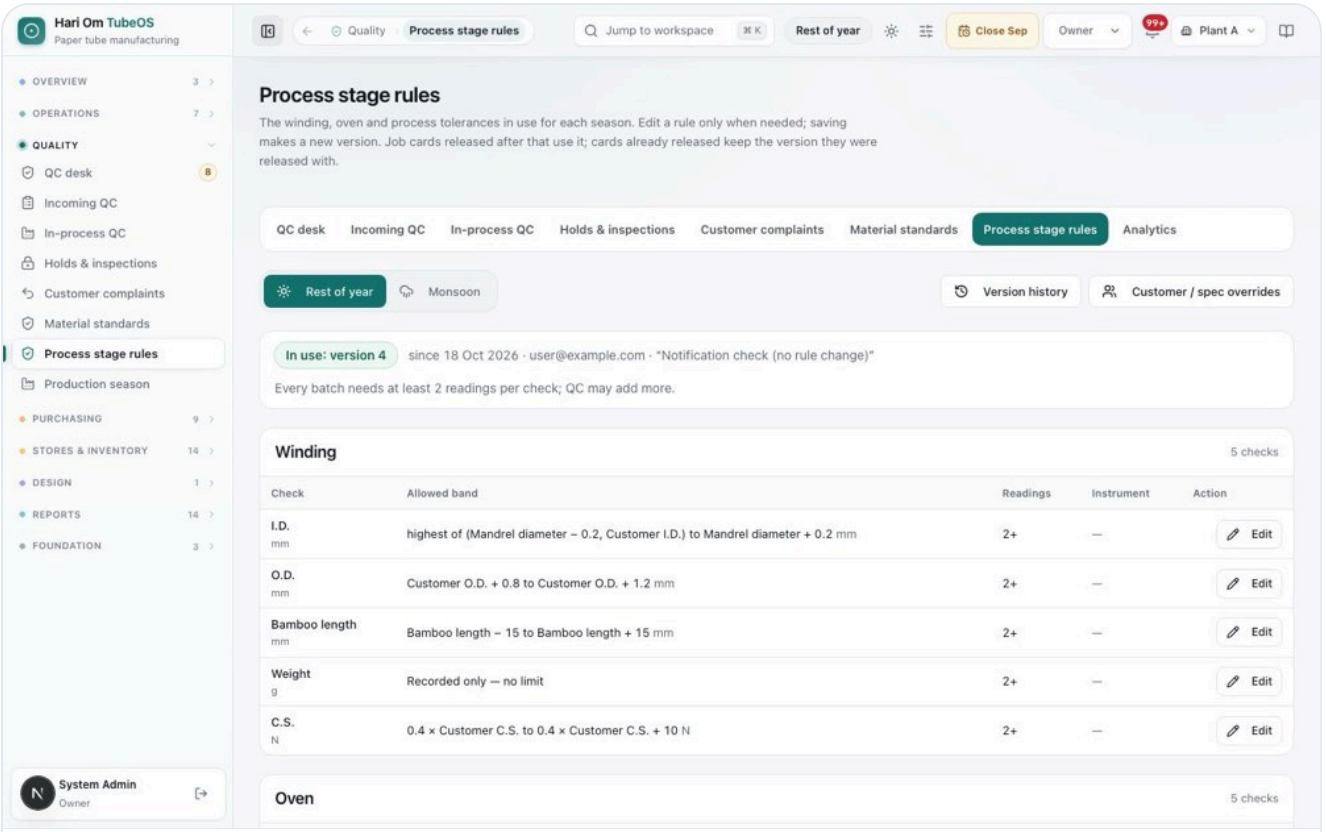


Figure: Process stage rules for Rest of year, version 4 in use since 18 Oct 2026. The Winding table shows each check, its allowed band as a formula, readings 2+, instrument and Edit.

What you see:

1. **Season switch**: **Rest of year** / **Monsoon**. **Version history** and **Customer / spec overrides**.
2. **In use: version N** with date, who, and the change reason; "Every batch needs at least 2 readings per check; QC may add more."
3. **One table per stage** (Winding, Oven, Process): Check (I.D., O.D., Bamboo length, Weight, C.S., …), **Allowed band** (for example "Customer O.D. + 0.8 to Customer O.D. + 1.2 mm", "Bamboo length − 15 to Bamboo length + 15 mm", "Recorded only — no limit"), **Readings** (2+), **Instrument**, **Edit**.

Step by step

How to inspect a GRN lot

Roles: QC, Inward QC, Owner, Admin (Store and Plant Manager can open the page).

1. Open **Incoming QC**. Scan the lot label or pick the inward entry (oldest first; mind the 24 h deadline).
2. Type each reading. Cells turn green in band and red out of band; Enter moves down.

3. Leave **By readings** for normal lots. Choose **Hold** to keep a lot out of issue, or **Reject**.
4. For an out-of-band lot, write the reason.
5. Click **Save N inspections**. In band: "Saved: … It can be issued to the floor now." Out of band: "It stays out of issue."

How to resolve a held lot

1. Open the lot (**Decide** on the QC desk or Holds & inspections).
2. **Re-check**: enter new readings in the sheet.
3. **Concession**: plant head, Owner or Admin (never the inspector) writes "Why this material is still fit for use". The FAIL stays on record; the released qty can be issued. Critical checks cannot be conceded.
4. **Return to supplier**: Store, Plant Manager, Owner or Admin writes the reason (for example "GSM 150 against 291–309") and optional return challan or vehicle no. The lot is written out of stock and the inward line marked rejected; with an invoice attached, a quality claim opens for the debit note.

How to follow up flagged floor readings

Roles: QC, In-process QC, Plant Manager, Owner, Admin.

1. Open **In-process QC** > **Flagged readings**. Pick the period and stage.
2. Use **By check** to see which check goes out most and by how much.
3. Open a card to see its flagged runs. Talk to the line; no action is needed in the system for the run to continue.

How to clear runs waiting for readings

1. **In-process QC** > **Waiting for readings** (or the QC desk tile).
2. Click **Log QC** on a run. Type at least 2 readings per required check and save. See "Log output and QC entry".

How to put a job card on hold and release it

1. Raise: QC, In-process QC, Plant Manager, Owner or Admin. **Holds & inspections** > **Job cards on hold** > **Put a job card on hold**: choose the card, give the reason, **Hold**. Switch to the card's plant first if asked.
2. The card shows **On hold**; the next stage cannot take it and no challan can be sealed.
3. Release: Plant Manager (plant head), Owner or Admin only. Click **Release** and say why and what was done with the material.

How to record and close a customer complaint

1. Record: Owner, Admin, Plant Manager, QC, Store, Sales or Dispatch. Click **New complaint**. Choose the customer (or "Not in customer master..."), the batch on the goods (job card / batch number), the finished good, the quantity and the reason from the Customer complaints master (CC codes, for example "Low crushing strength", "Size out of tolerance (I.D. / O.D. / length)"). Add what the customer said and, under **More details**, the DC no., invoice, location, date and documents.
2. Save. "Complaint recorded; goods held for QC. QC, the plant head and Sales are notified." If the DC number is not found, it is still logged but marked unverified; the qty cannot exceed what can still come back on that dispatch.
3. Decide: Owner, Admin, Plant Manager, QC or Store. Select the complaint, **Record the next decision**: **Rework**, **Sort / segregate**, **Keep on hold**, **Block**, **Accept to stock**, or **Scrap**. Fill **What QC found and why**, **Root-cause department**, **Action owner**, **Corrective action**, **Corrective action due**, and rework or scrap cost in ₹.
4. Rework and sort keep the complaint open until re-inspection. **Accept to stock** and **Scrap** close it. Accepting held goods needs an Owner or Admin who did not record the complaint.

How to change the checks for a material

Roles: QC, Inward QC, Owner, Admin.

1. **Material standards**, pick the material tab.
2. **Add a check**, **Edit** (name, unit, kind: Measured value, Pass / fail, Note) or **Switch off**. A note is a written observation and never holds a lot.
3. To set or change a band, click **Set tolerance bands** (Owner and Admin, in Masters › Inward QC tolerances or the band button on a master row). The most specific band wins: item, then group (for example parchment company and colour), then type.

How to change a stage rule

Roles: QC, Owner, Admin.

1. **Process stage rules**, pick the season, click **Edit** on the check.
2. Choose **Tolerance band** (minimum and maximum built from terms such as Customer O.D., Mandrel diameter, Bamboo length, a fixed value) or **Record only**; set **Calibrated instrument** and **Readings per batch** (at least 2). "Reads as:" shows the rule in words.
3. Write the **Change reason** (required) and **Save as new version**. New releases use it; released cards keep their version.
4. For one customer or spec: **Customer / spec overrides**, pick the target and season (**Both seasons**, **Rest of year**, **Monsoon**), tick the rules, edit, **Save override draft**. A possibly wider rule needs an Owner or Admin to publish it.

Rules the system enforces

- **Inward: out of band holds the lot**; all in band releases it. A numeric check with no band is recorded only. A held lot cannot be issued. (Blocks issue.)
- **Inward deadline**: 24 hours from inward; late lots show **Overdue**. (Warns.)
- **Concession** only by plant head, Owner or Admin, never the inspector; not for critical checks; the FAIL stays on record. (Blocks others.)
- **Floor: out of band is flagged, never held**; FAIL with the minimum readings counts as QC done. (Flag only.)
- **2 readings per required check** for QC done, the next stage and every stage close; moisture optional. (Blocks.)
- **Job-card hold** stops the next stage and dispatch ("N quality hold(s) are open on this card. Clear them in Quality before sealing."). Release only by Plant Manager, Owner or Admin, with a reason. (Blocks.)
- **Frozen versions**: inward bands and stage rules are versioned with who, when and why; lots and job cards keep the version they started with. (Automatic.)
- **Season**: the Owner alone switches the plant season (Quality > Production season); a card freezes its season's rules at release. (Owner only.)
- **Complaints**: returned goods arrive under QC hold; nothing is sellable until QC decides. (Blocks.)
- **Instruments**: a check that needs an instrument needs a valid instrument ID; an expired one cannot back it. (Blocks.)

Roles in short. QC works all pages and edits standards and stage rules. **Inward QC** inspects GRN lots and edits material checks. **In-process QC** logs floor QC, sees flags and waiting runs, and can raise job-card holds but not release them. **Plant Manager** (plant head) releases holds and grants concessions. **Store** returns lots to suppliers and records complaints. **Sales** and **Dispatch** see holds and record complaints.

Sample

Bharat Paper Mills delivers 6 reels of Kraft 300 GSM (P/26/014). The paper band is GSM at least 291 (from the master line) and moisture 6–9 %.

Reel	GSM	Moisture	Decision	Result
R1	302	7.1	By readings	Released
R2	298	6.8	By readings	Released

Reel	GSM	Moisture	Decision	Result
R3	285	7.4	By readings, reason "GSM low on two sheets"	Held

R3 is on hold. The plant head grants a concession for outer plies ("still fit for use"); the FAIL stays on record. Later, card 26/10/315 has a Winding I.D. reading of 76.9 mm against 76.2–76.5: flagged, not held; it appears in In-process QC under I.D., High.

Common questions

Why can't Store issue this reel?

Its lot is held: a reading was out of band. QC must re-check, the plant head concede, or Store return it.

A floor reading is out of band. Must I hold the card?

No. It is flagged, not held. Raise a hold only if you decide the material must stop.

Who can release a job-card hold?

Only the plant head (Plant Manager), Owner or Admin.

Where do I change the GSM band for one paper?

In Masters (the band button on the paper row, or Masters › Inward QC tolerances). QC only lists the checks.

I edited a stage rule. Why do old cards still use the old band?

Cards freeze their rules at release. Only cards released after your save use the new version.

What does "Recorded only — no limit" mean?

The reading is kept but never judged in or out of band.

A complaint's dispatch number is not found.

The complaint is still logged, marked unverified. Check the DC number with Dispatch.

Where are quality trends?

Analytics (Reports › Quality analytics): pass rates by stage and material, flagged readings, holds and complaints.

Related chapters

- Log output and QC entry
- Job cards
- Goods inward, GRN register and labels
- Masters
- Dispatch
- Reports