PAPER TUBE MANUFACTURING ERP

# Hari Om TubeOS Help Guide

Everything you need to run orders, planning, the shop floor, quality, purchasing, stores, the gate, the Doc Vault and reports in TubeOS. Written in plain words, with the real screens, flow diagrams and worked samples.

26 chapters | Real screenshots | Flow diagrams | Worked samples

As of 8 November 2026

### Find it fast

Press `/` or Ctrl/Cmd+K and type a word, such as *reject*, *GRN* or *Split plan*.

### Start with your job

Open A day in the life for your role, then follow its links.

### See how it fits

Chapter 00 shows how the plant flows from customer order to dispatch and from supplier to shop floor.

### Print or share

This page prints cleanly to PDF. Click any screenshot to enlarge it.

## START HERE, SALES AND DESIGN

Chapter 00

### Welcome to Hari Om TubeOS: the big picture

TubeOS is the plant's one system for paper tube orders, production, quality, stores, purchasing and dispatch, from the customer PO to the delivery challan.

Chapter 01

### Getting started

How to sign in, read the header bar, find pages in the sidebar, pick your plant and set light or dark mode.

Chapter 02

### Dashboard and inbox

The Dashboard is your start-of-day view (figures, alerts and shortcuts for your role); the Inbox is your live work queue plus every handoff, hold and approval that involves you.

Chapter 03

### Using TubeOS on a phone

How to use TubeOS on a phone on the floor: scanning QR labels with the phone camera, the Scan page, and Log output, Log QC and Reel issue on a small screen.

Chapter 04

### Sales orders

One Orders list and one Order page for every customer PO, from draft to closed: entry, approval, release to job cards, delivery tracking, hold, cancel and short close.

Chapter 05

### Specifications

The spec sheet workspace where the Owner and Admin build each customer's tube specification: size, mandrel, paper recipe for each season, adhesive, parchment, weights, tolerances, notch and packing, with approval and a print-ready sheet.

Chapter 06

### A day in the life

One short routine per role: what to open first, the pages you use in order, and the mistakes to avoid.

## PRODUCTION, QUALITY AND DISPATCH

Chapter 10

### Job cards

The list of every job card in the plant and the one page per card that shows its stages, runs, QC, plan, material, boxes, dispatch and full history.

Chapter 11

### Job card manager

The one place where planners and the plant head change a job card's life: split into a new card, edit qty or colour, emergency insert, force close and cancel, each with a preview and a reason.

Chapter 12

### Planner

Where the planner puts released job cards on machines and shifts (Winder, Oven, Process, Slitting), and the Planning overview that compares every planned slot with what the floor actually logged.

Chapter 13

### Log output and QC entry

The two short floor forms: Log output (how many were made and rejected on a run) and Log QC (the readings for a run). Same pages on a phone and a PC.

Chapter 14

### Quality

The QC pages: the QC desk (what needs QC now), incoming inspection of GRN lots, in-process QC flags, holds, customer complaints, and the standards and stage rules that set the bands.

Chapter 15

### Month-end close

The monthly check of material use (what the spec allows against what the store issued and what the month-end count says was used), the Owner's close that freezes the month, the usage limits behind it, and the card time reconciliation report.

Chapter 16

### Dispatch

The dispatch register of job cards with finished goods, and the delivery challan: pick the boxes, make a draft, seal it (stock goes out and the sales order counts the delivery), and print it.

## PURCHASING, STORES AND INWARD

Chapter 20

### Purchase orders, PO approvals and requisitions

the purchase desk, where purchase orders (POs) are made, approved by the Owner or an Admin, sent to the vendor and followed until the goods come in. Requests for tools and spares start here as requisitions.

Chapter 21

### RM inward calendar and expected arrivals

the RM inward calendar shows, for every raw and packing material, what the plant needs day by day, what is in stock and what is arriving. The desk proposes arrivals, and the Owner approves them into draft POs. Expected arrivals is the daily list of what vendors should deliver, with Make GRN on each row.

Chapter 22

### Invoice differences, debit notes and purchase reports

the commercial side of buying. Invoice differences lists every case where the vendor's invoice or challan does not match the approved PO (rate, quantity or specification) or where QC-rejected goods were returned; its Weight differences tab lists every bill whose scale weight at incoming QC came short of the bill weight. Debit notes turns positive differences into claims on the vendor and tracks their settlement. Purchase reports gives the complete purchase registers in Excel, CSV and print.

Chapter 23

### Goods inward, GRN register and labels

the store's receiving desk. Goods inward records what came on the truck, against an approved PO or as a manual GRN, with every reel and coil weighed and given its own QR label. The GRN register keeps every saved receipt: attach late invoices, approve manual receipts, open incoming QC and reprint labels.

Chapter 24

### Issue to the floor: reels, coils and materials

the two store desks that send raw material to the production floor, the history of every issue, and the genealogy page that traces a reel from inward to dispatch. Reels and coils are issued by their label (the plant's AIT serial, or the AT number on older reels); adhesive, parchment and packing are issued by quantity.

## STOCK CONTROL, REPORTS AND SETUP

Chapter 25

### Stock counts, stock book, locations and opening stock

the one place where the store counts its racks, corrects stock with the Owner's approval, reads the month's stock book, manages racks with QR labels, and (once, at go-live) enters the stock already in the plant.

Chapter 26

### Inventory, material items, manual FG, stock alerts and RM costing

the stock overview of the plant, the item master behind every material, the manual way to add finished tubes to stock, the stock alert rules and their inbox, and the Owner's standard cost sheet for raw materials.

Chapter 27

### Reports

the read-only report pages that show how the plant, the orders, the stock and quality are doing, with links back to the records behind every figure.

Chapter 28

### Masters

the base lists every other screen picks from: papers, mandrels, tube sizes, parchments, adhesives, packaging, inward QC bands, tools, customers, vendors, contacts, employees, shifts, holidays and reason lists.

Chapter 29

### System, audit, production season and the guide

the setup and control pages: who can log in and with which roles and plants, the plants and machines, the background jobs, the audit trail of every change, the global production season, and the in-app guide.

## GATE AND DOCUMENTS

Chapter 31

### Gate desk and visitors

The watchman's phone desk at the plant gate: visitors in and out, photos of every bill or challan that comes in, and photos of the papers of every truck that goes out. Behind it: the Accounts Bills inbox for expense bills, the Gate register with CSV, and System › Gates for gates and their visitor QR posters.

Chapter 32

### Doc Vault

One place for every bill, challan and photo of the plant: vendor bills and challans, expense bills, Tally bills and our challans photographed at the gate, visitor photos, and a saved copy of every issued debit note. Search, view, link to a GRN, add pages, and void (never delete).

START HERE, SALES AND DESIGN


# Welcome to Hari Om TubeOS: the big picture

**What it is:** TubeOS is the plant's one system for paper tube orders, production, quality, stores, purchasing and dispatch, from the customer PO to the delivery challan.
**Who uses it:** Everyone: Sales, Planner, Plant Manager, Operator, QC (inward and in-process), Store, GRN, RM issue, Dispatch, Accounts, Owner and Admin.
**Where:** Sign in at the TubeOS address. Each role lands on its own start page (see Getting started).


## At a glance

- TubeOS runs two loops that meet on the floor: **SELL → MAKE → SHIP** (customer order to dispatch) and **BUY → STORE → FEED** (raw material planning to issue on the floor).
- The **job card** is the floor's truth. Planning is only the plan: nothing in planning stops the floor from logging a run.
- Quality has two different rules. **Incoming QC** works by bill: QC weighs every reel, and **Accept needs the actual weight**; a lot that is held, rejected or has a reading outside its band cannot be issued. Stock stays on the bill weight; a bill weighed short goes to the Owner or a debit note. **Job card QC** (winding, oven, process and final) only **flags** an out-of-band reading; it never holds or rejects the card and never blocks dispatch. Only a hold that the plant head, QC, Owner or Admin places on purpose stops a card.
- **Finished tubes are packed in boxes.** Process good pcs fill boxes of the spec's qty per box; each box has a code and a QR label, goes into stock on its own, and ships whole on a challan. The last pcs go into a **part box**.
- **Any stage can close short.** The pcs not made go back to the sales order at once; Sales releases them again or short closes the order.
- **Every "why" is a reason code** picked from Masters › Reason codes, with an optional note.
- **The gate photographs, the office links.** The watchman photographs every bill coming in and the papers of every truck going out; Store links them to the GRN or the challan. Every bill, challan and photo is kept in the **Doc Vault** and never deleted.
- Numbers are made by the system: SO numbers, job card numbers, PO numbers, GRN (inward) numbers and reel labels. You never type them.
- Every page shows plain status words (for example **Ready to release**, **Running**, **Waiting for QC**). The cheat sheet below lists them.


## The flow

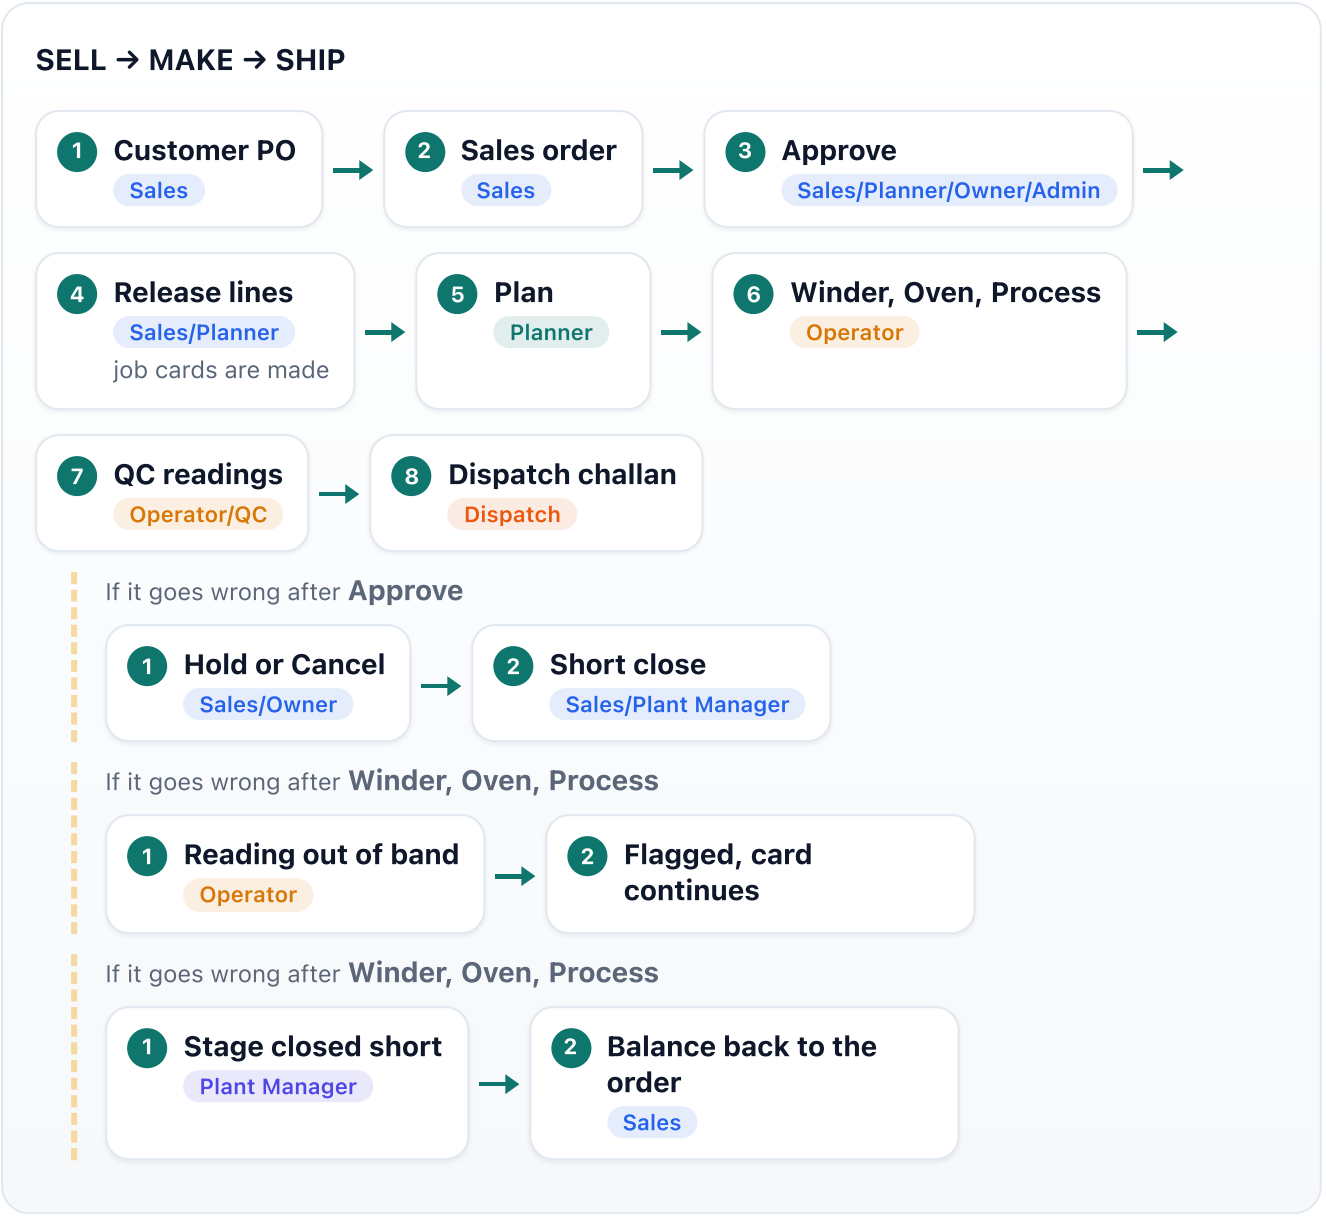


The customer's PO becomes a **sales order**. A second person approves it (the Owner and Admin may approve their own). Releasing a line makes one **job card per line and parchment colour** in the winder queue. The planner places the cards on machines and shifts; the floor logs runs and at least two QC readings per check at each stage. As Process good pcs get their readings, they are packed into labelled boxes that go into stock and can ship at once, even while Process runs. When Process closes, packing and the final check close with it and the pcs left become a part box. A stage that cannot reach its target closes short; its balance goes back to the order.

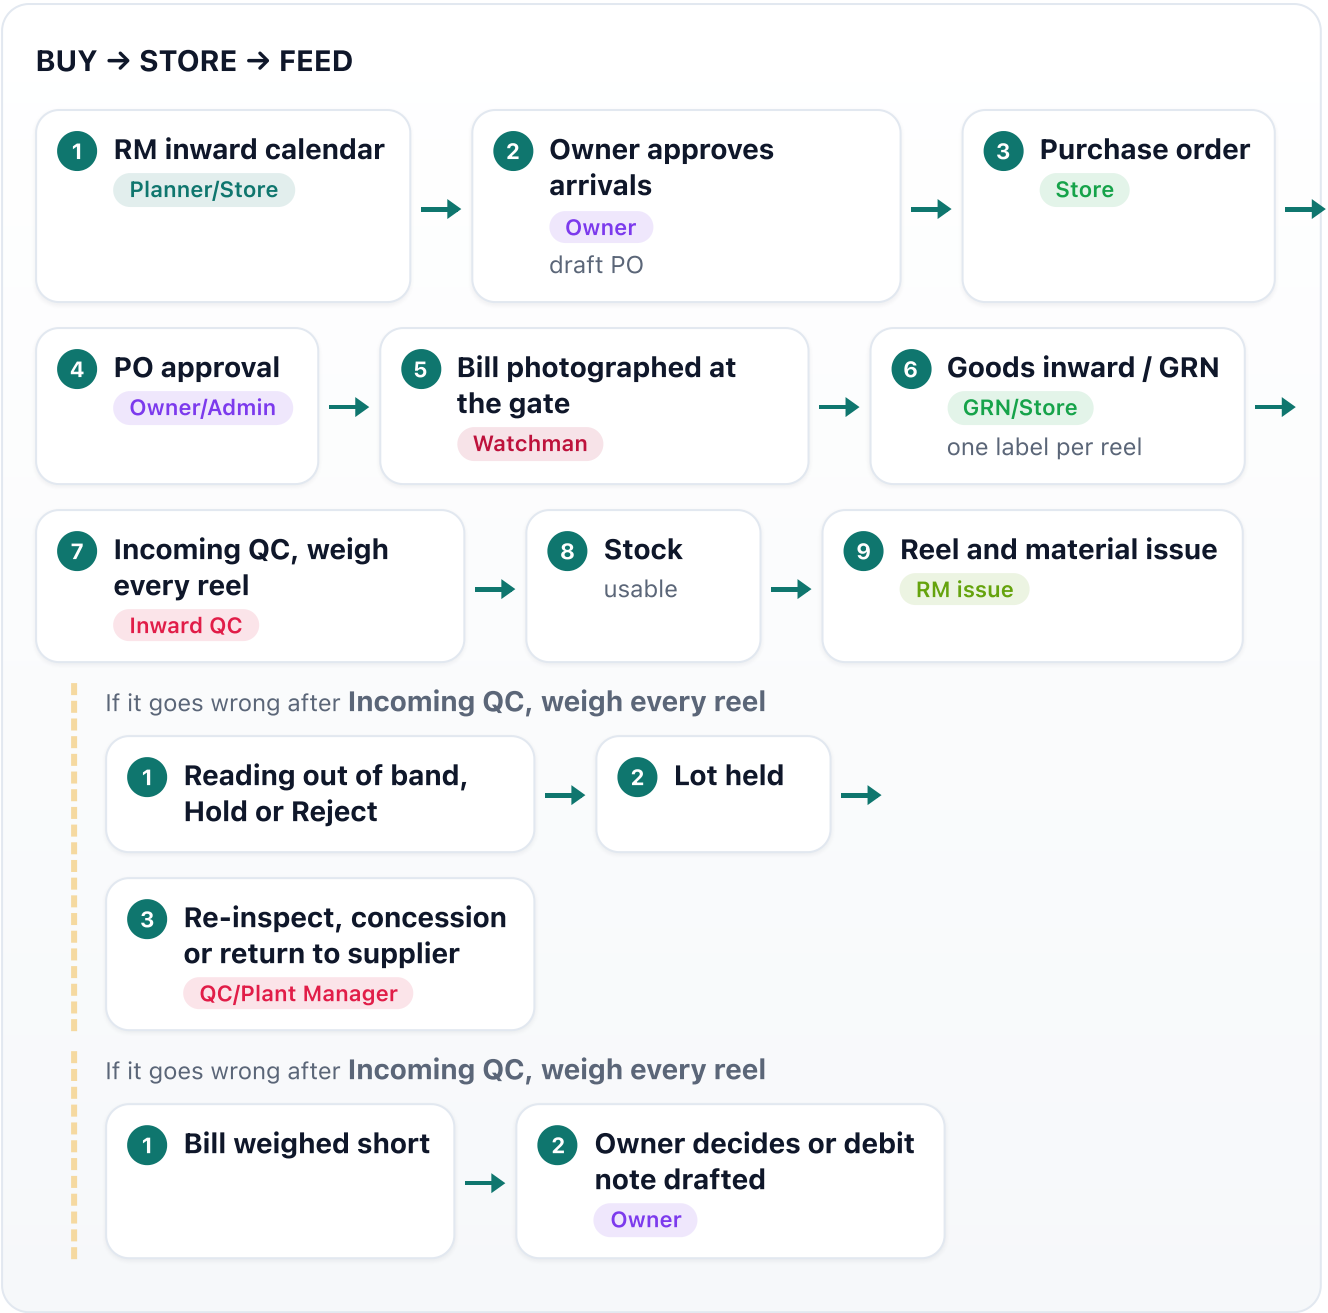


Raw material demand from orders and planned job cards is compared with stock day by day on the **RM inward calendar**. Arrivals the Owner approves become draft POs. Stores receive goods against the approved PO, every reel or coil gets its own label, and the lot waits for incoming QC. Only QC-cleared stock can be issued. Issue is to the floor by shift (never to a machine or a job card) and everything issued is used in full; nothing returns from the floor.

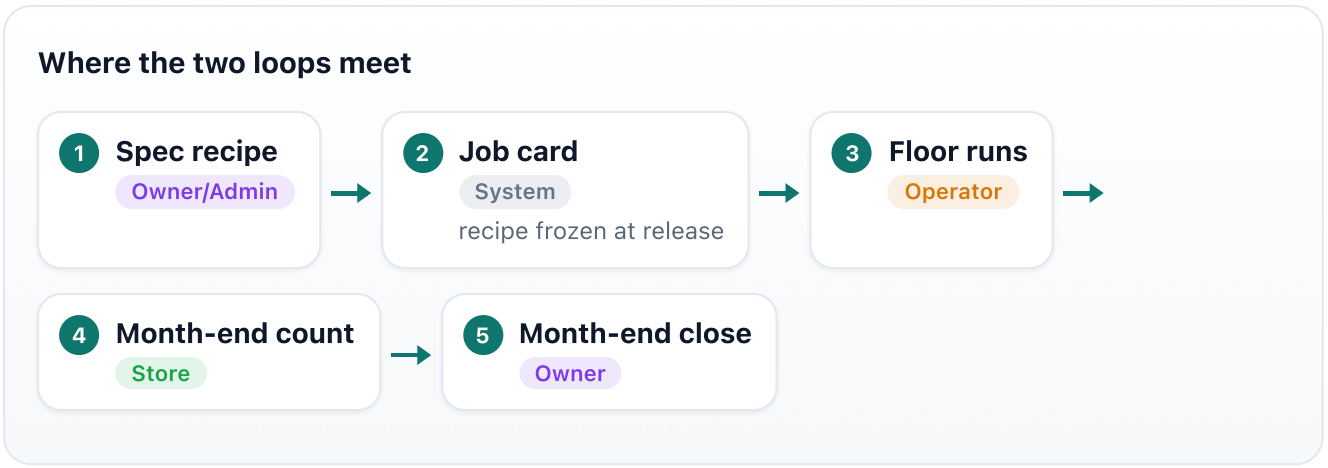


The approved specification sets what a tube should use. At month end the system compares the spec, what the store issued and what the count says was used.

## Screen tour

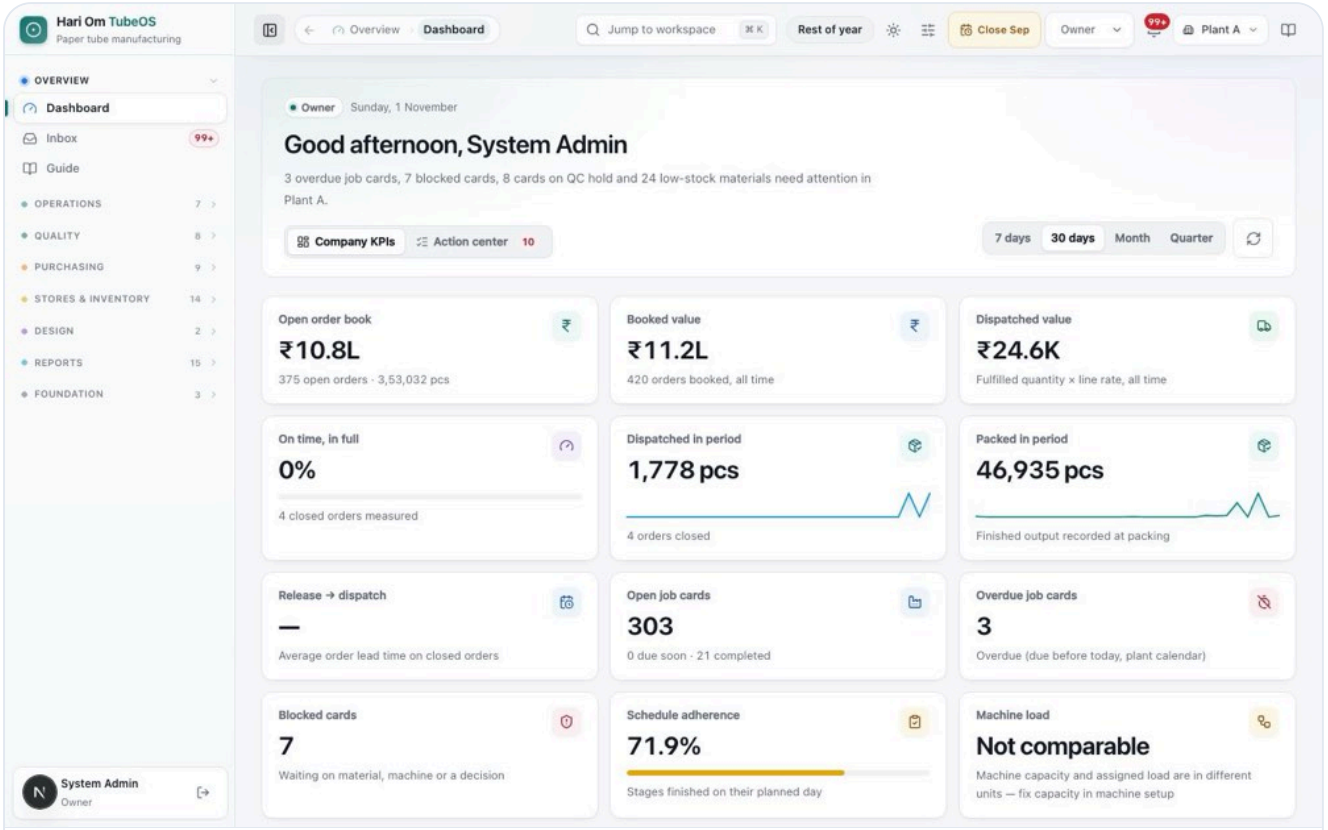



Figure: The Owner's start page. A greeting and one sentence say what needs attention (for example "3 overdue job cards, 7 blocked cards, 8 cards on QC hold and 23 low-stock materials need attention in Plant A"). Below are money and production tiles such as Open order book ₹10.8L and Open job cards 303.

What you see:

1. **Header bar**: page path, **Jump to workspace**, season pill (**Rest of year**), theme and appearance buttons, month chip (**Close Sep**), role, bell, plant and guide.
2. **Company KPIs / Action center**: two tabs for the Owner; the Action center lists everything waiting for an Owner decision.
3. **KPI tiles**: each tile is a link to the page behind the number. See Dashboard and inbox.

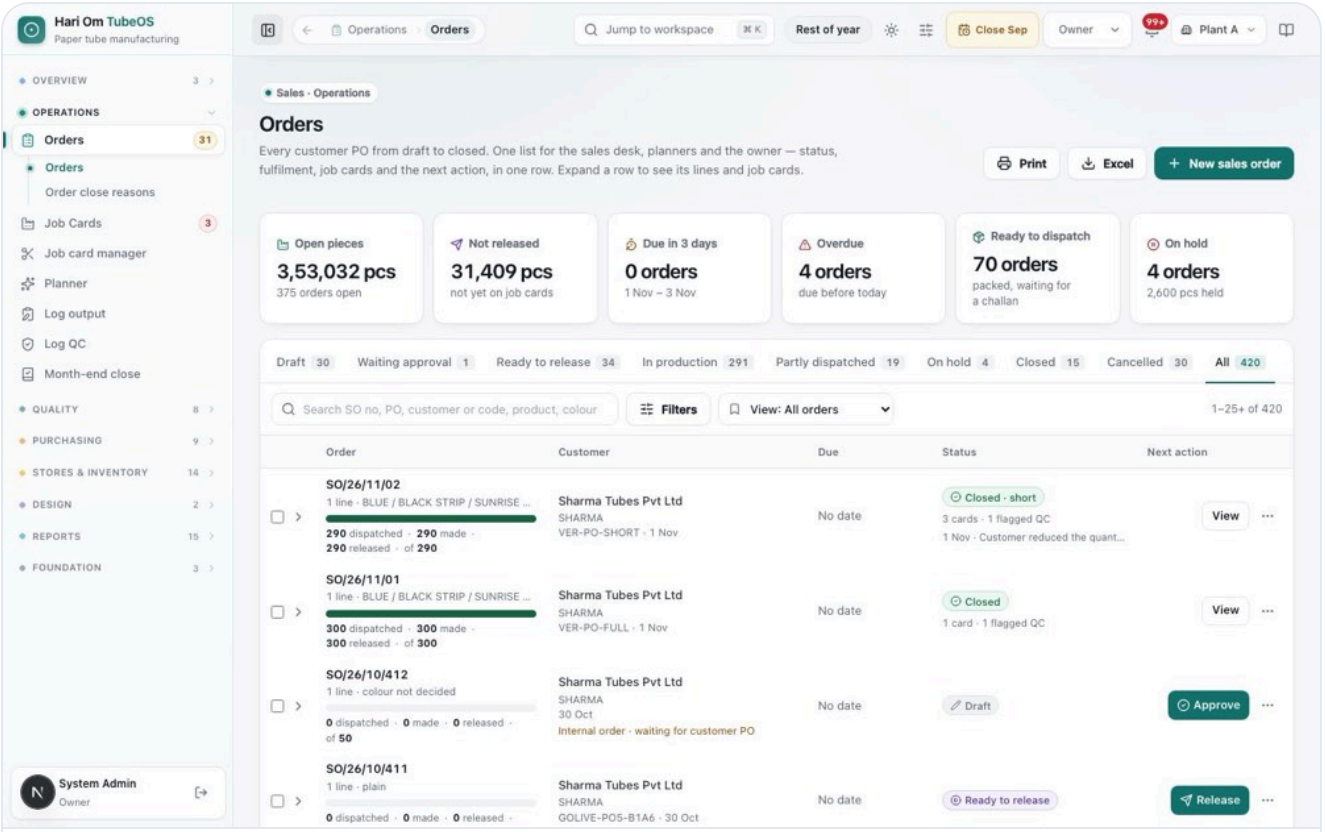



Figure: The Orders list. Six tiles at the top (Open pieces 3,52,427 pcs, Not released, Due in 3 days, Overdue, Ready to dispatch, On hold), then status tabs from Draft to All, then one row per sales order with its status and one Next action button (Approve, Release, View).

What you see:

1. **Tiles**: click one to narrow the list.
2. **Status tabs**: **Draft**, **Waiting approval**, **Ready to release**, **In production**, **Partly dispatched**, **On hold**, **Closed**, **Cancelled**, **All**.
3. **Order rows**: SO number, a fulfilment bar (dispatched · made · released of ordered), customer, due date, status and **Next action**.

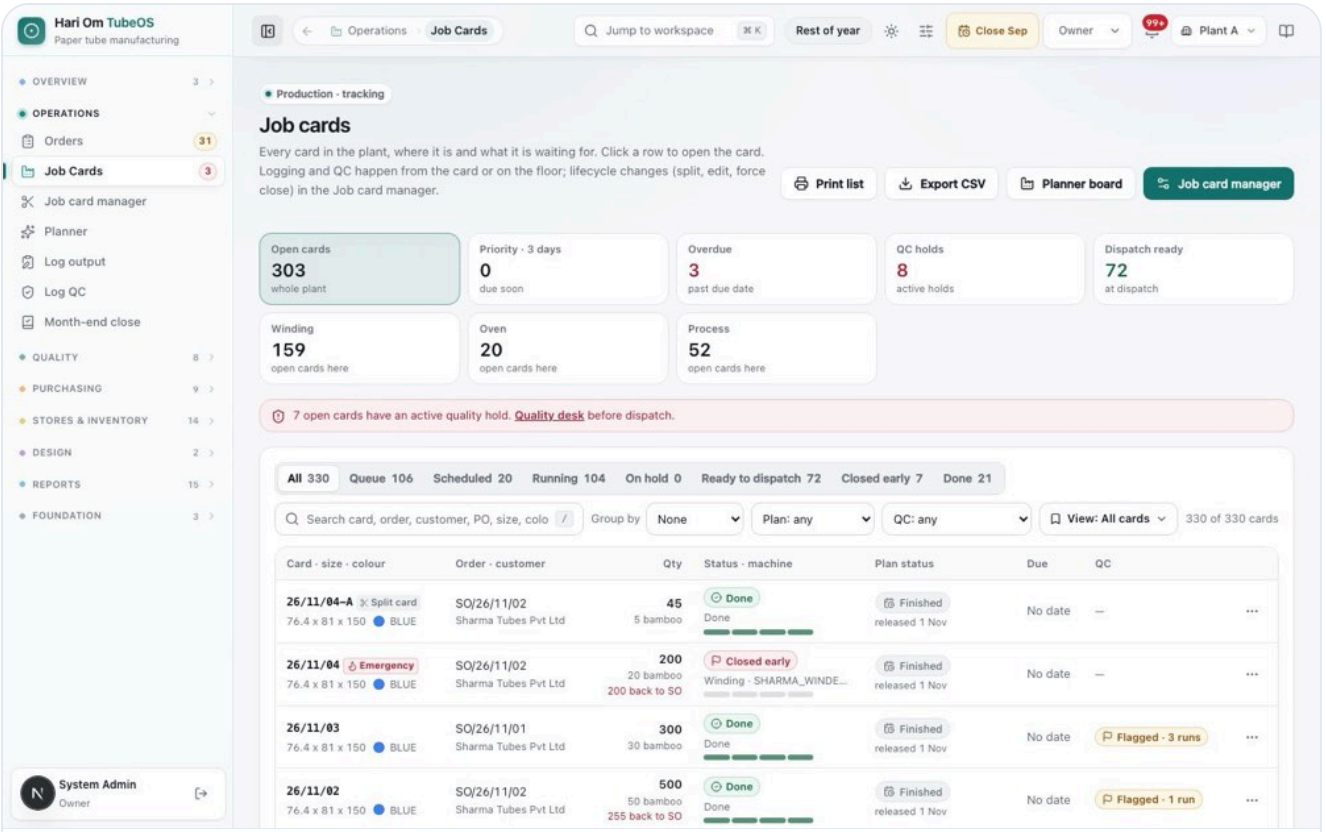



Figure: The Job cards list. Tiles count open cards, priority, overdue, QC holds and dispatch-ready cards, and how many open cards sit at Winding, Oven and Process. Each row shows the card number (26/10/315), size, colour, order, quantity in pcs and bamboo, state, plan status, due date and QC flags.

What you see:

1. **State tabs**: **All**, **Queue**, **Scheduled**, **Running**, **On hold**, **Ready to dispatch**, **Closed early**, **Done**.
2. **Plan status**: words such as "not planned yet" or "running · planned 30 Oct · Shift A". Information only.
3. **QC column**: **Flagged · 3 runs** means readings outside the band were saved and flagged.

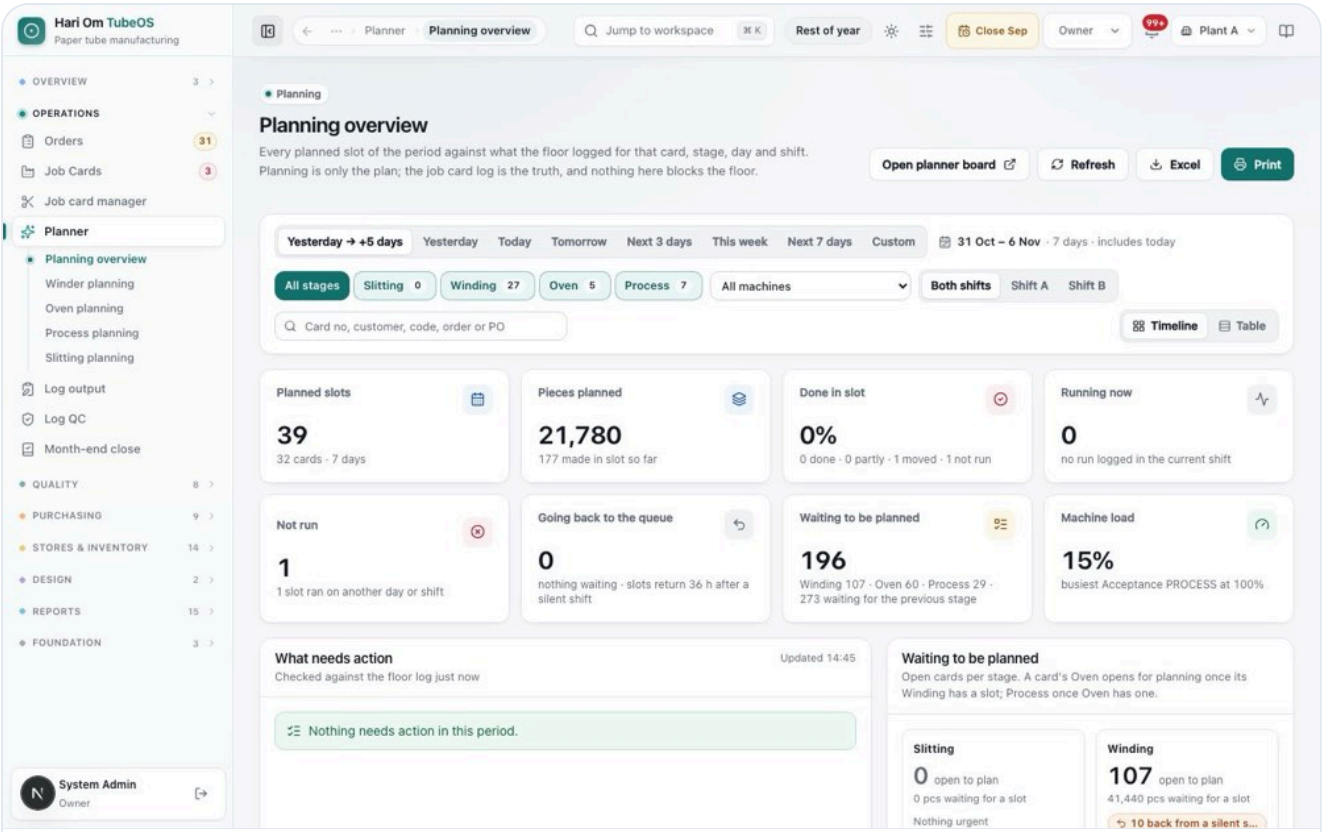



Figure: Planning overview. The period (Yesterday → +5 days) and stage buttons (Slitting, Winding, Oven, Process) sit on top, then tiles: Planned slots, Pieces planned, Done in slot, Running now, Not run, Going back to the queue, Waiting to be planned and Machine load.

What you see:

1. **Header text**: "Planning is only the plan; the job card log is the truth, and nothing here blocks the floor."
2. **Going back to the queue**: a slot with nothing logged returns to the queue 36 hours after its shift.
3. **Waiting to be planned**: a card's Oven opens for planning only once its Winding has a slot; Process once Oven has one.

## Status cheat sheet

**Sales order** (Orders list and Order page)

| Status on screen | Meaning |
|---|---|
| Draft | Entered, not yet approved. |
| Waiting approval | Sent for approval by the person who entered it. |

| Status on screen | Meaning |
|---|---|
| Ready to release | Approved; lines can be released to job cards. |
| In production | Some or all lines released to job cards. |
| Partly dispatched | Some pieces already sent to the customer. |
| On hold | Customer hold: the undelivered balance is held until **Resume**. |
| Closed / Closed · short | Everything dispatched / the balance was dropped by short close. |
| Cancelled | Cancelled before anything was released or dispatched. |

**Job card** (state badge)

| Status on screen | Meaning |
|---|---|
| In queue | Released, not on the calendar yet. |
| Scheduled | Placed on a machine and shift. |
| Running | The floor is logging runs. A card with a stage closed short, or force-closed, whose made pcs are still moving stays here with a "closed early" chip. |
| Ready to dispatch | Process closed; its boxes are packed and labelled and wait for a challan. |
| Completed (tab **Done**) | Process closed and every box shipped or kept as surplus. |
| Force-closed (tab **Closed early** once nothing is left to make or ship) | Closed at the quantity made; the balance went back to the order. |
| Cancelled | Nothing made; the whole quantity went back to the order. |

**Plan status** words: "planned 30 Oct · Shift A", "running · planned …", "plan in 2 parts · next …", "slot … passed", "slot passed with nothing logged, back in the queue", "not planned yet", "waiting for the winding plan", "follows Process", "Finished".

**Purchase order**: **Draft**, **Waiting approval**, **Approved**, **Partly received**, **Received**, **Short-closed**, **Rejected**, **Revision needed**, **Withdrawn**, **Cancelled**.

**GRN line, incoming QC**: **Waiting for QC**, **QC passed**, **QC failed**, **Cleared** (no inspection needed, for example go-live opening stock). Stock words: **On QC hold**, **Usable**. Commercial words on the GRN: "rates match the PO", "invoice to follow", "differs from the PO · goes to Accounts", "manual GRN · goes to Accounts".

**Incoming QC by bill**: tabs **To weigh**, **Part done**, **Owner decision**, **Done today**, **Held**; reel status **Waiting**, **Issuable**, **Held**, **Rejected**, **Concession**, **Returned to supplier**. **Weight check of a bill** (band, with the code the system keeps): **Within limit** (WITHIN: short up to 20 kg, recorded only), **Owner decides** (OWNER_DECIDES: above 20 up to 50 kg), **Debit note** (AUTO_DEBIT: above 50 kg, drafted automatically), **Short on count** (OWNER_INFO: items not billed in kg), **Over the bill** (EXCESS). The 20 and 50 kg limits are per plant. Case status: **So far**, **Within limit**, **Owner told**, **Owner decides**, **Skipped**, **Case raised**, **Waits for invoice**, **Debit note drafted**, **Closed**.

**Gate entry** (GE-): **At the gate**, **With Stores** (a material bill waiting for its GRN, or a goods out waiting for Store to link its challan), **With Accounts** (expense bill waiting to be filed), **Linked to GRN**, **Linked to challan**, **Filed**, **Void** (goods out recorded before 8 Nov 2026 show **Out of gate**). Dispatch chips: **Not out of gate**, **Out · Tally T-1189 ✓**, **Photos missing**.

**Visit** (V-): **Waiting at gate**, **Inside**, **Out**, **Denied**, **Did not come in** (still waiting after 12 hours). **After closing** marks someone inside after the gate close time.

**Doc Vault document** (DV-): active, or **Void** (hidden, kept in history).

**In-process QC**: "Still needs QC" (run without its readings), "needs more readings" (fewer than 2 per check), **Flagged QC · N runs** (reading outside the band, saved and flagged).

**Specification**: **Draft**, **Review**, **Trial**, **Approved**, **Obsolete**; each season's recipe shows **Ready** or **Needs attention**.

## Numbering formats

| Document | Format | Example | Rule |
|---|---|---|---|
| Sales order | SO/YY/MM/NN | SO/26/10/412 | Restarts every month; grows past 99. Older orders kept their old numbers. |
| Job card | YY/MM/NN | 26/10/315 | Restarts every month (India time). A split or top-up card keeps the root and adds a letter: 26/10/315-A. |
| Purchase order | RP-PM/NN or OT/NN | RP-PM/68 | RP-PM for raw and packing material, OT for other items; per plant. |
| GRN (inward) | P/YY/NNN, A/YY/NNN, IN/YY/NNN | P/26/001 | P paper, A adhesive, IN everything else. Restarts on 1 April: P/26/... is financial year 2026-27, so January to March 2027 is still P/26/...; 1 April 2027 starts P/27/001. |

| Document | Format | Example | Rule |
|---|---|---|---|
| Reel / coil label | AIT serial | AIT 06243; coil AIT 06243-1 | One series per plant and financial year, restarting at AIT 00001 on 1 April. Printed at inward; reprints never create stock. Older reels keep AT-yymmdd-nnn numbers. |
| Finished-goods box | B + card number + 3 digits | B2610315-001 | One per box packed on a job card; the part box is the last one. Label reprints never create stock. |
| Gate entry | GE-YYMM-NNN | GE-2611-020 | Every bill in and goods out at the gate; per plant, restarts every month (India time). |
| Visitor pass | V-YYMM-NNN | V-2611-014 | Every visit; per plant, restarts every month. |
| Doc Vault document | DV-YYMM-NNNN | DV-2611-0019 | Every bill, challan, photo and saved debit-note PDF; per plant, restarts every month. |
| Debit note | DN-YYMMDD-NNN | DN-261107-003 | Numbered by the date it is made. |

## How the pages connect

| Sidebar group | Pages | Feeds into |
|---|---|---|
| Overview | Dashboard, Inbox, Guide | Every other page; handoffs arrive in the Inbox. |
| Operations | Orders, Job Cards, Job card manager, Planner, Log output, Log QC, Month-end close | Orders release job cards; Planner places them; Log output and Log QC fill them. |
| Quality | QC desk, Incoming QC, In-process QC, Holds & inspections, Customer complaints, Material standards, Process stage rules, Production season | Incoming QC clears stock for issue; stage rules set floor tolerances. |

| Sidebar group | Pages | Feeds into |
|---|---|---|
| Purchasing | Purchase orders, RM inward calendar, Expected arrivals, Create purchase order, Purchase requisitions, PO approvals, Invoice differences, Debit notes, Purchase reports | Approved POs are received in Goods inward. |
| Stores & inventory | Goods inward (with At the gate), GRN register & labels, Doc Vault, Reel & coil issue, Material issue, Issue history, Stock counts & book, Opening stock, Inventory, Genealogy, Manual FG, Stock alerts, RM Costing, Dispatch | Issue feeds the floor; Dispatch ships finished job cards. |
| Gate | Gate desk, Bills inbox, Gate register, Gates & QR posters | Gate bills go to Goods inward (Store) or the Bills inbox; goods-out photos go to the dispatch register. |
| Design | Specifications | Specs feed sales order lines, job cards and month-end use. |
| Reports | Intelligence and role reports | Read only. |
| Foundation | Masters, System, Audit | Customers, vendors, materials, reasons, users and machines used everywhere. |

## Rules the system enforces

- An order cannot be approved by the person who entered it, unless that person is the Owner or an Admin (BLOCKS; the history records "approved by the same person").
- Every release needs a parchment colour; one job card is one colour (BLOCKS release).
- Planning never blocks the floor. A run logged with no plan is placed on its date and shift and flagged "before planning" (FLAG only).
- Each winding, oven and process run needs at least 2 readings per required check before the stage can close and before the next stage takes it (BLOCKS stage close).
- Out-of-band job card readings are saved and flagged, never held (FLAG only). Out-of-band incoming readings hold the lot (BLOCKS issue). Only holds placed on purpose block a card's next stage and dispatch.

- Every reason is a code from Masters › Reason codes; free text alone is refused, and OTHER codes need a note (BLOCKS).
- A stage short close returns (stage target – stage good) pcs to the order at once; returns + pcs in boxes always equal the pcs released (AUTOMATIC).
- Only QC-cleared stock can be issued, and a purchase lot is cleared only after QC types its actual weight; nothing returns from the floor.
- The watchman never types bill or Tally numbers; the truck is never held for a photo upload (AUTOMATIC).
- A closed month refuses stock and floor entries dated in it until the Owner re-opens it.

## Sample

Sharma Tubes Pvt Ltd sends PO GOLIVE-PO-118 for 5,000 pcs of 76.4 x 81 x 150 at ₹2.75 per pc: 3,000 BLUE and 2,000 RED.

1. Sales enters **SO/26/10/412**; a planner approves it.
2. Sales releases it: two job cards, **26/10/315** (BLUE, 3,000 pcs) and **26/10/316** (RED, 2,000 pcs), go to the winder queue.
3. The planner places 26/10/315 on a winder, Shift A, 31 Oct. Operators log Winding, Oven and Process runs with two QC readings each.
4. Meanwhile the RM inward calendar shows Kraft 300 GSM running short on 4 Nov. The Owner approves an arrival; PO **RP-PM/68** goes to Bharat Paper Mills, arrives as **P/26/014** with 12 reels, passes incoming QC and is issued to the floor.
5. As 26/10/315's Process runs get their readings, its pcs are packed in boxes of 48. Dispatch ships the first 40 boxes (1,920 pcs) while Process is still running. Process then closes with 2,990 good pcs (10 short of 3,000, reason SS-HIGH-REJECT): 62 full boxes and a part box of 14, and 10 pcs go back to the order. The second challan takes the other 23 boxes (1,070 pcs). The order shows **Partly dispatched** until 26/10/316 ships too.

## Common questions

**? Why does my sidebar look different from my colleague's?**

Each role sees only its pages. See the role table in Getting started.

**The plan says "not planned yet" but the operator already logged a run. Is that wrong?**

No. Planning never blocks. The run is kept and flagged as before planning.

**A reading was outside the band at Oven. Is the card stopped?**

No. Job card readings are flagged, not held. The card carries on and its boxes still ship; managers see the flag.

**What is a part box?**

The last box of a job card, packed when Process closes, holding the pcs that did not fill a full box. Its label says PART BOX.

**Winding could not make the full quantity. What happens to the order?**

The plant manager closes Winding short with a reason. The unmade pcs go back to the order line at once, and Sales releases them again or short closes the order.

**A reel failed incoming QC. Can the store issue it?**

No. A held lot cannot be issued until QC re-checks it or the plant head concedes it.

**Why is a GRN in January called P/26/...?**

GRN numbers follow the financial year (April to March). January to March 2027 belongs to 2026-27.

**Where do I see everything waiting for me?**

The **Inbox** (sidebar Overview) and the bell in the header.

## Related chapters

- Getting started
- Dashboard and inbox
- Using TubeOS on a phone
- Sales orders
- Specifications
- Job cards

- Planner
- Log output and QC entry
- Quality
- Purchase orders, PO approvals and requisitions
- RM inward calendar and expected arrivals
- Goods inward, GRN register and labels
- Issue to the floor: reels, coils and materials
- Stock counts, stock book, locations and opening stock
- A day in the life

START HERE, SALES AND DESIGN

# Getting started


**What it is:** How to sign in, read the header bar, find pages in the sidebar, pick your plant and set light or dark mode.
**Who uses it:** Every role.
**Where:** Login page, then the header bar and sidebar on every page. Appearance help: Sidebar > Overview > Guide (route /help/appearance)

## At a glance

- Sign in with the **Username** and **Password** your Owner or Admin gave you. Sessions end after **15 minutes** without activity; signing in again takes you back to the same page.
- Each role lands on its own start page and sees only its own sidebar pages.
- The header bar holds search (**Jump to workspace**, Cmd+K or Ctrl+K), the season pill, theme and appearance, the month chip, the role switcher, the bell, the plant switcher and the page guide.
- Owner and Admin can view **All Visible Plants**, but that view is read-only. Any page that writes data asks you to pick one plant first.
- Theme (System, Light, Dark) and table density are saved on this device only. They never change your records or permissions.

## The flow

### First minute in TubeOS

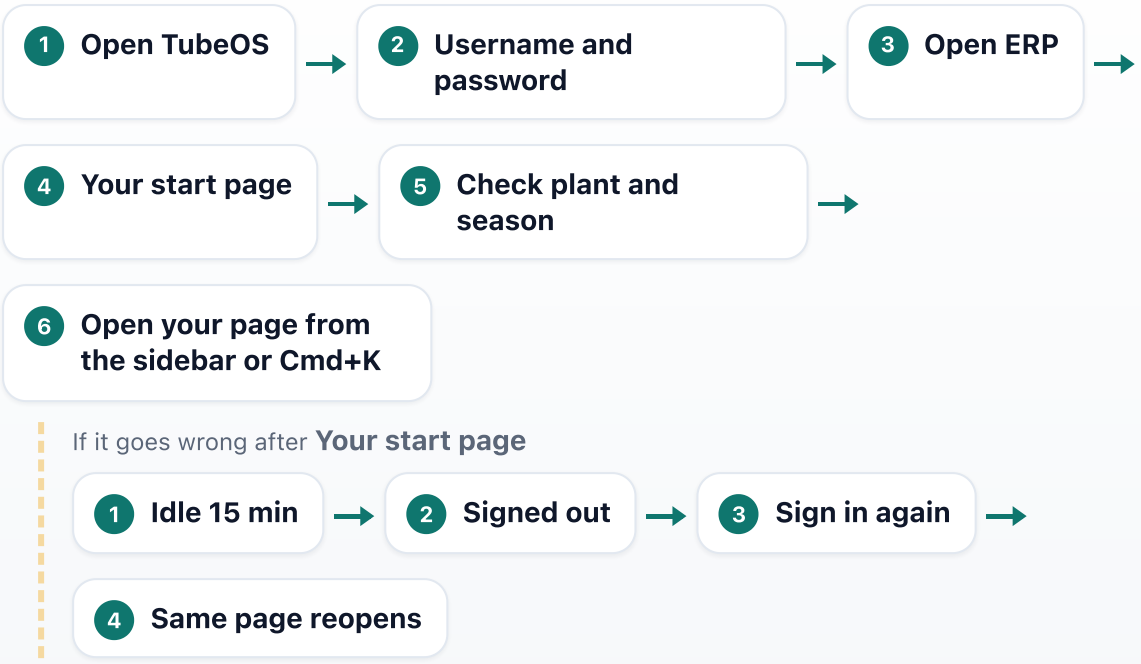


If it goes wrong after **Your start page**




Under the sign-in box a link, **New here? Read the help guide**, opens the handbook without signing in. After **Open ERP** you land on your role's start page. Check the plant name and the season pill, then open your work from the sidebar or the search. If the phone or PC is left idle for 15 minutes, you are signed out; when you sign in again the page you were on (for example a scanned job card) opens again.

## Screen tour

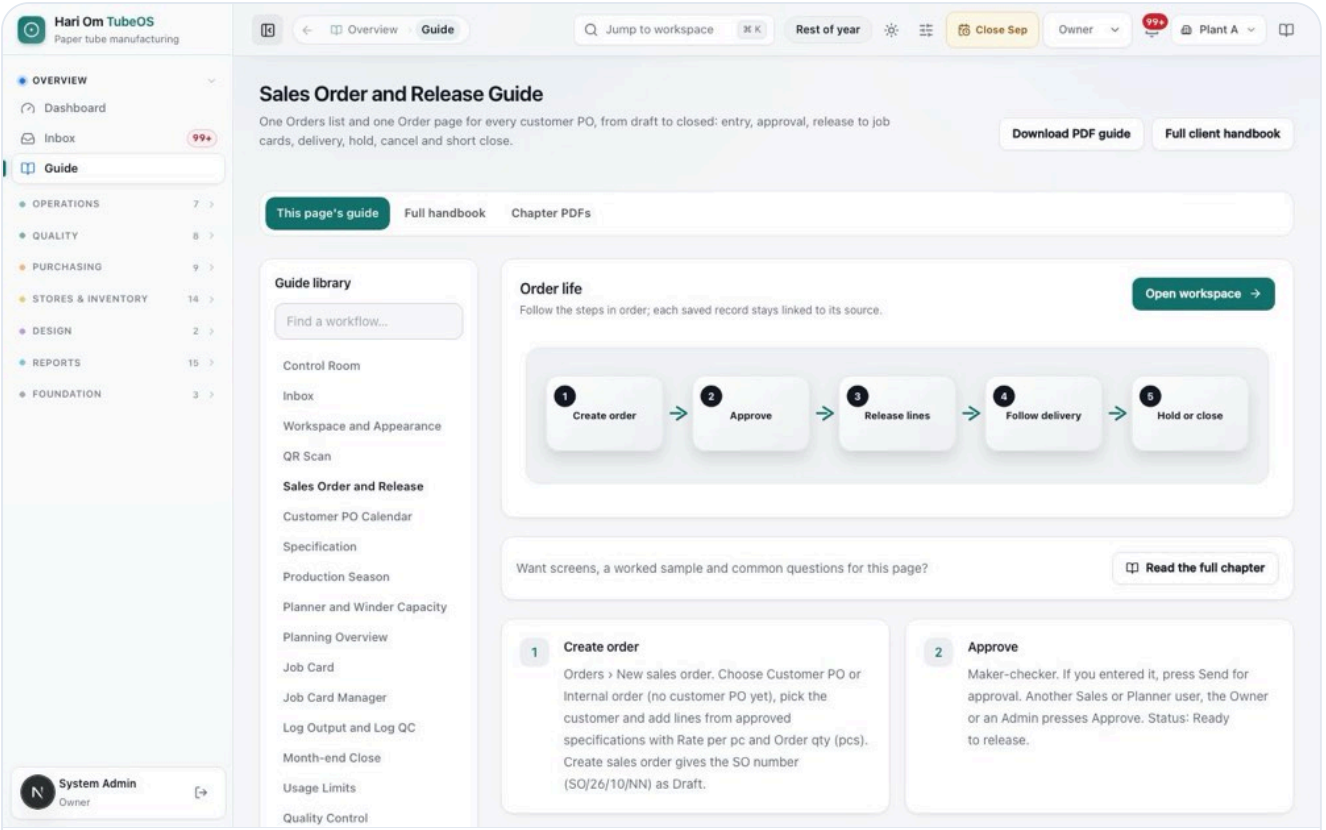



Figure: A normal TubeOS page. The sidebar on the left lists the groups Overview, Operations, Quality, Purchasing, Stores & inventory, Design, Reports and Foundation, with the user's name and role at the bottom. The header bar runs across the top. This page is the in-app Guide, opened on the Sales Order and Release guide, with a guide library on the left and a five-step working sequence.

What you see, header bar from left to right:

1. **Collapse navigation** button: makes the sidebar narrow to give tables more room. Click again to **Expand navigation**.
2. **Page path** (breadcrumb): group › page › record, with a back arrow. Click a part to go back up.
3. **Jump to workspace** (⌘ K): search box that opens any page your role can use. See "How to find a page".
4. **Season pill**: **Rest of year** or **Monsoon**, the season used for new releases in both plants. It links to the Production season page. Only the Owner changes the season.
5. **Sun / moon button**: switches light and dark in one click.
6. **Appearance settings** (sliders icon): Theme **System / Light / Dark** and **Table density Comfortable / Compact**.
7. **Month chip**: shown to the Owner, Admin, Plant Manager, Planner and Store. **Close Sep** (amber) means September has ended and is still open; it opens Month-end close (Planner

and Store go to the stock book). **Sep closed** (green) shows the last closed month; **Books open** means no month is closed yet. Entries dated in a closed month are refused.

8. **Role switcher**: shows your role. If your login has more than one role, pick another role here and you jump to that role's start page.
9. **Bell**: your inbox in a pop-up, with the unread count (red when something is urgent). See Dashboard and inbox.
10. **Plant switcher** (Owner and Admin only): **Plant A**, **Plant B** or **All Visible Plants**.
11. **Book icon** (Open page guide): opens the Guide for the page you are on.

Sidebar:

1. **Groups**: click a group name to open or close it. The group of the page you are on opens by itself, and the number beside a closed group is how many pages it holds for you.
2. **Sub-pages**: the open module shows its own pages underneath (for example Orders shows **Orders** and **Order close reasons**; Planner shows **Planning overview**, **Winder planning**, **Oven planning**, **Process planning**, **Slitting planning**).
3. **Badges**: **Inbox** unread count; **Orders** count of draft orders (amber); **Job Cards** overdue cards (red); **QC desk** open QC holds (amber).
4. **User box**: your name, your active role and the **Logout** button.

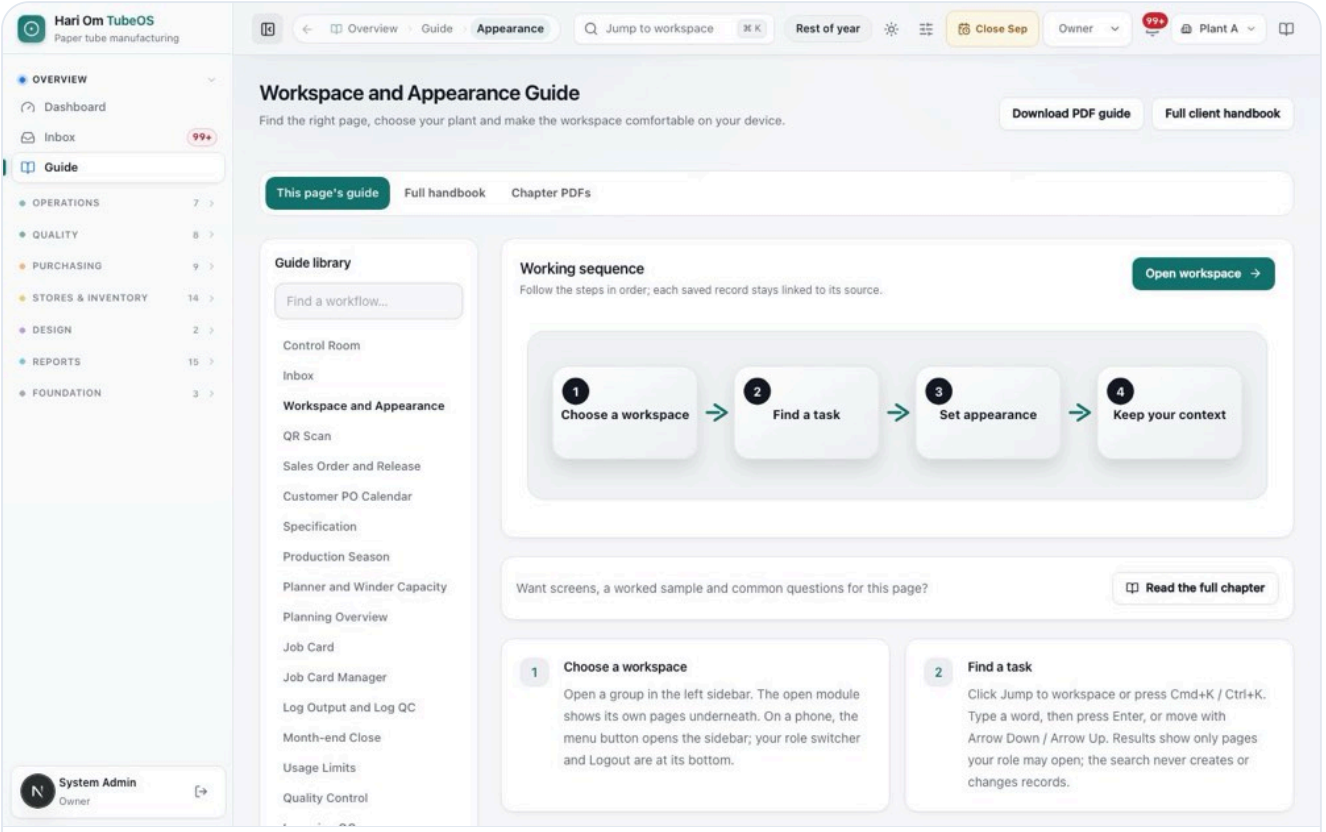



Figure: The Workspace and Appearance Guide (Guide › Appearance). It explains in four steps how to choose a workspace, find a task with Cmd/Ctrl + K, set appearance and keep the right plant and role. Buttons on the top right: Download PDF guide and Full client handbook.

What you see:

1. **Guide library**: one guide per workspace (Control Room, Sales Order and Release, Specification, Purchase and Vendor, and more), with a **Find a workflow...** search.
2. **Working sequence**: the steps of the selected guide; **Open workspace** goes to that page.
3. **Download PDF guide** and **Full client handbook**: the whole handbook as a PDF and as a web page.
4. **Three tabs** above the guide: **This page's guide**, **Full handbook** (the whole handbook inside TubeOS, with search) and **Chapter PDFs** (download one chapter or all). The sidebar **Guide** link opens **Full handbook**; the book icon in the header opens **This page's guide**.
5. **Read the full chapter** button: opens the handbook chapter for that page, with screens, a worked sample and common questions.

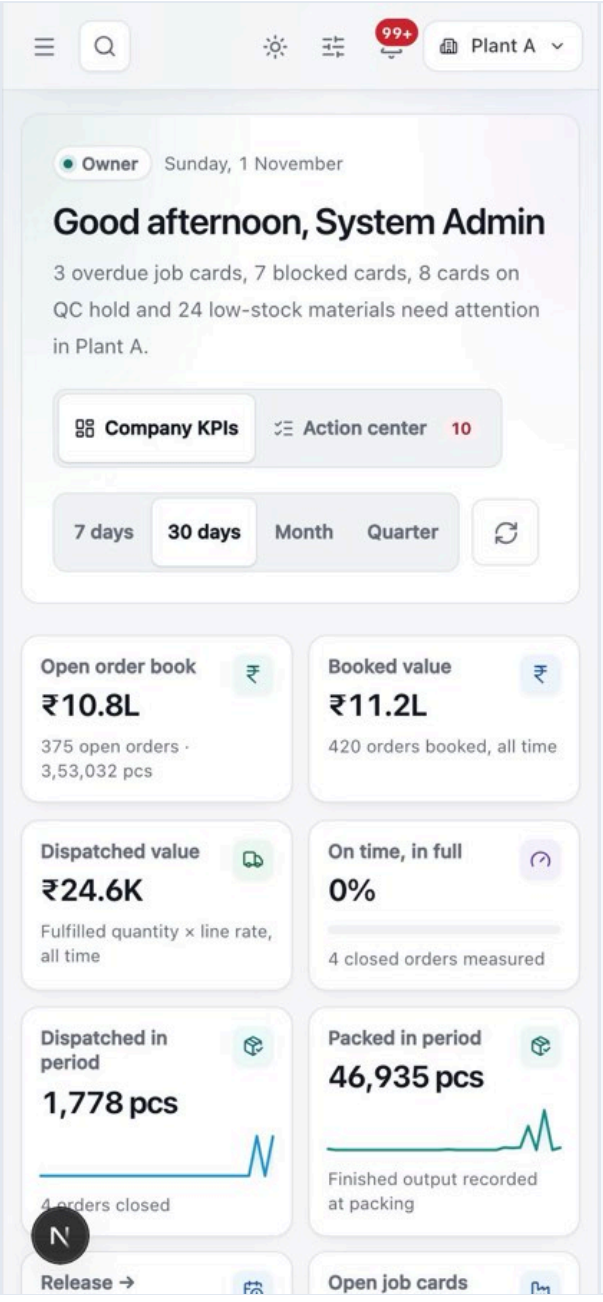



Figure: TubeOS on a phone. The top bar shrinks to a menu button, a search button, the sun/moon button, appearance, the bell with 99+ and the plant switcher (Plant A). The page below is the same start page as on a PC, stacked in one column.

What you see:

1. **Menu button** (three lines): opens the sidebar as a panel; your role switcher and **Logout** are at its bottom.
2. **Search button**: the same Jump to workspace search.
3. The season pill, month chip and role switcher are hidden on a phone to save space.

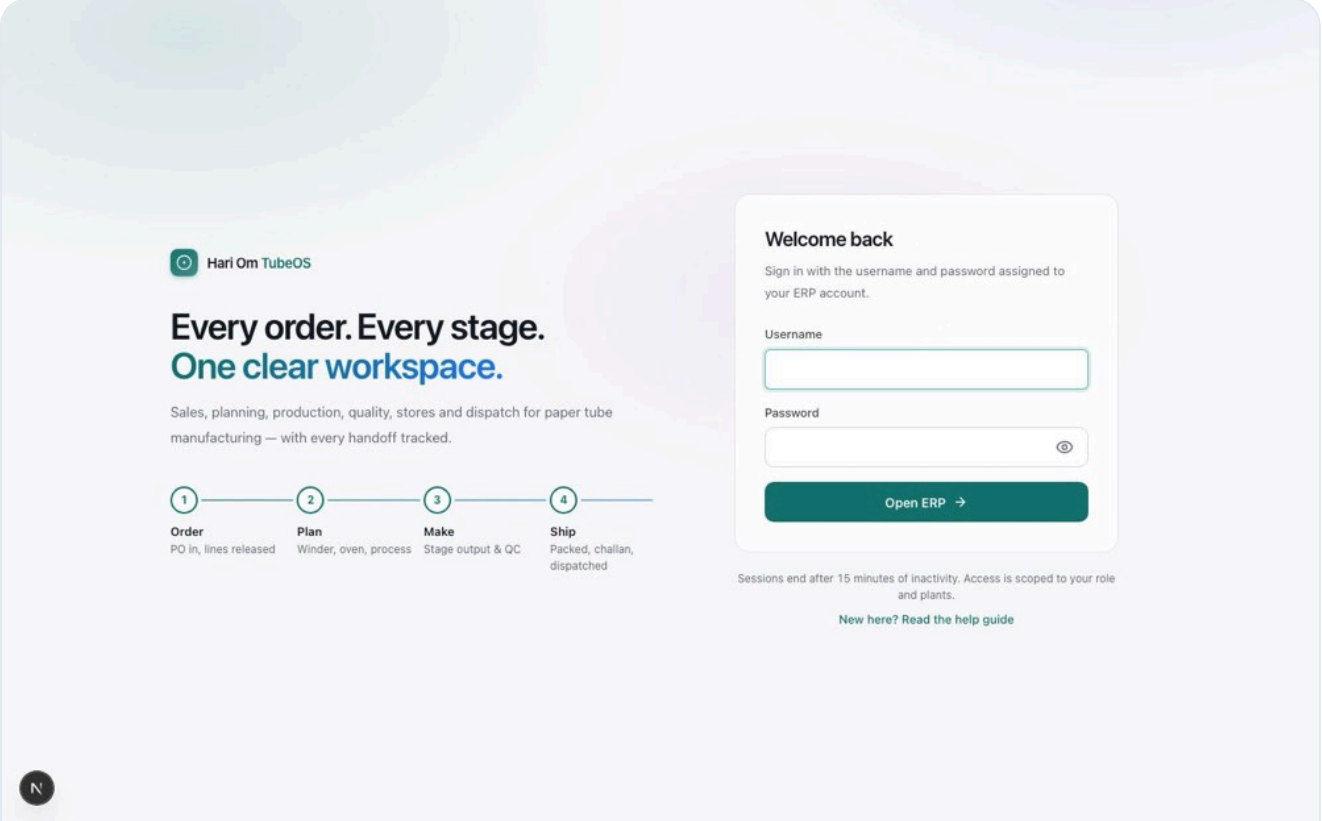



Figure: The sign-in page. Type your work email and password, then press Enter.

## Step by step

### How to sign in

1. Open the TubeOS address in Chrome (PC or phone).
2. Type your **Username** and **Password**. The password box has a show/hide eye.
3. Press **Open ERP**. While it works the button reads "Signing in...".
4. If the details are wrong, a red message shows under the password. Ask your Owner or Admin to reset it; TubeOS has no self-service password reset.
5. You land on your role's start page (table below). If you came from a scanned QR code or a link, that page opens instead.

## How to sign out

1. Click the **Logout** icon in the user box at the bottom of the sidebar (on a phone: menu button › **Logout**).
2. You return to a plain login page. Always sign out on a shared floor tablet; floor-form drafts saved on the device belong to your login only.

## How to find a page (Jump to workspace)

1. Click **Jump to workspace** or press **Cmd+K** (Mac) / **Ctrl+K** (Windows) on any page.
2. With an empty box you see **Quick jump**: your first ten pages.
3. Type a word, for example "inward", "quality" or "calendar". Results show only pages your role may open.
4. Press **Enter** to open the first result, or **Arrow Down / Arrow Up** to move and **Enter** to open. **Esc** closes the box.
5. If nothing matches: "No matching workspace in your role." The search only opens pages; it never creates or changes records.

## How to switch role (logins with more than one role)

1. Open the role box in the header (on a phone, at the bottom of the menu panel).
2. Pick the role. You go to that role's start page and the Dashboard and Inbox queues follow that role.
3. Your sidebar does not shrink: it always shows the pages of every role your login holds. Switching role never changes who you are; for example, you still cannot approve an order you entered yourself (unless you are Owner or Admin).

## How to pick one plant (Owner and Admin)

1. Click the plant switcher on the right of the header.
2. Under **Select Plant**, choose **Plant A** or **Plant B**. **All Visible Plants** is marked "read-only scope".
3. The page reloads in that plant. Check the name in the switcher before entering anything.
4. Other roles have no switcher: your login decides your plant. If a scanned label belongs to another plant your login may open, TubeOS switches for you and says "Switched to Plant B for this label."

## Why a page says "select one plant"

Stock, purchases, receipts, planning and approvals belong to one plant. When the Owner or Admin is in **All Visible Plants**, those pages show a message such as "Choose one plant", "Pick one plant in the top switcher before approving", "Select one plant before scheduling" or, in the Owner's Action center, "Purchase queues need one plant — pick it from the plant selector." Pick

the plant in the header and the page works normally. Reading lists across plants is fine; writing is not.

### How to set light, dark or System appearance and table density

1. For a quick change, click the **sun / moon** button. Light becomes dark, dark becomes light.
2. For the full choice, click **Appearance settings** (sliders icon). The panel says "Saved on this device only."
3. Under Theme choose **System** (follow the phone or PC setting, changing live when it changes), **Light** or **Dark**. New devices start on System.
4. Under **Table density** choose **Comfortable** (more space) or **Compact** (more rows on screen) on pages that support it.
5. Click outside the panel or press **Esc** to close it.
6. Job cards, spec print views and anything you print always stay white paper, even in dark mode.

### How to open help for the page you are on

1. Click the **book icon** at the far right of the header (hidden on very narrow phones).
2. The Guide opens on the guide for that page, with its working sequence, field rules and control checks.

## Rules the system enforces

- Session ends after 15 minutes without activity (automatic). The message reads "Your secure session ended after 15 minutes without activity. Sign in again to continue." If your access was changed, you see "Your session expired or your access was updated. Please sign in again."
- Pages your role cannot use are not in your sidebar or search. A direct link to such a page shows that it is not open to your role (BLOCKS).
- All Visible Plants is read-only; writing needs one plant (BLOCKS the write with a "pick one plant" message).
- Theme and density are stored in this browser only; another device keeps its own setting (automatic).
- Each role lands on its own page after sign-in or role switch (automatic).
- **Reasons are picked, not typed.** Wherever a screen asks why (a short close, a rejection, a hold, a cancel, a correction), you choose a code from a list and may add a note. Codes with OTHER need a note of at least 5 characters. Missing codes are added in Masters › Reason codes by a Plant Manager, Admin or the Owner (BLOCKS a save without a code).

- **Operators are picked from your department.** Floor forms list only the active employees of the stage's department in Masters › Employees (BLOCKS anyone else).

## Start page by role

| Role | Start page after sign-in |
|---|---|
| Owner | Owner command centre (Dashboard with Company KPIs and Action center) |
| Admin | Admin workspace (System health) |
| Plant Manager | Job cards |
| Planner | Planning board, Winder |
| Sales | Orders (sales orders) |
| Dispatch | Dispatch desk |
| Quality Control | QC desk |
| Inward QC | Incoming QC |
| In-process QC | QC desk (stage QC) |
| Store | Stock overview (Inventory) |
| GRN / Goods Receipt | Goods inward |
| Raw Material Issue | Reel & coil issue |
| Operator | Dashboard ("My work") |
| Watchman (gate) | Gate desk (the only page this login opens) |

## Which roles see which sidebar pages

Every role except Watchman sees **Dashboard**, **Inbox**, **Guide**, **Purchase requisitions** and **Stock counts & book**. A **Watchman** login sees only the **Gate** desk. The Owner and Admin see every page; **Production season** is the Owner's only. The other roles see these pages as well:

| Role | Extra sidebar pages |
|---|---|
| Sales | Orders, Job Cards, QC desk, Holds & inspections, Customer complaints, Dispatch, Intelligence, Sales pulse, Customer 360, Dispatch & SLA |

| Role | Extra sidebar pages |
| --- | --- |
| Planner | Orders, Job Cards, Job card manager, Planner, Log output, Purchase orders, RM inward calendar, Expected arrivals, Create purchase order, Purchase reports, Issue history, Inventory, Genealogy, Stock Alerts, Intelligence, Operations command, Throughput, Planning performance, Plan vs actual, Employee performance, Inventory intelligence, Slitting report |
| Plant Manager | Orders, Job Cards, Job card manager, Planner, Log output, Log QC, Month-end close, QC desk, In-process QC, Holds & inspections, Customer complaints, Purchase orders, RM inward calendar, Expected arrivals, Create purchase order, Invoice differences, Debit notes, Purchase reports, Goods inward, GRN register & labels, Doc Vault, Gate (Gate desk, Bills inbox, Gate register), Reel & coil issue, Material issue, Issue history, Inventory, Genealogy, Manual FG, Stock alert policies, Stock Alerts, Intelligence, Operations command, Throughput, Planning performance, Plan vs actual, Employee performance, Sales pulse, Inventory intelligence, Supplier & reels, Slitting report, Quality analytics, Tooling ledger |
| Operator | Job Cards, Log output, Log QC |
| Quality Control | Job Cards, Log QC, Doc Vault, QC desk, Incoming QC, In-process QC, Holds & inspections, Customer complaints, Material standards, Process stage rules, Intelligence, Quality analytics |
| Inward QC | QC desk, Incoming QC, Holds & inspections, Material standards, GRN register & labels, Doc Vault, Quality analytics |
| In-process QC | Job Cards, Log QC, QC desk, In-process QC, Holds & inspections, Quality analytics |
| Store | QC desk, Holds & inspections, Customer complaints, Purchase orders, RM inward calendar, Expected arrivals, Create purchase order, Invoice differences, Purchase reports, Goods inward, GRN register & labels, Doc Vault, Reel & coil issue, Material issue, Issue history, Inventory, Genealogy, Manual FG, Stock Alerts, Dispatch, Intelligence, Inventory intelligence, Supplier & reels, Slitting report |
| GRN / Goods Receipt | RM inward calendar, Expected arrivals, Goods inward, GRN register & labels, Doc Vault, Issue history, Inventory, Genealogy |
| Raw Material Issue | Reel & coil issue, Material issue, Issue history, Inventory, Genealogy, Slitting report |
| Dispatch | Orders, Job Cards, QC desk, Holds & inspections, Customer complaints, Genealogy, Dispatch, Doc Vault, Intelligence, Dispatch & SLA |

| Role | Extra sidebar pages |
|---|---|
| Watchman (gate) | Gate desk only |
| Owner, Admin | Everything (plus Gates & QR posters, Specifications, Packing setup, Masters, System, Audit, PO approvals, Opening stock, RM Costing, Owner daily pack, Employee performance) |

Seeing a page does not always mean you can change everything on it. For example, Sales can open Dispatch but only the Owner, Admin and Dispatch make a challan.

## Sample

Ramesh is a Planner who also covers Sales on Saturdays, so his login has both roles.

- He signs in and lands on the **Planning board** (Planner comes first).
- He opens the role box and picks **Sales**; TubeOS opens **Orders**.
- He presses Ctrl+K, types "calendar" and opens **RM inward calendar**, which he sees because his Planner role has it.
- At 1:30 pm he leaves for lunch. At 1:50 pm the page asks him to sign in again; after signing in he is back on the RM inward calendar.

## Common questions

**? A form asks "Choose why". What do I pick?**

The reason that fits best from the list. If none fits, pick the OTHER code and write a short note. Ask a Plant Manager, Admin or the Owner to add a new code if it comes up often.

**? I scanned a box label. What opens?**

The box page: its pcs, where it is (packed, dispatched or kept as surplus), its QC flags and its job card. Phone cameras and the in-app **Scan** both work.

**I cannot find a page my colleague uses.**

It belongs to a role your login does not have. Ask the Owner or Admin to add the role in System › Users.

**The plant switcher is missing.**

Only the Owner and Admin can switch plants. Your plant comes from your login.

**The page says "pick one plant" but I only have one plant.**

You are probably in **All Visible Plants** (Owner/Admin). Choose Plant A or Plant B in the switcher.

**Text looks wrong in dark mode.**

Click the sun/moon button to go back to light, or set Appearance › **Light**. Tell the Admin which page looked wrong.

**My phone keeps signing me out.**

That is the 15-minute safety rule. Signing in again returns you to the same page.

**What does the amber "Close Sep" chip mean?**

September has ended but has not been closed. The Owner closes it in Month-end close after the count is approved.

**I switched role but the sidebar did not change.**

The sidebar always shows the pages of all your roles. The role switcher changes your start page and work queues.

## Related chapters

- Welcome to Hari Om TubeOS: the big picture
- Dashboard and inbox
- Using TubeOS on a phone
- A day in the life

START HERE, SALES AND DESIGN


# Dashboard and inbox

**What it is:** The Dashboard is your start-of-day view (figures, alerts and shortcuts for your role); the Inbox is your live work queue plus every handoff, hold and approval that involves you.
**Who uses it:** Every role. The Owner, Admin and Quality Control get their own versions.
**Where:** Sidebar > Overview > Dashboard (/dashboard) and Sidebar > Overview > Inbox (/inbox); the bell in the header

## At a glance

- **Dashboard** looks different per role. Owner: **Company KPIs** and **Action center**. Admin: **System health**. Quality Control: the QC desk itself. Every other role: a "Waiting on you" strip, figures for that role, "Latest for you" and shortcuts.
- Every tile and row is a link to the page behind the number. Fix the work there, then come back: the number moves.
- A figure that could not be loaded shows **Not reported** ("Source unavailable — not shown as zero"). "..." means it is still loading. Never read either as zero.
- The **Inbox** has your role's live counts on top and every notification below, filtered by **Everything / Needs action / Unread** and by area. **Mark all read** clears the unread count.
- **Some notifications carry action buttons** you can press right in the Inbox or the bell: **Make debit note** / **Skip...** / **Open bill** (weight short), **Send in** / **Ask to wait** / **Not available** (a visitor for you), **Make GRN** (material at the gate), **Link challan** (goods out at the gate), **Open bill** (expense bill to file). The result of the button is written on the notification.
- The **bell** is a small inbox you can open from any page.

## The flow

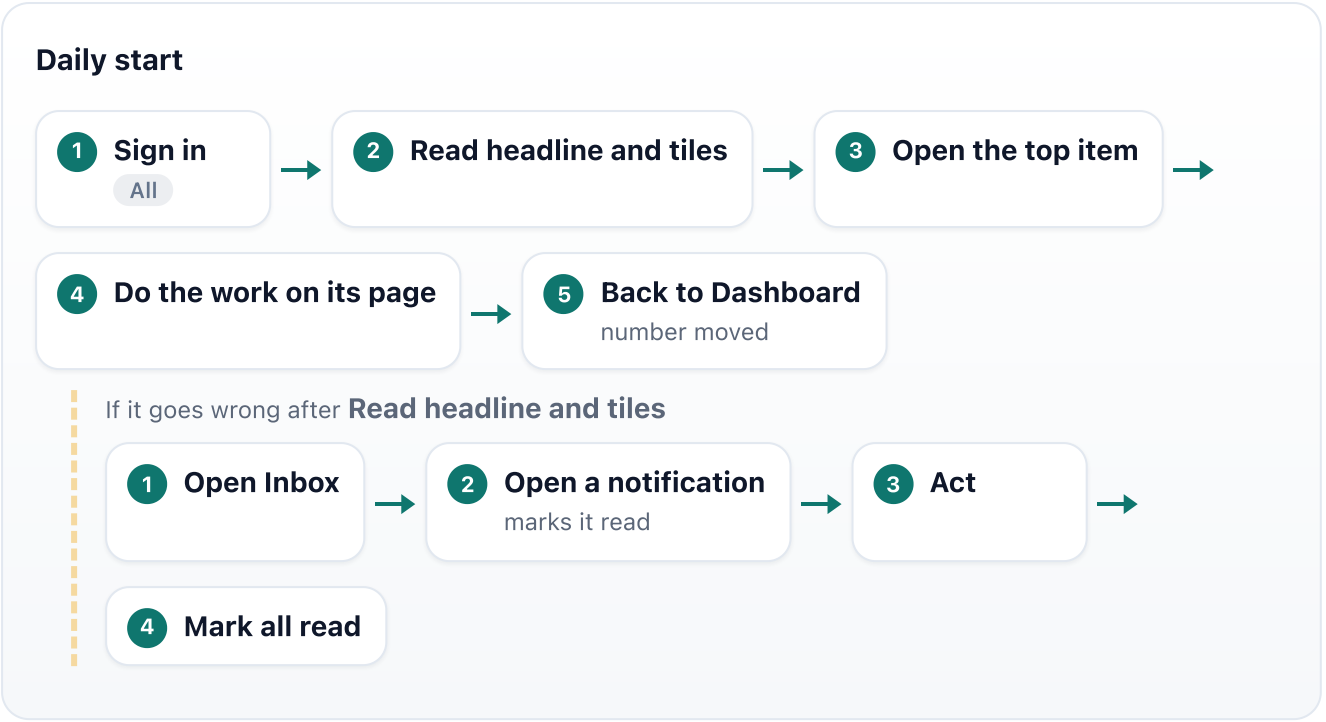


Start with the one-sentence headline and the "Waiting on you" counts. Open the most urgent item, finish it on its own page, and come back. Use the Inbox for handoffs from other desks (a release, a schedule, a QC decision, a PO to approve).

## Screen tour

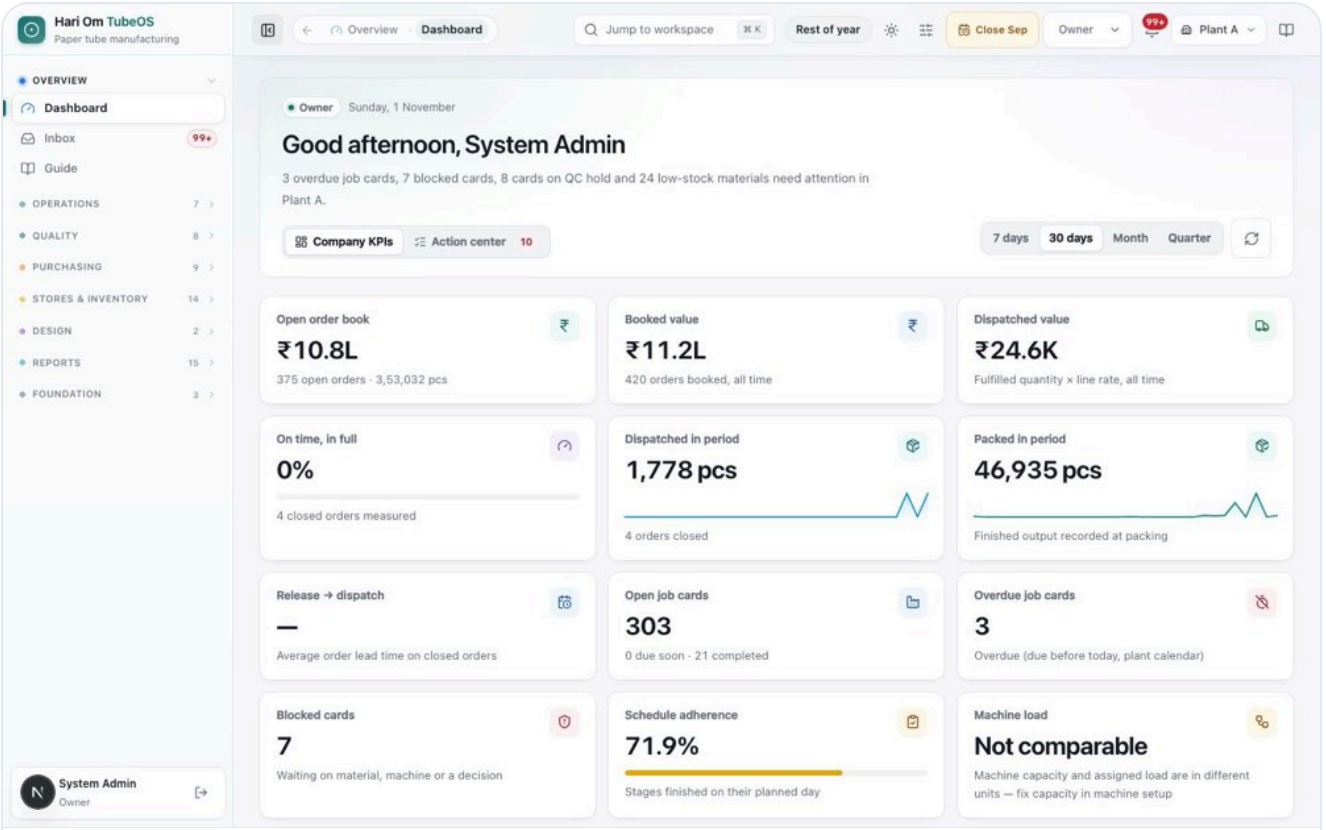



Figure: Owner start page, Plant A, 31 October. Headline: "3 overdue job cards, 7 blocked cards, 8 cards on QC hold and 23 low-stock materials need attention in Plant A." Tabs Company KPIs and Action center (10). Period buttons 7 days, 30 days (selected), Month, Quarter and a refresh button. Tiles: Open order book ₹10.8L, Booked value ₹11.1L, Dispatched value ₹16.2K, On time in full 0%, Dispatched in period 893 pcs, Packed in period 45,456 pcs, Release → dispatch —, Open job cards 303, Overdue job cards 3, Blocked cards 7, Schedule adherence 71.1%, Machine load "Not comparable".

What you see:

1. **Role badge and date**: for example **Owner** · Saturday, 31 October.
2. **Greeting and headline**: counts overdue job cards, blocked cards, cards on QC hold, late orders and low-stock materials in the plant shown. If nothing is late: "Nothing is late or blocked in Plant A."
3. **Company KPIs / Action center** (Owner only): KPI tiles, or the decision queues.
4. **Period** (7 days, 30 days, Month, Quarter): changes the "in period" figures and charts. Default 30 days.
5. **Refresh**: reloads every figure.
6. **KPI tiles**: see the table under Rules.
7. Further down (Owner): **Operating health** gauges (On time in full, Schedule adherence, QC pass rate, Order book delivered = dispatched ÷ booked value), charts (**Order flow**,

**Production output by stage**, **Order book by status**, **Open job cards by stage**, **Where the order book stands**, **Where open work is**, **Machine load**, **Inventory mix**, **Largest open orders by customer**, **Inspection results**), the **Needs attention** list (late orders, blocked cards, QC holds, low stock), **Latest for you** (last five notifications) and shortcuts.

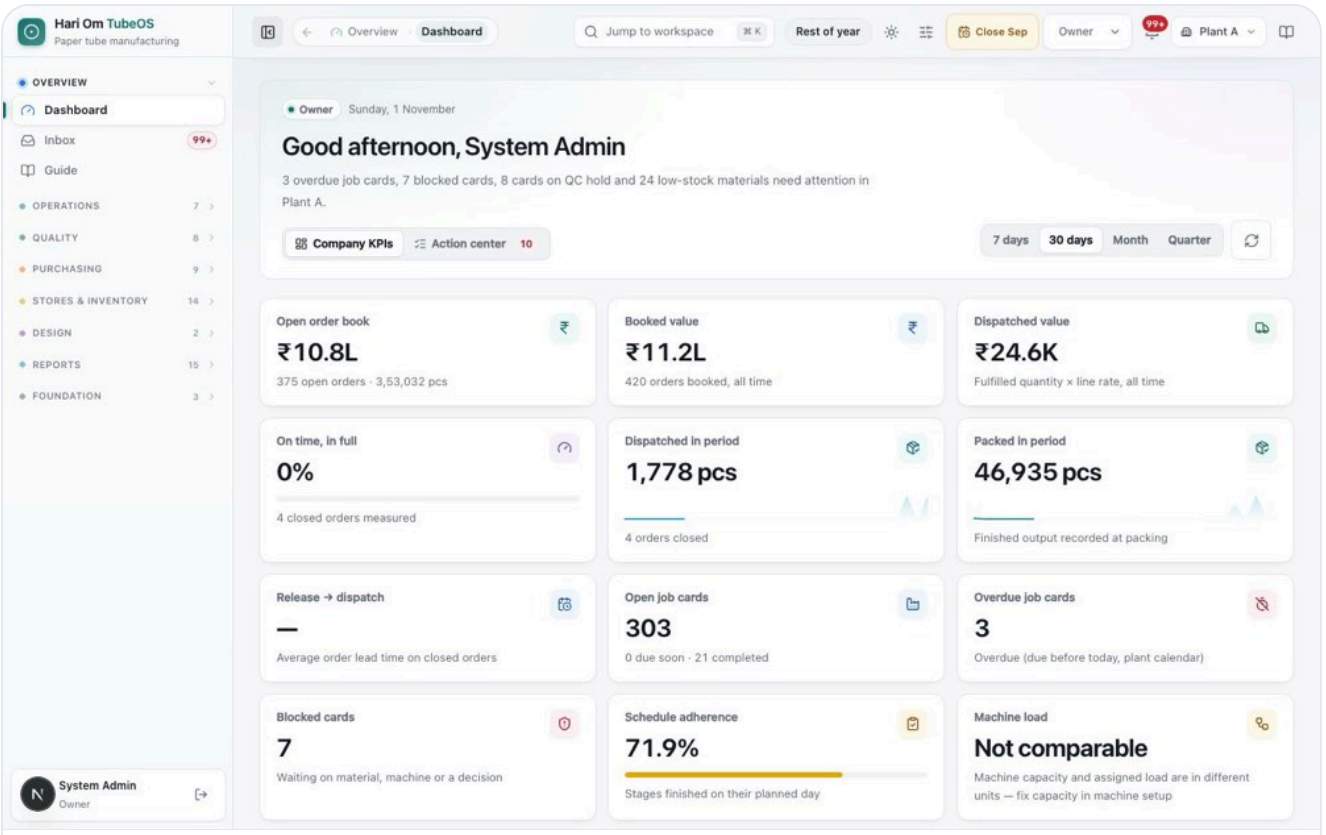



Figure: The same dashboard a moment earlier. Tiles whose figures are still coming show "..." (for example On time in full, Dispatched in period, Packed in period, QC pass rate, Inventory value), while tiles already loaded show numbers (Open job cards 303, Overdue 3, Blocked 7, Open QC holds 8).

What you see:

1. **"..."** means loading. Wait or press refresh.
2. **Not reported** (not shown here) means that source failed; the tile never shows a false zero.

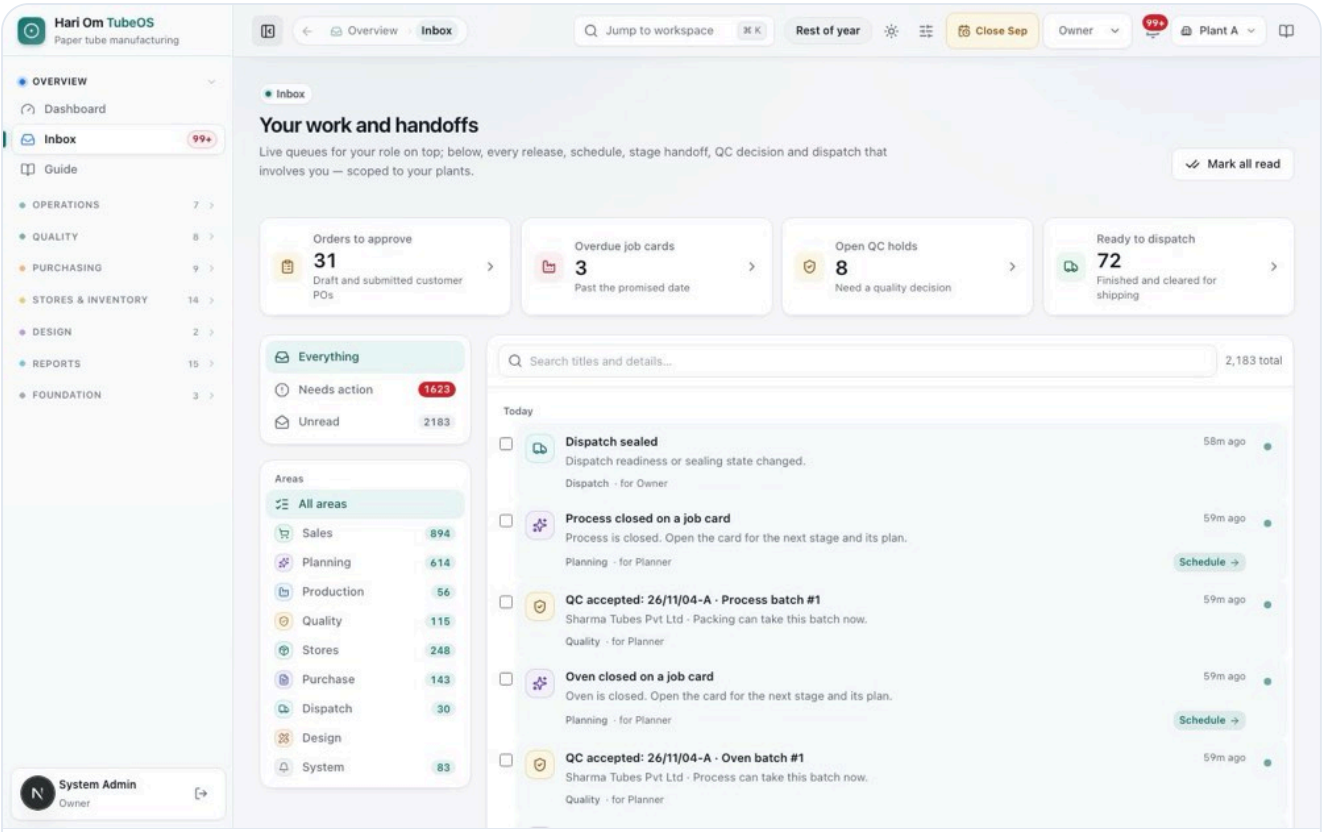



Figure: Inbox, "Your work and handoffs". Top: Mark all read. Four live tiles for the Owner: Orders to approve 31, Overdue job cards 3, Open QC holds 8, Ready to dispatch 71. Left: views Everything, Needs action (1593), Unread (2133) and Areas (Sales 888, Planning 596, Production 56, Quality 101, Stores 248, Purchase 142, Dispatch 24, Design, System 78). Right: search box, "2,133 total", and notifications grouped under Today, such as "Purchase order approved: RP-PM/68" and "1 RM arrival waiting for your approval" with an Approve button.

What you see:

1. **Work queue tiles**: live counts for your role (not notifications). Click to open the list behind them.
2. **Views**: **Everything**, **Needs action** (critical and action items), **Unread**.
3. **Areas**: Sales, Planning, Production, Quality, Stores, Purchase, Dispatch, Design, System, with unread counts.
4. **Search**: "Search titles and details..." (try a PO number, product code or job card).
5. **Notification row**: icon of its area, title, detail, area and "for ", time ("11h ago"), a dot when unread, and an action button such as **Approve**, **Review**, **Inspect**, **Schedule** when your role can do it.
6. **Tick box** on each unread row, for **Mark read** on several at once.

## Step by step

### How to read the Owner dashboard and act

1. Read the headline. Each count in it matches a tile below.
2. Click a tile to open its page: **Open order book** → Orders; **Overdue job cards** → Job cards filtered to overdue; **Open QC holds** → QC desk; **Low-stock materials** → Stock alerts; **Ready to dispatch** → Dispatch desk.
3. Scroll to **Needs attention**. Each row says the area (Late order, Blocked, QC hold, Low stock), the record and a short reason. Click to open it.
4. Click **All exceptions** to open the Planning overview.

### How to work the Owner Action center

1. Click the **Action center** tab (its red number counts rows needing attention).
2. Each lane shows a count and up to four rows: **Sales orders to approve**, **Purchase orders to approve**, **RM arrivals to approve**, **Blocked & overdue job cards**, **Quality holds**, **Invoice differences**, **GRNs waiting for invoice**, **Stock alerts**, **Expired sales orders**.
3. A lane that reads "Nothing waiting" turns green.
4. Purchase lanes need one plant. In All Visible Plants they say "Select a plant to see this queue"; pick the plant in the header.
5. Click a row or the lane's link (for example **Open PO approvals**) to decide it there.

### How to use the Admin workspace

1. The Admin lands on **System health**: status banner (for example "System healthy, 6 of 6 service probes passing", with the time last measured), tiles **System Status**, **Max Probe Latency**, **Failed Probes**, **Active Accounts**.
2. Below: services table, host health, recent audit activity, background jobs, and **Admin control points** (Role matrix, Usage limits, Background jobs, Reason codes, Employees, Shifts, Plant calendar, Job card manager and others).
3. If a probe fails, tell the IT contact; do not change data to "fix" a red tile.

### How to use the dashboard as any other role

1. Click **Dashboard** in the sidebar.
2. **Waiting on you**: four tiles for your role (table below). Click one.
3. Figures: only those your role may read (for example Store sees Inventory value, Low-stock materials, Ready to dispatch, Open QC holds).
4. Floor and desk roles (Operator, Store, GRN, RM issue, QC desks, Sales, Dispatch) see **Your work**: shortcuts such as **Log output**, **Log QC**, **Job cards**, **Scan a label**. Planner and Plant

Manager see **Needs attention** instead.
5. **Latest for you**: the last five handoffs. Click one to open it; it is marked read.

## How to work the Inbox

1. Open **Inbox** from the sidebar, or the bell › **Open full inbox**.
2. Pick **Needs action** to see only items that need you.
3. Click a row to open its page; the row is marked read.
4. Use the small read/unread button on a row (**Mark as read** / **Mark as unread**) to keep something for later.
5. Tick several unread rows and press **Mark read**, or press **Clear** to untick.
6. Press **Mark all read** (top right) to clear everything. It is greyed out when nothing is unread.
7. Scroll to the bottom and press **Load older** to see more (up to 200 at a time). The list refreshes itself every 30 seconds.

## How to use a notification's action buttons

1. A notification with buttons shows them under its text. Buttons that do something (for example **Make debit note**, **Send in**) are filled or outlined; links that only open a page (**Open bill**, **Make GRN**, **Open list**) are underlined words.
2. Press the button. A button that needs a reason (for example **Skip...**) first asks for the reason from its list, then **Skip**.
3. The buttons are replaced by the result, for example "Debit note DN-261108-001 drafted" (green) or the reason it did not go through (red, with "Try ... again"). The result is saved on the notification, so others see what was done.
4. The server checks your role and plant. If someone already acted (for example the weight case was decided from the Weight differences page), the result says so.

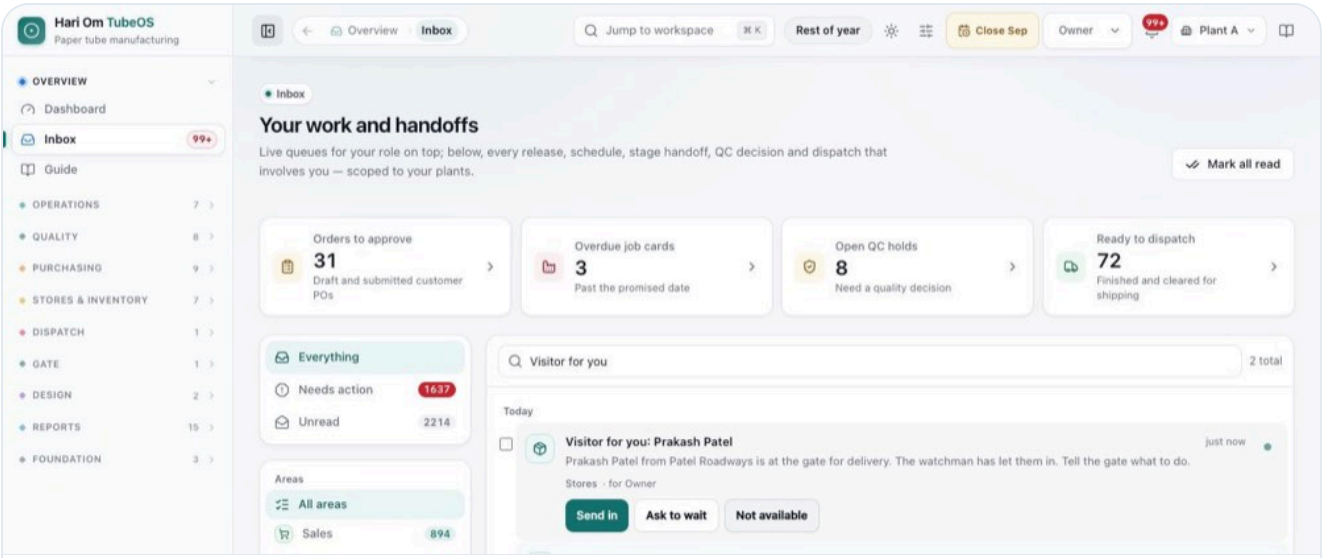



Figure: A "Visitor for you" notification in the Inbox: "Prakash Patel from Patel Roadways is at the gate for delivery. The watchman has let them in. Tell the gate what to do." with **Send in**, **Ask to wait** and **Not available**.

### How to use the bell

1. Click the bell. The pop-up shows "N unread · N urgent" or "You're all caught up".
2. **Waiting on you** · shows your first four work queue counts.
3. Tabs: **For you**, **Action · N**, **Unread**.
4. Click a notification to open it, or **Mark all read**. **Open full inbox** goes to the Inbox page.

## Rules the system enforces

- Numbers come from the same server totals the module pages use, so they always agree with the list behind them (automatic).
- A failed source shows **Not reported**, never zero; a loading tile shows "..." (automatic).
- You see only figures, rows and actions your role may use. A notification that links to a page you cannot open goes to the Inbox and is marked "for your information"; its action button is hidden (automatic).
- Opening a notification marks it read (automatic).
- Owner purchase lanes need one plant (BLOCKS the lane in All Visible Plants).
- The bell badge turns red when there is a critical item; the Inbox badge in the sidebar does the same (automatic).

## Owner KPI tiles and what each number means

| Tile | Meaning |
|---|---|
| Open order book | Rupee value of orders still open; below it, open orders and open pcs. |
| Booked value | Value of all orders booked, all time (cancelled orders not counted). |
| Dispatched value | Dispatched quantity × line rate, all time. |
| On time, in full | Share of orders closed in the period that shipped complete and on time; "No closures" when none closed. |
| Dispatched in period | Pcs dispatched in the period; orders closed. |
| Packed in period | Pcs recorded as finished output at packing in the period. |
| Release → dispatch | Average days from release to dispatch on closed orders. |
| Open job cards | Released, not finished; "due soon" and completed counts below. |
| Overdue job cards | Due before today (plant calendar). |
| Blocked cards | Waiting on material, machine or a decision. |
| Schedule adherence | Share of stages finished on their planned day. |
| Machine load | Assigned load against rated capacity; "Not comparable" when machine capacity is set in a different unit (fix in System › Machines). |
| QC pass rate | Share of inspections passed; checked and failed counts. |
| Open QC holds | Job cards stopped for a quality decision. |
| Inventory value | RM, WIP and FG value. |
| Low-stock materials | Materials below their stock policy; overstocked count below. |
| Ready to dispatch | Finished and cleared job cards. |

| Tile | Meaning |
|---|---|
| Expired sales orders | Open orders past their SO expiry date; how many expire within 7 days. |
| On customer hold | Pcs held on customer hold; POs held and closed. |

### Work queue tiles by role

| Role | Tiles |
|---|---|
| Owner, Admin | Orders to approve, Overdue job cards, Open QC holds, Ready to dispatch |
| Sales | Orders to approve, Ready to release, Overdue job cards, Ready to dispatch |
| Planner | Ready to release, Due in the next 3 days, Overdue job cards, Blocked cards |
| Plant Manager | Overdue job cards, Blocked cards, Open QC holds, Ready to dispatch |
| Quality Control | Open QC holds, Blocked cards, Due in the next 3 days |
| Dispatch | Ready to dispatch, Overdue job cards |
| Store | Open job cards, Due in the next 3 days, Ready to dispatch |
| Inward QC | Open QC holds |
| GRN | Open job cards |
| RM issue, Operator, In-process QC | Due in the next 3 days, Open job cards |

A tile your role cannot count reads **Open the list** instead of a number.

## Sample

Monday 9:00, the Owner opens TubeOS:

- Headline: "2 overdue job cards, 1 card on QC hold and 4 low-stock materials need attention in Plant A."

- Action center: **Sales orders to approve 3** (SO/26/10/418 Sharma Tubes Pvt Ltd · draft · 5,000 pcs), **Purchase orders to approve 1** (RP-PM/70 Bharat Paper Mills · revision 1 · ₹4,12,500), **RM arrivals to approve 2** (Kraft 300 GSM · 4 Nov · 2,500 kg).
- She approves the SO from its order page, the PO in PO approvals and the arrivals on the RM inward calendar. Back on the dashboard the three lanes show "Nothing waiting".
- Inbox: **Needs action 12**. She opens "Purchase order awaiting approval: RP-PM/70" (already done, so it is just marked read) and presses **Mark all read**.

## Common questions

**A tile says "Not reported". Is the figure zero?**

No. That source did not answer. Press refresh in a minute; the list page shows live status meanwhile.

**Why do I not see Company KPIs?**

Only the Owner has the KPI and Action center tabs. Other roles see figures for their own work.

**Why does clicking Dashboard take me to the QC desk?**

The Quality Control role's dashboard is the QC desk.

**I marked a notification read by mistake.**

Click its read/unread button to **Mark as unread**.

**The Inbox says 2,000 unread. Do I have to open each?**

No. Work the **Needs action** view, then press **Mark all read**.

**A notification has no button.**

It is for information, or your role cannot do that action. Open it to read.

**I pressed Make debit note in the Inbox. Where is the debit note?**

It is a draft in Purchasing › Debit notes. The notification shows its number. Submit, approve and issue it as usual.

**? The button said it did not go through.**

Read the red message (for example the case changed or your role may not do it). Use "Try … again" or open the page from the link.

**? Purchase lanes say "Select a plant to see this queue".**

You are in All Visible Plants. Choose Plant A or Plant B in the header.

## Related chapters

- Getting started
- Using TubeOS on a phone
- Sales orders
- Job cards
- Reports
- A day in the life

START HERE, SALES AND DESIGN

# Using TubeOS on a phone

**What it is:** How to use TubeOS on a phone on the floor: scanning QR labels with the phone camera, the Scan page, and Log output, Log QC and Reel issue on a small screen.
**Who uses it:** Operators, Plant Manager, QC and In-process QC, Store, RM issue, GRN, Dispatch; anyone with a phone.
**Where:** Any page in the phone browser; Scan page (route /scan); Sidebar > Operations > Log output (/production/entry) and Log QC (/production/entry?mode=qc); Sidebar > Stores & inventory > Reel & coil issue (/inventory/reels/issue)

## At a glance

- Every new job card, reel/coil/lot label, finished-goods box label, rack label and tool label carries a QR that is a **web link**. The phone's own **Camera** app (iPhone too) opens it; no special app is needed.
- After sign-in, the QR opens **the page your role works on** for that item: a job card opens floor entry, a cleared reel opens Reel & coil issue for the store, a held lot opens Incoming QC for QC.
- If a label cannot be read, type its **AIT or AT, lot, rack, box or card number** on the Scan page (for example AIT 06243, B2610315-001 or 26/10/315).
- A **box label** opens the box page: pcs, part box or not, where the box is, QC flags and its job card.
- Floor forms save a **draft on the phone** as you type, for your login only, for 7 days.
- The phone shows the same pages as a PC, stacked in one column. Nothing is left out.

## The flow

### Scan a job card and log a run

1. **Point camera at card QR** — Operator
2. **Tap the link**
3. **Sign in** — if asked
4. **Card opens on its stage**
5. **Log output**
6. **Save run**
7. **Log QC** — 2 readings per check


If it goes wrong after **Sign in (if asked)**

1. **Label from other plant**
2. **Plant switched** — or "your login cannot open"

If it goes wrong after **Save run**

1. **Run waits for supervisor** — if your role cannot post
2. **Supervisor submits**

### What a scan opens

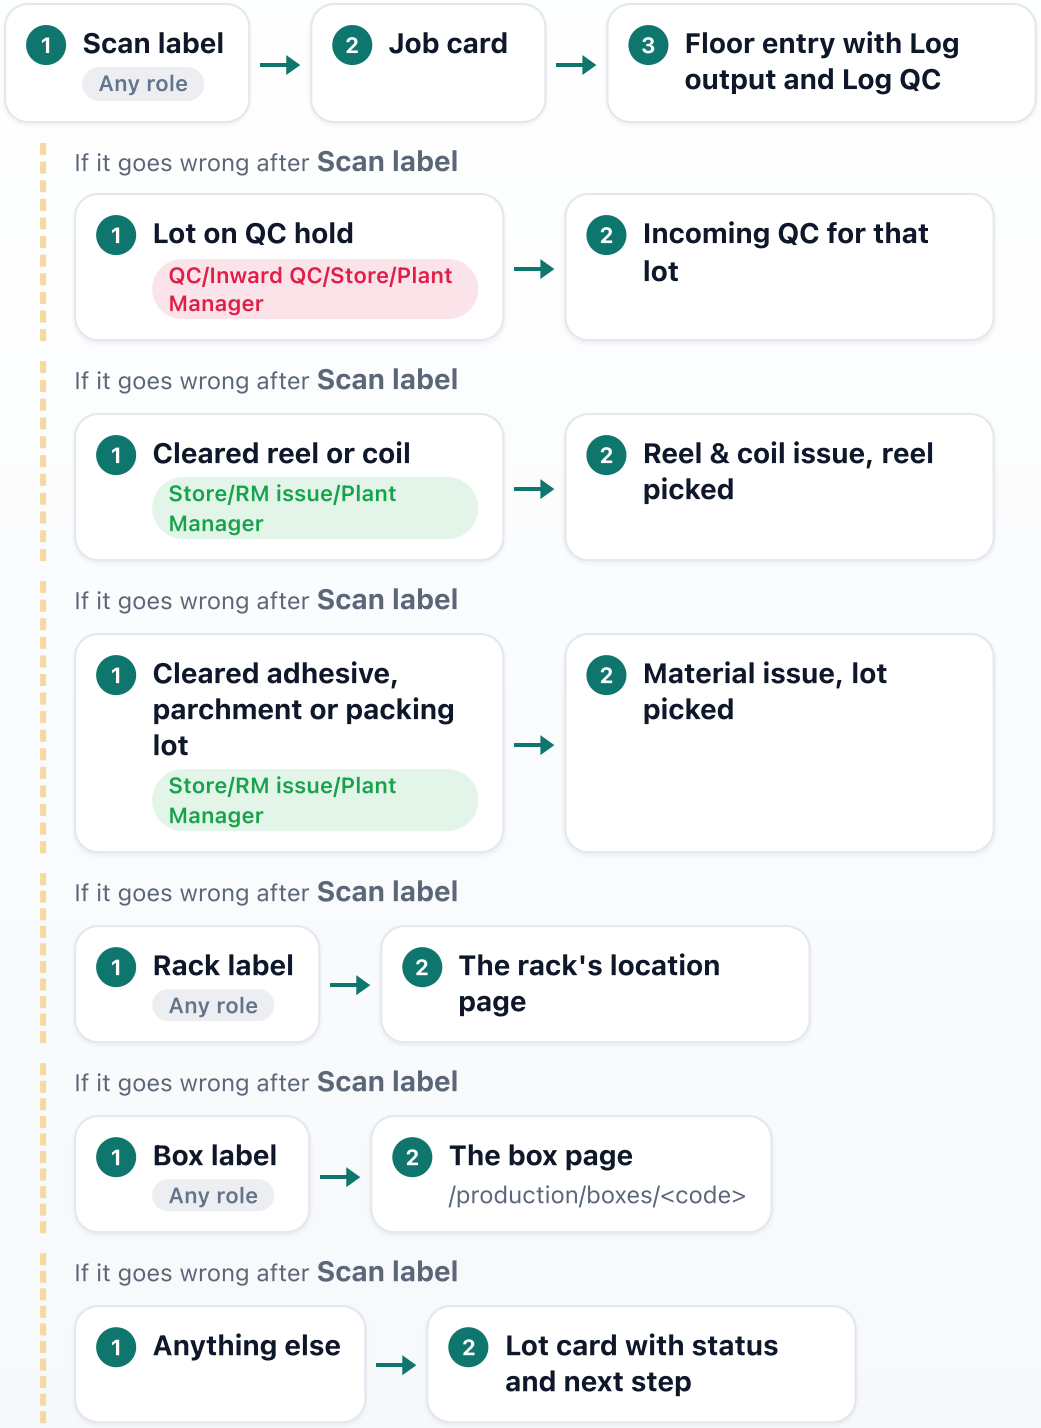


The QR link always goes through the Scan page, which checks the item, its plant and your role, then sends you on. Each page still checks your role, so a scan never opens a page your role cannot use.

## Screen tour

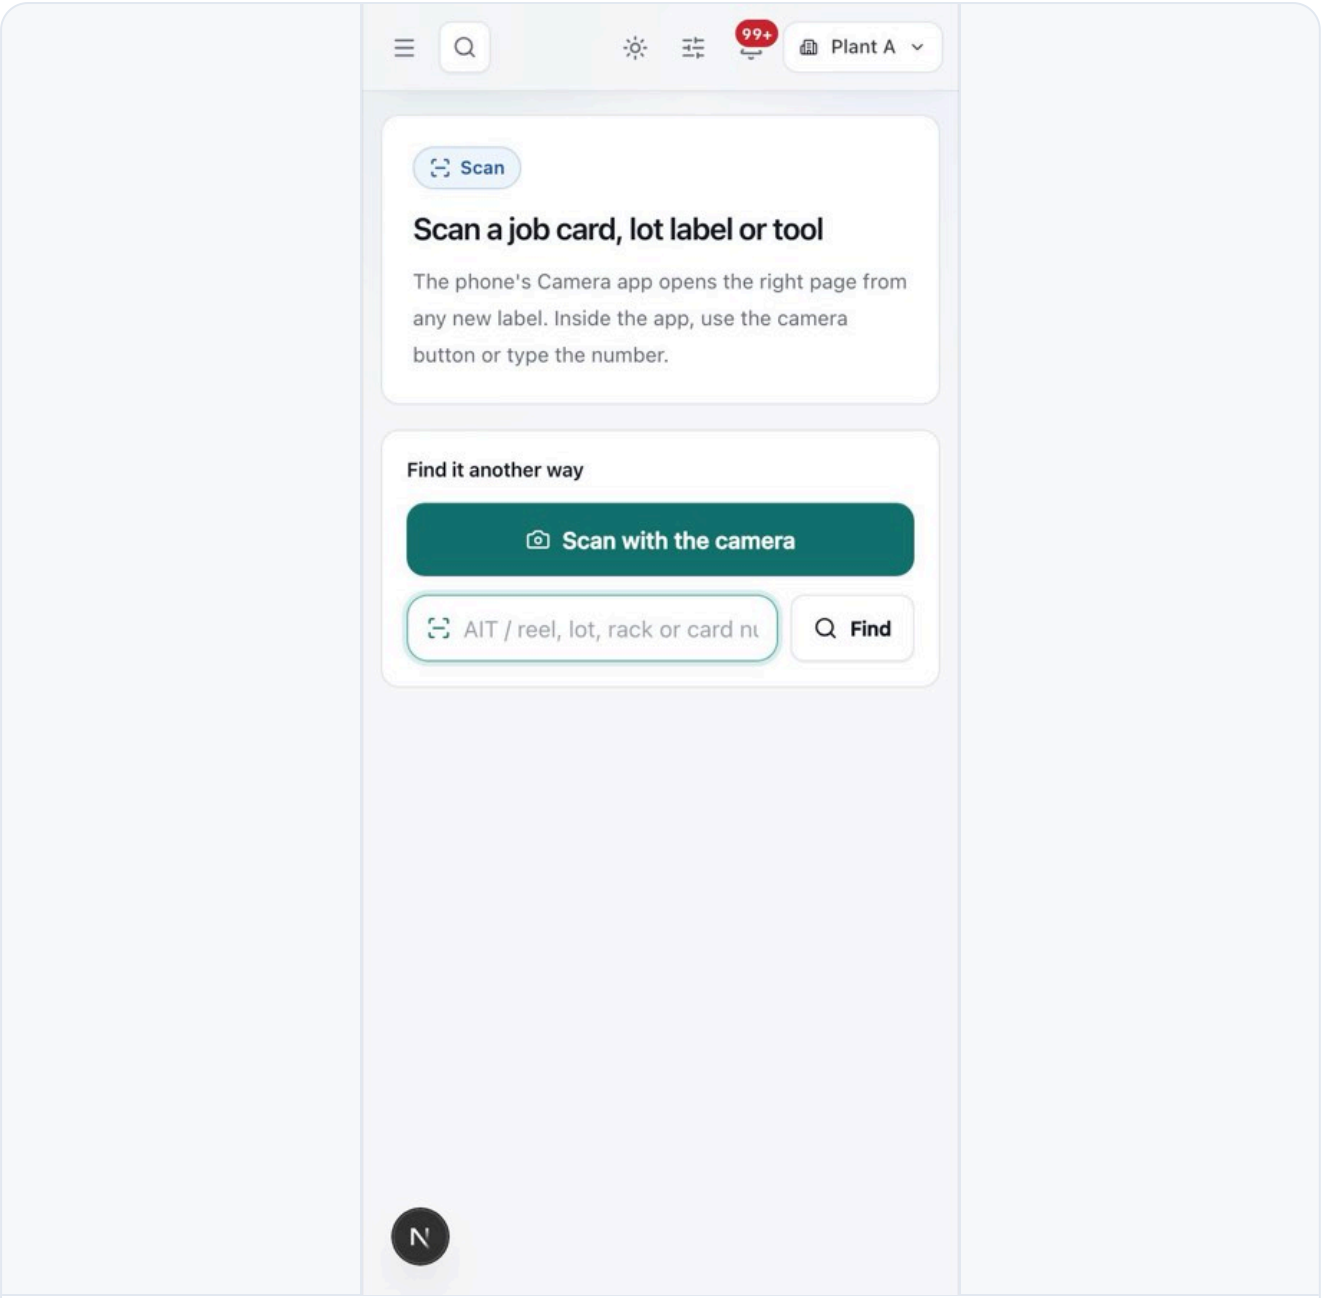



Figure: The Scan page on a phone. Top bar: menu, search, sun/moon, appearance, bell (99+) and Plant A. A card reads "Scan a job card, lot label or tool — The phone's Camera app opens the right page from any new label. Inside the app, use the camera button or type the number." Below, "Find it another way": a large green **Scan with the camera** button and a box "AT, lot, rack or card number" with **Find**.

What you see:

1. **Scan with the camera**: opens the camera inside TubeOS. Point it at the QR. The browser may ask for camera permission the first time; allow it.
2. **AT, lot, rack or card number** and **Find**: type the number printed under the QR (for example AIT 06243, an older AT-26-0412, a box code such as B2610315-001, 26/10/315 or a rack

code). "ait 6243" is read as AIT 06243. If nothing matches: "No reel, coil, lot, rack, box or job card has this number in your plant."

3. After a scan you see "Opening the job card..." or "Opening Reel & coil issue for AT-...", then the page.

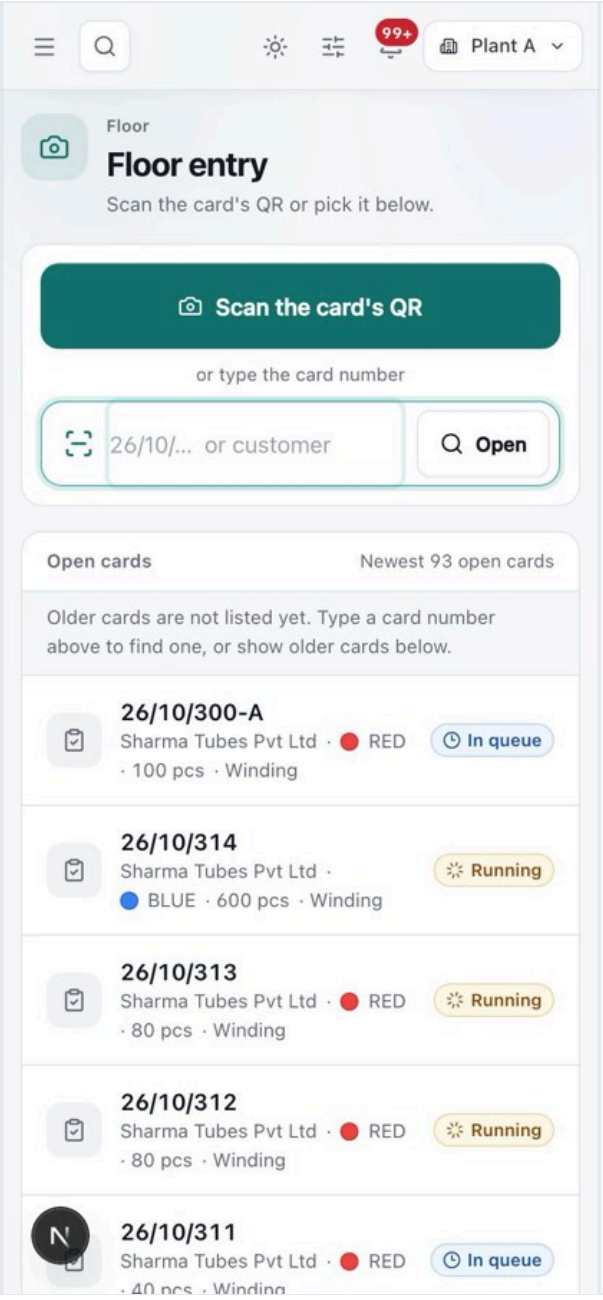



Figure: Floor entry (Log output) on a phone. Title "Floor entry — Scan the card's QR or pick it below." A large **Scan the card's QR** button, then "or type the card number" with a box "26/10/... or customer" and **Open**. Below, "Open cards — Newest 99 open cards" lists 26/10/314 Sharma Tubes Pvt Ltd · BLUE · 600 pcs · Winding (Running), 26/10/313 RED · 80 pcs (Running), 26/10/311 (In queue), 26/10/310 (Scheduled).

What you see:

1. **Scan the card's QR**: scans the printed job card.

2. **Card number box**: type 26/10/315; dashes, dots or spaces also work (26-10-315). A customer name opens that customer's first open card.
3. **Open cards**: newest open cards with customer, colour, pcs, stage and state. Older cards: type the number. A closed card says "Job card 26/10/290 is closed (completed). No more runs can be logged on it."

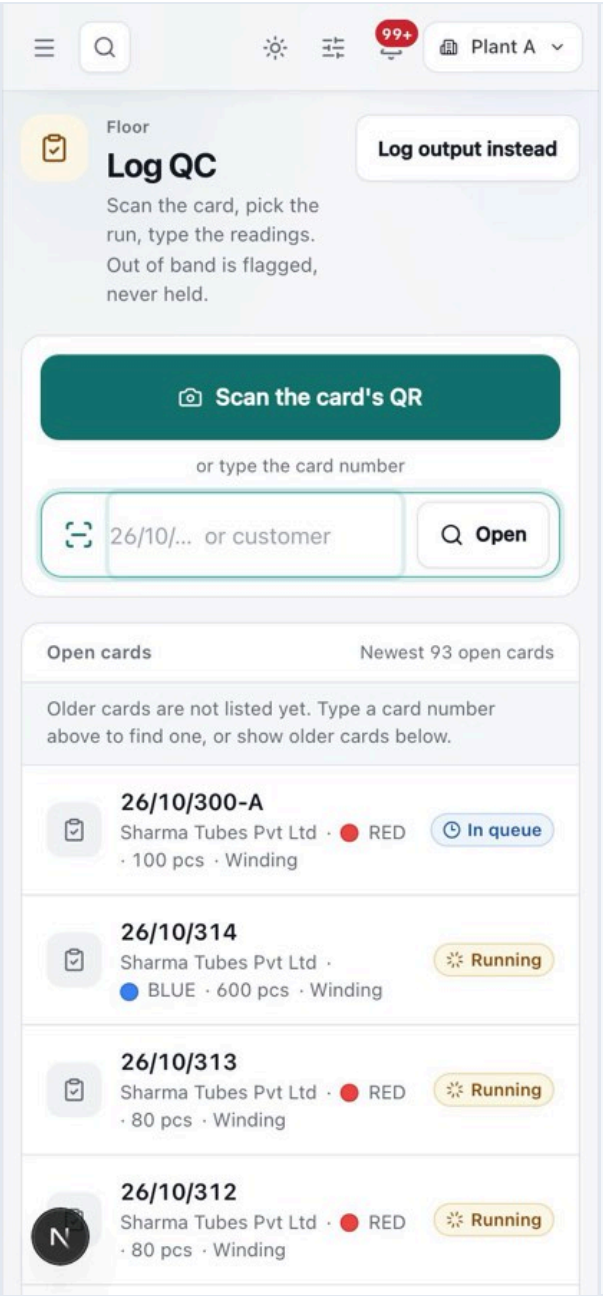



Figure: Log QC on a phone. Title "Log QC — Scan the card, pick the run, type the readings. Out of band is flagged, never held." A **Log output instead** button at the top right, then the same scan button, number box and open cards list.

What you see:

1. **Log output instead**: switches to output logging for the card you pick.
2. The card opens with the QC form ready for the stage and run.

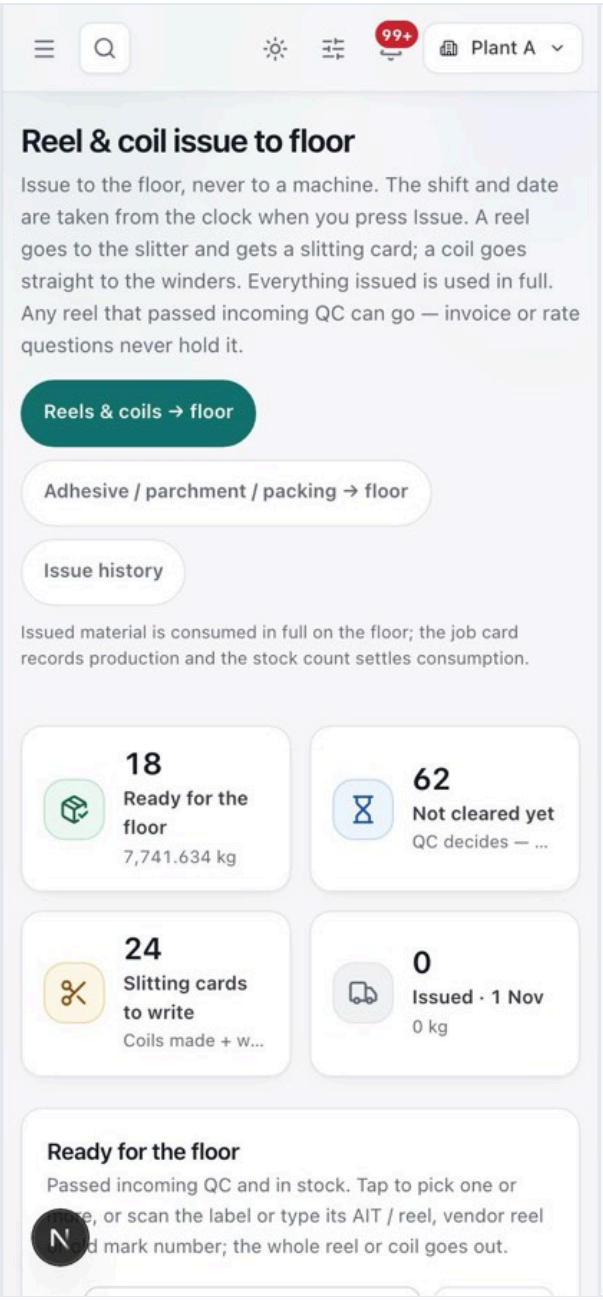



Figure: Reel & coil issue to floor on a phone. Text: "Issue to the floor, never to a machine. The shift and date are taken from the clock when you press Issue. A reel goes to the slitter and gets a slitting card; a coil goes straight to the winders. Everything issued is used in full." Buttons Reels & coils → floor (selected), Adhesive / parchment / packing → floor, Issue history. Tiles: 18 Ready for the floor (7,741.634 kg), 57 Not cleared yet, 24 Slitting cards to write, 0 Issued · 31 Oct.

What you see:

1. **Reels & coils → floor**, **Adhesive / parchment / packing → floor**, **Issue history**: the three issue screens.
2. **Ready for the floor**: passed incoming QC and in stock; tap to pick, or scan the label.
3. **Not cleared yet**: waiting for QC; cannot be issued.
4. **Slitting cards to write**: reels sent to the slitter whose card (coils made, wastage kg) is still due.

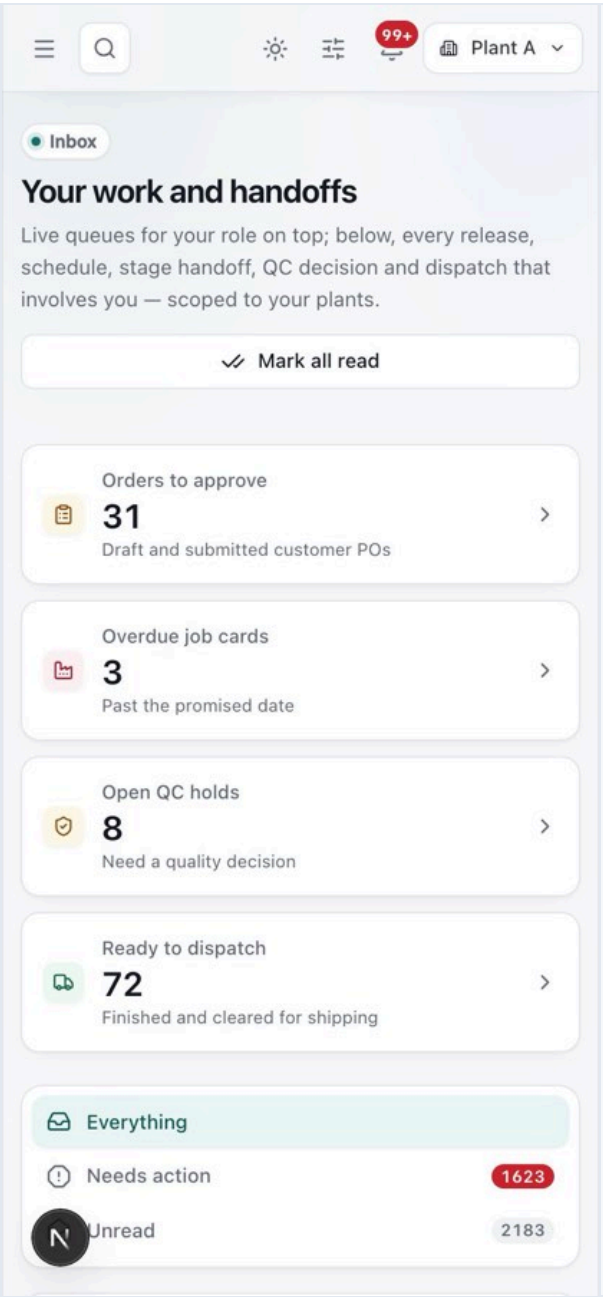



Figure: Inbox on a phone: "Your work and handoffs", a full-width **Mark all read** button, then the work tiles stacked (Orders to approve 31, Overdue job cards 3, Open QC holds 8, Ready to dispatch 71) and the views Everything, Needs action, Unread.

## Step by step

### How to open a job card with the phone camera

1. Open the phone's **Camera** app and point it at the QR on the printed job card.
2. Tap the link that appears.
3. If asked, sign in. TubeOS opens the same card after sign-in.

4. The card opens: number and state at the top (for example **26/10/315 · Running**), customer, size (76.4 x 81 x 150 mm), colour, and quantity ("3,000 pcs = 300 bamboo × 10").
5. Tap the stage tab you work on (**Winding**, **Oven**, **Process**). The stage box shows good quantity against target, rejected, runs waiting, what is ready from the previous stage, anything "waiting for Winding QC", and flagged runs.

## How to log output on the phone

1. On the card, tap **Log output**. If it is grey, the small text under it says why: "Card is closed", "Winding is closed", "Your role cannot log runs".
2. Fill the run (machine, operator, quantities, reason for any rejection). The form is the same as on a PC; see the job card and floor entry chapter for each field.
3. Save. If your role posts runs directly, the run counts at once. Otherwise the message says "Your run goes to the supervisor, who checks and submits it."
4. If you are interrupted, the typed numbers stay as a draft on the phone. Reopen the card and a bar offers the restored draft with a **Discard** option.

## How to log QC on the phone

1. On the card, tap **Log QC**. A badge shows how many runs wait ("2 waiting").
2. Or use the amber box **Still needs QC**: each run is listed ("Run 3 · 420 good · needs more readings") with its own **Log QC** button.
3. Type at least **2 readings for every required check**. A reading outside the band is saved and flagged; it does not stop the card.
4. Save. The run leaves the "Still needs QC" list once its readings are complete, and the next stage can take it.

## How to close a stage on the phone (Plant Manager, Owner, Admin)

1. Tap **Close Winding** (or the stage you are on) under the two big buttons.
2. If it shows a lock and "QC readings short", some runs still need readings; log them first.
3. Confirm in the close dialog. No supervisor name is asked; your login is recorded.

## How to issue a reel from the phone (Store, RM issue, Plant Manager)

1. Scan the reel's label with the Camera app. A cleared reel opens **Reel & coil issue** with the reel already picked.
2. Check the reel and press **Issue**. Shift and date come from the clock: Shift A 08:00–20:00, Shift B 20:00–08:00 (dated the day the shift started).
3. A reel goes to the slitter and appears under **Slitting cards to write**. A coil goes straight to the winders.
4. Adhesive, parchment and packing lots open **Material issue** instead.

### How to scan anything else

1. **Rack label**: opens the rack's location page for every role; the page shows the actions your role may use.
2. **Lot your role does not issue or inspect**: a lot card shows the item, plant, status in words, quantity left, received date, inward number, supplier, last QC and **Next step** (for example "Waiting for incoming QC — It cannot go to the floor yet. Ask QC to inspect it; once it passes, the store can issue it."). Links such as **Trace this reel** or **Open goods receipt P/26/014** appear when your role may use them.
3. **Tool label**: the tools register opens for the Owner and Admin only; others see "Tool T-0042" with a note to hand it to the tool room.

### How to move around on a phone

1. Tap the **menu button** (three lines) for the sidebar. The role switcher and **Logout** are at its bottom.
2. Tap the **search button** for Jump to workspace.
3. Tap **Scan another card** at the bottom of a card to go back to the picker, or **Open the full job card** for the whole card.

## Rules the system enforces

- A scan never opens a page your role cannot use; each page keeps its own role check (BLOCKS).
- Floor entry opens for Operator, Plant Manager, QC, In-process QC, Planner, Owner and Admin. Others see "This account cannot open floor entry." (BLOCKS)
- Issue desks refuse lots not cleared by incoming QC (BLOCKS).
- A label from another plant switches the app to that plant when your login has it ("Switched to Plant B for this label"); otherwise "This label belongs to Plant B, which your login cannot open." (BLOCKS)
- Nothing can be logged on a cancelled card; on a completed batch-entry card no new runs, but QC readings can still be added to its runs (BLOCKS runs).
- Signed out or idle 15 minutes: sign in and the same page opens (automatic).
- Drafts on the device belong to the signed-in person, are never shown to the next person on a shared phone, and are dropped after 7 days or after a successful save (automatic).
- Labels printed before the QR change still work inside the app's scan box; reprint them for the phone camera.

- A rack, tool or material QR scanned on the job card picker is refused: "That QR is on a material or tool label, not a job card." (BLOCKS)

## Sample

Suresh, winder operator, Shift A, 31 Oct:

1. 08:15: he scans the QR on job card **26/10/315** (Sharma Tubes Pvt Ltd, BLUE, 3,000 pcs = 300 bamboo × 10). The card opens on **Winding**.
2. He taps **Log output**: machine SHARMA_WINDER-2, 120 bamboo produced, 118 accepted. Rejected 2 is worked out by the system. He saves; the run goes to the supervisor.
3. He taps **Log QC** for Run 1 and enters two readings for each winding check. One C.S. reading is outside the band: it is saved with a flag.
4. 08:40: store keeper Anil scans reel **AT-26-0412** (Kraft 300 GSM, 412 kg). Reel & coil issue opens with the reel picked; he presses **Issue**. It is recorded as Shift A, 31 Oct, and listed under Slitting cards to write.

## Common questions

**The Camera app shows the QR but nothing opens.**

Tap the link banner that appears. If there is no link, it is an old label: type its number on the Scan page or ask the store to reprint it.

**"We could not read this label".**

The number is not in your plant or the connection dropped. Check the network and scan again, or type the number.

**Log output is grey.**

Read the small text under the button: the stage or card is closed, or your role cannot log runs.

**My phone signed me out in the middle of a run.**

Sign in again; the card reopens and your typed draft is offered back.

**I scanned a reel and got a lot card, not the issue page.**

Either your role does not issue stock, or the reel is not cleared (the card says "Waiting for incoming QC" or "Failed incoming QC").

**Do I need to choose a shift when issuing?**

No. Shift and date come from the clock when you press Issue.

**Can I use a handheld scanner?**

Yes. In-app scan boxes read new links and older labels alike.

## Related chapters

- Getting started
- Dashboard and inbox
- Log output and QC entry
- Job cards
- Issue to the floor: reels, coils and materials
- Stock counts, stock book, locations and opening stock
- Quality
- A day in the life

START HERE, SALES AND DESIGN

# Sales orders

**What it is:** One Orders list and one Order page for every customer PO, from draft to closed: entry, approval, release to job cards, delivery tracking, hold, cancel and short close.
**Who uses it:** Sales (enter, release, close), Planner (approve, release), Owner and Admin (everything), Plant Manager (view, short close), Dispatch (view, make challans).
**Where:** Sidebar > Operations > Orders (/sales-orders); New sales order (/sales-orders/new); Order page (/sales-orders/); Sidebar > Operations > Orders > Order close reasons (/masters/order-close-reasons)

## At a glance

- **One list for everyone**: status tabs, six KPI tiles, search, filters and saved views. Each row has one **Next action** button (Approve, Send for approval, Release, Plan, Dispatch, Resume, View).
- **Maker-checker**: the person who entered an order cannot approve it. Another Sales or Planner user, the Owner or an Admin approves. The Owner and an Admin may approve their own orders; the history records "approved by the same person".
- **Release** makes one job card per line and parchment colour and puts it in a winder queue. A parchment colour is compulsory at release.
- **Delivery date is optional** everywhere; a missing date shows as "No date". An **internal order** can be entered before the customer's PO arrives.
- **Cancel** (nothing released or dispatched), **Short close** (work started, drop the rest) and **Customer hold & close** (reversible) all need a reason from **Order close reasons**. Lifting a hold (**Resume**) asks why too, from the list **Order hold lifted**.
- **Balance returned.** When a job card closes a stage short, is force-closed or cancelled, or keeps leftover boxes as surplus, the pcs it will not make come back to the order line at once as unreleased pcs. Sales then **releases them again** or **short closes** the order with a reason.

## The flow

### Order life

1. **New sales order** — Sales
2. **Approve** — Planner/Sales/Owner/Admin
3. **Release lines** — Sales/Planner — job cards in winder queue
4. **In production**
5. **Partly dispatched** — Dispatch
6. **Closed**

If it goes wrong after **New sales order**

1. **Entered by me** — not Owner/Admin
2. **Send for approval**
3. **Another user approves**

If it goes wrong after **Approve**

1. **Customer not lifting**
2. **Customer hold & close** — Sales
3. **Resume** — Sales

If it goes wrong after **Release lines**

1. **Customer wants no more**
2. **Short close** — Sales/Plant Manager — released cards finish

### Balance returned from a job card

1. **Stage closed short** — Plant Manager
2. **Balance on order line** — unreleased
3. **Release lines again** — Sales — new job card

If it goes wrong after **Balance on order line**

1. **Short close** — Sales — reason code
2. **Balance dropped**
3. **Closes after last dispatch**

If it goes wrong after **Balance on order line**

1. **Stage reopened** — Owner/Admin
2. **Pcs back on the card**

### Cancel or short close

1. **Open order**
2. **Cancel order** — nothing released or dispatched
3. **Choose reason**
4. **Cancelled** — final

If it goes wrong after **Open order**

1. **Something released or dispatched**
2. **Short close**
3. **Choose reason**
4. **Balance dropped**
5. **Closes after last dispatch**

A draft becomes **Ready to release** once approved. Each release creates job cards; the order shows **In production**, then **Partly dispatched** as challans are made, and **Closed** when everything is dispatched. Old pages (the pending-orders page and the separate order audit page) now open the Orders list and the Order page's History tab.

## Screen tour

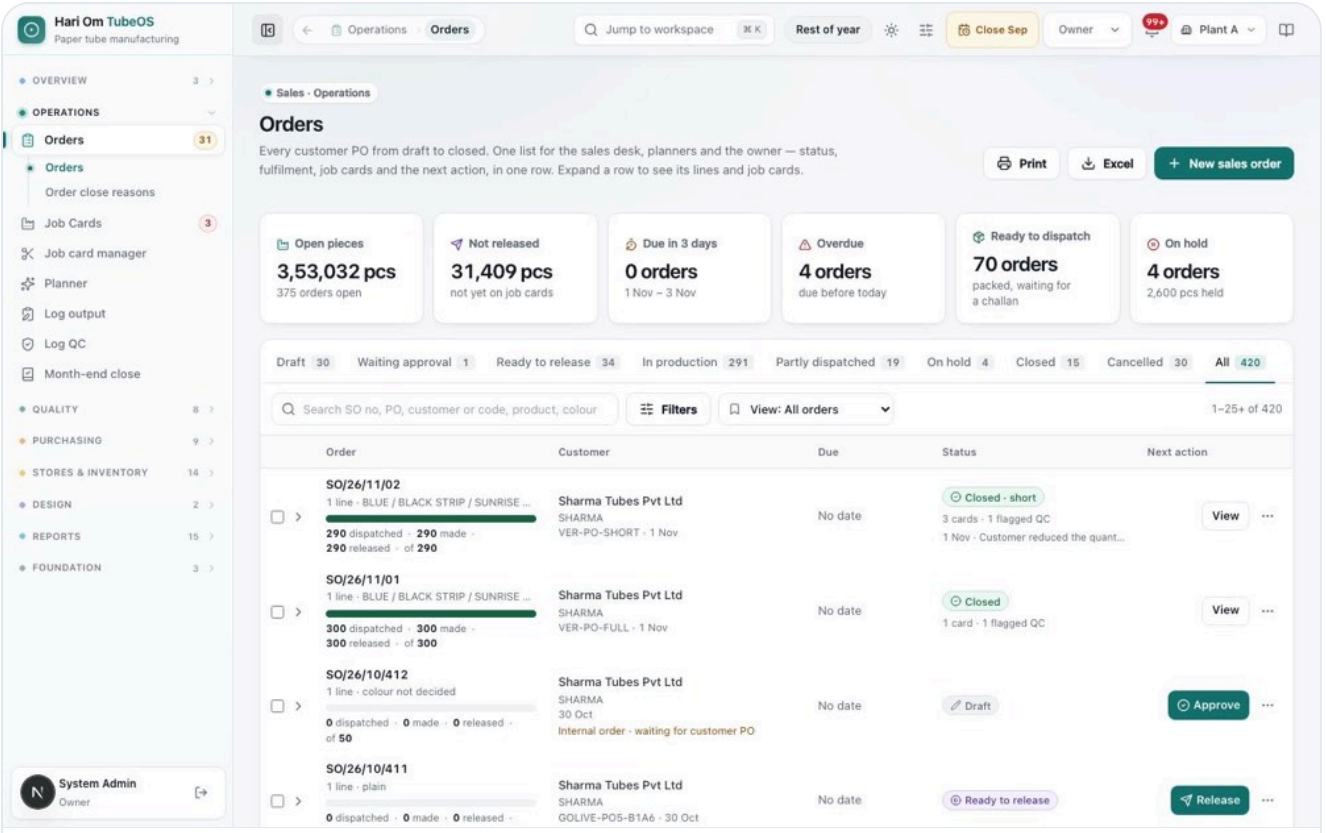



Figure: Orders list, Plant A. Header buttons Print, Excel and New sales order. Tiles: Open pieces 3,52,427 pcs (374 orders open), Not released 30,134 pcs, Due in 3 days 0 orders (31 Oct – 2 Nov), Overdue 4 orders, Ready to dispatch 69 orders (packed, waiting for a challan), On hold 5 orders (3,500 pcs held). Tabs Draft 30, Waiting approval 1, Ready to release 33, In production 292, Partly dispatched 18, On hold 5, Closed 14, Cancelled 30, All 418. Rows: SO/26/10/412 Draft "Internal order · waiting for customer PO" with Approve; SO/26/10/411 Ready to release with Release; SO/26/10/410 Cancelled with View.

What you see:

1. **Print / Excel / New sales order**: print the page, download the filtered list (one row per line) or start a new order.
2. **KPI tiles**: click to narrow the list; click again to clear. A blue chip shows the active tile.
3. **Status tabs** with counts (on a phone, one **Status** drop-down).
4. **Search**: "Search SO no, PO, customer or code, product, colour".
5. **Filters**: **Source** (Customer PO + internal / Customer PO / Internal order), **Delivery** (Any, Overdue, 3 days, 7 days), **PO / order date** from–to, **Sort** (Newest first, Earliest delivery first, PO date (latest), Oldest first), **Close / hold reason** (**Any reason**, or one code of the Order close reasons list, for example "Customer reduced the quantity (SO-QTY-REDUCED)"; it finds orders cancelled, short-closed or put on hold with that reason), **PO validity expired**, **Clear**.

6. **View: All orders**: saved views. **+ Save current view...** saves the tab, tile, search and filters for **Only me** or **Everyone on the plant**; **Manage views...** removes them.
7. **Order row**: tick box, expand arrow, SO number, lines and colours ("1 line · colour not decided", "plain"), fulfilment bar "0 dispatched · 0 made · 0 released of 50", customer and code, PO number and date (or "Internal order · waiting for customer PO"), **Due** ("No date", "Overdue 2 d", "Due today", "Tomorrow", "in 5 days"), **Status** chip (with hold or close reason and date), **Next action** and the ⋯ menu.
8. **Expanded row**: each line (size, colour split, pcs, released) with its job cards: card number, stage dots W · O · P · D, state, plan and QC flag chips, and quick links **Log output**, **Log QC**, **Open card**. Tick lines and press **Release lines...** to release only those. A line with balance returned from a card shows the pcs as not released again, so **Release lines...** offers them.

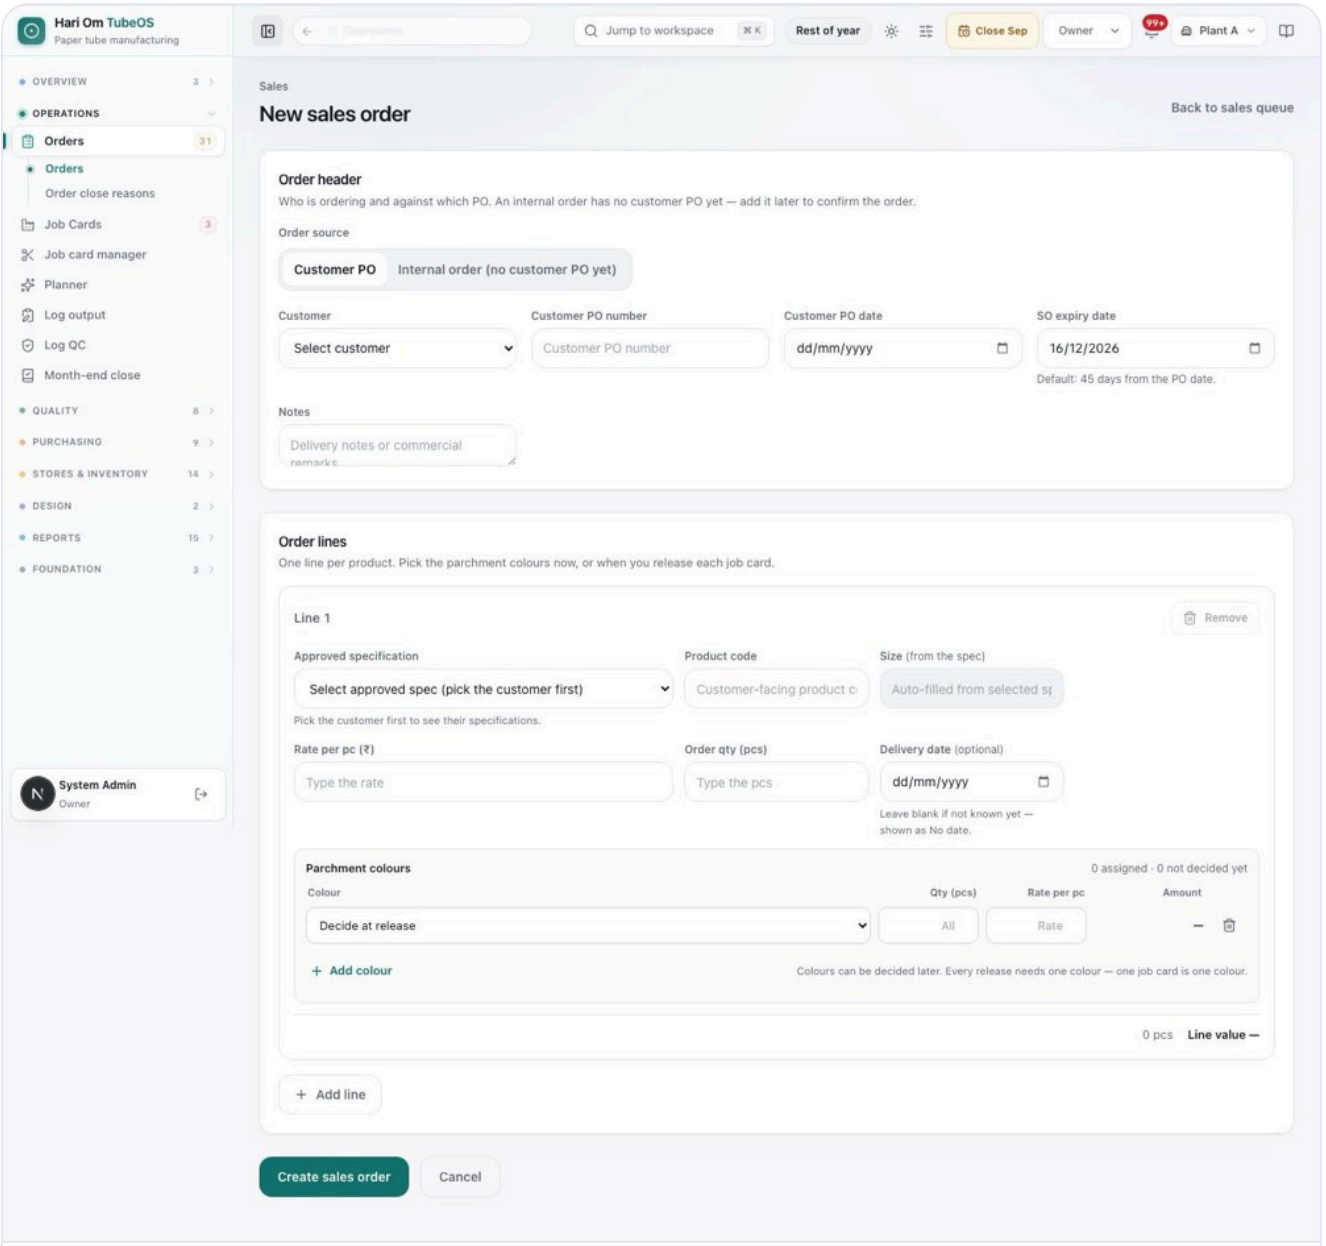



Figure: New sales order. Order header: Order source (Customer PO / Internal order (no customer PO yet)), Customer, Customer PO number, Customer PO date, SO expiry date 15/12/2026 ("Default: 45 days from the PO date"), Notes. Order lines: Line 1 with Approved specification, Product code, Size (from the spec), Rate per pc (₹), Order qty (pcs), Delivery date (optional, "Leave blank if not known yet — shown as No date"), a Parchment colours table (Colour "Decide at release", Qty, Rate per pc, Amount, Add colour), and the line total. Buttons Add line, Create sales order, Cancel.

What you see:

1. **Order source**: **Customer PO** needs PO number and date; **Internal order** needs an **Internal order date** and is saved as "Internal order · waiting for customer PO".
2. **SO expiry date**: blank means 45 days from the PO date; a custom date shows **Reset to 45 days**.
3. **Approved specification**: grouped as "This customer's approved specs", "Other approved specs (all customers)" and "Not approved yet — approve in Specifications first" (cannot be

chosen). Pick the customer first.

4. **Size** fills from the spec. **Product code** is the customer-facing code.
5. **Rate per pc (₹)**: under it, "Last rate ₹2.75 on SO/26/10/388 · 12 Oct" with a **Use** button when an earlier order exists for this customer and product. It is only a suggestion; nothing is filled until you press **Use**.
6. **Parchment colours**: one row per colour with its own qty and rate (blank rate = line rate). "Colours can be decided later. Every release needs one colour — one job card is one colour."

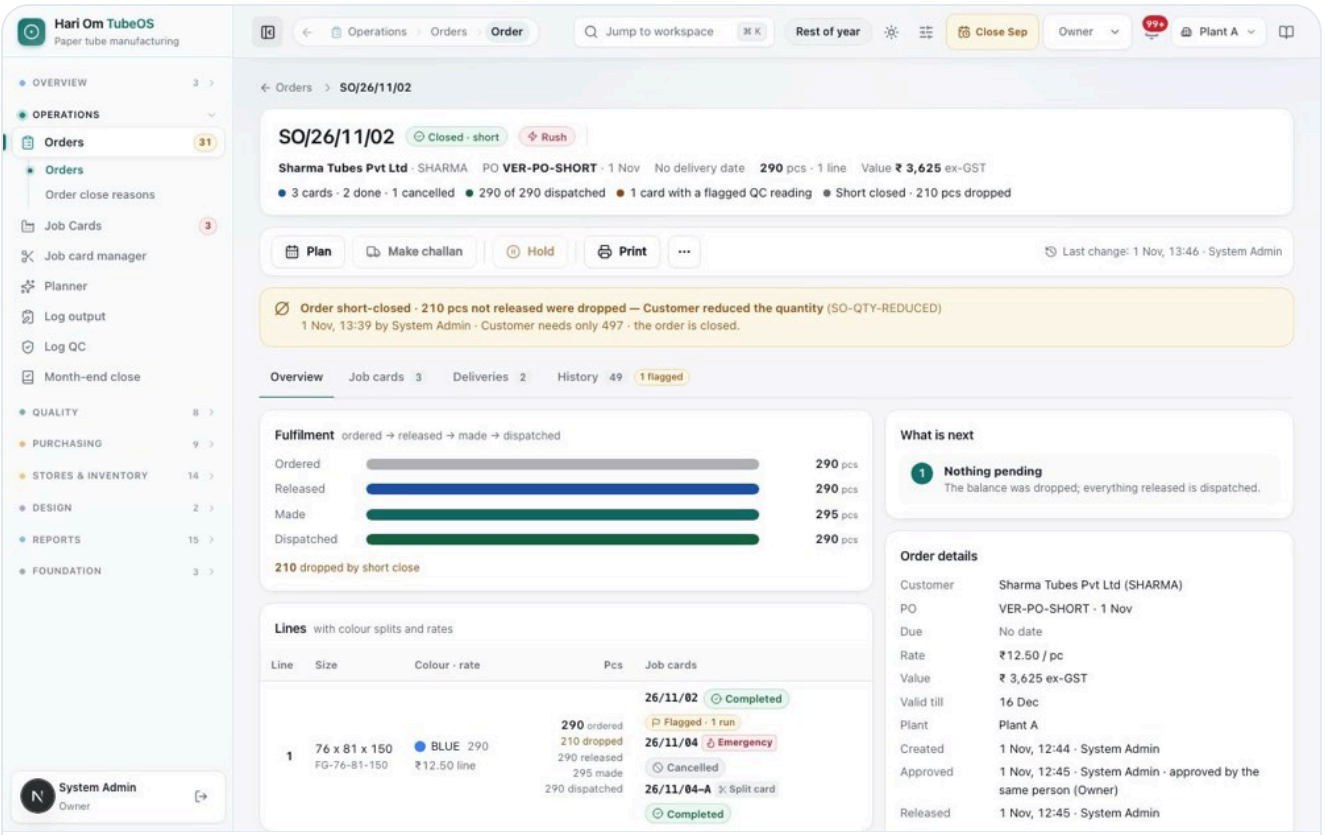



Figure: Order page SO/26/10/412, Draft, Sharma Tubes Pvt Ltd · SHARMA, "Internal order · waiting for customer PO", No delivery date, 50 pcs · 1 line, Value ₹138 ex-GST, "0 of 50 dispatched". Action bar: Approve, Release lines, Plan, Make challan, Hold, Cancel order, Print, Edit, Add customer PO and ⋯; "Last change: 31 Oct, 00:07 · Test Sales". Tabs Overview, Job cards 0, Deliveries 0, History 2. Overview shows Fulfilment bars, the Lines table (76 x 81 x 150, FG-76-81-150, colour not decided · ₹2.75), What is next ("Approve the order — As Owner you may approve an order you entered yourself...") and Order details.

What you see:

1. **Header**: SO number, status, customer, PO (with a lock when the PO is locked), delivery, pcs and lines, value ex-GST, dispatched so far.
2. **Action bar**: buttons are greyed with a hover reason when not allowed (for example Release lines: "Approve the order first"). **Edit** shows only while Draft or Waiting approval. ⋯ has **Copy as new order**, **Full history** and **Trace materials**.
3. **Overview**: **Fulfilment** (ordered → released → made → dispatched, with "not released", "on customer hold", "dropped by short close", "still to send"), **Lines** (with a **Colours** button to

edit colour splits), **What is next** (numbered steps and one main button) and **Order details** (customer, PO and PO history, due, rate, value, valid till, plant, created, approved, released, on hold, notes).

4. **Job cards**: each line with its cards, made quantity, close reasons and a **Manage** button (split, edit qty or colour, force close, cancel). Under a card that closed a stage short, a line reads for example "Winding closed short 1 Nov, 14:20: 30 of 40 bamboo · 100 pcs back to the order · Paper or input short". A force-closed card shows "Force closed … by … · · 200 pcs back to the order". A box card shows "7 boxes packed (295 pcs) · 4 shipped · 2 QC flagged".
5. **Deliveries**: customer call-offs per line by date, and the **Delivery challans** list (DC, date, pcs, boxes, vehicle, card, print).

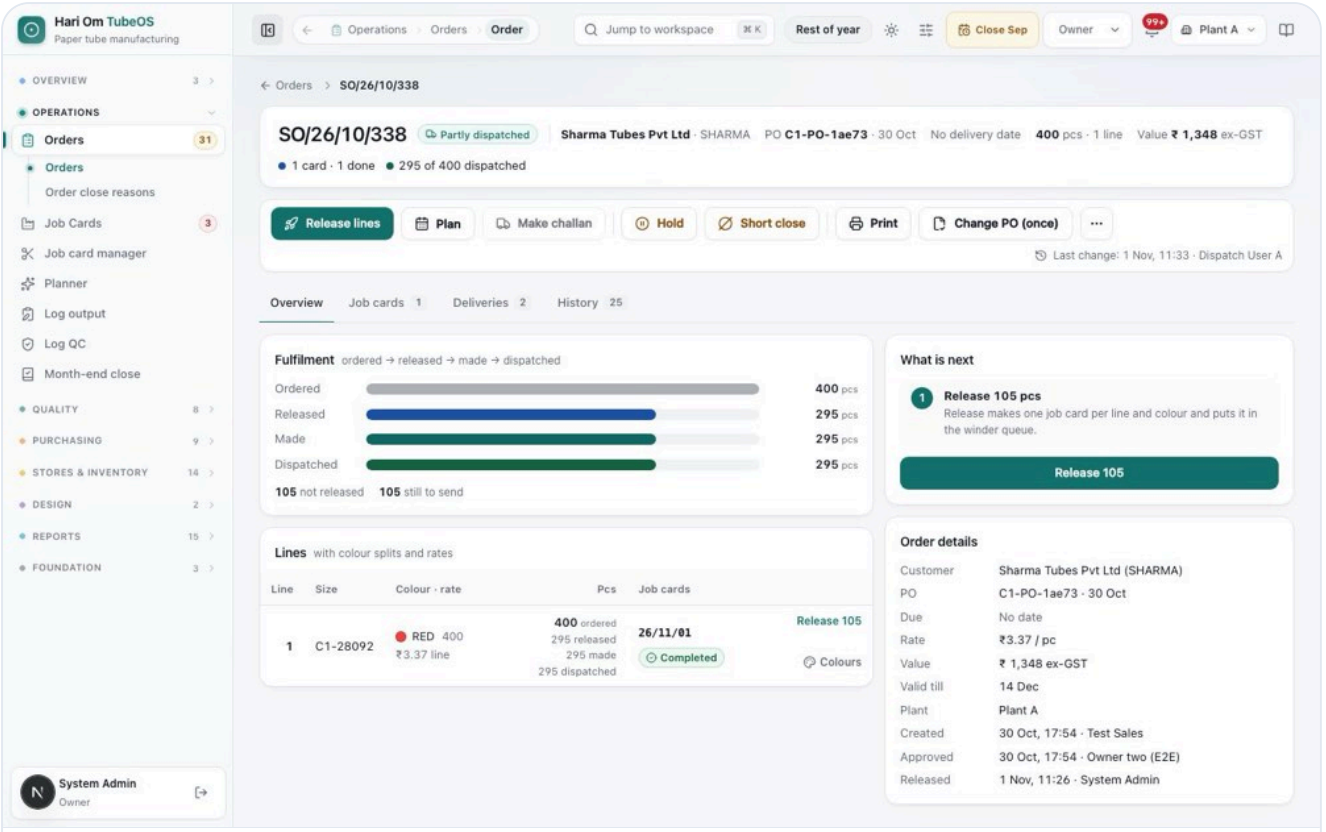



Figure: The Job cards tab of SO/26/10/412 after card 26/10/315 closed Winding short. Under the card a grey line reads "Winding closed short: 30 of 40 bamboo · 100 pcs back to the order · Paper or input short", and a box line "7 boxes packed (295 pcs) · 4 shipped". The line's fulfilment shows 105 pcs not released, and Release lines and Short close are both offered.

What you see:

1. **Closed short line** under the card: stage, when, good of target in the stage unit, the pcs back to the order and the reason label.
2. **Boxes line**: boxes packed and their pcs, boxes shipped, and QC flagged boxes (flags never block shipping).
3. **Fulfilment**: the returned pcs count as **not released** again until Sales acts.
4. **Release lines** (release the balance on a new card) and **Short close** (drop it with a reason).

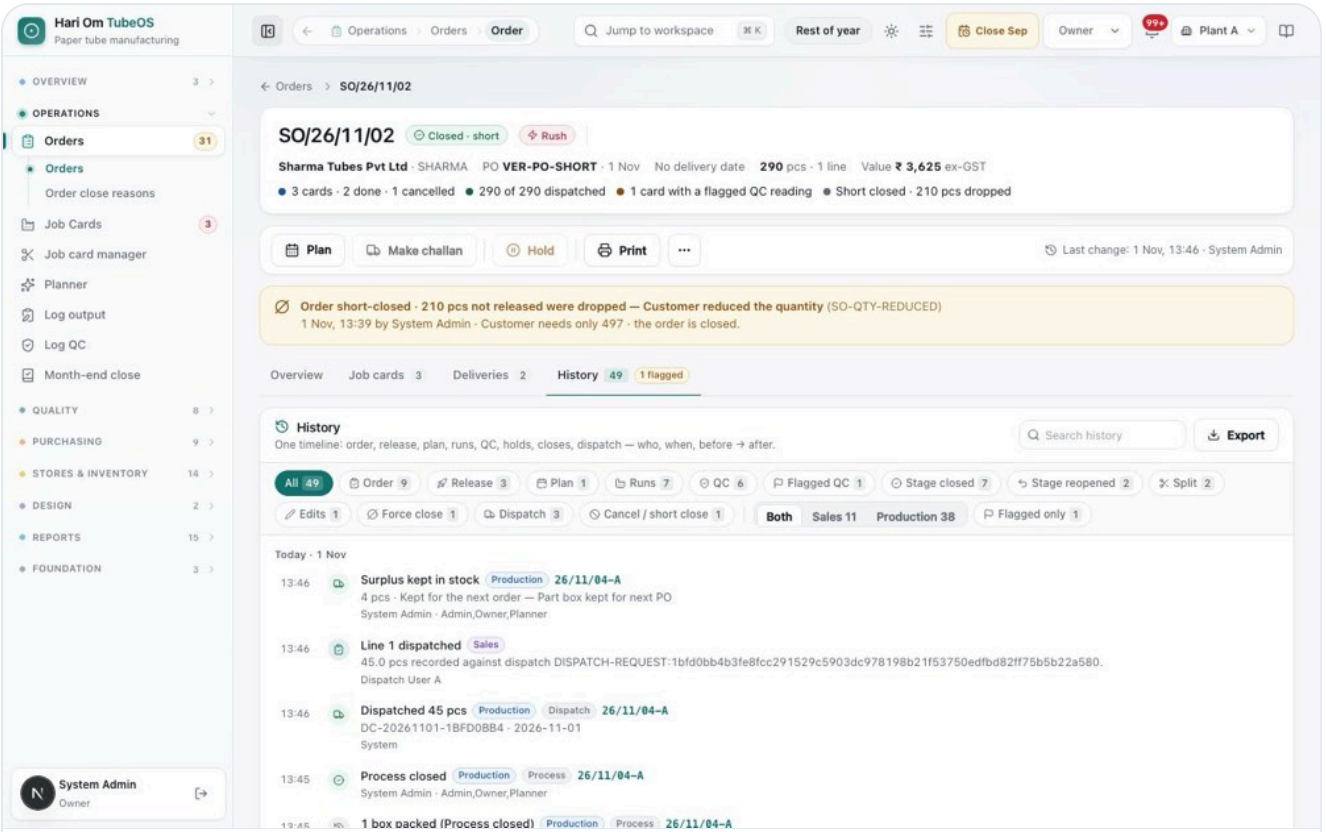



Figure: History tab. "One timeline: order, release, plan, runs, QC, holds, closes, dispatch — who, when, before → after." Search history and Export. Filters All 2, Order 2, Both / Sales 2 / Production 0, Flagged only. Events at 00:07: "Sales order created · internal order" and "Line 1 entered — 50.0 pcs requested for FG-76-81-150; product code FG-76-81-150; parchment required yes; due date No date", by Test Sales.

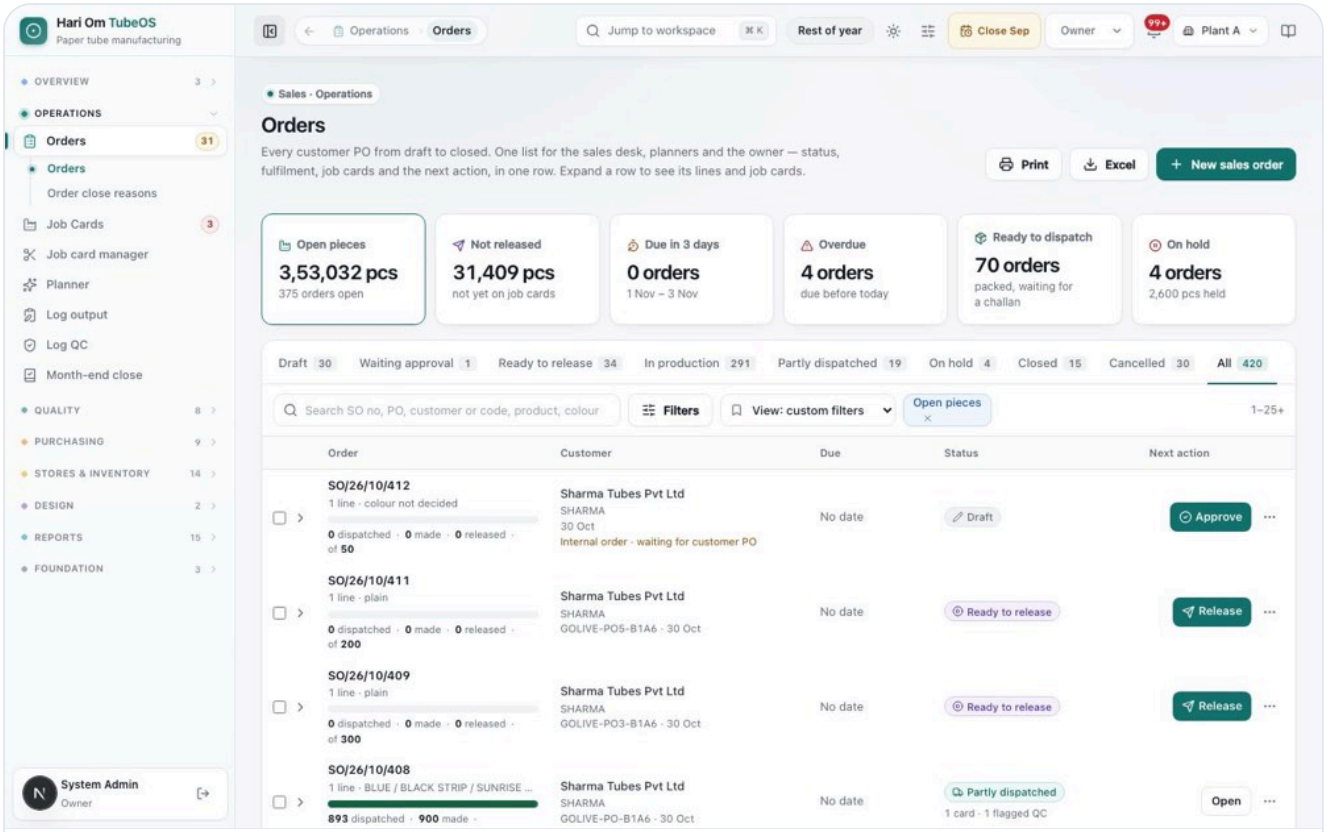



Figure: An old "pending orders" link now opens the Orders list with the **Open pieces** tile already selected (chip "Open pieces ×", "View: custom filters").

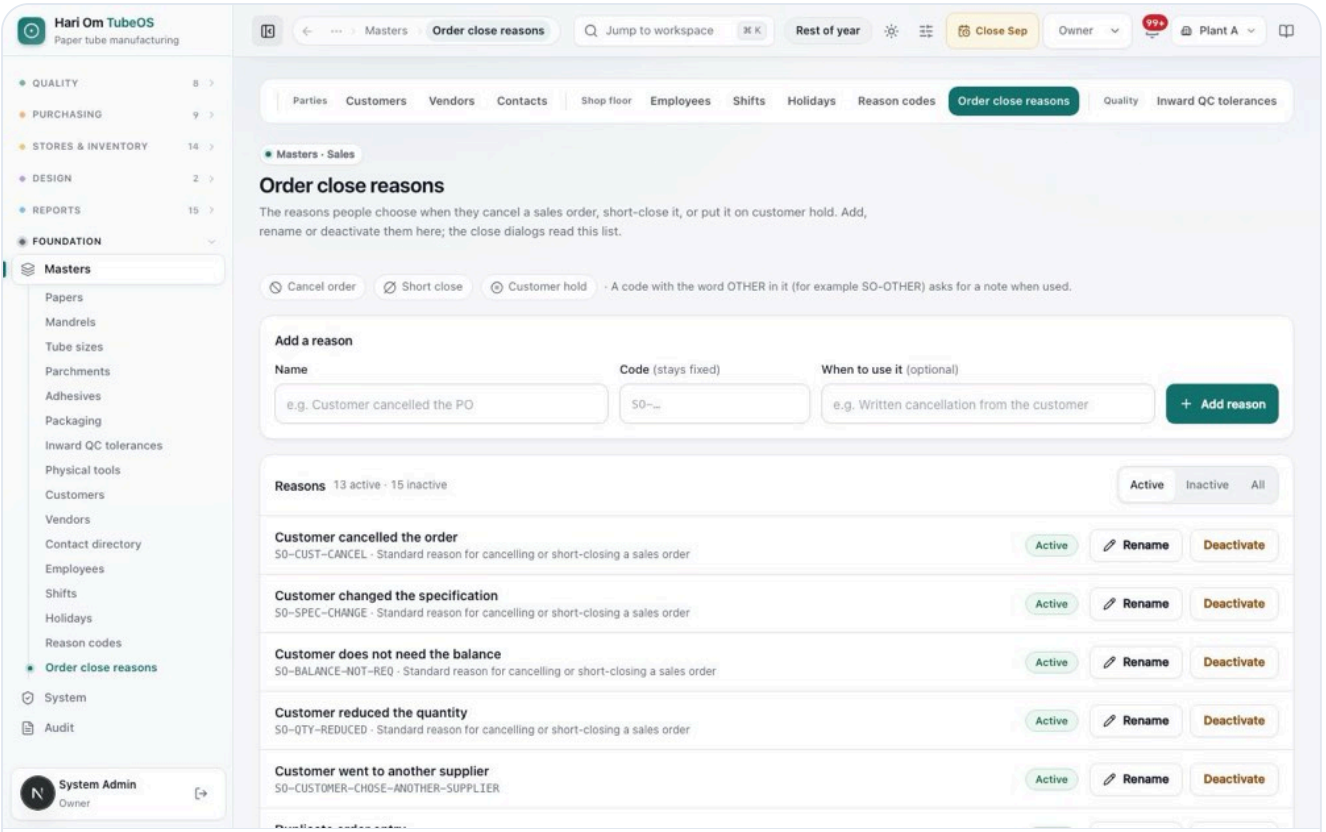



Figure: Masters › Order close reasons. "The reasons people choose when they cancel a sales order, short-close it, or put it on customer hold." Chips Cancel order, Short close, Customer hold, and the note "A code with the word OTHER in it (for example SO-OTHER) asks for a note when used." Add a reason: Name, Code (stays fixed), When to use it (optional), Add reason. Reasons: 13 active · 15 inactive, e.g. Customer cancelled the order (SO-CUST-CANCEL), Customer changed the specification (SO-SPEC-CHANGE), Customer does not need the balance (SO-BALANCE-NOT-REQ), Customer reduced the quantity (SO-QTY-REDUCED), each with Rename and Deactivate.

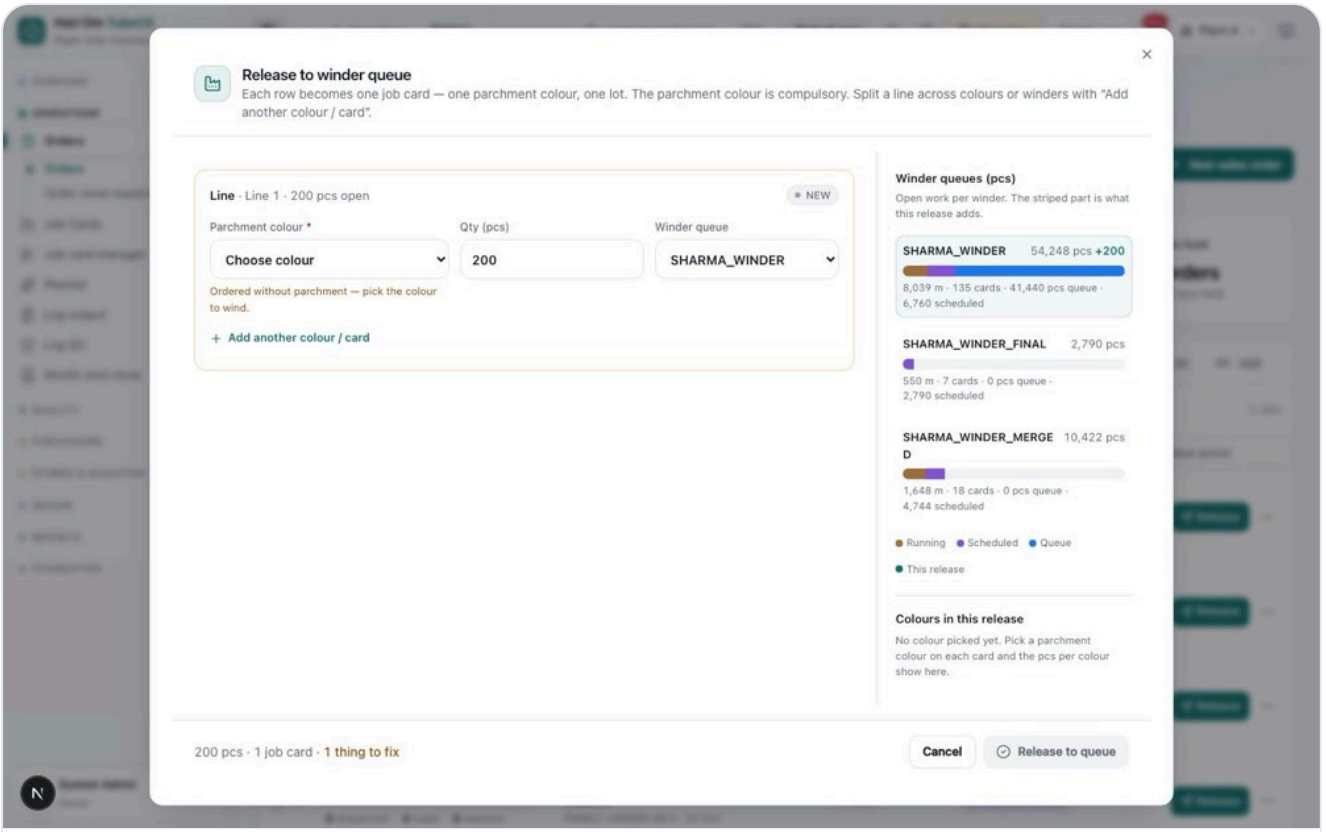



Figure: The **Release to winder queue** dialog. Each row becomes one job card. The red note under **Parchment colour** says the colour is compulsory. The panel on the right shows how busy each winder queue is, and the striped part is what this release adds.

1. **Parchment colour**: pick the colour for this card. The release cannot be saved without it.
2. **Qty (pcs)**: how many pieces this card will make. Use **Add another colour / card** to split one line across colours.
3. **Winder queue**: the winder this card joins.
4. **Winder queues (pcs)** panel: open work per winder, so you can balance the load before you release.
5. **Release to queue**: stays grey until nothing is left to fix. The footer counts the pieces, the job cards and the things still to fix.

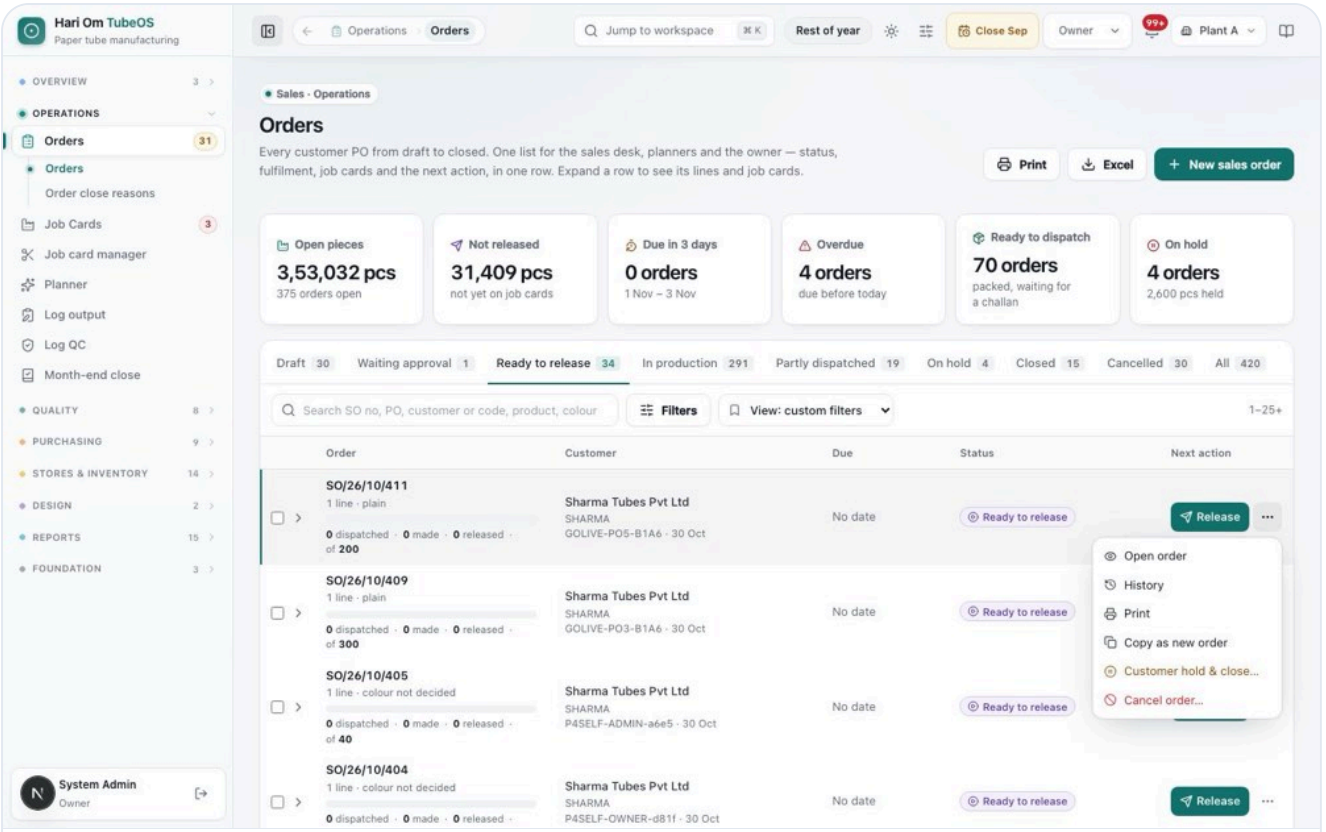



Figure: The three-dot menu on an order row. It lists Open order, History, Print, Copy as new order, Customer hold & close and Cancel order.

## Step by step

### How to create a sales order (Sales, Owner, Admin)

1. Orders › **New sales order**.
2. Choose **Customer PO** or **Internal order (no customer PO yet)**.
3. Pick the **Customer**. Enter **Customer PO number** and **Customer PO date** (or the **Internal order date**). Leave **SO expiry date** at the default unless the PO says otherwise.
4. For each product: pick the **Approved specification**, check **Size**, type **Product code**, **Rate per pc** (press **Use** to take the last rate if right) and **Order qty (pcs)**. Add a **Delivery date** only if known.
5. Under **Parchment colours**, add colours and quantities now, or leave "Decide at release".
6. **Add line** for more products. Press **Create sales order**. The system gives the SO number (SO/26/10/NN) and the order is **Draft**.
7. To start from an old order: ⋯ › **Copy as new order**, then change the PO number and dates.

### How to edit an order

1. Open the order and press **Edit** (only while Draft or Waiting approval).

2. Change header or lines and save. Every change is kept in History.
3. After approval, colours can still be changed with the line's **Colours** button (a colour already released cannot be removed), and dates on the **Deliveries** tab.

## How to approve (maker-checker)

1. If you entered the order and are not Owner or Admin, press **Send for approval**; the button then reads "Waiting approval".
2. The approver (another Sales or Planner user, the Owner or an Admin) opens the order and presses **Approve**, or ticks several rows on the list and presses **Approve N**.
3. Result: "Sales order approved. Next: release its lines." Status becomes **Ready to release**.
4. If the server refuses: "This order was entered by …, so the same person cannot approve it — switching role does not change who you are."

## How to release lines to planning (Sales, Planner, Owner, Admin)

1. Press **Release** on the row or **Release lines** on the order. To release only some lines, expand the row, tick lines, then **Release lines…**.
2. The **Release to winder queue** dialog shows one row per job card. For each: **Parchment colour** (compulsory), **Qty (pcs)** and **Winder queue**.
3. To split a line across colours or winders, press **Add another colour / card**.
4. The right panel **Winder queues (pcs)** shows each winder's running, scheduled and queued pcs, metres and days of work; the striped part is what you are adding.
5. Fix anything listed ("Pick a winder queue", "Pick the parchment colour…", "Line 1 has only 2,000 pcs open"). The footer reads "5,000 pcs · 2 job cards · ready".
6. Press **Release to queue**. Result: "2 job cards created. The release winder is a hint; schedule on any available winder." Press **Open planning queue** to go to the planner.
7. If it says "Release recorded, but the job card is not in planning yet", press **Retry planning sync**. Pressing Release again never releases twice.

## How to add or change the customer PO

1. Internal order: press **Add customer PO**, enter the number and date, **Confirm customer order**. It becomes a confirmed customer order.
2. Before release the PO can be changed freely (**Change PO**).
3. After release it can be added or changed **once**: tick "I understand this is the one change allowed after release" and press **Change PO once**. Then the order shows **PO locked**. Every change is listed under **PO history**.

## How to put an order on customer hold and resume

1. Row ⋯ › **Customer hold & close…** or **Hold** on the order (several rows: tick them, **Hold… N**).

2. The dialog shows SO, PO and "Will hold N pcs". Choose a **Reason**, add a note if needed, confirm.
3. The undelivered balance becomes hold quantity and the PO closes. Delivered pieces and job cards are not changed.
4. To lift it, press **Resume** (on the order or the row). The dialog **Order hold lifted** asks **Why is the hold lifted?** from the list **Order hold lifted**: RS-CUST-CONFIRMED Customer confirmed to continue, RS-PAYMENT Payment or credit cleared, RS-SPEC-CLEARED Specification or artwork cleared, RS-SCHEDULE New delivery schedule received, RS-HOLD-ERROR Hold placed by mistake, RS-OTHER Other (write a note). Confirm. The message reads "Customer hold lifted on SO/26/10/412 — Customer confirmed to continue." The order goes back to its earlier status.
5. **Hold history**: every hold and resume stays on the order with who, when, the reason and the held pcs. The History tab shows events "Customer hold — PO closed", "Customer hold lifted", and, when a cancel or short close ends a hold, "Customer hold ended by cancel" or "Customer hold ended by short close".

## How to cancel an order

1. Order page › **Cancel order** (or row ⋯ › **Cancel order...**). Only offered when nothing is released or dispatched.
2. The dialog shows Ordered, Dispatched, On job cards and **Cancels**, and the effects (call-offs cancelled, hold ends, cannot be undone).
3. Choose a **Reason**; codes with OTHER need a note. Press **Cancel order**. Status **Cancelled**; a red banner shows who, when and why.

## How to short close an order

1. Order page › **Short close** (row ⋯ › **Short close balance...**). Offered once something is released or dispatched and some quantity is still not released.
2. The dialog shows **Drops N pcs** and the effects: job cards already released still finish; the order closes once they are dispatched.
3. Choose a **Reason** (and note for OTHER). Press **Short close · drop N pcs**. An amber banner shows "Order short-closed · N pcs not released were dropped". Status later reads **Closed · short**.

## How to handle balance returned from a job card (Sales)

1. You get the balance back when a card closes a stage short, is force-closed or cancelled, or keeps leftover boxes as surplus. The order's History tab shows "Line 1 balance returned" (or "Winding closed short: 100 pcs back to the order — Paper or input short").
2. Open the order. The fulfilment shows the pcs as **not released**, and the card line on the **Job cards** tab says how many pcs came back and why. If every released pc came back, the

order goes back to **Ready to release**; otherwise it reads partly released.
3. To make them: press **Release lines**. The balance is offered like any unreleased qty; pick colour, qty and winder as usual. A new job card is made.
4. To drop them: press **Short close**, choose the reason (for example SO-BALANCE-NOT-REQ Customer does not need the balance) and confirm. The order closes after the last dispatch.
5. If the order was already short-closed when the pcs came back, they are dropped at once (the history says "dropped: order short-closed").
6. If the Owner or Admin reopens the stage on the card, the pcs go back onto the card ("Stage reopened: 100 pcs taken back from the order onto the job card"). That is refused when you have already released them again or short-closed the order.

## How to follow partial dispatch

1. **Partly dispatched** tab, or the fulfilment bar on a row ("192 dispatched · 295 made").
2. Order page › **Deliveries**: each DC with date, pcs, boxes and vehicle, and a print button.
3. Boxes ship as soon as they are packed, even while Process is still running. When boxes are ready, Owner, Admin and Dispatch see **Make challan · N ready**; Sales sees "Waiting for dispatch · N ready".

## How to see the order's history and audit

1. Order page › **History** (row ⋯ › **History**).
2. Filter **Order** / **Both** · **Sales** · **Production** / **Flagged only**, search, and **Export**.
3. Reasons show as their label, for example "Customer hold lifted — Payment or credit cleared".

## How to find orders closed or held for one reason

1. Orders list › **Filters** › **Close / hold reason**. Pick the reason.
2. The list shows orders cancelled, short-closed or put on hold with that reason.
3. For counts by reason, customer and month, open Reports › **Sales pulse** › **Cancelled / short-closed by reason**. Clicking a reason there opens this list with the filter set (see "Reports").

## How to manage order close reasons (Owner, Admin)

1. Orders › **Order close reasons**.
2. **Add a reason**: Name, Code (stays fixed, for example SO-LATE-PAYMENT), When to use it. **Add reason**.
3. **Rename** keeps the code, so closed orders are not affected. **Deactivate** hides it from new closes; **Reactivate** brings it back. Other roles can only view the list.

## Rules the system enforces

- Customer is required; Customer PO number and date are required for customer PO orders; Internal order date for internal orders (BLOCKS save).
- Colours must have a colour per qty row, qty per colour when more than one, rates 0 or more, and may not add up to more than the line qty (BLOCKS save).
- Only approved specifications can be chosen on a line (BLOCKS).
- Only Draft or Waiting approval orders can be approved; the person who entered it cannot approve unless Owner or Admin (BLOCKS).
- Release: a colour on every card, a winder queue, a qty, and together no more than the line's open pcs or the colour's open pcs (BLOCKS). The server also refuses release without a parchment colour, and refuses a spec whose seasonal recipe or QC setup is not ready.
- Release on hold is refused: "Lift the customer hold to release" (BLOCKS).
- Cancel only when nothing is released or dispatched; otherwise the dialog explains "N pcs are released to job cards. Use Short close..." (BLOCKS).
- Short close only after approval and when something is released or dispatched and some quantity is still not released (BLOCKS, with the reason in words).
- Cancel, short close and hold need an **Order close reasons** code; Resume needs an **Order hold lifted** code; OTHER codes need a note of at least 5 characters ("Write a short note for the reason 'Other'."). The server checks the code is active, in the right list and of the order's plant; free text alone is refused (BLOCKS).
- **Balance returned from a job card** goes back to the line's unreleased qty at once, carrying the card's reason code and label; if the order is short-closed it is dropped (AUTOMATIC).
- **Reopening a short-closed stage** takes the pcs back only if the line still has them unreleased and the order is not short-closed or cancelled (BLOCKS the reopen otherwise).
- **Hold history** keeps every hold, resume and end with its reason (AUTOMATIC).
- After release the customer PO may change once, then locks (BLOCKS further changes).
- Last rate is shown only as a suggestion (never filled automatically). Delivery date and expiry default are automatic helpers.
- Cancelled orders are not counted in booked value (automatic).

## Sample

Sharma Tubes Pvt Ltd sends PO 4500012345 dated 28 Oct for 76.4 x 81 x 150 tubes.

| Field | Value |
|---|---|
| Line 1 qty | 5,000 pcs at ₹2.75 (last rate ₹2.75 on SO/26/10/388, pressed **Use**) |

| Field | Value |
|---|---|
| Colours | BLUE 3,000 pcs; RED 2,000 pcs at ₹2.80 |
| Line value | 3,000 × 2.75 + 2,000 × 2.80 = ₹13,850 ex-GST |
| Delivery date | blank → "No date" |
| Expiry | blank → 45 days from 28 Oct = 12 Dec |

1. Priya (Sales) creates it: **SO/26/10/412**, Draft. She presses **Send for approval**.
2. Ramesh (Planner) presses **Approve**: Ready to release.
3. Priya releases: BLUE 3,000 on SHARMA_WINDER-1, RED 2,000 on SHARMA_WINDER-2. Two job cards, 26/10/315 and 26/10/316. Status: In production.
4. On card 26/10/315, Winding closes short at 270 of 300 bamboo (SS-MATERIAL-SHORT). 300 pcs come back to the BLUE line at once; the History tab shows "Winding closed short: 300 pcs back to the order — Paper or input short". Priya releases them again as card 26/10/321. Card 26/10/315 ships its 2,700 pcs in boxes: **Partly dispatched**, "2,700 of 5,000 dispatched".
5. The customer now says it does not want the RED pieces. They are already on 26/10/316, so Short close has nothing to drop and explains: "Everything left is already on job cards; the order closes by itself once they are dispatched." To stop the card, the planner cancels 26/10/316 in the Job card manager (nothing made yet) with JC-CUST-CANCEL. The 2,000 pcs come back to the line; Priya presses **Short close** with SO-BALANCE-NOT-REQ. If the order had been short-closed first, the balance the card hands back would have been dropped at once.

## Common questions

**? Why can't I approve my own order?**

Maker-checker. Press **Send for approval**; another user approves. Only the Owner and Admin may approve their own.

**? Release lines is grey.**

Hover over it: "Approve the order first", "Lift the customer hold to release", "The order is closed" or "All lines are already released to job cards".

**The release dialog says "Pick the parchment colour..." on a plain line.**

Every job card needs a colour to wind; pick one now.

**I want to cancel but only Short close is offered.**

Something is already released or dispatched. Short close drops the rest; released cards finish.

**The reason I need is not in the list.**

Pick the OTHER code and write a note, and ask the Owner or Admin to add it in **Order close reasons** (for the Resume list, in Masters › Reason codes › Order hold lifted).

**Why does my order show pcs "not released" again after release?**

A job card gave them back: a stage closed short, or the card was force-closed, cancelled or kept boxes as surplus. Release them again or short close the order.

**Can I undo a Resume?**

Put the order on customer hold again with a reason. Both steps stay in the hold history.

**Where did the Order tracker, Pending orders and Order audit pages go?**

They are the Orders list (tiles and tabs) and the Order page's History tab. Old links still work.

**The order shows "No date". Is that a problem?**

No. Delivery date is optional; add it on the Deliveries tab when the customer confirms.

**I entered the wrong PO number after release.**

Use **Change PO (once)**. After that it is locked; ask the Owner for a decision.

## Related chapters

- Welcome to Hari Om TubeOS: the big picture
- Specifications

- Job cards
- Job card manager
- Planner
- Dashboard and inbox
- A day in the life
- Reports (Sales pulse: cancelled / short-closed by reason)

START HERE, SALES AND DESIGN

# Specifications

**What it is:** The spec sheet workspace where the Owner and Admin build each customer's tube specification: size, mandrel, paper recipe for each season, adhesive, parchment, weights, tolerances, notch and packing, with approval and a print-ready sheet.
**Who uses it:** Owner and Admin (create, revise, approve). Sales and planners use approved specs on orders; QC keeps the stage QC rules the spec is checked against.
**Where:** Sidebar > Design > Specifications (/specifications); Create specification (/specifications/new); a spec (/specifications/); Print view (/specifications//print); Sidebar > Design > Packing setup (/specifications/packing-setup, Owner and Admin); Sidebar > Quality > Production season (/settings/production-season)

## At a glance

- A spec is the product's recipe. Only **approved** specs can be picked on a sales order line, and the spec decides the size, the paper and adhesive use, the tube weight and the QC bands of every job card made from it.
- Each spec has **two recipes**: **Rest of year** and **Monsoon**. They are versioned **independently**: revising one never changes the other.
- The **Production season** (Owner only) says which recipe new releases use in both plants. A job card **freezes** the recipe and tolerances of its season at release; later edits never change a released card.
- Approval is two steps: **Submit for Owner Review**, then **Approve & Go Live** by the Owner or an Admin. A bar at the bottom lists the **blockers** still open.
- Older specs made before seasonal recipes are **legacy** specs. They still work; their QC tolerances are set on the spec itself.
- **Packing comes from the Packaging masters.** The box, plastic sheet and fadda are picked from the masters, and their size and weight come from there. The **qty per box** decides how job cards pack finished pcs into boxes. A new spec cannot be approved without a box and a qty per box. The temporary **Packing setup** page sets packing on every active spec without a re-approval.

## The flow

### New specification

1. **Create specification** — Owner/Admin
2. **Requirement** — customer, mandrel, tube size, weights
3. **Recipe: Rest of year and Monsoon**
4. **Manufacturing, notch, packing**
5. **Save Draft**
6. **Submit for Owner Review**
7. **Approve & Go Live** — Owner/Admin
8. **Usable on sales orders**

If it goes wrong after **Submit for Owner Review**

1. **Return to draft** — Owner/Admin
2. **Fix and resubmit**

### Change a live spec


1. **Approved spec**
2. **Revise Monsoon only** — Owner/Admin — new Monsoon revision
3. **Confirm**
4. **Approve this revision**
5. **Next releases use it**

If it goes wrong after **Approved spec**

1. **Start revision** — Owner
2. **Draft revision v2** — v1 stays live
3. **Approve**
4. **v2 live**

If it goes wrong after **Approved spec**

1. **Mark Obsolete**
2. **Not offered on new orders**

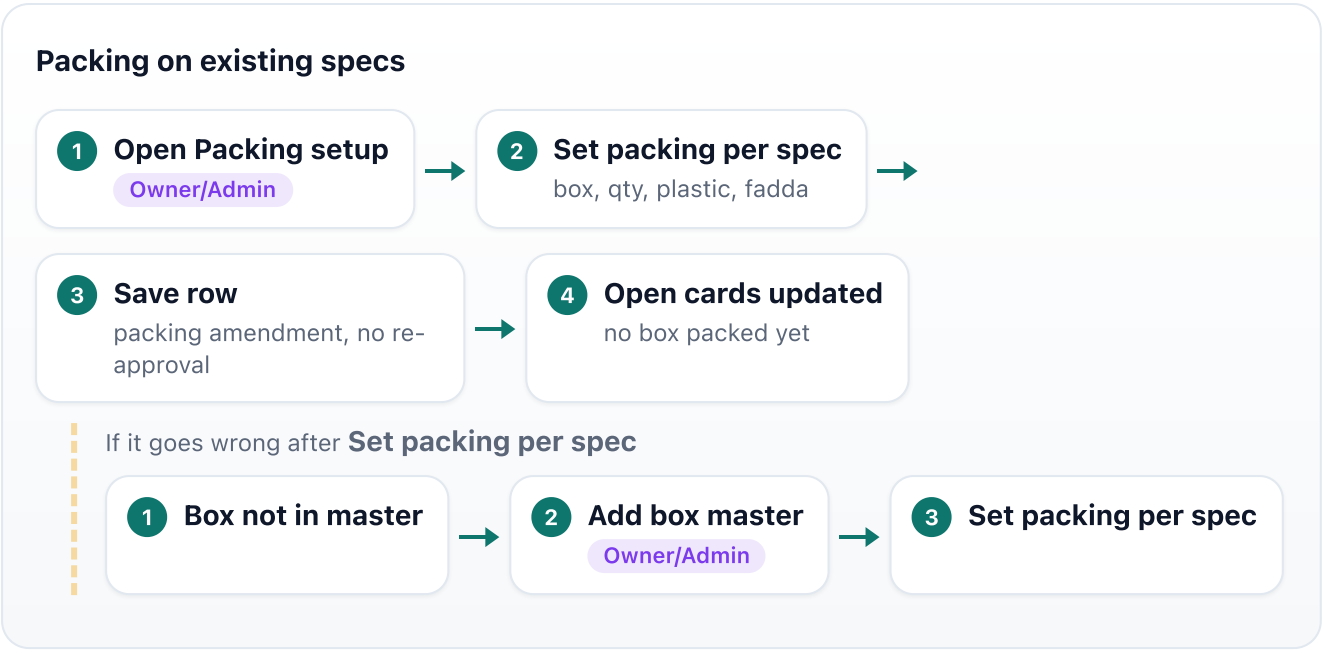


A spec is built in four sections and saved as a draft. When the bottom bar shows no blockers, it is submitted and approved, and it becomes **Live** for sales orders. A change to one season's paper recipe is a separate seasonal revision; a change to anything else is a full spec revision. The live version stays available for orders until the revision is approved.

## Screen tour

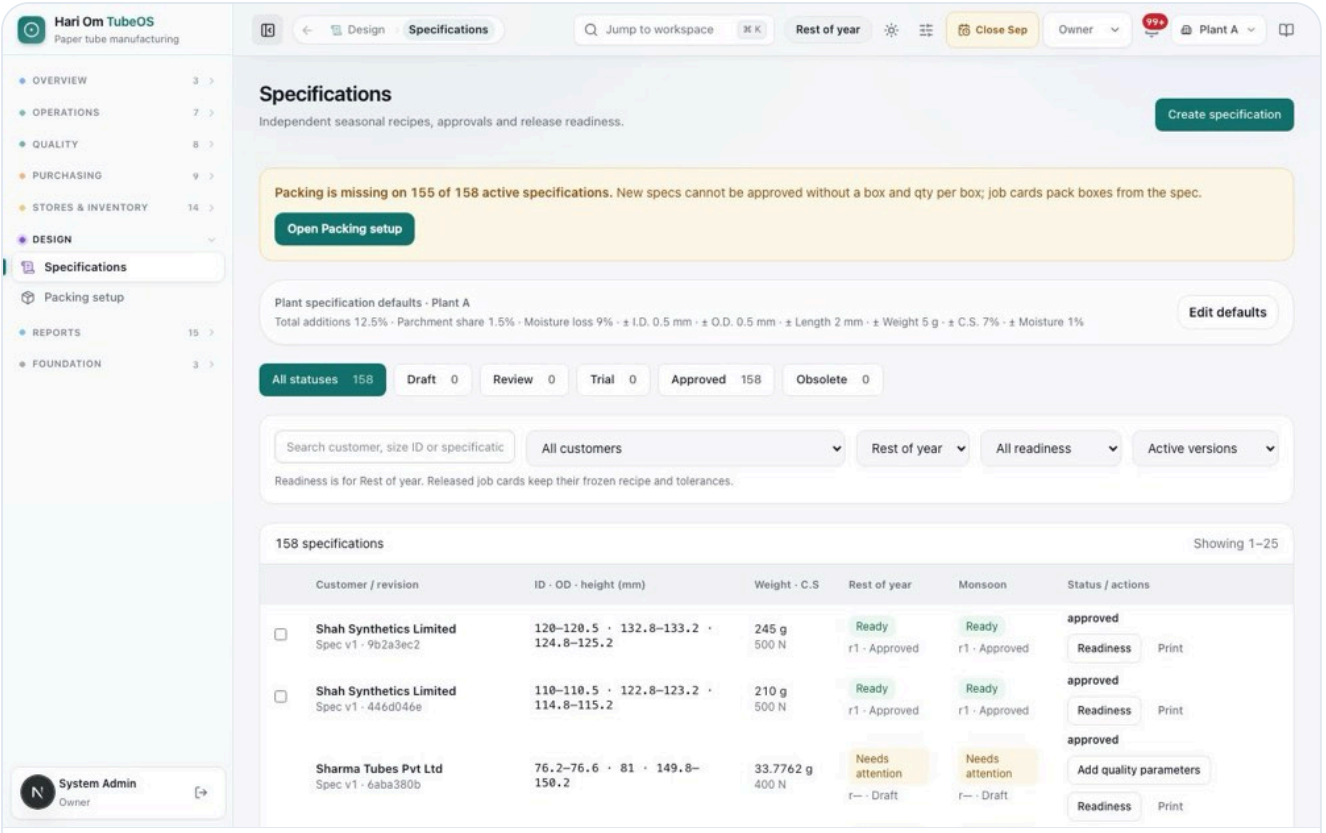




Figure: Specifications register. Header "Independent seasonal recipes, approvals and release readiness" with Create specification. A panel "Plant specification defaults · Plant A: Total additions 12.5% · Parchment share 1.5% · Moisture loss 9% · ± I.D. 0.5 mm · ± O.D. 0.5 mm · ± Length 2 mm · ± Weight 5 g · ± C.S. 7% · ± Moisture 1%" with Edit defaults. Status buttons All statuses 158, Draft 0, Review 0, Trial 0, Approved 158, Obsolete 0. Rows such as Sharma Tubes Pvt Ltd, Spec v1, 76.2–76.6 · 81 · 149.8–150.2, 33.7762 g, 400 N, Rest of year "Needs attention r — · Draft", Monsoon "Needs attention", status approved, with Add quality parameters, Readiness and Print.

What you see:

1. **Create specification** (Owner and Admin).
2. **Plant specification defaults** and **Edit defaults**: starting values for new specs in this plant (additions %, parchment share, moisture loss, ± bands).
3. **Status buttons** with counts: **Draft**, **Review**, **Trial**, **Approved**, **Obsolete**.
4. **Filters**: search ("Search customer, size ID or specification ID"), **All customers**, recipe season (**Rest of year** / **Monsoon**), readiness (**Ready to release** / **Needs attention**), **Active versions** / **Disabled versions**. "Readiness is for Rest of year. Released job cards keep their frozen recipe and tolerances."
5. **Row**: customer and version, ID · OD · height range in mm, weight in g and C.S., each season's readiness (**Ready** / **Needs attention**) with recipe revision and state (**Approved**,

**Confirmed**, **Draft**, "Revision open"), status and buttons. Legacy specs show a QC button such as **Add quality parameters**.

6. **Readiness**: a pop-up listing each season's blockers (or "Ready for release") and the seasonal recipe manager.
7. **Tick boxes** on seasonal specs: tick several and press **Confirm reviewed Monsoon selections** (needs one plant).

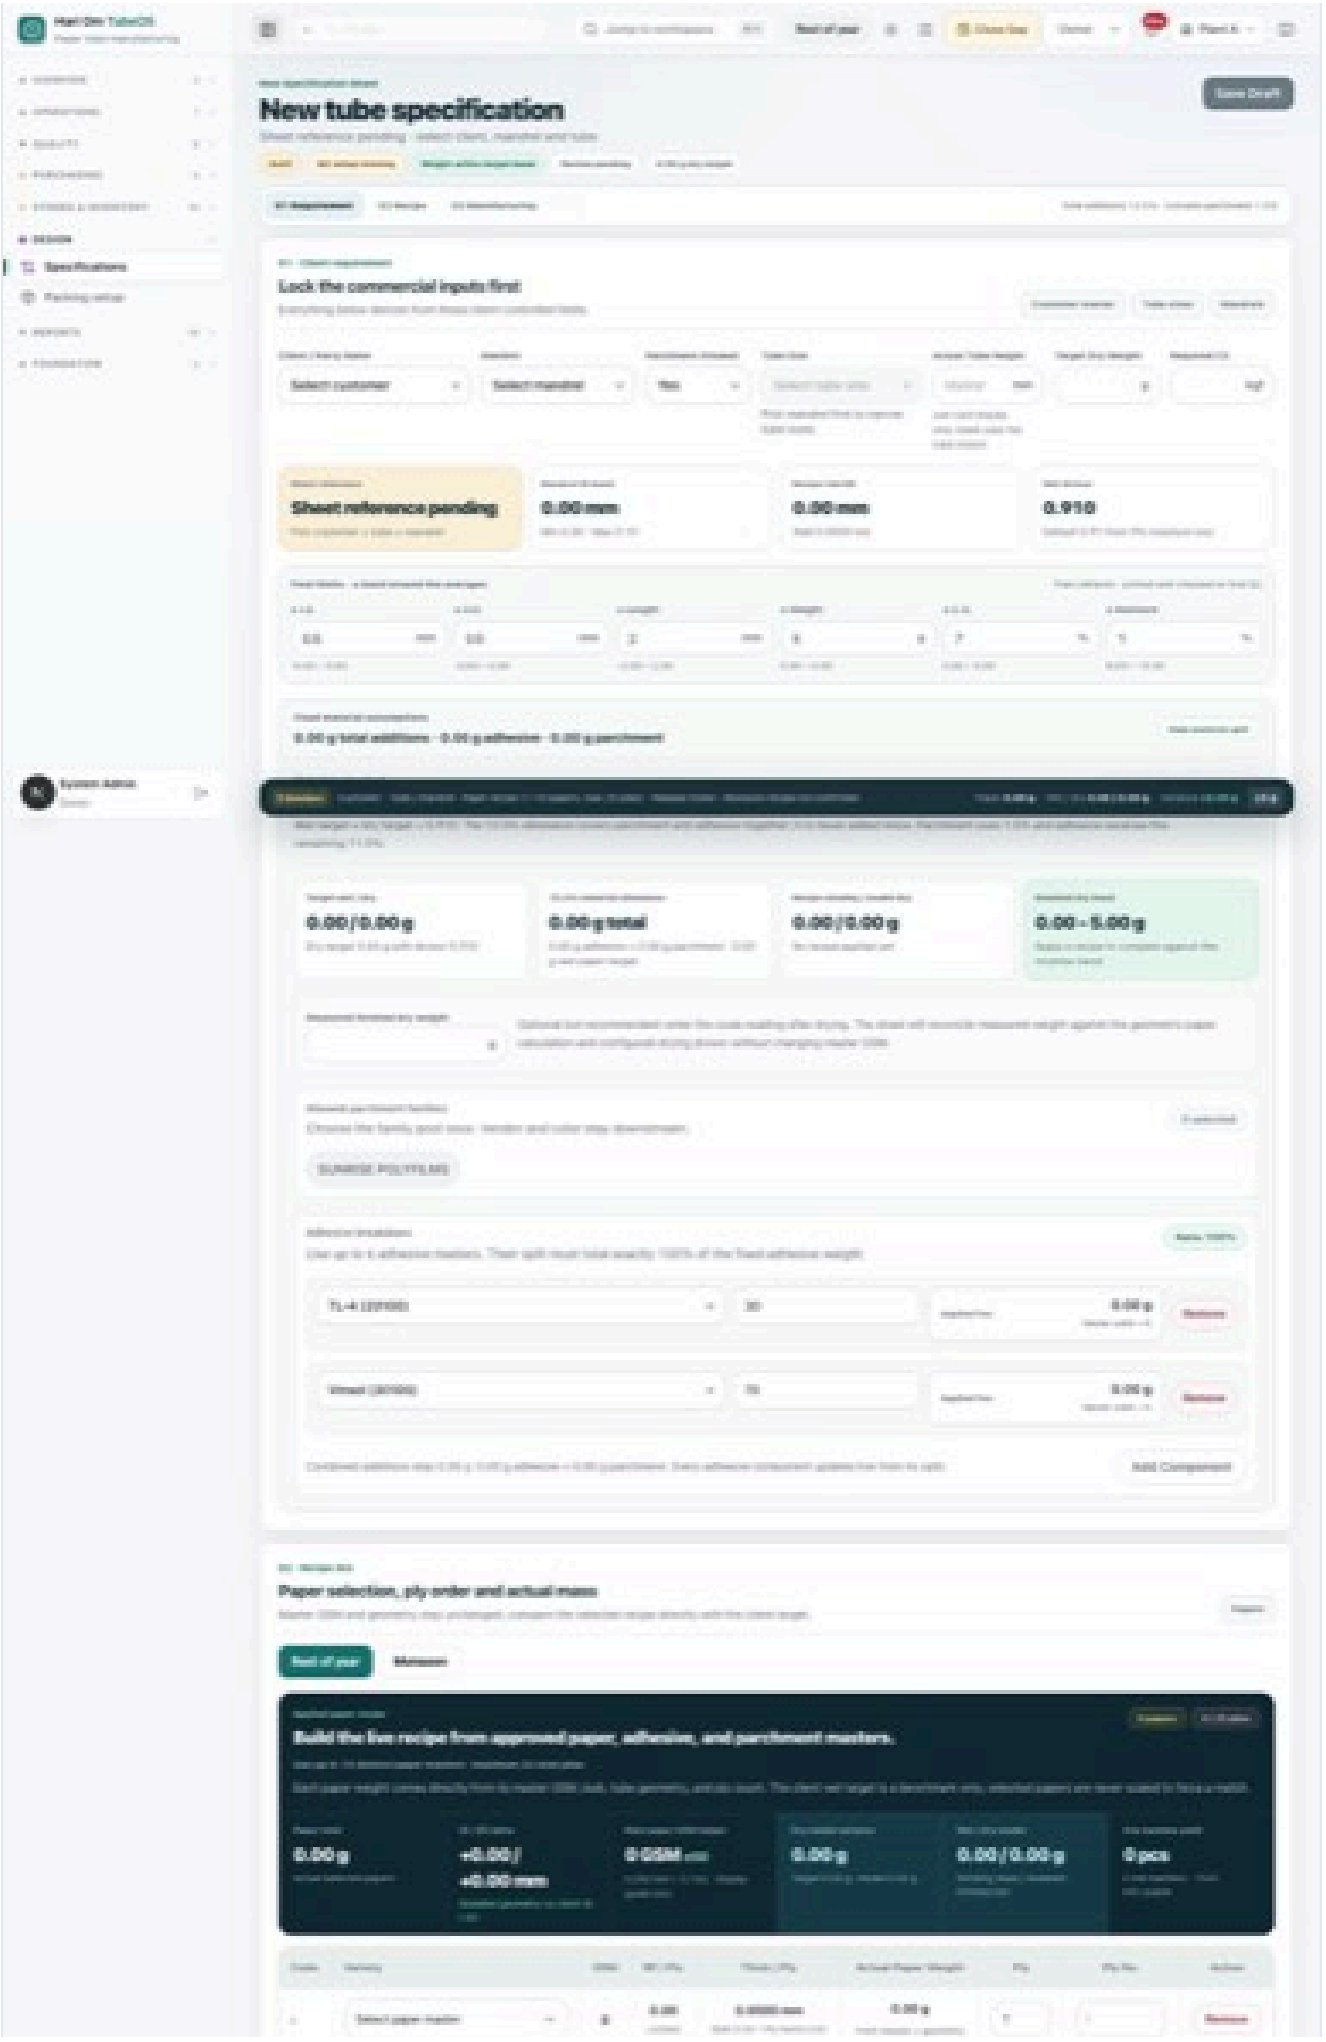
New tube specification
Lock the commercial inputs first
Sheet reference pending
0.00 mm
0.00 mm
0.910
0.00 g total additions · 0.00 g adhesive · 0.00 g parchment
0.00 / 0.00 g
0.00 g total
0.00 / 0.00 g
0.00 – 5.00 g
Paper selection, ply order and actual mass
Build the live recipe from approved paper, adhesive, and parchment masters.
0.00 g
+0.00 / +0.00 mm
0.00 g
0.00 / 0.00 g
0 pcs

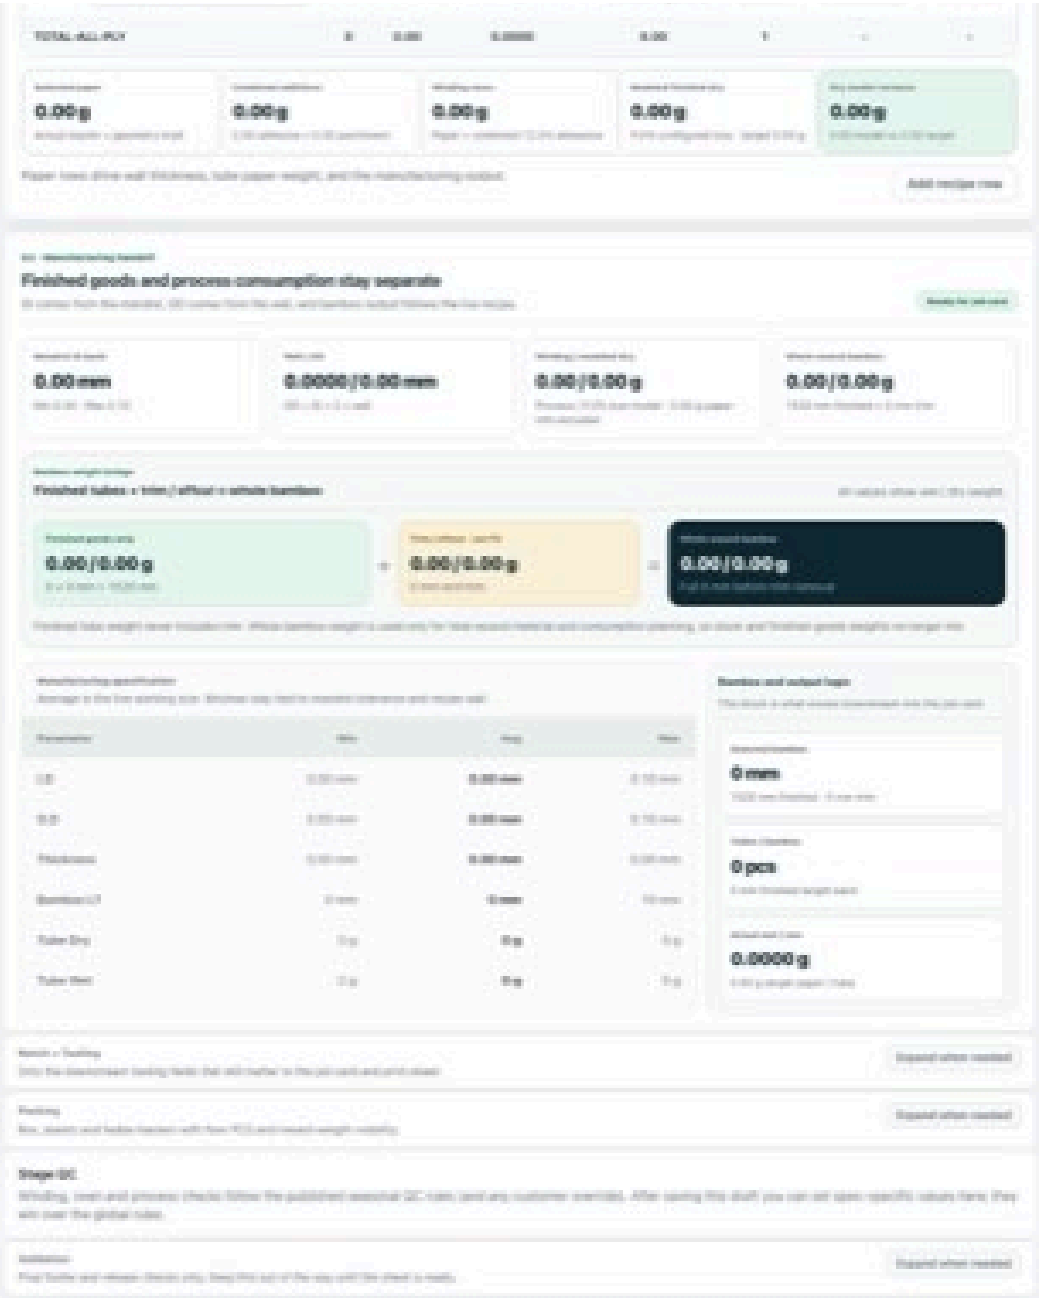



Figure: New tube specification (full page). Top: "Sheet reference pending", chips draft, QC setup missing, Weight within target band, Review pending, and Save Draft. Tabs 01 Requirement, 02 Recipe, 03 Manufacturing. Section 01 "Lock the commercial inputs first" with Client / Party Name, Mandrel, Parchment Allowed, Tube Size, Actual Tube Height, Target Dry Weight, Required CS, the cards Sheet reference, Mandrel ID band, Recipe-led OD, Wet divisor 0.910, Final limits (± bands), Fixed material assumptions, Allowed parchment families and Adhesive breakdown (TL-4 30%, Vinsol 70%). Section 02 "Paper selection, ply order and actual mass" with Rest of year / Monsoon tabs and the paper table. Section 03 "Finished goods and process consumption stay separate" with bamboo weight bridge and manufacturing table. Then Notch + Tooling, Packing, Stage QC and Validation, each "Expand when needed". A dark bar shows "5 blockers: Customer · Tube / mandrel · Paper recipe (1–10 papers, max 25 plies) · Release footer · Monsoon recipe not confirmed".

What you see, section by section:

1. **01 Requirement**: **Client / Party Name**, **Mandrel**, **Parchment Allowed** (Yes/No), **Tube Size** (only tube IDs within ±1 mm of the mandrel are listed), **Actual Tube Height** (job card display only; blank uses the tube master), **Target Dry Weight** (g), **Required CS** (kgf). Cards: **Sheet reference** (made from customer and tube), **Mandrel ID band**, **Recipe-led OD**, **Wet divisor** (0.910 from 9% moisture loss). **Final limits** ± I.D., ± O.D., ± Length, ± Weight, ± C.S. %, ± Moisture % ("printed and checked at final QC"). **Fixed material assumptions**: total additions (adhesive + parchment), wet target = dry target ÷ 0.910; the 12.5% allowance covers parchment and adhesive together and is never added twice. **Measured finished dry weight** (optional). **Allowed parchment families**. **Adhesive breakdown**: up to 6 adhesive masters whose split must total exactly 100%.
2. **02 Recipe**: **Rest of year** and **Monsoon** tabs. "Use up to 10 distinct paper masters · maximum 25 total plies." Table: Code, Variety, GSM, BF / Ply, Thick / Ply, Actual Paper Weight, Ply, Ply No., Action; **Add recipe row**. Paper weight comes from the paper master's GSM and bulk, the tube geometry and the ply count; papers are never scaled to force a match. Totals: selected paper, combined additions, winding mass, modelled finished dry, dry model variance. On the Monsoon tab: **Copy rest of year** and **Confirm Monsoon selection**.
3. **03 Manufacturing**: Mandrel ID band, Wall / OD (OD = ID + 2 × wall), winding and modelled dry weight, whole wound bamboo; **Bamboo weight bridge** (finished tubes + trim / offcut = whole bamboo); **Manufacturing specification** min / avg / max for I.D., O.D., Thickness, Bamboo LT, Tube Dry, Tube Wet; **Bamboo and output logic** (selected bamboo length, tubes per bamboo, wet g per mm).
4. **Notch + Tooling**, **Packing** (see below), **Stage QC** (seasonal winding, oven and process checks; after saving you can set spec-specific values that win over the global rules), **Validation** (release footer: Valid until, Prepared by, Prepared date, Sign-off note).
5. **Blocker bar** (bottom): number of blockers and what they are, plus paper weight, wet / dry and variance against the ±5 g band.

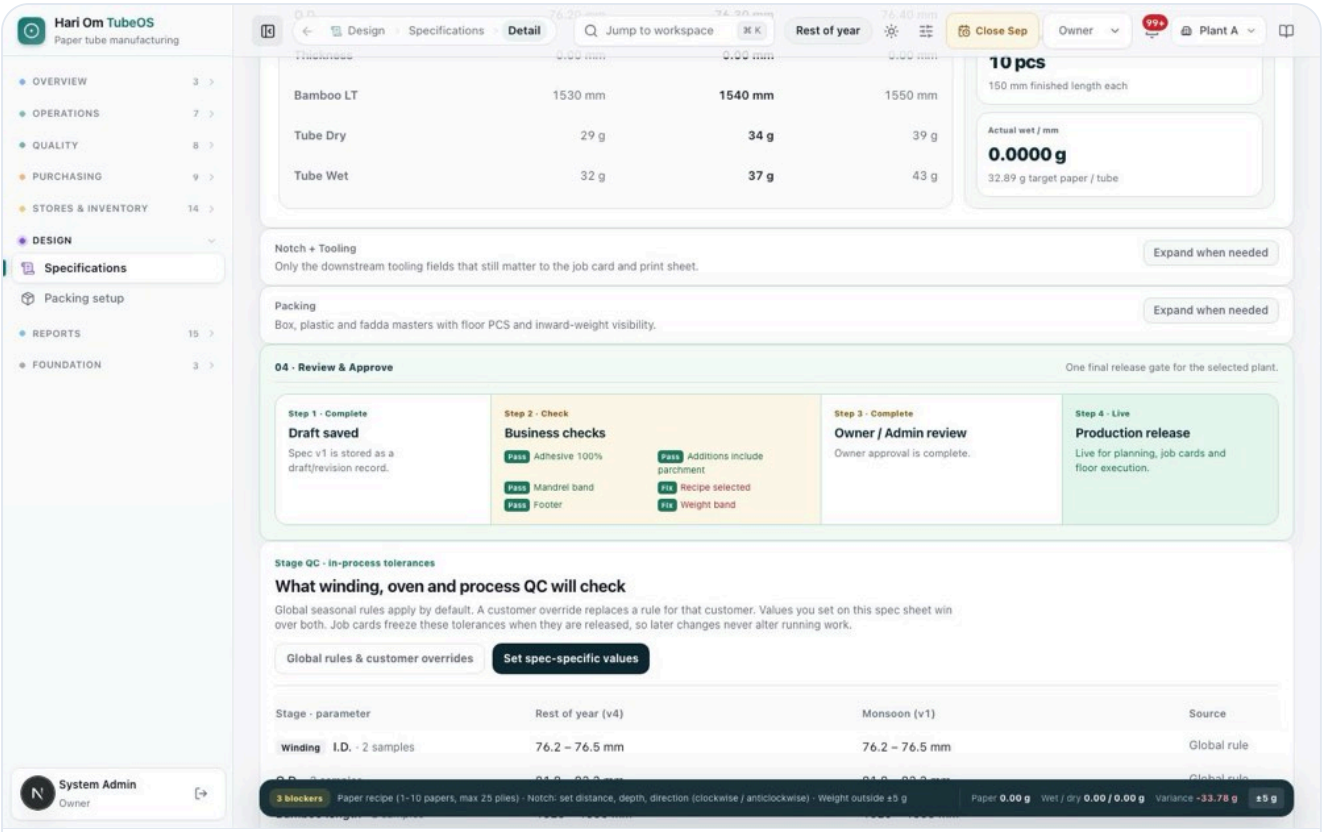



Figure: The Packing section of a spec sheet. Subtitle "Box, plastic and fadda come from the Packaging master; size and weight per piece are read from the master." Fields Box Master (Select box) with its size and weight per box from the master, Qty / Box, Plastic SKU with its weight per sheet, Plastic PCS / Box, Fadda SKU with its weight per piece, Fadda PCS / Box and Special Instructions, plus a note that new specs cannot be approved without a box and qty per box, with links Packaging master and Open Packing setup.

What you see:

1. **Box Master** (**Select box**): only active boxes of the Packaging master. Under it, the box size in mm and its weight per box: "Dimensions and weight per box come from the Packaging master." With no box master: "No active box master is available."
2. **Qty / Box**: whole pcs per full box (for example 48). Job cards pack boxes of this size.
3. **Plastic SKU** (**Select plastic SKU**) and **Plastic PCS / Box**: "Weight per sheet comes from the master (stock is kept in kg)." If the master has no weight: "Weight per sheet not set in master".
4. **Fadda SKU** (**Select fadda SKU**) and **Fadda PCS / Box**: "Fadda is the sheet inside the box (putha); weight per piece comes from the master."
5. **Defaults**: when only one active plastic master (or one fadda master) exists, it is filled in by itself.
6. **Note**: "New specs cannot be approved without a box and qty per box; job cards pack boxes from the spec." Links **Packaging master** and **Open Packing setup**. After a packing amendment, a grey line reads "Packing amended on … by …: … Spec version N kept its approval (packing-only change)."

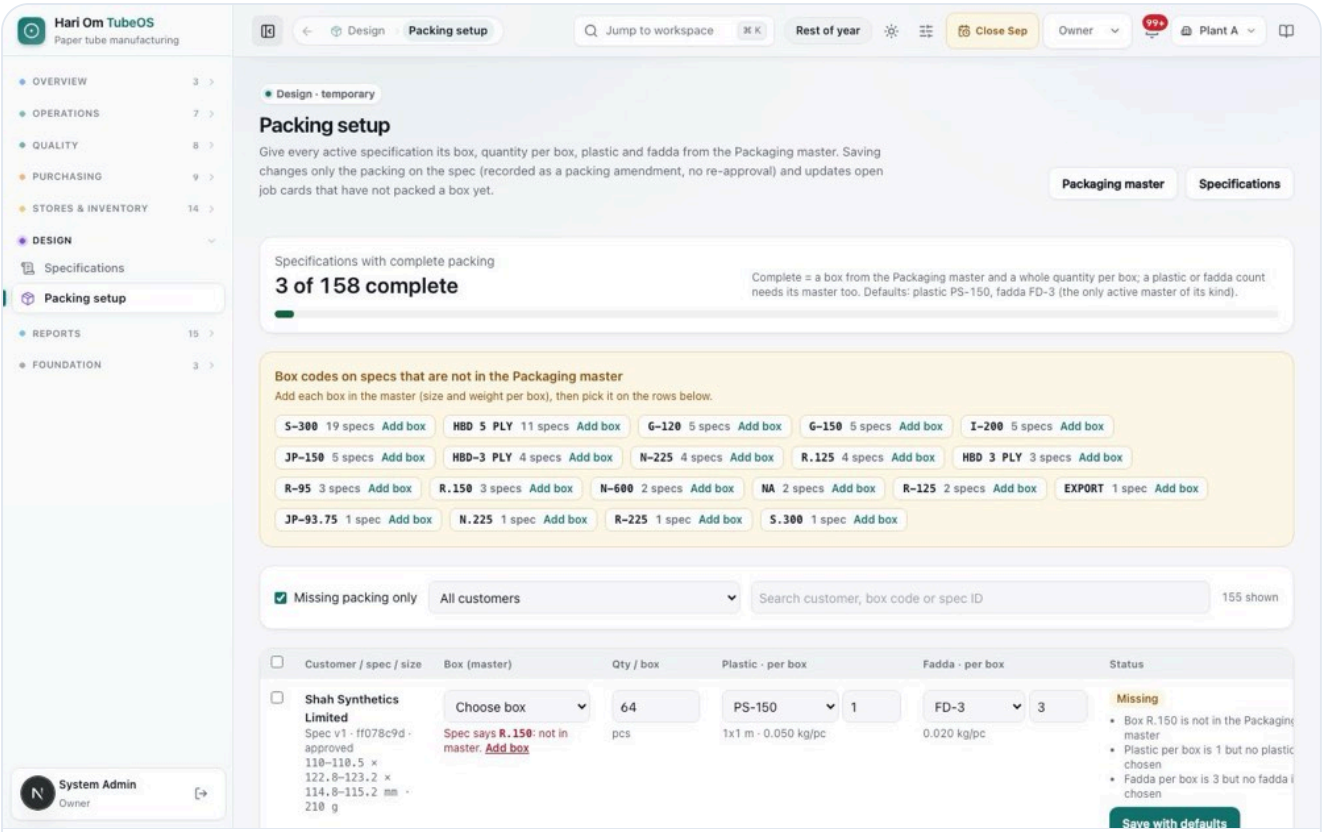



Figure: Packing setup (Design · temporary, Owner and Admin only). A progress bar "Specifications with complete packing", the default plastic and fadda, a panel "Box codes on specs that are not in the Packaging master" with Add box, filters and a bulk bar, and a table with one row per active spec: Customer / spec / size, Box (master), Qty / box, Plastic · per box, Fadda · per box, Status (Complete or Missing) and a Save button.

What you see:

1. **Header**: "Give every active specification its box, quantity per box, plastic and fadda from the Packaging master. Saving changes only the packing on the spec (recorded as a packing amendment, no re-approval) and updates open job cards that have not packed a box yet." Links **Packaging master** and **Specifications**.
2. **Progress**: "Specifications with complete packing" with a bar and count, and "Defaults: …" naming the only active plastic or fadda master. "Complete = a box from the Packaging master and a whole quantity per box; a plastic or fadda count needs its master too."
3. **Box codes not in the master** (amber, when any): box codes typed on old specs that the Packaging master does not have, each with **Add box**. "Add each box in the master (size and weight per box), then pick it on the rows below."
4. **Filters**: **All customers** and "Search customer, box code or spec ID".
5. **Apply to selected**: tick rows (or **Select all shown**), choose a **Plastic** and its per-box count and a **Fadda** and its per-box count, press **Apply to selected**. "Applied to N rows. Press Save on each row, or Save all changed rows." **Clear selection**, **Save all changed rows**.
6. **Table**: **Customer / spec / size** (with the tube weight and "Packing amended " when done), **Box (master)** (**Choose box**, or **Add box** when it is missing), **Qty / box**, **Plastic · per box**

(**No plastic** or a master, with size and kg per piece), **Fadda · per box** (**No fadda** or a master), **Status** (**Complete** in green or **Missing** in amber with what is missing, for example "Choose the box", "Enter qty per box (whole pcs)", "Box R-150 is not in the Packaging master") and the row button (**Save**, **Save again** or **Save with defaults**). A changed row is tinted blue.

7. **After saving**: "Saved to the spec" (or "No change on the spec"), and "3 open job cards updated, 1 already packing kept their box".

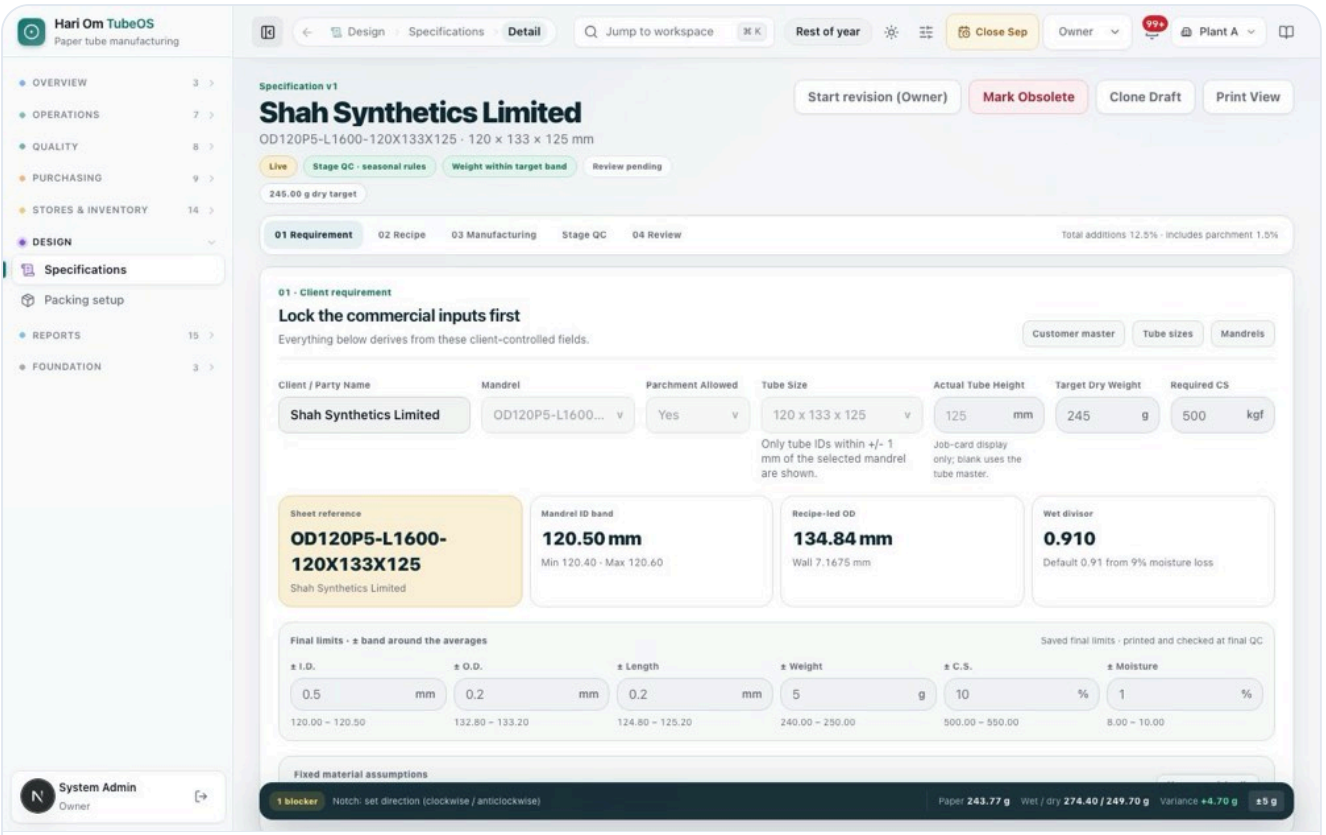



Figure: Specification v1, Sharma Tubes Pvt Ltd, SHARMA_MANDREL-76X81X150 · 76.4 × 81 × 150 mm. Chips Live, QC setup missing, Weight within target band, Review pending, 33.78 g dry target. Buttons Start revision (Owner), Set QC tolerances, Mark Obsolete, Clone Draft, Print View. Tabs 01 Requirement, 02 Recipe, 03 Manufacturing, 04 Review. Fields are read-only. The bottom bar shows "2 blockers: Notch: set distance, depth, direction (clockwise / anticlockwise) · Stage QC tolerances", Paper 32.74 g, Wet / dry 36.96 / 33.64 g, Variance −0.14 g, ±5 g.

What you see:

1. **Chips**: status (**Live**, draft), QC setup state, weight band, review state, dry target.
2. **Buttons** (shown when allowed): **Save Draft**, **Edit Draft** / **Start revision (Owner)**, **Open revision v2 (draft)**, **Set QC tolerances** / **Edit QC tolerances** and **Approve QC tolerances** (legacy specs), **Submit for Owner Review**, **Approve & Go Live**, **Return to draft**, **Mark Obsolete**, **Clone Draft**, **Print View**.
3. **Messages**: "This is a revision. The current live version stays available for sales orders until this one is approved." or "Live for sales orders — production release still blocked".

4. **Seasonal recipe manager** (seasonal specs): buttons **Rest of year r2** / **Monsoon r1**, **Recipe history / diff**, **Confirm current Monsoon recipe**, **Revise Monsoon only**, **Approve this revision**, and **Effective Monsoon QC tolerances** (Winding, Oven, Process checks; "minimum two samples per required parameter").

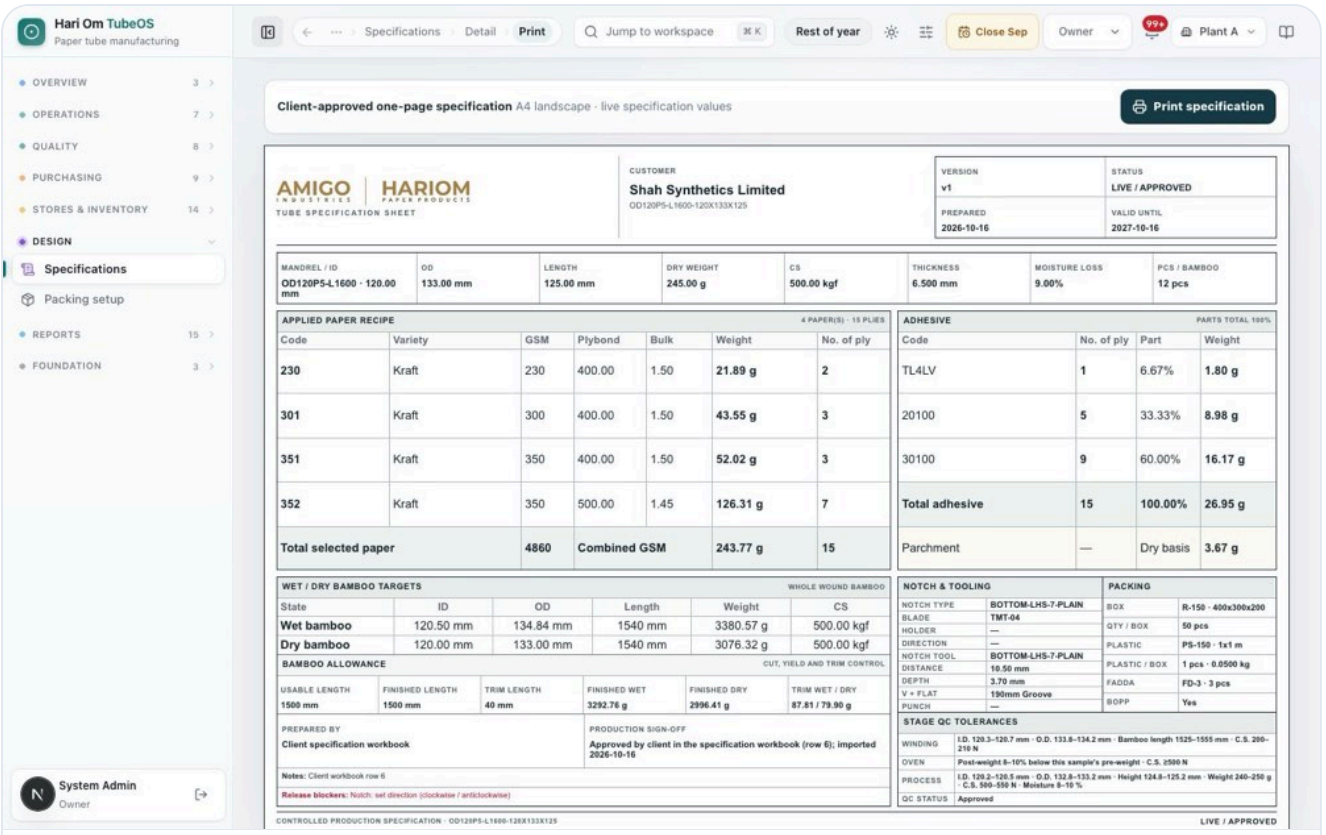



Figure: Print view, "Client-approved one-page specification, A4 landscape, live specification values", with Print specification. The sheet shows Customer Sharma Tubes Pvt Ltd, Version v1, Status LIVE / APPROVED, Prepared 2026-10-03, Valid until 2027-10-03; a strip Mandrel / ID, OD 81.00 mm, Length 150.00 mm, Dry weight 33.78 g, CS 400.00 kgf, Thickness 2.300 mm, Moisture loss 9.00%, Pcs / bamboo 10; Applied paper recipe (SHARMA_300 Kraft 300 GSM, 32.74 g, 3 plies); Adhesive (Glue 100%, 4.22 g; Parchment 0.00 g); Wet / dry bamboo targets; Bamboo allowance; Notch & tooling; Packing (Box R-150, 45 pcs per box, plastic, fadda); Release blockers in red at the bottom.

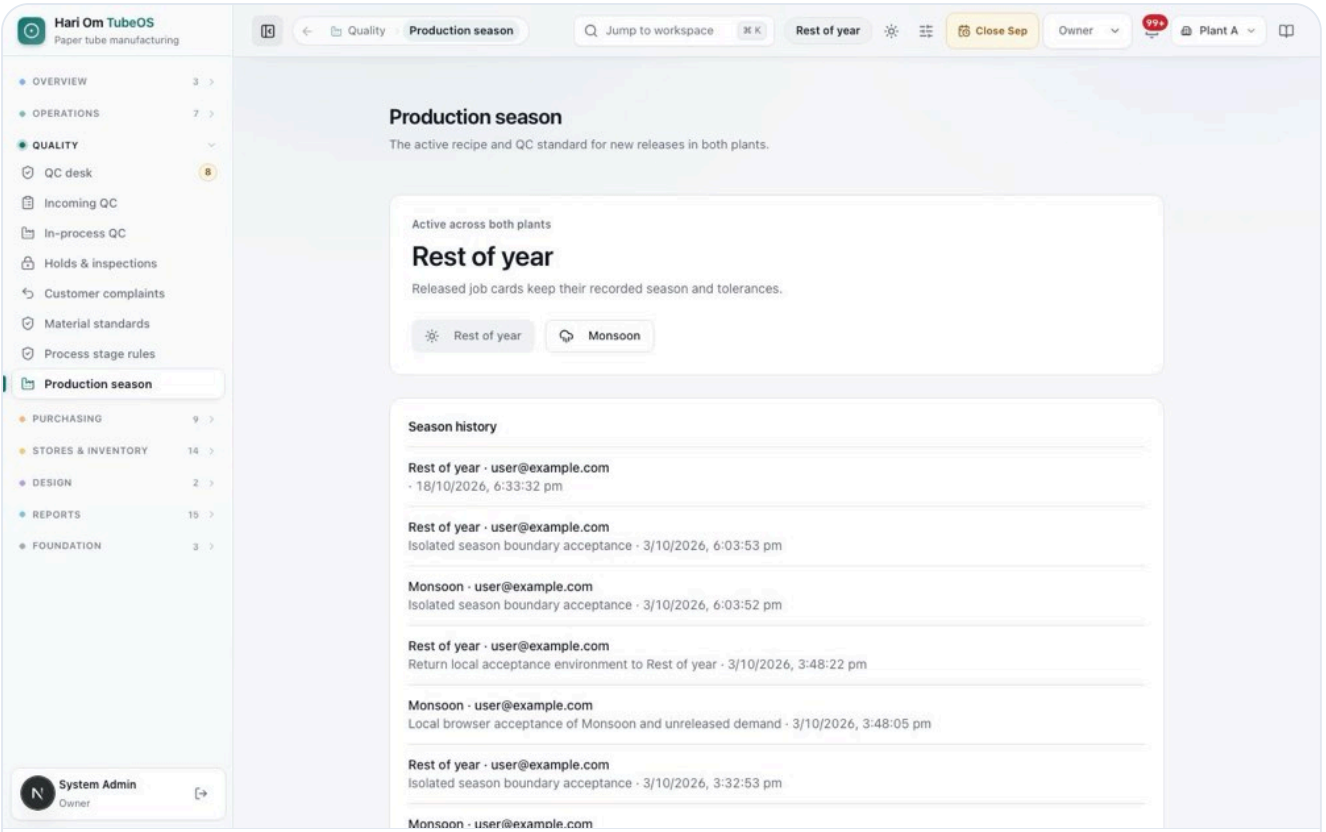



Figure: Production season. "Active across both plants: Rest of year. Released job cards keep their recorded season and tolerances." Buttons Rest of year and Monsoon. Season history lists each switch with who and when.

## Step by step

### How to create a new specification (Owner, Admin)

1. Specifications › **Create specification**. Check the plant in the header is the plant this spec is for.
2. **01 Requirement**: pick the customer, mandrel, Parchment Allowed, tube size; type Target Dry Weight and Required CS. Check the final limits (defaults come from the plant defaults; change only if the customer asks).
3. If parchment is allowed, tick the **Allowed parchment families**. In **Adhesive breakdown** add up to 6 adhesives so the split totals 100% ("Ratio 100%").
4. **02 Recipe**, **Rest of year** tab: **Add recipe row** for each paper, pick the paper master and the ply count. Watch the dry model variance; it must stay within ±5 g of the target.
5. **Monsoon** tab: build the Monsoon plies, or press **Copy rest of year** for the same papers. Press **Confirm Monsoon selection**.
6. **03 Manufacturing**: check bamboo length and tubes per bamboo. Open **Notch + Tooling** (distance, depth, direction clockwise / anticlockwise, tools from the tool master) and

**Packing**: pick the **Box Master**, type **Qty / Box**, and check the plastic and fadda (filled by themselves when only one master exists) and their pcs per box.
7. Open **Validation** and fill Valid until, Prepared by, Prepared date and Sign-off note.
8. Press **Save Draft**. The spec gets its reference and is Draft.

## How to set packing on existing specs (Packing setup)

Roles: Owner and Admin (the owner's packing person uses this page).

1. Sidebar > Design > **Packing setup**.
2. If the amber panel lists box codes not in the master, click **Add box** and add the box in Masters › Packaging (code, size, weight per box). Come back.
3. For each spec row: choose the **Box (master)**, type the **Qty / box**, and check the **Plastic · per box** and **Fadda · per box** (defaults are filled where only one master exists). To give many rows the same plastic and fadda, tick them and use **Apply to selected**.
4. Press **Save** on the row (or **Save all changed rows**). The spec keeps its approval; the change is kept as a packing amendment with your name.
5. Open job cards of that spec that have not packed a box yet take the new packing at once. Cards that already packed boxes keep the packing they started with.
6. If it says "This spec changed since the list loaded. Refresh the list and try again.", refresh and save again.

## How to submit and approve

1. On the saved draft, check the blocker bar shows no blockers. A box "Before Submit for review (N)" lists what is left.
2. Press **Submit for Owner Review**. Status: Review.
3. The Owner or an Admin, with one plant selected, presses **Approve & Go Live**. If greyed out, hover for the reason ("Only the Owner or an Admin can approve a specification.", "Pick one plant in the top switcher before approving.", "Not ready: ...").
4. To send it back instead, press **Return to draft**.
5. Approved specs now appear on sales order lines under "This customer's approved specs".

## How to change one season's paper recipe on a live spec

1. Open the spec (or **Readiness** on the list) and find the seasonal recipe manager.
2. Choose the season, for example **Monsoon r1**, and press **Revise Monsoon only**.
3. Change plies (**Add ply**, **Remove**, or **Copy rest-of-year plies**), type the **Reason for this seasonal change** and press **Save seasonal revision**. "This creates a new Monsoon revision. The other season and released cards retain their recorded recipe."
4. Press **Confirm current Monsoon recipe** if asked, then **Approve this revision**.
5. Press **Recipe history / diff** to see each revision and what changed ply by ply.

## How to revise other fields

1. On an approved spec press **Start revision (Owner)**. A draft revision (v2) opens; v1 stays live for orders.
2. Edit, save, submit and approve as for a new spec. On approval v2 becomes live.
3. **Clone Draft** copies the spec into a new draft (for a similar size or customer).

## How to set QC tolerances on a legacy spec

1. Legacy specs (made before seasonal recipes) show **Set QC tolerances** or **Add quality parameters**.
2. Enter the stage tolerances and save; the Owner or an Admin presses **Approve QC tolerances**.
3. Seasonal specs use the published seasonal stage rules instead (Quality › Process stage rules); spec-specific values can be set in the **Stage QC** section.

## How to print the spec sheet

1. Press **Print View** (or **Print** on the list).
2. Check the values, then **Print specification**. It prints one A4 landscape page, always on white paper. Any release blockers print in red at the bottom; do not hand out a sheet with blockers.

## How to mark a spec obsolete

1. On an approved spec press **Mark Obsolete**. It is no longer offered for new orders; existing job cards are not changed.

## How to switch the production season (Owner)

1. Quality › **Production season**. Press **Monsoon** (or **Rest of year**).
2. Read the preview: "N specifications ready · N require attention", how many released cards keep their frozen contracts, and the list of blocked specs.
3. If some are blocked, tick "I understand the listed specifications cannot release until their seasonal setup is ready."
4. Pick a **Production season switch** reason code (add a note for an OTHER code) and press **Confirm global switch**. The season pill in the header changes for everyone.

## Rules the system enforces

- Only the Owner and Admin create, edit and approve specs (BLOCKS). Approval needs one plant selected (BLOCKS).
- Paper recipe: 1 to 10 distinct paper masters and at most 25 plies (BLOCKS submit; blocker "Paper recipe (1-10 papers, max 25 plies)").
- Adhesive split must total 100% (BLOCKS; blocker "Adhesive split N%").
- Tube size must match the mandrel (±1 mm list) (BLOCKS; blocker "Tube / mandrel").
- Modelled weight within ±5 g of the target (BLOCKS; "Weight outside ±5 g").
- Notch needs distance, depth and direction; the distance must be inside the tube length; notch tools must exist in the tool master (BLOCKS).
- Release footer fields must be filled (BLOCKS; "Release footer").
- If an approved trial measured C.S. below the required C.S., the spec is blocked ("CS trial").
- A new spec needs the Monsoon recipe confirmed (BLOCKS; "Monsoon recipe not confirmed").
- **Packing blockers**: a new spec or revision cannot be approved without a box from the Packaging master ("Packing: choose the box from the Packaging master") and a whole qty per box ("Packing: enter the quantity per box (whole pieces)") (BLOCKS approval).
- **Packing masters only**: box, plastic and fadda must be active Packaging masters of the right kind ("Box R-160 is not an active box in the Packaging master. Add it there first."). A plastic or fadda count needs its master; a master needs a count of at least 1 ("Enter how many plastic pieces go in one box, or clear the plastic."); counts cannot be negative (BLOCKS).
- **Sizes and weights from the masters**: box size and weight per box, plastic and fadda weight per piece are copied from the masters, never typed (AUTOMATIC).
- **One active plastic or fadda master is the default** (AUTOMATIC).
- **Packing setup** saves only the packing fields, as an audited packing amendment, with no re-approval; it updates open job cards that have not packed a box yet (AUTOMATIC). Owner and Admin only (BLOCKS others).
- **Packing theory**: each box packed on a job card uses 1 box plus the spec's plastic and fadda per box; kg = pcs × the master's weight per piece. A packing row that cannot be costed (no stock item, no weight in the master) is kept with a warning, never dropped silently (AUTOMATIC, WARNS).
- Seasonal recipes are versioned separately; editing one never bumps the other (automatic).
- A job card keeps the season, recipe and tolerances recorded at its release (automatic). New releases on a spec whose active-season recipe or QC setup is not ready are refused (BLOCKS release).
- Only the Owner switches the production season, with a reason (BLOCKS).

### Legacy (V1) and seasonal (V2) specs and job cards

- **Legacy specs** were made before seasonal recipes. They carry one recipe and their own QC tolerances.
- **Seasonal specs** carry Rest of year and Monsoon recipes and use the seasonal stage rules.
- Since 25 Oct every new release creates a **batch-entry job card** (runs plus QC readings per stage) from either kind of spec. Older cards opened before that may still show the **old entry form**; on a phone they say "Old entry form."

## Sample

Sharma Tubes Pvt Ltd orders 76.4 x 81 x 150 tubes, dry weight 33.78 g, C.S. 400 kgf, 10 pcs per bamboo.

| Item | Rest of year | Monsoon |
|---|---|---|
| Paper | SHARMA_300 Kraft 300 GSM × 3 plies | SHARMA_300 × 2 plies + Kraft 280 GSM × 1 ply |
| Paper weight | 32.74 g | 32.10 g |
| Adhesive | Glue 100%, 4.22 g | Glue 100% |
| Revision | r1, approved | r2 (revised 15 Jun, "Higher humidity, lighter outer ply"), approved |

- In June the Owner switches the season to **Monsoon**. SO/26/06/120 released on 16 Jun gets job card 26/06/044 with the Monsoon r2 recipe frozen on it.
- On 1 Oct the Owner switches back to **Rest of year**. Card 26/06/044, still open, keeps Monsoon r2. New releases use Rest of year r1.

## Common questions

**? My spec does not appear on the sales order.**

It is not approved yet, or it is obsolete. Approve it; drafts are listed under "Not approved yet — approve in Specifications first".

**Approve & Go Live is grey.**

Hover over it for the reason: not Owner/Admin, no plant selected, not submitted, or blockers left.

**The list shows "Needs attention" for Monsoon.**

Open **Readiness** to see what is missing (for example the Monsoon recipe is not confirmed).

**If I change the recipe, do running job cards change?**

No. Each card keeps the recipe and tolerances it was released with.

**Why does release say the spec is not ready?**

The active season's recipe or QC setup has blockers. Fix them on the spec, or ask the Owner about the season.

**Can Planners or Sales edit a spec?**

No. Only the Owner and Admin. Others use approved specs.

**Why can't I approve my new spec? It says Packing.**

Pick a box from the Packaging master and type a whole qty per box in the Packing section.

**The box we use is not in the list.**

Add it in Masters › Packaging (Boxes) with its size and weight per box, then pick it. On Packing setup, missing box codes are listed with **Add box**.

**Does Packing setup need the spec to be approved again?**

No. Only the packing changes, as a packing amendment with your name. The approved version stays live.

**I changed the qty per box. Do running job cards change?**

Open cards that have not packed any box yet take the new packing. A card that already packed boxes keeps its packing.

**What is fadda?**

The sheet put inside the box (putha). It is a Packaging master of kind Fadda.

**What is the 12.5%?**

The plant default allowance for adhesive and parchment together on top of the paper; parchment takes 1.5% and adhesive the rest. Change it with **Edit defaults** (plant level) or on the spec.

## Related chapters

- Sales orders
- Job cards
- Quality
- Stock counts, stock book, locations and opening stock
- Welcome to Hari Om TubeOS: the big picture
- A day in the life

START HERE, SALES AND DESIGN

# A day in the life


**What it is:** One short routine per role: what to open first, the pages you use in order, and the mistakes to avoid.
**Who uses it:** Every role; new staff on their first week.
**Where:** Your start page after sign-in (see Getting started)

## At a glance

- Start every day on your start page and the **Inbox** (or the bell). Work the **Needs action** items first.
- Check the **plant** and **season pill** in the header before entering anything.
- The job card is the floor's truth; planning never blocks the floor; job card QC flags (never holds), incoming QC holds.
- Finished pcs are packed in labelled boxes as Process runs get their readings; boxes ship as soon as they are in stock.
- Every "why" is a reason code picked from a list, with an optional note.
- Nothing returns from the floor; issued material counts as used.
- When a button is grey, hover over it or read the small text under it: it always says why.

## The flow

### One order through the desks in a day

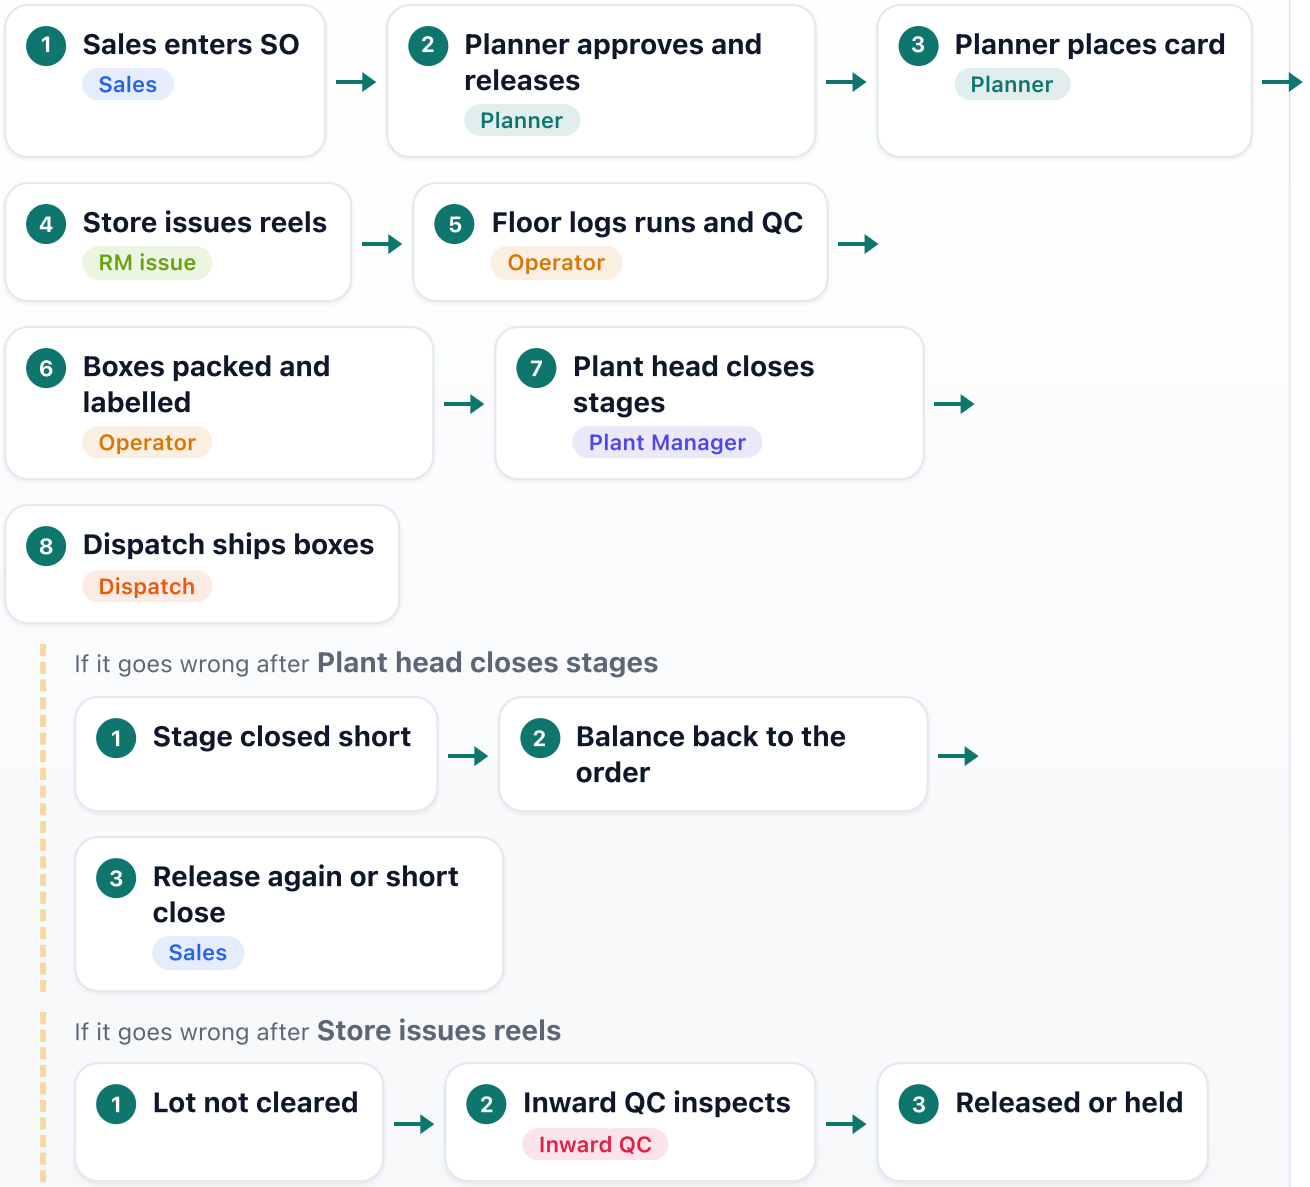


Each desk hands work to the next through the Inbox. If your inbox is empty but a count on your dashboard is not, open the count: the list behind it is the work.

## Screen tour

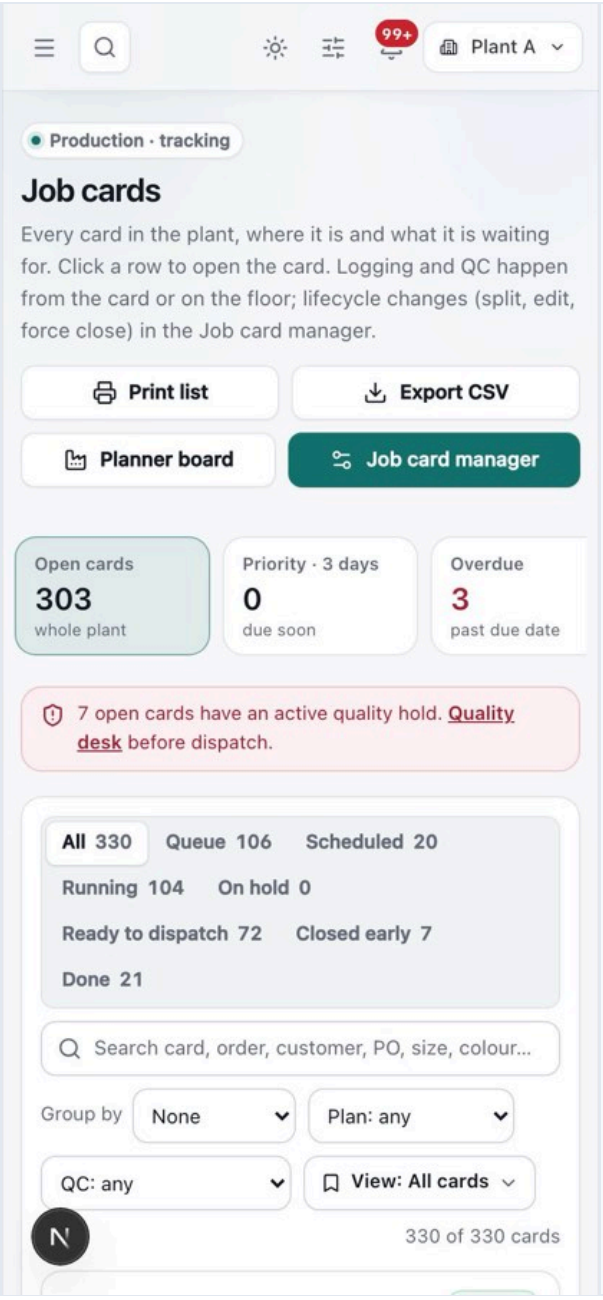



Figure: Job cards on a phone, the page most floor roles open many times a day. Buttons Print list, Export CSV, Planner board and Job card manager. Tiles Open cards 303 (whole plant), Priority · 3 days 0, Overdue 3. A red note: "7 open cards have an active quality hold. Quality desk before dispatch." Tabs All 324, Queue 106, Scheduled 20, Running 103, On hold 0, Ready to dispatch 71, Closed early 7, Done 17, a search box and filters Group by, Plan: any, QC: any, View: All cards.

What you see:

1. **Tiles**: open, priority (due in 3 days) and overdue cards; tap to filter.
2. **Quality hold note**: cards with an active hold need the QC desk before dispatch.

3. **Tabs and filters**: narrow to your stage, plan state or QC flags.

## Step by step

### Sales

Morning: open **Orders** (your start page). Check tiles **Overdue** and **Due in 3 days**, then the **Draft** and **Waiting approval** tabs.

1. **Orders** › **New sales order** for each new customer PO (or internal order if the PO is not in yet).
2. **Send for approval** on your own orders; approve colleagues' orders (Sales may approve).
3. **Release** approved orders: pick colour and winder queue per card.
4. Expand rows to answer customers: job card stage dots, made and dispatched.
5. **Add customer PO** on internal orders when the PO arrives.
6. **Customer hold & close**, **Short close** or **Cancel order** with a reason code when the customer changes plans; **Resume** with an **Order hold lifted** code.
7. Look for pcs **not released** that came back from job cards (a stage closed short, or a card closed early). Release them again or short close the order with a reason.
8. Reports › **Sales pulse** (including **Cancelled / short-closed by reason**) and **Customer 360** once a week.

Avoid: typing a rate without checking the **Last rate** hint; releasing without a colour decision from the customer; cancelling when work has started (use Short close).

### Planner

Morning: **Planner** › **Planning overview** (Yesterday → +5 days). Read **Not run**, **Going back to the queue** and **Waiting to be planned**.

1. **Orders**: approve drafts and release what production needs now.
2. **Winder planning**: drag cards from the queue to machine and shift; use **Split plan** for one card over several shifts.
3. **Oven planning** and **Process planning** (they open once the earlier stage has a slot).
4. **Print** shop-floor sheets for each stage.
5. **Job cards**: check "not planned yet" and "slot passed" plan statuses.
6. **RM inward calendar**: read rose shortage cells; **Suggest arrivals** or add arrivals for the Owner to approve.
7. Reports › **Plan vs actual** and **Planning performance**.

Avoid: treating a missed slot as an error on the floor (the run is the truth); planning Oven before Winding has a slot (it is locked); using **Split into a new card** when you only meant **Split plan**.

## Plant Manager

Morning: **Job cards** (start page). Check **Overdue**, **QC holds** and the red quality-hold note.

1. **Inbox** › **Needs action**: holds and runs waiting for you.
2. **Job cards** › open a card: submit runs operators logged, **Close** stages when both QC readings are in. If a stage cannot reach its target, close it short with a **Stage closed short** code: the balance goes back to the order and the later stages carry on.
3. **Quality** › **In-process QC**: read flagged readings (they never stop a card); **Holds & inspections**: place a hold only when goods must stop, and decide holds with a **QC hold release** code (only the plant head, Owner or Admin release a job-card hold).
4. **Job card manager**: split, edit qty or colour, force close or cancel, with a reason code.
5. Reports › **Employee performance**: runs, reject % and flagged readings per operator.
6. **GRN register & labels** and **Invoice differences**: approve manual GRNs and rate differences (not ones you made).
7. **Month-end close**: write notes on OVER or UNDER items after the count is approved.

Avoid: force-closing a card to "fix" numbers (use edit with a reason); approving a GRN you created yourself (the system refuses).

## Operator

Morning: your start page shows **Your work**: **Log output**, **Job cards**, **Log QC**, **Scan a label**.

1. Scan the job card QR with the phone camera (or **Log output** › type 26/10/315).
2. Pick your stage tab, **Log output**: machine, your name in **Operator** (only your department is listed), quantities, and a **Floor rejection** code for any rejected pcs.
3. **Log QC**: at least 2 readings for every required check, for every run.
4. Check the amber **Still needs QC** list before the shift ends; it should be empty.
5. **Scan another card** for the next card.
6. On Process: when boxes are packed, print their labels from the card's **Dispatch** tab (**Box labels**) and stick one on each box. The part box label says PART BOX.

Avoid: logging on a card from memory instead of scanning it; skipping the second reading (the stage cannot close and the next stage cannot take the run); typing rejected pieces by hand (the system works them out).

## Inward QC

Morning: **Incoming QC** (start page), tab **To weigh**. One card per bill.

1. Open a bill, put each reel on the scale and type the **Actual kg** (Enter goes to the next reel, or scan the AIT label). Accept needs the weight; Hold and Reject do not.
2. Other checks (GSM, moisture…) are optional under **More checks**; a reading you enter that is out of band holds the reel. **Save weighed rows**.
3. A typo? Use **Re-weigh** with a reason. When a bill is weighed short, the banner says who acts next (Owner or debit note); QC does nothing more.
4. **Holds & inspections**: held lots and their decisions (re-inspect, concession, return to supplier). Old held lots need their weight before release.
5. **Material standards**: the checks per material type.

Avoid: accepting a reel without putting it on the scale; passing a reel to "help production" when a reading is out of band; worrying about invoice questions (they go to Accounts and never hold material).

## In-process QC

Morning: **QC desk**, then **In-process QC**.

1. **In-process QC**: runs still waiting for their 2 readings, and flagged readings by stage.
2. **Log QC**: scan the card, pick the run, enter readings.
3. **Holds & inspections**: holds waiting for the plant head.
4. Reports › **Quality analytics** weekly.

Avoid: expecting a flagged reading to stop the card (it does not; tell the plant head if it needs action).

## Store and GRN

Morning: GRN starts on **Goods inward**; Store on **Inventory** (stock overview).

1. **Goods inward** › **At the gate**: bills the watchman photographed. Pick one to make its GRN with the photo beside the form (or **Make GRN** on the "Material at the gate" notification). **Expected arrivals** shows what is due today.
2. **Goods inward**: supplier challan number, invoice (or invoice pending), net kg and width per reel from the bill; post once. The gate photo is linked to the GRN and every reel.
3. Print the reel labels (one per reel or coil) and put them on before the reel leaves the dock.
4. **GRN register & labels**: attach invoices, reprint labels with a reason.
5. **Stock counts & book**: rack and spot counts; **Locations** for rack labels.
6. Store also: **Purchase orders** (send scheduled drafts); **Dispatch** › **Gone out at the gate**: link each truck the watchman photographed going out to its challan(s), confirm the Tally bill number and click **Link challan**; **Doc Vault** › **Unlinked** for bills with no GRN.

Avoid: leaving a gate bill without a GRN for more than a day (a reminder goes out); weighing several reels together (one reel = one lot = one label); receiving more than the PO open quantity

without a written reason.

### RM issue

Morning: **Reel & coil issue** (start page). Tiles: Ready for the floor, Not cleared yet, Slitting cards to write.

1. Scan each reel or coil going to the floor and press **Issue** (shift and date come from the clock).
2. Write the **slitting card** (coils made, wastage kg) for every reel sent to the slitter.
3. **Material issue**: adhesive, parchment (by colour and kg) and packing for the shift.
4. **Issue history**: check today's issues.

Avoid: issuing to a machine or job card (issue is to the floor by shift); taking anything back from the floor.

### Dispatch

Morning: **Dispatch** desk (start page). Check **Ready to dispatch**.

1. Pick a job card with **Boxes ready for a challan** (Process may still be running; no manual hold).
2. **Make challan from boxes**: scan each box label (or tick boxes, or **Select all ready**), then vehicle, transporter, LR. Net weight comes from the spec and can be edited.
3. Seal once; print the challan. It lists every box code, the box count, pcs per box and total pcs. Type the Tally bill number with **Add Tally no.** if you have it.
4. After Process closes, ship the part box with the last boxes, or keep leftover boxes with **Retain surplus FG** and a reason code.
5. **Orders** › **Partly dispatched** to see balances still to send.
6. Check that sealed challans show **Out · Tally … ✓**; a challan still **Not out of gate** in the evening is in the daily notice.

Avoid: opening a box to ship part of it (boxes ship whole); shipping a card with an active hold; sealing twice for a retry (the system does not post stock twice, but check the list first).

### Watchman (gate)

Shift start: sign in on the gate phone; it opens the **Gate desk**. Tap your gate.

1. **Inside now**: visitors waiting (from the QR poster) and inside. Check the ID, **Let in** or **Deny** with a reason; **Out** or scan the pass when they leave.
2. **+ Visitor** for someone without a smartphone.
3. **+ Bill in**: photograph every page of each bill or challan, tap the kind (Material or the expense type), vehicle no., **Save**.

4. **+ Goods out**: photograph the Tally bill and our challan, type the vehicle no., **Gone out**.
5. **Today**: check every entry has its photo; keep the phone on the network until uploads finish.

Avoid: typing bill or Tally numbers (Store reads them from the photo); holding a truck for the upload; leaving a visitor inside after closing without marking them out.

### Purchase accounts work (Plant Manager, Owner, Admin)

Invoice checks and debit notes are handled by the Plant Manager, Owner or Admin logins.

1. **Invoice differences**: rate or quantity differences between invoice and PO; decide each.
2. **GRN register & labels** › **Invoice pending**: attach invoices; the invoice rate stays editable while pending.
3. **Debit notes**: create one per vendor for positive rate differences, approve, settle.
4. **Purchase reports**: Excel registers.
5. **Gate › Bills inbox**: file the expense bills photographed at the gate (party, bill no., date, amount, cost head).

Avoid: holding material for a price question (QC is the only gate for issue); deciding a difference on a GRN you made.

### Owner and Admin

Owner morning: **Dashboard** › **Action center**. Admin morning: **System health**.

1. Approve sales orders, **PO approvals** (POs and requisitions) and **RM arrivals** on the RM inward calendar.
2. **Quality holds** and **Blocked & overdue job cards** lanes. Owner: answer **Weight short** notifications with **Make debit note** or **Skip...** (or Purchasing › Invoice differences › Weight differences).
3. **Specifications**: approve new specs and seasonal revisions; Owner switches the **Production season**.
4. **Stock counts & book**: approve counts and corrections (Owner).
5. **Month-end close**: close the month (Owner) after the count is approved and notes are in.
6. Admin: **System** › Users, Roles & access, Plants, Machines, Background jobs; **Masters**; **Audit**.

Avoid: working in **All Visible Plants** and wondering why a page will not save (pick one plant); approving your own order without checking it (you may, and the history records it).

## Rules the system enforces

- Each role sees only its pages; buttons a role cannot use are hidden or greyed with the reason (BLOCKS).
- Maker-checker on sales orders, manual GRNs and commercial differences (BLOCKS the maker; Owner and Admin may approve their own sales orders and POs).
- Two QC readings per required check before a stage closes (BLOCKS close). Out-of-band job card readings flag only; only holds placed on purpose stop a card.
- Every reason is a code from Masters › Reason codes (BLOCKS free text alone).
- Floor forms list only the stage department's operators (BLOCKS others).
- Only QC-cleared stock can be issued (BLOCKS). Issue shift and date come from the clock (automatic).
- Closed months refuse entries dated in them (BLOCKS).

## Sample

Thursday 31 Oct, Plant A:

- 08:10 Priya (Sales) enters SO/26/10/418 for Sharma Tubes Pvt Ltd, 2,000 pcs RED, and sends it for approval.
- 08:30 Ramesh (Planner) approves and releases it: job card 26/10/320 in the SHARMA_WINDER-1 queue; he places it on Shift A.
- 08:45 Anil (RM issue) scans reel AIT 06281 (cleared) and issues it; it shows under Slitting cards to write.
- 09:00 Suresh (Operator, Winder department) scans 26/10/320, logs 180 bamboo on Winding, and two readings per check.
- 13:30 Meena (Plant Manager) submits the runs. Paper ran out, so she closes Winding short at 180 of 200 bamboo with SS-MATERIAL-SHORT. 200 pcs go back to SO/26/10/418 at once; Priya releases them again the next morning.
- Next day Process logs its runs; boxes of 50 are packed as the readings are saved, and Kiran prints their labels. Ravi (Dispatch) ships 20 boxes (1,000 pcs) before lunch. Process closes at 1,790 good pcs: 35 full boxes and a part box of 40, and 10 pcs go back to the order. Ravi ships the other 16 boxes (790 pcs) in the evening.

## Common questions

**I am new. Which page do I open first?**

Your start page (it opens after sign-in), then the Inbox.

**Two people do my job. Do we share work?**

Yes. Queues and lists are per plant and role, not per person.

**I cover two roles.**

Ask the Admin to add both roles to your login and use the role switcher.

**Who do I ask when a button is grey?**

Read its reason first. If it is a role or plant reason, ask the Owner or Admin.

**Can I fix a mistake myself?**

Usually yes, with a reason: edit the run, change the colour on the order, raise a stock correction. Approved and closed records need the Owner.

## Related chapters

- Getting started
- Dashboard and inbox
- Using TubeOS on a phone
- Sales orders
- Specifications
- Job cards
- Job card manager
- Planner
- Log output and QC entry
- Quality
- Purchase orders, PO approvals and requisitions
- RM inward calendar and expected arrivals
- Invoice differences, debit notes and purchase reports
- Goods inward, GRN register and labels

- Issue to the floor: reels, coils and materials
- Stock counts, stock book, locations and opening stock
- Reports
- Welcome to Hari Om TubeOS: the big picture

# Job cards


**What it is:** The list of every job card in the plant and the one page per card that shows its stages, runs, QC, plan, material, boxes, dispatch and full history.
**Who uses it:** Planner, Plant Manager, Operator, QC and In-process QC, Sales, Dispatch, Owner and Admin.
**Where:** Sidebar > Operations > Job Cards (/production/job-cards); one card opens at /production/job-cards/; a box opens at /production/boxes/; box labels print at /production/boxes/labels?card=

## At a glance

- A job card is made when a sales order line is released. Its number is year/month/running number, for example **26/10/315**. A card split off it gets a letter: **26/10/315-A**.
- The **Job cards** list tracks where every card is. Click a row to open the card page. Lifecycle changes (split, edit, force close, cancel, emergency) are done in the **Job card manager**, not here.
- The card page is where the day's work happens: **Log output**, **Log QC**, **Close stage**, **Print card**, **Phone link**.
- **Any stage can close short.** The pcs the stage did not make go back to the sales order at once, the later stages carry on with what was passed on, and the card finishes normally.
- **Process good pcs are packed into boxes.** Each full box gets a box code (for example **B2610315-001**) and a QR label; the pcs left when Process closes go into a **part box**. The box is what goes into stock and what ships.
- **QC never holds a job card.** A reading outside its band is saved and **flagged** on the run, the box and the card. Only a hold that the plant head, Owner or Admin places on purpose stops the card.


## The flow

### Life of a job card

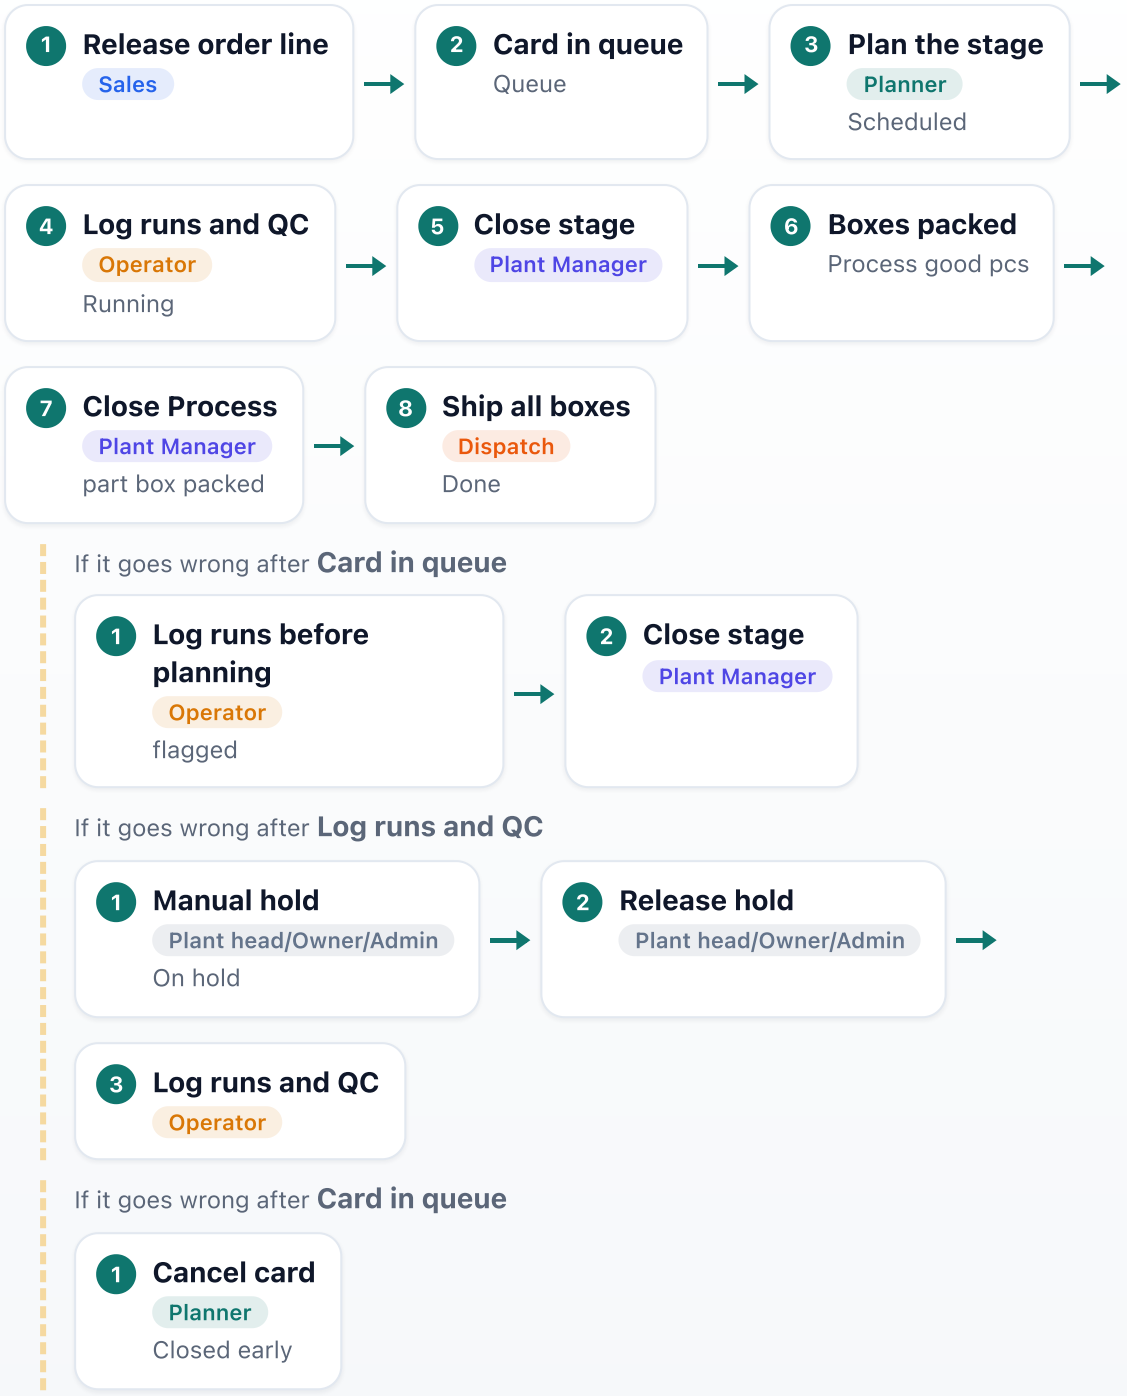



A card moves Winding, then Oven, then Process. Packing and the final QC close automatically with Process, so the floor sees only W, O, P and D (Dispatch). Boxes are packed while Process is still running, so the first boxes can ship before Process closes. The card is **Done** when Process is closed and every box has shipped or been kept as surplus.

### Stage closed short

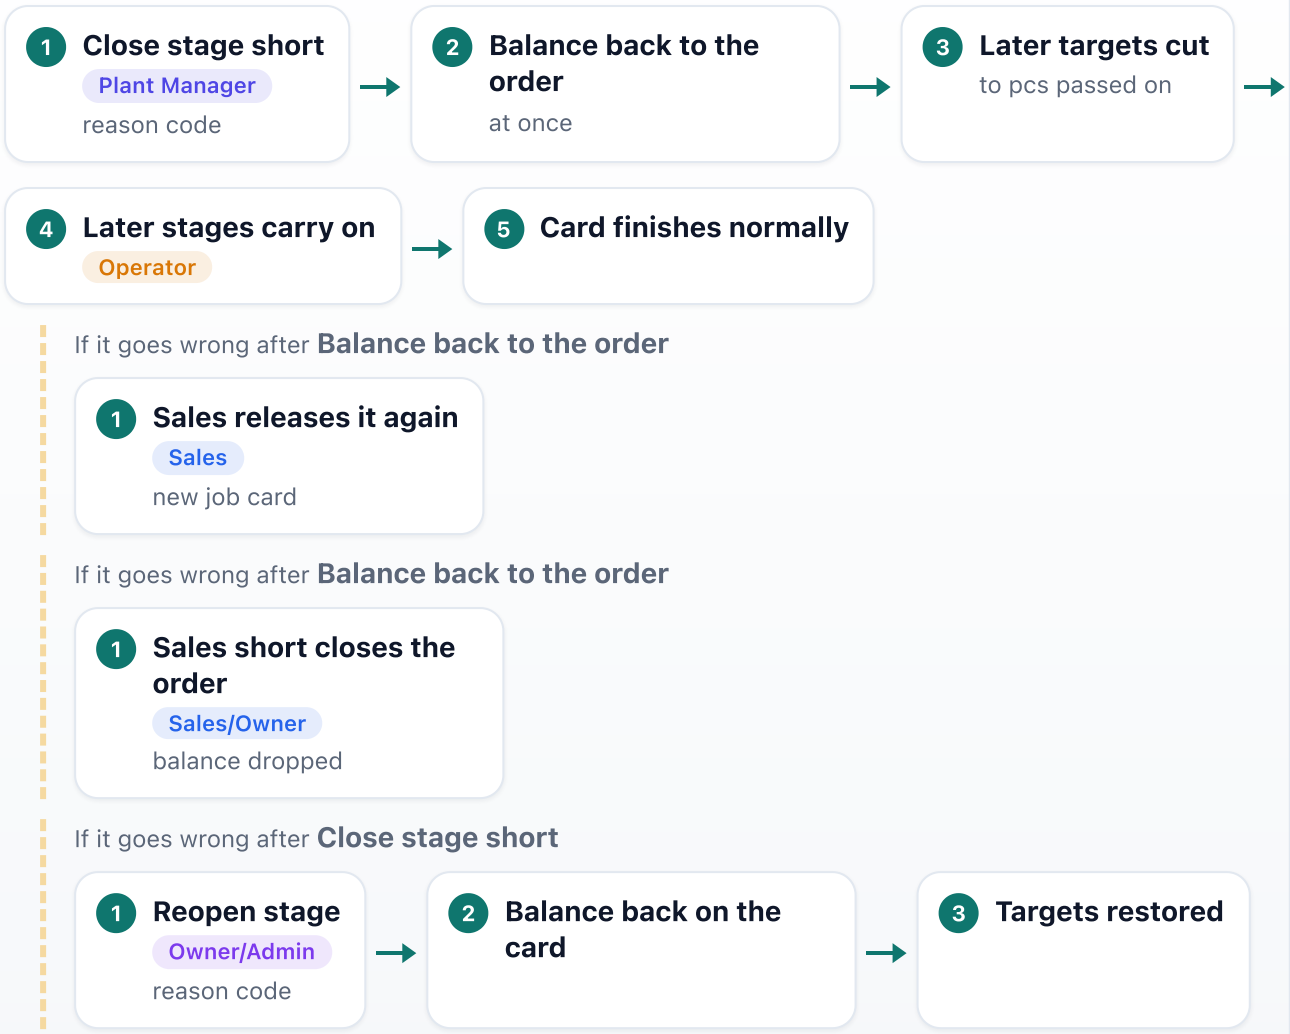



A short close never stops the card. The pcs that were made keep moving. Only the pcs that were not made leave the card.

### Boxes from Process

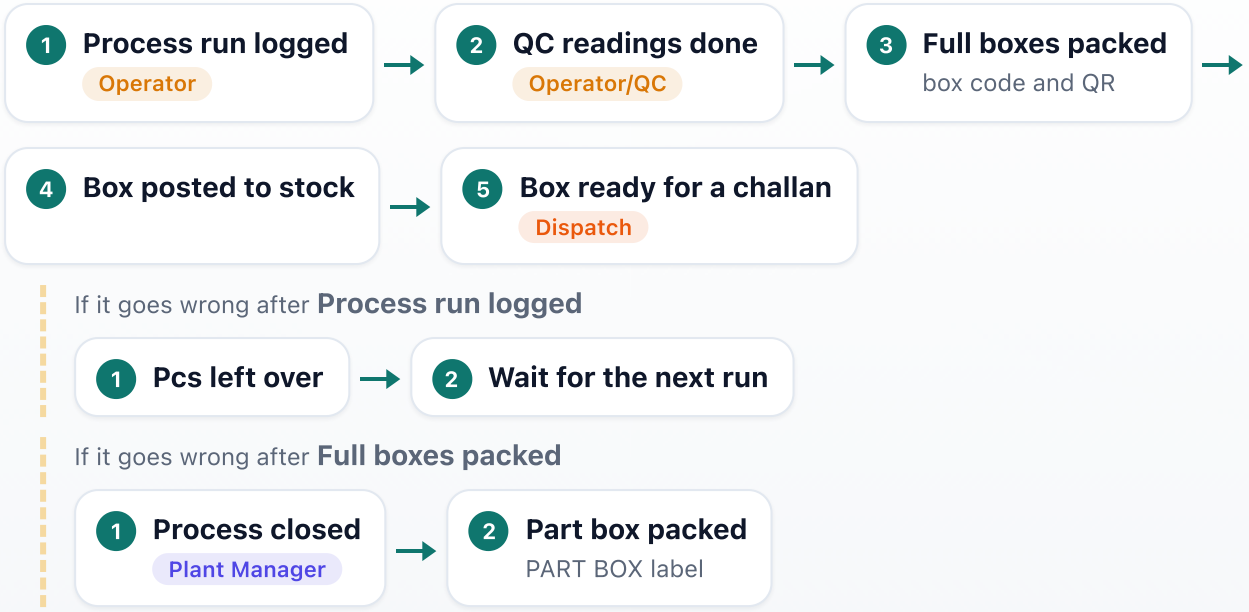


### Batch entry (V2) versus old form (V1)

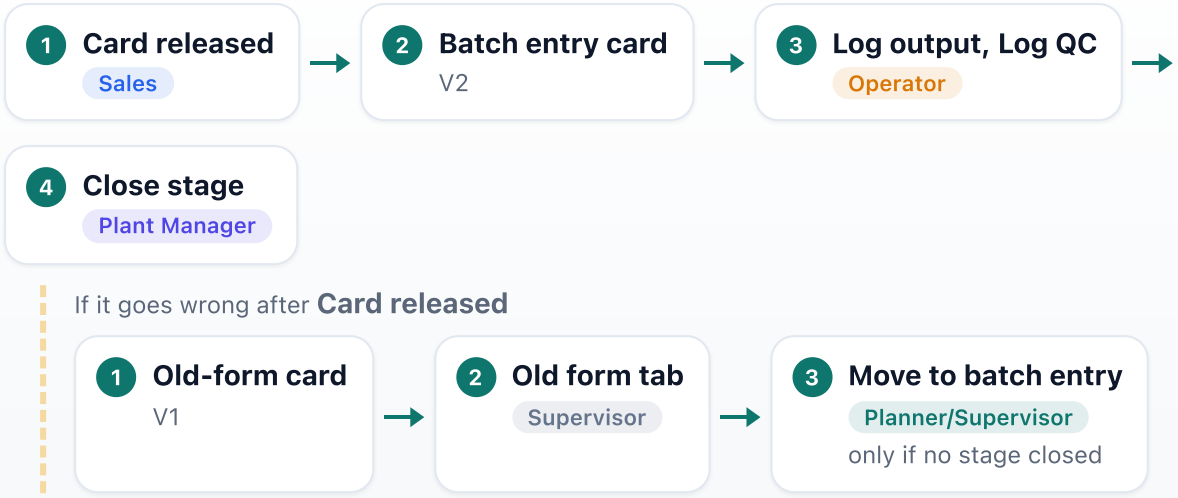


Every new release is a batch-entry card. Old-form cards are cards released before batch entry; they keep their stage form until they finish or are moved to batch entry. Boxes are packed on batch-entry cards only.

## Screen tour

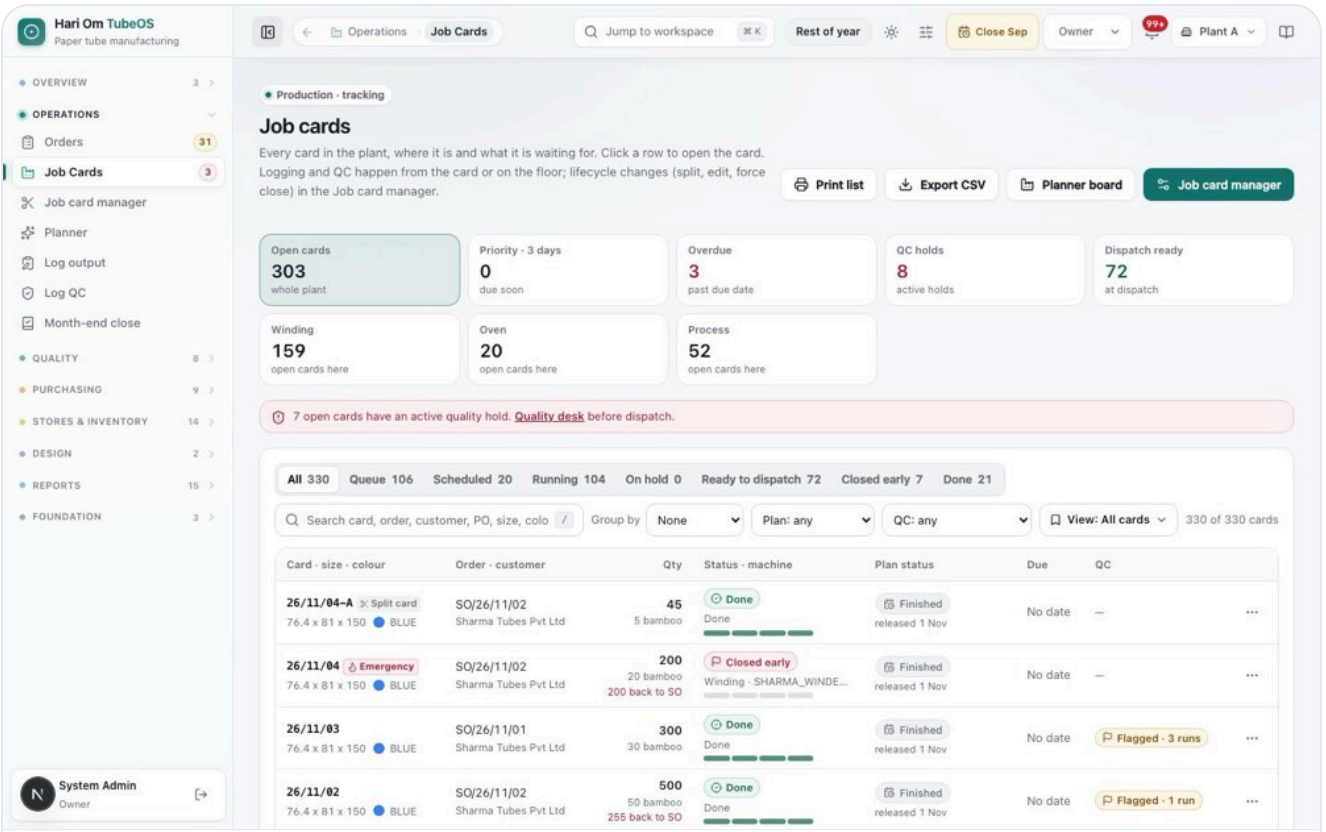



Figure: The Job cards list. Tiles across the top count open, priority, overdue, QC-hold and dispatch-ready cards and the cards at each stage; below are status tabs, search and filters, and a table with one row per card.

What you see:

1. **Header buttons**: **Print list**, **Export CSV**, **Planner board** and **Job card manager**.
2. **Tiles** (whole plant): **Open cards**, **Priority · 3 days** (due in the next 3 plant days), **Overdue** (due before today), **QC holds** (holds placed on purpose and still open), **Dispatch ready**, then one tile per stage (**Winding**, **Oven**, **Process**, and **Slitting** when it has cards). Click a tile to filter the list; click it again to clear.
3. **Red banner**: "N open cards have an active quality hold. Quality desk before dispatch." It shows only when manual holds exist.
4. **Status tabs** with counts: **All**, **Queue** (released, not on the planner), **Scheduled** (on the board with date, shift and machine), **Running** (runs being logged), **On hold** (a hold placed on purpose), **Ready to dispatch** ("Process closed: its boxes are packed and labelled; waiting for a DC"), **Closed early** ("Cancelled, or force-closed with nothing left to make; the balance went back to the order"), **Done**. A card closed short on a stage, or force-closed, whose made pcs are still moving stays in **Running** or **Ready to dispatch** with a "closed early" chip until it is done.
5. **Search** (press **/** to jump to it): card, order, customer, PO, size or colour.

6. **Group by**: **None**, **Sales order**, **Stage**, **Status**, **Machine**. Each group line shows the card count and total pcs.
7. **Plan filter**: **Plan: any**, **Planned**, **Not planned yet**.
8. **QC filter**: **QC: any**, **Flagged readings (N)**, **On hold (N)**.
9. **View** menu: saved views (see How to save a view). On the right, "324 of 324 cards" tells how many rows match.
10. **Table columns**: **Card · size · colour**; **Order · customer**; **Qty** (pcs, with bamboo or kg under it); **Status · machine** (status badge, current stage and machine, a thin stage bar); **Plan status** (hover for detail and **Open in planner**; "released 30 Oct" under it); **Due** ("No date" when the order has none); **QC** (**Hold** in red for a manual hold, or **Flagged · N runs** in amber).
11. **Row menu (...)**: **Open**, **Log output**, **Log QC**, **Print card (A4)**, **Manage card**, **Plan / reschedule**, **Material genealogy**, **Sales order**.

Plan status words you may see: planned (date and shift), running, plan in parts, slot passed, missed (went back to the queue after 36 hours), not planned yet, waiting for the previous stage's plan, nothing to plan (packing and QC follow Process), all done. It is information only.

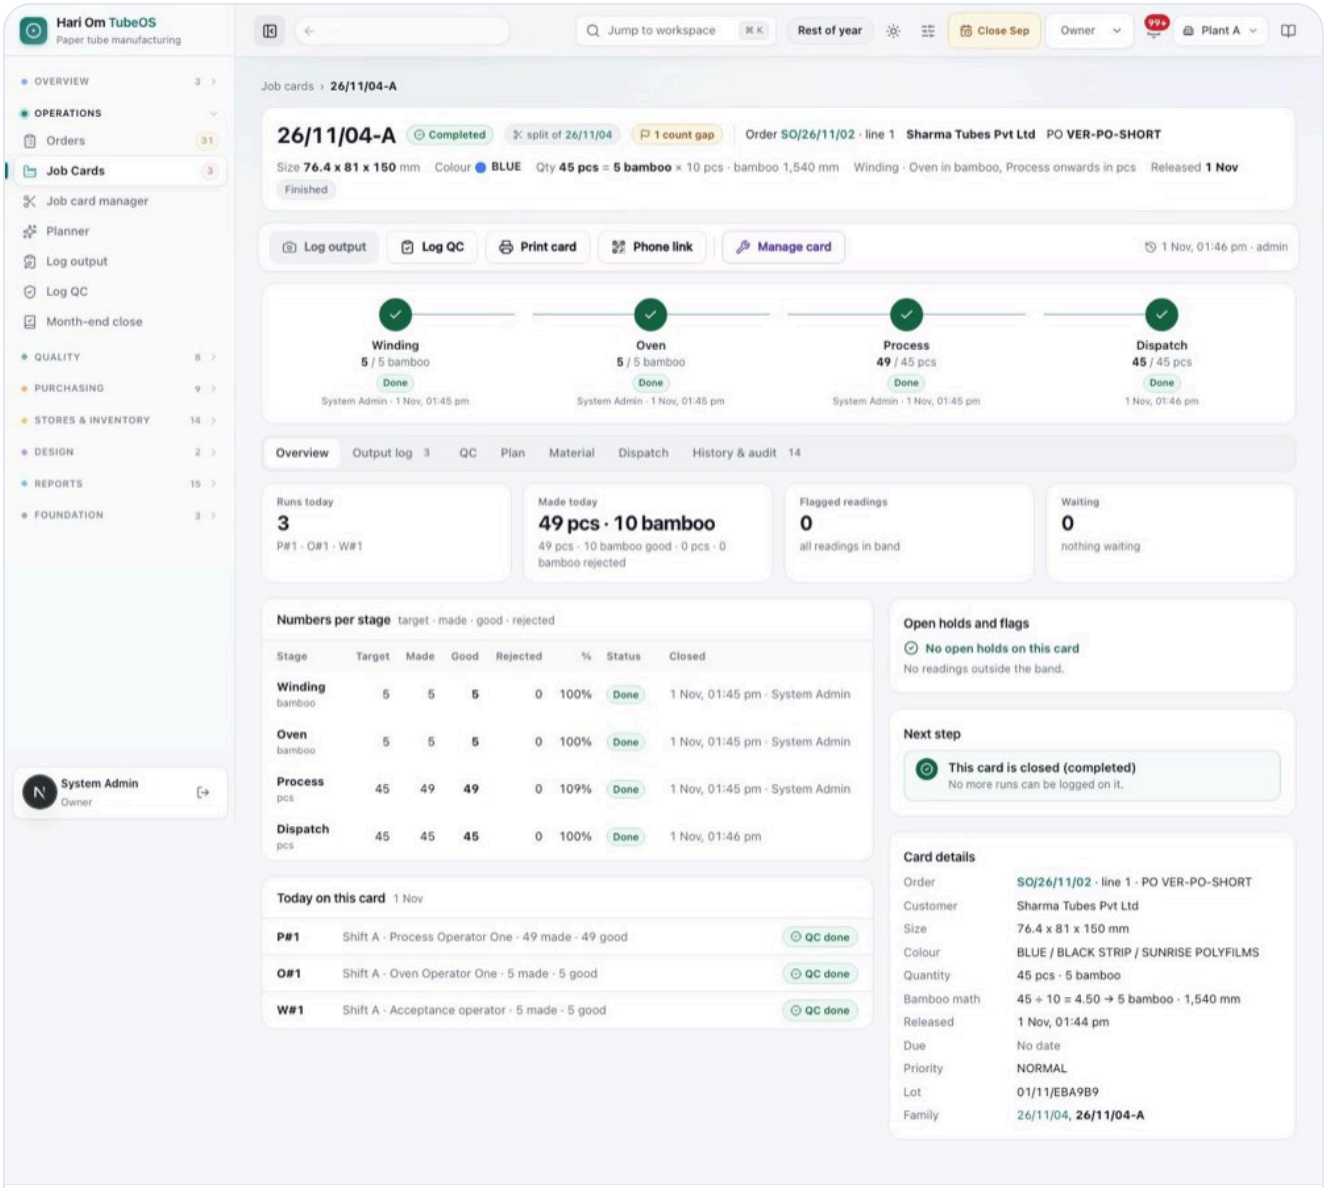



Figure: The job card page for 26/10/315. The header gives the card's identity and bamboo math; an action bar holds Log output, Log QC, Print card, Phone link and Manage card; a stepper shows Winding, Oven, Process and Dispatch; the Overview tab shows today's numbers, holds and flags, the next step and card details.

What you see:

1. **Header**: card number, lifecycle badge (**In queue**, **Scheduled**, **Running**, **Completed**, **Force-closed**, **Cancelled**), family chip ("no split", or "split of 26/10/315" with links), amber chips for **N flagged readings** and **N count gap** (Process pieces not matching bamboo × pcs per bamboo), then order and line, customer, PO and due date. Second line: size, colour, "Qty 900 pcs = 90 bamboo × 10 pcs", "Winding · Oven in bamboo, Process onwards in pcs", release date and plan status.
2. **Action bar**: **Log output**, **Log QC** (with "N waiting" when runs need readings), **Close** (shows a lock and "plant manager" or "QC short" when you cannot close), **Print card**, **Phone link** (QR and link to open this card on a phone), **Manage card**. A greyed button shows why on hover, for example "Card is closed" or "Your role cannot log runs".

3. **Stage stepper**: each stage with good/target (for example 90 / 90 bamboo), status chip and flag count, and who closed it and when. A stage closed short keeps its planned target in its history, so it reads for example "30 of 40 bamboo". Click a stage to jump to its runs.
4. **Tabs**: **Overview**, **Output log** (old-form cards show **Old form** instead), **QC**, **Plan**, **Material**, **Dispatch**, **History & audit**.
5. **Overview**: a rose box **Closed short** at the top when any stage closed short, one line per stage, for example "Winding: 30 of 40 bamboo · 100 pcs went back to the sales order · Paper or input short" (or "nothing went back to the order"). Then the tiles **Runs today**, **Made today**, **Flagged readings** ("outside the band · accepted, not held"), **Waiting**. Then **Numbers per stage** (Target, Made, Good, Rejected, %, Status, Closed), **Today on this card**, **Open holds and flags**, **Next step** and **Card details** (order, customer, size, colour, quantity, bamboo math, released, due, priority, lot).

The other tabs:

- **Output log**: every run with who, when, machine, made, good, rejected (with the rejection reason label, for example "2 · Winding loose"), QC state and plan match. Stage chips filter it. Buttons: **Export** (Excel), **Whole printed card** (plant manager types a full paper card at once), **Reopen stage...** (Owner and Admin), **Log output**. Rejection reasons come from Masters › Reason codes › **Floor rejection**: WL Winding loose, PG Pasting / glue, ID I.D. out, OD O.D. out, LN Length out, WT Weight out, CS C.S. low, DM Damage / dent, MS Moisture, NT Notch, RJ-OTHER Other (write a note). Old runs saved with OT still read as Other.
- **QC**: samples per stage, **Waiting for QC**, **Limits on this card** (frozen at release, with rule version and season) and **Flags and holds** with a link to the **QC flags register**.
- **Plan**: each planner slot with what was logged in it. "The plan is never moved by the floor." After a short close the later stages' slots are smaller (see Rules).
- **Material**: reels issued to the winder, issued versus theory, and what was posted to stock.
- **Dispatch**: the box tiles, the **Boxes** table, the dispatch slips (challans) and the packing note. Described below.
- **History & audit**: every event, filter chips **All**, **Card**, **Output**, **QC**, **Stages**, **Planning**, **Dispatch**, **Other**, a search box and an Excel export. A short close reads like "Winding closed short: 30 of 40 bamboo, 100 pcs back to the order · Paper or input short".

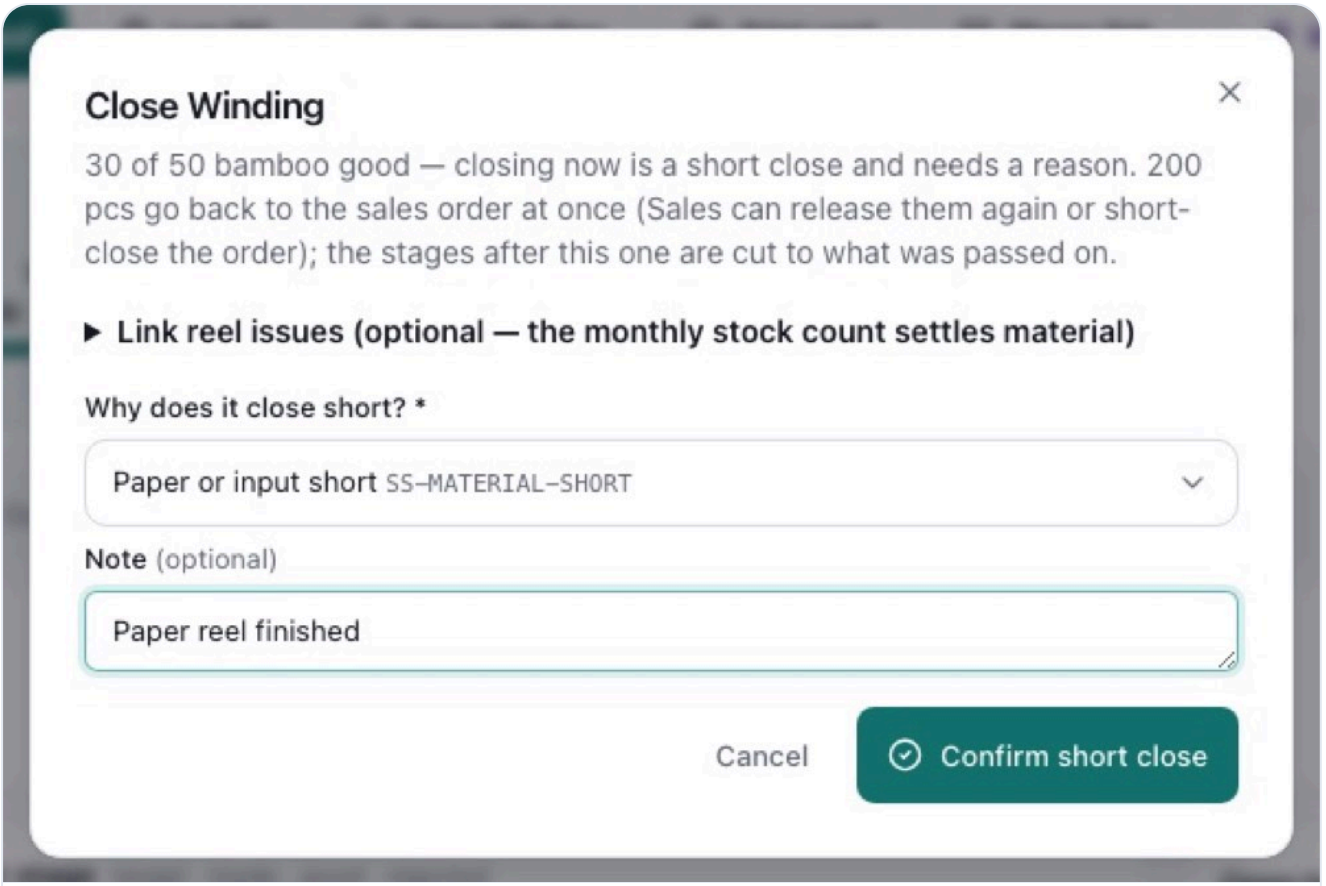



Figure: The Close stage dialog for a stage that is short of target. It shows "30 of 40 bamboo good", a line saying the close is a short close, how many pcs go back to the sales order at once and that the stages after this one are cut to what was passed on, the reason picker "Why does it close short?", and the button Confirm short close.

What you see:

1. **Good against target**: for example "30 of 40 bamboo good — closing now is a short close and needs a reason. 100 pcs go back to the sales order at once (Sales can release them again or short-close the order); the stages after this one are cut to what was passed on." When nothing is owed back it says "Nothing goes back to the order".
2. **Cannot close yet** (when something is missing): runs still with the supervisor, or QC readings (for example "I.D. — 1 of 2 readings"), with **Log QC on** .
3. **Why does it close short?**: the reason picker for the list **Stage closed short** (SS-MATERIAL-SHORT Paper or input short, SS-HIGH-REJECT High rejection at this stage, SS-MACHINE Machine breakdown, SS-CUST-QTY Customer needs less, SS-TIME No time left before delivery, SS-QUALITY Quality problem, run stopped, SS-OTHER Other). A note box sits under it; SS-OTHER needs a note of at least 5 characters.
4. **Unused input** (only when pcs from the stage before are left over): **Hold for follow-up** or **Scrap with reason**, and a second picker "Why is it held?" / "Why is it scrapped?" from the list **Leftover input at stage close** (LI-EXTRA-MADE, LI-DAMAGED, LI-WRONG-SIZE, LI-NEXT-RUN, LI-QC-DOUBT, LI-OTHER).

5. **On Process**: what will happen to boxes, for example "6 boxes are already packed (288 pcs). The 7 pcs left become a part box with its own label. Each box goes into stock on its own and ships on a challan by its box code." Also the theory paper, adhesive and parchment for the month, the **Finished-good item** (default: automatic from the product code) and **Stock location**.
6. **Confirm close** or **Confirm short close**. The message after a short close says, for example, "Winding closed short. 100 pcs went back to the sales order."

The **Dispatch** tab of a card (words only; the box picture is below):

1. **Tiles**: **Finished goods (boxes)** (pcs and box count, part boxes counted), **Ready to ship** (pcs in boxes that are in stock, "4 boxes in stock · released left 300"), **Shipped** (pcs and dispatch slips), **Kept back** (retained in stock, not inspected).
2. **Boxes** table: **Box** (box code as a link to the box page, a violet **part box** chip, an amber **QC flagged** chip), **Pcs**, **Packed** (date · shift · operator), **Stock** (**In stock**, **Posting...** or "Posting failed · retrying"), **Status** (**Packed**, **Dispatched** with the challan number, **Kept as surplus**). Button **Box labels**. If the spec has no qty per box, an amber line says "The spec has no qty per box: pcs are not boxed until it is set (Packing setup); at Process close everything goes into one part box." Packing warnings from the masters are listed in amber too.
3. **Dispatch slips from this card**: each challan (DC, when, pcs, status, vehicle · by) and **Create dispatch slip · N boxes ready**.
4. **Packing · box by box**: "Process good pcs are packed into boxes of 48 pcs as their QC readings are done; the pcs left at Process close go into a part box. Each box goes into stock on its own and uses one box plus the spec's plastic and fadda per box for the month's packing theory."

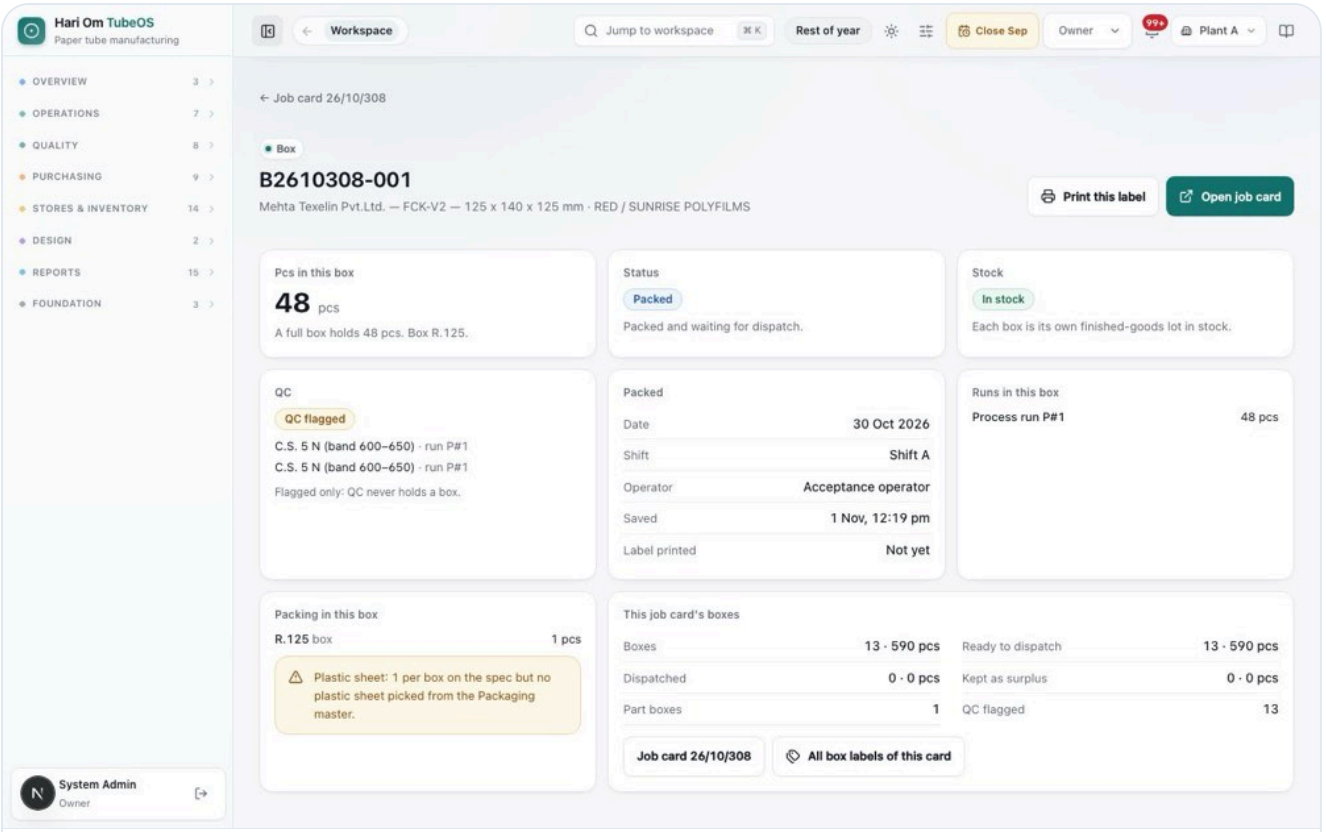



Figure: The box page that a box label's QR opens. The header shows the box code with a Part box badge, the customer, product and size, and the buttons Print this label and Open job card. Panels show Pcs in this box, Status, Stock, QC, Packed (date, shift, operator, label printed), Runs in this box, Packing in this box and This job card's boxes.

What you see:

1. **Header**: badge **Box** or **Part box**, the box code, and "Sharma Tubes Pvt Ltd — FG-76-81-150 — 76.4 x 81 x 150 · BLUE". Buttons **Print this label** and **Open job card**.
2. **Pcs in this box**: the pcs in big numbers, a **Part box** chip if it is one, and "A full box holds 48 pcs. Box R-150." (or "The spec has no qty per box.").
3. **Status**: **Packed** ("Packed and waiting for dispatch"), **Dispatched** ("On challan DC-… · 02 Nov 2026") or **Kept as surplus** ("Kept in stock as surplus after the order was filled").
4. **Stock**: **In stock**, **Posting…** or "Posting failed — retried automatically". "Each box is its own finished-goods lot in stock."
5. **QC**: **No QC flags**, or **QC flagged** with each reading (for example "I.D. 76.9 · run P#3") and "Flagged only: QC never holds a box."
6. **Packed**: Date, Shift, Operator, Saved (time), **Label printed** ("2 times" or "Not yet").
7. **Runs in this box**: which Process runs filled it, for example "Process run P#3 · 30 pcs" and "Process run P#4 · 18 pcs".
8. **Packing in this box**: the box, plastic and fadda codes with their counts, and any warning (for example a material with no weight in the master).
9. **This job card's boxes**: Boxes, Ready to dispatch, Dispatched, Kept as surplus, Part boxes, QC flagged, with links **Job card 26/10/315** and **All box labels of this card**.

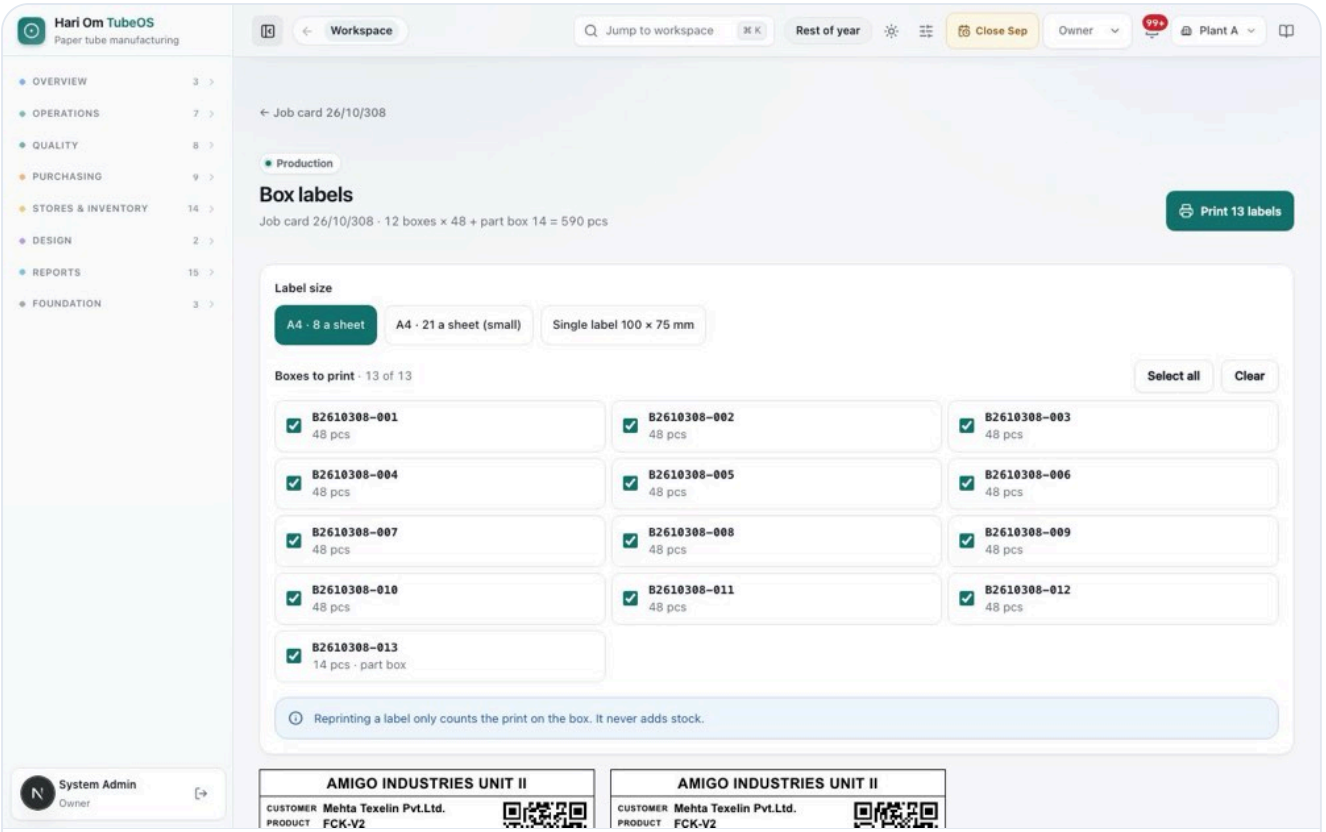



Figure: Box labels for job card 26/10/315. Label size buttons (A4 · 8 a sheet, A4 · 21 a sheet (small), Single label 100 × 75 mm), a tick list of the card's boxes with Select all and Clear, the note that reprinting never adds stock, and a preview of each label with the plant heading, customer, product, size, job card, order, a QR, the box code in big letters and the pcs, with PART BOX on the part box.

What you see:

1. **Header**: "Job card 26/10/315 · 6 boxes × 48 + part box 7 = 295 pcs" and **Print N labels**.
2. **Label size**: **A4 · 8 a sheet** (2 × 4), **A4 · 21 a sheet (small)** (3 × 7, a compact layout) and **Single label 100 × 75 mm** (one per page, for a label printer).
3. **Boxes to print**: a tick box per box with its pcs, "part box" and "printed 2×" when printed before. **Select all** and **Clear**.
4. Blue note: "Reprinting a label only counts the print on the box. It never adds stock."
5. **The label**: top line the plant's label heading (for example AMIGO INDUSTRIES UNIT II; "FINISHED GOODS" when the plant has none). Then **Customer**, **Product** (product code · spec), **Size** (size · colour), **Job card**, **Order** (SO number · customer PO), and the QR with "Scan for box". Then the box code in very large letters, the pcs ("48 pcs"), a black **PART BOX** band on a part box, and the foot line "Packed 01 Nov 2026 · Shift A · Suresh".

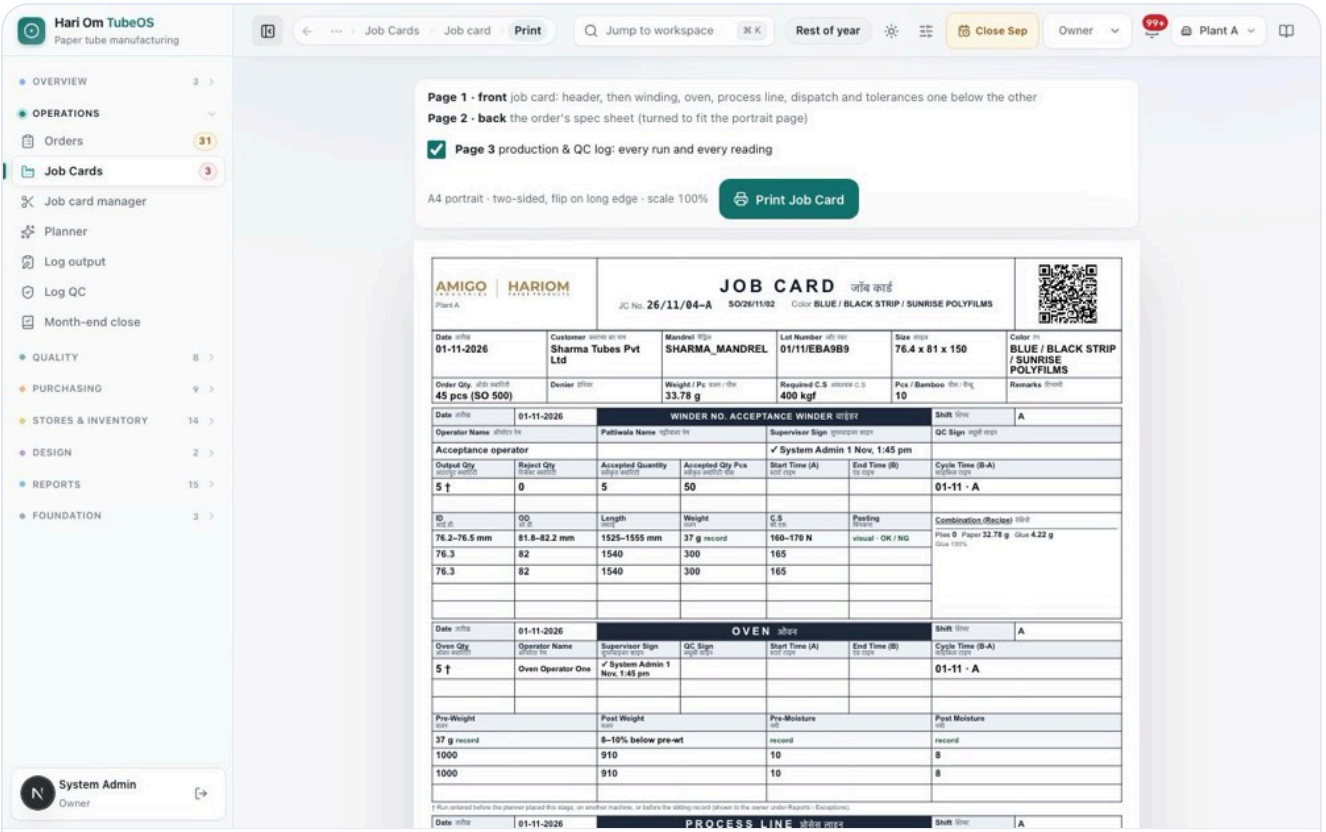



Figure: The printed job card. A panel lists the pages (front, back, optional page 3) with a Print Job Card button; below is the A4 portrait front with the header, QR code, and the winder, oven and process sections.

What you see:

1. **Page list**: **Page 1 · front** (header, then winding, oven, process line, dispatch and tolerances one below the other), **Page 2 · back** (the order's spec sheet, turned to fit the portrait page), and a tick box for **Page 3** (production and QC log: every run and every reading; ticked by default once the card has runs).
2. Print hint: "A4 portrait · two-sided, flip on long edge · scale 100%" and the **Print Job Card** button.
3. **Front header**: plant logo, "JOB CARD" (with Hindi), JC No., SO number, colour, and a **QR code**. Scanning the QR with a phone opens this card's floor entry page.
4. **Header grid**: Date, Customer, Mandrel, Lot Number, Size, Colour, Order Qty, Denier, Weight / Pc, Required C.S, Pcs / Bamboo, Remarks.
5. **Stage blocks** (Winder, Oven, Process line, Dispatch, Stage QC): shift, operator, supervisor sign, output, reject and accepted qty, start and end time, cycle time, and reading rows with the allowed band printed above each column.
6. **Footnotes**: "†" marks a run entered before the planner placed the stage, on another machine, or before the slitting record; "✕" marks a reading outside its limit, "saved and flagged for QC, not held".

## Step by step

### How to find a card

1. Open **Job Cards**. Roles: everyone listed above.
2. Type part of the card number, order, customer, PO, size or colour in the search box. The list filters as you type.
3. Or click a tile (for example **Overdue**) or a status tab (for example **Running**).
4. Click the row to open the card. Ctrl-click (Cmd-click on Mac) opens it in a new tab.

### How to save and reuse a view

1. Set the tab, group, plan filter, QC filter and search you want.
2. Open the **View** menu and save the current filters with a name.
3. Next time, open **View** and pick it. Touching any filter by hand leaves the saved view. **Clear all** resets every filter.

### How to print or export the list

1. Filter the list to what you need.
2. Click **Print list**. All matching rows print, not only the first 60 shown on screen.
3. Or click **Export CSV**. The file "job-cards-.csv" holds the matching rows.

### How to open a card's next step

1. Open the card. Read **Next step** on the Overview tab.
2. It tells you what is pending: runs with the supervisor to submit, runs waiting for QC, how much is left to make on the current stage, or that the stage is ready to close.
3. Click the button in that box (**Log output**, **Log QC**, **Close stage**, **Dispatch**). Logging is explained in "Log output and QC entry".

### How to close a stage in full (batch-entry card)

Roles: Plant Manager, Owner, Admin. No supervisor needs to be picked; your login is recorded as the one who closed it.

1. On the card, click **Close** in the action bar.
2. The dialog shows "N of target good". When good is at or above target, no reason is asked.
3. If it says **Cannot close yet**, it lists what is missing: runs still with the supervisor, or QC readings (for example "I.D. — 1 of 2 readings"). Click **Log QC on** to fix it.
4. If unused input is left from the stage before, choose **Hold for follow-up** or **Scrap with reason**, and pick the leftover reason code.

5. When closing **Process**, read the box line: how many boxes are packed, how many more full boxes will be packed, and the pcs that become a part box. You may pick the **Finished-good item** and **Stock location**.
6. Click **Confirm close**. Closing Process packs the last full boxes and the part box, posts each box to stock and opens the **Dispatch** tab.

## How to close a stage short (any stage)

Roles: Plant Manager, Owner, Admin. Works on Winding, Oven and Process.

1. Make sure every run is submitted and every run has its 2 readings per required check. A short close needs the same QC as a full close.
2. Click **Close** . The dialog says the close is a short close and how many pcs go back to the sales order.
3. Pick **Why does it close short?** from the list (for example SS-MATERIAL-SHORT). Add a note if useful; SS-OTHER needs one.
4. If input from the stage before is left over, choose Hold or Scrap and pick its leftover reason.
5. Click **Confirm short close**.
6. Result: the stage shows closed with "30 of 40 bamboo". The unmade pcs go to the order line at once as unreleased pcs. The later stages' targets are cut to the pcs this stage passed on, and their open planner slots shrink by themselves (the latest slots give first). The Overview's **Closed short** box, the history, the Job card manager's **Back to order** tile and the order page all show the same numbers.
7. Carry on logging the later stages as usual. Sales can now release the balance again or short close the order (see "Sales orders").

## How to reopen a closed stage

Roles: Owner and Admin.

1. Open **Output log**, pick the stage chip, click **Reopen stage...**.
2. Pick **Why is it reopened?** from the list **Entry correction / void / reopen** (for example EC-REOPEN-MORE More output to log after close) and add a note if needed.
3. If the stage had closed short, the system takes the returned pcs back from the order onto the card and restores the later stages' targets and planner slots.
4. If the order no longer has those pcs unreleased (Sales released them again on another card, or short-closed the order), the reopen is refused with the reason, for example "only 40 of the 100 pcs this close gave back are still unreleased on order SO/26/10/412; the rest was released again on another job card. Short-close or edit that card first."
5. Posted stock or tool use needs a governed reversal or an extra card. Reopening Process keeps the boxes already packed; new runs fill new boxes.

## How boxes are packed (nothing to click)

1. Each time a Process run is saved, its QC readings are saved, or Process is closed, the system packs boxes.
2. It takes the good pcs of Process runs whose readings are done (2 per required check), oldest run first, and fills boxes of the spec's **qty per box**. A run whose readings are still short waits.
3. Each full box gets the next box code (B + card number without the slashes + a 3-digit number: card 26/10/315 gives B2610315-001, B2610315-002...; a split card 26/10/315-A gives B2610315A-001). The box records the runs in it, the date, shift and operator of the run that completed it, and any QC flags of its runs.
4. Pcs that do not fill a box wait for the next run.
5. When Process closes, the pcs left become one **part box**.
6. Each box goes into stock on its own as a finished-goods lot named by its box code, with its packing material for the month's theory. If a hold placed on purpose is open on the card, the posting waits until it is released.
7. If the spec has no qty per box, nothing is boxed until the packing is set on **Packing setup**; at Process close all pcs go into one part box marked "The spec has no qty per box: all pcs went into one part box."

## How to print box labels

Roles: everyone who can open the card.

1. On the card's **Dispatch** tab click **Box labels** (or on a box page click **Print this label** or **All box labels of this card**).
2. Pick the **Label size**.
3. Tick the boxes to print (all are ticked at first). Use **Select all** or **Clear**.
4. Click **Print N labels**. The print is counted on each box; stock never changes. Reprint any time.
5. Stick each label on its box. Mark nothing by hand: the part box label already says **PART BOX**.

## How to open a box by its QR

1. Point any phone camera at the box label's QR, or open **Scan** in the app and scan it. Typing the box code (for example B2610315-001) in Scan works too.
2. The box page opens (log in if asked; the plant at the top must be the box's plant).
3. Read where the box is, its pcs, QC flags and the runs in it. Click **Open job card** to go to the card.

### How to print a card

1. Click **Print card** on the card (or **Print card (A4)** in the list row menu).
2. Untick **Page 3** if you do not want the run and QC log.
3. Click **Print Job Card**. Print A4 portrait, two-sided, flip on long edge, scale 100%.

### How to move an old-form card to batch entry

Roles: Owner, Admin, Plant Manager, Planner, Operator.

1. Open the card's **Old form** tab.
2. If no stage other than slitting has closed, a blue box offers **Move to batch entry**. Click it.
3. What was typed on the old form is kept and shown on the **Material** tab under "Typed on the old form before the move — enter it again as a batch".
4. If a stage was already closed on the old form, the card finishes on the old form. The server says " was already closed on the old form; finish this card there."

## Rules the system enforces

- **Planning never blocks.** A run on a stage with no planner slot saves and is flagged "Run before planning"; the card shows it and it appears in Reports › Plan vs actual. (FLAGS.)
- **Card times never block.** Start and end times are optional. An end time before the start time is saved and flagged "End time is before start time; check the date written on the card. Saved and flagged." (FLAGS.)
- **Good is worked out, never typed twice.** On batch-entry forms you type Made and Rejected; Good = Made − Rejected. On the old form you type produced and accepted; Reject Qty = produced − accepted. (AUTOMATIC.)
- **QC never holds or rejects a job card.** An out-of-band reading is flagged on the run, the batch, the box and the card. The run is accepted and the next stage can take it. No automatic hold is made. (FLAGS.)
- **2 readings per required check.** A run goes to the next stage, and its pcs go into a box, only once it has at least 2 readings on every required check (moisture is optional). A stage, including a short close, cannot close until it has them. (BLOCKS the close and the next stage.)
- **Runs with the supervisor block the close.** "N runs still with the supervisor must be submitted or voided first." (BLOCKS.)
- **Short close needs a reason code** from **Stage closed short**; leftover input needs a code from **Leftover input at stage close**. Free text alone is refused. Codes with OTHER need a note of at least 5 characters. (BLOCKS until chosen.)

- **Balance back to the order.** At a short close the returned pcs = this stage's target in pcs – this stage's good output in pcs (bamboo × pcs per bamboo on Winding and Oven). It goes to the order line at once; if Sales is unreachable it is sent again by itself. (AUTOMATIC.)
- **Later stages cut.** Every later stage's target becomes the smaller of its own target and what this stage passed on. Open planner slots of those stages shrink to match, latest slots first. (AUTOMATIC.)
- **Totals always reconcile.** Pcs returned to the order by all short closes + pcs in boxes = the pcs released on the card (when no stage made more than its target). (AUTOMATIC.)
- **Reopen** gives the returned pcs back to the card only if the order still has them unreleased and is not short-closed or cancelled; otherwise it is refused with the reason. (BLOCKS.)
- **Who closes**: Plant Manager, Owner or Admin. **Who reopens**: Owner or Admin, with an **Entry correction** reason code.
- **Boxes**: full boxes of the spec's qty per box from QC-cleared Process good pcs; the remainder at Process close is a part box. A Process run whose pcs are already in a box cannot be voided. (AUTOMATIC; BLOCKS the void.)
- **Box labels** count prints only and never change stock. (AUTOMATIC.)
- **Only holds placed on purpose stop a card.** A hold placed by the plant head, QC, Owner or Admin on the Quality pages stops the next stage and dispatch, and its box postings wait. Holds are released only by the plant head, Owner or Admin. (BLOCKS.)
- **Card done** when Process is closed and no box is left packed (all shipped or kept as surplus). (AUTOMATIC.)
- **Missed slot.** A scheduled card with no floor entry 36 hours after its shift ended goes back to the planner queue and shows a **Missed slot** chip (×2 if it happened twice). (AUTOMATIC.)
- **Closed cards.** A completed card takes no more runs, but late QC readings can still be added. A cancelled card takes nothing.
- **Closed month.** Runs dated in a month the Owner has closed are refused: " is closed. Ask the owner to re-open it." (BLOCKS.)
- **Limits are frozen.** The QC bands on a card are frozen at release; a new band version never changes an existing card.
- **Old-form (V1) cards**: completing a stage below plan needs a **Stage closed short** reason and an Owner, Admin or Plant Manager; rejected pieces on Winder, Oven and Process need a **Floor rejection** code. Dispatch no longer waits for a V1 final QC pass. (BLOCKS until given.)

## Sample

Sharma Tubes Pvt Ltd orders 400 pcs of 76.4 x 81 x 150, BLUE, on SO/26/10/412. Sales releases it; card **26/10/315** is made with 400 pcs = 40 bamboo × 10 pcs. The spec packs **48 pcs per box** in box R-150.

| Step | What happens | Card numbers |
|---|---|---|
| Winding closes short | 30 of 40 bamboo good, reason SS-MATERIAL-SHORT | Returned: 400 − 30 × 10 = **100 pcs** to the order at once |
| Targets cut | Oven target 40 → 30 bamboo; Process target 400 → 300 pcs | Planner slots of Oven and Process shrink |
| Oven closes | 30 of 30 bamboo good | Nothing returned |
| Process runs | 300 made, 5 rejected (code DM), 295 good | Boxes packed as readings are done |
| Boxes while running | 6 full boxes of 48 = 288 pcs (B2610315-001 to -006) | 7 pcs wait for the next run |
| Process closes short | 295 of 300 good, reason SS-HIGH-REJECT | Part box B2610315-007 with **7 pcs**; returned 300 − 295 = **5 pcs** |

The totals reconcile: 100 + 5 returned to the order + 295 pcs in 7 boxes = 400 pcs released. On the order line, 105 pcs are unreleased again. Dispatch ships boxes 001–004 (192 pcs) on 1 Nov while Process is still running, and boxes 005–007 (103 pcs) on 2 Nov. After the second challan the card is **Done**. A Process reading of I.D. 76.9 mm against 76.2–76.5 was flagged on run P#3; boxes 002 and 003, which hold pcs of P#3, show **QC flagged**, and they still shipped.

## Common questions

**? Why is Log output greyed out?**

Hover over it. Common reasons: "Card is closed", "Old entry form — use the Old form tab", "No open stage takes runs", or "Your role cannot log runs".

**? The card is not planned. Can the operator still log a run?**

Yes. The run saves and is flagged "run before planning". Planning is only the plan; the job card log is the truth.

**? What does "Flagged · 3 runs" mean in the QC column?**

Three runs have at least one reading outside its band. They were accepted and not held. Click the flag to open the card's QC tab.

**What is the difference between a flag and a hold?**

A flag is information; nothing stops. A hold is placed on purpose on the Quality pages by QC, the plant head, Owner or Admin; it stops the next stage and dispatch until the plant head, Owner or Admin releases it. QC readings never make a hold by themselves.

**Winding made less than planned. Do I have to close the whole card?**

No. Close Winding short with a reason. The unmade pcs go back to the order, Oven and Process carry on with what Winding passed on, and the card finishes normally.

**Where do the returned pcs go?**

To the sales order line as unreleased pcs. Sales can release them again on a new card or short close the order with a reason.

**I closed a stage short by mistake. Can I undo it?**

The Owner or Admin can reopen the stage with a reason. The returned pcs come back to the card only if the order has not released them again or been short-closed.

**Why are 7 pcs in a box of 48?**

That is the part box: the pcs left when Process closed. Its label says PART BOX. It ships like any other box.

**Why has no box been packed yet, although Process logged pcs?**

The run's QC readings are not done (2 per required check), or the spec has no qty per box. Log the readings, or ask the Owner or Admin to set the packing on **Packing setup**.

**I printed a box label twice. Is there extra stock now?**

No. A print is only counted on the box. Stock comes only from packing.

**Why can't I void this Process run?**

Its pcs are already in a box. Correct it another way with the supervisor; the box and its stock stay as they are.

### Why can't I close the stage?

The close dialog says why. Usually QC readings are short ("I.D. 1/2"), runs are still with the supervisor, or no reason was chosen for a short close. Only Plant Manager, Owner or Admin can confirm a close.

### What does "Missed slot ×2" mean?

The card was planned twice and nothing was logged within 36 hours after each shift, so it went back to the planner queue. Plan it again, or log the run if it did happen.

### What is a "count gap"?

On Process, the pieces counted (made + cutting loss + held) do not match bamboo × pcs per bamboo. The run is saved and flagged for the owner; nothing has to be written for it.

### How do I split, edit or cancel a card?

Click **Manage card**. That opens the Job card manager (see the next chapter).

## Related chapters

- Job card manager
- Planner
- Log output and QC entry
- Quality
- Dispatch
- Sales orders
- Specifications (packing)
- Masters (Reason codes, Employees)


# Job card manager

**What it is:** The one place where planners and the plant head change a job card's life: split into a new card, edit qty or colour, emergency insert, force close and cancel, each with a preview and a reason.
**Who uses it:** Planner, Plant Manager, Owner and Admin. Other roles see a "for planners and the plant head" message and keep the Job cards list.
**Where:** Sidebar > Operations > Job card manager (/production/job-cards/manage). A card opens directly with /production/job-cards/manage?card=, which is what **Manage card** on a card or list row does.

## At a glance

- Every action shows **What will happen** before you confirm, and asks for a **reason code** from Masters › Reason codes, with an optional note. Split, edit and emergency insert use the list **Job card split / edit / insert**; force close and cancel use **Job card close early / cancel**. The code, its label and your note go into the card history and the order history with your name.
- The manager only offers what the card allows right now. Everything else is listed under **Not possible now** with the exact reason.
- **Split into a new card** makes a separate card with its own number, lot, print, QC and dispatch. **Split plan** (on the Planner board) keeps one card and only cuts the plan into time slots.
- **Force close** is for old-form cards only. A batch-entry card that has runs or QC logged is closed short, stage by stage, with **Close stage** on its card page instead. The unmade pcs go back to the order and show in the **Back to order** tile here.
- Closing a stage never asks for a supervisor. The plant manager, Owner or Admin who is logged in is recorded.

## The flow

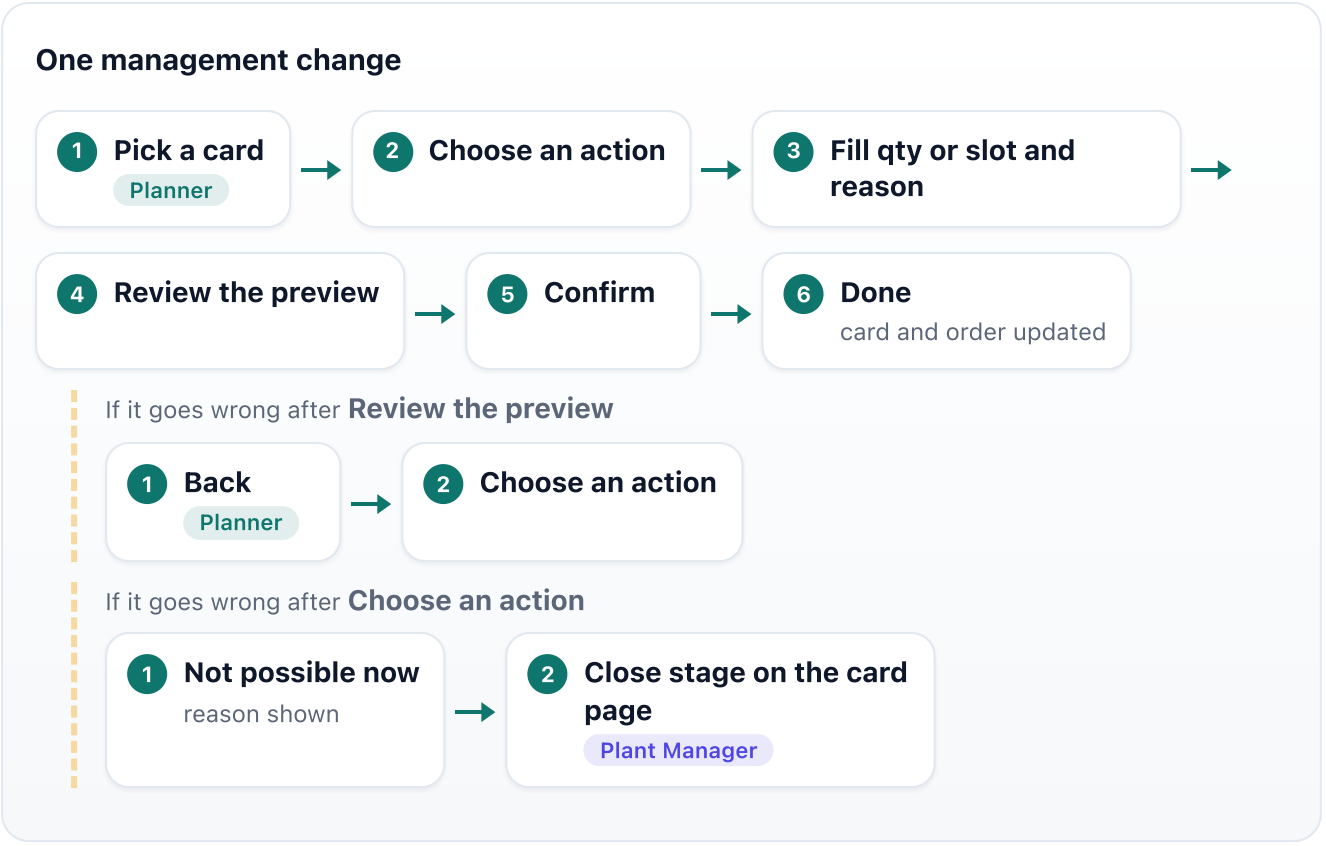


Each action has three steps: the form, a confirm screen that repeats the result line by line with your reason, and a done screen with links (open the new card, place it on the planner, print).

## Which action to use

1 **Card in queue** → 2 **Edit qty / colour** — Planner

If it goes wrong after **Card in queue**

1 **Cancel card** — Planner
nothing made

If it goes wrong after **Card in queue**

1 **Emergency insert** — Planner
runs first in a chosen shift

1 **Card running** → 2 **Split into a new card** — Planner
unstarted qty

If it goes wrong after **Card running**

1 **Old form** → 2 **Force close** — Planner
keeps what is made

If it goes wrong after **Card running**

1 **Batch entry** → 2 **Close stage short** — Plant Manager
on the card page

## Screen tour

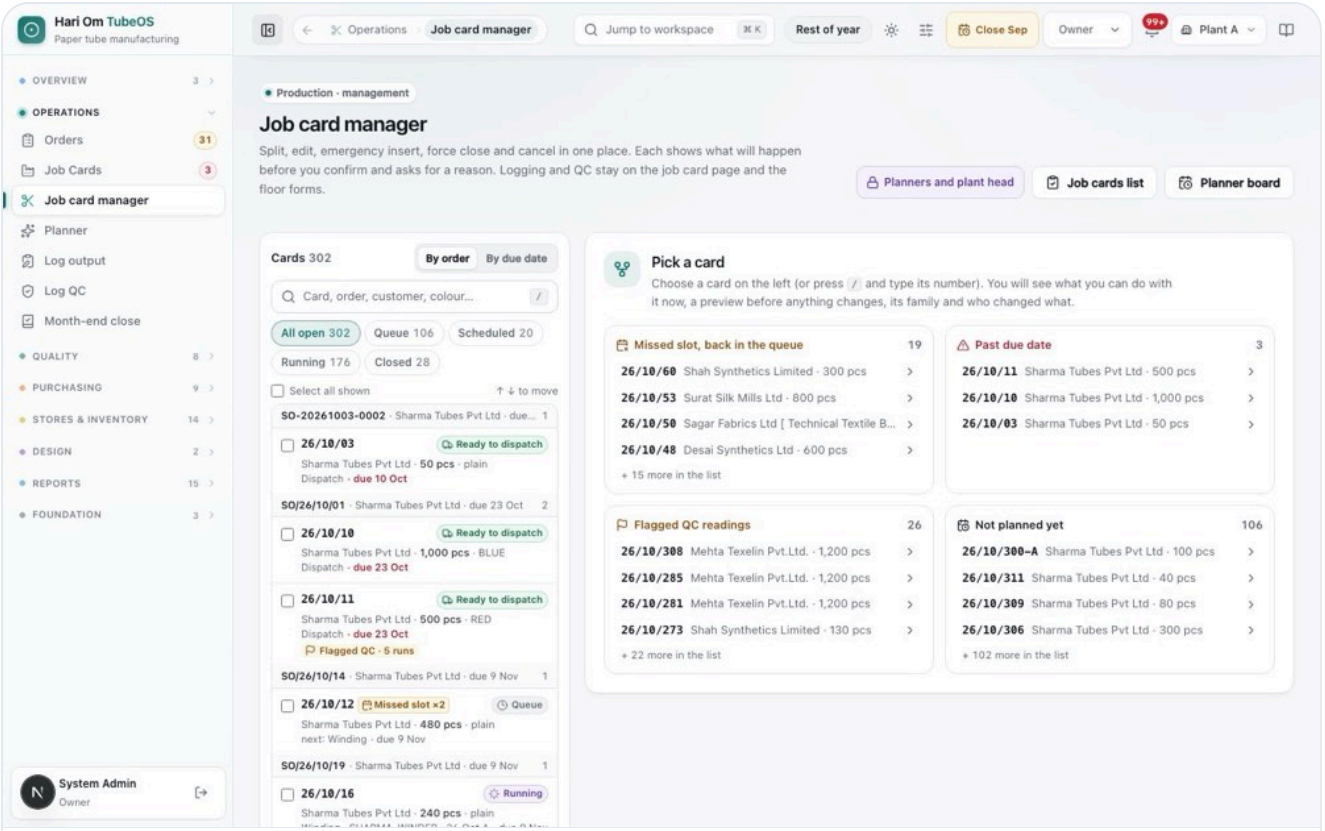



Figure: The Job card manager before a card is picked. The left column lists cards grouped by order with status chips; the right side says "Pick a card" and shows four short lists of cards that need a decision.

What you see:

1. **Header**: title, the chip **Planners and plant head**, and links **Job cards list** and **Planner board**.
2. **Cards** column header with the count, and a switch **By order** / **By due date**.
3. **Search** ("Card, order, customer, colour..."). Press **/** to jump to it and the up and down arrow keys to move through the list.
4. **Status chips**: **All open**, **Queue**, **Scheduled**, **Running** (runs logged, waiting QC, on hold or at dispatch), **Closed** (done, force-closed or cancelled).
5. **Select all shown** and a tick box on every card, for bulk actions.
6. **Card rows**, grouped under the order (for example "SO/26/10/01 · Sharma Tubes Pvt Ltd · due 23 Oct"): card number, chips such as **Emergency**, **Missed slot ×2** or **Split card**, the status badge (**Queue**, **Running**, **Ready to dispatch**...), customer, pcs, colour or "plain", current stage, due date, and **Flagged QC · N runs** when present.
7. **Pick a card** panel (right): four lists, each with the top cards and "+ N more in the list": **Missed slot, back in the queue**, **Past due date**, **Flagged QC readings**, **Not planned yet**. Click a card to open it here.

When you pick a card, the right side shows (described in words, no screenshot):

- **The card at a glance**: number, lifecycle badge, a small chip **batch entry** or **old form**, family (split from / top-up of), links **Card page** and **Sales order**, quantity, stage track, "Now at " (or "Next: " for a queued card), any hold reason, and a folding list **Planner slots (N)**.
- **Actions you can use now**, each a button with a one-line hint: **Split into a new card**, **Edit qty / colour**, **Emergency insert**, **Force close**, **Cancel card**, and a dashed link **Split plan on the Planner board** ("Run this one card over more days, shifts or machines: a planning change, it stays one card").
- **Not possible now**: the locked actions, each with its reason and, where it helps, a link such as **Close stage on the card page**.
- **Card family**: every card of this order line as a tree, with "this card" marked. A single card says "Only card on this line. A split adds the new card here, with its own number."
- **Management changes**: who, when, what, with before → after values and the reason. A **Full history** link opens the card page history. Runs and QC are not listed here.

**Bulk bar** (when cards are ticked): **Clear**, **Print** (each card on its own A4 sheet; allow pop-ups to open all at once), **Export CSV**, **Force close...**.

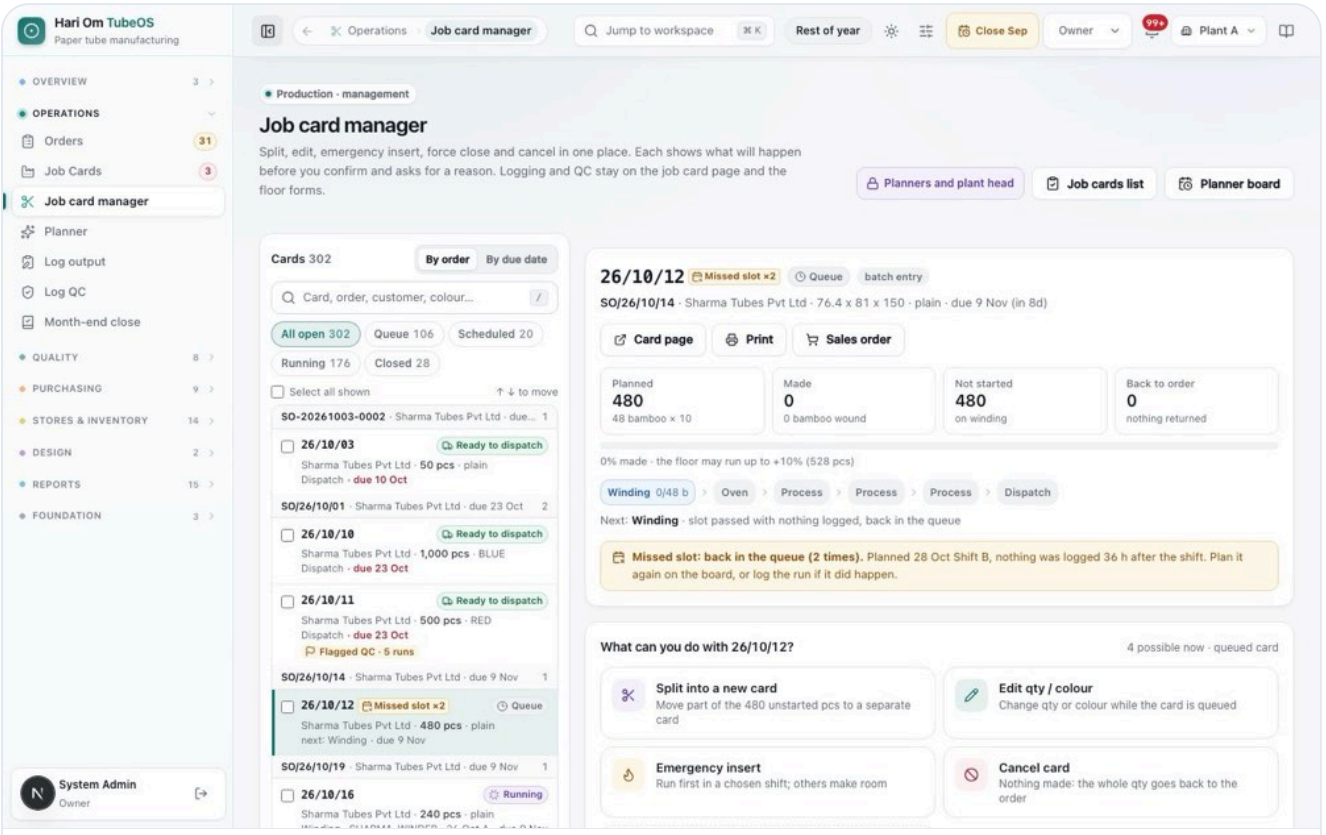



Figure: Job card manager after picking card 26/10/12. The top shows the planned, made, not started and back-to-order quantities and the stage chain. Below it, **What can you do with 26/10/12?** lists Split into a new card, Edit qty / colour, Emergency insert and Cancel card.

1. **Card list (left)**: all open cards grouped by order, with filters for Queue, Scheduled and Running.

2. **Card header**: card number, status chips (for example **Missed slot x2**, **Queue**, **batch entry**) and links to the card page, print and the sales order.
3. **Quantity tiles**: Planned, Made, Not started and **Back to order** (pcs this card gave back to the order by a force close, a cancel or a stage short close, "not released again yet"; "nothing returned" when 0).
4. **Stage chain**: Winding, Oven, Process and Dispatch, with the current stage highlighted.
5. **Action tiles**: each action shows a preview of what will happen before you confirm and asks for a reason code.

## Step by step

### How to split part of a card into a new card

Roles: Planner, Plant Manager, Owner, Admin. Allowed while the card is queued, scheduled or running and has unstarted quantity on its first stage.

1. Pick the card, click **Split into a new card**.
2. The form says "Unstarted on this card: 600 pcs. Move part of it to 26/10/315-A." The new number is the next free letter.
3. Set **New card gets (pcs, 1–N)** with the slider, the box, or a quick pick (¼, ½, ¾, **All unstarted**). Quick picks are whole bamboo where the card has pcs per bamboo.
4. Pick the reason from **Job card split / edit / insert**: CH-CUST-REQUEST Customer asked for a change, CH-URGENT Urgent order to run first, CH-MACHINE-LOAD Balance the machine load, CH-MATERIAL Material available for part only, CH-COLOUR Colour changed by the customer, CH-ENTRY-ERROR Entered wrongly, or CH-OTHER (write a note). The note box is optional for the others.
5. Read the preview: this card keeps X pcs and its plan; the new card gets Y pcs, "planner queue · unplaced", same colour; which planner slots shrink or come off the board (the latest slots give first); "Order line stays N pcs: now on 2 cards".
6. Click **Review split of Y pcs**, check the confirm lines, then **Yes, create 26/10/315-A with Y pcs**.
7. Done: links **Open 26/10/315-A**, **Place it on the planner board**, **Print new card**. Runs already logged stay on the old card.

### How to edit quantity or colour

Roles: Planner, Plant Manager, Owner, Admin. Only a **queued** card (not yet on the board) can be edited.

1. Pick the card, click **Edit qty / colour**.

2. Change **Quantity (pcs)** (a whole number of at least 1) and/or pick a new colour (**Keep current colour** leaves it). A plain card can change only the qty.
3. Pick the reason code (for example CH-CUST-REQUEST, CH-ENTRY-ERROR or CH-COLOUR) and add a note if useful.
4. The preview shows the release lot on the order moving by the difference, and that the paper on the material plan follows the new colour. Click **Review change**, then **Yes, save the change**.
5. The sales order's release lot is changed in step. If nothing changed, the server says "Nothing changed".

## How to put a card first (emergency insert)

Roles: Planner, Plant Manager, Owner, Admin. Only a queued or scheduled card with unstarted work on its first stage.

1. Pick the card, click **Emergency insert**.
2. Choose the machine, the date (today or later) and **Shift A** or **Shift B**, or a quick slot: **Today · Shift A**, **Today · Shift B**, **Tomorrow · Shift A**.
3. The preview shows the load already in that slot. If the shift goes over capacity, the lowest-priority cards move to the next shift (and onward). Running cards never move.
4. Pick the reason code (for example CH-URGENT Urgent order to run first) and write a note such as "Customer line down". Click **Review insert**, then **Yes, insert 26/10/315 first**.
5. The card shows an **Emergency** chip. Everyone affected is notified, and each moved card's history records the move.

## How to force close an old-form card

Roles: Planner, Plant Manager, Owner, Admin. Only cards on the **old form** that have made something but not everything.

1. Pick the card, click **Force close**.
2. The form says "Close 26/10/280 now with what is made." The preview shows "Closed at 400 pcs · 200 pcs back to the order", the planner slots that are freed, and that the card will show **Closed early**.
3. Pick the reason from **Job card close early / cancel**: JC-CUST-CANCEL Customer cancelled or reduced the order, JC-RELEASED-TWICE Released twice by mistake, JC-WRONG-SPEC Wrong spec or size released, JC-MATERIAL-SHORT Paper or material short, JC-MACHINE Machine breakdown / not available, JC-QTY-DONE Enough made for the order, JC-MERGED Merged into another job card, or JC-OTHER (write a note).
4. Click **Review force close**, then **Yes, close at 400 pcs**. What was made keeps moving through the remaining stages on the same card; the balance can be released again from the order.

### How to cancel a card

Roles: Planner, Plant Manager, Owner, Admin. Only when nothing is made. A batch-entry card can be cancelled only while no run and no QC is logged on it.

1. Pick the card, click **Cancel card**.
2. The preview says the whole qty goes back to the order and all its planner slots are freed.
3. Pick the reason code (for example JC-RELEASED-TWICE, JC-CUST-CANCEL or JC-MERGED). Click **Review cancel**, then **Yes, cancel 26/10/311**.
4. The card shows **Cancelled**. No runs, QC or close can be saved on it any more.

### How to force close several cards at once

1. Tick the cards in the left column, click **Force close...** in the bulk bar.
2. Pick one reason code for all (**Reason (one for all)**, list Job card close early / cancel) and add a note if useful, for example "customer cancelled PO 0872F". Each card closes at what is made, or is cancelled if nothing is made; the balance goes back to its order.
3. Cards the rule does not allow are left as they are, with the reason ("Batch-entry card: left as it is. Close it short with Close stage on its card page.", "Already closed: left as it is.").
4. Click **Yes, force close N cards**. The result lists each card.

### How to close a batch-entry card short

This is done on the card page, not here, one stage at a time. See "Job cards", How to close a stage short. Roles: Plant Manager, Owner, Admin. There is no supervisor field; the login is recorded. Pick a **Stage closed short** reason code. The unmade pcs go back to the order at once, the later stages carry on with the pcs passed on, and this manager's **Back to order** tile goes up by the returned pcs.

### How to move an old-form card to batch entry

Open the card's **Old form** tab and click **Move to batch entry** (Owner, Admin, Plant Manager, Planner, Operator). It works only while no stage except slitting has closed on the old form. A card whose old form cannot close anything because its stage QC was never approved moves by itself when its page opens. See "Job cards".

## Rules the system enforces

- **Reason code required** for every action. Split, edit and emergency insert need a **Job card split / edit / insert** code; force close, cancel and bulk close need a **Job card close early / cancel** code. The server checks that the code is active, in the right list and of the card's

plant; free text alone is refused. A code with OTHER needs a note of at least 5 characters. (Blocks.)

- **Edit** only while **queued**. A scheduled card: "On the board already: qty and colour are locked. Take it back to the queue on the planner, or split it." A running card: split the unstarted part instead. (Blocks.)
- **Split** needs unstarted quantity on the first stage and must leave at least 1 pc on the original card ("Split must leave some quantity on the original card"). (Blocks.)
- **Emergency** only for queued or scheduled cards; "Already running on a machine: nothing to jump ahead of." (Blocks.)
- **Force close** only for old-form cards with something made and something still to make. Nothing made: use **Cancel card**. Everything made: finish the card normally. Batch entry: "Runs or QC are already logged on this card: close it short with Close stage on the job card page, with a reason." (Blocks.)
- **Cancel** only when nothing is made; a batch-entry card only while it has no runs or QC. (Blocks.)
- **Sales order kept in step.** Edit, split, force close and cancel all change the order's release lot. A card without a sales release lot cannot be changed: "No sales release lot on this card, so the order cannot be kept in step." (Blocks.)
- **Safe retry.** Pressing confirm again after a lost connection does not cut a second split. (Automatic.)
- **Audit.** Every change is recorded with who, when, before → after and the reason, on the card and on the order. (Automatic.)

## Sample

Card 26/10/315 for Sharma Tubes Pvt Ltd: 900 pcs, BLUE, scheduled on Winder 1 for 31 Oct Shift A (600 pcs) and Shift B (300 pcs). The customer wants 300 pcs early.

| Field | Value |
|---|---|
| Action | Split into a new card |
| New card gets | 300 pcs |
| Reason | CH-CUST-REQUEST Customer asked for a change, note "call-off earlier" |
| Result: 26/10/315 | 900 → 600 pcs, keeps its plan |
| Result: 26/10/315-A | 300 pcs, planner queue, unplaced |
| Slot change | 31 Oct · Shift B · Winder 1: 300 → off the board |

| Field | Value |
|---|---|
| Order line | stays 900 pcs, now on 2 cards |

The planner then places 26/10/315-A on Winder 2 for 1 Nov Shift A and prints it.

## Common questions

**Why is Edit greyed out?**

The card is already on the board or running. Take it back to the queue on the planner, or split the unstarted part into a new card.

**When do I use Split into a new card and when Split plan?**

Split into a new card when part of the order needs its own card (own print, QC, dispatch). Split plan when the same card should run over more shifts, days or machines.

**Force close is locked on my card. Why?**

It is a batch-entry card with runs logged. Open the card page and use **Close stage** on the stage that cannot finish; a short close needs a reason code and sends the balance back to the order.

**What does Back to order show?**

The pcs this card gave back to the sales order (force close, cancel or a stage short close) that Sales has not released again yet. Sales releases them again or short closes the order on the order page.

**The reason I need is not in the list.**

Pick the OTHER code of that list and write a note, and ask a Plant Manager, Admin or the Owner to add the code in Masters › Reason codes.

**Can I undo a cancel?**

No. Release the quantity again from the sales order to make a new card.

**? Who gets told about an emergency insert?**

Everyone affected is notified, and each card that had to move gets the move in its history.

**? Does closing a stage still need a supervisor's name?**

No. Plant Manager, Owner or Admin closes it, and that login is recorded.

**? The new split card is not on the board. Is that normal?**

Yes. A split card starts in the planner queue, unplaced. Use **Place it on the planner board**.

## Related chapters

- Job cards
- Planner
- Sales orders
- Log output and QC entry

# Planner

**What it is:** Where the planner puts released job cards on machines and shifts (Winder, Oven, Process, Slitting), and the Planning overview that compares every planned slot with what the floor actually logged.
**Who uses it:** Planner and Plant Manager (Owner and Admin also see it).
**Where:** Sidebar > Operations > Planner (/planning/board), with sub-pages **Planning overview** (/planning/overview), **Winder planning** (/planning/winder), **Oven planning** (/planning/oven), **Process planning** (/planning/process), **Slitting planning** (/planning/slitting)

## At a glance

- **Planning is only the plan; the job card log is the truth.** Nothing in planning blocks the floor. A run on an unplanned stage still saves and is flagged "Run before planning".
- A card's **Oven** opens for planning only once its **Winding** has a slot, and **Process** only once Oven has one. This lock is on the planner side only.
- A planned slot with nothing logged goes back to the queue **36 hours after its shift ends** (a "missed slot"). If the run did happen, logging it late puts the slot back.
- Drag cards from the **Open queue** onto a machine and shift. Tick several cards to move them together (up to 50). Over-capacity drops ask first and split the rest into the next shift.
- **Split plan** cuts one card's plan into two time slots; the card stays one card. To make a separate card, use **Split into a new card** in the Job card manager.

# The flow

## Planning a card

1. **Card released** — Sales
2. **Open queue**
3. **Plan Winding** — Planner
4. **Plan Oven** — Planner
5. **Plan Process** — Planner
6. **Print planning sheets** — Planner
7. **Floor logs runs** — Operator

If it goes wrong after **Plan Winding**

1. **Over capacity**
2. **Schedule and split** — Planner
   rest goes to next shift

If it goes wrong after **Floor logs runs**

1. **Matched to slot**
   Done in slot / Partly / Moved

## Missed slot (36 hours)

1. **Slot planned** — Planner
2. **Shift ends**
3. **Nothing logged for 36 h**
4. **Back to the queue**
   Missed slot chip
5. **Re-plan** — Planner

If it goes wrong after **Back to the queue**

1. **Late run logged** — Operator
2. **Slot restored**

The missed-slot check runs by itself about every 10 minutes and also when the Job cards list or the manager is opened. Only slots whose 36 hours have passed go back; a later part of a split plan stays planned.

## Screen tour

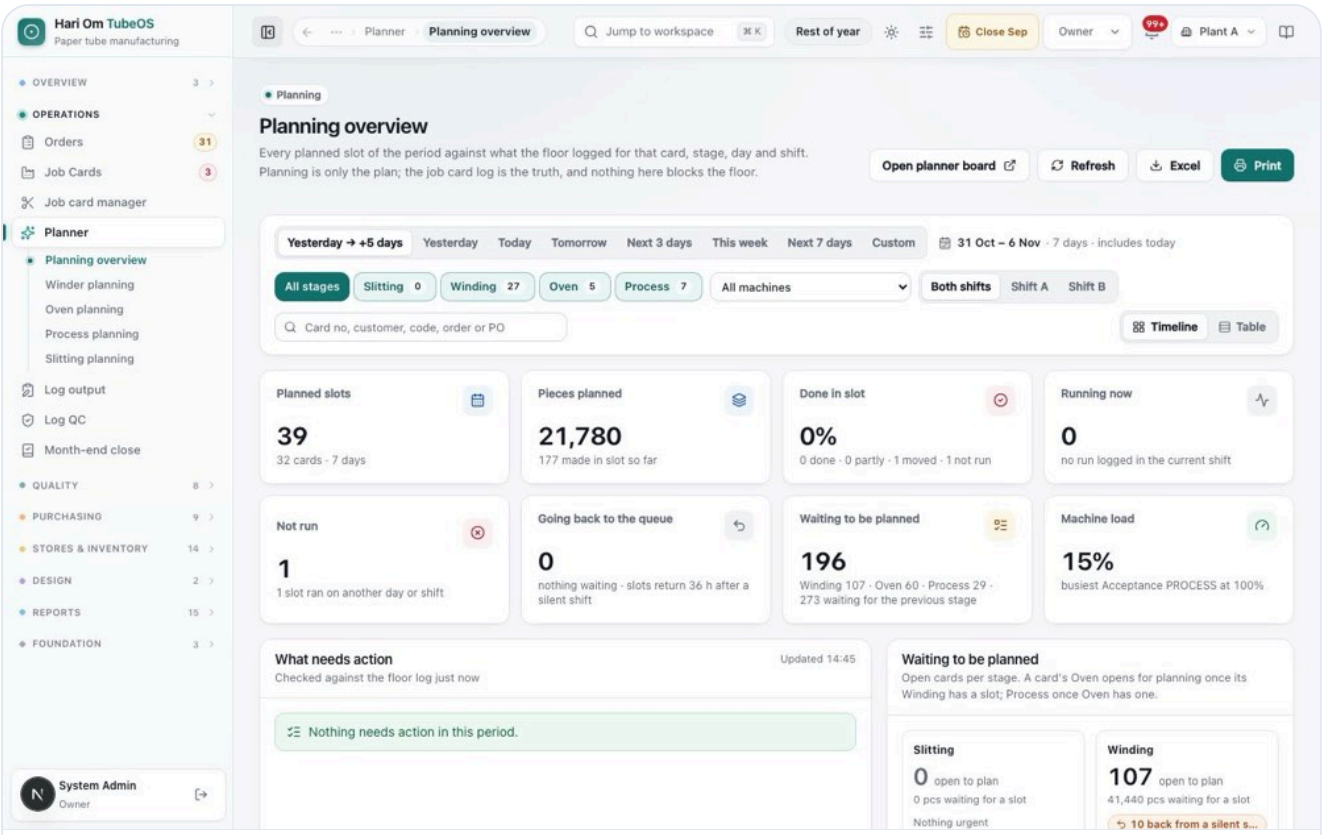



Figure: The Planning overview for 30 Oct to 5 Nov. Filters across the top, eight KPI tiles, then "What needs action" and "Waiting to be planned".

What you see:

1. **Header buttons**: **Open planner board**, **Refresh**, **Excel** (download the slots shown), **Print** (planning sheets).
2. **Period chips**: **Yesterday → +5 days** (default), **Yesterday**, **Today**, **Tomorrow**, **Next 3 days**, **This week**, **Next 7 days**, **Custom**, with the dates shown on the right.
3. **Stage chips** with slot counts: **All stages**, **Slitting**, **Winding**, **Oven**, **Process**. Then **All machines**, the shift switch **Both shifts / Shift A / Shift B**, a search box (card no, customer, code, order or PO) and the view switch **Timeline / Table**.
4. **KPI tiles**: **Planned slots** (cards · days), **Pieces planned** (made in slot so far), **Done in slot** (% with done · partly · moved · not run), **Running now**, **Not run**, **Going back to the queue** (slots return 36 h after a silent shift), **Waiting to be planned** (per stage, and how many wait for the previous stage), **Machine load** (shifts over 100%).

5. **What needs action**: items of five kinds: **Nothing logged**, **Stage order** (a slot before the previous stage's slot), **Planned after due**, **Over capacity**, **Due, not planned**. "Nothing needs action in this period." when clear.
6. **Waiting to be planned**: open cards per stage, pcs waiting, and how many came back from a silent slot.
7. Further down (not in the figure): **Plan by machine and shift** (timeline: machines by stage as rows, days × Shift A/B as columns; each block shows card, customer code, qty and a made-versus-planned bar; split plans read part 1/2) or the **Table** (Job card, Customer, Stage, Machine, Date · shift, Planned, Pcs, Made in slot, Result, Due, Order · PO, Emergency), then **By stage** (Slots, Planned, Made in slot, Done in slot, Load).

Slot results: **Upcoming**, **Running now**, **Done in slot** (95% or more of the plan made in it), **Partly done**, **Ran on another day or shift**, **Not run**, **Not needed** (stage finished earlier), **Logged before planning** (the slot was made from a run logged first). Clicking a slot opens its panel: stage, machine, planned slot, planned qty, due date, size, colour, order, PO, card status, where the card is now, the stage before, "Was due back in queue", the floor runs in this slot and runs of the same card and stage logged elsewhere, with **Add to print**.

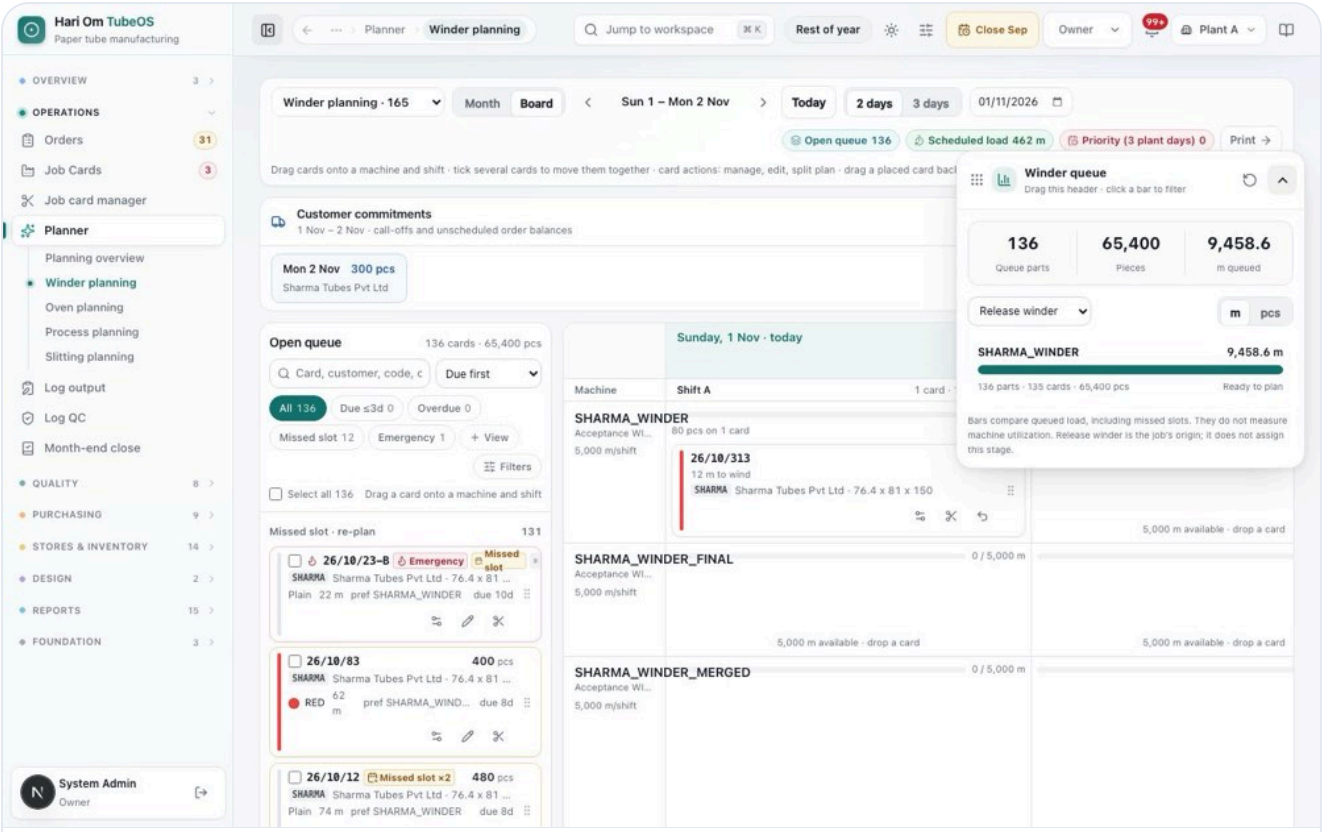



Figure: Winder planning in Board view for Sat 31 Oct – Sun 1 Nov. The Open queue is on the left, machines and shifts on the right, and a floating "Winder queue" panel shows the queued load.

What you see:

1. **Top bar**: the stage selector (**Winder planning · 163**), **Month / Board**, previous and next arrows with the date range, **Today**, **2 days / 3 days**, a date box; chips **Open queue**,

**Scheduled load** (in the stage's unit), **Priority (3 plant days)**; and **Print →**.

2. **Hint line**: "Drag cards onto a machine and shift · tick several cards to move them together · card actions: manage, edit, split plan · drag a placed card back to the queue to unschedule · Esc returns to the month".
3. **Customer commitments**: customer call-offs and unscheduled order balances in the date window, in pcs.
4. **Open queue**: count and pcs, search, sort (**Due first**), quick chips **All**, **Due ≤3d**, **Overdue**, **Missed slot**, **Emergency**, your saved views as badges, **+ View**, **Filters**, **Select all**. Groups: **Missed slot · re-plan** (slotted on a past date and not finished), **Ready to schedule**, and at the bottom, locked, **Waiting for the previous plan**.
5. **Queue card**: tick box, card number, chips (**Emergency**, **Missed slot ×2**, **Split card**), customer code and name, size, colour or "Plain", load (m for Winder, batch for Oven, tubes for Process), preferred machine, due ("due 9d"), and three icons: manage, edit qty/colour, split; plus a drag handle.
6. **Board**: one row per machine with its capacity per shift (Winder 5,000 m/shift in the sample); one column per day and shift. Each cell shows load used / capacity ("0 / 5,000 m") and "5,000 m available · drop a card".
7. **Floating queue panel** (drag its header to move it, click a bar to filter): **Queue parts**, **Pieces**, queued load; group by **Release winder** or **Planned machine**; unit switch (m or pcs; bamboo or pcs for Oven). "Bars compare queued load, including missed slots. They do not measure machine utilization. Release winder is the job's origin; it does not assign this stage."

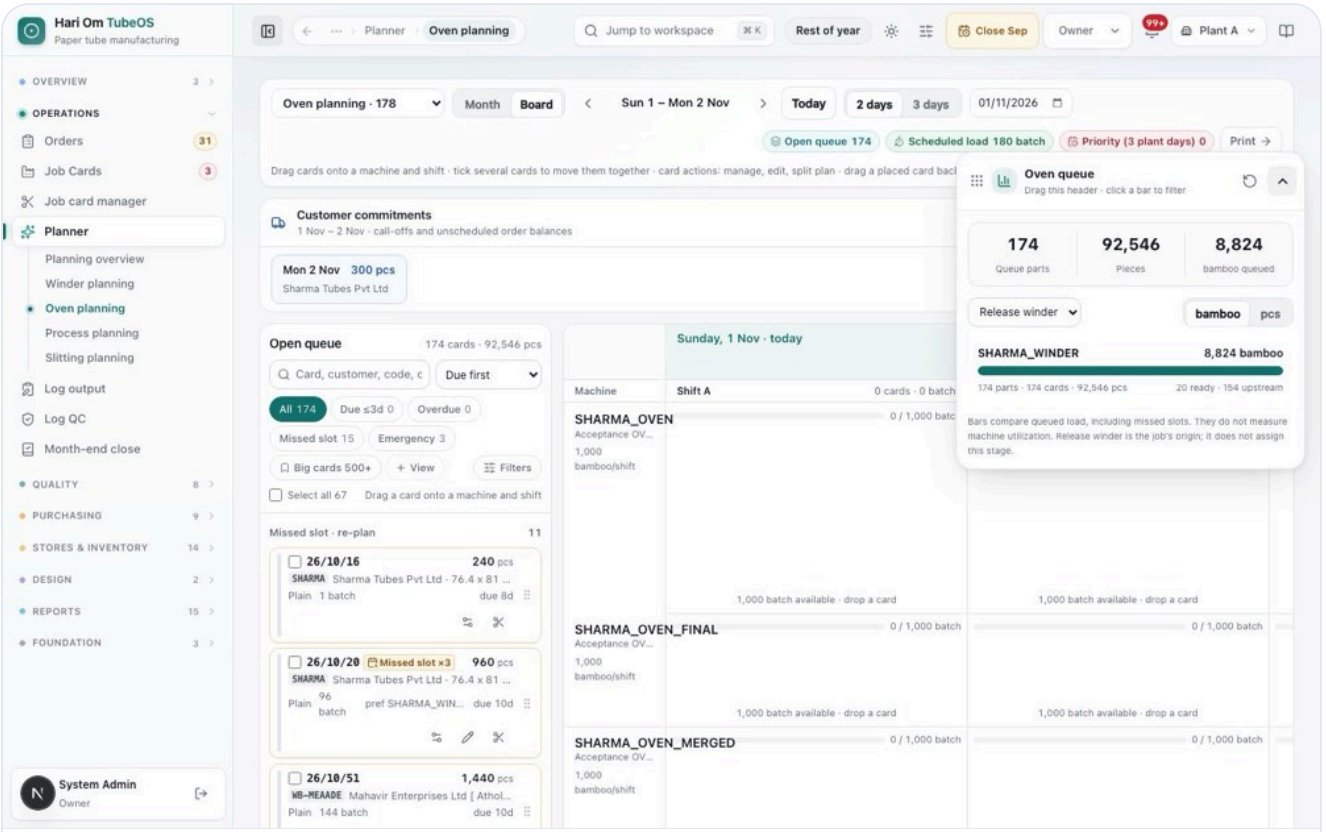



Figure: Oven planning. The same layout; capacity is in batch (bamboo per shift) and the queue panel shows "20 ready · 154 upstream", meaning most cards wait for their Winding plan.

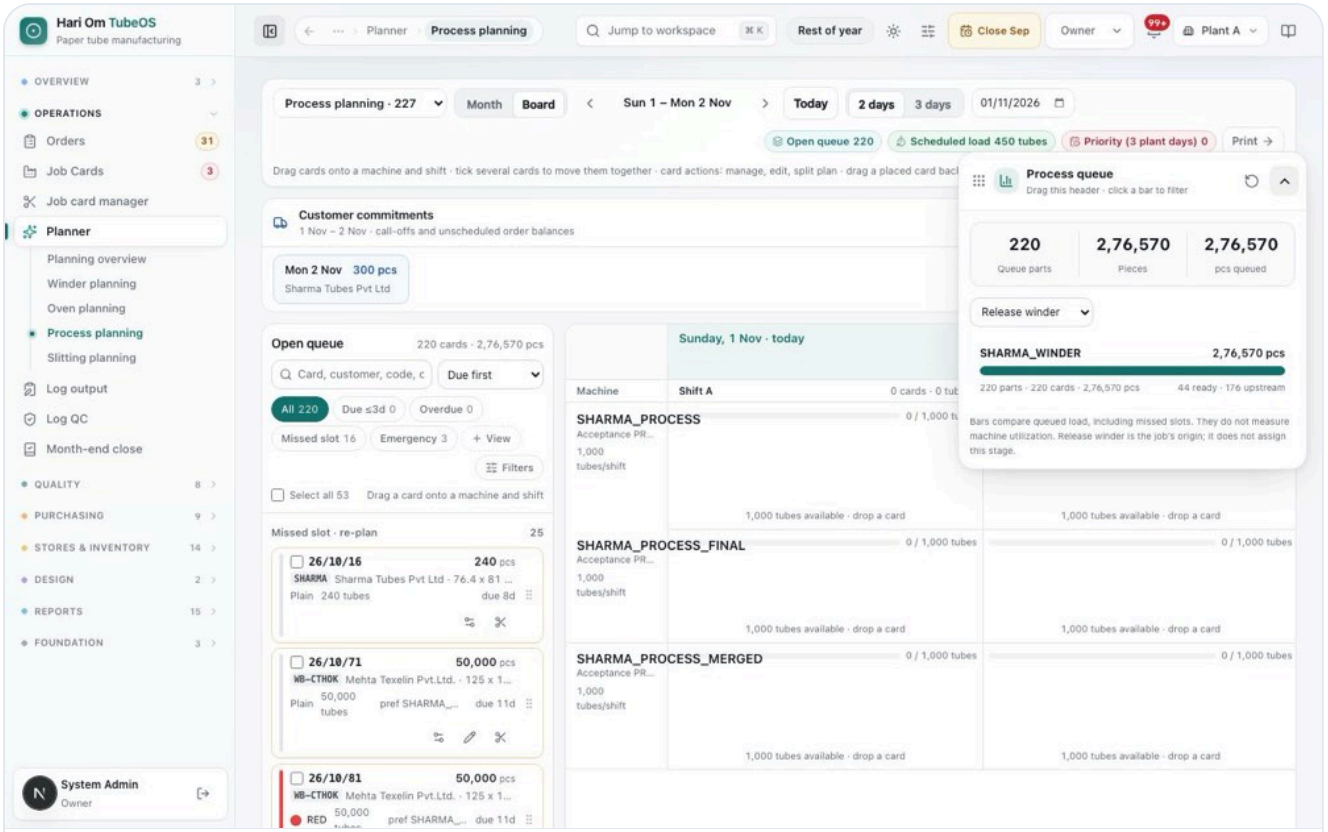



Figure: Process planning. Capacity is in tubes per shift (1,000 tubes/shift in the sample). Cards whose Oven has no slot sit at the bottom of the queue, locked.

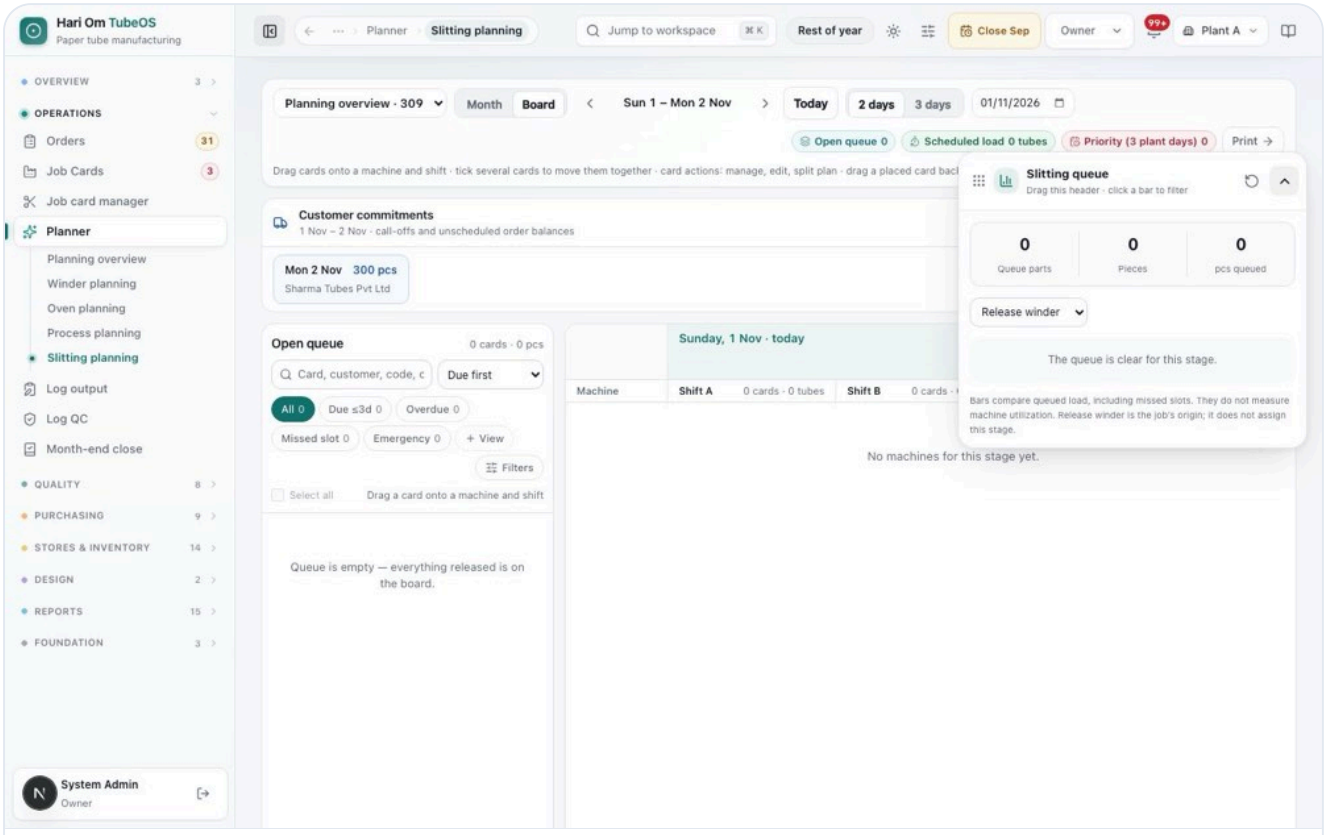



Figure: Slitting planning with an empty queue: "Queue is empty — everything released is on the board." Slitting is only used when released work needs reel conversion before winding.

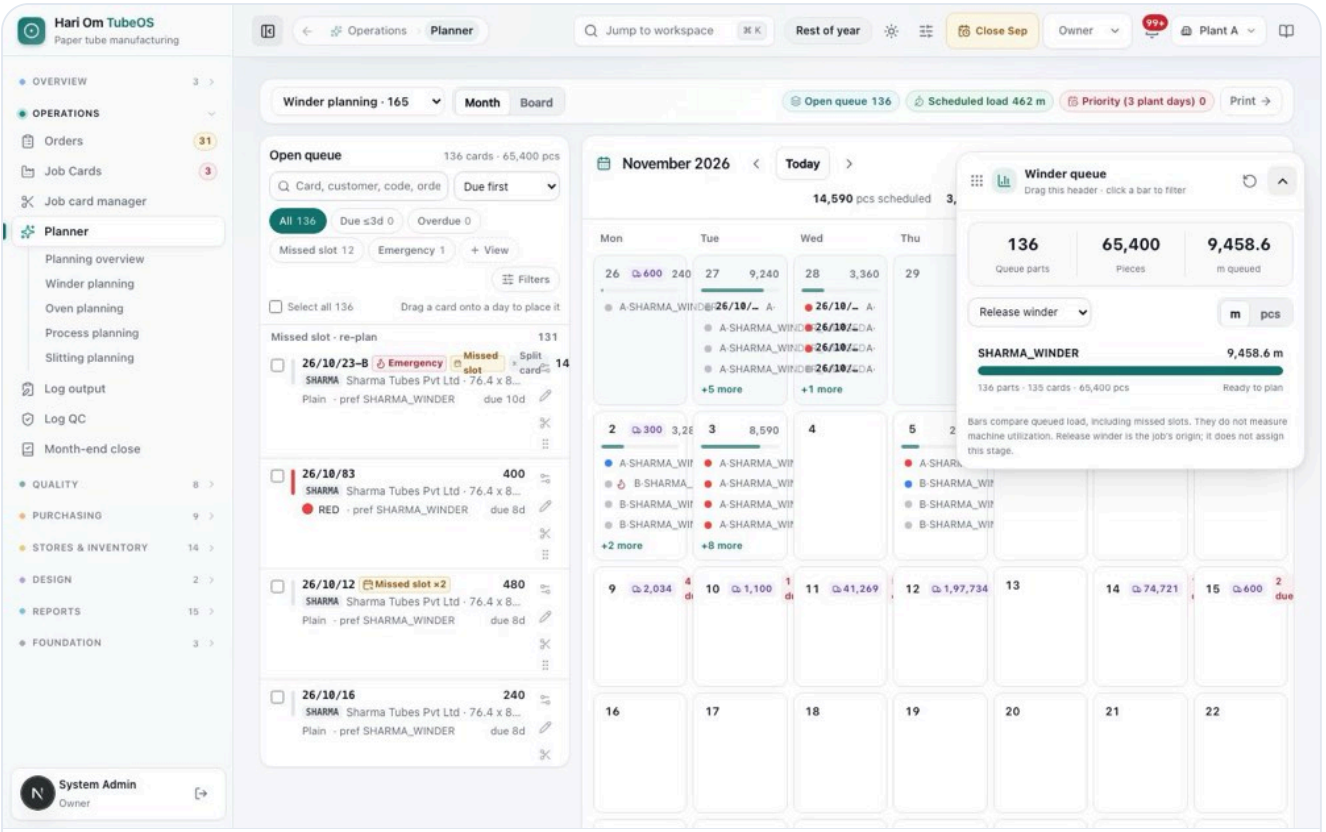



Figure: The Month view (October 2026). Each day shows pcs scheduled and the cards on it; drag a queue card onto a day to place it.

## Step by step

### How to place a card on a machine and shift

Roles: Planner, Plant Manager, Owner, Admin. Select one plant first ("Select one plant before scheduling").

1. Open the stage page, for example **Winder planning**, in **Board** view.
2. Find the card in **Open queue** (search, **Due ≤3d**, **Overdue**, a saved view).
3. Drag it onto the machine row and shift column. Or focus the card and press Enter to use **Keyboard scheduling** (same move as drag-and-drop).
4. If the slot has room, the card is placed and the cell load goes up.
5. If it does not fit, **Slot will be over capacity** opens: "The planner keeps what fits here and splits the rest into the next shift." Click **Schedule and split**, or **Choose another slot**.

### How to move several cards together

1. Tick the cards (shift-click selects a range; **Select all** takes the whole filter).
2. Drag any ticked card onto a machine and shift, or onto a day in Month view.

3. All of them go in queue order in one step (at most 50). If one cannot be placed, nothing moves and the message names the card and the reason, ending "Nothing was moved."

## How to plan Oven and Process

1. Plan the card's Winding first. Until then its Oven sits in **Waiting for the previous plan** with a lock and cannot be ticked or dragged.
2. Open **Oven planning** and place it. Then **Process planning**.
3. If you try too early the server says, for example: "Plan Winding for 26/10/315 first: Oven planning opens once Winding has a slot."

## How to split a plan (Split plan)

1. On a placed card, click the split icon (title "Split plan: cut this slot into parts").
2. The dialog **Split plan** says: "Cuts this plan into two parts (time slots). The card stays one card; part 2 goes to the next shift."
3. Type **First part (pcs)**, between 1 and total – 1. Confirm. The board shows "part 1/2" and "part 2/2".
4. The floor logs runs as usual; each run is matched to its part by date and shift.

## How to unschedule a card

Drag the placed card back onto the queue ("Drop here to send it back to the queue"), or use **Back to queue** on the card.

## How to save a queue view

1. Click **Filters** (or **+ View**). Set search, sort, release winder, customer, colour, size, quantity range and card flags.
2. Give it a name, choose **Only me** or **Everyone in this plant**, and **This stage** or **All stages**. Save.
3. The view appears as a badge beside **All**, **Due ≤3d** and **Overdue**. Another person's plant view can be applied but changed only by them or a plant head.

## How to read the Planning overview

1. Open **Planning overview**. Pick the period, stages, machine and shift.
2. Check **What needs action** first; then **Not run** and **Going back to the queue**.
3. Click a slot to see what was logged in it. Use **Open planner board** to fix the plan.
4. Click **Excel** to download the slots shown.

### How to print planning sheets

1. Click **Print** on the overview or **Print →** on the board.
2. Tick stages (or **All stages**), days (**Today**, **Tomorrow**, **Next 3 days**, **This week**, **Next 7 days**), shifts and machines. Or select slots on the overview and print only those.
3. Each stage prints on its own A4 sheet: card, customer and code, size, colour, quantity in the stage unit and pcs, due date, a **Made** column and signature lines.

## Rules the system enforces

- **The planner never blocks the floor.** Runs on unplanned stages save and are flagged "Run before planning" (Reports › Plan vs actual). (Flag only.)
- **Oven after Winding, Process after Oven** for planning. (Blocks the planner action only.)
- **Run to slot matching** is automatic: same card and stage, same date and shift, same machine first. Results on the floor form: "As planned", "Planned shift, other machine", "Same day, other shift", "N days later than plan", "N days earlier than plan", "Run before planning". A run on another day keeps the plan; only a stage with no slot at all is "before planning". (Automatic.)
- **Done in slot** = 95% or more of the slot's plan made in it. (Automatic.)
- **Short close shrinks later slots.** When a stage closes short on the card page, the open slots of the later stages shrink to the new target, latest slots first; reopening the stage puts them back. (Automatic.)
- **Missed slot**: no floor entry 36 h after the shift ends (Shift A 08:00–20:00, Shift B 20:00–08:00) sends the slot back to the queue. (Automatic.)
- **Capacity**: Winder in metres per shift, Oven in batch (bamboo) per shift, Process in tubes per shift, from the machine setup. Over-capacity drops ask first and split. (Warns, then splits.)
- **Bulk move** is all-or-nothing, up to 50 cards. (Blocks if any fails.)
- **Planning window**: up to 3 months ahead. (Blocks.)
- **Qty and colour** of a card on the board are locked; edit only queued cards (Job card manager). (Blocks.)

## Sample

Card 26/10/315 (Sharma Tubes Pvt Ltd, 900 pcs = 90 bamboo, bamboo 1,540 mm) needs about 139 m of winding. The planner drags it to Winder 1, 31 Oct Shift A. Oven opens for planning; she

places it on Oven 1, 31 Oct Shift B (90 bamboo). Process opens; she places 900 tubes on Line 1, 1 Nov Shift A.

| Stage | Slot | Logged | Result |
|---|---|---|---|
| Winding | 31 Oct · Shift A · Winder 1 | 90 bamboo, 31 Oct Shift A | Done in slot |
| Oven | 31 Oct · Shift B · Oven 1 | 90 bamboo, 1 Nov Shift A | Ran on another day or shift ("1 day later than plan") |
| Process | 1 Nov · Shift A · Line 1 | nothing by 3 Nov 08:00 | Not run → back to the queue (Missed slot) |

On 3 Nov the operator logs the Process run dated 1 Nov Shift A; the slot is restored and shows **Done in slot**.

## Common questions

**Why can't I drag this card onto the Oven board?**

Its Winding has no slot yet. Plan Winding first; the card shows in **Waiting for the previous plan** with a lock.

**The floor logged a run but the card was not planned. Is that wrong?**

No. It is allowed and flagged "Run before planning". The overview shows the slot as **Logged before planning**.

**What does "Missed slot ×2" mean?**

The card was planned twice and nothing was logged within 36 hours after each shift ended. Re-plan it, or have the floor log the run if it happened.

**What is the difference between Split plan and Split into a new card?**

Split plan keeps one card and cuts its plan into two time slots. Split into a new card (Job card manager) creates a separate card with its own number.

**? The capacity bar says 120%. Will it stop me?**

No. You are asked first; **Schedule and split** keeps what fits and moves the rest to the next shift.

**? Why do the queue panel bars not match machine use?**

They compare queued load only, including missed slots. They do not measure machine utilization.

**? Where did the Order tracker go?**

Old /planning/tracker links open the Orders list with the matching filter. Missed slots are on the Planning overview.

## Related chapters

- Job cards
- Job card manager
- Log output and QC entry
- Reports
- Masters
- Using TubeOS on a phone

# Log output and QC entry

**What it is:** The two short floor forms: **Log output** (how many were made and rejected on a run) and **Log QC** (the readings for a run). Same pages on a phone and a PC.
**Who uses it:** Operator, Plant Manager, QC and In-process QC, Owner and Admin. Planners can open the pages and view runs.
**Where:** Sidebar > Operations > Log output (/production/entry) and Log QC (/production/entry?mode=qc). Scanning a printed card's QR opens /production/entry/.

## At a glance

- Find the card by **scanning its QR**, typing its number (26/10/315, or 26-10-315), or picking it from **Open cards**.
- **Log output** asks only for date, shift, machine, operator, times (optional), made and rejected. Good = Made – Rejected. There are no QC fields on it.
- **The operator list shows only the stage's own people.** Winding lists active employees of the WINDER department, Oven of OVEN, Process of PROCESS (set in Masters › Employees). Log QC asks for the operator who took the readings the same way.
- **Every "why" is a reason code.** Rejected pieces, cutting loss, over-production, carryover, taking batches before QC, voiding a run and changing saved readings each pick a code from Masters › Reason codes, with an optional note.
- **Log QC** asks for the readings: **at least 2 readings per required check** (moisture is optional). **Operators log QC too**; no separate inspector is needed.
- A reading **outside its band is saved and flagged, never held**. The run is accepted, the next stage can take it, and on Process its pcs are packed into boxes that show **QC flagged**.
- An operator's run goes **to the supervisor** (plant manager, Owner or Admin), who checks and submits it. A supervisor's own run posts straight away.

## The flow

### One run on the floor

1. **Scan card QR** — Operator
2. **Pick stage**
3. **Log output** — Operator — made, rejected
4. **Send to supervisor**
5. **Submit run** — Plant Manager
6. **Log QC** — Operator/QC — 2 readings per check
7. **Next stage can take it**

If it goes wrong after **Log QC**

1. **Reading out of band**
2. **Saved and flagged** — not held

If it goes wrong after **Log output**

1. **Log QC for this run now** — Operator

QC can be logged straight after the run (the saved screen offers **Log QC for run W#3 now**), later from the card, or from the QC desk. A run with its readings still due waits; the next stage takes only runs whose QC is recorded.

### A Process run becomes boxes

1. **Log output on Process** — Operator
2. **Submit run** — Plant Manager
3. **Log QC** — Operator/QC — 2 readings per check
4. **Full boxes packed** — box code and QR
5. **Print box labels** — Operator

If it goes wrong after **Full boxes packed**

1. **Pcs left over**
2. **Next run fills next box**

On Process the last step of a run is packing. As soon as a run's readings are done, its good pcs fill boxes of the spec's qty per box. See "Job cards" for box codes and labels.

### Old links

1. **Supervisor entry link** → 2. **Floor entry** — Log output

If it goes wrong after **Supervisor entry link**

1. **EOD entry link** → 2. **Floor entry** — Log output

If it goes wrong after **Supervisor entry link**

1. **Order tracker link** → 2. **Orders list**

## Screen tour

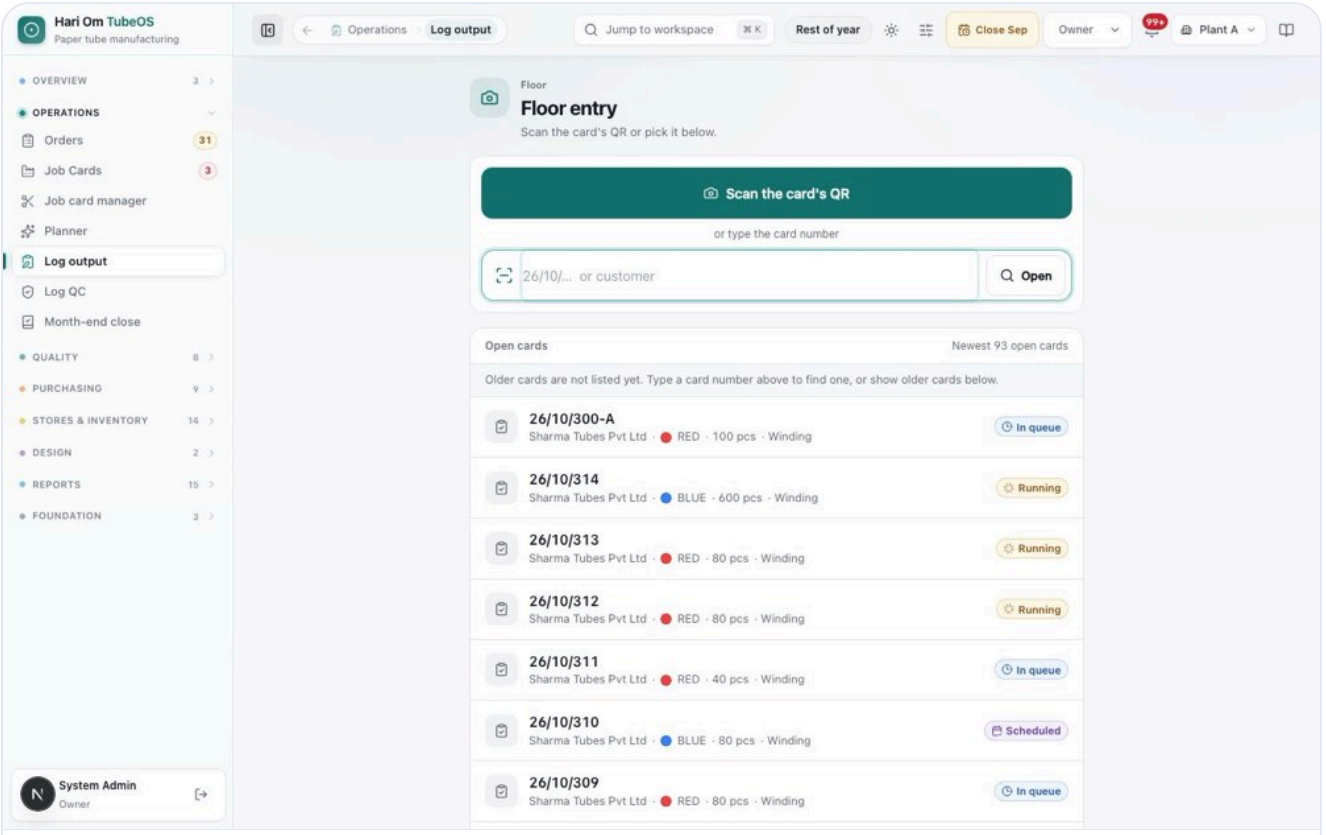



Figure: Floor entry, opened from the Log output link. A large green "Scan the card's QR" button, a box to type the card number or customer with an Open button, and the list of open cards.

What you see:

1. **Title**: "Floor entry" (from the **Log output** link) or "Log output" / "Log QC" when the page was opened for one of them. On Log QC a button **Log output instead** switches over (and **Log QC instead** the other way).
2. **Scan the card's QR**: opens the phone or laptop camera. Point it at the QR on the printed job card.
3. **Card number box** ("26/10/... or customer") and **Open**. Numbers typed with dashes, dots or spaces read as 26/10/315. Typing a customer or order opens the first open card that matches.
4. **Open cards**: newest open cards first, 100 at a time ("Newest 99 open cards"), each with number, flag count (amber), customer, colour, pcs, current stage and status (**Running**, **In queue**, **Scheduled**). **Show older cards** loads more.
5. **Error lines** in red when the scan or number is wrong: "That is a rack label..., not a job card", "That QR is on a material or tool label, not a job card", "Job card 26/10/315 is closed (completed). No more runs can be logged on it." (with **View the card**), or "No open job card 26/10/999".

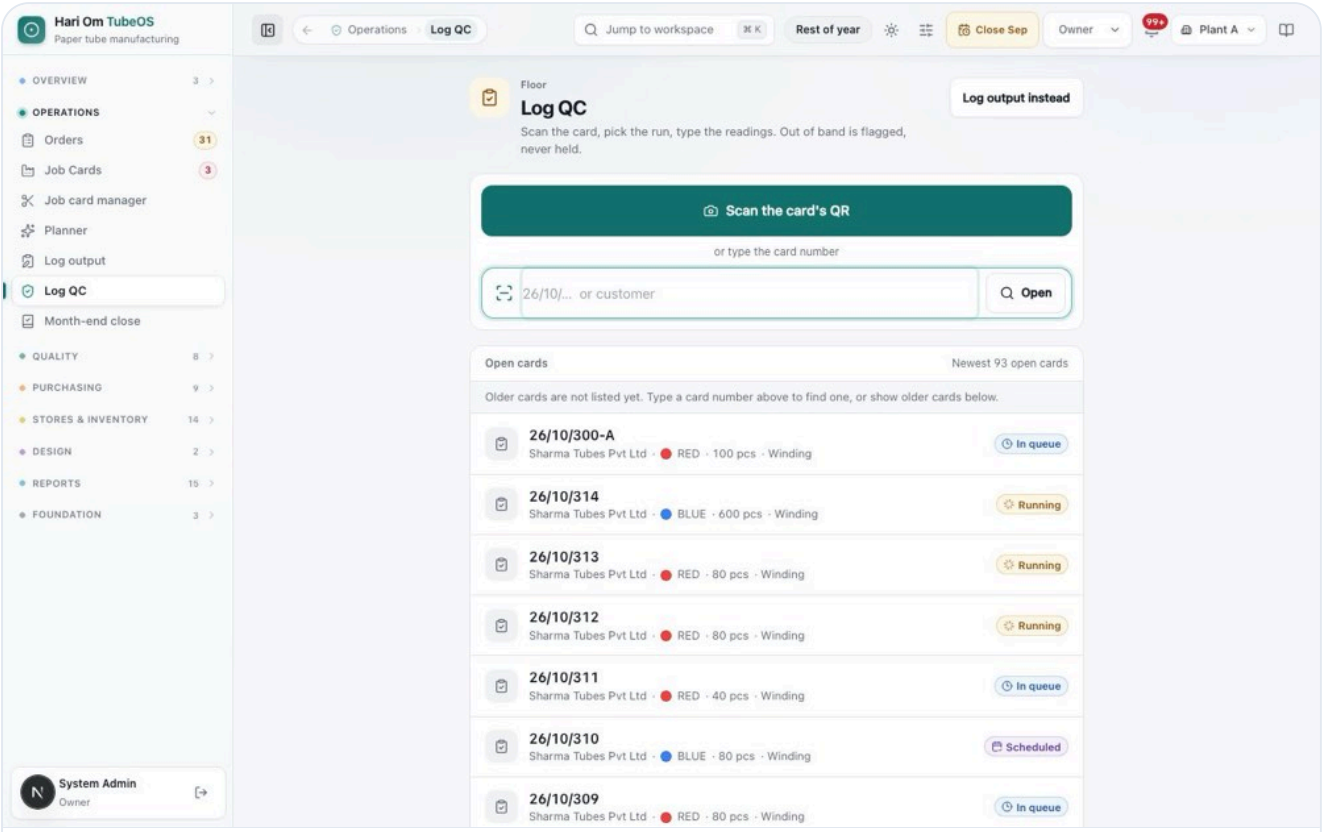



Figure: Log QC. The same picker; the subtitle reads "Scan the card, pick the run, type the readings. Out of band is flagged, never held."

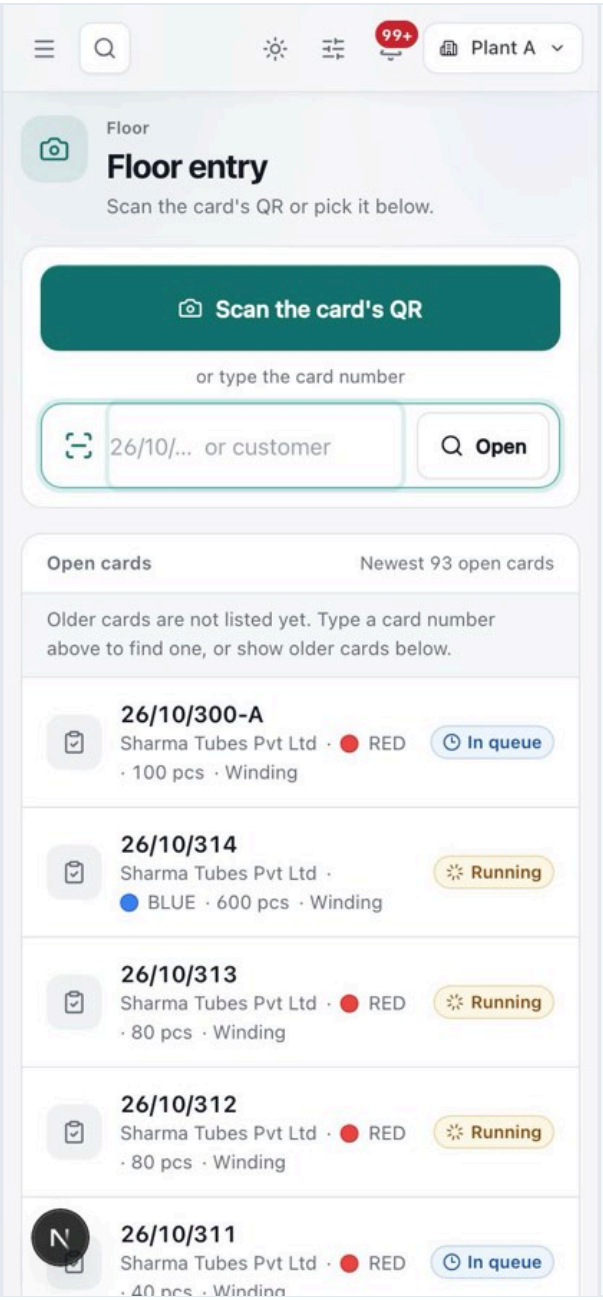



Figure: Floor entry on a phone. The scan button and number box fill the width; open cards are large rows for fingers.

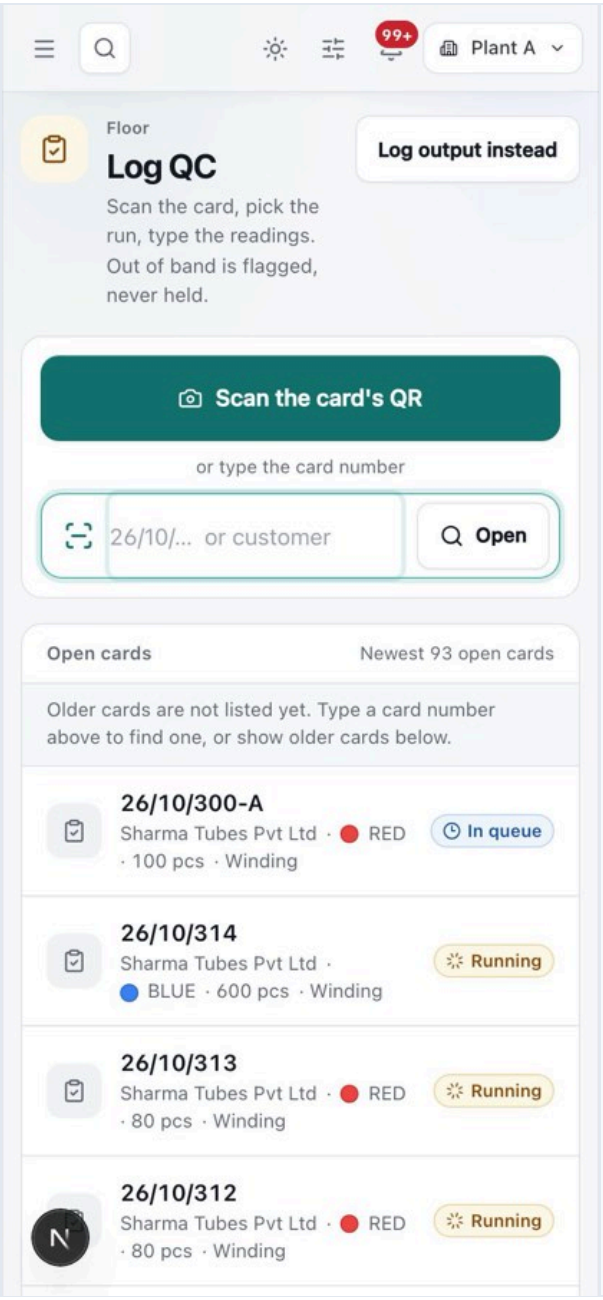



Figure: Log QC on a phone. Same layout as on the PC.

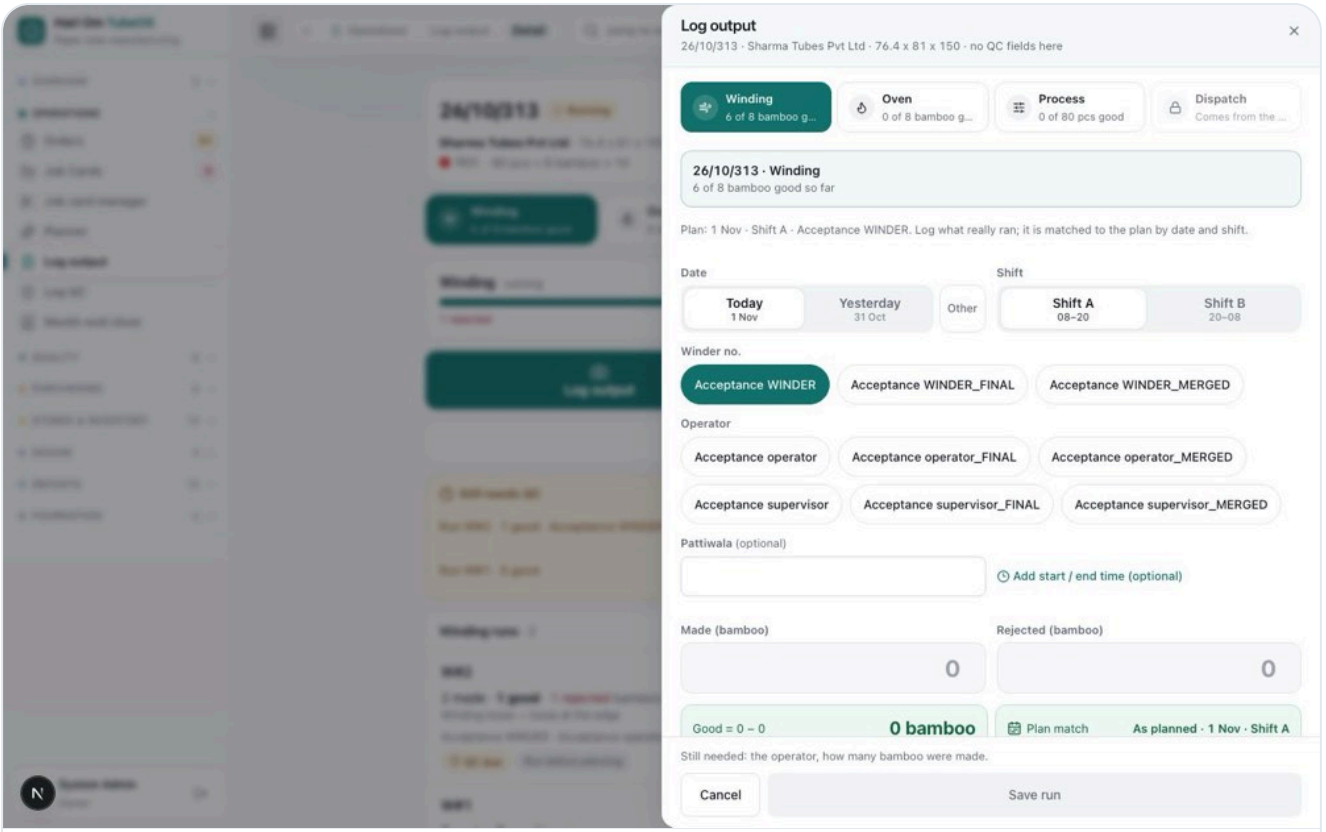



Figure: The Log output form on Winding. Under Who and when, the Operator drop-down (Choose operator) lists only active employees of the Winder department with their codes; the machine list shows only winders. Below are Made, Rejected, the green Good box and the Why rejected? reason picker.

What you see:

1. **Operator**: names with the employee code, for example "Suresh Patel · EMP-014". People of other departments are not offered, and the server refuses them if sent.
2. **Machine**: only the active machines of this stage.
3. **Why rejected?**: the reason picker appears as soon as Rejected is above 0.

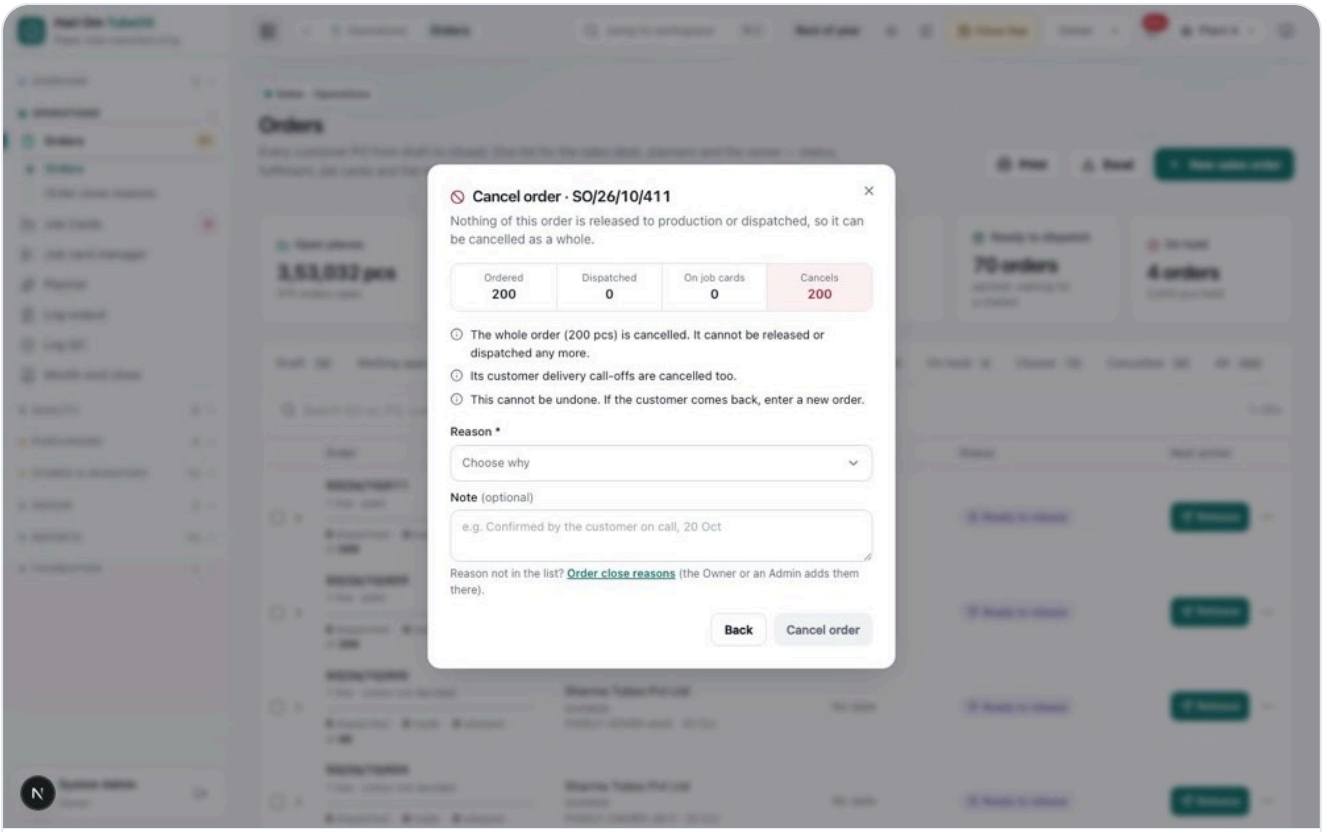



Figure: The reason picker used everywhere in the app. A button reads "Choose why"; opened, it shows a Search reasons box and the list of codes, each with its label on the first line and the code under it (for example Winding loose · WL). Under it is a Note box marked (optional), or marked * when the code is an OTHER code.

What you see:

1. **Choose why**: click (or press the down arrow) to open the list. Type in **Search reasons** to narrow it.
2. **Each row**: the label and the code. A tick marks the chosen one.
3. **Note**: optional, except for OTHER codes, which need at least 5 characters ("Write a short note (at least 5 characters) for Other.").
4. If the list is empty: "No reasons are set up for this list. Add them in Masters › Reason codes."

After a card is opened (described in words; no screenshot of the forms):

- **On a phone** (/production/entry/): the card's number, customer and size; its stages as tabs; two big buttons **Log output** and **Log QC**; the stage's recent runs (newest first); and what still needs QC. A card of another plant switches your active plant if you are allowed. A closed card is read-only; a completed card still takes QC readings.
- **On a PC**: the job card page opens with the form in a side panel ("Log output · 26/10/315 · Sharma Tubes Pvt Ltd · no QC fields here", or "Log QC · at least 2 readings per check · out of band is flagged, not held").

**Log output form** sections:

1. **Stage tabs** (Winding, Oven, Process; closed stages show "Closed · 90 bamboo").
2. **Who and when**: **Date** (**Today**, **Yesterday**, or **Other date**), **Shift** (**Shift A** 08–20, **Shift B** 20–08), the machine (**Winder no.**, **Oven no.**, **Line no.**; only active machines of this stage's department), **Operator** (**Choose operator**; only active employees whose department in Masters › Employees is this stage, operators first; the last one is remembered), and **Start time** / **End time** ("Times are optional"; the cycle time is shown). If nobody is set up, an amber line says "No active employee in the Winding department — set the department in Masters › Employees."
3. **How many**: on Process first **Bamboo taken from Oven** with "N ready from Oven · 1 bamboo = 10 pcs". Then **Made** and **Rejected** in the stage unit (bamboo for Winding and Oven, pcs for Process). A green box shows **Good = Made – Rejected**. A **Plan match** box shows where the run lands against the plan.
4. **Process balance** (Process only): "9 bamboo × 10 pcs = 90 pcs · all pieces accounted for", or an amber count-gap line ("4 pcs short — it still saves and the run is flagged for the owner"). **Cutting loss (pcs, if any)** with a button to count the gap as cutting loss; a cutting loss needs a reason.
5. **Why rejected?**: a reason picker for the list **Floor rejection** when anything is rejected: WL Winding loose, PG Pasting / glue, ID I.D. out, OD O.D. out, LN Length out, WT Weight out, CS C.S. low, DM Damage / dent, MS Moisture, NT Notch, RJ-OTHER Other (write a note). When only a cutting loss is typed, the same picker asks "Why were 4 pcs lost in cutting?"; with both it asks "Why rejected or lost in cutting?". **Save** stays off until a code is picked.
6. **Why is this outside the plan?** (amber box, only when needed): shows when output goes above the planned quantity +10%, when pieces are held over (carryover), or when batches are taken before their QC. Pick a code from the list **Override**: OV-CUST-EXTRA Customer accepts extra, OV-SETUP-LOSS Extra for setup or cutting loss, OV-PLAN-CHANGE Plan changed on the floor, OV-URGENT Urgent order run early, OV-MACHINE-SWAP Run on another machine, OV-OTHER.
7. **Save run** (supervisor roles: "Saving posts the run straight away") or **Send to supervisor** (operator: "Your run goes to the supervisor, who checks and submits it").

**Log QC form** sections:

1. **Stage tabs**. A stage without checks is greyed: "No QC checks on this stage"; Final QC says "Process QC is the final QC".
2. **Run**: the run waiting for QC is picked first. Runs still **with supervisor** can take QC too. **QC without a run** is for a check between runs, at the start of a shift, or on held pieces.
3. **Readings table**: one column per check with its allowed band, one row per sample (S1, S2…). Cells turn green in band and red out of band. **Add another sample** adds a row. A check named Remark or Notes is written in words ("Note — write in words") and is never judged.
4. **Operator who took the readings**: the same department list as on Log output.
5. **Instrument ID** where a check needs a calibrated instrument.

6. **Why are recorded readings changed?** (only when you change readings already saved; list **Entry correction / void / reopen**, for example EC-WRONG-QTY) and **Remark** (optional — what you saw, in plain words). "Adding new readings needs no reason; changing recorded ones does."
7. The save line: "All readings in band." or "Saves with 2 flagged readings — not held." and the button **Save QC** (or **Save QC · flagged**).

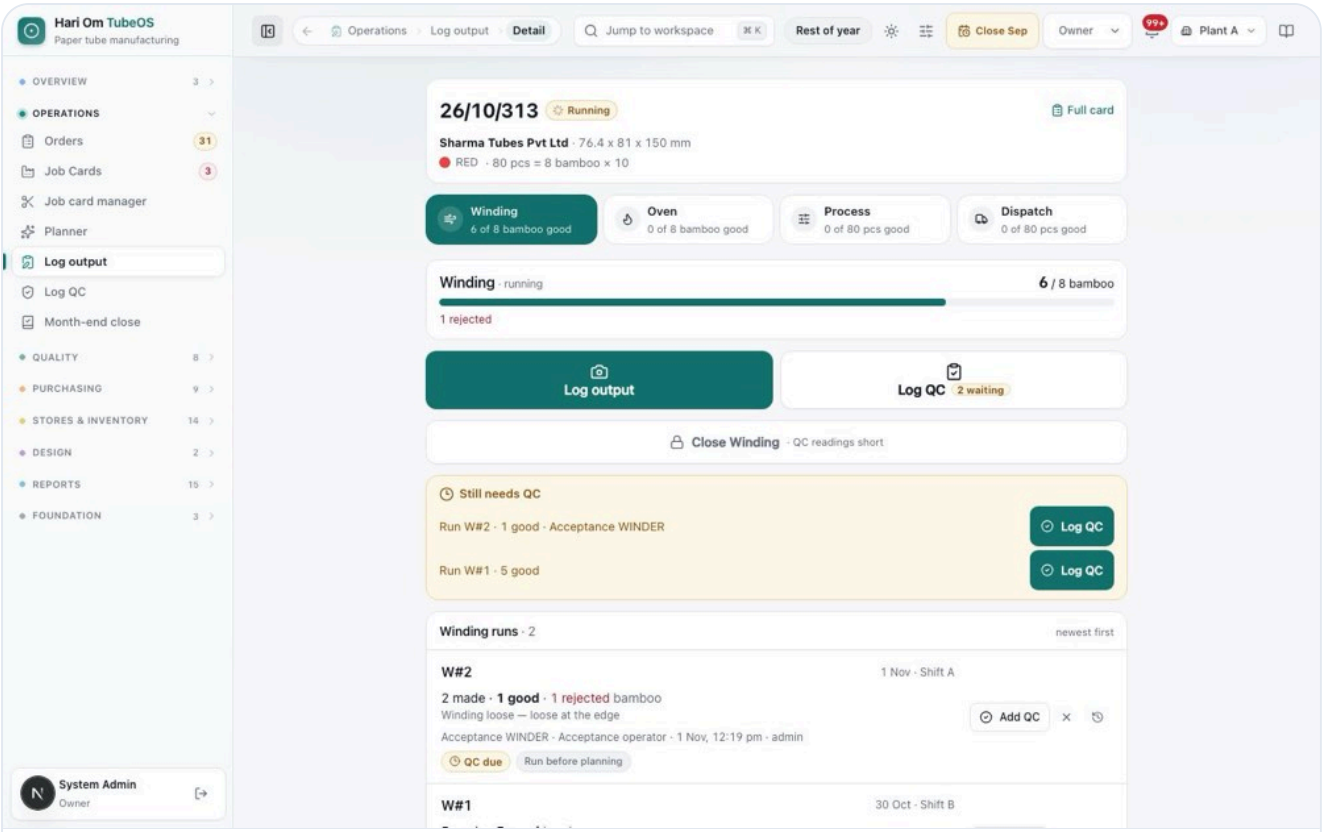



Figure: Floor entry after opening card 26/10/313. The four stage tabs (Winding, Oven, Process, Dispatch) show how many are good. Big buttons **Log output** and **Log QC** sit under the progress bar. A yellow **Still needs QC** box lists runs waiting for readings.

1. **Stage tabs**: pick the stage you are working on. Each shows good pieces against the target.
2. **Progress bar**: how much of the stage is done.
3. **Log output / Log QC**: the two actions you use on the floor. A small badge shows how many QC checks are waiting.
4. **Close Winding**: stays locked with a reason (here "QC readings short") until the checks are done.
5. **Still needs QC**: runs that have output but not enough QC readings yet.
6. **Winding runs**: every run, newest first, with **Add QC**, cancel and history buttons.

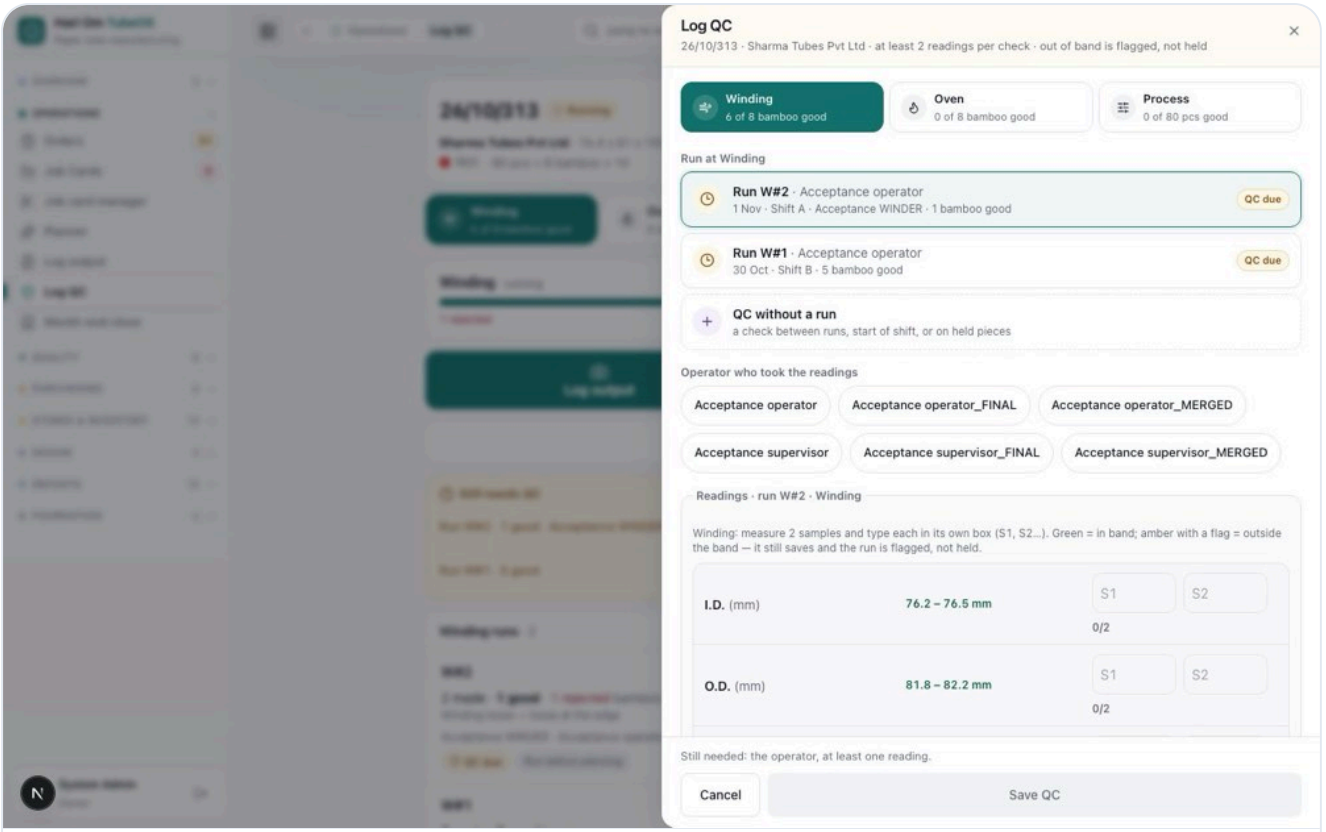



Figure: The **Log QC** panel. At least two readings per check (S1, S2). Each check shows its allowed band, for example I.D. 76.2 to 76.5 mm. Out-of-band readings are flagged, not held.

1. **Stage tabs**: choose Winding, Oven or Process.
2. **Run list**: pick the run to check, or **QC without a run** for a check between runs, at start of shift or on held pieces.
3. **Readings**: type each measurement in its own box. Green means in band; amber with a flag means outside the band. It still saves.
4. **Save QC**: stays grey until at least one reading is typed. The footer says what is still needed.

## Step by step

### How to log a run on a phone

Roles: Operator, Plant Manager, Owner, Admin.

1. Scan the QR on the printed job card with the phone camera (or open **Log output** and tap **Scan the card's QR**). Log in if asked; you come back to the card.
2. Tap the stage tab, then **Log output**.
3. Check **Date** and **Shift**. They default to the shift running now (see the night-shift rule below).
4. Tap the machine and pick the **Operator**. Only people of this stage's department are listed. Times are optional.

5. Type **Made** and **Rejected**. If you rejected anything, tap **Choose why** under **Why rejected?** and pick the code (for example WL Winding loose).
6. On Process, type **Bamboo taken from Oven**. If the pieces do not match bamboo × pcs per bamboo, type any **Cutting loss** and pick its reason code, or leave the gap: it saves and is flagged.
7. If an amber box **Why is this outside the plan?** appears (above target +10%, carryover, or taking batches before QC), pick an **Override** code. Only a plant manager, Owner or Admin may take batches before their QC.
8. Tap **Send to supervisor** (operator) or **Save run** (supervisor). The saved screen shows "Run W#3 sent to the supervisor" or "Run W#3 saved", with Made, Rejected, Good and the plan match.
9. Tap **Log QC for run W#3 now**, **Log another run**, or **Done**.

## How to log a run on a PC

1. Open the job card (Job Cards list, click the row). Or use the row menu **Log output**.
2. Click **Log output** in the action bar. The form opens in a side panel.
3. Fill it as above and save.
4. A plant manager can also type a whole paper card at once: **Output log** tab > **Whole printed card** (running totals of every stage; only what is new is posted).

## How to log QC readings

Roles: Operator, QC, In-process QC, Plant Manager, Owner, Admin.

1. Open the card and click **Log QC** (or scan with **Log QC** open). The button shows "N waiting" when runs need readings.
2. Pick the stage tab and the **Run** (the waiting run is already picked). Pick the **Operator who took the readings**.
3. Type at least 2 readings for every required check, one per sample row. Use **Add another sample** for more.
4. If a cell turns red, check the value. If it is right, keep it: "It still saves — the run is flagged, not held, and the next stage can take it."
5. Type the **Instrument ID** if asked. Add a **Remark** if you saw something.
6. Click **Save QC**. The saved screen shows "QC saved · run W#3 · all in band" or "flagged", lists the flags under **Flagged, not held**, and says which runs still wait for QC.
7. On Process, saving the readings also packs the run's good pcs into boxes. New boxes appear on the card's **Dispatch** tab, ready for their labels.

## How a supervisor submits operators' runs

Roles: Plant Manager, Owner, Admin.

1. Open the card, **Output log** tab. Runs marked **With supervisor** are drafts; they do not count yet.
2. Check each one; edit it if needed (an operator can edit only their own drafts).
3. Use the tick action ("Checked — post this run"). The run now counts.
4. A stage cannot close while any run is still with the supervisor.

### How to correct a mistake

- **A draft run**: edit it (operator: own drafts only; supervisor: any).
- **A submitted run**: void it with a reason code ("Why is it voided?", list **Entry correction / void / reopen**: EC-WRONG-QTY, EC-WRONG-OPERATOR, EC-WRONG-MACHINE, EC-DUPLICATE, EC-WRONG-CARD, EC-OTHER), then log it again. Output already used by the next stage cannot be voided, and a Process run whose pcs are already in a box cannot be voided. Every save of a run is kept under **Revision history**.
- **QC readings**: open Log QC on the same run, change the value and pick **Why are recorded readings changed?**. Adding more readings needs no reason.
- **Wrong operator on a saved run**: void it with EC-WRONG-OPERATOR and log it again with the right person.

## Rules the system enforces

- **Floor entry roles**: Operator, Plant Manager, QC, In-process QC, Planner, Owner and Admin can open the floor pages. Logging runs: Operator, Plant Manager, Owner, Admin ("Your role can view runs but not log them" for others). QC and In-process QC may add QC readings only. (Blocks.)
- **Required on a run**: date, shift (Shift A or Shift B only), operator, made > 0; a **Floor rejection** code if rejected > 0; a code for any cutting loss; Process bamboo taken. Old runs saved with OT read as RJ-OTHER. (Blocks.)
- **Operator of the stage's department.** Every run and every QC entry, on phone and PC, needs an active employee whose department is the stage (Winding → WINDER, Oven → OVEN, Process → PROCESS). Anyone else is refused: "Ravi is not in the Winding department (Oven in Masters › Employees). Choose an operator of the Winding department." (Blocks.)
- **Reasons are codes, never free text.** Every reason on these forms picks an active code of the right list and plant; OTHER codes need a note of at least 5 characters. Free text alone is refused. (Blocks.)
- **Rejected cannot be more than made.** (Blocks.)
- **Above 110% of target** needs an **Override** code ("Output goes above the planned quantity +10%"). Carryover and taking batches before QC need one too; one code covers all of them on a run. (Blocks until chosen.)

- **Card times never block.** Start and end are optional; an end before the start is saved and flagged. (Flag only.)
- **Planning never blocks.** A run on a stage with no planner slot is saved and flagged "Run before planning". The floor never picks a slot; the server places the run in the slot of its date and shift. (Flag only.)
- **Count gap** on Process (pieces ≠ bamboo × pcs per bamboo) is a warning and a flag, never a block. If the spec has no pcs per bamboo, Process cannot be saved: "This card's spec has no pieces per bamboo… Ask the planner to correct the spec." (Flag; blocks only without pcs per bamboo.)
- **QC gate between stages.** The next stage can take only QC-cleared output (output whose readings are done, in band or not): "Only 60 bamboo of Winding output is QC-cleared; 30 more is waiting for Winding QC. Record that batch's QC first, or a supervisor can override with a reason." Only a plant manager, Owner or Admin may override, with an **Override** code that stays on the run. (Blocks, supervisor override.)
- **Boxes from QC-cleared Process pcs.** Process good pcs go into boxes only after their run's readings are done. (Automatic.)
- **2 readings per required check** for a run to be QC done, and for a stage to close (including a short close). Moisture is optional; a missing optional reading is flagged for the owner. (Blocks the close and the next stage.)
- **Out-of-band reading** saves, flags the run and appears on the card, the boxes holding that run's pcs, the dispatch register, the order and Quality › In-process QC. No hold is made and dispatch is never blocked by it. (Flag only.)
- **Future dates refused**: " is in the future. Use the date the shift started." (Blocks.)
- **Closed month**: runs dated in a closed month are refused (" is closed. Ask the owner to re-open it."). QC-only checks are not affected. (Blocks.)
- **Cancelled cards** take nothing. **Completed cards** take QC readings only. (Blocks.)
- **Drafts on the device.** Every floor form keeps what you typed on the phone or PC until it is saved; reopening shows a "Draft restored" bar with a discard option. (Automatic.)

**Canonical shift and the night-floor date.** There are two shifts: **Shift A** 08:00–20:00 and **Shift B** 20:00–08:00 (India time). Shift names written as "A", "Shift A" or "shift-a" are all read as Shift A. The date of a run is **the day the shift started**: a run at 01:30 on 31 Oct belongs to Shift B of **30 Oct**, and the form picks 30 Oct by itself. When you change the shift on the form, the date follows (at 10:00, choosing Shift B gives last night's date). Times before 08:00 on Shift B are stored on the next calendar day.

**Old pages that now redirect.** "Supervisor entry" (/production/supervisor-entry) and "EOD entry" (/production/eod-entry) open Floor entry; a link that named a card opens that card. Old printed QR codes still work. The old Order tracker (/planning/tracker) opens the Orders list with the matching filter.

## Sample

Night shift, card 26/10/315 (Sharma Tubes Pvt Ltd, 76.4 x 81 x 150, BLUE, 10 pcs per bamboo).

| Field | Value typed | Result |
|---|---|---|
| Time on the clock | 01:30, 31 Oct | Date 30 Oct, Shift B (automatic) |
| Stage / machine | Process / Line 1 | Plan match: As planned · 30 Oct · Shift B |
| Bamboo taken from Oven | 9 | 9 × 10 = 90 pcs possible |
| Operator | Suresh Patel (Process department) | Accepted; a winder operator would not be listed |
| Made / Rejected | 86 / 2, reason OD O.D. out | Good = 84 pcs |
| Cutting loss | 4, reason picked with note "end trimming" | all pieces accounted for (86 + 4) |
| Saved by | Operator | "Run P#2 sent to the supervisor" |

QC on run P#2: I.D. 76.5 and 76.9 mm against band 76.2–76.5. The second reading is red; the operator saves. Result: "QC saved · run P#2 · flagged", "I.D. 76.9 mm (band 76.2–76.5) · S2". The run is accepted; the flag shows on the card and in In-process QC. The spec packs 48 pcs per box and 20 pcs from run P#1 were waiting, so 20 + 84 = 104 pcs fill boxes B2610315-002 (20 from P#1 + 28 from P#2) and B2610315-003 (48 from P#2); 8 pcs wait for the next run. Both boxes show **QC flagged** because they hold pcs of P#2, and both can still ship.

## Common questions

**? The scan opened "That QR is on a material or tool label". What now?**

You scanned a reel, lot or tool label. Scan the QR on the printed job card.

**? It is 2 a.m. Why does the form say yesterday's date?**

The run belongs to Shift B, which started yesterday at 20:00. That is correct.

**Do I have to fill start and end time?**

No. They are optional and never stop a save.

**My reading is outside the band. Will the card stop?**

No. It is saved and flagged, also on the boxes of that run. Only a hold placed on purpose on the Quality pages stops a card.

**My name is not in the Operator list.**

Your department in Masters › Employees is not this stage, or you are inactive. Ask the Owner or Admin to set your department (for example PROCESS).

**Save stays grey after I typed Rejected.**

Pick a code under **Why rejected?**. With RJ-OTHER, also write a note of at least 5 characters.

**Why did Log QC on Process make new boxes?**

Pcs go into boxes once their readings are done. Print the labels from the card's Dispatch tab.

**Why can't the next stage take my batch?**

Its QC is not done yet. Add at least 2 readings for every required check on that run, or ask the supervisor to override with a reason.

**I saved a run but it does not count.**

It is with the supervisor. A plant manager, Owner or Admin must submit it.

**I typed the wrong quantity on a submitted run.**

Ask the supervisor to void it with a reason, then log it again. If the next stage already used that output, it cannot be voided.

**Where is the old Supervisor entry page?**

It now opens Floor entry. Use Log output.

## Related chapters

- Job cards
- Planner
- Quality
- Job card manager
- Masters (Employees, Reason codes)

# Quality

**What it is:** The QC pages: the QC desk (what needs QC now), incoming inspection of GRN lots, in-process QC flags, holds, customer complaints, and the standards and stage rules that set the bands.
**Who uses it:** QC, Inward QC, In-process QC, Plant Manager (plant head), Store, Sales, Dispatch, Owner and Admin (each sees only the pages for their role).
**Where:** Sidebar > Quality > QC desk (/quality), Incoming QC (/quality/incoming), In-process QC (/quality/stage), Holds & inspections (/quality/results), Customer complaints (/quality/returns), Material standards (/quality/material-standards), Process stage rules (/quality/stage-rules), Quality analytics (/reports/quality)

## At a glance

- **Incoming QC works by bill.** One card per bill or challan holds every reel and lot of that bill. QC weighs each reel on the scale and types the **Actual kg** beside the bill weight. **Accept needs the actual weight** on every path; Hold and Reject do not. Every other check is optional, but a reading that is entered and out of band still holds the lot.
- **Stock stays on the bill weight.** The actual weight is a record only. When every lot of a bill is weighed, the bill's weight check runs: short up to 20 kg is recorded, 20 to 50 kg goes to the Owner (Make debit note or Skip), above 50 kg a debit-note draft is made automatically (limits per plant, see Invoice differences).
- **Job card QC never holds or rejects.** On Winding, Oven, Process and final QC a reading outside its band is saved and flagged on the run, the batch, the box and the card; the run moves on and dispatch is never blocked by it. In-process QC traces every flag.
- **2 readings per required check** make a run "QC done" (moisture optional). The next stage takes only QC-done runs.
- **QC lists the checks; Masters set the inward bands; QC keeps the seasonal stage rules.** Every change is a new version; lots and cards keep the version they started with.
- **Holds** on job cards are placed only on purpose (by QC, In-process QC, the plant head, Owner or Admin) and released only by the plant head, Owner or Admin. Such a hold stops the next stage, box postings and dispatch.
- **Every reason is a code** from Masters › Reason codes: placing a hold (**QC hold placed**), releasing it (**QC hold release**), a concession, a return to the supplier (**Incoming material rejected / returned**) and a customer complaint (**Customer complaints**).

## The flow

### Incoming bill (GRN)

1. **GRN posted** — Store/GRN
2. **Bill card in To weigh** — 24 h
3. **Weigh each reel, type Actual kg** — Inward QC
4. **Accept** — needs the weight
5. **Save weighed rows**
6. **Released to issue desk**

If it goes wrong after **Save weighed rows**

1. **Last lot weighed**
2. **Weight check of the bill** — 20 / 50 kg
3. **Owner decides or debit note drafted**

If it goes wrong after **Weigh each reel, type Actual kg**

1. **Optional reading out of band, or Hold / Reject**
2. **Lot held** — Inward QC
3. **Re-check** — QC
4. **Released to issue desk**

If it goes wrong after **Lot held**

1. **Concession** — Plant head/Owner/Admin
2. **Released for limited use**

If it goes wrong after **Lot held**

1. **Return to supplier** — Store
   written out of stock

## In-process QC

1. **Run logged** — Operator
2. **Log QC** — Operator/QC — 2 readings
3. **In band**
4. **QC done** — next stage takes it

If it goes wrong after **Log QC (2 readings)**

1. **Out of band**
2. **Flagged, not held**
3. **QC done** — next stage takes it
4. **Boxes show QC flagged** — still ship

If it goes wrong after **Run logged**

1. **Hold placed on purpose** — QC/Plant head — reason code
2. **Release hold** — Plant head/Owner/Admin — reason code

## Customer complaint

1. **New complaint** — Sales/QC/Store
2. **Goods held for QC**
3. **QC decision** — QC
4. **Rework or sort**
5. **Re-inspect** — QC
6. **Accept to stock or Scrap** — closed

If it goes wrong after **QC decision**

1. **Accept to stock** — closed

If it goes wrong after **QC decision**

1. **Scrap** — closed

## Screen tour

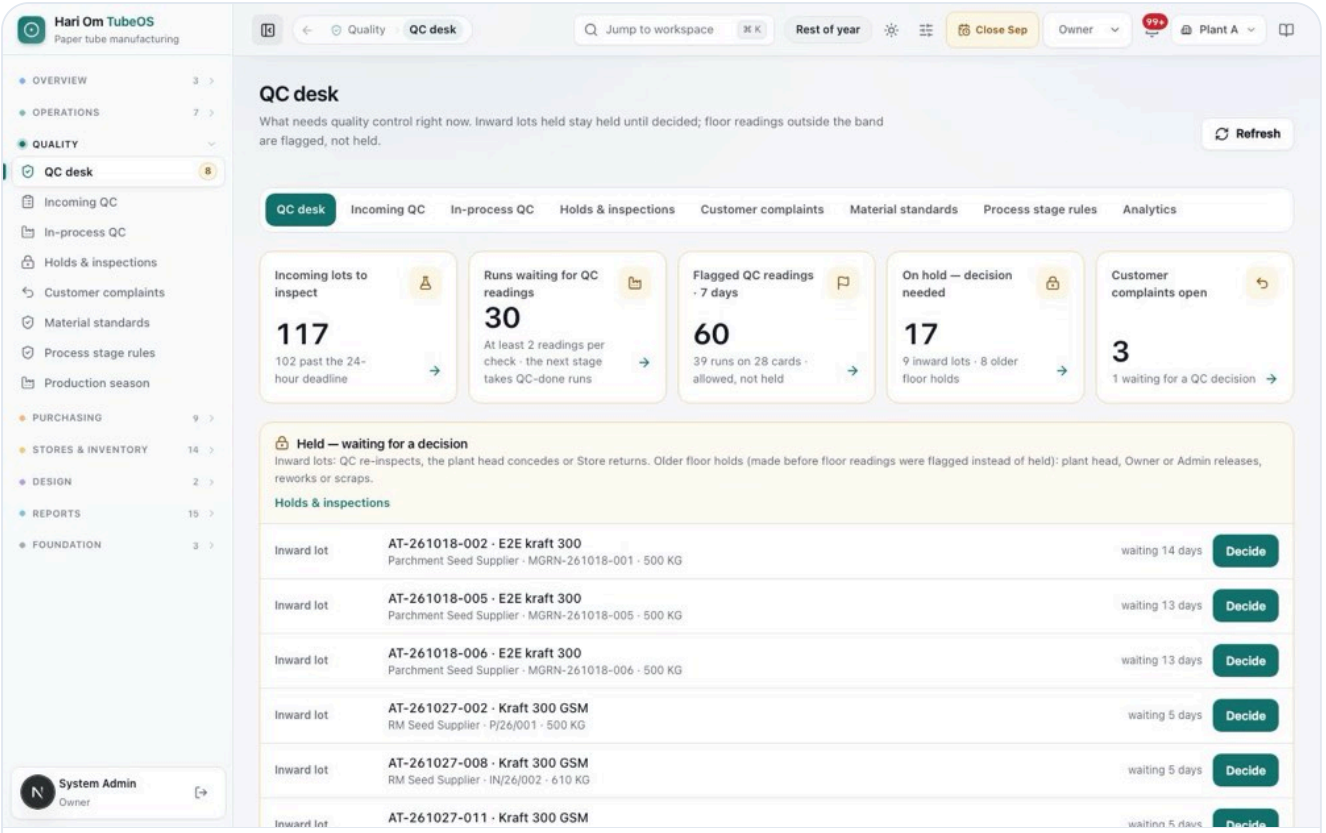



Figure: The QC desk. A tab row links all Quality pages; five tiles count incoming lots, runs waiting for readings, flagged readings, holds and open complaints; below, the held items each have a Decide button.

What you see:

1. **Tab row** (on every Quality page): **QC desk**, **Incoming QC**, **In-process QC**, **Holds & inspections**, **Customer complaints**, **Material standards**, **Process stage rules**, **Analytics**.
2. **Tiles**: **Incoming lots to inspect** (with how many are past the 24-hour deadline), **Runs waiting for QC readings** ("At least 2 readings per check · the next stage takes QC-done runs"), **Flagged QC readings · 7 days** ("allowed, not held"), **On hold — decision needed** (inward lots and older floor holds), **Customer complaints open**.
3. **Held — waiting for a decision**: inward lots (re-inspect, concession by the plant head, or return by Store) and job-card holds (holds placed on purpose, and older holds made before floor readings were flagged instead of held; released, reworked or scrapped by the plant head, Owner or Admin). Each row shows lot, material, supplier, GRN, qty, days waiting and **Decide**.
4. Further down: **Incoming lots** (oldest due first, **Inspect**), **Runs waiting for QC readings** (**Log QC**), **Latest flagged readings**, **Latest checks**, and links to standards and analytics.

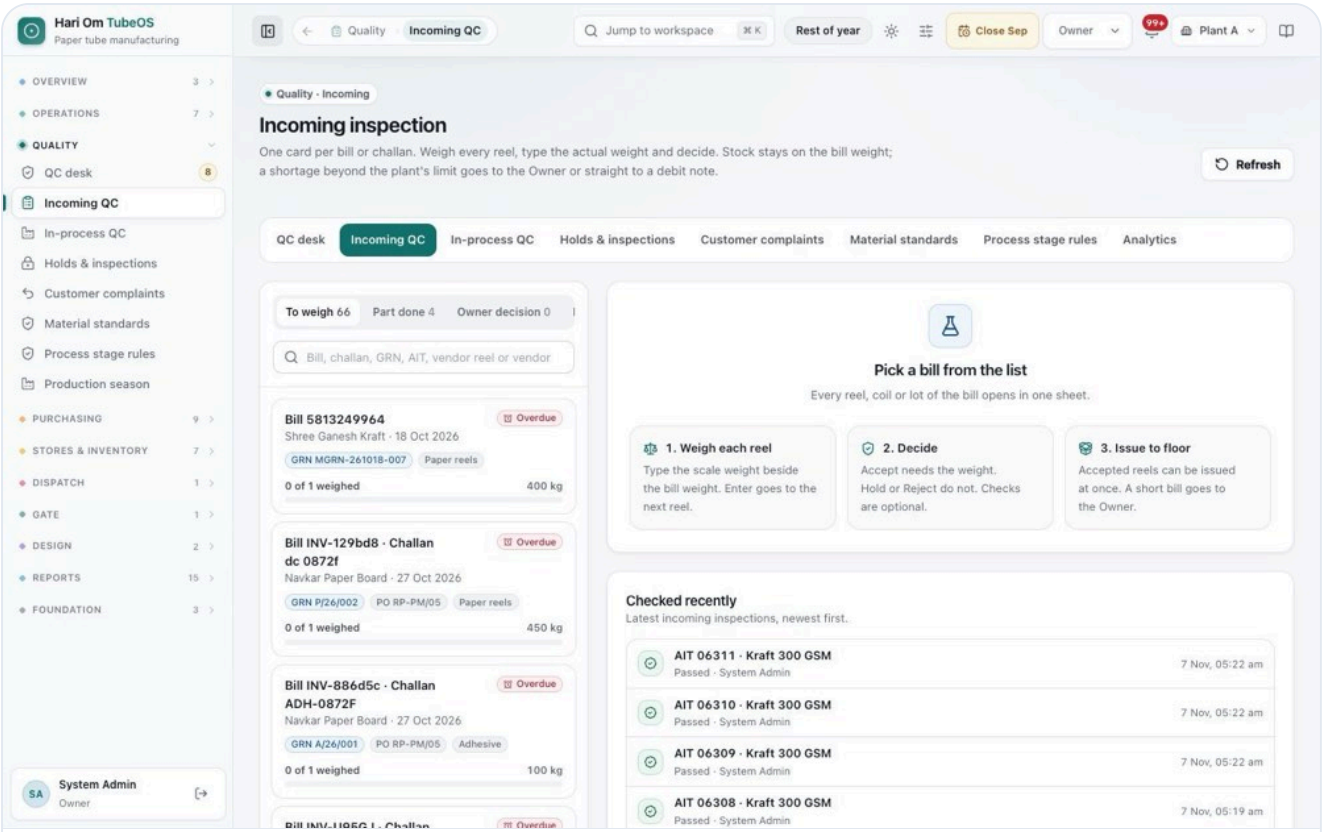



Figure: Incoming inspection: "One card per bill or challan. Weigh every reel, type the actual weight and decide. Stock stays on the bill weight; a shortage beyond the plant's limit goes to the Owner or straight to a debit note." Left: tabs To weigh 66, Part done 4, Owner decision 0 (Done today and Held further right), a search box and bill cards such as "Bill INV-129bd8 · Challan dc 0872f", Navkar Paper Board, 27 Oct 2026, GRN P/26/002, PO RP-PM/05, Paper reels, "0 of 1 weighed", 450 kg, with a red **Overdue** chip. Right: "Pick a bill from the list" with 1. Weigh each reel, 2. Decide, 3. Issue to floor; below, Checked recently.

What you see:

1. **Tabs**: **To weigh** (nothing weighed yet), **Part done** (some lots still to weigh), **Owner decision** (weight short: the Owner decides; red count), **Done today** (every lot weighed), **Held** (on hold or rejected).
2. **Search**: bill, challan, GRN, AIT no., vendor reel no. or vendor. A lot label can be scanned into it to find its bill.
3. **Bill cards**: bill and challan numbers ("Challan … · bill to follow" when the invoice is pending), vendor, date received, chips for GRN, PO and material, "N of M weighed" with a bar, the bill weight, and chips **Overdue** (past 24 h), **Opening stock** (go-live lots, no weighing needed) or the weight result (for example "−30 kg · Owner decides").
4. **Checked recently** and **Concessions** further down.

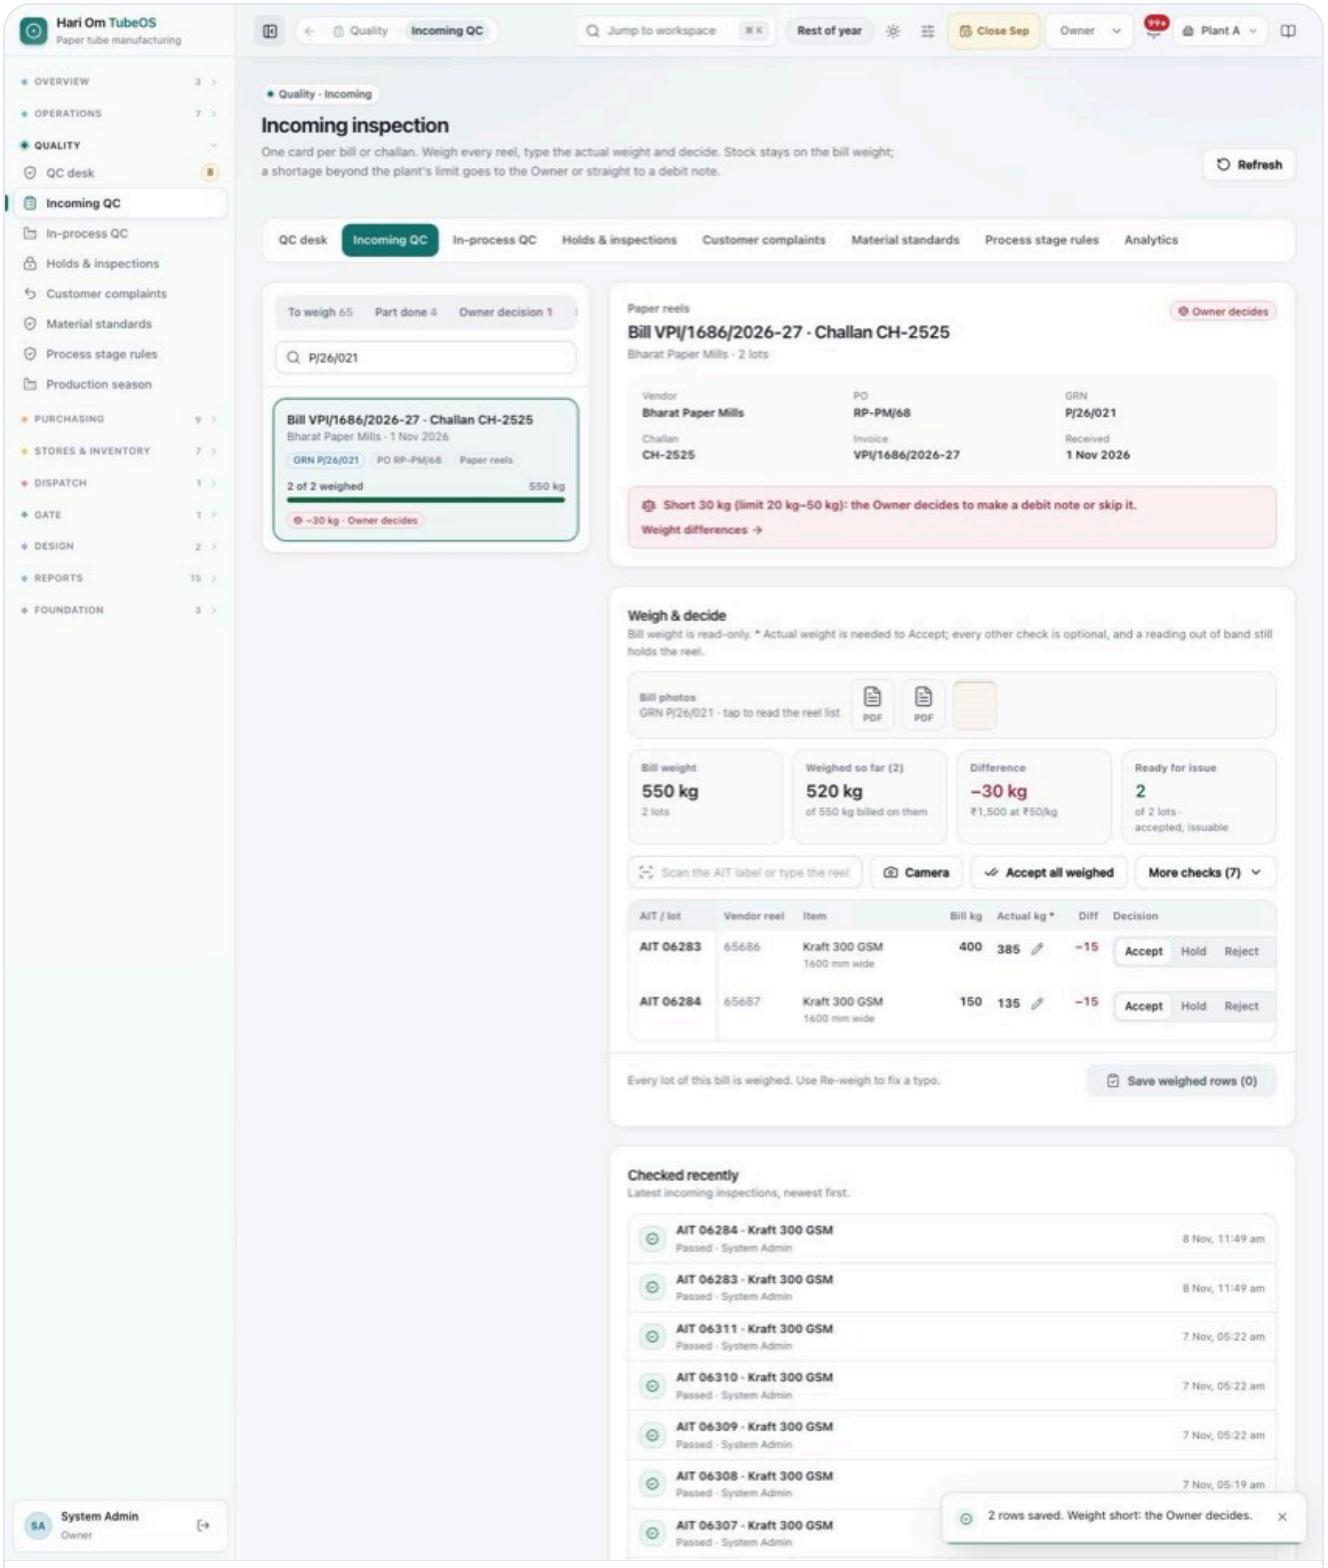



Figure: Bill VPI/1686/2026-27 · Challan CH-2525 open (Bharat Paper Mills, PO RP-PM/68, GRN P/26/021). A red banner: "Short 30 kg (limit 20 kg–50 kg): the Owner decides to make a debit note or skip it." with a link Weight differences. **Weigh & decide**: "Bill weight is read-only. * Actual weight is needed to Accept; every other check is optional, and a reading out of band still holds the reel." Bill photos (tap to read the reel list). Tiles: Bill weight 550 kg, Weighed so far (2) 520 kg, Difference –30 kg (₹1,500 at ₹50/kg), Ready for issue 2. Toolbar: scan box, Camera, Accept all weighed, More checks (7). Grid: AIT 06283, vendor reel 65686, Kraft 300 GSM, Bill 400, Actual 385 with a pencil (Re-weigh), Diff –15, Accept; AIT 06284, 150 / 135, –15. "Every lot of this bill is weighed. Use Re-weigh to fix a typo."

What you see:

1. **Bill header**: vendor, PO, GRN, challan, invoice and date received. **Invoice to follow** when the invoice is pending.
2. **Weight banner** (once the last lot is weighed or rejected): the band and who acts next, for example "Short 12 kg, within the 20 kg limit: recorded only", "the Owner decides…", "Case raised for 64 kg; the debit note drafts as soon as the invoice is attached to the GRN", or "Debit note DN-… (draft) for ₹…".
3. **Bill photos**: the bill and challan photos taken at the gate and at inward. Tap one to read the vendor's reel list beside the sheet.
4. **Tiles**: **Bill weight** (lots counted; rejected lots are left out), **Weighed so far**, **Difference** (with the rupee value at the bill rate), **Ready for issue**.
5. **Toolbar**: **Scan the AIT label or type the reel / lot no.** (jumps to that row; if the reel is on another bill it says so with **Open it**), **Camera**, **Accept all weighed** (accepts every weighed row with no out-of-band reading), **More checks (N)** (shows the optional template checks such as GSM and moisture).
6. **Reel grid**: **AIT / lot**, **Vendor reel**, **Item**, **Bill kg** (read-only), **Actual kg *** (type the scale weight; Enter goes to the next reel), Diff, Decision (**Accept**, **Hold**, **Reject**) and **Status** (Waiting, Issuable, Held, Rejected, Concession, Returned to supplier). A saved weight shows a pencil: **Re-weigh**.
7. **Save weighed rows (N)**: saves every changed row. Each row saves on its own: a red row was not saved and says why.

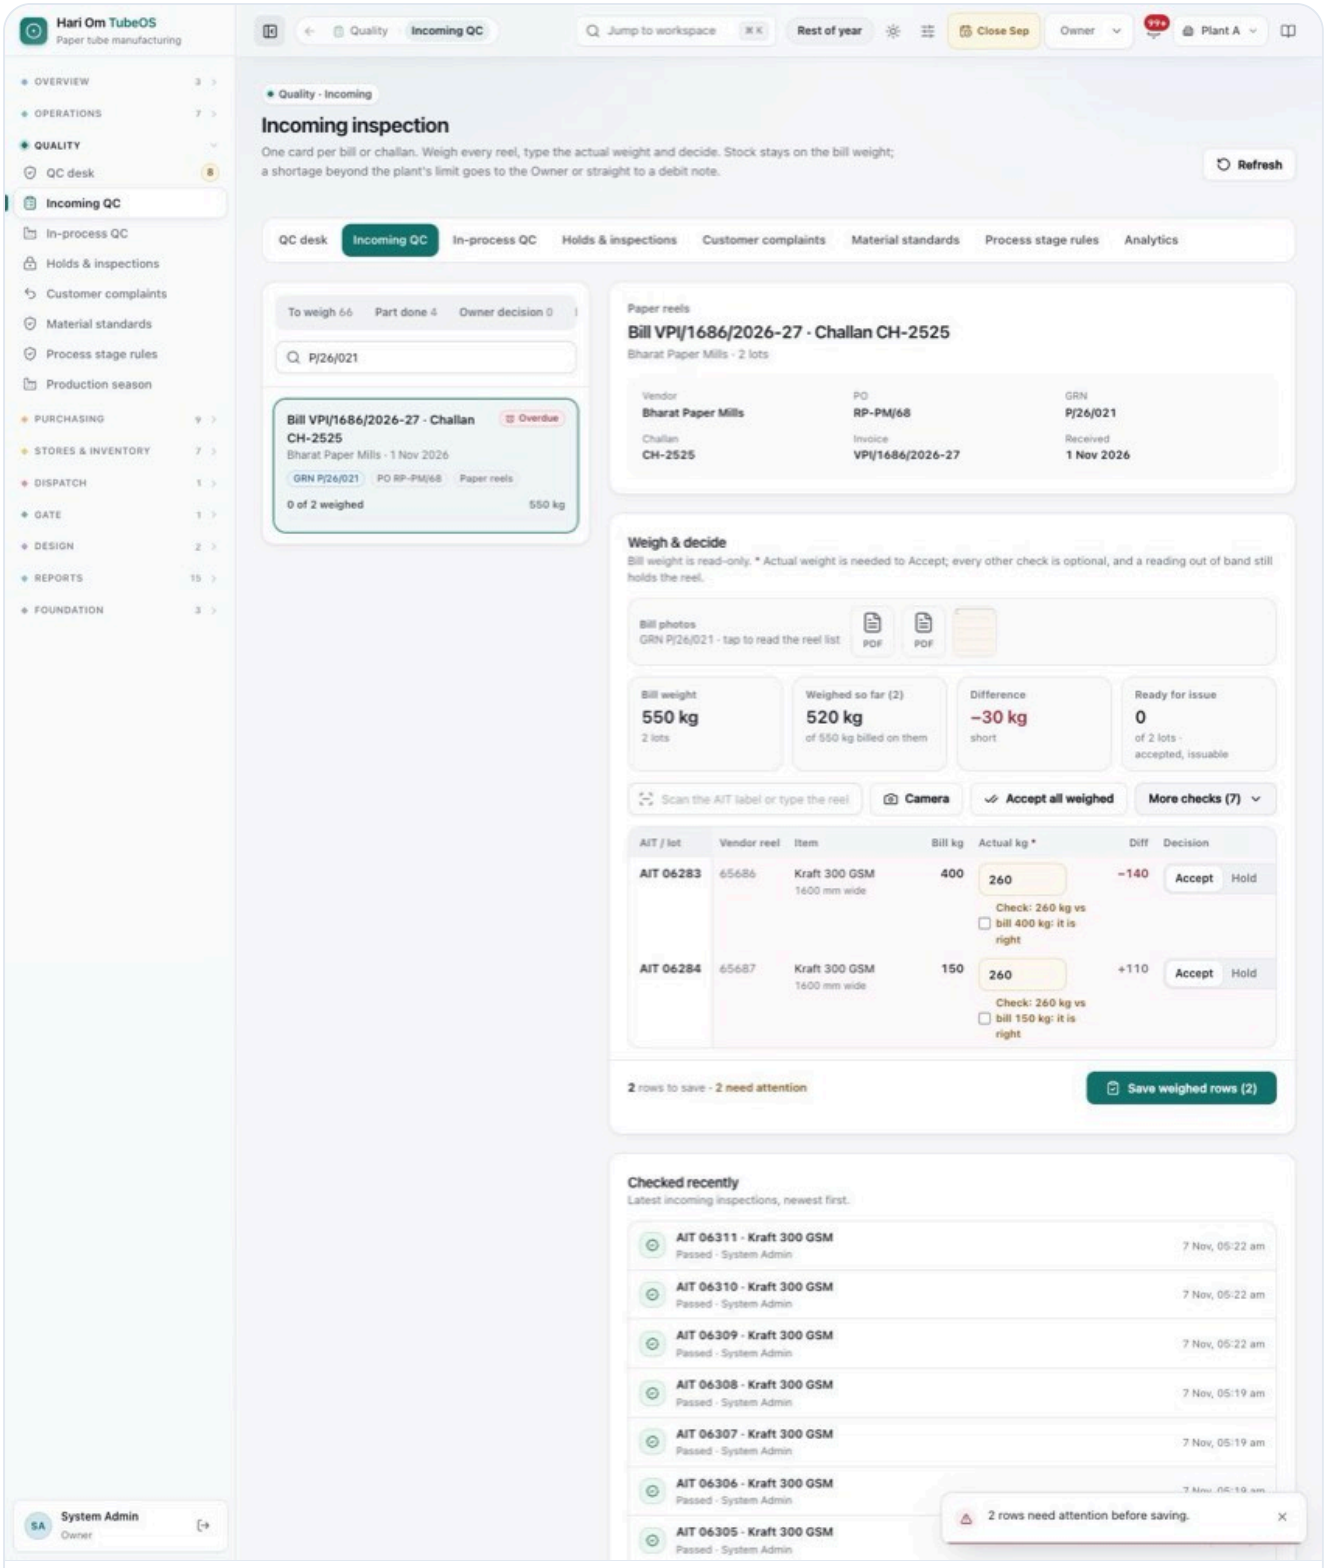



Figure: The typo guard. AIT 06283 has bill 400 kg and 260 typed, AIT 06284 bill 150 kg and 260 typed. Under each: "Check: 260 kg vs bill 400 kg: it is right" with a tick box. The footer says "2 rows to save · 2 need attention".

On a phone the grid becomes one card per reel: the bill weight, a large **Weigh and type** box, the difference, the decision buttons, **More checks (optional)** and **Next reel**.

The **Resolve a held or rejected lot** box (under the sheet) offers re-check in the sheet, concession ("Why it is still fit for use", list **Concession**: CN-MINOR, CN-URGENT, CN-CUST-OK, CN-NON-

CRITICAL, CN-SUPPLIER-CREDIT, CN-OTHER) or return ("Reason for the return", list **Incoming material rejected / returned**: RM-GSM, RM-MOISTURE, RM-DAMAGED, RM-WRONG-ITEM, RM-WEIGHT, RM-STRENGTH, RM-NO-DOCS, RM-OTHER). Hold, Reject and an out-of-band row need a reason from the list **Incoming QC out of band / hold / reject** (IQ-DAMAGED, IQ-GSM, IQ-MOISTURE, IQ-NO-DOCS, IQ-RECHECK-OK, IQ-SIZE, IQ-STRENGTH, IQ-WEIGHT, IQ-WRONG-ITEM, IQ-OTHER).

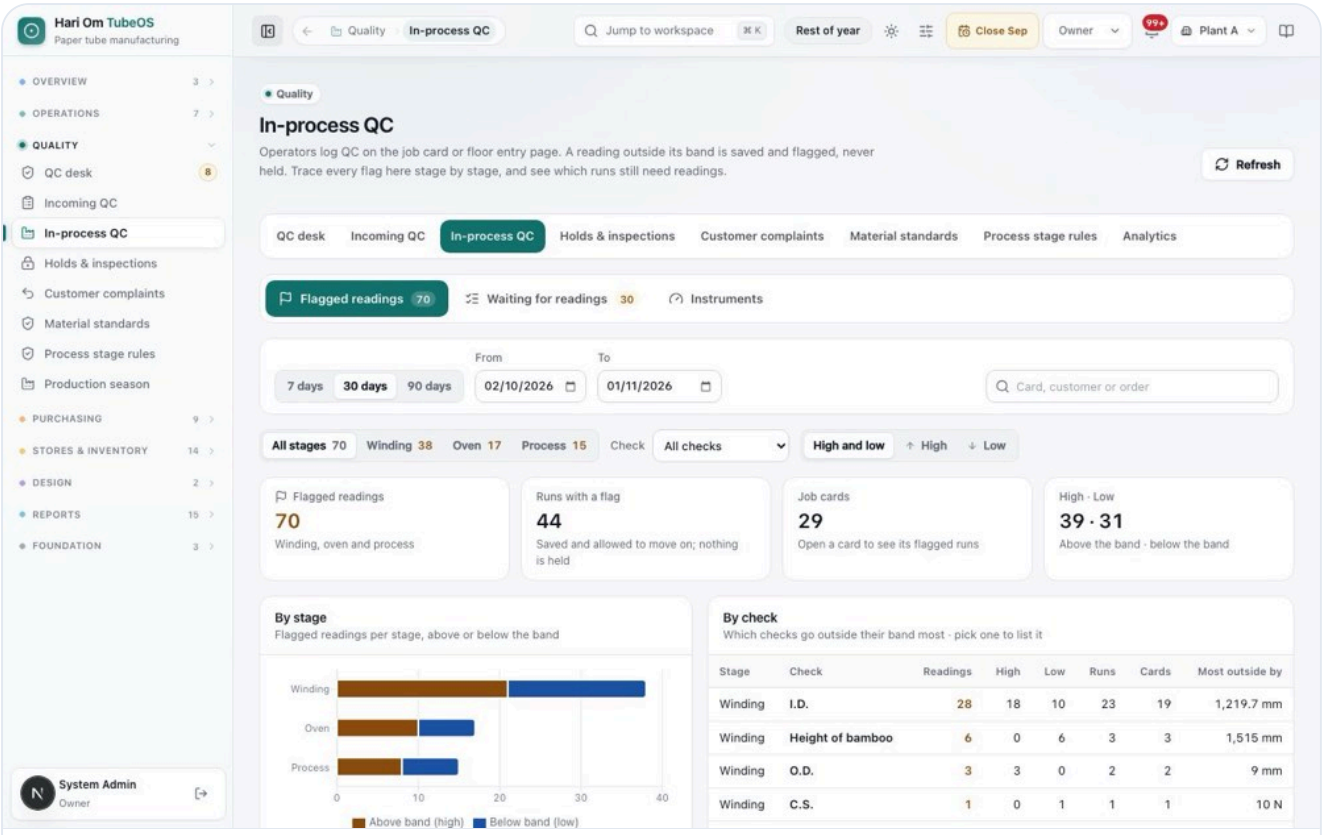



Figure: In-process QC, Flagged readings tab, last 30 days. 66 flagged readings on 40 runs of 27 cards, shown by stage and by check.

What you see:

1. **Tabs**: **Flagged readings**, **Waiting for readings** (count), **Instruments**.
2. **Filters**: **7 days / 30 days / 90 days**, **From** and **To**, search (card, customer or order), stage chips (**All stages**, **Winding**, **Oven**, **Process**), **Check**, and **High and low / High / Low**.
3. **Tiles**: **Flagged readings**, **Runs with a flag** ("Saved and allowed to move on; nothing is held"), **Job cards**, **High · Low**.
4. **By stage** chart (above band and below band) and **By check** table: Stage, Check, Readings, High, Low, Runs, Cards, **Most outside by**. Pick a check to list its readings.
5. **Waiting for readings** tab: Job card, Stage · run, Good, **Still needed (have / need)**, Waiting, and **Log QC** / **View**. Oldest first.
6. **Instruments** tab: the calibrated instrument register (gauges, balances, C.S. tester, moisture meters) with **Calibration due**, **Certificate** and **Status**. An expired instrument cannot back a check that needs one.

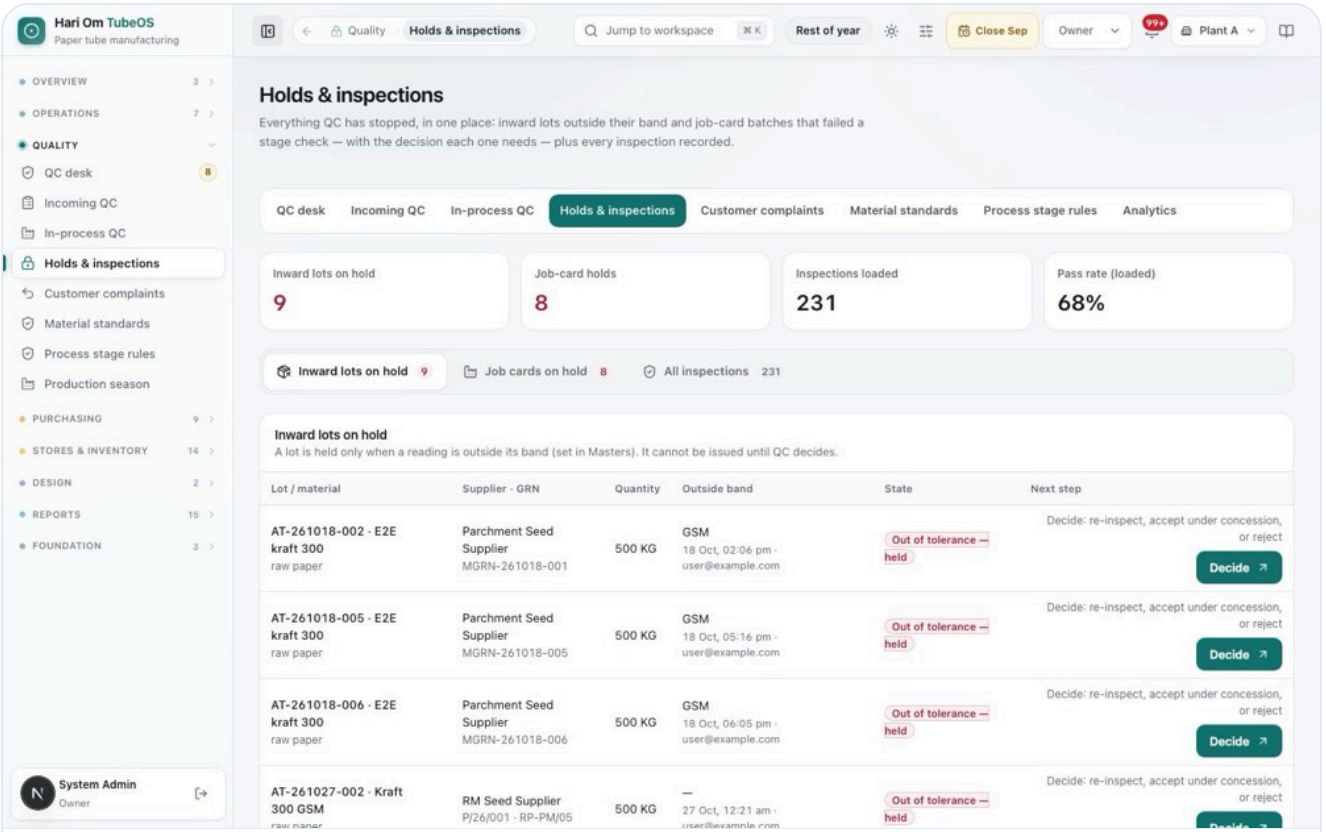



Figure: Holds & inspections. Tiles for inward lots on hold, job-card holds, inspections loaded and pass rate; the Inward lots on hold table with a Decide button per lot.

What you see:

1. **Tiles**: **Inward lots on hold**, **Job-card holds**, **Inspections loaded**, **Pass rate (loaded)**.
2. **Tabs**: **Inward lots on hold**, **Job cards on hold**, **All inspections**.
3. **Inward lots on hold** table: Lot / material, Supplier · GRN, Quantity, **Outside band** (which check, when, by whom), **State** ("Out of tolerance — held" or "Rejected"), **Next step** and **Decide** (opens Incoming QC on that lot).
4. **Job cards on hold**: each hold with its reason label and **Decide…**. The release form has **Why it can be released** (list **QC hold release**: QR-RETEST-OK Retest passed, QR-REWORKED Reworked and checked, QR-SORTED Sorted, bad pieces removed, QR-CUST-OK Customer accepted as is, QR-MGMT-OK Plant head approved use, QR-HOLD-ERROR Hold placed by mistake, QR-OTHER), **Decision** (**Release as is (use it)**, **Reworked, now OK**, **Sorted / segregated, good part released**, **Part scrapped, rest released**), **Qty affected** (optional) and **Record decision & release**. **Put a job card on hold**: choose the card and pick the reason from **QC hold placed** (QH-SUSPECT Suspected quality problem, QH-CUST-COMPLAINT, QH-MOISTURE, QH-SIZE, QH-STRENGTH, QH-LABEL, QH-RETEST, QH-OTHER), then **Hold**.

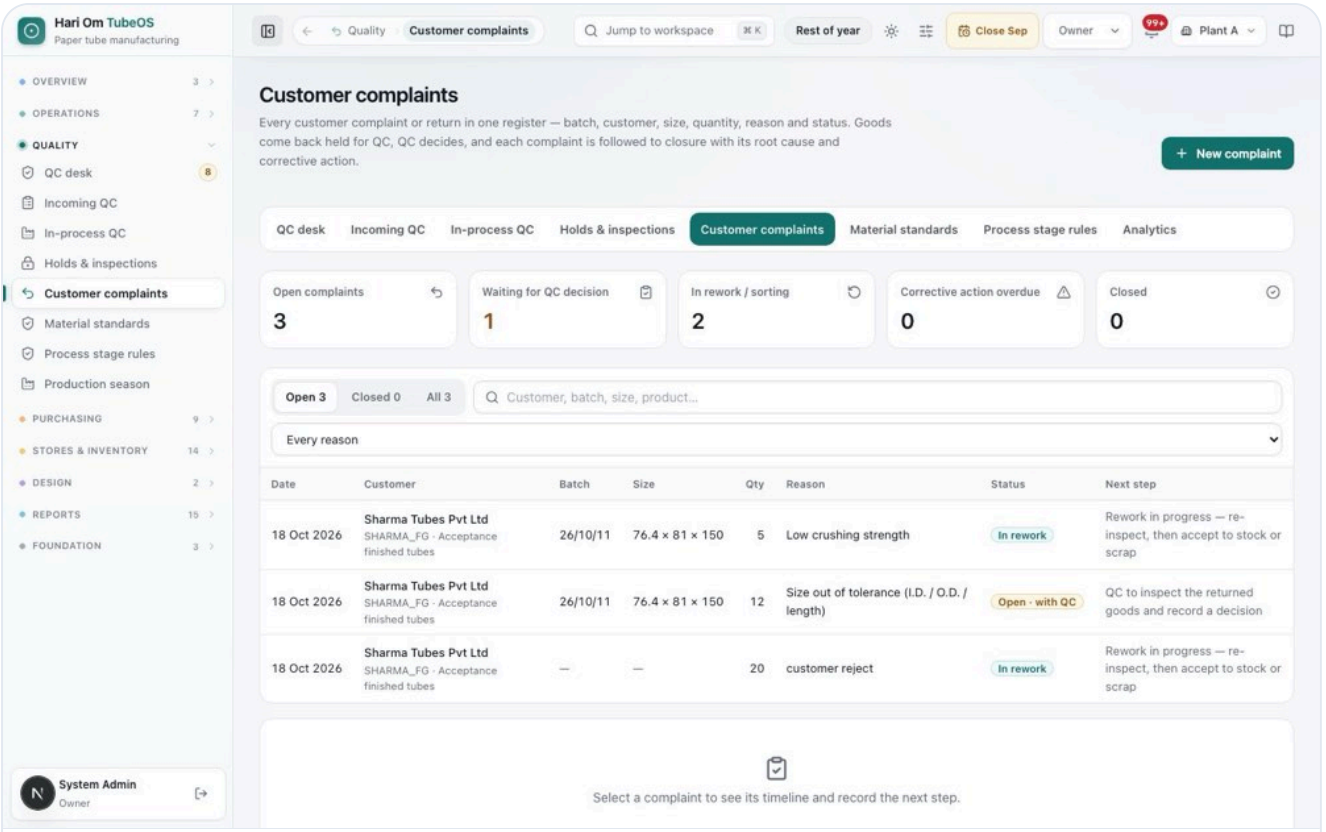



Figure: Customer complaints. Tiles for open, waiting for QC, in rework, overdue and closed; a register table with date, customer, batch, size, qty, reason, status and next step.

What you see:

1. **New complaint** button.
2. **Tiles**: **Open complaints**, **Waiting for QC decision**, **In rework / sorting**, **Corrective action overdue**, **Closed**.
3. **Open / Closed / All**, search ("Customer, batch, size, product...") and **Every reason** (the codes of the list **Customer complaints**).
4. **Table**: Date, Customer (with finished good), Batch (job card), Size, Qty, Reason, **Status** (**Open · with QC**, **On hold**, **Blocked**, **In rework**, **Sorting**, **Closed · scrapped**, **Closed · accepted back**), **Next step**. "Action overdue" shows in red when the corrective action date has passed.
5. Selecting a row opens its **Timeline** and **Record the next decision**.

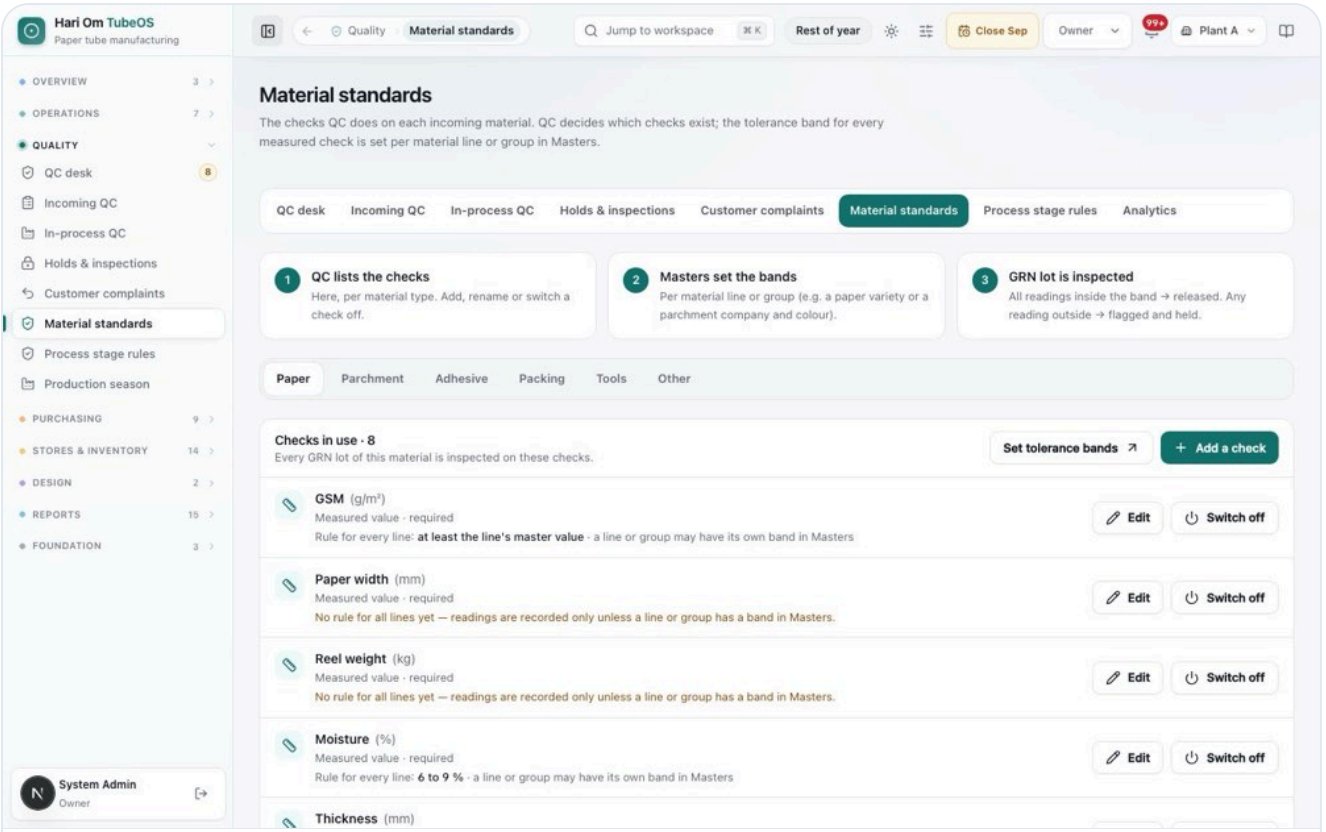



Figure: Material standards, Paper tab. Three steps explain how inward QC works; below, the 8 checks in use, each with its rule and Edit and Switch off buttons.

What you see:

1. **How inward QC works**: **1 QC lists the checks**, **2 Masters set the bands** (per material line or group, for example a paper variety or a parchment company and colour), **3 GRN lot is inspected** (all inside → released; any outside → flagged and held).
2. **Material tabs**: **Paper**, **Parchment**, **Adhesive**, **Packing**, **Tools**, **Other**.
3. **Checks in use · N** with **Set tolerance bands** (opens Masters) and **Add a check**.
4. Each check: name and unit (GSM (g/m²), Paper width (mm), Reel weight (kg), Moisture (%), Thickness (mm)…), kind (**Measured value**, **Pass / fail**, **Note**), required or not, and the rule for every line (for example "at least the line's master value", "6 to 9 %", or "No rule for all lines yet — readings are recorded only unless a line or group has a band in Masters"). Buttons **Edit** and **Switch off**.
5. Below: switched-off checks (**Add check** to bring one back) and **Change history**.

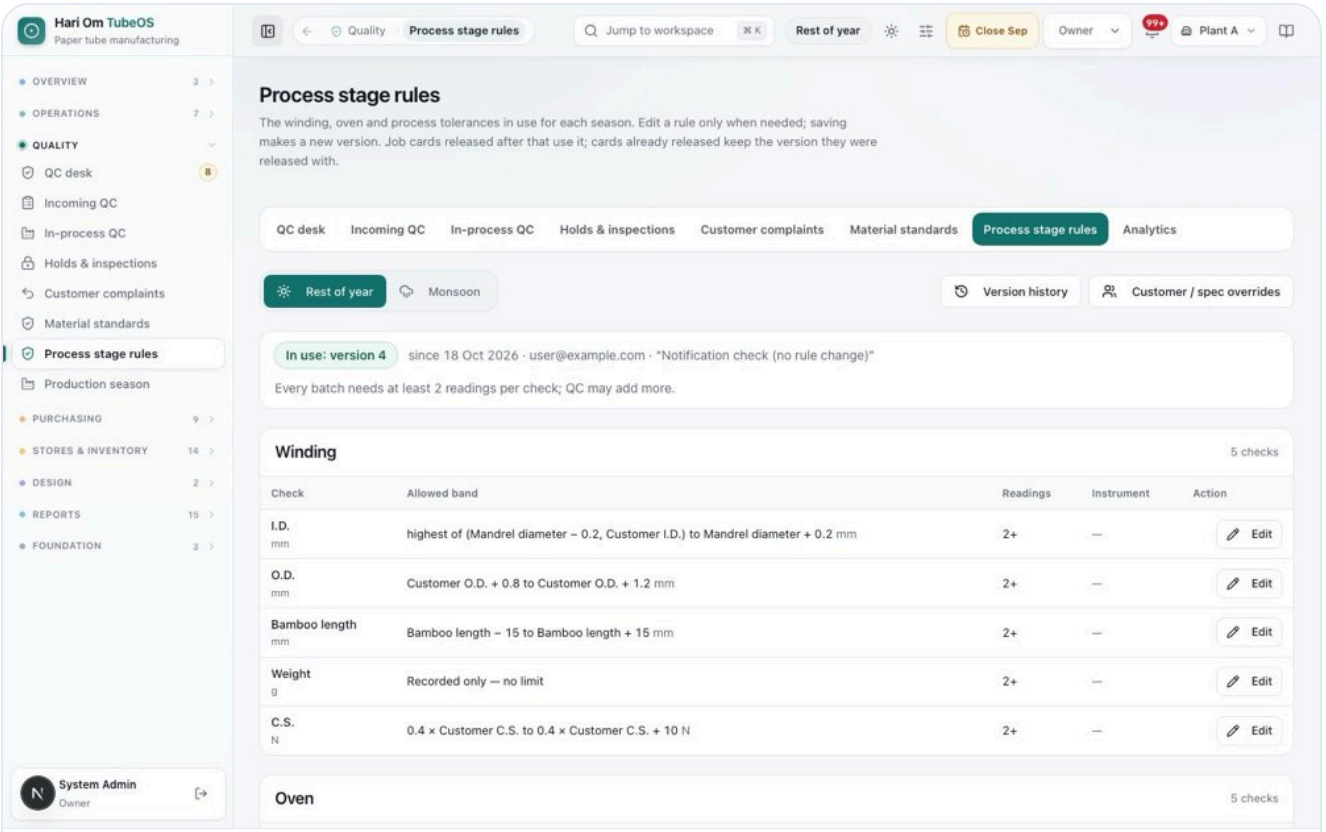



Figure: Process stage rules for Rest of year, version 4 in use since 18 Oct 2026. The Winding table shows each check, its allowed band as a formula, readings 2+, instrument and Edit.

What you see:

1. **Season switch**: **Rest of year** / **Monsoon**. **Version history** and **Customer / spec overrides**.
2. **In use: version N** with date, who, and the change reason; "Every batch needs at least 2 readings per check; QC may add more."
3. **One table per stage** (Winding, Oven, Process): Check (I.D., O.D., Bamboo length, Weight, C.S., …), **Allowed band** (for example "Customer O.D. + 0.8 to Customer O.D. + 1.2 mm", "Bamboo length − 15 to Bamboo length + 15 mm", "Recorded only — no limit"), **Readings** (2+), **Instrument**, **Edit**.

## Step by step

### How to weigh and decide a bill

Roles: QC, Inward QC, Owner, Admin (Store and Plant Manager can open the page and see the sheet read-only).

1. Open **Incoming QC**. Pick the bill under **To weigh** (oldest due first; mind the 24 h deadline), or scan a reel label into the search.

2. Read the bill photo if you need the vendor's reel list (tap a thumbnail under **Bill photos**).
3. Put the first reel on the scale. Type the scale weight in **Actual kg** and press Enter: the cursor goes to the next reel. Or scan the reel's AIT label in the scan box to jump to its row.
4. If a weight is more than 15 % away from the bill weight, the row asks "Check: 11,750 kg vs bill 1,182 kg". Correct the typo, or tick "it is right" if the scale really says so.
5. Leave **Accept** for good reels (it is the default once the weight is typed), or click **Accept all weighed**. Choose **Hold** or **Reject** (with a reason) for a reel you do not want issued; these need no weight.
6. Optional: open **More checks** and type readings such as GSM or moisture. Leave them empty if you do not measure them.
7. Click **Save weighed rows (N)**. "2 rows saved." Accepted reels with no out-of-band reading are issuable at once.
8. When the last lot is weighed or rejected, the message and the banner say what happens next, for example "Weight short: the Owner decides." Nothing more is needed from QC.

## How to fix a weight typo (Re-weigh)

1. Click the pencil beside the saved weight (**Re-weigh**).
2. Type the **Corrected weight**, pick **Why it is corrected** (list **Weight correction**: WC-TYPO Typing mistake, WC-REWEIGHED Weighed again on the scale, WC-SCALE Scale was not zeroed, WC-WRONG-LOT Weight entered on the wrong reel or lot, WC-OTHER with a note) and click **Save correction**.
3. "AIT 06283 re-weighed: 385 kg. The weight check of the bill is updated." Stock stays on the bill weight.

## How to release a lot that was held before go-live

1. Lots received before 7 Nov 2026 that are still on QC hold need their actual weight before they can be released.
2. Open the bill under **Held**, type the actual weight of each lot, choose **Accept** and save.

## How to resolve a held lot

1. Open the lot (**Decide** on the QC desk or Holds & inspections).
2. **Re-check**: enter new readings in the sheet.
3. **Concession**: plant head, Owner or Admin (never the inspector) picks **Why it is still fit for use** from the **Concession** list (for example CN-MINOR Minor deviation, safe to use) and may add a note. The FAIL stays on record; the released qty can be issued. Critical checks cannot be conceded.
4. **Return to supplier**: Store, Plant Manager, Owner or Admin picks **Reason for the return** (for example RM-GSM GSM out of range, note "GSM 150 against 291–309") and adds the

optional return challan or vehicle no. The lot is written out of stock and the inward line marked rejected; with an invoice attached, a quality claim opens for the debit note.

## How to follow up flagged floor readings

Roles: QC, In-process QC, Plant Manager, Owner, Admin.

1. Open **In-process QC** > **Flagged readings**. Pick the period and stage.
2. Use **By check** to see which check goes out most and by how much.
3. Open a card to see its flagged runs and the boxes marked **QC flagged**. Talk to the line; no action is needed in the system for the run, its boxes or their dispatch to continue.
4. If you decide the goods must stop, place a hold on purpose (next task).

## How to clear runs waiting for readings

1. **In-process QC** > **Waiting for readings** (or the QC desk tile).
2. Click **Log QC** on a run. Type at least 2 readings per required check and save. See "Log output and QC entry".

## How to put a job card on hold and release it

1. Raise: QC, In-process QC, Plant Manager, Owner or Admin. **Holds & inspections** > **Job cards on hold** > **Put a job card on hold**: choose the card, pick the reason code from **QC hold placed**, add a note if useful, **Hold**. Switch to the card's plant first if asked.
2. The card shows **On hold**; the next stage cannot take it, new boxes wait to go into stock, and no challan can be sealed ("N hold(s) placed on this card stop all movement. Release them in Quality before sealing.").
3. Release: Plant Manager (plant head), Owner or Admin only. Click **Decide...**, pick **Why it can be released** from **QC hold release**, choose the **Decision**, type **Qty affected** if part was scrapped, and click **Record decision & release**.

## How to record and close a customer complaint

1. Record: Owner, Admin, Plant Manager, QC, Store, Sales or Dispatch. Click **New complaint**. Choose the customer (or "Not in customer master..."), the batch on the goods (job card / batch number, or the box code on the label), the finished good, the quantity and the **Reason** from the list **Customer complaints** (CC-DAMAGE Crushed / damaged tubes, CC-SIZE Size out of tolerance (I.D. / O.D. / length), CC-STRENGTH Low crushing strength, CC-MOISTURE Moisture / soft tubes, CC-QTY Short or wrong quantity, CC-FINISH Finish, colour or print issue, CC-PACKING Packing issue, CC-OTHER). Add what the customer said and, under **More details**, the DC no., invoice, location, date and documents.
2. Save. "Complaint recorded; goods held for QC. QC, the plant head and Sales are notified." If the DC number is not found, it is still logged but marked unverified; the qty cannot exceed

what can still come back on that dispatch.

3. Decide: Owner, Admin, Plant Manager, QC or Store. Select the complaint, **Record the next decision**: **Rework**, **Sort / segregate**, **Keep on hold**, **Block**, **Accept to stock**, or **Scrap**. Fill **What QC found and why**, **Root-cause department**, **Action owner**, **Corrective action**, **Corrective action due**, and rework or scrap cost in ₹.
4. Rework and sort keep the complaint open until re-inspection. **Accept to stock** and **Scrap** close it. Accepting held goods needs an Owner or Admin who did not record the complaint.

### How to change the checks for a material

Roles: QC, Inward QC, Owner, Admin.

1. **Material standards**, pick the material tab.
2. **Add a check**, **Edit** (name, unit, kind: Measured value, Pass / fail, Note) or **Switch off**. A note is a written observation and never holds a lot.
3. To set or change a band, click **Set tolerance bands** (Owner and Admin, in Masters › Inward QC tolerances or the band button on a master row). The most specific band wins: item, then group (for example parchment company and colour), then type.

### How to change a stage rule

Roles: QC, Owner, Admin.

1. **Process stage rules**, pick the season, click **Edit** on the check.
2. Choose **Tolerance band** (minimum and maximum built from terms such as Customer O.D., Mandrel diameter, Bamboo length, a fixed value) or **Record only**; set **Calibrated instrument** and **Readings per batch** (at least 2). "Reads as:" shows the rule in words.
3. Write the **Change reason** (required) and **Save as new version**. New releases use it; released cards keep their version.
4. For one customer or spec: **Customer / spec overrides**, pick the target and season (**Both seasons**, **Rest of year**, **Monsoon**), tick the rules, edit, **Save override draft**. A possibly wider rule needs an Owner or Admin to publish it.

## Rules the system enforces

- **Inward: Accept needs the actual weight.** No path can release a purchase lot for issue before QC types its actual weight: the bill sheet, the scan, the QC desk, closing holds, concession release and the GRN refresh after an invoice is attached. Opening-stock lots and customer returns are exempt. Hold and Reject never need a weight. ("Weigh it first: Accept needs the actual weight".) (Blocks.)

- **Inward checks are optional.** Only the actual weight is needed, and only for Accept. A reading that is entered and out of band still holds the lot; a numeric check with no band is recorded only. A held lot cannot be issued. (Blocks issue.)
- **Stock stays on the bill weight.** The actual weight never changes the stock, the ledger, the labels or month close. It only feeds the bill's weight check (see Invoice differences). (Automatic.)
- **Typo guard**: a weight more than 15 % from the bill weight must be confirmed. **Re-weigh** needs a **Weight correction** reason. (Blocks until confirmed.)
- **Each row saves on its own**; a row that fails says why and the others are kept. Saving twice does not save twice. (Automatic.)
- **Inward deadline**: 24 hours from inward; late lots show **Overdue**. (Warns.)
- **Concession** only by plant head, Owner or Admin, never the inspector; not for critical checks; the FAIL stays on record. (Blocks others.)
- **Job card QC: out of band is flagged, never held or rejected** (in-process and final QC, old-form cards too). The inspection keeps FAIL and a flag; FAIL with the minimum readings counts as QC done. No automatic hold is ever made on a job card, and dispatch no longer needs a passed final QC. (Flag only.)
- **Reason codes everywhere.** Holds, releases, concessions, returns and complaints each need an active code of the right list and plant; OTHER codes need a note of at least 5 characters; free text alone is refused. Records keep the code, its label at that time and the note. (Blocks.)
- **2 readings per required check** for QC done, the next stage and every stage close; moisture optional. (Blocks.)
- **Job-card hold** (placed on purpose) stops the next stage, box postings and dispatch ("N hold(s) placed on this card stop all movement. Release them in Quality before sealing."). Release only by Plant Manager, Owner or Admin, with a **QC hold release** code. (Blocks.)
- **Frozen versions**: inward bands and stage rules are versioned with who, when and why; lots and job cards keep the version they started with. (Automatic.)
- **Season**: the Owner alone switches the plant season (Quality > Production season); a card freezes its season's rules at release. (Owner only.)
- **Complaints**: returned goods arrive under QC hold; nothing is sellable until QC decides. (Blocks.)
- **Instruments**: a check that needs an instrument needs a valid instrument ID; an expired one cannot back it. (Blocks.)

**Roles in short. QC** works all pages and edits standards and stage rules. **Inward QC** inspects GRN lots and edits material checks. **In-process QC** logs floor QC, sees flags and waiting runs, and can raise job-card holds but not release them. **Plant Manager** (plant head) releases holds and grants concessions. **Store** returns lots to suppliers and records complaints. **Sales** and **Dispatch** see holds and record complaints.

## Sample

Bharat Paper Mills delivers 2 reels of Kraft 300 GSM on GRN P/26/021 (bill VPI/1686/2026-27, PO RP-PM/68, ₹50/kg). QC weighs them:

| Reel | Bill kg | Actual kg | Diff | Decision |
|---|---|---|---|---|
| AIT 06283 | 400 | 385 | –15 | Accept |
| AIT 06284 | 150 | 135 | –15 | Accept |

Both reels are issuable at once. The bill is 30 kg short (₹1,500): between 20 and 50 kg, so the Owner gets "Weight short 30 kg · Bill VPI/1686/2026-27" with **Make debit note** and **Skip...**. The stock stays 550 kg.

Another delivery, 6 reels on P/26/014, where QC also measures GSM (band at least 291) and moisture (6–9 %):

| Reel | Actual kg | GSM | Moisture | Result |
|---|---|---|---|---|
| R1 | 1,182 | 302 | 7.1 | Accepted, issuable |
| R2 | 1,204 | 298 | 6.8 | Accepted, issuable |
| R3 | 1,190 | 285 | 7.4 | Held (GSM out of band, reason IQ-GSM) |

R3 is on hold. The plant head grants a concession with CN-NON-CRITICAL, note "use on outer plies"; the FAIL stays on record. Later, card 26/10/315 has a Process I.D. reading of 76.9 mm against 76.2–76.5: flagged, not held; it appears in In-process QC under I.D., High, and the two boxes holding that run's pcs show **QC flagged**. They ship on the next challan. A week later the customer reports soft tubes in box B2610315-003; Sales records a complaint with CC-MOISTURE.

## Common questions

**? Why can't Store issue this reel?**

Either QC has not weighed and accepted it yet, or it is held (Hold, Reject, or a reading out of band). QC must weigh and accept it, re-check it, the plant head concede it, or Store return it.

**Do I have to enter GSM, moisture and the other checks?**

No. Every check is optional now. Only the actual weight is needed, and only to Accept. If you do enter a reading and it is out of band, the reel is held.

**I typed 11750 instead of 1175 and saved.**

Click the pencil (**Re-weigh**), type 1175, pick WC-TYPO and save. The bill's weight check is worked out again.

**The scale shows 30 kg less than the bill. Does stock go down?**

No. Stock, labels and month close stay on the bill weight. The difference goes to the bill's weight check, and from there to the Owner or a debit note.

**A reel received last week is still on hold. Why can't I release it?**

Lots received before go-live of weighing (7 Nov 2026) must be weighed too. Type its actual weight and accept it.

**A floor reading is out of band. Must I hold the card?**

No. It is flagged, not held, and the boxes still ship. Place a hold only if you decide the material must stop.

**Why did no hold appear when final QC failed?**

Job card QC only flags. Holds on job cards are placed by people, on purpose. Incoming (GRN) lots are still held automatically when out of band.

**The hold reason I need is not in the list.**

Pick QH-OTHER and write a note, and ask a Plant Manager, Admin or the Owner to add the code in Masters › Reason codes.

**Who can release a job-card hold?**

Only the plant head (Plant Manager), Owner or Admin.

**? Where do I change the GSM band for one paper?**

In Masters (the band button on the paper row, or Masters › Inward QC tolerances). QC only lists the checks.

**? I edited a stage rule. Why do old cards still use the old band?**

Cards freeze their rules at release. Only cards released after your save use the new version.

**? What does "Recorded only — no limit" mean?**

The reading is kept but never judged in or out of band.

**? A complaint's dispatch number is not found.**

The complaint is still logged, marked unverified. Check the DC number with Dispatch.

**? Where are quality trends?**

**Analytics** (Reports › Quality analytics): pass rates by stage and material, flagged readings, holds and complaints.

## Related chapters

- Log output and QC entry
- Job cards
- Goods inward, GRN register and labels
- Masters
- Dispatch
- Reports

# Month-end close

**What it is:** The monthly check of material use (what the spec allows against what the store issued and what the month-end count says was used), the Owner's close that freezes the month, the usage limits behind it, and the card time reconciliation report.
**Who uses it:** Owner (closes and re-opens), Plant Manager (plant head: reads, writes notes), Admin (reads, edits usage limits). Planners also read the time reconciliation.
**Where:** Sidebar > Operations > Month-end close (/production/reconciliation), with **Usage limits** (/production/reconciliation/limits). Card time reconciliation: /production/job-cards/time-reconciliation (no sidebar link; open it by its address).

## At a glance

- Month-end close is kept **per plant**. Pick one plant in the top bar.
- For each material the page shows three numbers in the item's own unit: **Spec allows** (material in the good tubes made, plus the normal wastage), **Issued to floor** (what the store gave the floor), and **Used per count** (opening + received – sent back – closing, from the approved month-end count).
- Nothing comes back from the floor: everything issued is treated as used.
- The **Close checklist** has five steps. When all are done, **only the Owner** can close the month. Closing freezes the figures and **refuses floor and store entries dated in that month** until the Owner re-opens it.
- **Usage limits** decide when an item is "outside the limit" and needs a note. They are not QC bands.

## The flow

### Closing a month

1. **Month ends**
2. **Count the store** — Store/any role
3. **Approve the count** — Owner
4. **Store book adds up**
5. **Notes on items outside the limit** — Owner/Plant head
6. **Close the month** — Owner
   figures frozen, entries locked

If it goes wrong after **Close the month**

1. **Re-open with a reason code** — Owner
2. **Entries allowed again**
3. **Close the month** — Owner

Earlier months must be closed first. Closing March is the **financial year close**; 1 April opens from the 31 March closing.

### Where the spec comes from

1. **Run packed into box** — Operator
2. **Box posted**
   its packing theory
3. **Process closes on a card** — Plant Manager
   paper, adhesive, parchment theory
4. **Spec allows on Month-end close**
5. **Compared with Used per count**

On batch-entry cards the packing theory comes from the boxes: each box packed uses 1 box plus the spec's plastic and fadda per box, posted as the box is packed, in the box's month. Paper,

adhesive and parchment theory is posted when Process closes.

## Screen tour

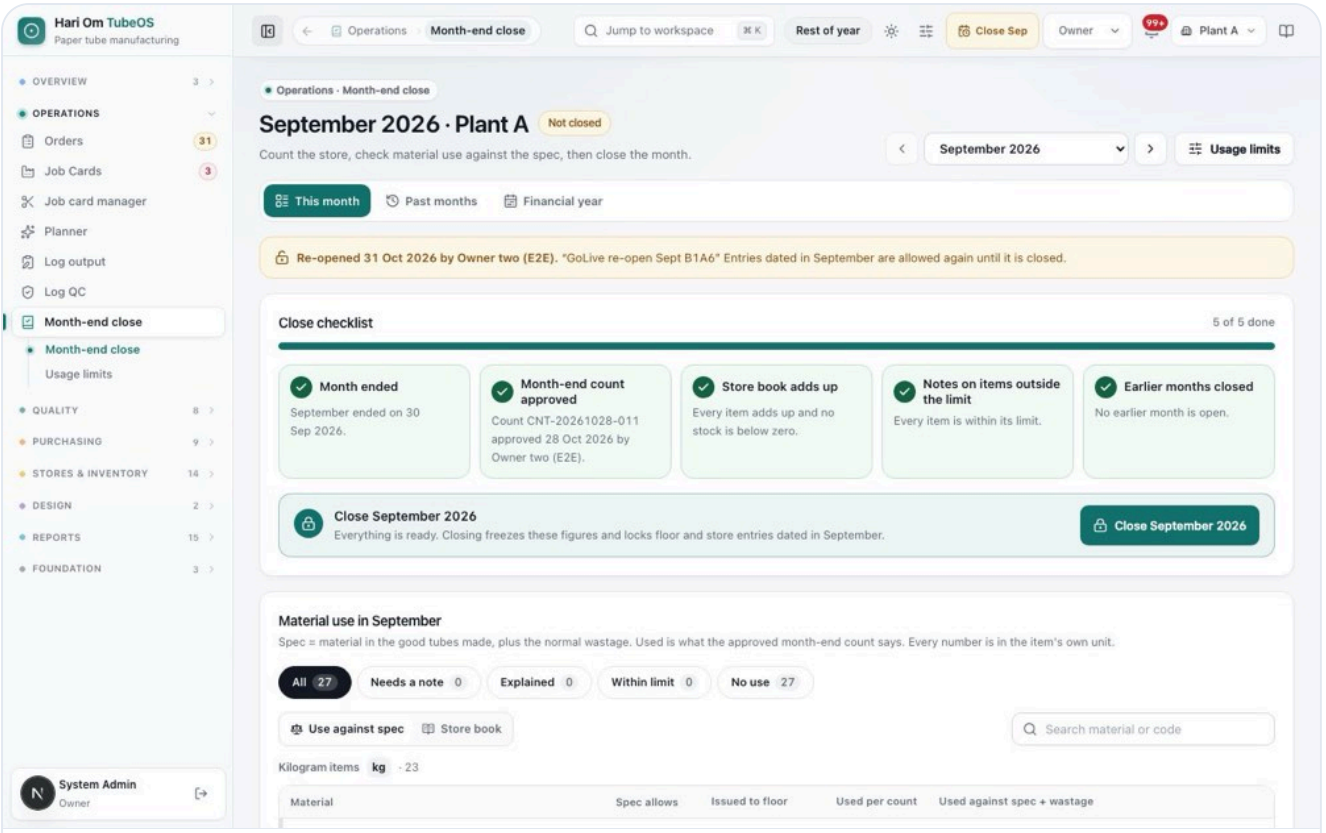



Figure: Month-end close for September 2026, Plant A, "Not closed". A banner says the month was re-opened; the close checklist shows 5 of 5 done and a "Close September 2026" button; below starts "Material use in September".

What you see:

1. **Title** " · " with a state chip: **Not closed**, **Running · so far** (the current month) or **Closed**. Subtitle: "Count the store, check material use against the spec, then close the month."
2. **Month picker** with previous / next arrows, and the **Usage limits** button.
3. **Tabs**: **This month**, **Past months**, **Financial year**.
4. **Re-opened banner** (when it applies): who re-opened it, when, the reason, and "Entries dated in September are allowed again until it is closed."
5. **Close checklist** with a progress bar ("5 of 5 done") and five step cards: - **Month ended**: "September ended on 30 Sep 2026." (A running month: "It can be closed from 1 Nov.") - **Month-end count approved**: the count number, who approved it and when; or what is still needed ("Counted and submitted. Waiting for the Owner to approve it.", "Counting has started. Submit it when every rack is done.") with a link to the count. - **Store book adds up**: "Every item adds up and no stock is below zero", or which items do not add up, with **Open**

**the stock book**. - **Notes on items outside the limit**: "Every item is within its limit", or "3 items are outside the limit and need a short note" with **Go to the 3 items**. Before the count: "Waiting for the count. Notes open once the month-end count is approved." - **Earlier months closed**: "No earlier month is open", or "August 2026 is still open. Close it first."

6. **Close bar**: "Close September 2026 · Everything is ready. Closing freezes these figures and locks floor and store entries dated in September." with the **Close September 2026** button (Owner). Others see "Only the Owner closes the month".
7. **Material use in** : the explanation line; filter chips **All**, **Needs a note**, **Explained**, **Within limit**, **No use** (a running month shows **So far** and **Waiting for count**); the view switch **Use against spec** / **Store book**; a search box. Items are grouped by unit (**Kilogram items**, **Piece items**, **Litre items**), so kilograms and pieces are never added together.
8. **Use against spec** columns: **Material**, **Spec allows**, **Issued to floor**, **Used per count**, **Used against spec + wastage** (a bar showing less, within, or more). **Store book** columns: **Opening**, **Received**, **Sent back**, **Issued**, **Count and corrections**, **Closing**, and "Does not add up" where the book is wrong.
9. Each item opens a card with its status in words (for example "Used 6.2 kg more than the spec allows. Within the limit of ± 7.5 kg."), the **reason** picker for an item outside its limit (list **Month-end variance**) with a note, and **Where the numbers come from**: the job cards that posted spec, issues to the floor, GRNs, returns to supplier, count lines and corrections.
10. **Spec items not linked to a stock item**: spec that cannot be compared with the store ("No stock item" or "Unit differs"). They stay out of the totals until the Owner links them in Masters.

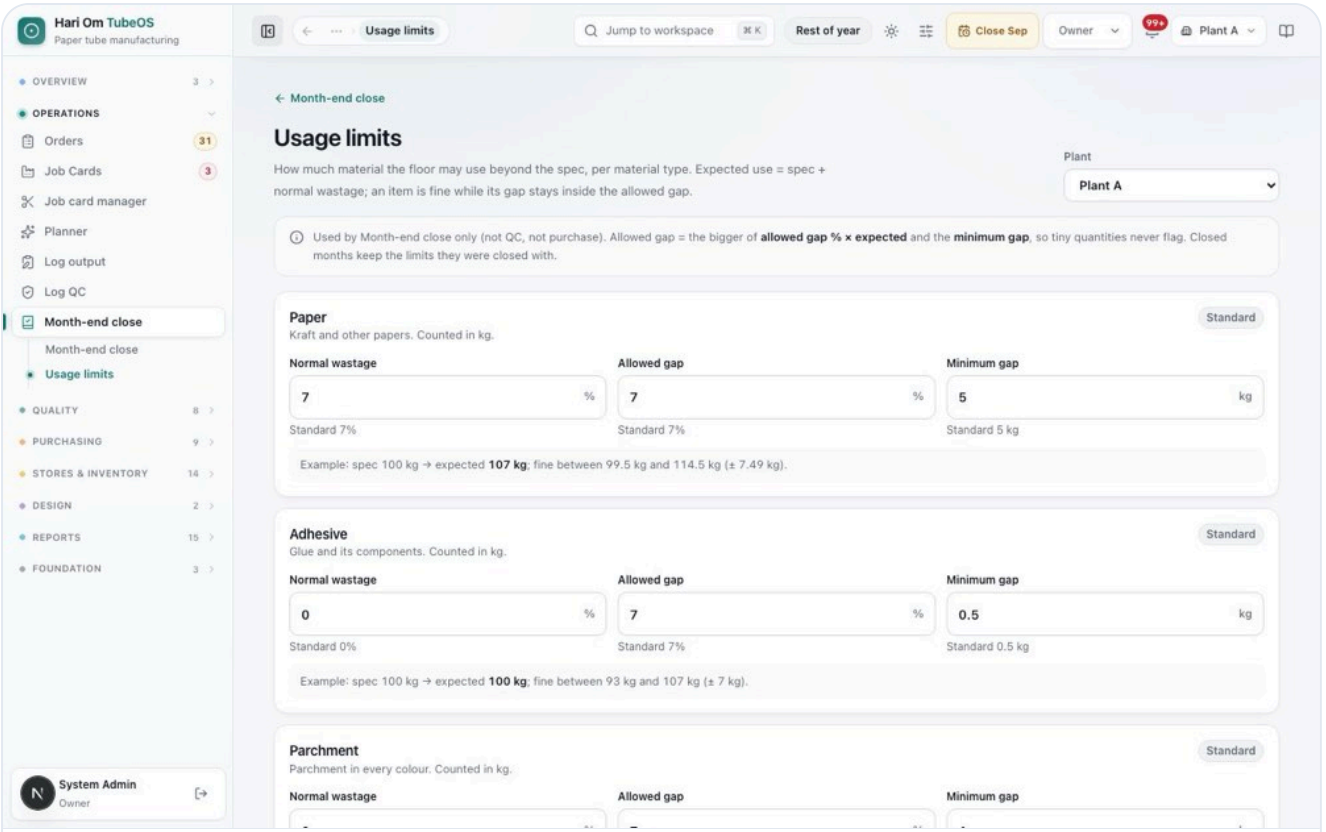



Figure: Usage limits for Plant A. One card per material type with Normal wastage, Allowed gap and Minimum gap, the standard value under each, and an example line.

What you see:

1. **Back link** "Month-end close" and the **Plant** picker.
2. **Info line**: "Used by Month-end close only (not QC, not purchase). Allowed gap = the bigger of allowed gap % × expected and the minimum gap, so tiny quantities never flag. Closed months keep the limits they were closed with."
3. **One card per type**: **Paper** (kraft and other papers, kg), **Adhesive** (glue and its components, kg), **Parchment** (every colour, kg), **Packing** (boxes, plastic sheets and fadda, each item's own unit), **Other**. A chip says **Standard** or **Set for this plant**.
4. **Fields**: **Normal wastage** (%), **Allowed gap** (%), **Minimum gap** (in the unit), with "Standard 7%" etc. under each.
5. **Example line**: "Example: spec 100 kg → expected 107 kg; fine between 99.5 kg and 114.5 kg (± 7.49 kg)."
6. Bottom: "Last saved by … · ", **Undo changes** and save.

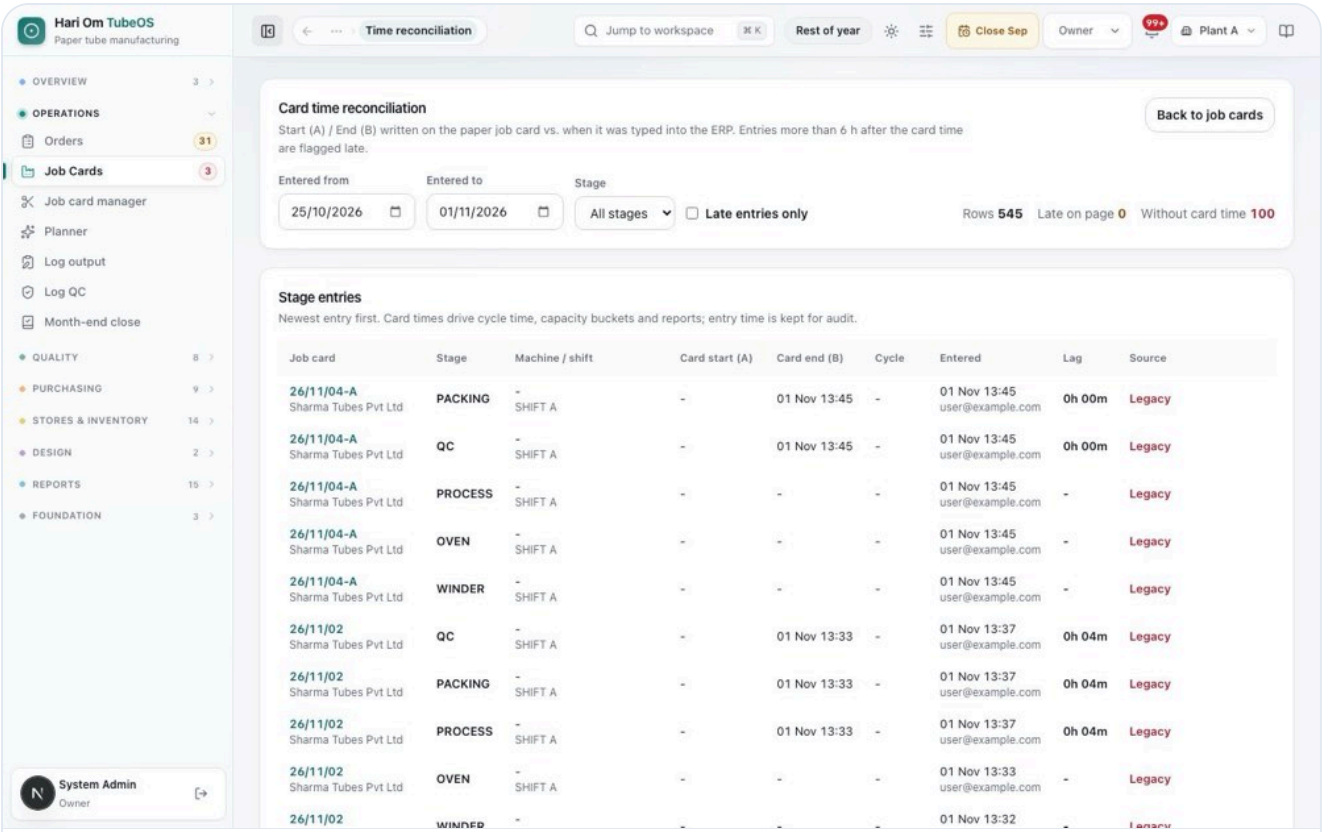



Figure: Card time reconciliation from 24 Oct to 31 Oct. Filters at the top with totals; a table of stage entries with card times, entry time, lag and source.

What you see:

1. **Card time reconciliation**: "Start (A) / End (B) written on the paper job card vs. when it was typed into the ERP. Entries more than 6 h after the card time are flagged late." Button **Back to job cards**.
2. **Filters**: **Entered from**, **Entered to**, **Stage** (All stages or one), **Late entries only**. Totals: **Rows**, **Late on page**, **Without card time**.
3. **Stage entries** (newest first): Job card and customer, Stage, Machine / shift, **Card start (A)**, **Card end (B)**, **Cycle**, **Entered** (time and login), **Lag**, **Source**: **Card time** (times written on the card), **No card time (override)** (the entry time was used), or **Legacy**.

## Step by step

### How to close a month

Roles: Owner closes; Plant Manager and Admin can prepare.

1. Open **Month-end close**. It opens on the oldest month not closed. Pick your plant if asked.
2. Work the checklist from left to right. The first open step is marked as "now".

3. **Count**: if the count has not started, click **Count stock** (it opens Stock counts). Count, submit, and have the Owner approve it. See "Stock counts, stock book, locations and opening stock".
4. **Store book**: if items do not add up, click **Open the stock book** and fix the entries (corrections are made in Stores).
5. **Notes**: click **Go to the N items**. For each item outside its limit, pick the reason from **Month-end variance** (MV-WASTAGE Higher wastage on the floor, MV-WRONG-ISSUE Wrong issue entry, MV-COUNT Physical count difference, MV-MOISTURE Moisture / weight loss, MV-SPEC Spec weight differs from actual, MV-TRIAL Trial or sample runs, MV-OTHER) and add a note if useful (for example "Reel AIT 06182 wet at edges, two plies trimmed"), then save. The item moves to **Explained** and shows "Label — note".
6. **Earlier months**: if an earlier month is open, open it and close it first.
7. When the bar says "Everything is ready", the Owner clicks **Close** . The dialog repeats that figures, statuses, limits and notes will be frozen and entries dated in the month refused. If store entries were posted after the count was approved, it lists them ("counted 412 kg, closing now 405 kg") and asks you to accept the new closing.
8. Confirm. Message: "September 2026 is closed. Entries dated in it are now locked." For March: "Financial year 2026-27 closed. 1 April opens from this close."

## How to write or change a note on an item

Roles: Owner and Plant Manager (plant head). Notes open only after the month-end count is approved.

1. Click the item (or use **Needs a note**).
2. Pick the **Month-end variance** reason, add a note if useful, and save ("Note saved on Kraft 300 GSM."). MV-OTHER needs a note of at least 5 characters. Remove it to clear the explanation. Notes written before 1 Nov 2026 show their old text.

## How to see where a number comes from

1. Click the item, then **Where the numbers come from** (or "See the issues and count lines").
2. The drawer lists the job cards whose spec was posted, issues to the floor, GRNs, opening loads, returns to supplier, count differences, corrections and count lines.

## How to re-open a closed month

Roles: Owner only.

1. Open the closed month, click **Re-open month**.
2. The dialog **Re-open September 2026?** asks **Why re-open it** from the list **Books unlock** (BU-LATE-GRN Late GRN or bill to post, BU-CORRECTION Correction to a closed month, BU-AUDIT Auditor's adjustment, BU-ERROR Closed by mistake, BU-OTHER), with a note

such as "Late GRN for kraft 351 found after the close". The store books are unlocked with the same code. Any later closed month re-opens with it, and the button then reads "Re-open 2 months".
3. Confirm. "Re-opened September 2026." Floor and store entries dated in the month are allowed again until it is closed again. Every close and re-open is kept under **Past months**.

### How to check past months and the financial year

1. **Past months**: each month with its state (**Closed**, **Running**, **Re-opened**, **Not closed**, **No activity**), "Closed by ", Items used, Outside the limit, Spec + wastage, Issued, Used per count. Click **View** .
2. **Financial year**: year totals per unit (opening on 1 April, issued to floor, count and corrections, spec, spec + wastage, floor against spec + wastage) and the months of the year, with "Closing March is the financial year close".

### How to change usage limits

Roles: Owner and Admin edit; everyone else reads.

1. Open **Usage limits**, pick the plant.
2. Change **Normal wastage** (0 to 50 %), **Allowed gap** (0 to 100 %) or **Minimum gap**. Read the example line.
3. Save. "Usage limits saved. Open months use them now; closed months keep their own."

### How to check late card entries

Roles: Owner, Admin, Plant Manager, Planner.

1. Open /production/job-cards/time-reconciliation.
2. Set **Entered from** and **Entered to**, pick a stage, tick **Late entries only** if needed.
3. Read **Lag** and **Source**. A late entry or a missing card time is information only; it never blocks anything.

## Rules the system enforces

- **Only the Owner closes and re-opens** a month. Re-open needs a **Books unlock** code; free text alone is refused. If a close does not finish, the system undoes it by itself and records "Month-end close did not finish (undone automatically)". (Blocks others.)
- **All five checklist steps** must be done before the close: month ended (closing opens on the 1st of the next month, India time), month-end count approved, store book adds up, every item outside its limit has a note, earlier months closed. (Blocks.)

- **A count cannot be made for a month once a later month is closed**: "Re-open first." (Blocks.)
- **Closed month locks entries.** Floor runs dated in it are refused: " is closed. Ask the owner to re-open it." Store movements dated in it are refused too. QC-only readings are not affected. (Blocks.)
- **Notes** only by Owner or plant head, and only after the count is approved. An item outside its limit is explained with a **Month-end variance** code (plus an optional note). (Blocks.)
- **Expected use** = Spec × (1 + normal wastage % ÷ 100). **Allowed gap** = the larger of allowed gap % × expected and the minimum gap. Within the allowed gap = **Within limit**; outside = **Needs a note** (more or less than spec); with a note = **Explained**; before the count = not known. (Automatic.)
- **Standard usage limits**: Paper 7 % wastage, 7 % gap, minimum 5 kg; Adhesive 0 %, 7 %, 0.5 kg; Parchment 0 %, 7 %, 1 kg; Packing 0 %, 7 %, 10 in its unit; Other 0 %, 7 %, 5. (Automatic until a plant saves its own.)
- **Frozen figures.** A closed month keeps the figures and limits it closed with. Live store changes made later show as "Live store figures differ for ...". (Automatic.)
- **Units are never mixed.** Totals are per unit; a kg total never includes pieces. (Automatic.)
- **Spec is posted when Process closes** on a card (theoretical paper, adhesive and parchment for the good tubes). **Packing theory is posted per box** on batch-entry cards: 1 box plus the spec's plastic and fadda per box; kg = pieces × the master's weight per piece. A packing row that cannot be costed (no stock item, no weight in the master, box code not a stock item) is kept with a warning, never dropped. Old cards whose finished goods posted in one lot keep the card-level packing. (Automatic.)
- **Late card entry** = typed more than 6 hours after the card time; shown in time reconciliation only. (Flag only.)

**Old links.** /production/reconciliation/actuals, /drift and /history now open Month-end close (the running month's "so far" view or the **Past months** tab).

## Sample

September 2026, Plant A. Paper limits are standard (7 % wastage, 7 % gap, minimum 5 kg).

| Material | Spec | Expected (spec + 7 %) | Used per count | Gap | Allowed | Status |
|---|---|---|---|---|---|---|
| Kraft 300 GSM | 2,000 kg | 2,140 kg | 2,195 kg | +55 kg | ± 149.8 kg | Within limit |

| Material | Spec | Expected (spec + 7 %) | Used per count | Gap | Allowed | Status |
|---|---|---|---|---|---|---|
| Kraft 180 GSM | 400 kg | 428 kg | 470 kg | +42 kg | ± 30.0 kg | Needs a note |
| PVA adhesive | 120 kg | 120 kg | 118 kg | −2 kg | ± 8.4 kg | Within limit |

The plant head writes on Kraft 180 GSM: "Two reels wet at edges, outer plies scrapped on 18 Sep". It becomes **Explained**. With the count approved and the book adding up, the Owner clicks **Close September 2026**. A Process run dated 29 Sep typed on 2 Oct is now refused until the Owner re-opens September.

## Common questions

**Why does every item show "Waiting for count"?**

The month-end count is not approved yet. Used per count is known only after the Owner approves the count.

**The close button is grey. Why?**

Hover over it: a checklist step is open, or you are not the Owner. The first open step is marked.

**The operator cannot save a run for last month.**

That month is closed. Ask the Owner to re-open it, enter the run, then close it again.

**Why is spec 0 for an item we used?**

Spec is posted when Process closes on a card. If no card using it closed Process in the month, spec is 0. Also check "Spec items not linked to a stock item".

**Are usage limits the same as QC tolerances?**

No. Usage limits are for month-end only. QC bands are in Quality and Masters.

**? I changed a limit. Did August change?**

Only if August is still open. Closed months keep their own limits.

**? What does "Legacy" mean in time reconciliation?**

The stage record has no card-time source of its own. It is information only.

## Related chapters

- Stock counts, stock book, locations and opening stock
- Issue to the floor: reels, coils and materials
- Job cards
- Log output and QC entry
- Masters

# Dispatch

**What it is:** The dispatch register of job cards with finished goods, and the delivery challan: pick the boxes, make a draft, seal it (stock goes out and the sales order counts the delivery), and print it.
**Who uses it:** Dispatch (makes and seals challans), Store, Plant Manager, Supervisor and Logistics (save drafts), Sales (views and prints sealed challans), Owner and Admin. Store (also Dispatch and the plant head) links the watchman's goods-out photos to the challans.
**Where:** Sidebar > Dispatch > Dispatch (/logistics/dispatch). A new challan opens at /logistics/dispatch/new?job_card_id=; a sealed challan prints at /logistics/dispatch//print.

## At a glance

- **The box is the dispatch unit.** On batch-entry cards, Process good pcs are packed into boxes of the spec's qty per box, each with a box code and a QR label. A challan is a set of whole boxes; a box is never split.
- **Ship while Process is still running.** A card appears on the register as soon as its first box is packed and posted to stock. Each challan ships some of its boxes (partial dispatch). The pcs left when Process closes go into a **part box**, which ships like any other box.
- **Build the challan by scanning or ticking boxes.** The challan lists every box code with its pcs, the box count, pcs per box and total pcs, and a packing block from the spec.
- **Sealing** takes the boxes out of stock and counts their pcs as dispatched on the sales order. Sealing is done by **Dispatch, Owner or Admin**. Others with access can save a draft.
- **Leaving the gate is recorded by photo.** When the truck leaves, the watchman only photographs the Tally bill and our challan, types the vehicle number and taps **Gone out**. **Store** (or Dispatch, or the plant head) then links that gate entry to the challan(s) on the register's **Gone out at the gate** strip (**Link challan**) and types or confirms the Tally bill number. Each challan shows **Not out of gate**, **Out · Tally T-1189 ✓** or **Photos missing**.
- **Only a hold placed on purpose blocks sealing.** QC flags never do: a box marked **QC flagged** ships like any other box.

## The flow

### From boxes to a sealed challan

1. **First box packed** — Process — in stock
2. **Boxes ready for a challan**
3. **Make challan from boxes** — Dispatch
4. **Scan or tick boxes** — Dispatch
5. **Seal & print challan** — Dispatch/Owner/Admin
6. **Boxes dispatched** — stock out, order delivered


If it goes wrong after **Boxes dispatched**

1. **More boxes packed**
2. **Make next challan** — Dispatch — partial dispatch


If it goes wrong after **Boxes ready for a challan**

1. **Manual hold on the card**
2. **Release hold** — Plant head/Owner/Admin
3. **Make challan from boxes** — Dispatch

### Finishing a card

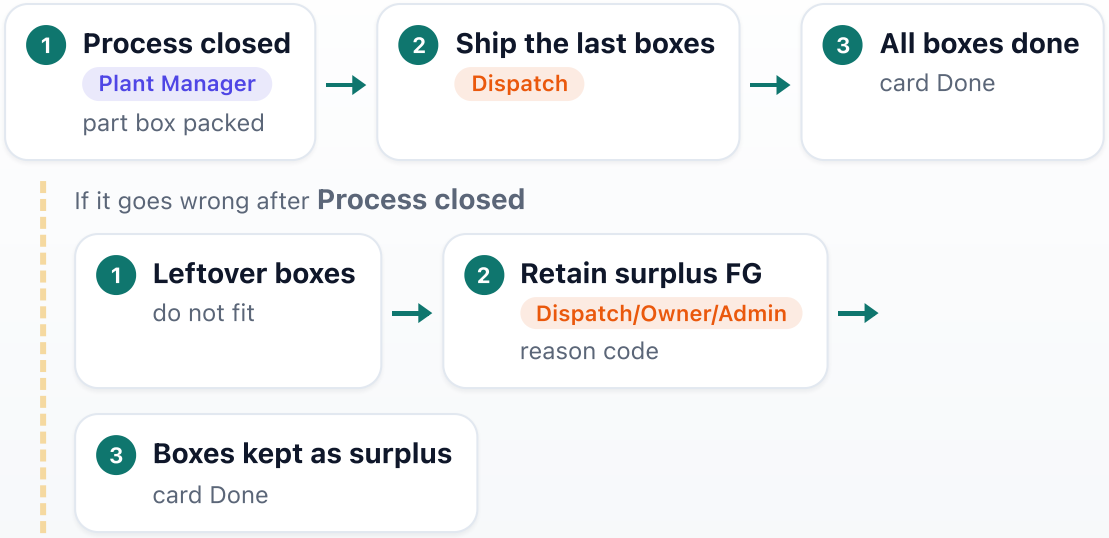


### Truck out of the gate

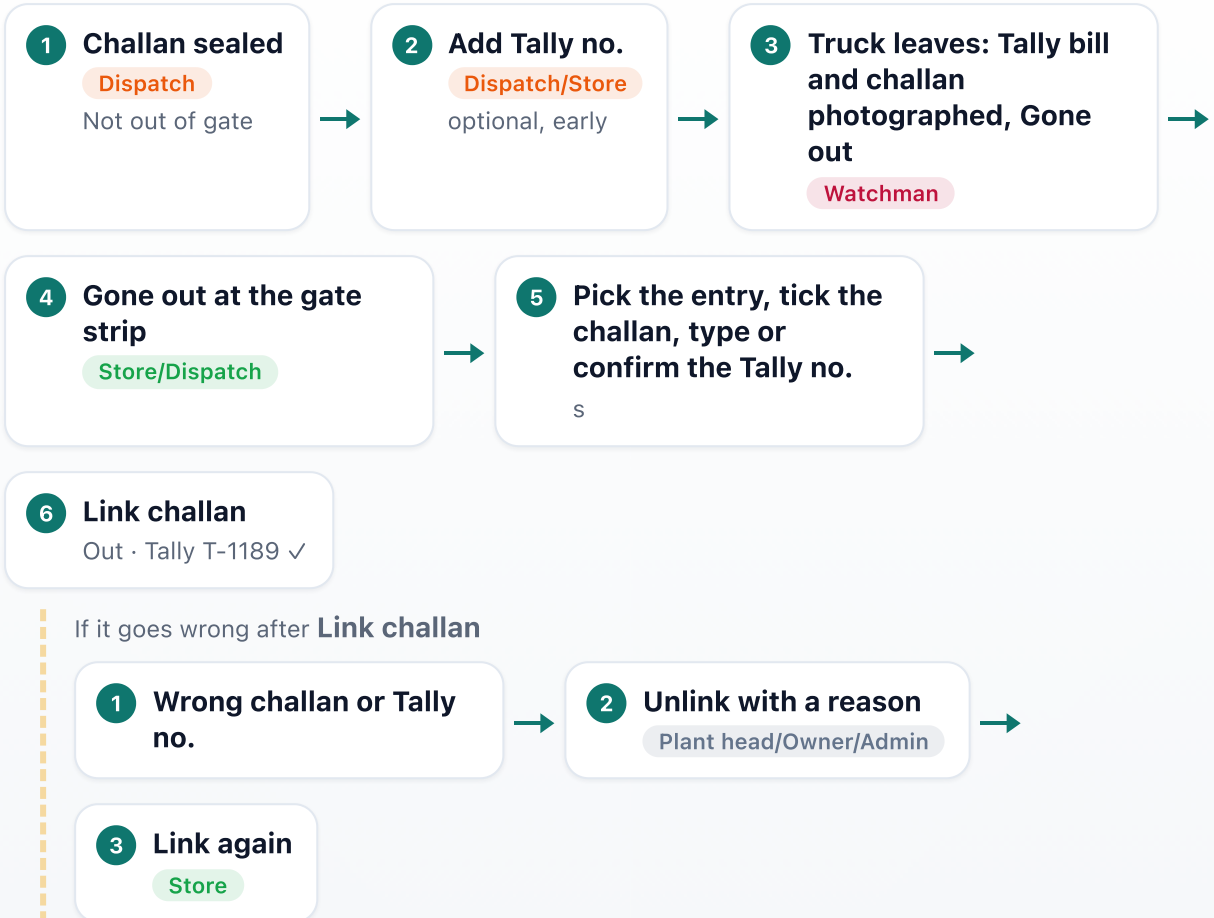


The card completes when Process is closed and every box has shipped or has been kept as surplus. When boxes are kept as surplus, any released quantity that was not shipped goes back to the sales order.

Cards whose finished goods were posted the old way, in one lot at Process close (before boxes existed), still ship by typed quantity, as described under "Cards without boxes".

## Screen tour

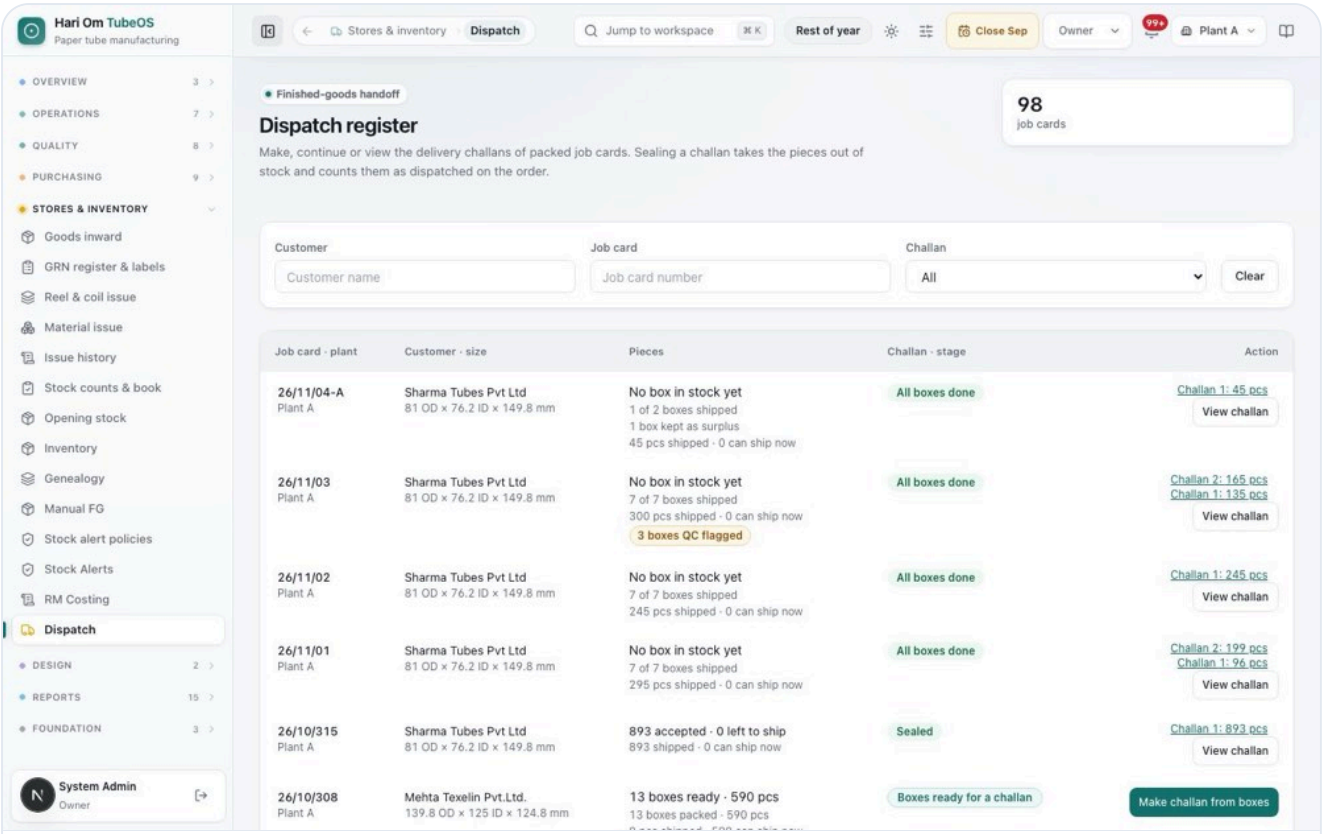



Figure: The Dispatch register with 93 job cards. Filters for customer, job card and challan; a table showing for each card its pieces accepted, shipped and left, the challan or stage state, and Make challan or View challan.

What you see:

1. **Header**: "Finished-goods handoff", **Dispatch register**, and the number of job cards shown. "Make, continue or view the delivery challans of packed job cards. Sealing a challan takes the pieces out of stock and counts them as dispatched on the order."
2. **Filters**: **Customer**, **Job card**, **Challan** (**All**, **No challan yet**, **Draft challan**, **Sealed**), **Clear**.
3. **Job card · plant**: card number and plant.
4. **Customer · size**: customer and tube size (for example 81 OD × 76.2 ID × 149.8 mm).
5. **Pieces**: for a box card, lines such as "4 boxes ready · 192 pcs", "2 of 7 boxes shipped" (or "7 boxes packed · 295 pcs"), "1 box waiting for the stock posting" and "1 box kept as surplus", plus an amber chip "2 boxes QC flagged" ("A QC reading was out of band when these boxes were packed. Shipping is not blocked."). Under it: "192 shipped · 103 can ship now". For a card without boxes: "893 accepted · 0 left to ship" and "893 shipped · 0 can ship now".

6. **Challan · stage**: **Draft challan**, or the state in words: - **Packing boxes** (Process is running and boxes are being packed; " · Process still running"), - **Boxes ready for a challan** (boxes in stock and not yet shipped), - **All boxes done** (box card fully shipped or kept), - **Waiting for Process to close** (with the current stage), - **Waiting for the stock posting**, - **On QC hold** (a hold placed on purpose; "A hold on this card stops all movement. Release it in Quality before sealing."), - **Nothing accepted at final QC**, - **Extra pieces kept in stock**, - **Ready for a challan** and **Challan sealed** (cards without boxes).
7. **Action**: **Make challan from boxes** (box card), **Make challan** (card without boxes) or **Edit draft challan**; links **Challan 1: 192 pcs**, **Challan 2: ...** to each sealed challan; **View challan**; and **Retain surplus FG** when the leftover boxes no longer fit (see below).

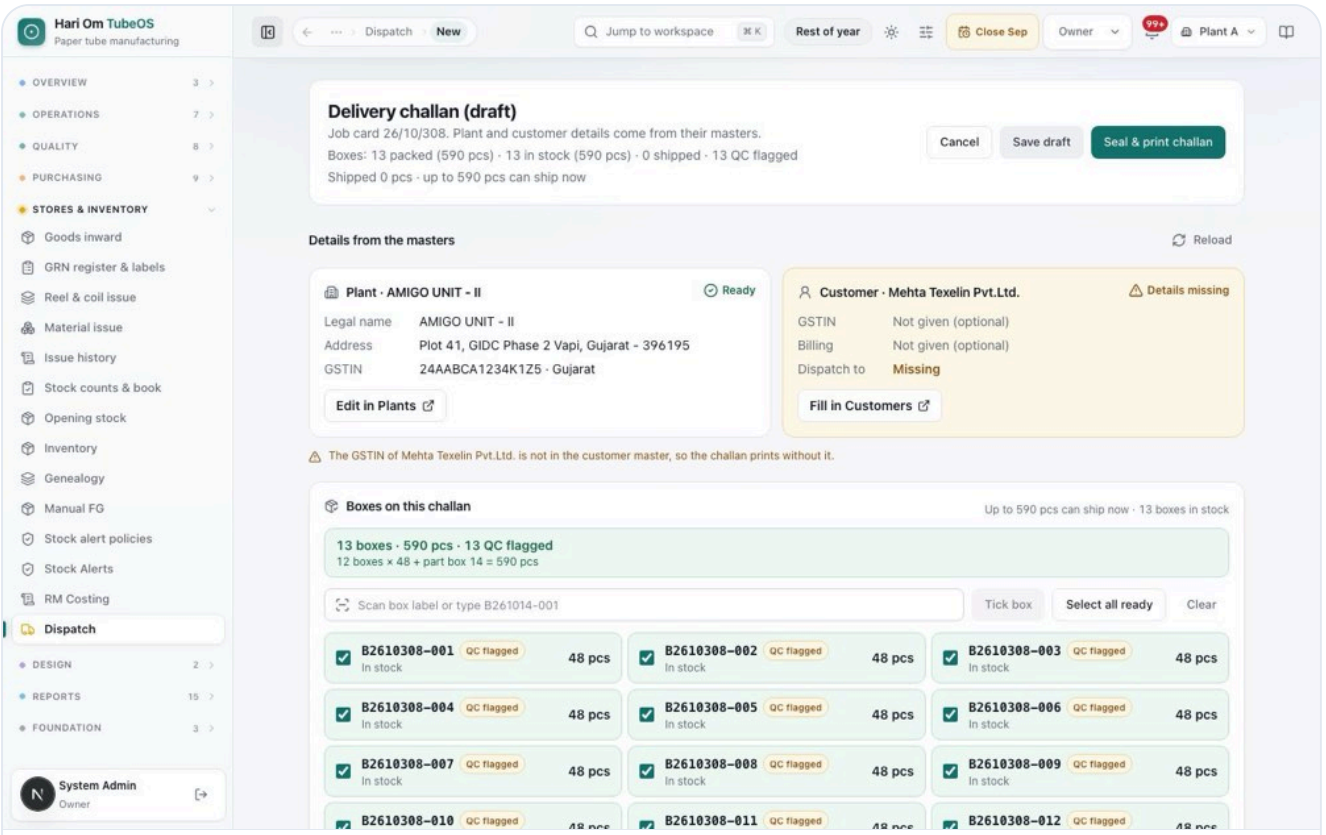



Figure: The new challan page for job card 26/10/315. Above the shipment details is the panel Boxes on this challan: "Up to 300 pcs can ship now · 4 boxes in stock", a green total line "4 boxes · 192 pcs" with "4 boxes × 48 = 192 pcs", a scan box "Scan box label or type B261014-001" with Tick box, Select all ready and Clear, and a grid of the card's boxes, each with its code, Part and QC flagged chips, its state and its pcs.

What you see (box card):

1. **Title**: **Delivery challan (draft)** or **Sealed delivery challan**; "Job card 26/10/315. Plant and customer details come from their masters." Buttons **Save draft** and **Seal & print challan**.
2. **Role note**: "You can save this as a draft. Dispatch, Owner or Admin seal it." Sales sees "View only...".
3. **Cannot be sealed yet** box (red) when something is missing, each line with where to fix it: plant legal name, plant address, plant GSTIN (fix in **Plants**), customer ship-to address (fix in

**Customers**), vehicle number, transporter name, at least one box, net weight.

4. **Details from the masters**: a **Plant** card (Legal name, Address, GSTIN) and a **Customer** card (GSTIN and Billing optional, **Dispatch to**), each marked **Ready** or **Details missing**, with **Edit in Plants / Fill in Plants** and **Edit in Customers / Fill in Customers** (Owner and Admin), and **Reload**.
5. **Boxes on this challan**: - The top line: "Up to 300 pcs can ship now · 4 boxes in stock" (the released quantity still to ship on this card). - The total line: "0 boxes · 0 pcs" with "Tick boxes below, scan a box label, or press Select all ready." Once boxes are ticked: "4 boxes · 192 pcs · 1 QC flagged" and "4 boxes × 48 = 192 pcs" (with "+ part box 7" when a part box is ticked). It turns red when the boxes hold more than can ship: "That is more than the 300 pcs that can ship now; untick a box." - **Scan or type a box code** with **Tick box**, **Select all ready** and **Clear**. A line under it answers each scan, for example "Box B2610315-005 ticked: 48 pcs.", "Box B2610315-002 is already shipped on challan DC-...", "Box B2610315-009 is not on this job card.", "That is not a box code. Scan the box label or type a code like B261014-001." - **The box grid**: one tile per box with a tick box, the box code, a violet **Part** chip, an amber **QC flagged** chip, the state (**In stock**, "Waiting for stock posting", "Stock posting failed", "Shipped on DC-...", **Kept as surplus**) and the pcs. Only boxes **In stock** can be ticked.
6. **Net weight (kg)**: worked out from the ticked pcs × the spec's tube weight, and worked out again when the boxes change; it stays editable ("You typed 6.500 kg; it is worked out again when the boxes change.").
7. **Challan document** below, as it will print (next picture).

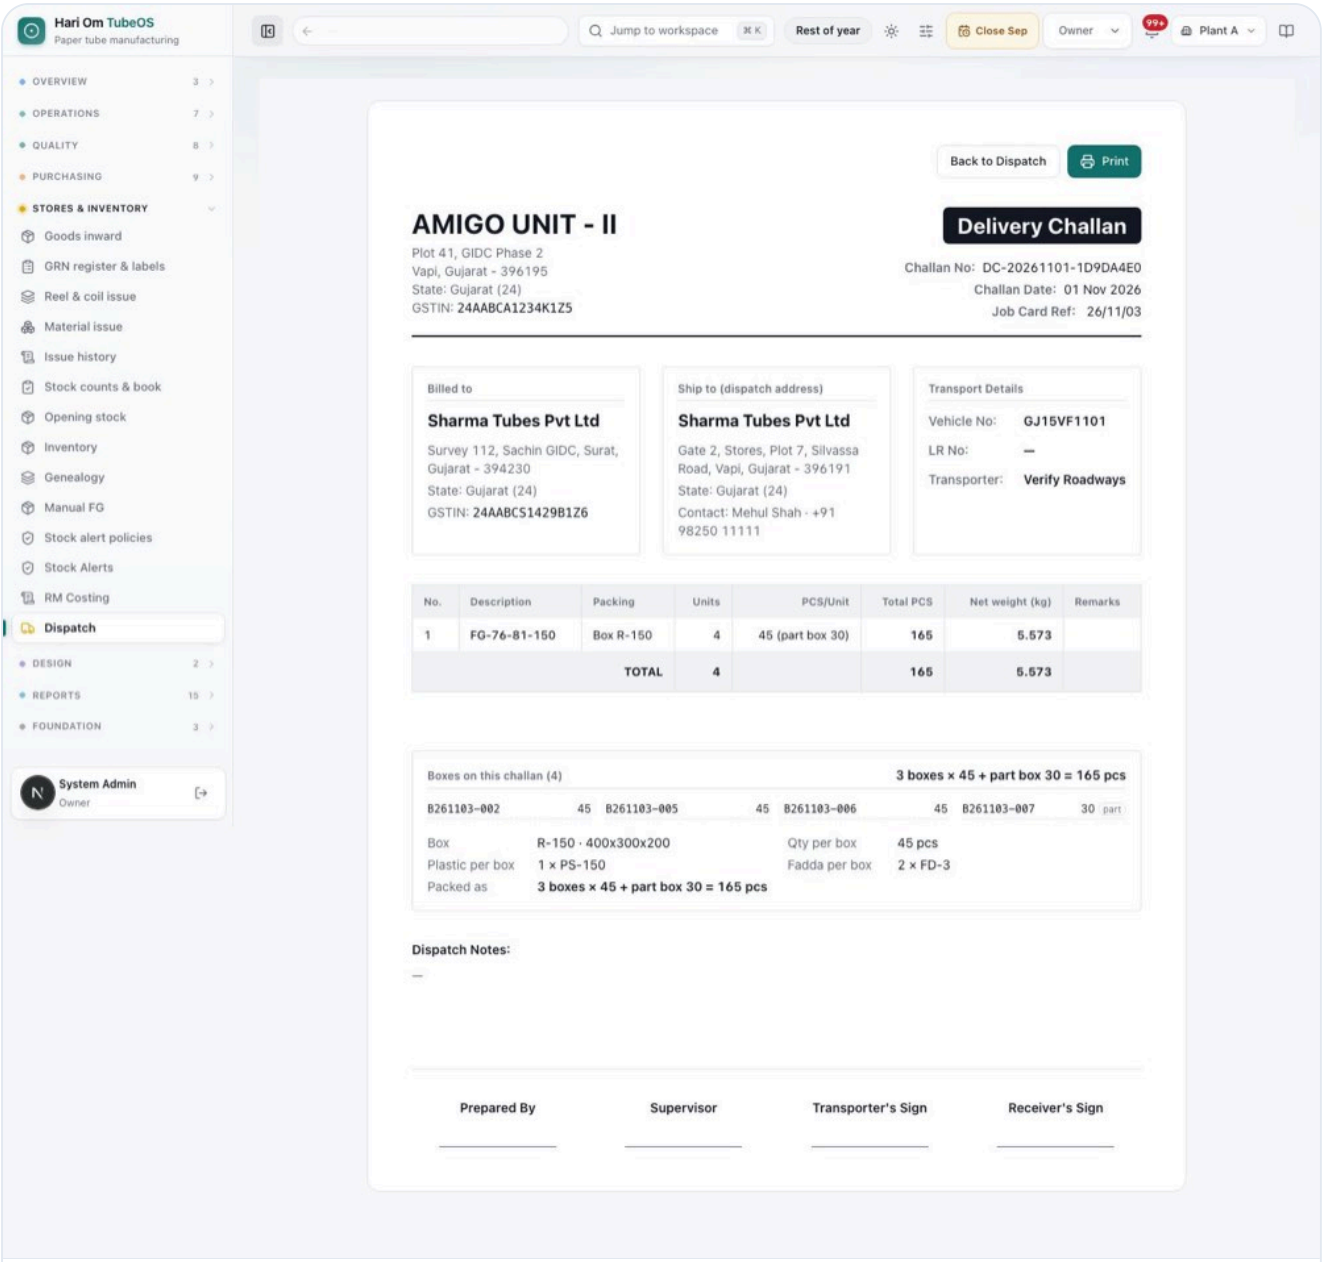



Figure: A sealed delivery challan for a box card. The goods table shows Packing "Box R-150", Boxes 4, Pieces / box 48, Total pieces 192 and the net weight. Below is the block Boxes on this challan (4) with the line "4 boxes × 48 = 192 pcs", a grid of each box code with its pcs, and the packing block Box, Qty per box, Plastic per box, Fadda per box and Packed as.

What you see on the challan:

1. **Header**: plant name, address and GSTIN; customer; **Challan No** ("Given on sealing"), **Challan Date**, **Job Card Ref**.
2. **Transport Details**: **Vehicle No** (for example GJ15AB1234), **LR No**, **Transporter**.
3. **Goods table**: **Packing** (the spec's box, for example "Box R-150"), **Boxes** (the box count), **Pieces / box** (the spec's qty per box), **Total pieces** (the pcs in the ticked boxes) and **Net weight (kg)**. The total line reads for example "Total: 192 pcs · 4 boxes · 6.486 kg".
4. **Boxes on this challan (N)**: the "Packed as" line (for example "6 boxes × 48 + part box 7 = 295 pcs") and every box code with its pcs; a part box carries a small **part** mark.

5. **Packing block**: **Box**, **Qty per box** ("48 pcs"), **Plastic per box** (for example "1 × PL-SHEET-24"), **Fadda per box** (for example "2 × FADDA-A4"), or "Not in the spec" where the spec has none; and **Packed as**.
6. **Dispatch Notes** and the signature boxes **Prepared By**, **Supervisor**, **Transporter's Sign**, **Receiver's Sign**.

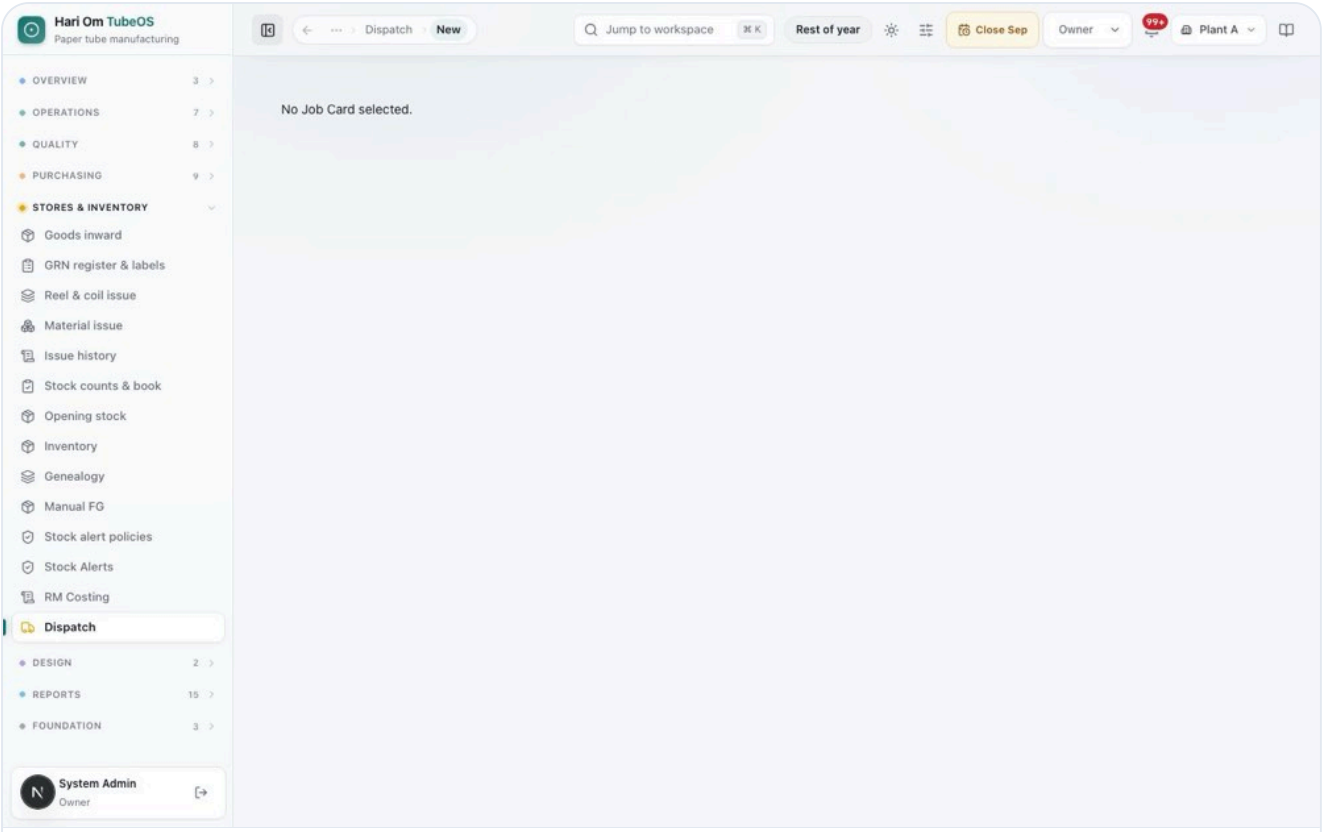



Figure: The new challan page opened without a card. It says only "No Job Card selected." Open it from Make challan on the register, or from the card's Dispatch tab, so the card is filled in.

**Cards without boxes** (finished goods posted in one lot at Process close, before boxes existed) show a **Shipment** section instead of the box picker: **Shipment quantity (pcs)** ("Up to 893 pcs"), **Pieces per bundle** ("9 bundles; the last one may hold fewer"), **Net weight (kg)** ("893 pcs × 33.78 g (spec) = 30.166 kg", with **Use 30.166 kg** to put the worked-out value back), and a packing table (Description, Units, PCS/Unit, Total PCS, Net weight (kg), Remarks).

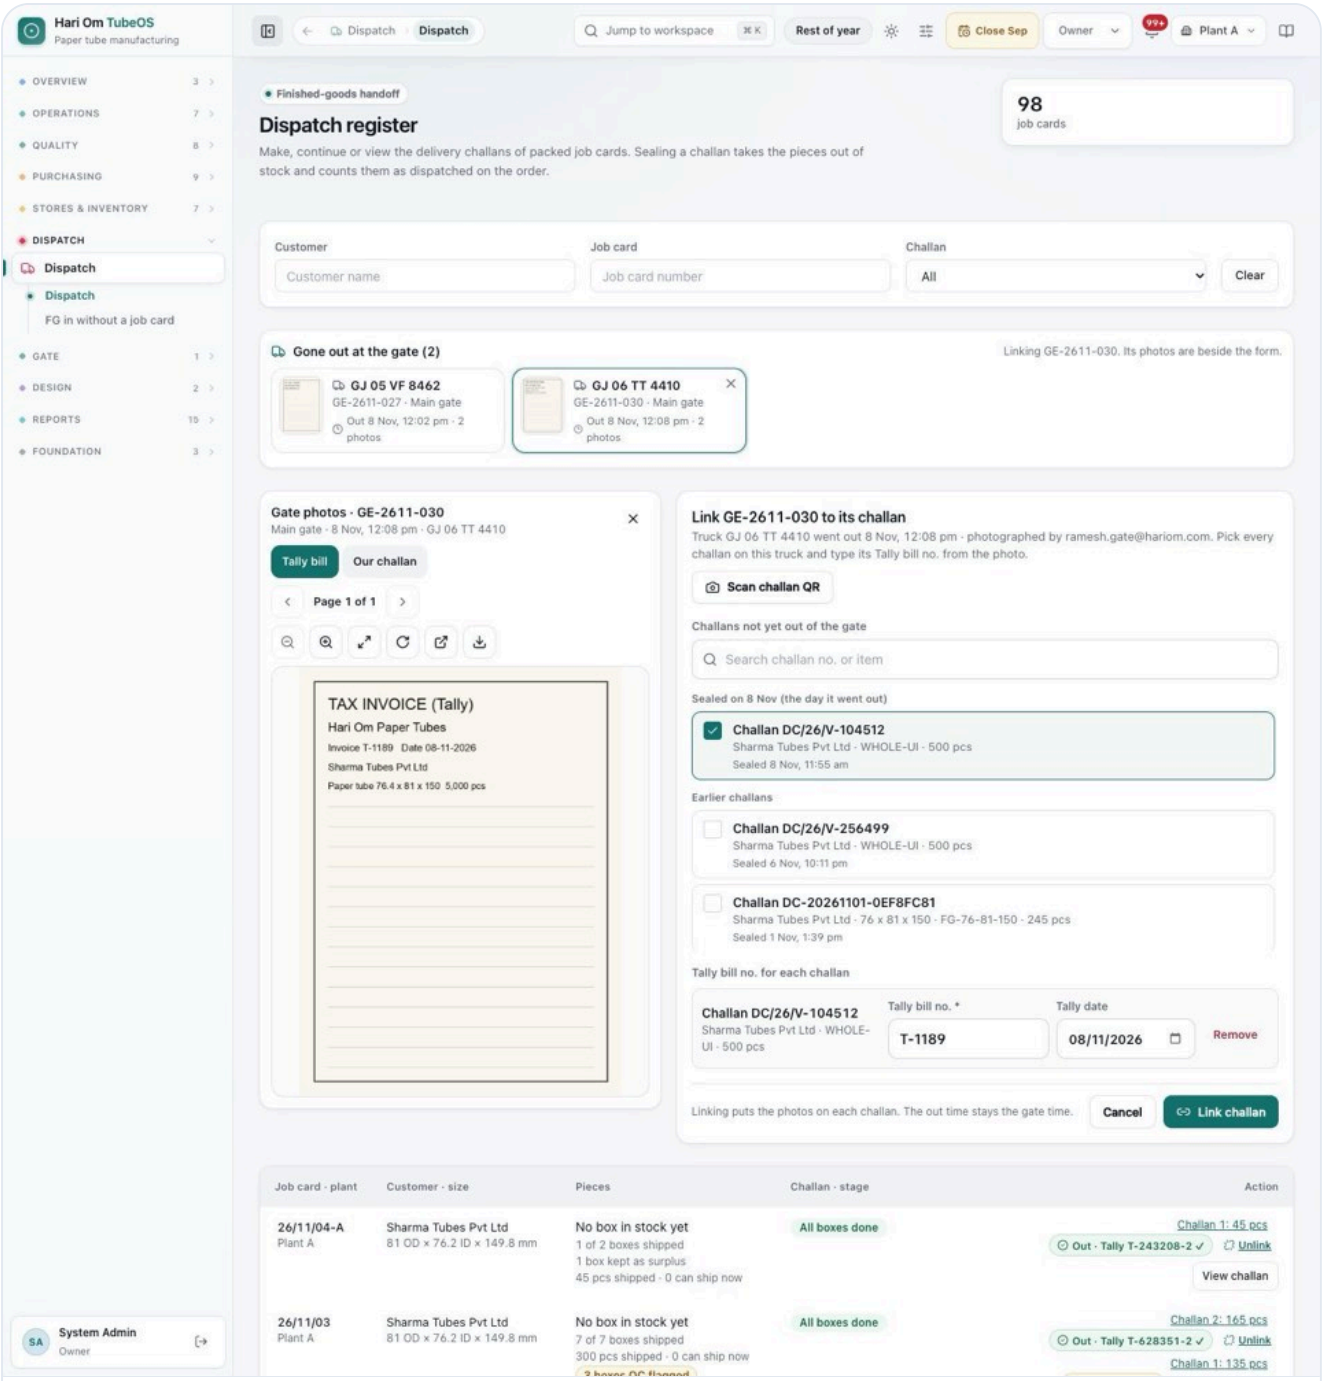



Figure: The Dispatch register with **Gone out at the gate (2)**: cards GJ 05 VF 8462 (GE-2611-027) and GJ 06 TT 4410 (GE-2611-030, picked; "Linking GE-2611-030. Its photos are beside the form."). Left: **Gate photos · GE-2611-030** with tabs **Tally bill** and **Our challan** and the viewer. Right: **Link GE-2611-030 to its challan**: "Truck GJ 06 TT 4410 went out 8 Nov, 12:08 pm · photographed by … Pick every challan on this truck and type its Tally bill no. from the photo." **Scan challan QR**, the list **Challans not yet out of the gate** with a search box, "Sealed on 8 Nov (the day it went out)" (Challan DC/26/V-104512 ticked) and **Earlier challans**; **Tally bill no. for each challan** with Tally bill no. T-1189 and Tally date 08/11/2026 and **Remove**; "Linking puts the photos on each challan. The out time stays the gate time." **Cancel** and **Link challan**.

What you see:

1. **Gone out at the gate (N)**: trucks the watchman photographed going out that are not yet linked. Each card: photo, vehicle number (or "No vehicle no."), GE- number, gate, out time and number of photos. Click one to pick it (x to unpick).
2. **Gate photos**: the Tally bill and our challan photos docked beside the form, with zoom, rotate and pages.
3. **Challans not yet out of the gate**: tick every challan that went on this truck. Search the challan number or item, or **Scan challan QR** (the QR printed on our challan). Challans sealed on the day the truck went out come first, then **Earlier challans** (last 30 days).
4. **Tally bill no. for each challan** (required) and **Tally date**: filled in when the dispatch desk already typed it ("From the dispatch desk"); for a second challan the first number is copied ("Same as the first; type over if different").
5. **Link challan** (or **Link 2 challans**). The message says, for example, "GE-2611-030 (GJ 06 TT 4410) linked: challan DC/26/V-104512 · Tally T-1189."

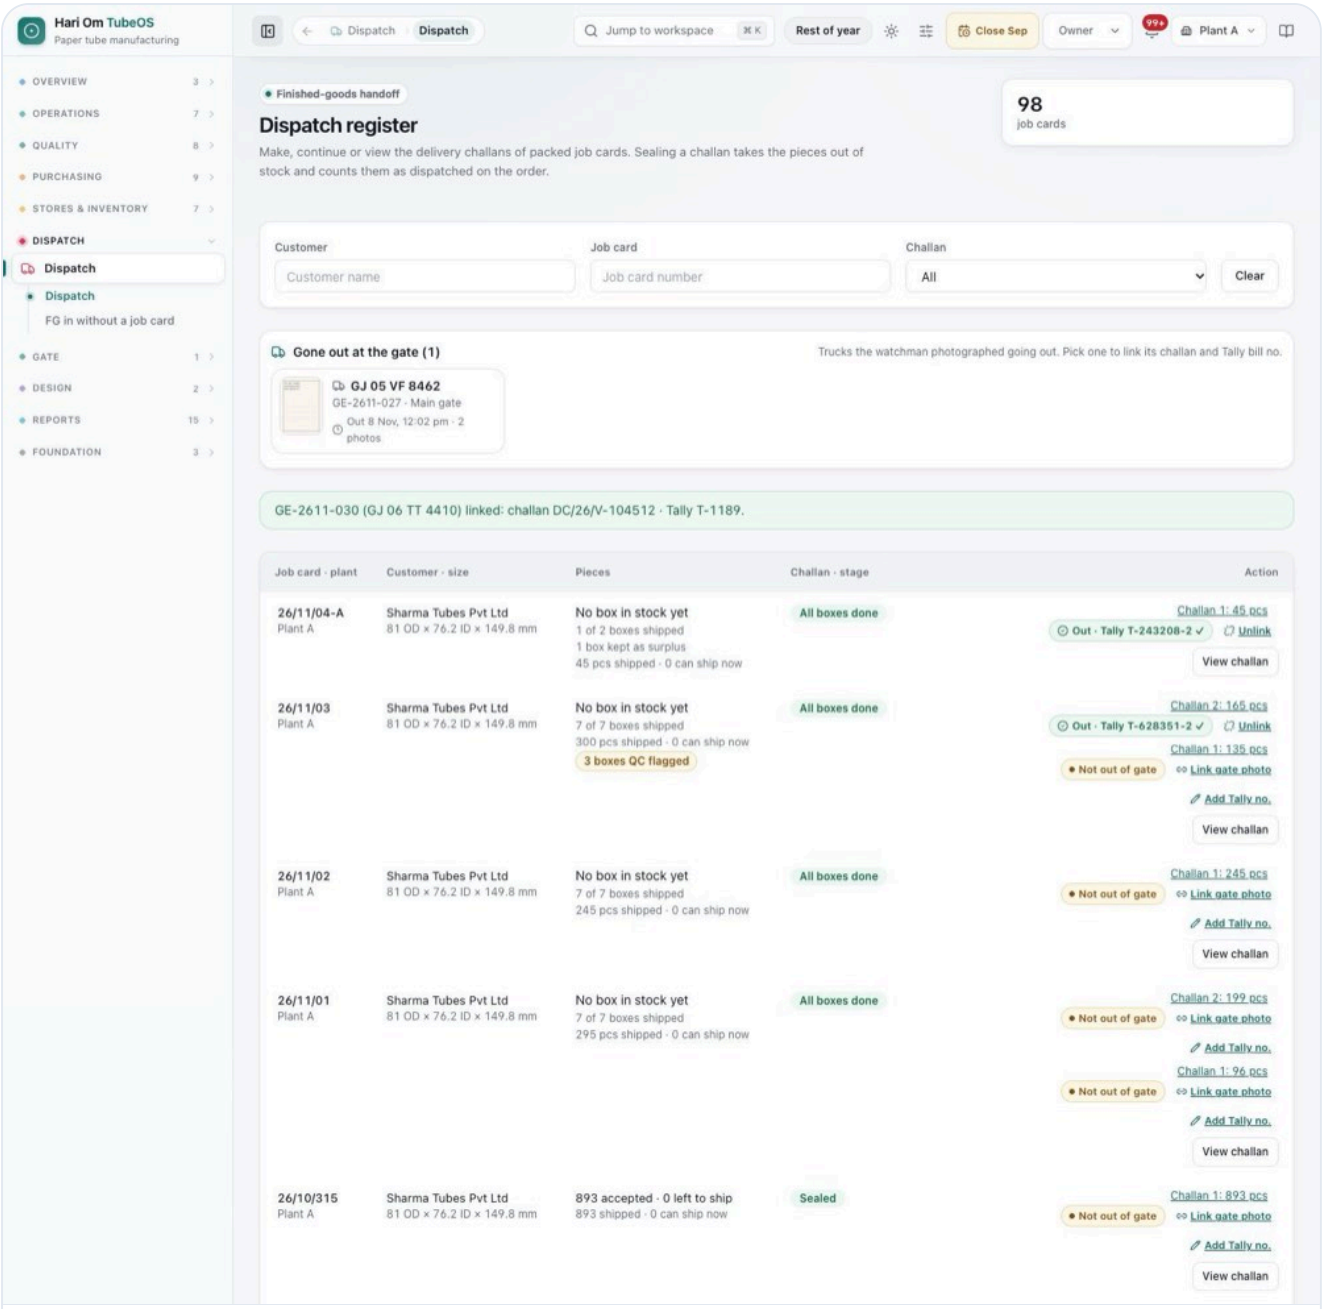



Figure: The register after linking. Rows show per challan: **Out · Tally T-243208-2 ✓** with **Unlink** (plant head, Owner, Admin), or **Not out of gate** with **Link gate photo** and **Add Tally no.**; above, **Gone out at the gate (1)** still has GJ 05 VF 8462.

What you see on each challan row:

1. **Not out of gate** (amber) until a goods-out entry is linked.
2. **Out · Tally T-1189 ✓** once linked with its Tally bill number. **Photos missing** when it is linked but a photo has not reached the vault yet.
3. **Link gate photo**: the same link from the challan's side: pick the truck the watchman photographed with this challan, then type the Tally bill no.
4. **Add Tally no.** (Store, Dispatch, Plant Manager, Owner, Admin): type the Tally bill number before the truck leaves; Store then only confirms it when linking.
5. **Unlink** (plant head, Owner, Admin): undoes a wrong link with a reason from the list **Goods-out photo unlinked** (GU-WRONG-CHALLAN Linked to the wrong challan, GU-WRONG-

TRUCK Photos are of another truck, GU-TALLY-WRONG Wrong Tally bill, GU-OTHER with a note). The entry goes back to **Gone out at the gate**. A wrong Tally number on a linked challan is corrected by unlinking and linking again.

## Step by step

### How to link a truck that went out to its challan(s)

Roles: Store, Dispatch, Plant Manager, Owner, Admin.

1. Store and Dispatch get "Goods out at the gate · GE-...". Open **Dispatch** and look at **Gone out at the gate (N)** above the register.
2. Click the entry. Its photos (Tally bill and our challan) open beside the form.
3. Tick the challan(s) that went on that truck: read the challan number on the photo, search it, or tap **Scan challan QR** and scan the printed challan.
4. Type the **Tally bill no.** of each challan from the Tally bill photo (and the **Tally date** if different), or confirm the number the dispatch desk already typed.
5. Click **Link challan** (**Link 2 challans** for two). The challans show **Out · Tally T-1189 ✓**, the entry becomes **Linked to challan**, and the photos are on each challan (Doc Vault, Outward). The out time stays the time the watchman tapped Gone out.
6. From a challan row you can do the same with **Link gate photo**.

### How to undo a wrong link

Roles: Plant Manager, Owner, Admin.

1. On the challan row, click **Unlink**, pick the reason (for example GU-WRONG-CHALLAN) and confirm.
2. The challan is **Not out of gate** again and the entry goes back to **Gone out at the gate**. Link it to the right challan, or with the right Tally number.

### How to type the Tally bill number before the truck leaves

Roles: Store, Dispatch, Plant Manager, Owner, Admin.

1. On the challan row, click **Add Tally no.**, type the number (for example T-1189) and **Save**.
2. When the truck's photos are linked, the number is filled in ("From the dispatch desk"); Store only confirms it.

## How to make and seal a challan from boxes

Roles: drafts by Dispatch, Store, Plant Manager, Supervisor, Logistics, Owner, Admin; sealing by Dispatch, Owner, Admin.

1. Open **Dispatch**. Find the card (filter by customer or card number). It says **Boxes ready for a challan** (or **Packing boxes** with boxes ready while Process runs).
2. Click **Make challan from boxes**. (From the job card's **Dispatch** tab, **Create dispatch slip · N boxes ready** opens the same page.)
3. Check the **Plant** and **Customer** cards. If one says **Details missing**, an Owner or Admin fills it in the master, then press **Reload**.
4. Pick the boxes going on this truck: - scan each box label's QR with a phone or barcode reader into **Scan or type a box code** (or type the code) and press **Tick box**, or - tick the boxes in the grid, or - press **Select all ready** to tick every box in stock that fits in what can ship now (in box order; a line says how many did not fit).
5. Check the total line: box count and pcs. Untick a box if it says more than can ship now.
6. Check **Net weight (kg)**. Type **Vehicle No**, **Transporter** and, if you have it, **LR No**. Add **Dispatch Notes** if needed.
7. Click **Save draft** to keep it for later, or **Seal & print challan**.
8. The dialog **Seal this challan?** repeats Quantity, Customer, Dispatch to, Vehicle and Job card, and says "Sealing locks the challan and records stock going out and the sales order delivery for this shipment." Click **Confirm and seal** (or **Keep editing**).
9. "Sealed and locked. Opening the challan to print...". The challan gets its number, each box goes out of stock, the boxes show **Dispatched** with the challan number, and the sales order counts the pcs as delivered.

## How to ship part of a card while Process is running (partial dispatch)

1. As soon as a box is packed and in stock, the card is on the register.
2. Make a challan with the boxes ready now (for example 4 boxes, 192 pcs). Seal it.
3. The register shows "4 of 6 boxes shipped" and **Challan 1: 192 pcs**.
4. When the next truck goes, click **Make challan from boxes** again. Boxes already shipped are greyed and cannot be ticked. It becomes **Challan 2**.

## How to keep leftover boxes in stock (Retain surplus FG)

Roles: Dispatch, Owner, Admin.

1. The button **Retain surplus FG** shows on a box card when Process is closed, boxes are still packed, no hold is open, and no box left fits in the released quantity still to ship.
2. Click it. The settlement says: "No box left on this card fits in the released quantity still to ship (a box is never split). These boxes stay in stock as surplus with their labels; any

released quantity not shipped goes back to the sales order, so Sales can release it again or short-close it. This closes the job card and records your reason."
3. Pick the reason from **Surplus kept**: SR-NEXT-ORDER Kept for the next order, SR-CUST-LATER Customer will take it later, SR-SAMPLE Kept as a sample, SR-OTHER Other (write a note).
4. Click **Confirm retention and close** (or **Keep card open**).
5. The leftover boxes show **Kept as surplus**, the card closes, and the register shows "N boxes kept as surplus". Any draft challan is discarded (kept in the audit).

### How to print or reprint a challan

1. On the register, click **Challan 1: ... pcs** or **View challan**.
2. Use the print button on the challan page. Sales can print sealed challans too.

### How to finish an interrupted shipment

If the connection dropped while sealing, the challan shows "This shipment was interrupted." Click **Retry shipment** (or **Resume shipment**). It finishes the stock and sales posting once, box by box; never make a second challan for the same boxes.

### How to ship a card without boxes

1. Click **Make challan**. Type **Shipment quantity (pcs)** (up to the number shown), **Pieces per bundle**, and check **Net weight (kg)**.
2. Type the transport details and seal as above. Partial dispatch works by typing part of the quantity; "left to ship" goes down each time.
3. When the allowed quantity is shipped but accepted pieces remain, **Retain surplus FG** keeps them in the existing finished-goods lot, with a **Surplus kept** reason; the card closes.

## Rules the system enforces

- **Boxes on the challan must be ready.** Each box must belong to this card, be packed (not shipped, kept or void) and be in stock. Otherwise: "These boxes cannot go on the challan: B2610315-002 is already dispatched", "... belongs to another job card", "... is not in stock yet (posting pending)". (BLOCKS.)
- **At least one box**: "Tick or scan the boxes going on this challan." (BLOCKS.)
- **Not more than the released quantity left**: "These 5 boxes hold 240 pcs, but only 200 pcs of this card's released quantity are left to ship. Leave the extra box(es) off; keep them with Retain surplus once the rest is shipped." (BLOCKS.)

- **Only holds placed on purpose block**: "1 hold(s) placed on this card stop all movement. Release them in Quality before sealing." QC flags never block, and a passed final QC is no longer needed, also on old-form cards. (BLOCKS only for manual holds.)
- **Required to seal**: plant legal name, address and GSTIN; customer dispatch address; vehicle number; transporter name; at least one box (or a shipment quantity on a card without boxes); net weight above 0. The server checks the same list. (BLOCKS.)
- **Who seals**: "Only an Owner, Admin or Dispatch user can seal a challan." (BLOCKS.)
- **Sealed is final**: "This challan is sealed and cannot be changed." (BLOCKS.)
- **One shipment at a time per order line**: if another card of the same line has an unfinished shipment, finish that first with **Retry shipment**. (BLOCKS.)
- **Stock out per box**: each box leaves stock from its own lot; the challan's pcs are the sum of its boxes. (AUTOMATIC.)
- **Net weight** is worked out as pcs × tube weight per piece from the spec, and stays editable. (AUTOMATIC.)
- **Challan number** is given when sealed (for example DC-20261031-3F9A1C2B). The challan and the stock movement carry the same India business date. (AUTOMATIC.)
- **Safe retry**: a retry of the same seal never posts a box twice. (AUTOMATIC.)
- **Retain surplus on a box card** is refused while Process is open ("Close Process before keeping surplus boxes"), while a hold is open ("Release the hold on this card before keeping surplus boxes"), while a shipment is unfinished, or while a box still fits ("Box B2610315-007 (7 pcs) still fits in the 50 pcs of released quantity left: ship it first"). It needs a **Surplus kept** code. (BLOCKS.)
- **Card done** when Process is closed and no box is left packed. (AUTOMATIC.)
- **Out of the gate**: a challan is **Not out of gate** until Store links the watchman's goods-out entry to it with its Tally bill number. The truck is never held for the photos; **Photos missing** shows until both photos are in the vault. (NEVER BLOCKS.)
- **Not out by close time**: after the plant's gate close time, Dispatch and Store get one notice a day listing challans sealed today that are not out of the gate, and Store and the plant head get one notice of goods-out photos still not linked. (AUTOMATIC.)
- **Linking**: each challan needs its Tally bill number; one challan goes out of the gate once; only the plant head, Owner or Admin can unlink, with a **Goods-out photo unlinked** reason. (BLOCKS.)

## Sample

Card 26/10/315 for Sharma Tubes Pvt Ltd: 400 pcs released, Winding closed short (100 pcs back to the order), Process target 300 pcs, 48 pcs per box, tube weight 33.78 g.

| Day | Boxes | Pcs | Net weight | Vehicle | State after seal |
|---|---|---|---|---|---|
| 1 Nov (Process running) | B2610315-001 to -004 | 192 | 6.486 kg | GJ15AB1234 | 4 of 4 boxes shipped · Packing boxes |
| 2 Nov (Process closed) | B2610315-005, -006 and part box -007 | 48 + 48 + 7 = 103 | 3.479 kg | GJ15CD5678 | All boxes done |

Process closed with 295 good pcs, so 5 more pcs went back to the order. Total shipped 295 pcs in 7 boxes. The order line SO/26/10/412 shows 295 pcs delivered and 105 pcs unreleased (100 + 5), which Sales releases again or short closes. Challan 2 prints "Boxes on this challan (3)", the three codes with "part" on -007, and "Packed as 2 boxes × 48 + part box 7 = 103 pcs".

## Common questions

**? The watchman says the truck left, but the challan still says Not out of gate.**

The goods-out entry is waiting under **Gone out at the gate**. Store picks it, ticks the challan, confirms the Tally bill number and clicks **Link challan**.

**? I linked the wrong challan or typed the wrong Tally number.**

Ask the plant head, Owner or Admin to **Unlink** it with a reason, then link it again correctly.

**? Does the watchman type the Tally bill number?**

No. He only photographs the Tally bill and our challan and types the vehicle number. Store (or Dispatch) types or confirms the Tally number when linking.

**? The chip says Photos missing.**

The gate phone has not finished uploading. Ask the watchman to keep the phone on the network. If the photo was lost on the phone, tell the plant head.

**Why is there no Make challan button on my card?**

Read the state: "Packing boxes" with no box in stock yet, "Waiting for the stock posting" or "On QC hold". The button appears only when boxes can ship and your role can prepare challans.

**Can I ship before Process is closed?**

Yes. Every box that is packed and in stock can ship. The last pcs follow in the part box after Process closes.

**Can I take some pcs out of a box?**

No. A box always ships whole. If a box no longer fits in what can ship, keep it with **Retain surplus FG** once the rest is shipped.

**A box is QC flagged. Can I still ship it?**

Yes. Flags do not block. Only a hold placed on purpose on the card blocks sealing.

**The scan says the box is not on this job card.**

The label belongs to another card. Make that card's challan separately; one challan is one job card.

**The seal says the plant GSTIN is missing.**

Ask an Owner or Admin to fill it in **Plants** (System). Then press **Reload** on the challan.

**Can Sales seal a challan?**

No. Sales can view and print sealed challans. Dispatch, Owner or Admin seal.

**I sealed the wrong boxes.**

A sealed challan cannot be changed. Speak to the Owner or Admin about a correction; do not make a second challan for the same boxes.

**Why can only 300 pcs ship when the order released 400?**

Winding closed short and gave 100 pcs back to the order. The card may ship only what is still released on it; Sales handles the 100 pcs on the order.

**? The net weight is empty.**

The spec has no tube weight. Type the net weight in kg.

## Related chapters

- Gate desk and visitors
- Job cards (boxes, box labels, box page)
- Quality
- Sales orders
- Specifications (packing)
- Masters
- Inventory, material items, manual FG, stock alerts and RM costing

# Purchase orders, PO approvals and requisitions

**What it is:** the purchase desk, where purchase orders (POs) are made, approved by the Owner or an Admin, sent to the vendor and followed until the goods come in. Requests for tools and spares start here as requisitions.
**Who uses it:** Store and the Plant Manager make POs. Store, Planner and Plant Manager submit, send and record vendor dates. The Owner or an Admin approves POs. Only the Owner approves requisitions. Anyone can raise a requisition.
**Where:** Sidebar > Purchasing > Purchase orders (/purchase), Create purchase order (/purchase/new), PO approvals (/purchase/approvals), Purchase requisitions (/purchase/requisitions)

## At a glance

- **Every PO goes through approval.** A PO the desk makes by hand is a **Draft** until someone uses **Submit for approval**. The Owner or an Admin then approves or rejects it. Only an approved PO can be received on a GRN.
- **Drafts the Owner scheduled skip the second approval.** When the Owner approves arrivals on the RM inward calendar, the system makes draft POs tagged **Scheduled by Owner**. If nobody changes them, **Send to vendor** approves and sends them in one step.
- **PO numbers are automatic.** The system gives the next number in the series when you save: **RP-PM/53** for raw and packing material, **OT/07** for other purchases (tools, spares). You cannot type or change the number, and you cannot change the series later.
- **Every line needs incoming QC.** The PO has no "QC required" tick any more. Each line is marked for incoming QC by the system, and QC checks each delivery against the material standard.
- **Changing an approved PO makes a new revision.** The old approved version stays in **Revision history**, and the new revision needs approval again.

## The flow

### Hand-made purchase order

1. **Create PO** — Store/Plant Manager
2. **Save PO draft** — number given
3. **Submit for approval** — Store/Planner/Plant Manager
4. **Approve** — Owner/Admin
5. **Send to vendor** — Purchase desk
6. **Vendor confirms dates** — Purchase desk
7. **Receive goods** — Store/GRN — GRN

If it goes wrong after **Approve**


1. **Reject with reason code** — Owner/Admin
2. **Sent back by Owner**
3. **Edit / vendor change** — Purchase desk
4. **Submit for approval**

### Draft scheduled by the Owner

1. **Approve arrivals** — Owner — RM inward calendar
2. **Draft PO, Scheduled by Owner**
3. **Check & send** — Purchase desk — no second approval
4. **Vendor confirms dates**
5. **Receive goods** — GRN

If it goes wrong after **Draft PO, Scheduled by Owner**

1. **Desk changes qty, date, vendor or rate**
2. **Submit for approval**
3. **Approve PO** — Owner
4. **Send to vendor**

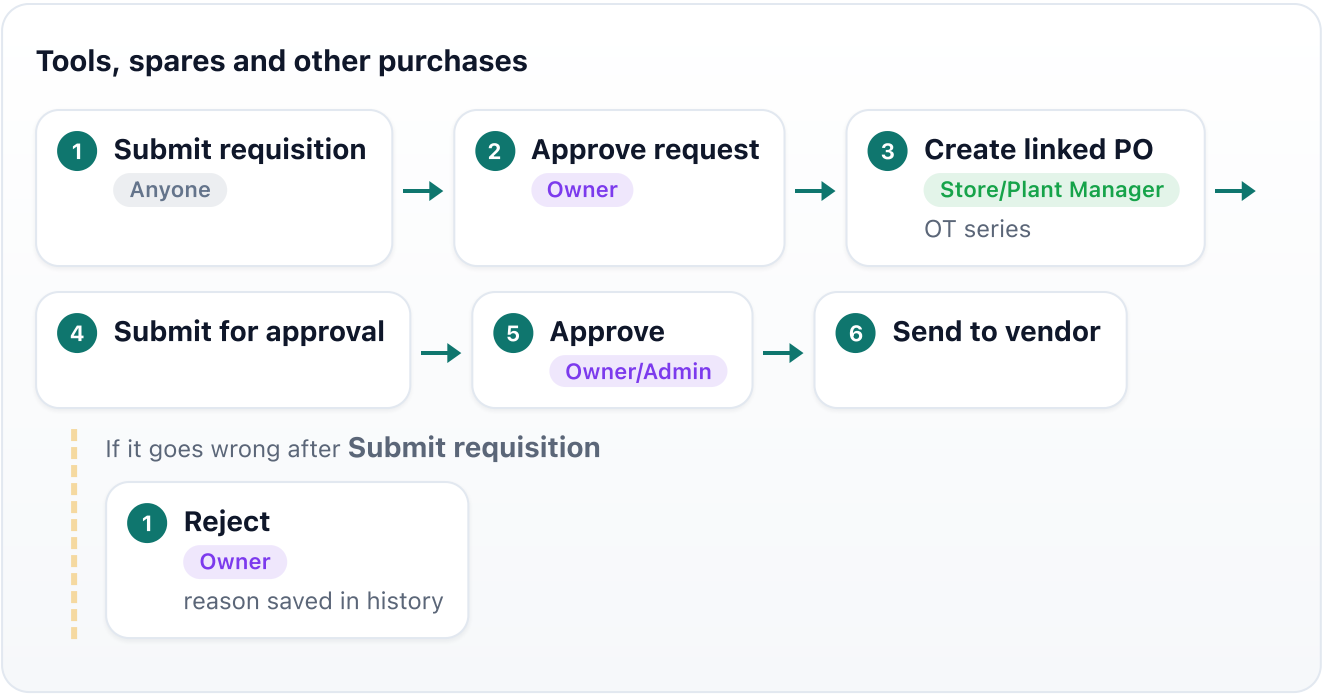


The purchase desk is Store, Planner and Plant Manager (the Owner can do every step too). The PO is the document the vendor receives. After the vendor confirms the dates, the goods are received on a GRN, described in the Goods inward chapter.

## Screen tour

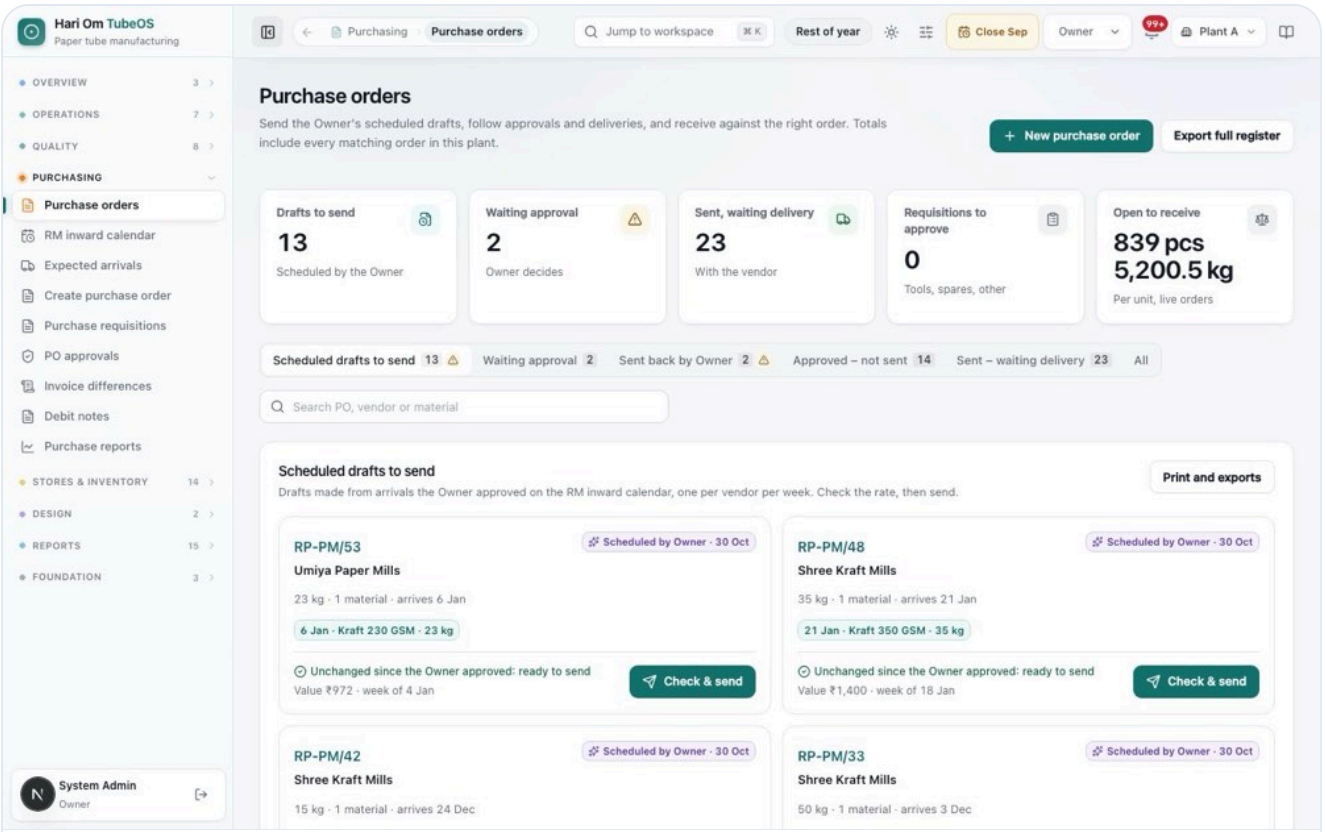



Figure: The Purchase orders page. Five tiles at the top show Drafts to send (13), Waiting approval (3), Sent, waiting delivery (23), Requisitions to approve (0) and Open to receive (839 pcs and 5,760.5 kg). Below are queue tabs and cards for the scheduled drafts, each with a Check & send button.

What you see:

1. **New purchase order** and **Export full register**: the first opens the PO form (only for Store, Plant Manager, Owner and Admin). The second downloads the PO line register in Excel.
2. **Summary tiles**: **Drafts to send** (drafts the Owner scheduled), **Waiting approval** (the Owner opens PO approvals from it; others see the Waiting approval tab), **Sent, waiting delivery**, **Requisitions to approve**, and **Open to receive**, shown per unit (kg and pcs are never added together). Click a tile to open its list.
3. **Queue tabs**: **Scheduled drafts to send**, **Waiting approval**, **Sent back by Owner** (shown only when there is one), **Approved – not sent**, **Sent – waiting delivery** and **All**. Counts sit beside each tab; an amber warning icon marks a queue that needs action. The page opens on Scheduled drafts when there are any, otherwise on All.
4. **Search PO, vendor or material**: filters the list as you type.
5. **Scheduled draft cards**: PO number, vendor, a violet **Scheduled by Owner · date** badge, quantity, number of materials, arrival dates as chips (for example "6 Jan · Kraft 230 GSM · 23 kg"), the send state ("Unchanged since the Owner approved: ready to send" or "Rate

needed for …"), the value and the week. The button says **Check & send**, **Fill the rate**, **Open & submit** or (for the Owner) **Open & approve**.

6. **Order table** (all other tabs): columns **PO**, **Vendor** (with PO date), **Materials**, **Next delivery** ("Confirmed" or "To confirm"), **Status**, **Sent** (channel and date, or "Not sent"), **Amount** and a button. Approved and partly received POs show **Receive**; the others show **Open**. Click anywhere on a row to open the PO.
7. **Shortcut cards** at the bottom: RM inward calendar, Expected arrivals, Goods inward (GRN) and Rate review.

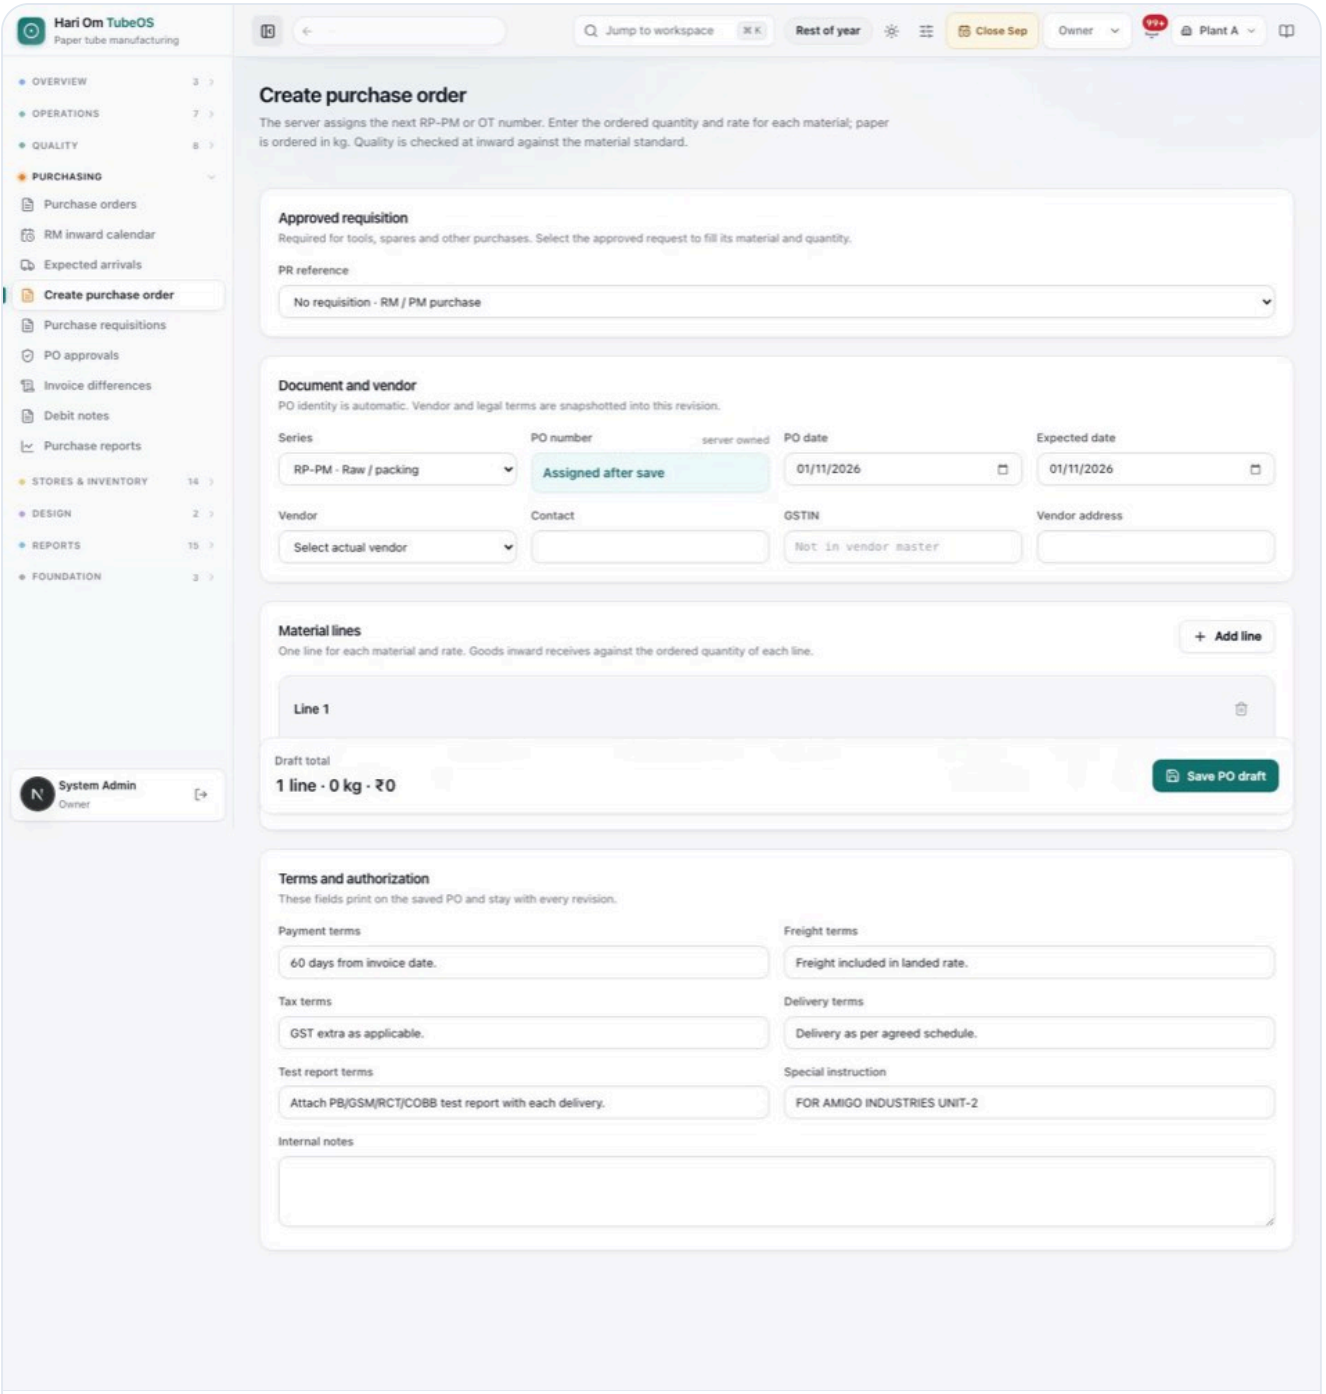



Figure: The Create purchase order form. From top: Approved requisition (PR reference), Document and vendor (Series, PO number "Assigned after save", PO date, Expected date, Vendor, Contact, GSTIN, Vendor address), Material lines with Add line, a sticky Draft total bar with Save PO draft, and Terms and authorization.

What you see:

1. **Approved requisition**: **PR reference** list. Leave it on "No requisition · RM / PM purchase" for paper, adhesive, parchment and packing. Pick an approved requisition for a tool or other purchase; the series changes to OT and the line is filled from the request.
2. **Document and vendor**: **Series** (RP-PM · Raw / packing or OT · Other), **PO number** (server owned, "Assigned after save"), **PO date**, **Expected date**, **Vendor**, **Contact**, **GSTIN**, **Vendor address**. Choosing a vendor fills contact, GSTIN, address and payment terms from the

vendor master. A grey line under the fields shows the legal name, PAN, state and MSME number saved in the master, or says to add them in Masters › Vendors.

3. **Material lines**: one card per material with **Material**, **Description**, **Ordered quantity** (in the material's unit), **Rate / kg** (or / piece), **Arrives on** (optional date for that line) and the **Line amount**. **Add line** adds another material; the bin icon removes one.
4. **Draft total** bar: lines, quantity per unit and rupee value, with **Save PO draft**.
5. **Terms and authorization**: **Payment terms**, **Freight terms**, **Tax terms**, **Delivery terms**, **Test report terms**, **Special instruction** and **Internal notes**. They come pre-filled (for example "60 days from invoice date.", "Attach PB/GSM/RCT/COBB test report with each delivery.") and print on the PO.

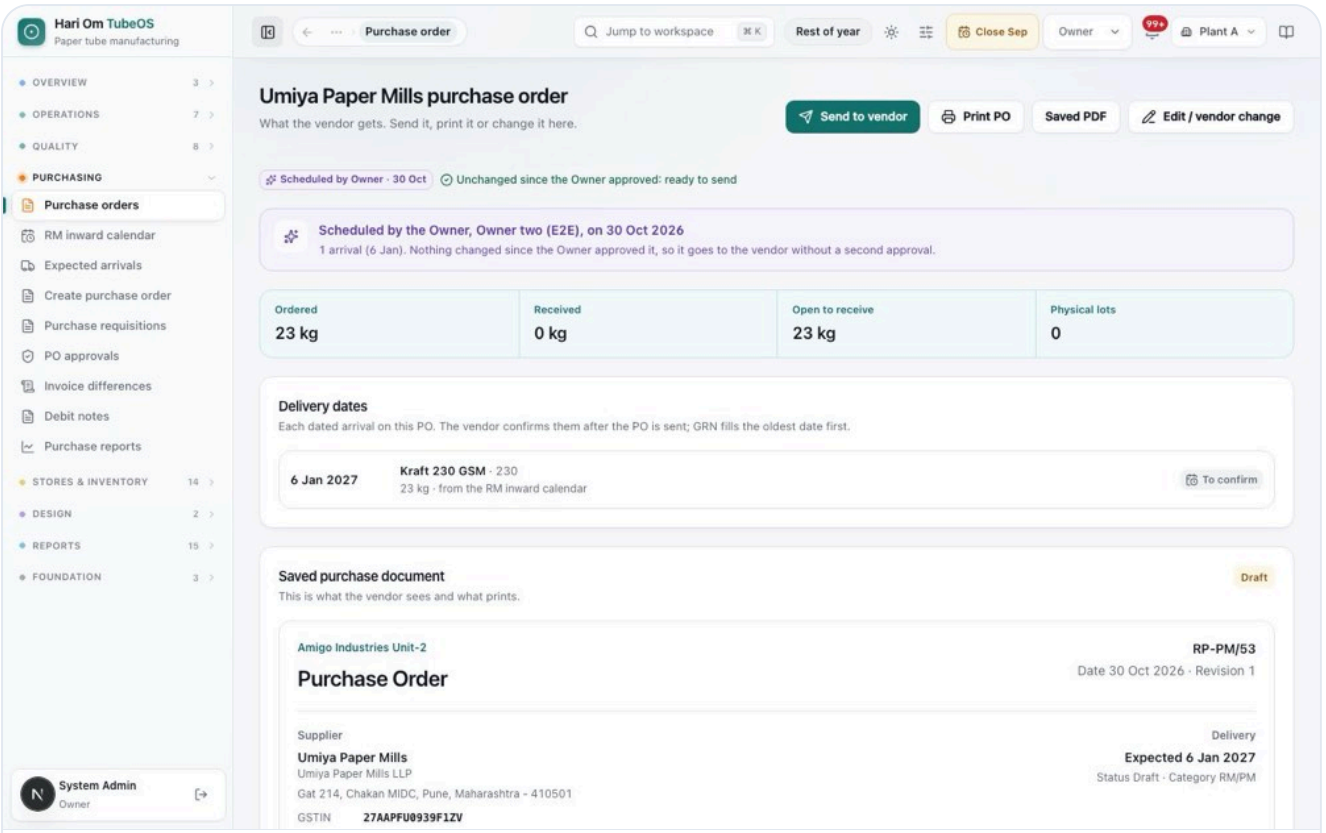



Figure: The page of RP-PM/53 for Umiya Paper Mills. Buttons at the top: Send to vendor, Print PO, Saved PDF, Edit / vendor change. A violet banner says the Owner scheduled it on 30 Oct 2026 and nothing changed since. A strip shows Ordered 23 kg, Received 0 kg, Open to receive 23 kg, Physical lots 0. Below: Delivery dates (6 Jan 2027, Kraft 230 GSM, 23 kg, To confirm) and the Saved purchase document.

What you see:

1. **Top buttons** (they change with the status): **Send to vendor** or **Send again**, **Fill the rate**, **Submit for approval**, **Approve PO**, **Receive goods (GRN)**, **Print PO**, **Saved PDF** and **Edit / vendor change**.
2. **Badges**: source (**Scheduled by Owner**, **Requisition**, **Hand-made**, **Workbook import**, **Month plan**), a **Sent on WhatsApp · date** chip, **Vendor confirmed** and the send state in words.

3. **Scheduled banner** (Owner-scheduled POs only): who scheduled it, the arrival dates, and a list headed "Changed since the Owner approved it" when the desk changed something.
4. **Quantity strip**: **Ordered**, **Received**, **Open to receive**, **Physical lots** (reels and coils received so far).
5. **Delivery dates**: one row per dated arrival with its state (**To confirm**, **Confirmed**, **Received**). After sending, the desk records the vendor's date with **Confirm** or **Vendor confirmed all**. **Make GRN** opens goods inward for that line. GRN fills the oldest date first.
6. **Saved purchase document**: exactly what the vendor gets: supplier block (name, address, GSTIN, PAN, state, MSME, contact), lines with rate and amount ("Rate needed" in amber when a rate is missing), delivery dates, terms, "Prepared / checked by" and "Approved by … on …".
7. Further down: **Approval** panel (status, what is next, decision reason, close and cancel buttons) and **Revision history** (every revision, who made it, who approved it).

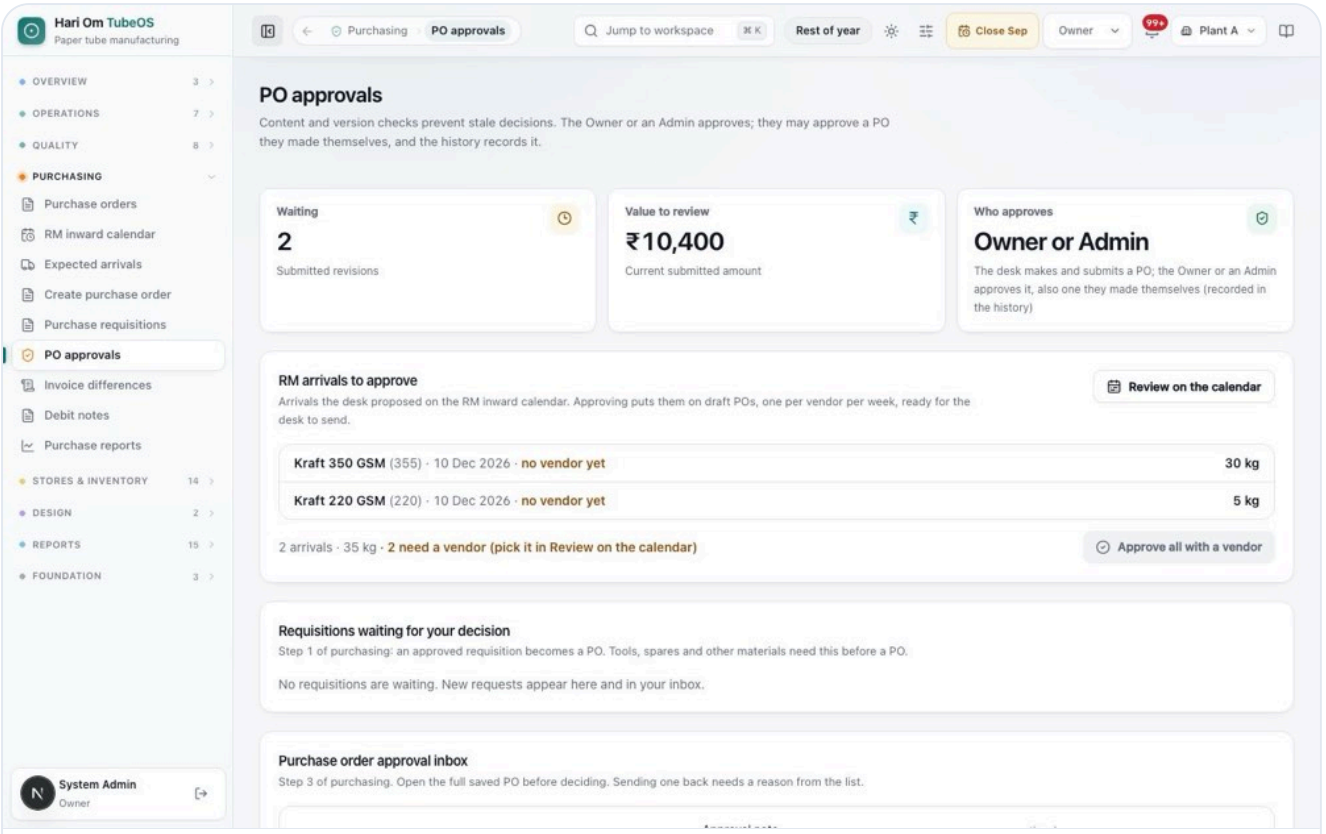



Figure: PO approvals as the Owner sees it. Tiles: Waiting 3, Value to review ₹10,700, Who approves "Owner or Admin". Panels: RM arrivals to approve (two arrivals with "no vendor yet" and a disabled Approve all with a vendor button), Requisitions waiting for your decision, and Purchase order approval inbox.

What you see:

1. **Tiles**: **Waiting** (submitted revisions), **Value to review** and **Who approves**.
2. **RM arrivals to approve** (Owner only): arrivals proposed on the RM inward calendar, with **Review on the calendar** and **Approve all with a vendor**. An arrival with "no vendor yet" cannot be approved until a vendor is picked.

3. **Requisitions waiting for your decision** (Owner only): each request with an **Approval note (optional)**, a **Reason to reject** picker, **Approve** and **Reject**.
4. **Purchase order approval inbox** ("Step 3 of purchasing. Open the full saved PO before deciding. Sending one back needs a reason from the list."): each submitted PO with its revision, vendor, materials, quantity and value, an **Approval note** (optional), a **Reason to send back** picker (list **Purchase approval rejected**), **Approve** and **Reject**. Click the PO number to read the full PO first.

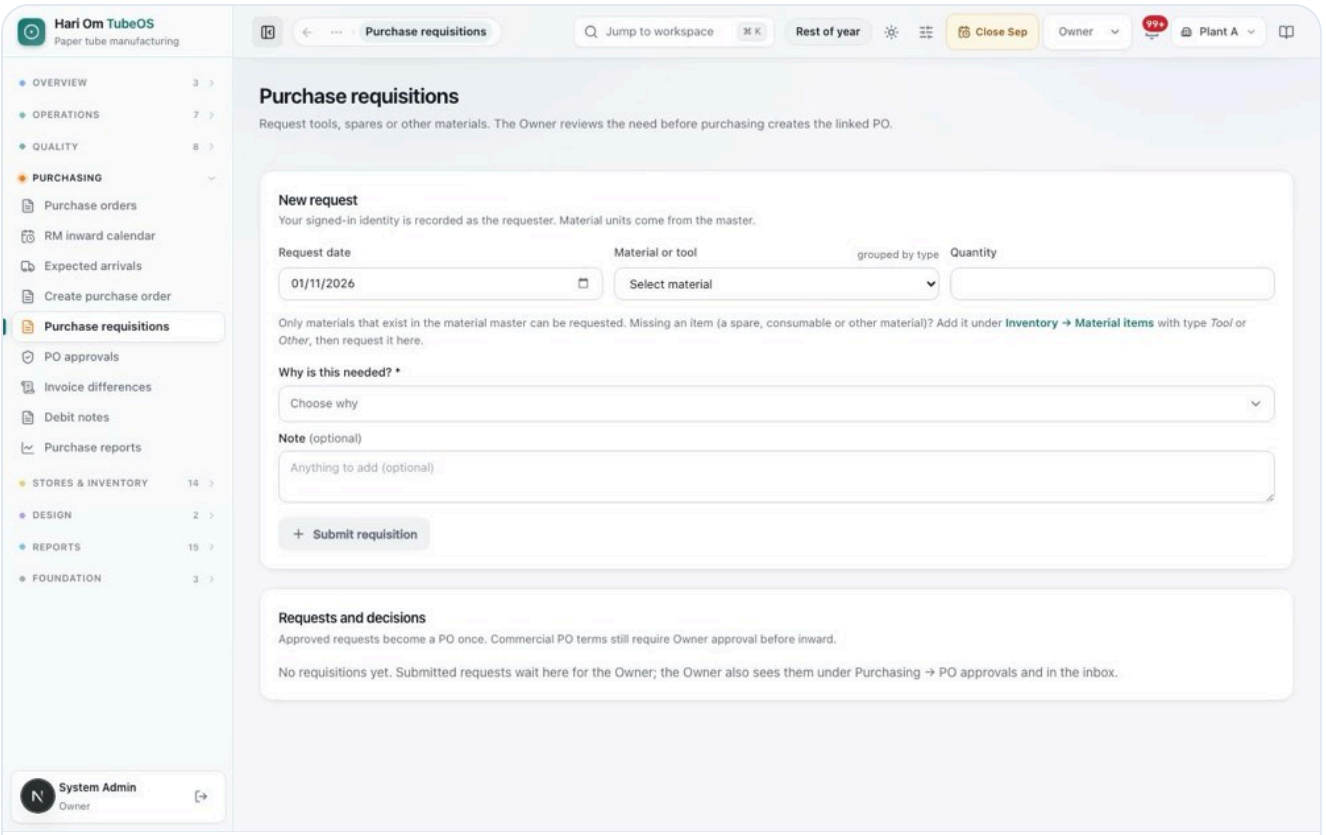



Figure: Purchase requisitions. A New request panel has Request date, Material or tool (grouped by type), Quantity and "Why is this needed?", with Submit requisition. Below, Requests and decisions lists the requests.

What you see:

1. **New request**: **Request date**, **Material or tool** (grouped as Paper, Adhesive, Parchment, Packaging, Tools / spares, Other materials), **Quantity** (unit from the master) and **Why is this needed?**. A link explains how to add a missing item under Inventory → Material items with type Tool or Other.
2. **Requests and decisions** (Owner) or **Requisition register** (others): each request shows its PR number, material, quantity, date, requester, status and reason. Approved ones show **Create linked PO**; converted ones show **Open linked PO**. **History** lists every step. Roles other than Owner, Admin, Store, Planner and Plant Manager see only their own requests.

## Step by step

### How to create a purchase order

Roles: Store, Plant Manager, Owner, Admin. (A Planner who opens the page is told to propose the arrival on the RM inward calendar instead.)

1. Click **New purchase order** on the Purchase orders page, or **Create purchase order** in the sidebar.
2. For paper or packing, leave **PR reference** on "No requisition". For a tool or spare, pick the approved requisition.
3. Check **Series** (RP-PM or OT), **PO date** and **Expected date**.
4. Pick the **Vendor**. Contact, GSTIN, address and payment terms fill in; correct them if needed.
5. In **Line 1**, pick the **Material**, type the **Ordered quantity** and **Rate**. Add **Arrives on** if this line comes on a different day from the expected date.
6. Click **Add line** for each further material. The **Draft total** updates.
7. Check the terms, then click **Save PO draft**. The system checks every line has a material, a quantity above 0 and a rate of 0 or more; otherwise you see "Select a vendor and complete every material, quantity and rate before saving." The PO opens with its new number, status **Draft**, and one dated delivery row per line.

### How to submit a PO for approval

Roles: Store, Planner, Plant Manager (Owner and Admin also can).

1. Open the draft PO.
2. If a line shows "Rate needed", click **Fill the rate** and enter it. Submit opens only when every line has a rate.
3. Optionally type a **Note for the Owner** in the Approval panel.
4. Click **Submit for approval**. The status becomes **Waiting approval**, and the PO appears in the Owner's PO approvals inbox.

### How to approve or reject a PO

Roles: Owner or Admin. They may also approve a revision they made themselves; the history then says "approved by the same person".

1. Open **PO approvals**, or open the PO itself.
2. Click the PO number and read the saved document and the revision history.
3. To approve, optionally type an **Approval note** and click **Approve**. The PO becomes **Approved**; the desk sends it next, and GRN can now receive against it.

4. To reject, pick the **Reason to send back** from **Purchase approval rejected** (PJ-RATE-HIGH Rate too high, PJ-NOT-NEEDED Not needed now, PJ-STOCK-OK Enough stock in hand, PJ-WRONG-VENDOR Wrong supplier, PJ-WRONG-ITEM Wrong item or quantity, PJ-BUDGET Over budget, PJ-OTHER), add a note if useful, and click **Reject**. The PO becomes **Rejected** and appears under **Sent back by Owner**. On the RM inward calendar its arrivals show **PO rejected** and no longer count as cover.

## How to send a PO to the vendor

Roles: Store, Planner, Plant Manager, Owner.

1. Open the approved PO (or an unchanged Owner-scheduled draft) and click **Send to vendor**.
2. Pick **WhatsApp**, **Email**, **Download PDF** or **Print**. The send is recorded with your name and time. WhatsApp shares the PDF on a phone, or downloads it and opens WhatsApp on a computer; Email opens a ready message and downloads the PDF to attach.
3. The sheet shows the **Message the vendor gets**, for example "Purchase order RP-PM/54 (revision 1) from Amigo Industries Unit-2 to Bharat Paper Mills. ... Please confirm the dates. The PO PDF is attached."
4. Already sent it by phone or by hand? Open **Already sent it outside TubeOS? Record it** and click the channel used. Nothing is downloaded; only the send is noted.
5. To send again after a revision, use **Send again**.

## How to record the vendor's confirmed dates

1. On the PO, under **Delivery dates**, change the date if the vendor gave a different one (today or later) and click **Confirm**, or click **Vendor confirmed all**.
2. The row turns **Confirmed** and shows "was 6 Jan" if the date moved. You can also do this from Expected arrivals.

## How to change an approved PO (revision)

Roles: Store, Planner, Plant Manager, Owner, Admin.

1. Click **Edit / vendor change**.
2. Type the **Change reason** (required, at least 3 characters).
3. Change vendor, quantity, rate or terms. You cannot remove a line that has goods received, lower a quantity below what was received, or change the material of a received line.
4. Click **Save revision for reapproval**. A new revision number is made with status **Draft**; submit it for approval again. If it had been sent, the PO must be sent again.

A draft that was never approved or sent is just edited: the button says **Save draft** and no reason is needed.

### How to short-close or cancel a PO

Roles: Plant Manager, Owner (Admin also passes).

1. **Short-close**: on an approved or partly received PO, pick the **Close reason** from **PO cancel / short close** (PC-SUPPLIER-CANNOT Supplier cannot supply, PC-NOT-NEEDED Balance not needed, PC-RATE Rate changed or not agreed, PC-DELAY Supplier delayed too long, PC-QUALITY Quality problems with the supplier, PC-DUPLICATE Duplicate PO, PC-ENTRY-ERROR PO made by mistake, PC-OTHER) and click **Short-close remaining quantities**. The open balance is closed and its delivery rows are cancelled.
2. **Cancel**: on a Draft, Waiting approval, Rejected or Approved PO with nothing received, pick the reason from the same list and click **Cancel unreceived PO**. History is kept.

### How to raise and approve a requisition

1. Anyone: open **Purchase requisitions**, fill **Material or tool**, **Quantity** and **Why is this needed?**, then click **Submit requisition**. A PR number like PR-261031-001 is given and the Owner is notified.
2. Owner: open the requisition (or PO approvals). To approve, add an optional note and click **Approve request**; to reject, pick a **Reason to reject** (list **Purchase approval rejected**) and click **Reject**.
3. Store or Plant Manager: click **Create linked PO**. The PO form opens with the OT series and the requested material and quantity. Add the vendor and rate, save and submit.

### How to print or download a PO

- **Print PO** prints the page. **Saved PDF** opens the PDF of the current revision. **Export full register** (list page) and **Print and exports** go to the purchase registers.

## Rules the system enforces

- **BLOCKS:** only Store, Plant Manager, Owner and Admin can create a PO. Only the Owner or an Admin can approve or reject one ("Only the Owner or an Admin may decide purchase order approval").
- **BLOCKS:** a rejection needs a **Purchase approval rejected** code; short-close and cancel need a **PO cancel / short close** code. Codes with OTHER need a note of at least 5 characters, and free text alone is refused. The **Change reason** of a PO revision is still typed in words (at least 3 characters).
- **BLOCKS:** a scheduled draft with a missing rate cannot be approved: "Fill the rate for … first (Edit / vendor change)."

- **BLOCKS:** paper lines must be in kg ("Paper PO line 1 must use KG"). Each line's unit must match the material master.
- **BLOCKS:** a PO of the OT series, or with a Tool or Other item, needs an Owner-approved requisition ("Tools and other purchases require an Owner-approved requisition before PO creation"). The PO must match the requisition's material, unit and quantity. A requisition becomes a PO only once.
- **BLOCKS:** the series cannot change after the number is given. The vendor cannot change after any inward; short-close the balance and make a new PO.
- **BLOCKS:** a closed PO (Received, Cancelled, Short-closed) cannot be revised. A PO with goods received cannot be cancelled; use short-close.
- **BLOCKS:** if someone else changed the PO while you had it open, you see "Purchase order changed; reload before ...". Reload and try again.
- **AUTOMATIC:** the PO number (RP-PM/NN or OT/NN), incoming QC on every line, one dated delivery row per line (the line's own date, else the expected date), and a snapshot of vendor details and terms on every revision.
- **AUTOMATIC:** sending an unchanged Owner-scheduled draft approves it on the Owner's schedule approval. Any change to quantity, date, vendor or rate means the Owner must approve again; a change the Owner makes himself counts as his approval.
- **AUTOMATIC:** a revision of a sent PO clears the "sent" state; the PO shows "Send again".
- **WARNS:** a revision saved without a GSTIN shows an amber note when the vendor master now has one, asking for a new revision so it prints.

## Sample

Store makes a PO for Bharat Paper Mills on 31 Oct 2026.

| Line | Material | Ordered | Rate | Amount |
|---|---|---|---|---|
| 1 | Kraft 230 GSM | 2,000 kg | ₹44.50 / kg | ₹89,000 |
| 2 | Kraft 300 GSM | 1,500 kg | ₹46 / kg | ₹69,000 |

**Save PO draft** gives **RP-PM/54**, Draft, total "2 lines · 3,500 kg · ₹1,58,000". Store clicks **Submit for approval**. The Owner approves it with the note "Rates as agreed on call". Store clicks **Send to vendor** › **WhatsApp**; the chip reads "Sent on WhatsApp · 31 Oct". Bharat Paper Mills confirms 6 Nov for line 1 and 10 Nov for line 2; Store records both. On 6 Nov the truck brings 2,012 kg of Kraft 230 GSM, which Store receives with **Make GRN** (see the Goods inward chapter).

## Common questions

**Why can't I see the New purchase order button?**

Only Store, Plant Manager, Owner and Admin make POs. A Planner proposes arrivals on the RM inward calendar; when the Owner approves them, the draft PO is made automatically.

**Where do I type the PO number?**

You don't. The system gives the next RP-PM or OT number when you save the draft, and it never changes, even after revisions.

**Where is the "Incoming QC required" tick?**

It was removed. Every PO line now needs incoming QC, and QC checks each delivery against the material standard.

**A scheduled draft says "Rate needed". What do I do?**

Click **Fill the rate**, enter the vendor's rate and save. If the Owner did not make this change himself, the PO then goes to him for approval before it can be sent.

**The Owner rejected my PO. Can I fix it?**

Yes. Open it from **Sent back by Owner**, read the reason in the history, click **Edit / vendor change**, fix it and submit again. Or cancel it.

**Can an Admin approve a PO they made?**

Yes. The Owner and an Admin may approve their own PO; the history records "approved by the same person". RM arrivals and requisitions are approved by the Owner only.

**Can I receive goods on a PO that is still waiting approval?**

No. Goods inward lists only approved POs with an open balance. Ask the Owner or an Admin to approve it.

**? The vendor will not send the last 120 kg. How do I close the PO?**

The Plant Manager or Owner picks a close reason (for example PC-SUPPLIER-CANNOT) and clicks **Short-close remaining quantities**.

**? I changed a sent PO. Does the vendor get it automatically?**

No. The PO shows "Revision 2 approved; send it again". Use **Send again**.

## Related chapters

- RM inward calendar and expected arrivals
- Goods inward, GRN register and labels
- Invoice differences, debit notes and purchase reports
- Vendors and other masters
- Dashboard and inbox

# RM inward calendar and expected arrivals


**What it is:** the RM inward calendar shows, for every raw and packing material, what the plant needs day by day, what is in stock and what is arriving. The desk proposes arrivals, and the Owner approves them into draft POs. Expected arrivals is the daily list of what vendors should deliver, with **Make GRN** on each row.
**Who uses it:** Planner, Store and Plant Manager propose arrivals. Only the Owner approves them. The purchase desk (Store, Planner, Plant Manager, Owner) records the dates vendors promise. GRN reads both pages and makes the GRN.
**Where:** Sidebar > Purchasing > RM inward calendar (/purchase/scheduler) and Sidebar > Purchasing > Expected arrivals (/purchase/supplier-deliveries)

## At a glance

- **Need, stock and arrivals in one grid.** Each day's balance = the previous day's balance + counted arrivals – need, starting from usable stock now. A day below zero (or below the minimum stock) shows **Short**.
- **A proposal is not cover.** A **Proposed** arrival is not counted until the Owner approves it. After approval it counts as arriving, and it goes onto a draft PO, one PO per vendor per week, tagged **Scheduled by Owner**.
- **Stock waiting for incoming QC is not an arrival.** It is already in the store, so it counts as stock from tomorrow, never twice.
- **Expected arrivals lists only approved POs** with an open quantity, in four groups: **Overdue**, **Today**, **This week** (until Sunday) and **Later**.
- **Vendor dates are recorded, not guessed. Confirm** records the date the vendor gives. **Change date** needs a reason code from **Supplier schedule change**. A date can only be today or later.

## The flow

### From shortage to goods in the store

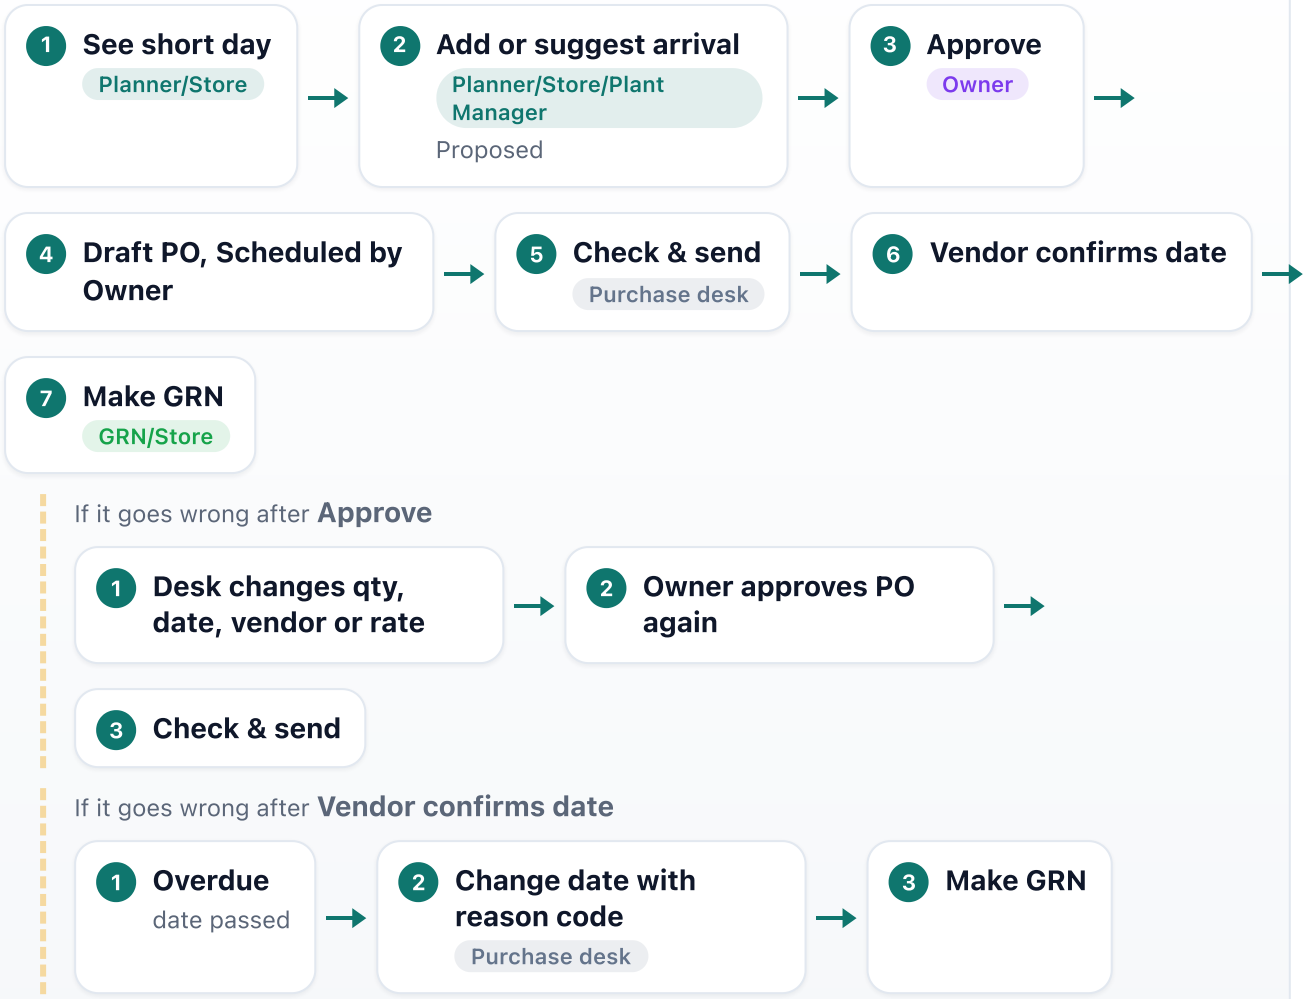


The calendar is where buying is decided; the purchase orders page is where the drafts are sent (see the Purchase orders chapter); Expected arrivals is where the store watches the trucks.

## Screen tour

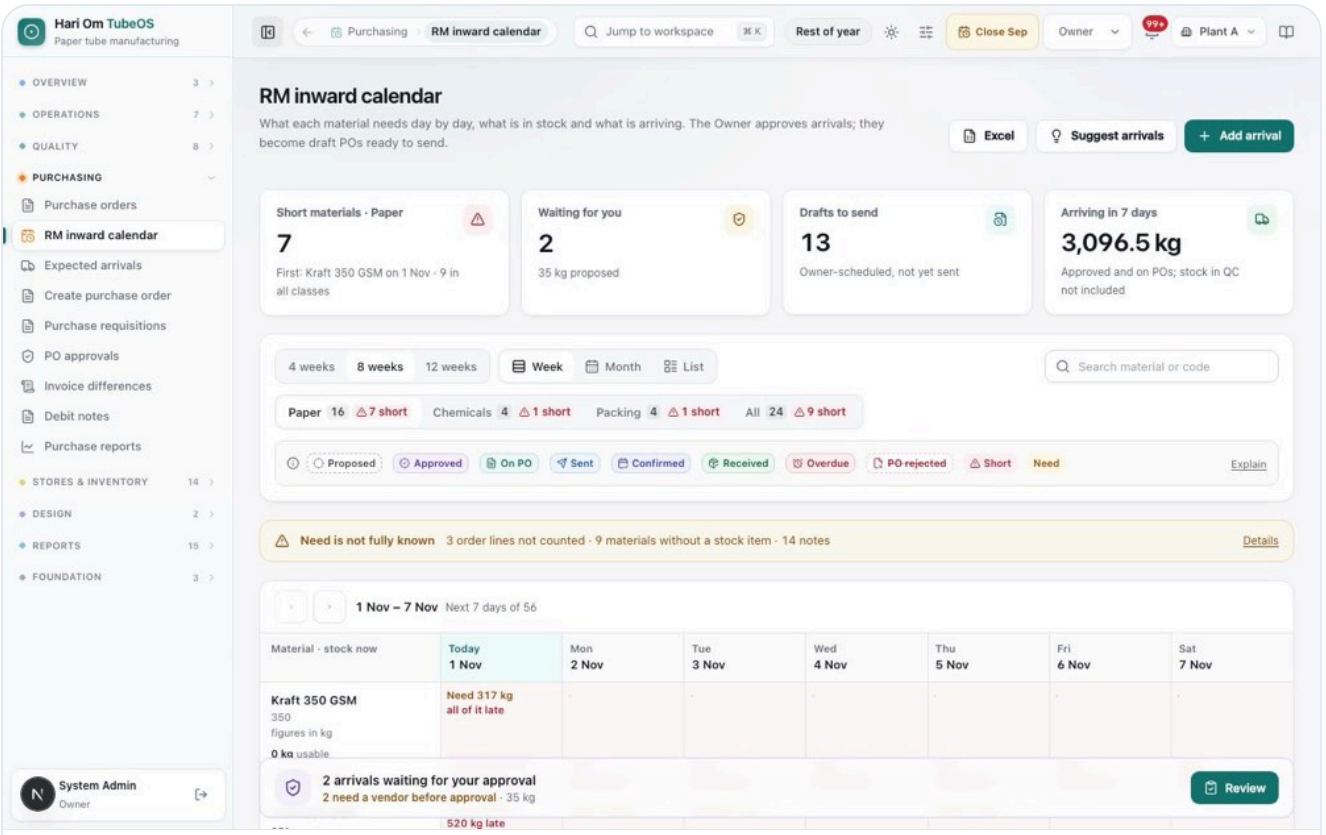



Figure: The RM inward calendar on 31 Oct. Buttons: Excel, Suggest arrivals, Add arrival. Tiles: Short materials · Paper 8 (first: Kraft 350 GSM on 31 Oct, 10 in all classes), Waiting for you 2 (35 kg proposed), Drafts to send 13, Arriving in 7 days 3,096.5 kg. Below: window and view switches, class tabs with short counts, the colour legend, an amber "Need is not fully known" bar, and the week grid starting Today 31 Oct. A floating bar says "2 arrivals waiting for your approval" with a Review button.

What you see:

1. **Header buttons**: **Excel** (download the view or import a schedule workbook), **Suggest arrivals** and **Add arrival**. Roles that cannot propose (GRN, Admin) see **Excel** and **Expected arrivals** instead.
2. **Tiles**: **Short materials** (for the chosen class, with the first short material and date; click to open it), **Waiting for you** (Owner) or **Waiting for the Owner** (others; click to review), **Drafts to send** (opens the scheduled drafts queue) and **Arriving in 7 days** (approved and on POs; stock in QC not included).
3. **Window**: **4 weeks**, **8 weeks** (default) or **12 weeks**. **View**: **Week**, **Month** or **List** (phones open in List). **Search material or code**.
4. **Material class tabs**: **Paper**, **Chemicals**, **Packing**, **All**, each with a count and a "short" badge.

5. **Legend** (click **Explain** for the meanings): **Proposed** (dashed; not counted), **Approved** (counted as arriving), **On PO** (on a PO not yet sent), **Sent**, **Confirmed** (vendor confirmed the date), **Received** (GRN done), **Overdue** (date passed; counted on today), **PO rejected** (struck through; not counted), **Short** and **Need**.
6. **Need is not fully known** bar: order lines that could not be counted, materials with no stock item to plan against (with a link to link them in Items) and other notes. Click **Details**.
7. **Week grid**: one row per material with stock now ("0 kg usable"), one column per day. Each cell shows the need ("Need 317 kg, all of it late"), arrival chips and the balance. Late need (due before today) sits on today. Use the arrows to move week by week. Click a cell to open the material's day sheet. You can drag an arrival chip to another day.
8. **Owner bar** (Owner only, floating at the bottom): "2 arrivals waiting for your approval · 2 need a vendor before approval" with **Review**.

The **material sheet** (opened from a cell or list row) shows the day: **Need that day**, **Arriving (counted)**, **Balance at day end**, **If proposals approved**, **Usable stock now**, **Waiting for QC** (and from which day it counts) and the window totals. It lists where the need comes from (Planned on the floor, Released card not planned yet, Order line due not released, Customer call-off) and each arrival with its PO and state. The **Add an arrival** form inside it has **Material**, **Arrives on**, **Quantity** (with the short amount as a hint), **Vendor** (hint: last vendor) and **Note**.

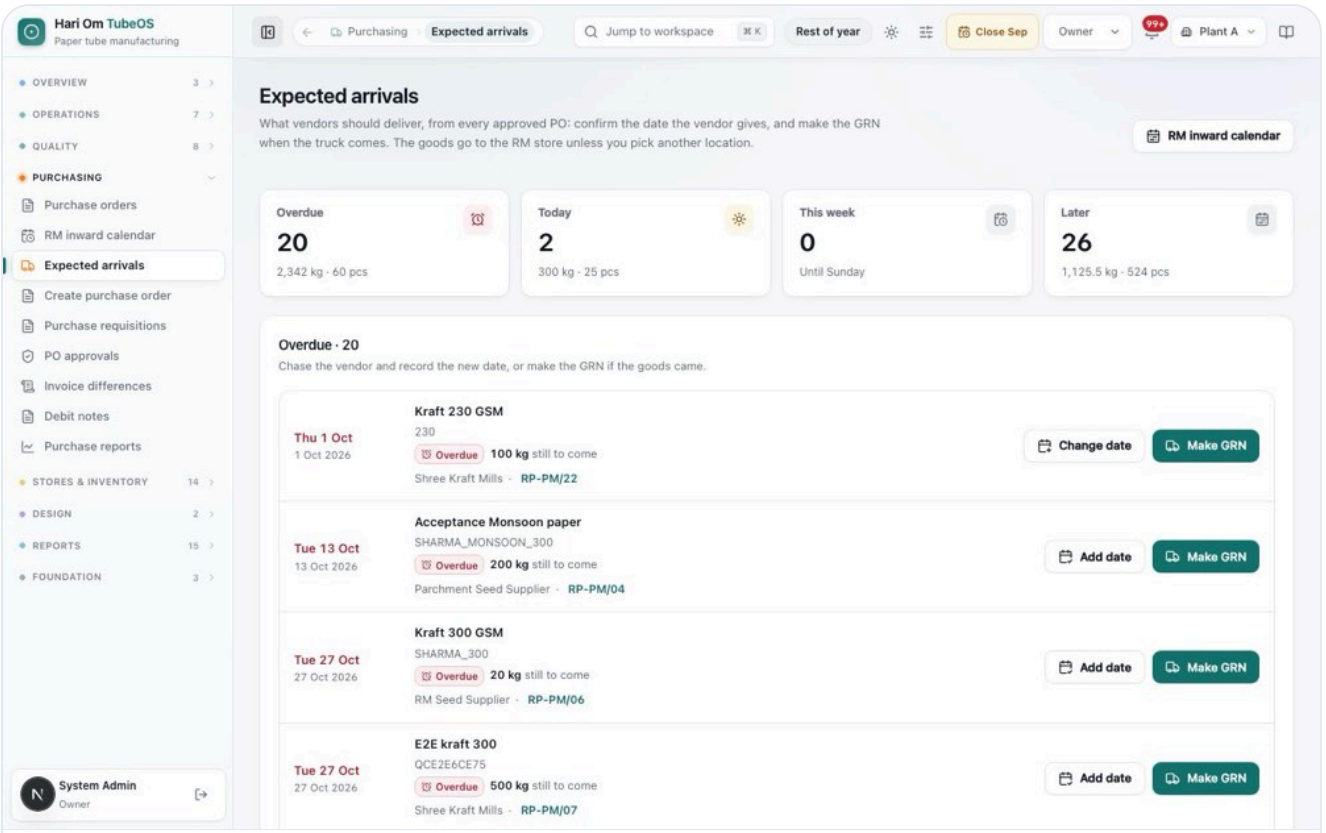



Figure: Expected arrivals. Tiles: Overdue 13 (1,920 kg), Today 9 (722 kg · 85 pcs), This week 0 (Until Sunday), Later 26 (1,675.5 kg · 524 pcs). The Overdue · 13 list shows rows such as "Thu 1 Oct · Kraft 230 GSM · Overdue · 100 kg still to come · Shree Kraft Mills · RP-PM/22" with Change date and Make GRN, and other rows with Add date and Make GRN.

What you see:

1. **RM inward calendar** button (top right).
2. **Bucket tiles**: **Overdue**, **Today**, **This week**, **Later**: number of rows and the open quantity per unit. Click a tile to jump to its list.
3. **Bucket lists**: each row shows the day ("Thu 1 Oct", in red when overdue) and full date ("· no date on PO" when the PO has no dated row), the material name and code, a state chip, "100 kg still to come" (with what was already received), the vendor and the PO number (a link for the desk).
4. **Row buttons**: **Confirm** (or **Add date** when the PO line has no dated row yet), **Change date** and **Make GRN**. A confirmed row shows only Change date and Make GRN.
5. **Confirm / Change date form** (opens under the row): **Date the vendor gives** or **New date**, **Note** (optional) or **Why it moved** (required: a code from **Supplier schedule change**, with a note), **Save** and **Close**.
6. **Add a delivery date to a PO** (folded panel at the bottom, desk roles): for hand-made POs and split deliveries. Fields **Purchase order**, **Material** (shows the open quantity), **Quantity**, **Arrives on**, **Vendor confirmation** (Not confirmed yet / Vendor confirmed) and **Save delivery date**.

## Step by step

### How to read whether a material is short

1. Open **RM inward calendar**, pick the class tab (for example **Paper**) and the window.
2. Look at the **Short materials** tile, or the red **Short** cells in the grid. In **List** view the **Runs short** column gives the first short day.
3. Click the material to open its sheet. Compare **Balance at day end** with **If proposals approved** to see whether the proposals already waiting would fix it.

### How to propose an arrival

Roles: Planner, Store, Plant Manager, Owner.

1. Click **Add arrival** (or **Add an arrival** inside a material sheet).
2. Pick the **Material**, the **Arrives on** date (today or later) and the **Quantity**. The hint shows how much is short.
3. Pick the **Vendor**. The hint shows the last vendor. An arrival can be proposed without a vendor, but it cannot be approved until it has one.
4. Add a **Note** if useful (truck, grade, reason) and click **Propose arrival**. The chip shows **Proposed** and the Owner gets a notice.

5. The Owner sees an extra button, **Add and approve**, which proposes and approves in one step.

## How to use Suggest arrivals

1. Click **Suggest arrivals**. The system works out "Arrivals that close the shortages": each shortage gets an arrival the day before, enough for the following week, rounded up to the minimum order and order multiple, from the last vendor.
2. Each suggestion shows the material, quantity, date, vendor ("no vendor yet" in amber) and, where relevant, "order by ..." or "late to order (lead time)" in red.
3. Untick any you do not want and click **Add N as proposals**. Nothing is saved until you click this button.

## How to import a schedule from Excel

1. Click **Excel** › **Import a schedule workbook** and choose the .xlsx file. The first dated block is read: one column per material (its code) and one row per date.
2. Match any column the system did not recognise (**Match a material...** or **Leave this column out**) and pick the unit the sheet uses (a kg column is never added to pieces). Past dates are left out.
3. Confirm. Every quantity becomes a proposed arrival for the Owner. **Download this view** gives the current grid as Excel.

## How to approve arrivals (Owner)

1. Click **Review** on the Owner bar, the **Waiting for you** tile, or **Review on the calendar** on PO approvals.
2. In the review sheet, pick a vendor for any arrival that has none ("Pick a vendor to approve it").
3. Click **Approve all**, or approve one week from the week grid. The message says, for example, "2 arrivals approved. 1 PO draft ready to send: RP-PM/55 (Bharat Paper Mills)", with a link **Open drafts to send**. Arrivals that could not be approved are listed with the reason ("needs a vendor", "was cancelled", "not an active vendor of this plant").
4. Arrivals of the same vendor in the same week go on one draft PO. The rate is the vendor's last Owner-approved PO rate for that material, else the RM costing base rate, else "Rate needed".

## How to move or cancel an arrival

1. Drag the chip to another day, or open it in the material sheet and change **Arrives on** or **Quantity**.
2. A proposal changes freely. An approved arrival can be changed only by the Owner. An approved arrival keeps its vendor; to change vendor, cancel it and propose a new one.

3. If the PO was already sent, the system asks "PO already sent — change the PO?". **Change the PO** makes a new PO revision with the new date (quantities and rates stay approved); send it to the vendor again. **Keep the date** leaves it.
4. After the PO is approved, the quantity is fixed on the calendar; change it on the PO itself (Edit / vendor change), which goes to the Owner again.
5. To cancel an arrival, open it in the material sheet, pick **Reason to cancel (only for Cancel arrival)** from **Supplier schedule change**, and click cancel. The message says "Kraft 230 GSM arrival of 6 Nov cancelled."

### How to confirm or change a vendor's date

Roles: Store, Planner, Plant Manager, Owner.

1. Open **Expected arrivals** and find the row.
2. Click **Confirm**, set **Date the vendor gives** (today or later), add a note such as "Confirmed on call", and click **Save**. The chip becomes **Confirmed**.
3. If the date moves, click **Change date**, set **New date**, pick **Why it moved** (SCH-SUPPLIER-DELAY Supplier asked to delay, SCH-PLAN-CHANGE Production plan changed, SCH-STOCK-OK Enough stock in hand, SCH-TRANSPORT Transport problem, SCH-RATE Rate or terms under discussion, SCH-OTHER), add a note such as "Mill shut, truck late" and click **Save**.

### How to make a GRN from an arrival

Roles: GRN, Store, Plant Manager, Owner, Admin.

1. When the truck arrives, click **Make GRN** on the row (Expected arrivals, the PO's delivery dates, or the calendar sheet).
2. Goods inward opens with the vendor, the PO and the material line already filled. Continue as in the Goods inward chapter. The received quantity fills the oldest open date first.

## Rules the system enforces

- **BLOCKS:** only the Owner approves arrivals (an Admin alone cannot). Proposing is for Planner, Store, Plant Manager and Owner.
- **BLOCKS:** an arrival needs a quantity above 0 and a date of today or later ("Arrival 1: pick today or a later day"). Arrivals without a vendor are skipped at approval ("... needs a vendor").
- **BLOCKS:** "Only the Owner can change an approved arrival." "An approved arrival keeps its vendor. Cancel it and propose a new one for the other vendor."

- **BLOCKS:** once the PO is past draft, the quantity cannot change on the calendar ("... is past draft. Change the quantity on the PO itself (Edit / vendor change), which goes to the Owner again.").
- **BLOCKS:** a vendor date in the past is refused ("... has passed. Pick today or a later day."). **Change date** and **Cancel arrival** need a **Supplier schedule change** code (OTHER needs a note of at least 5 characters).
- **BLOCKS:** vendor confirmation is for approved POs: "Send the approved PO to the vendor first; the vendor confirms an approved PO." Delivery rows cannot add up to more than the PO line's open quantity.
- **ASKS:** moving an arrival on a sent PO asks "PO already sent — change the PO?" before making a new revision.
- **AUTOMATIC:** balance per day; late need placed on today; overdue arrivals counted on today; QC-pending stock counted from tomorrow; received goods counted as stock only once; packing material (boxes, plastic, fadda) for a card counts as needed until its Packing step closes.
- **AUTOMATIC:** approval places arrivals on one draft PO per vendor per week and fills the rate as described above. A rejected PO's arrivals stop counting as cover until it is revised and approved.

## Sample

On 31 Oct the Planner opens **Paper** on the calendar. **Kraft 350 GSM** shows 0 kg usable, need 317 kg on today (all of it late) and **Short from 31 Oct**. She clicks **Suggest arrivals**; the suggestion is 450 kg on 3 Nov from Bharat Paper Mills (rounded up to the 50 kg order multiple). She adds it as a proposal. The **Waiting for you** tile on the Owner's screen goes to 1.

The Owner clicks **Review** and **Approve all**: "1 arrival approved. 1 PO draft ready to send: RP-PM/55 (Bharat Paper Mills)." The rate comes from the last approved PO, ₹47.25 / kg. Store opens **Scheduled drafts to send**, clicks **Check & send** › **WhatsApp**. Bharat Paper Mills says 4 Nov; Store records it with **Confirm**. On 4 Nov the row is under **Today** in Expected arrivals; GRN clicks **Make GRN**.

| Day | Need | Counted arrivals | Balance at day end |
|---|---|---|---|
| Sat 31 Oct | 317 kg | 0 | –317 kg (Short) |
| Wed 4 Nov | 120 kg | 450 kg | 13 kg |

## Common questions

**I proposed 500 kg but the balance did not change. Why?**

A proposal is not counted until the Owner approves it. Look at **If proposals approved** in the material sheet to see the effect.

**Reels are in the store but the calendar still says short. Why?**

Reels waiting for incoming QC count from tomorrow, not today. If QC rejects them they never count. Ask QC to inspect them.

**Why can't I approve arrivals?**

Only the Owner approves arrivals. Admin and the desk can pick a vendor for an arrival so it is ready for him.

**The Owner approved arrivals but nothing came to the vendor.**

Approval makes a draft PO. The desk must still open **Scheduled drafts to send** and click **Check & send**.

**What does "Need is not fully known" mean?**

Some order lines could not be turned into material need, or a material has no stock item linked. Click **Details**; link missing materials in Inventory › Items.

**An arrival shows "Overdue". Is it still counted?**

Yes, an overdue arrival that is not received is counted on today. Chase the vendor and use **Change date**, or make the GRN if the goods came.

**A row in Expected arrivals shows "Add date" instead of "Confirm".**

That PO line has no dated delivery row yet. **Add date** creates one with the date the vendor gives.

**Why is my approved PO not in Expected arrivals?**

Only approved and partly received POs with an open quantity are listed. A draft or a PO waiting approval is not expected yet.

## Related chapters

- Purchase orders, PO approvals and requisitions
- Goods inward, GRN register and labels
- Inventory, material items, manual FG, stock alerts and RM costing
- Planner (where the need comes from)
- Incoming QC

PURCHASING, STORES AND INWARD

# Invoice differences, debit notes and purchase reports

**What it is:** the commercial side of buying. **Invoice differences** lists every case where the vendor's invoice or challan does not match the approved PO (rate, quantity or specification) or where QC-rejected goods were returned; its **Weight differences** tab lists every bill whose scale weight at incoming QC came short of the bill weight. **Debit notes** turns positive differences into claims on the vendor and tracks their settlement. **Purchase reports** gives the complete purchase registers in Excel, CSV and print.
**Who uses it:** the plant head (Plant Manager) or Accounts decides differences and runs debit notes; the Owner and Admin can too. The Owner (or Admin) decides weight differences between the two limits. Store can view invoice differences. Store, Planner, Plant Manager, Accounts, Owner and Admin use the reports.
**Where:** Sidebar > Purchasing > Invoice differences (/purchase/discrepancies), Debit notes (/purchase/debit-notes), Purchase reports (/purchase/registers)

## At a glance

- **A difference never changes the PO.** The approved PO rate stays as it was. Accepting a difference, keeping a claim open and releasing stock are separate, recorded decisions.
- **Any rate difference opens a case.** If the invoice (or challan) rate is different from the PO rate by any amount, a **Rate** case opens when the GRN is posted or the invoice is attached. Higher rates show in red as a claim; lower rates show in green as a favourable difference, never silently netted.
- **Invoice questions never hold paper back.** Incoming QC is the only gate for issue. A rate case goes to the plant head or Accounts but does not stop the reels from being issued once QC passes them.
- **The person who made the GRN cannot decide its case.** Another person must accept or release it, and another person must approve a debit note.
- **Weight short is checked per bill.** When QC has weighed every lot of a bill, the short kg (rejected lots left out) decide the band: **up to 20 kg** recorded only; **20 to 50 kg** the Owner decides (**Make debit note** or **Skip...** with a reason); **above 50 kg** a Quantity case and a debit-note draft are made automatically. The limits are per plant and set by the Owner in System › Plants. Stock always stays on the bill weight.
- **A debit note has four steps:** Draft › Submitted › Approved › Issued, then settlements until it is **Settled**. Issuing does not mean the money came back.

## The flow

### From invoice difference to settled claim

1. **GRN posted or invoice attached** — Store/GRN
2. **Case opens** — Rate, Quantity, Specification
3. **Review** — Plant Manager/Accounts
4. **Open debit note** — Plant Manager/Accounts — Draft
5. **Submit**
6. **Approve** — another person
7. **Issue immutable note**
8. **Record settlement** — Settled


If it goes wrong after **Review**

1. **Accept difference** — Plant Manager/Accounts — with reason code
2. **Case closed as Accepted**

If it goes wrong after **Case opens**

1. **QC rejects and goods returned to vendor**
2. **Quality claim opens**
3. **Open debit note**

### Weight short at incoming QC

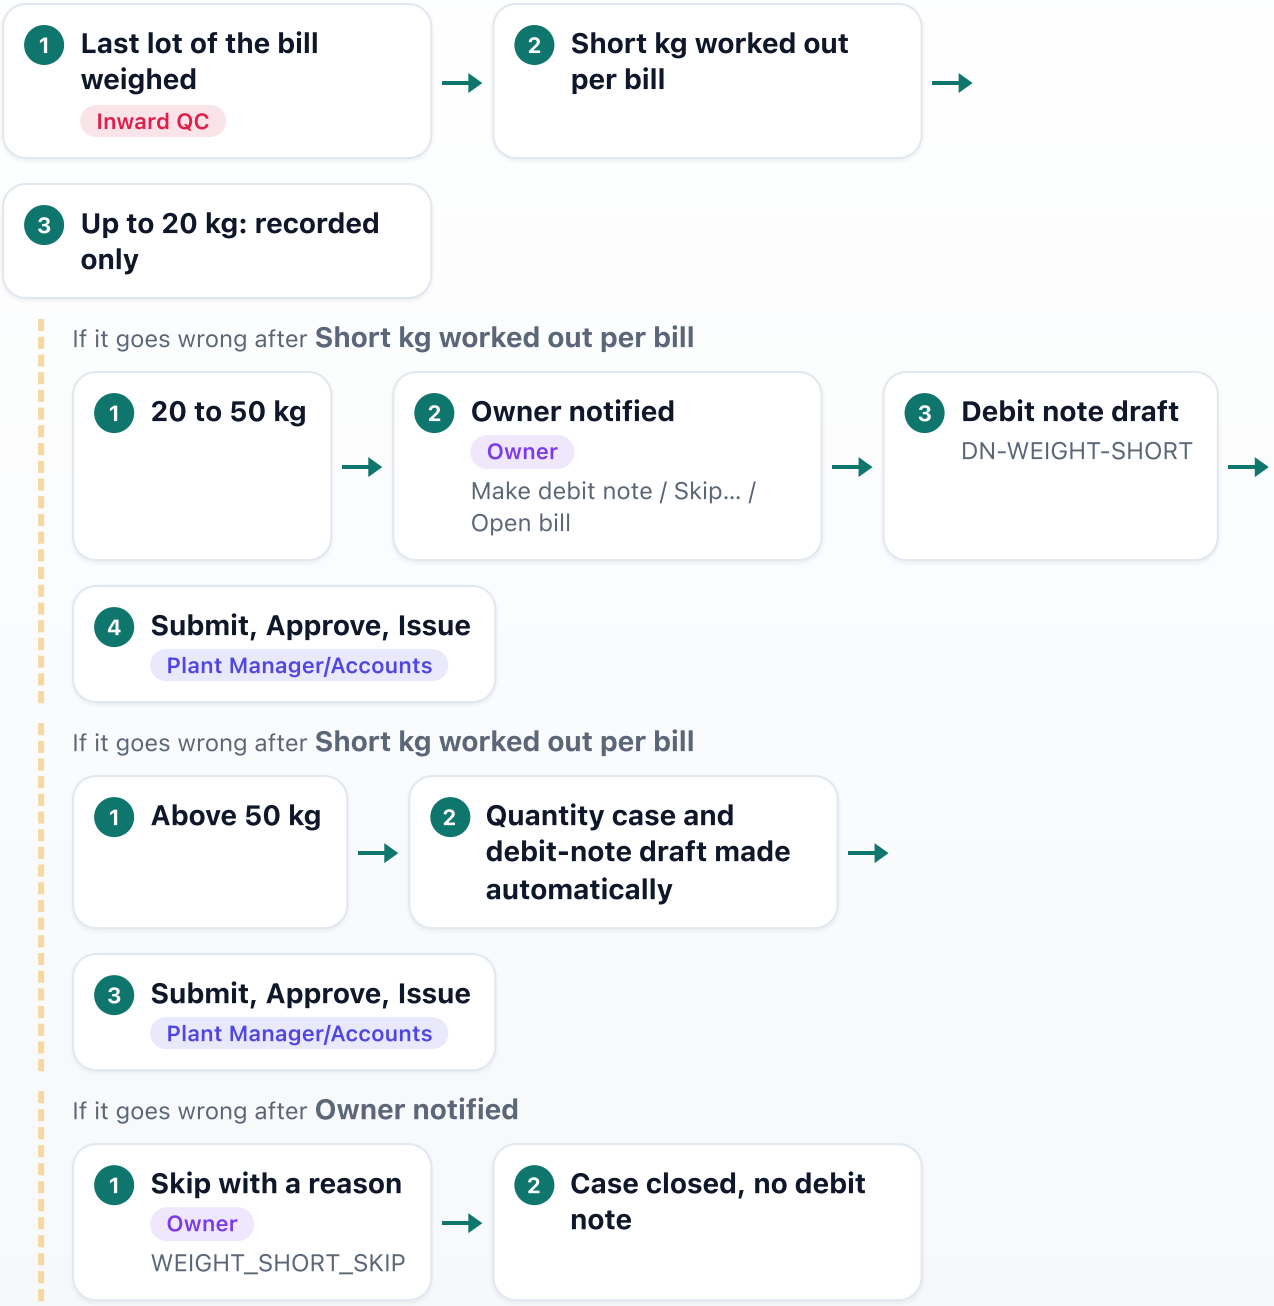


Every case starts from a goods receipt. The Goods inward chapter explains how the invoice rate is typed at inward and how a pending invoice is attached later.

## Screen tour

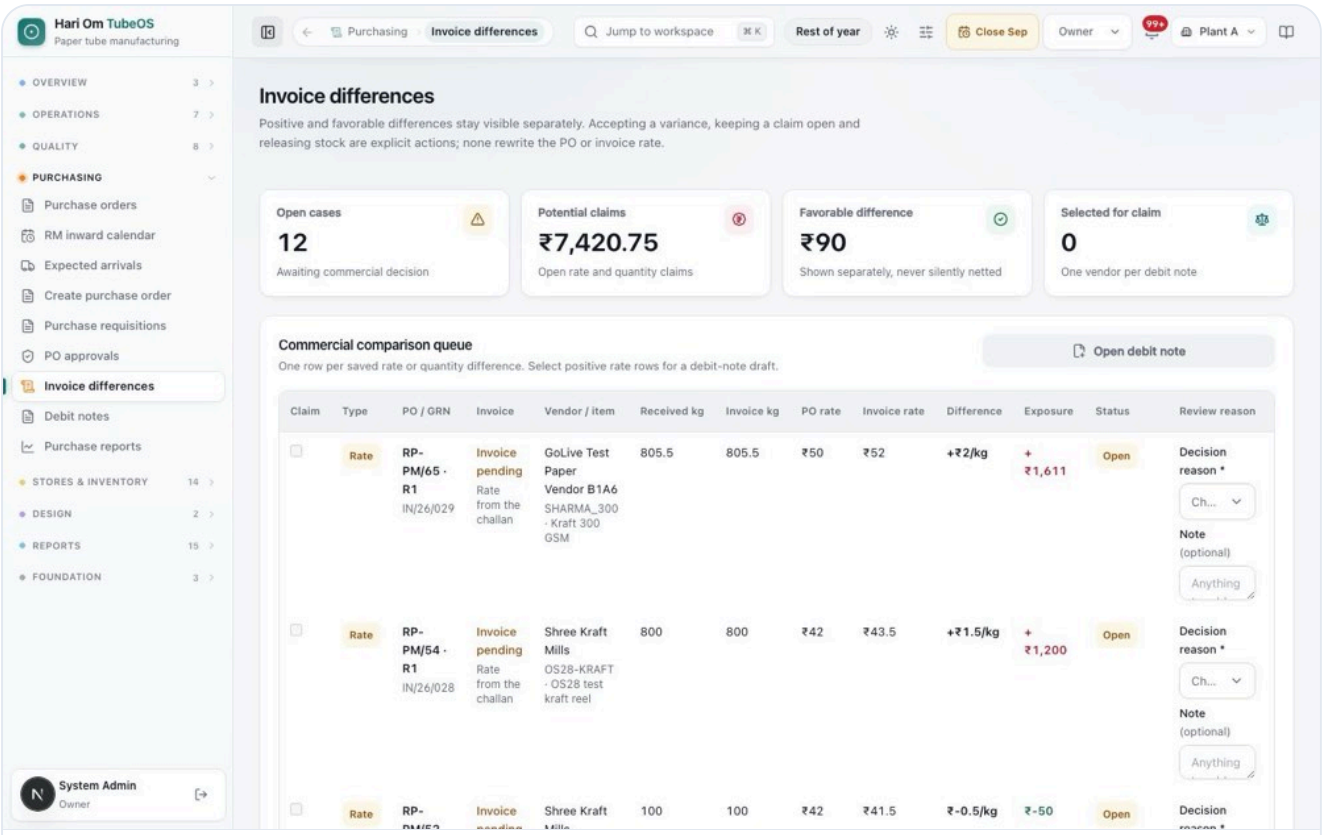



Figure: Invoice differences. Tiles: Open cases 12 (awaiting commercial decision), Potential claims ₹7,420.75, Favorable difference ₹90 (shown separately, never silently netted), Selected for claim 0 (one vendor per debit note). Below, the Commercial comparison queue lists Rate rows such as RP-PM/65 · R1 / IN/26/029, invoice pending, 805.5 kg, PO rate ₹50, invoice rate ₹52, difference + ₹2/kg, exposure +₹1,611, status Open, with an empty "Decision record" box.

What you see:

1. **Tiles**: **Open cases**, **Potential claims** (open rate and quantity claims, in rupees), **Favorable difference** (where the vendor charged less) and **Selected for claim** (rows ticked for a debit note).
2. **Open debit note** button: makes a draft debit note from the ticked rows.
3. **Commercial comparison queue**: one row per difference. The columns, left to right, are: - **Claim**: tick box. It is active only for positive **Rate**, **Quantity** or **Quality** rows that are still open and whose invoice is attached. - A row made by the weight check shows a **Weighed short** chip and "Follow-up: ". - **Type**: **Rate**, **Quantity**, **Specification** or **Quality**. - **PO / GRN**: PO number and revision (RP-PM/65 · R1) and the inward number (IN/26/029). - **Invoice**: invoice number and date, or "Invoice pending · Rate from the challan". - **Vendor / item**, **Received kg**, **Invoice kg**, **PO rate**, **Invoice rate**. - **Difference**: per kg for rate (+₹2/kg), kg for quantity, mm for specification, "kg returned" for quality. - **Exposure**: the rupee effect (red when you pay more, green when less), or "Review quantity". - **Status**: **Open**, **Under**

**review**, **Accepted**, **Claim drafted**, **Claimed**, **Resolved**. - **Review reason**: the **Decision reason** picker (list **Invoice difference**; required), with the reason already saved shown above it. - **Actions**: **Accept difference** and **Release, keep case**.

4. When opened from a GRN (the rate-case link on the GRN page), a line says "Showing the cases of GRN P/26/011 (2 of 12)" with **Show all cases**.

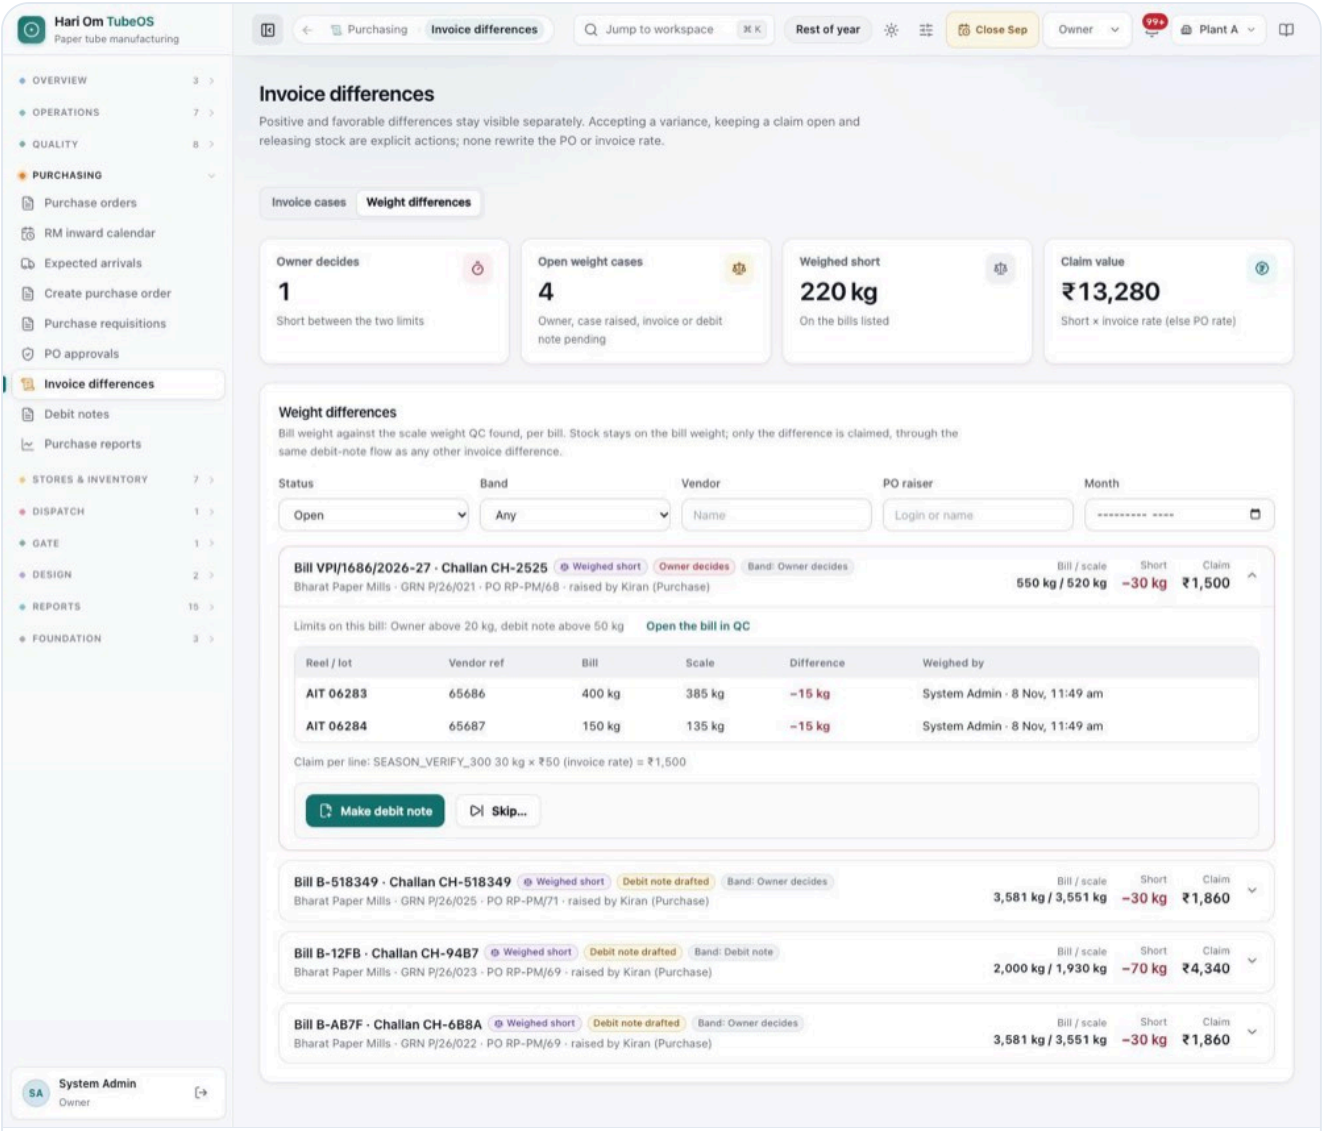



Figure: **Invoice differences › Weight differences**. Tiles: Owner decides 1 (short between the two limits), Open weight cases 4, Weighed short 220 kg (on the bills listed), Claim value ₹13,280 (short × invoice rate, else PO rate). Filters Status (Open), Band, Vendor, PO raiser, Month. The open row: Bill VPI/1686/2026-27 · Challan CH-2525 with chips Weighed short, Owner decides, Band: Owner decides; Bharat Paper Mills · GRN P/26/021 · PO RP-PM/68 · raised by Kiran (Purchase); Bill / scale 550 kg / 520 kg, Short −30 kg, Claim ₹1,500. Inside: "Limits on this bill: Owner above 20 kg, debit note above 50 kg", Open the bill in QC, a table of reels (AIT 06283 400 / 385 kg, AIT 06284 150 / 135 kg, weighed by and when), "Claim per line: … 30 kg × ₹50 (invoice rate) = ₹1,500", and the buttons **Make debit note** and **Skip...**.

What you see:

1. **View switch**: **Invoice cases** (the commercial queue) and **Weight differences**.

2. **Tiles**: **Owner decides**, **Open weight cases** (Owner, case raised, invoice or debit note pending), **Weighed short** (kg) and **Claim value** (₹).
3. **Filters**: **Status** (Open, Owner decides, Debit note drafted, Waits for invoice, Skipped, Closed, "All, incl. within limit"), **Band** (Within limit, Owner decides, Debit note, Short on count, Over the bill), **Vendor**, **PO raiser**, **Month**.
4. **One row per bill**: bill and challan, chips (**Weighed short**, the status, the band), vendor, GRN, PO and who raised the PO; bill / scale kg, short kg and claim ₹.
5. **Opened row**: the limits that applied to this bill, who decided and the reason, the debit note link, **Open the bill in QC**, the reels with bill kg, scale kg, difference and who weighed them, the claim per line (invoice rate, or PO rate while the invoice is to follow), and for the Owner **Make debit note** / **Skip...** ("Waiting for the Owner to decide." for others). If the GRN already has its own quantity case on a line, a note says those kg are not claimed again.

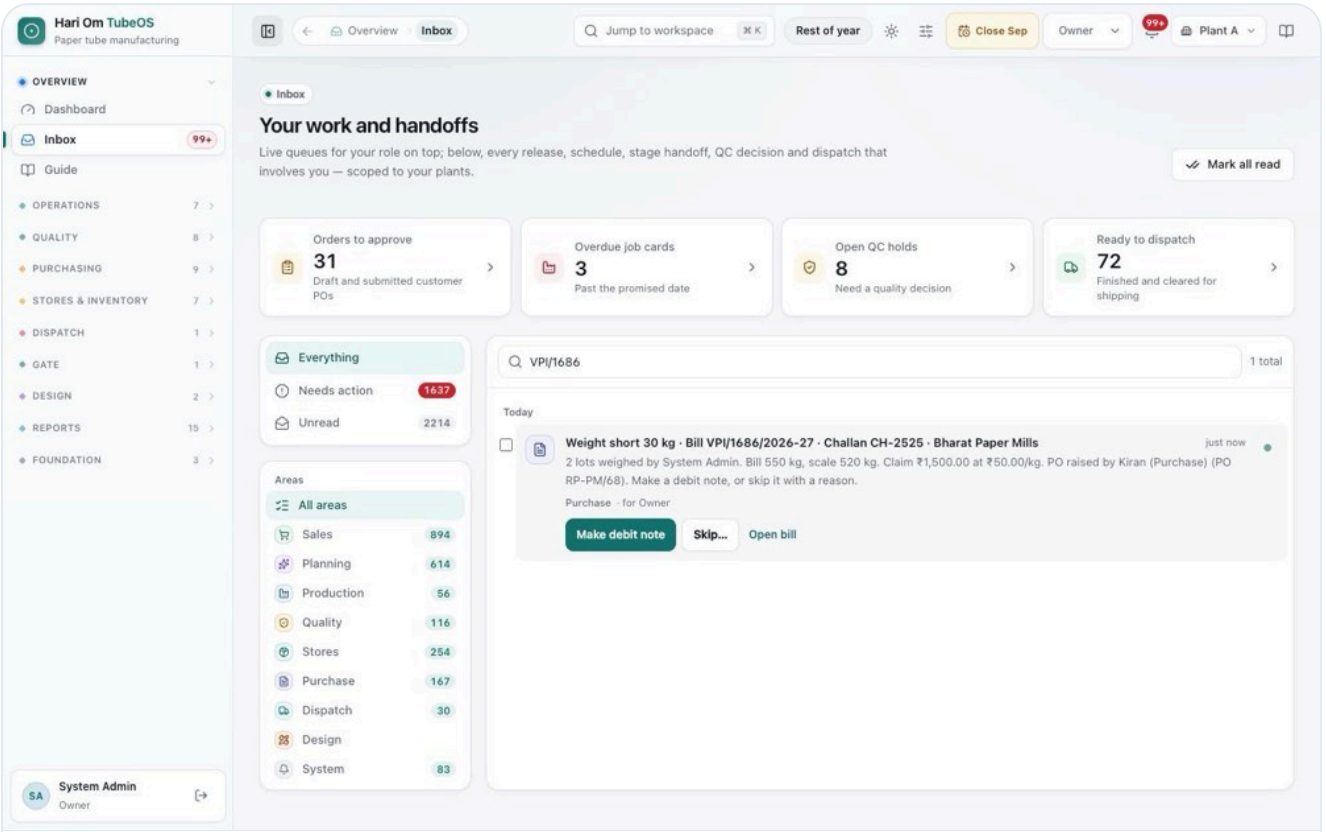



Figure: The Owner's Inbox: "Weight short 30 kg · Bill VPI/1686/2026-27 · Challan CH-2525 · Bharat Paper Mills. 2 lots weighed by System Admin. Bill 550 kg, scale 520 kg. Claim ₹1,500.00 at ₹50.00/kg. PO raised by Kiran (Purchase) (PO RP-PM/68). Make a debit note, or skip it with a reason." with the buttons **Make debit note**, **Skip...** and **Open bill**.

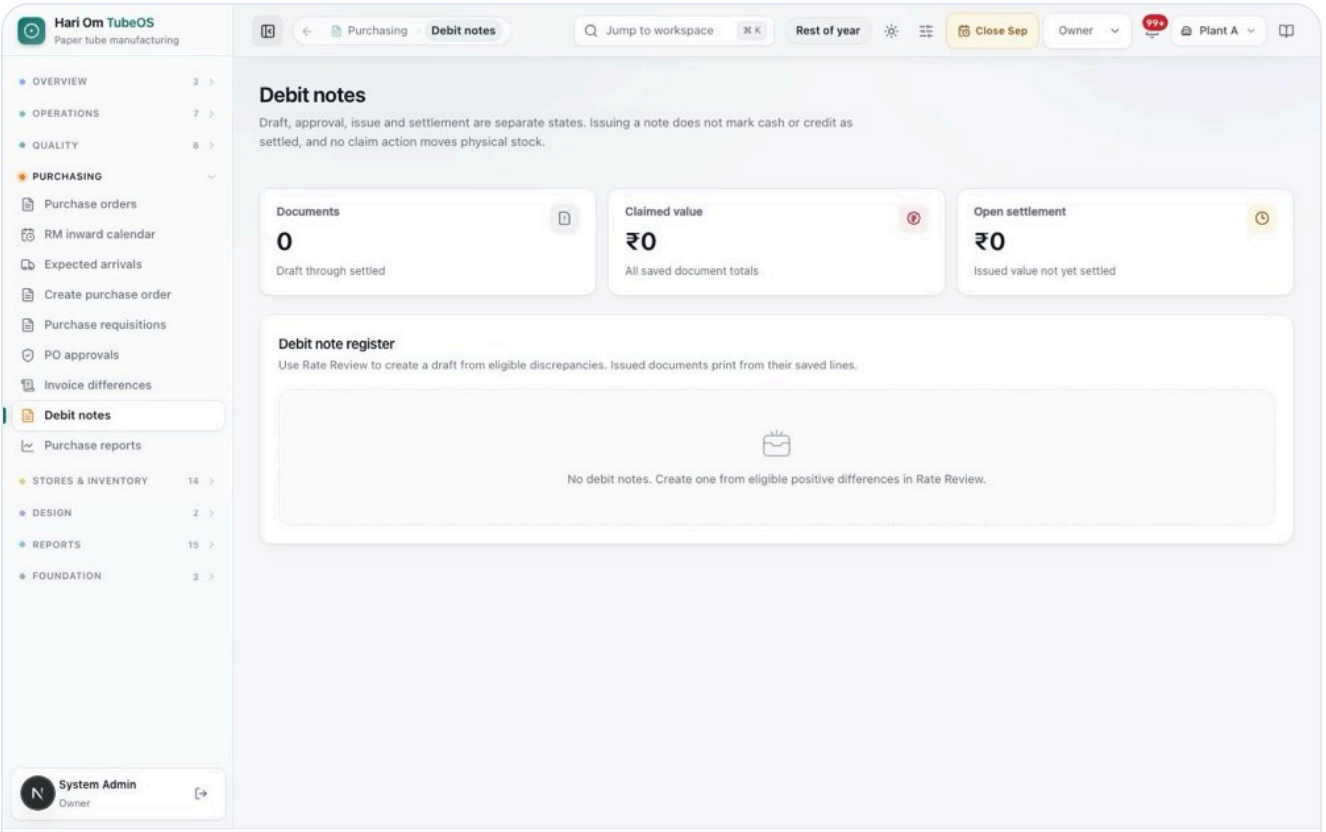



Figure: Debit notes with nothing raised yet. Tiles: Documents 0 (draft through settled), Claimed value ₹0, Open settlement ₹0 (issued value not yet settled). The Debit note register says "No debit notes. Create one from eligible positive differences in Rate Review."

What you see:

1. **Tiles**: **Documents**, **Claimed value** (all saved totals) and **Open settlement** (issued but not yet settled).
2. **Debit note register**: one card per note with its number (for example DN-261031-001), status, vendor, date, number of source lines, reason, and "Claim / settled / open" amounts.
3. **Card buttons** by status: **Submit** (Draft), **Approve** (Submitted), **Issue immutable note** (Approved) and always **Saved PDF**.
4. **Source lines table**: **Source case**, **Claim** and **Tax adjustment**.
5. **Settlement** (Issued or Partly settled notes): **Settlement amount** and **Record settlement**.

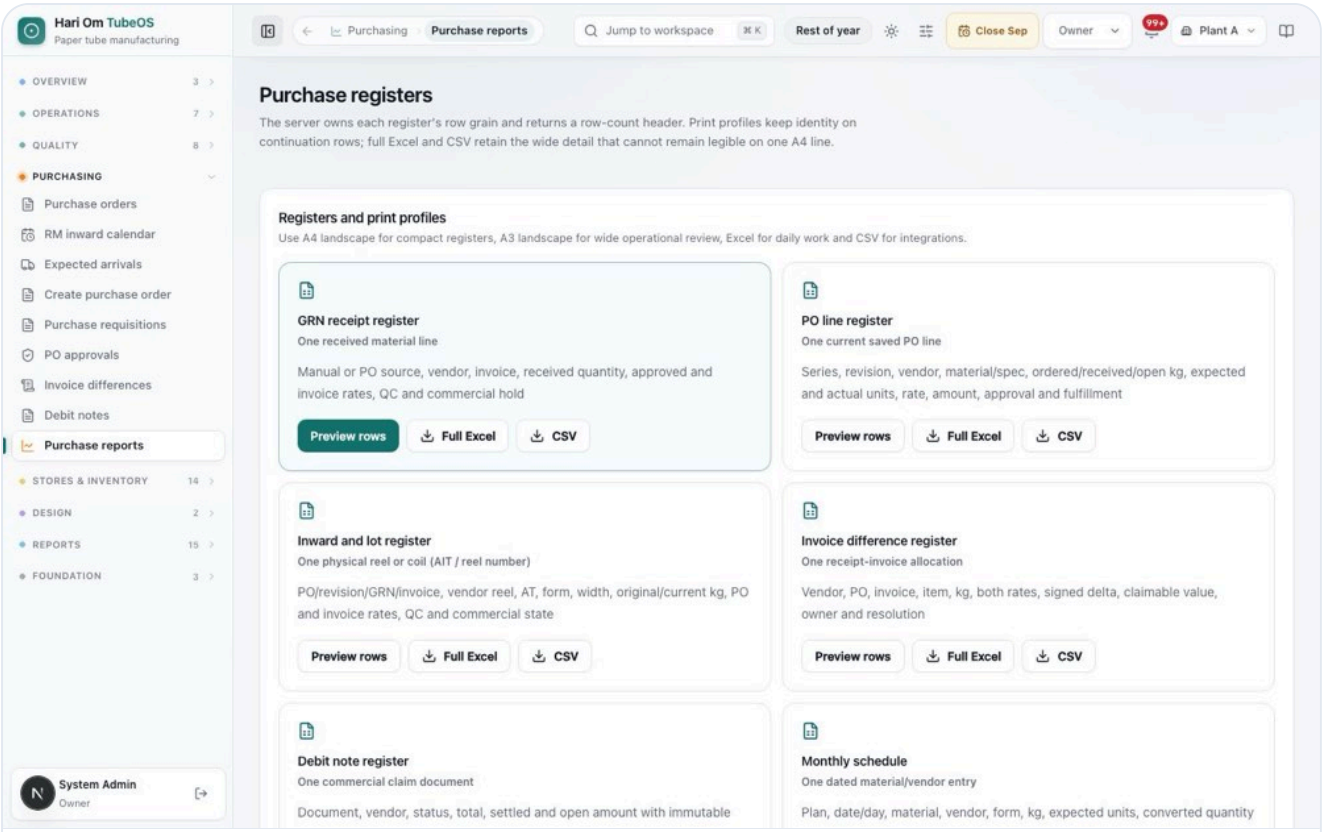



Figure: Purchase registers. Cards for GRN receipt register (one received material line), PO line register (one current saved PO line), Inward and lot register (one physical AT reel or coil), Invoice difference register, Debit note register and Monthly schedule, each with Preview rows, Full Excel and CSV.

What you see:

1. **Register cards** (eight in all). Each card names the register, what one row is, and the fields it holds: - **GRN receipt register**: one received material line (source, vendor, invoice, quantity, PO and invoice rates, QC and commercial state). - **PO line register**: one current PO line (series, revision, vendor, material, ordered / received / open, rate, amount, approval). - **Inward and lot register**: one physical AT reel or coil (PO, GRN, invoice, vendor reel, AT, form, width, original and current kg, rates, QC state). - **Invoice difference register**, **Debit note register**, **Monthly schedule**, **Stock policy register** and **RM cost register**.
2. **Preview rows** shows the register below the cards, with a row count such as "60 ROWS". **Full Excel** and **CSV** download every row.
3. **Print A3 · all rows** and **Print A4 · all rows** (above the preview) open a printable PDF. Use A4 landscape for short registers, A3 landscape for wide ones, Excel for daily work and CSV for other software.

## Step by step

### How to review an invoice difference

Roles: Plant Manager, Accounts, Owner, Admin (not the person who made the GRN).

1. Open **Invoice differences**, or click "Rate differs from the PO · review case open in Invoice differences" on a GRN.
2. Read the row: PO rate, invoice rate, difference and exposure. Open the GRN if you need the details.
3. Decide one of the three actions below. Accept and Release need a **Decision reason** from **Invoice difference** (ID-RATE Rate difference agreed, ID-FREIGHT Freight or loading charges, ID-TAX Tax rounding / GST difference, ID-QTY Quantity difference, ID-WRONG-INVOICE Wrong invoice from the supplier, ID-OTHER); opening a debit note needs a **Debit note reason**.

### How to accept a difference

1. Pick the **Decision reason** (for example ID-RATE Rate difference agreed) and add a note such as "Mill price rise agreed by Owner on call".
2. Click **Accept difference**. The case becomes **Accepted**. For a rate case, the stock cost of that receipt line changes to the invoice rate. The PO is not changed.

### How to claim from the vendor (open a debit note)

1. Tick the **Claim** box on each positive rate or quality row of **one vendor**. The **Selected for claim** tile counts them.
2. Pick the **Debit note reason** (list **Debit note**: DN-SHORT Short supply, DN-REJECT Material rejected / returned, DN-RATE Rate difference, DN-QUALITY Quality deduction, DN-DAMAGE Transit damage, DN-OTHER) and click **Open debit note**. The message says, for example, "DN-261031-001 created as a governed draft." The cases become **Claim drafted**.
3. Open **Debit notes**, check the lines and click **Submit**.
4. A different person (Plant Manager, Accounts, Owner or Admin) clicks **Approve**.
5. Click **Issue immutable note**. The cases become **Claimed**. Use **Saved PDF** to print or send the note.

### How the Owner decides a weight difference

Roles: Owner (Admin can too).

1. The Owner gets "Weight short 30 kg · Bill … · vendor" in the Inbox (and the bell), and the bill shows under **Owner decision** in Incoming QC. A reminder comes after 48 hours if nobody

decides.
2. Click **Make debit note** on the notification (or open **Invoice differences › Weight differences**, open the row and click **Make debit note**). The case and a debit-note draft with reason **DN-WEIGHT-SHORT Weighed short at QC** are made. The notification then shows the result, for example "Debit note DN-261108-001 drafted".
3. Or click **Skip...**, pick the reason (list **Weight short skipped**: WS-TOLERANCE Within contract tolerance, WS-VENDOR-CREDIT Vendor credit agreed, WS-SCALE-DOUBT Scale doubt, WS-OTHER with a note) and confirm. No debit note is made; the reason is kept on the case.
4. **Open bill** opens the bill in Incoming QC.
5. If the invoice is still pending, the draft is made as soon as the invoice is attached to the GRN (status **Waits for invoice**).

## What happens after a weight debit note is drafted

1. The debit note is the normal one: **Submit**, **Approve** by a different person, **Issue immutable note**, then settlements (same steps as above).
2. On **Debit notes** it shows a **Weighed short** chip, "Raised by / follow-up: (PO ...)" and "drafted automatically" when the system made it.
3. The person who raised the PO gets "Follow up with : ... weighed 30 kg short" and takes it up with the vendor.
4. When the note is issued, its PDF is saved in the Doc Vault and linked to the note.

## How to record a settlement

1. When the vendor pays or gives credit, open the issued note.
2. Type the **Settlement amount** (up to the open amount) and click **Record settlement**. The message shows how much remains open.
3. The note becomes **Partially settled**, then **Settled** when the open amount reaches ₹0.

## How to release stock while a case stays open

1. After a case is **Accepted**, or its debit note is issued, pick a **Decision reason** and click **Release, keep case**.
2. The decision is recorded and the receipt shows **Released with claim**. Every other open case on the same receipt line must be decided first.

## How to export or print a purchase register

1. Open **Purchase reports**.
2. Click **Preview rows** on the register you need to see it on screen.
3. Click **Full Excel** or **CSV** to download all rows, or **Print A3 · all rows** / **Print A4 · all rows** for paper.

4. The Purchase orders page (**Export full register**) and the GRN register (**Full Excel**, **Print register**) link to the same registers.

## Rules the system enforces

- **AUTOMATIC:** a **Rate** case opens for any difference between invoice (or challan) rate and PO rate, with the claimable amount = received kg × difference when the vendor charged more. A **Quantity** case opens when invoice quantity is not the weighed quantity. A **Specification** case opens when a measured reel width is outside the width and tolerance saved on an older PO line. A **Quality** claim opens when QC-rejected goods are returned to the vendor.
- **BLOCKS:** "The receipt maker cannot approve or release their own commercial exception."
- **BLOCKS:** every decision needs a reason code: **Invoice difference** for accept and release, **Debit note** for opening (or voiding) a debit note. Codes with OTHER need a note of at least 5 characters; free text alone is refused.
- **BLOCKS:** only open positive amounts can go on a debit note ("Only open positive claim amounts can create a debit note"), one vendor per note ("A debit note cannot mix vendors"), and only after the invoice is attached ("A debit note needs the supplier invoice. Attach the invoice to the GRN first; the rate case stays open.").
- **BLOCKS:** "A different person must approve the debit note." Steps must go in order (Submit, Approve, Issue).
- **BLOCKS:** a settlement cannot be more than the open amount ("Settlement exceeds the open debit-note amount"), and only issued notes can be settled.
- **BLOCKS: Release, keep case** needs the case accepted or claimed first ("Accept the variance or issue the approved claim before releasing stock") and every other open case on the line resolved. A manual GRN must be approved first.
- **AUTOMATIC:** favourable (negative) differences are shown separately and never subtracted from claims. Debit notes never move physical stock.
- **NOTIFIES:** when a GRN opens a rate case, the plant head and Accounts are notified.
- **AUTOMATIC (weight check):** worked out per bill once every lot is weighed or rejected; rejected lots are left out. Short ≤ notify limit (default 20 kg): recorded only. Short above it and ≤ auto limit (default 50 kg): the Owner decides; one reminder after 48 h. Short above the auto limit: a **Quantity** case (source QC weigh, beside the GRN's own quantity case) and a debit-note draft are made automatically; with the invoice pending, the draft waits for the invoice. Excess is recorded only. Items not billed in kg: the Owner is told ("Short on count"), no debit note is made automatically. kg already claimed at the GRN are not claimed twice.
- **BLOCKS:** only the Owner (or Admin) can Make debit note or Skip a weight case; Skip needs a **Weight short skipped** reason. The auto limit cannot be below the Owner limit.

## Sample

Bharat Paper Mills delivers Kraft 230 GSM on GRN P/26/021 against RP-PM/54. PO rate ₹44.50 / kg, invoice rate ₹45.25 / kg, weighed 2,012 kg.

| Field | Value |
|---|---|
| Type | Rate |
| Difference | +₹0.75/kg |
| Exposure | +₹1,509 |
| Status | Open |

The Plant Manager (not the Store user who made the GRN) ticks the row and clicks **Open debit note**: **DN-261106-001**, Draft, ₹1,509. He clicks **Submit**; Accounts clicks **Approve** and **Issue immutable note**. On 20 Nov the vendor gives a credit of ₹1,509; Accounts types 1509 and clicks **Record settlement**. The note shows "₹1,509 / ₹1,509 / ₹0" and status **Settled**.

Weight example: Bharat Paper Mills' bill VPI/1686/2026-27 (GRN P/26/021, PO RP-PM/68 raised by Kiran) has 2 reels billed 550 kg. QC weighs 520 kg: 30 kg short, ₹1,500 at the invoice rate ₹50/kg. Between 20 and 50 kg, so the Owner gets **Make debit note** / **Skip...**. He clicks **Make debit note**: a draft DN with reason DN-WEIGHT-SHORT for ₹1,500. The plant head submits, Accounts approves and issues it, the PDF goes to the Doc Vault and Kiran gets "Follow up with Bharat Paper Mills". Had the bill been 64 kg short, the case and draft would have been made automatically; 12 kg short would only be recorded.

| Short kg on the bill | Band | What happens |
|---|---|---|
| 0 to 20 | Within limit | Recorded only |
| above 20 to 50 | Owner decides | Make debit note or Skip... (reason) |
| above 50 | Debit note | Case and draft made automatically |

## Common questions

**? QC weighed the bill 30 kg short. Does stock go down by 30 kg?**

No. Stock stays on the bill weight. Only the difference is claimed, through a debit note.

**I skipped a weight debit note by mistake.**

A skipped bill no longer shows **Make debit note**; the skip and its reason stay on the case. Speak to the Owner or Admin.

**Why does the weight case say "Waits for invoice"?**

The GRN was posted with the invoice pending. The debit-note draft is made as soon as the invoice is attached in the GRN register.

**Can I change the 20 and 50 kg limits?**

Only the Owner, in System › Plants (Weight check of a bill). The limits saved on a bill when it was weighed stay with that bill.

**The vendor's rate is ₹0.10 higher. Do I really need a case?**

Yes. Any rate difference opens a case. Accept it with a reason code (for example ID-TAX for GST rounding) if the extra is agreed.

**Why is the Claim box greyed out on my row?**

Only positive **Rate**, **Quantity** or **Quality** rows that are still open and have the invoice attached can be claimed. Rows with "Invoice pending" become claimable after the invoice is attached in the GRN register.

**Can the reels be used while the rate case is open?**

Yes, once incoming QC passes them. Invoice and rate questions never hold paper back.

**I made the GRN. Why can't I accept its difference?**

The person who made the receipt cannot decide its own exception. Ask the plant head or Accounts.

**Does accepting a difference change the PO rate for next time?**

No. The PO stays as approved. Only the stock cost of that receipt line follows the invoice rate.

**? Does issuing a debit note mean the money is recovered?**

No. Issued means the claim was sent. Record each payment or credit with **Record settlement**; the note is **Settled** only when nothing is open.

**? Which register do I give the auditor for purchases?**

The **GRN receipt register** (one row per received line) and the **Inward and lot register** (one row per reel or coil), as Full Excel.

## Related chapters

- Goods inward, GRN register and labels
- Purchase orders, PO approvals and requisitions
- Incoming QC (rejections and returns to the vendor)
- Inventory, material items, manual FG, stock alerts and RM costing
- Reports

PURCHASING, STORES AND INWARD

# Goods inward, GRN register and labels

**What it is:** the store's receiving desk. **Goods inward** records what came on the truck, against an approved PO or as a manual GRN, with every reel and coil weighed and given its own QR label. The **GRN register** keeps every saved receipt: attach late invoices, approve manual receipts, open incoming QC and reprint labels.
**Who uses it:** GRN, Store and Plant Manager receive goods and print labels (Owner and Admin too). Inward QC and QC open receipts to inspect. The plant head or Accounts approves manual receipts.
**Where:** Sidebar > Stores & inventory > Goods inward (/purchase/inward) and GRN register & labels (/purchase/receipts; one receipt at /purchase/receipts/)

## At a glance

- **Weigh every reel and coil.** Paper is received reel by reel: vendor reel number, **net kg**, width and form (reel or coil). Stock, the PO balance and the invoice all go by net kg. There is no gross or tare at inward.
- **Each reel gets the plant's own serial and label.** New reels are numbered in the **AIT series**, for example **AIT 06243**: "AIT", a space and 5 digits, one running series per plant and financial year, starting again at AIT 00001 on 1 April. Coils slit from a reel carry the reel's serial plus -1, -2 (AIT 06243-1). Older AT-... numbers stay valid and can still be scanned and searched.
- **The reel label matches the plant's own printed label**, with a QR added: plant heading, MILL NAME, invoice number, date, PLYBOND, VARIETY, GSM, ROLL NO., the AIT serial in very large letters, and WEIGHT.
- **The inward number is automatic** and restarts every financial year on 1 April: **P/26/021** for paper, **A/26/005** for adhesive, **IN/26/030** for everything else or a mix (26 = 2026-27).
- **Everything received waits for incoming QC.** New lots show **Waiting for QC** and cannot be issued until QC passes them. An invoice that is pending or a rate that differs never holds them.
- **At the gate first.** The watchman photographs the bill or challan when the truck arrives. It shows on Goods inward under **At the gate**. Pick it to make its GRN with the photo docked beside the form; posting links the photos to the GRN and every reel. A GRN without a gate photo is still allowed; the register shows **No gate photo**.
- **Everything received is weighed again at incoming QC.** QC types the actual weight of each reel; stock stays on the net kg you entered here (the bill weight).

- **Validate, then post once. Validate receipt** checks everything first; **Post goods inward** saves it once, even if you click twice or the line drops.

## The flow

### Truck to store

1. **Truck arrives** — GRN/Store
2. **Make GRN or Goods inward** — PO filled in
3. **Enter challan, invoice, reels** — GRN/Store
4. **Validate receipt**
5. **Post goods inward** — P/26/021, AIT serials
6. **Print reel labels** — GRN/Store
7. **Incoming QC** — QC
8. **Usable for issue**


If it goes wrong after **Enter challan, invoice, reels**

1. **Invoice pending** — challan only
2. **Attach invoice later** — Store — GRN register


If it goes wrong after **Post goods inward**

1. **Rate differs from PO**
2. **Rate case** — Plant Manager/Accounts — does not hold the reels

### Bill photographed at the gate

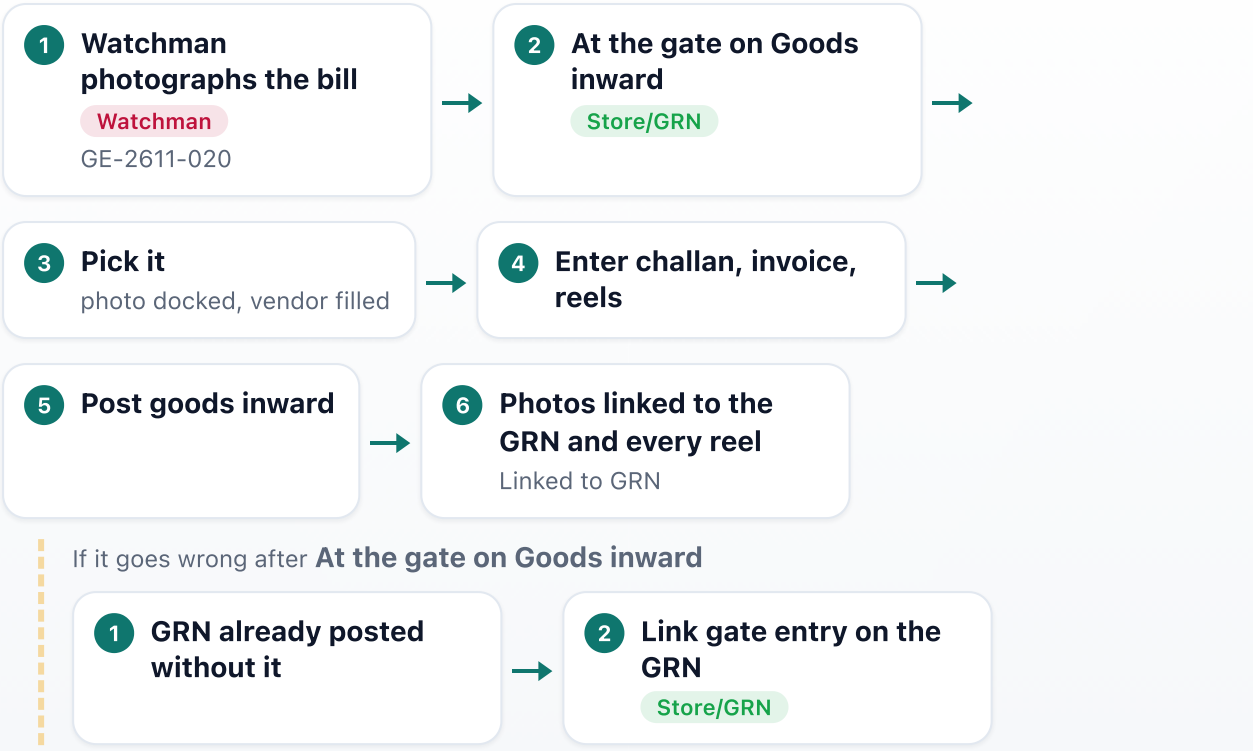


### Manual GRN (no PO)

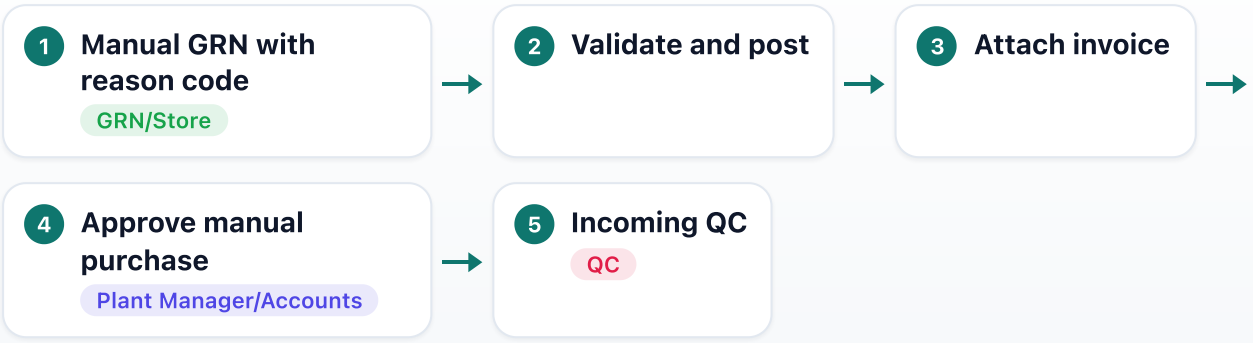


Approved POs come from the Purchase orders chapter. After posting, inspection happens in the Incoming QC chapter; issue to the floor is in the Issue to floor chapter.

## Screen tour

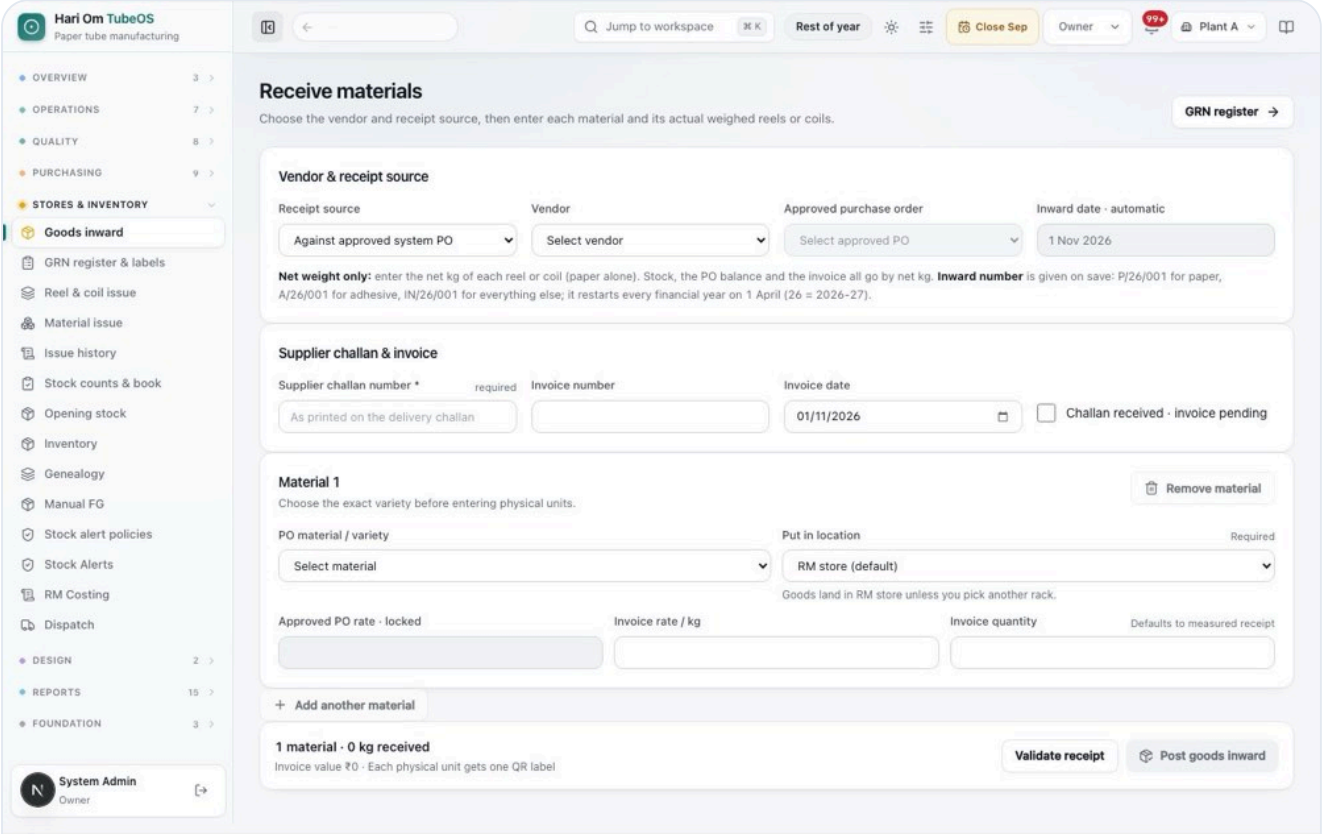



Figure: The Receive materials page. Vendor & receipt source has Receipt source "Against approved system PO", Vendor, Approved purchase order and "Inward date · automatic 31 Oct 2026", with a note on net weight and inward numbers. Supplier challan & invoice has Supplier challan number (required), Invoice number, Invoice date and a "Challan received · invoice pending" tick. Material 1 has PO material / variety, Put in location "RM store (default)", Approved PO rate · locked, Invoice rate / kg and Invoice quantity. A bottom bar shows "1 material · 0 kg received" with Validate receipt and Post goods inward.

What you see:

1. **GRN register** button (top right).
2. **Vendor & receipt source**: **Receipt source** ("Against approved system PO" or "Manual GRN · without PO"), **Vendor**, **Approved purchase order** (each shows its PO number and revision) or, for manual, **Reason for no PO** (a code from the list **Receipt without PO**: MR-URGENT Urgent buy, PO to follow, MR-SAMPLE Free sample from the supplier, MR-RETURNABLE Returnable / job-work material, MR-CASH Cash purchase, MR-CUST-SUPPLIED Customer-supplied material, MR-OTHER), and **Inward date · automatic** (today, cannot be changed). After you pick a vendor, a grey line shows its **GSTIN** (or "not in vendor master"), city and state, and contact, and **Mill name on reel labels** (the vendor's mill / short name, or "not set, labels print the vendor name (Masters › Vendors)").

3. **Net weight only** note and the **Inward number** rule (P/26/001 paper, A/26/001 adhesive, IN/26/001 everything else; restarts on 1 April).
4. **Supplier challan & invoice**: **Supplier challan number** (required), **Invoice number**, **Invoice date** and **Challan received · invoice pending**. When ticked, the invoice fields are disabled and a note says the invoice is added later in the GRN register.
5. **Material 1** panel: **PO material / variety** (only lines of the chosen PO; each PO line once), **Put in location** (required; defaults to the RM store), **Approved PO rate · locked**, **Invoice rate / kg** (called **Challan / invoice rate** when the invoice is pending; it starts at the PO rate and can be edited) and **Invoice quantity** (defaults to the weighed quantity). **Remove material** drops the panel.
6. **PO balance strip** (after you pick a PO line): "PO ordered … · received …", "Open before this receipt", "This receipt … · balance after …" (red with "reason needed below" when you receive more than open) and, for reels, "Reels / coils 12 of about 14 expected".
7. **Rate warning** (amber, when the rate you typed differs from the PO): for example "Invoice rate is ₹0.75 per kg more than the PO (₹1,509.00 more for this receipt). A review case opens automatically; the approved PO stays unchanged."
8. **Reel / coil grid** (paper and parchment): 10 empty rows with columns **#**, **Vendor reel / coil no.**, **Net kg**, **Width**, **Unit** (mm or cm), **Form** (Reel or Coil) and a bin icon. Above it: "12 reels / coils entered · 8,418 kg net", **Add reel / coil** and **Add 10 more**. **Paste measured lot rows from Excel** takes rows of vendor reel number, net kg, width mm, REEL/COIL. Empty rows are left out.
9. For bulk materials (adhesive, boxes, plastic): **Received quantity** (filled with the PO's open quantity; change it to what came) and **Batch number · optional**.
10. **Add another material**, the **More than the PO** panel (when needed), the **Validation result**, and the sticky bottom bar with the totals, value, "Each physical unit gets one QR label", **Validate receipt** and **Post goods inward**.

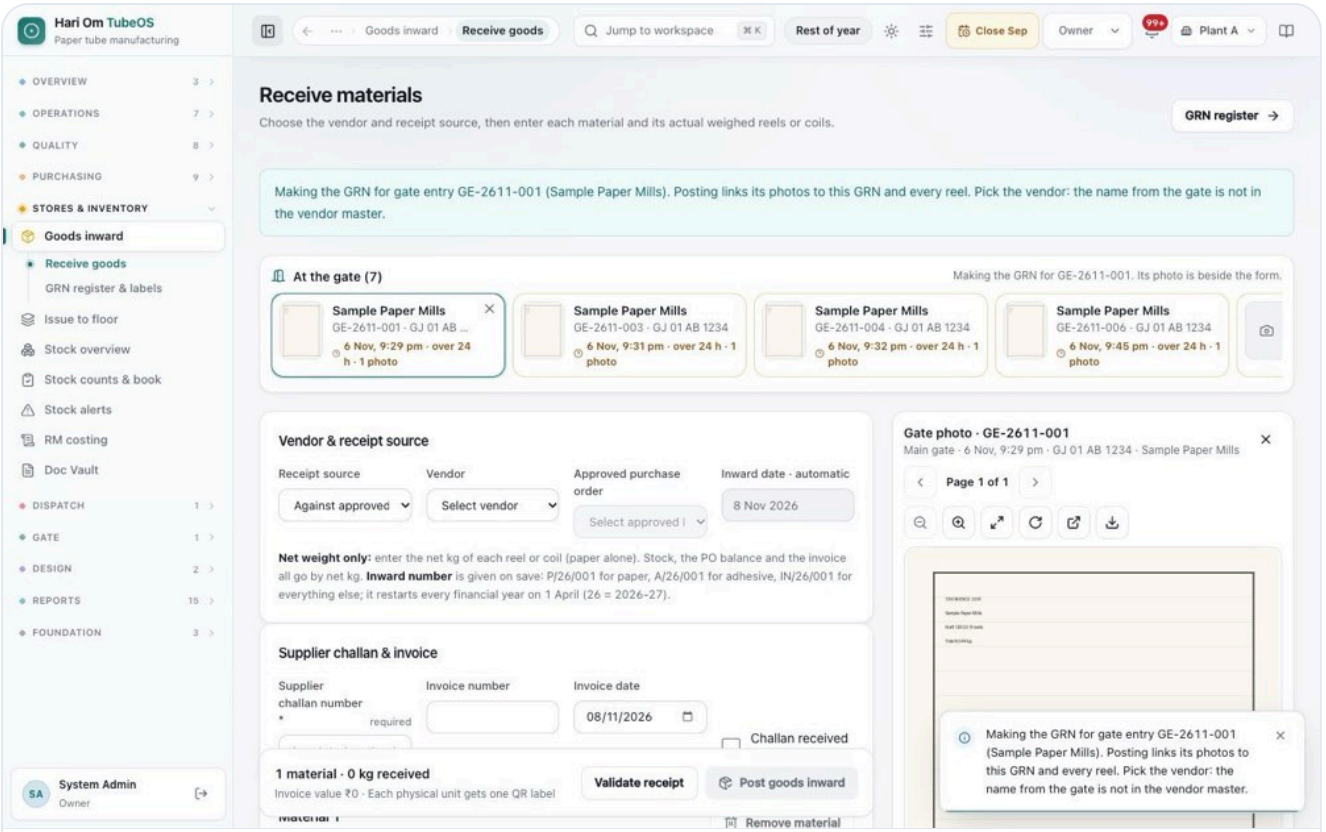



Figure: Goods inward with a gate bill picked. A blue note: "Making the GRN for gate entry GE-2611-001 (Sample Paper Mills). Posting links its photos to this GRN and every reel. Pick the vendor: the name from the gate is not in the vendor master." **At the gate (7)**: cards with a photo thumbnail, vendor, GE- number and vehicle, time and "over 24 h · 1 photo" in amber. On the right, **Gate photo · GE-2611-001** (Main gate, time, vehicle, vendor) with page, zoom, fit, rotate, open and download buttons and the bill page.

What you see (At the gate):

1. **At the gate (N)**: material bills the watchman photographed that have no GRN yet, oldest first. Each card: photo thumbnail (or "photo uploading"), vendor ("Vendor not given"), GE- number, vehicle, time, number of photos. A card older than 24 hours is amber with "over 24 h".
2. **Pick a card** to make its GRN: the card is outlined, the note says which entry you are working on, and the vendor is filled when its name matches the vendor master. Click it again (x) to unpick.
3. **Gate photo** panel beside the form: one tab per bill (Bill 1, Bill 2 · 2 pages), with the viewer, so you can read the challan number, invoice number and reel list while you type. "The photos are still uploading from the gate phone" when they have not arrived yet.

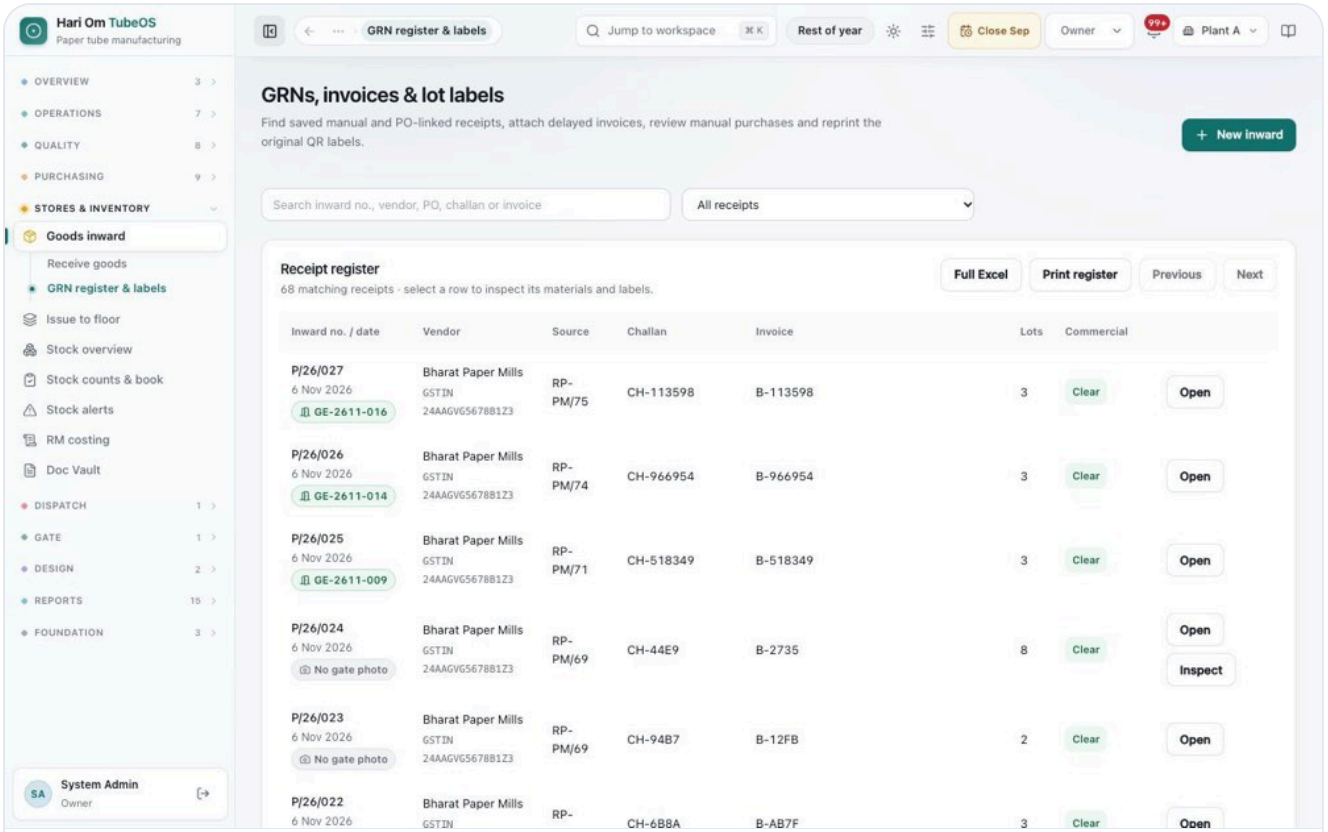



Figure: The GRN register with gate chips under the inward number: P/26/027 with **GE-2611-016**, P/26/026 with GE-2611-014, and P/26/024 and P/26/023 with **No gate photo**.

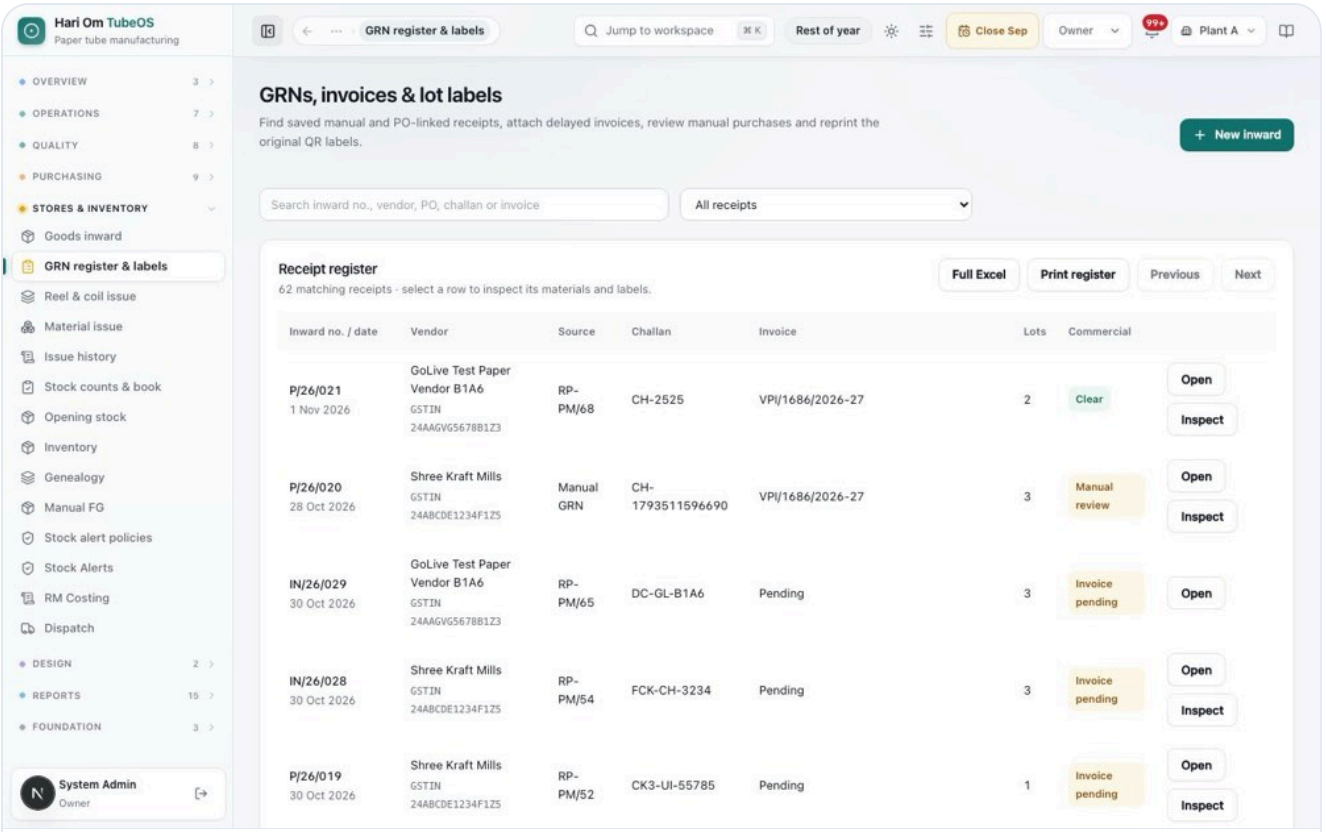



Figure: The GRN register ("GRNs, invoices & lot labels"). A search box and an "All receipts" filter sit above the Receipt register: 60 matching receipts, with Full Excel, Print register, Previous and Next. Rows such as IN/26/029, 30 Oct 2026, GoLive Test Paper Vendor with GSTIN, source RP-PM/65, challan DC-GL-B1A6, invoice Pending, 3 lots, commercial "Invoice pending", with Open and Inspect buttons.

What you see:

1. **New inward** (top right).
2. **Search** (inward number, vendor, PO, challan or invoice) and the filter: **All receipts**, **Against PO**, **Manual GRNs**, **Invoice pending**.
3. **Receipt register** with **Full Excel**, **Print register**, **Previous**, **Next** (100 per page).
4. Columns: **Inward no. / date**, **Vendor** (with GSTIN), **Source** (PO number or "Manual GRN"), **Challan**, **Invoice** ("Pending" until attached), **Lots**, **Commercial** (Invoice pending, Clear, Review required, Manual review, Released with claim) and buttons **Open** and **Inspect** (Inspect shows for QC roles while a lot waits for QC; Store and the plant head see **View QC**).

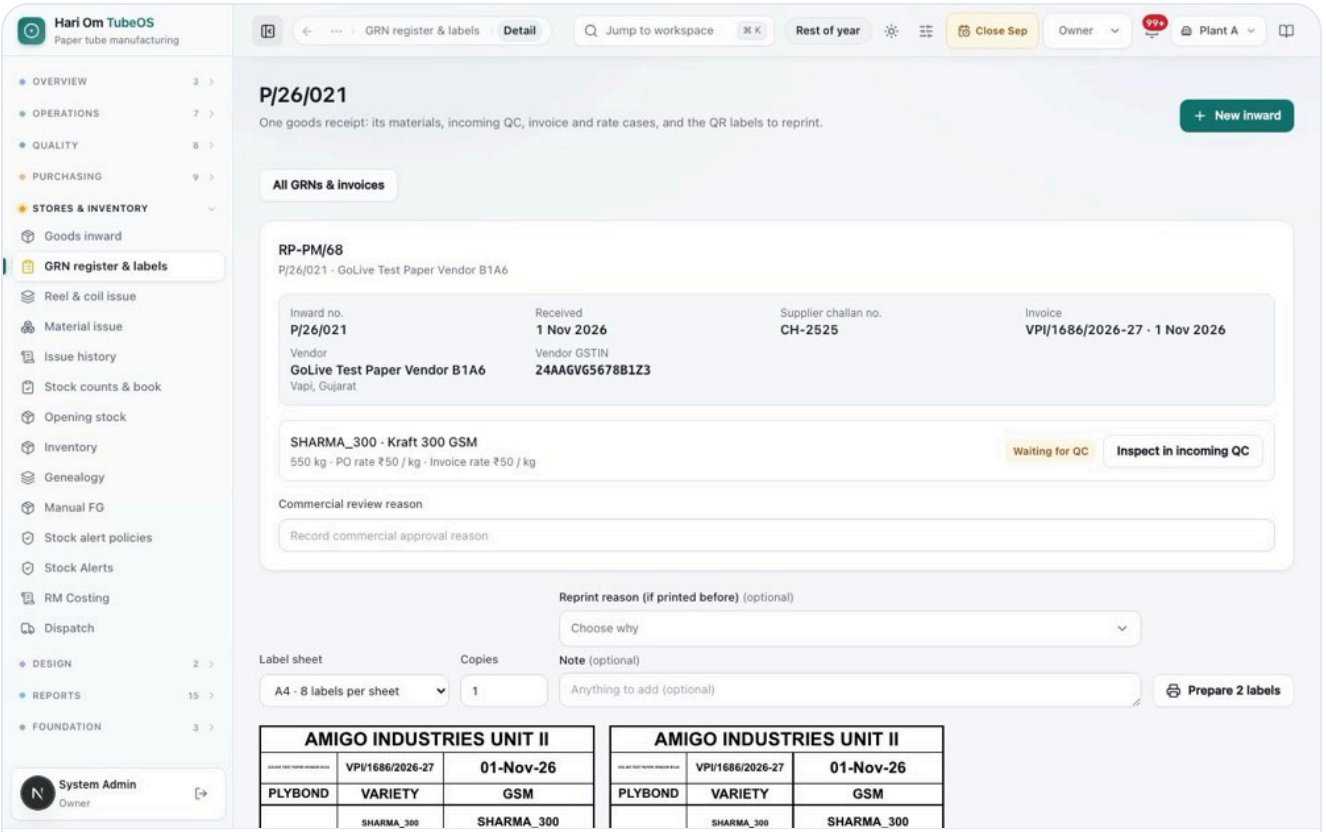



Figure: GRN IN/26/029 against RP-PM/65. Header: Inward no. IN/26/029, Received 30 Oct 2026, Supplier challan no. DC-GL-B1A6, Invoice Pending, Vendor with "Vapi, Gujarat", Vendor GSTIN. Two lines: "SHARMA_300 · Kraft 300 GSM, 805.5 kg · PO rate ₹50 / kg · Challan rate ₹52 / kg · invoice to follow" with a link "Rate differs from the PO · review case open in Invoice differences", and an adhesive line, both "QC passed" with See QC result. Below: Commercial review reason and the Attach supplier invoice panel.

What you see:

1. **All GRNs & invoices** (back to the list) and **New inward**.
2. **Header**: **Inward no.**, **Received**, **Supplier challan no.**, **Invoice** (number and date, or Pending), **Vendor** (with place) and **Vendor GSTIN** (from the PO, else the vendor master).
3. **Manual receipt reason** (manual GRNs only).
4. **Material lines**: code and name, quantity, PO rate, challan or invoice rate; a rate-case link when the rate differs; a QC badge (**Waiting for QC**, **QC passed**, **QC failed**, **Cleared**) and a button **Inspect in incoming QC**, **View in incoming QC** or **See QC result**.
5. **Gate entry** panel: the gate chip (**GE-...**, or **No gate photo**) and **Link gate entry** (Store, GRN, Plant Manager, Owner, Admin). Below it the **Documents** panel: the vendor's bill and challan photos linked to this GRN, with a type picker, **Take photo** and **Photo or PDF**. See the Doc Vault chapter.
6. **Commercial review reason**, **Approve manual purchase and invoice rates** (manual receipts under review), **Review invoice differences** and **Approval history**.
7. **Attach supplier invoice** (while pending): **Invoice number**, **Invoice date**, and for each line its invoice quantity and invoice rate (filled from the challan rate), then **Attach and validate invoice**.

8. **Label printing** (further down): **Label sheet** (A4 · 8 labels per sheet, or Thermal · 4 × 2 inch), **Copies** (1 to 20), **Reprint reason** ("if printed before"), **Prepare N labels**, then **Open A4 sheet PDF · print at actual size**. The label previews show under it.




Figure: A printed reel label. One bordered label: the heading AMIGO INDUSTRIES UNIT II across the top; a row with MILL NAME (AKSHAT), the invoice number and the date 28-Oct-26; a row of headers PLYBOND, VARIETY, GSM with 400, 351, 351 under them; ROLL NO. 65686; the serial AIT 06243 in very large bold letters; WEIGHT 1161; and the QR code at the side.

## Step by step

### How to receive goods against an approved PO

Roles: GRN, Store, Plant Manager, Owner, Admin.

1. Open the arrival in **Expected arrivals** and click **Make GRN** (or **Receive goods (GRN)** on the PO, or **Receive** in the PO list). The form opens with vendor, PO and material line filled: "Receiving against RP-PM/54 · Bharat Paper Mills." The form stays locked for a moment while the PO lines load. You can also open **Goods inward** and pick **Vendor** and **Approved purchase order** yourself.

2. Type the **Supplier challan number** exactly as printed.
3. Type the **Invoice number** and **Invoice date**. If only the challan came, tick **Challan received · invoice pending**.
4. In **Material 1**, check the **PO material / variety** and **Put in location** (leave the RM store unless the goods go to another rack).
5. Check the **Invoice rate**. It starts at the PO rate; change it to the rate on the invoice or challan.
6. For paper: weigh each reel and type one row per reel: **Vendor reel / coil no.**, **Net kg**, **Width** and **Form**. Press Enter in the last field to add a row, or use **Add 10 more**. To paste from a weighing sheet, open **Paste measured lot rows from Excel**, paste and click **Append pasted lots**.
7. For bulk material: type the **Received quantity** in its unit.
8. Click **Add another material** for each further PO line on the same truck.
9. If the total is more than the PO has open, pick the **Reason for receiving more than the PO** from the list **Receiving more than the PO** (OR-ROLL-WEIGHT Full reel weighs more, OR-MIN-LOT Supplier minimum lot, OR-NEEDED Extra needed for production, OR-TOLERANCE Within agreed tolerance, OR-OTHER) and add a note if useful.
10. Click **Validate receipt** and read the **Validation result** (each line with its quantity and reels, and words such as "rates match the PO", "invoice to follow" or "differs from the PO · goes to Accounts"). Warnings such as a reused challan number appear in amber; you can still post if it is a different delivery.
11. Click **Post goods inward**. The message gives the inward number: "Inward P/26/021 saved (challan BPM/2231). 12 lots recorded. Incoming QC decides when the lots can be issued." Each reel gets the next AIT serial of the year (for example AIT 06281, AIT 06282...).
12. Print the labels (next task), then click **Start next receipt**.

## How to make the GRN of a bill photographed at the gate

Roles: GRN, Store, Plant Manager, Owner, Admin.

1. You get "Material at the gate · GE-2611-020" in the Inbox with **Make GRN**, or open **Goods inward** and look at **At the gate**.
2. Click the card (or **Make GRN** on the notification). The gate photo opens beside the form and the vendor is filled if its name is in the vendor master; otherwise pick the vendor.
3. Fill the GRN as usual from the photo: PO, supplier challan number, invoice number and date (or invoice pending), and the reels.
4. Validate and post. The gate entry becomes **Linked to GRN** and its photos are linked to the GRN and to every reel and lot (QC sees them on the bill sheet).
5. A material bill not made into a GRN in 24 hours sends a reminder to Store, GRN and the plant head.

## How to link a gate photo to a GRN posted without it

1. Open the GRN from the register. The **Gate entry** panel says "This GRN was posted without a gate photo."
2. Click **Link gate entry** and pick the bill from the list of bills at the gate. The chip shows the GE- number.
3. If the watchman put the bill under the wrong kind (for example Electricity), ask for **Wrong type? Move it** in the Bills inbox first; only material bills can be linked.

## How to make a manual GRN (no PO)

Roles: GRN, Store, Plant Manager.

1. Set **Receipt source** to **Manual GRN · without PO** and pick the **Vendor**.
2. Pick the **Reason for no PO** (for example MR-URGENT Urgent buy, PO to follow) and add a note such as "approved urgent local purchase".
3. Fill the challan and invoice, pick each **Material / variety** from the master and enter the reels or quantity and the invoice rate.
4. Validate and post. The receipt shows **Manual review**.
5. The plant head or Accounts (not the person who made it) opens it in the GRN register, attaches the invoice if pending, types a **Commercial review reason** and clicks **Approve manual purchase and invoice rates**.

## How to print or reprint QR labels

Roles: GRN, Store, Plant Manager, Owner, Admin.

1. Right after posting, use the label controls on the **Receipt saved** panel; later, open the receipt from the GRN register.
2. Pick the **Label sheet** (A4 with 8 labels, or a 4 × 2 inch thermal label) and **Copies**.
3. If these labels were printed before, type a **Reprint reason** (for example "Damaged label").
4. Click **Prepare N labels**, then **Open ... PDF** and print at actual size. Stick one label on each reel, coil or lot.

Each reel or coil label is one bordered label in the plant's own layout (from the plant's "REEL PRINT." sheet), in big clear black letters, with a QR added. Nothing else is printed: no PO, GRN, vendor or QC words. A lot that is not a reel (adhesive, parchment, packing) keeps the plain lot label with its code and QR. The QR opens the lot in the phone camera; scanning it later tells the issue desk whether QC has passed it.

| Row | What it shows | Example |
|---|---|---|
| 1 | Label heading of the plant (System › Plants) | AMIGO INDUSTRIES UNIT II |

| Row | What it shows | Example |
|---|---|---|
| 2 | MILL NAME · supplier invoice no. · received date (dd-Mon-yy) | AKSHAT · VPI/1686/2026-27 · 28-Oct-26 |
| 3 | Headers PLYBOND · VARIETY · GSM | |
| 4 | Polybond · variety (paper code) · GSM | 400 · 351 · 351 |
| 5 | ROLL NO. · the mill's roll / reel number | 65686 |
| 6 | The AIT serial, very large and bold | AIT 06243 |
| 7 | WEIGHT · net kg | 1161 |

Where the values come from: **MILL NAME** is the vendor's mill / short name (else the vendor name). **Inv No.** is the invoice number typed at inward, else the invoice attached later, else the challan number while the invoice is pending. **PLYBOND** is the incoming QC reading when measured, else the PO line or paper master. **GSM** is the GSM measured at incoming QC when there is one; otherwise it prints the variety number, as the plant does. A value nobody gave stays blank, never 0. A coil label has the same layout with the coil's own serial (AIT 06243-1) and weight.

## How to attach an invoice that came later

Roles: GRN, Store, Plant Manager.

1. In the GRN register, set the filter to **Invoice pending** and click **Open** on the receipt.
2. In **Attach supplier invoice**, type the **Invoice number** and **Invoice date**.
3. Check each line's invoice quantity and rate (filled from the challan rate) and correct them to the invoice.
4. Click **Attach and validate invoice**. Any rate or quantity difference opens a case in Invoice differences.

## How to open incoming QC from a receipt

Roles: QC and Inward QC enter readings; Store and the Plant Manager can view.

1. Click **Inspect in incoming QC** on the posted receipt, or **Inspect** in the register row.
2. The QC entry form opens on the first lot still waiting. Inspection is explained in the Incoming QC chapter.

### How to export or print the GRN register

- Click **Full Excel** or **Print register** above the receipt list. The same register is in Purchase reports.

## Rules the system enforces

- **BLOCKS:** a supplier challan number is required. Invoice number and date are required unless **invoice pending** is ticked, and an invoice number must not be typed while it is ticked.
- **BLOCKS:** an invoice rate is required for every material unless the invoice is pending (then it may be left empty or typed from the challan). An invoice number already used with a different date is refused.
- **BLOCKS:** only an approved PO with an open balance can be received ("Only an approved purchase order can receive material"). Each PO line may appear only once per receipt.
- **BLOCKS:** each filled reel row needs its own vendor reel number, net kg and width. A vendor reel number used twice in a receipt, or already received before, is refused ("Vendor reel BPM-7781 is already inwarded as AIT 06212").
- **BLOCKS:** receiving more than the PO line has open needs a **Receiving more than the PO** code ("Line 1 (KRAFT230): 2100 kg is more than the 2000 kg still open on the PO. Enter a reason to receive more than the PO."). Codes with OTHER need a note of at least 5 characters; free text alone is refused.
- **BLOCKS:** goods must go to an active store location of this plant, not a floor or closed location. Parchment is received as coils. Paper lines are in kg.
- **BLOCKS: Post goods inward** works only after **Validate receipt**, and only if nothing changed since ("Receipt details changed. Validate them again before posting."). Posting is saved once even if repeated.
- **BLOCKS:** a manual GRN needs a **Receipt without PO** code, cannot be used for tools or other items (they need a requisition and PO), and is approved by someone other than its maker, after the invoice is attached.
- **BLOCKS:** reprinting labels already printed needs a reprint reason ("A reprint reason is required for previously printed lots"). Copies are 1 to 20.
- **BLOCKS:** a gate entry can be linked to one GRN only, and only if it is a material bill ("... is already linked to GRN ...", "... is not a material bill. Re-categorise it as Material first, or post the GRN without it.").
- **NEVER BLOCKS:** a GRN without a gate photo is allowed; the register shows **No gate photo**.
- **WARNS:** a challan number this vendor already used on another inward: "Challan ... was already used by this supplier on P/26/018 (30 Oct 2026). Check this is not the same delivery entered twice." It does not block.

- **AUTOMATIC:** inward number per plant and financial year (P, A or IN series; Jan–Mar 2027 stay under 26, and 1 April 2027 starts P/27/001); AIT serial per reel (one series per plant and financial year, restarting at AIT 00001 on 1 April; the Owner or Admin sets the next number once in System › Plants; numbers are never given twice in a year); coils slit later get the parent serial plus -1, -2; QC hold and an incoming QC task for every lot; PO balance and dated delivery rows updated (oldest date first); rate, quantity and specification cases opened; the plant head and Accounts notified of rate cases.

## Sample

Bharat Paper Mills delivers on 6 Nov 2026 against **RP-PM/54**, challan BPM/2231, invoice BPM/INV/884 dated 6 Nov.

| Vendor reel no. | Net kg | Width | Form |
|---|---|---|---|
| BPM-7781 | 702 | 1,000 mm | Reel |
| BPM-7782 | 655.5 | 1,000 mm | Reel |
| BPM-7783 | 654.5 | 1,000 mm | Reel |

Total 2,012 kg of Kraft 230 GSM; PO open 2,000 kg, so the strip shows "more than the PO by 12 kg — reason needed below". Invoice rate ₹45.25 / kg against PO ₹44.50 / kg: an amber note shows ₹1,509.00 more. Store picks OR-ROLL-WEIGHT with the note "Last reels of the order, supplier confirmed extra kg". Store validates and posts: **P/26/021**, 3 lots, **AIT 06281**, **AIT 06282** and **AIT 06283**, all **Waiting for QC**. A rate case opens for the plant head. Store prints three A4 labels: each reads AMIGO INDUSTRIES UNIT II, MILL NAME BHARAT (the vendor's short name), the invoice number, 06-Nov-26, PLYBOND 400, VARIETY 230, GSM 230 (no QC reading yet), the mill's roll number, the AIT serial in big letters and the weight. QC passes the reels the same afternoon and they appear under **Ready for the floor** on the reel issue desk.

## Common questions

**? The vendor sent only the challan. Can I still receive?**

Yes. Tick **Challan received · invoice pending**, type the challan rate if you have it, and attach the invoice later in the GRN register. The reels are not held for the invoice.

**? Why doesn't my PO appear in Approved purchase order?**

Only approved POs of that vendor with an open quantity are listed. It may still be waiting approval, fully received or closed.

**? Do I enter gross weight and tare?**

No. Enter only the net kg of each reel or coil (paper alone).

**? I typed the wrong weight and already posted. How do I fix it?**

A posted GRN cannot be edited. Raise a stock correction with the reason "Wrong GRN weight"; the Owner approves it (see the stock counts chapter).

**? Why does the inward number start with IN and not P?**

P is used only when every line is paper, A only when every line is adhesive. Anything else, or a mix, uses IN.

**? It is January 2027. Why is the number still P/26/...?**

The number follows the financial year, April to March. 26 means 2026-27; it changes to P/27/001 on 1 April 2027.

**? The label got wet. How do I print a new one?**

Open the receipt in the GRN register, type a **Reprint reason** and click **Prepare 1 label**. The reprint keeps the same AIT serial.

**? Why does the new reel say AIT 06281 and not AT-...?**

New reels follow the plant's own AIT series. Old reels keep their AT numbers; both can be scanned and searched.

**? The label shows the vendor name, not the mill name.**

The vendor has no **Mill / short name**. Ask the Owner or Admin to fill it in Masters › Vendors; the next print uses it.

**Why does the GSM on the label equal the variety?**

No GSM was measured at incoming QC yet, so the label prints the variety number, as the plant always has. Once QC measures it, a reprint shows the measured GSM.

**Can I find a reel by typing its serial?**

Yes. Type it any way (ait 6243, AIT-06243, AIT 6243-2); the search reads it as AIT 06243 or AIT 06243-2.

**The bill was photographed at the gate. Do I still type the challan and invoice?**

Yes. Pick the bill under **At the gate** and read the numbers from the photo beside the form. The photo is linked when you post.

**The At the gate card says "Vendor not given".**

The watchman did not pick a vendor. Pick the vendor on the form yourself.

**Why does my GRN say No gate photo?**

It was posted without a gate entry. If the watchman photographed the bill, click **Link gate entry** on the GRN.

**Can the reels go to the floor before QC?**

No. They show **Waiting for QC** until incoming QC passes them. Rate and invoice questions never hold them, but QC does.

## Related chapters

- Purchase orders, PO approvals and requisitions
- RM inward calendar and expected arrivals
- Invoice differences, debit notes and purchase reports
- Incoming QC
- Gate desk and visitors
- Doc Vault
- Issue to the floor (reels, coils and materials)

- Stock counts, stock book, locations and opening stock

# Issue to the floor: reels, coils and materials

**What it is:** the two store desks that send raw material to the production floor, the history of every issue, and the genealogy page that traces a reel from inward to dispatch. Reels and coils are issued by their label (the plant's AIT serial, or the AT number on older reels); adhesive, parchment and packing are issued by quantity.
**Who uses it:** the RM issue desk (RMIssue role), Store and the Plant Manager issue (Owner and Admin too). The store writes the slitting card from the slitter's figures. Planner and GRN read the issue history. Many roles read genealogy.
**Where:** Sidebar > Stores & inventory > Reel & coil issue (/inventory/reels/issue), Material issue (/inventory/production-issue), Issue history (/inventory/issue-history), Genealogy (/inventory/genealogy)

## At a glance

- **Issue to the floor, never to a machine or job card.** You pick only what goes out. The shift and date come from the clock when you press Issue: **Shift A** 08:00–20:00, **Shift B** 20:00–08:00 next morning, dated on the day the shift started.
- **Everything issued is used in full. Nothing comes back from the floor.** A reel or coil goes out whole (its full current weight). The job card records production and the stock count settles consumption.
- **Only stock that passed incoming QC can go.** Reels and lots waiting for QC, failed or rejected are listed separately with the reason. Invoice or rate questions never hold stock back.
- **A reel goes to the slitter and gets a slitting card; a coil goes straight to the winders.** The slitting card records coils made and wastage and feeds the slitting report.
- **Reel numbers.** New reels carry the plant's serial, for example **AIT 06281**; coils made from a reel carry the reel's serial plus -1, -2 (AIT 06281-1). Older reels keep AT-... numbers. The desk finds both: scan the QR, or type the serial in any form ("ait 6281", "AIT-06281-1").
- **Boxes for finished goods** are issued here by pieces like any packing. The month's packing theory comes from the boxes packed on job cards (1 box plus the spec's plastic and fadda per box), so the stock count compares what was issued with what the boxes used.
- **Parchment is issued by colour and kg**, oldest cleared coil first, on the material desk, not by coil number. Plastic is issued in kg, boxes in pieces.

## The flow

### Reel and coil issue

1. **Scan or pick reel** — RM issue/Store
2. **Issue N to floor** — shift from clock
3. **Reel goes to slitter**
4. **Write slitting card** — RM issue/Store — coils made, wastage
5. **Slitting report**

If it goes wrong after **Issue N to floor**

1. **Coil goes to winders**
2. **Used by the job cards**

If it goes wrong after **Scan or pick reel**

1. **Not cleared by QC**
2. **Inspect now** — QC
3. **Ready for the floor**

### Material issue

1. **Pick material or scan lot** — RM issue/Store
2. **Choose lot** — optional, oldest first
3. **Enter quantity**
4. **Issue to floor** — shift from clock
5. **Issue history and stock book**

### Wrong reel issued

1. **Wrong reel issued**
2. **Issue the right reel** — RM issue/Store
3. **Stock count finds wrong reel** — Any role — Issued, but found in store
4. **Owner decides** — Owner — leave as used, or add back on QC hold

Issue is the last store step before production. Goods arrive through Goods inward and are cleared by Incoming QC; what was issued is checked against the stock book in the stock counts chapter.

## Screen tour

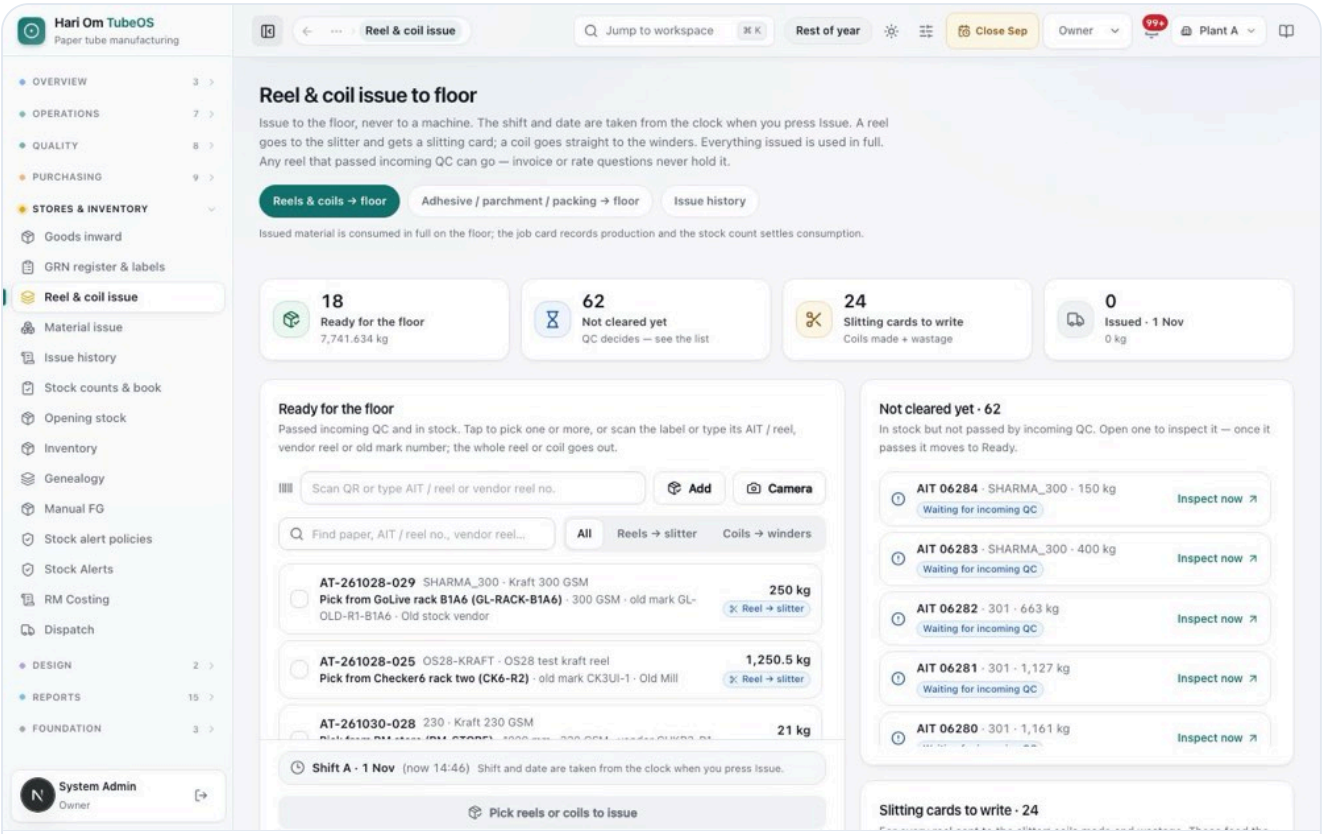



Figure: Reel & coil issue to floor. Tabs: Reels & coils → floor, Adhesive / parchment / packing → floor, Issue history. Tiles: Ready for the floor 18 (7,741.634 kg), Not cleared yet 57, Slitting cards to write 24, Issued · 31 Oct 0. The Ready for the floor panel has a scan box with Add and Camera, a search box, All / Reels → slitter / Coils → winders filters and reel rows such as "AT-261028-029 · SHARMA_300 · Kraft 300 GSM, Pick from GoLive rack B1A6, 300 GSM, old mark ..., 250 kg, Reel → slitter". The shift strip reads "Shift A · 31 Oct (now 11:50)". The Not cleared yet list on the right shows reels "Waiting for incoming QC" with Inspect now.

What you see:

1. **Desk tabs**: **Reels & coils → floor**, **Adhesive / parchment / packing → floor**, **Issue history**. Under them: "Issued material is consumed in full on the floor; the job card records production and the stock count settles consumption."
2. **Tiles**: **Ready for the floor** (count and kg), **Not cleared yet** (QC decides), **Slitting cards to write** and **Issued · date** (today's count and kg).
3. **Ready for the floor** panel: a scan box "Scan QR or type AT / vendor reel no." with **Add** and **Camera**, a search box (paper, AT or AIT number, vendor reel), the filter **All**, **Reels → slitter**,

**Coils → winders**, and the list. Each row shows a tick circle, the reel number (AIT serial on new reels, AT number on older ones), material, **Pick from** rack, GSM, width, vendor reel or old mark, weight and a chip saying where it goes.

4. **Shift strip**: "Shift A · 31 Oct (now 11:50) · Shift and date are taken from the clock when you press Issue."
5. **Issue button**: "Pick reels or coils to issue" until something is picked, then **Issue 3 to floor · 1,960 kg**.
6. **Not cleared yet** (right): reels in stock but not passed by incoming QC, each with its reason (**Waiting for incoming QC**, **Failed incoming QC**, **Rejected by QC**) and **Inspect now** (QC, Store, Plant Manager, Owner, Admin) or **Ask QC to inspect**.
7. Further down: **Slitting cards to write** (each issued reel with **Write card**), **Issued today** (columns **Reel / coil**, **Went to** (Slitter or Winders), **Shift · time**, **Weight**, **Slitting card**), **Stock on hand** by paper (**Paper**, **Ready**, **Ready kg**, **Not cleared kg**) and, only if any exist, **Older open issues** from before floor issue started.

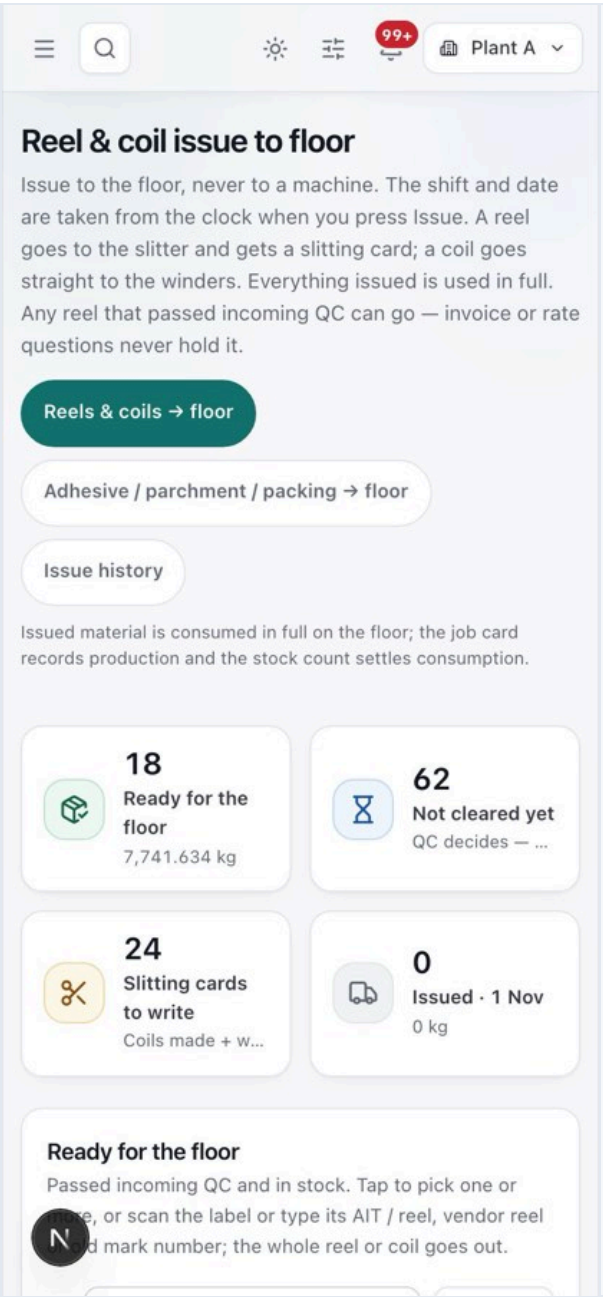



Figure: The same desk on a phone. The title and rules come first, the three desk tabs stack as large buttons, and the four tiles sit two by two (18 ready, 57 not cleared, 24 slitting cards, 0 issued today). Ready for the floor follows below. After a scan, the page scrolls to the Issue button so one tap issues it.

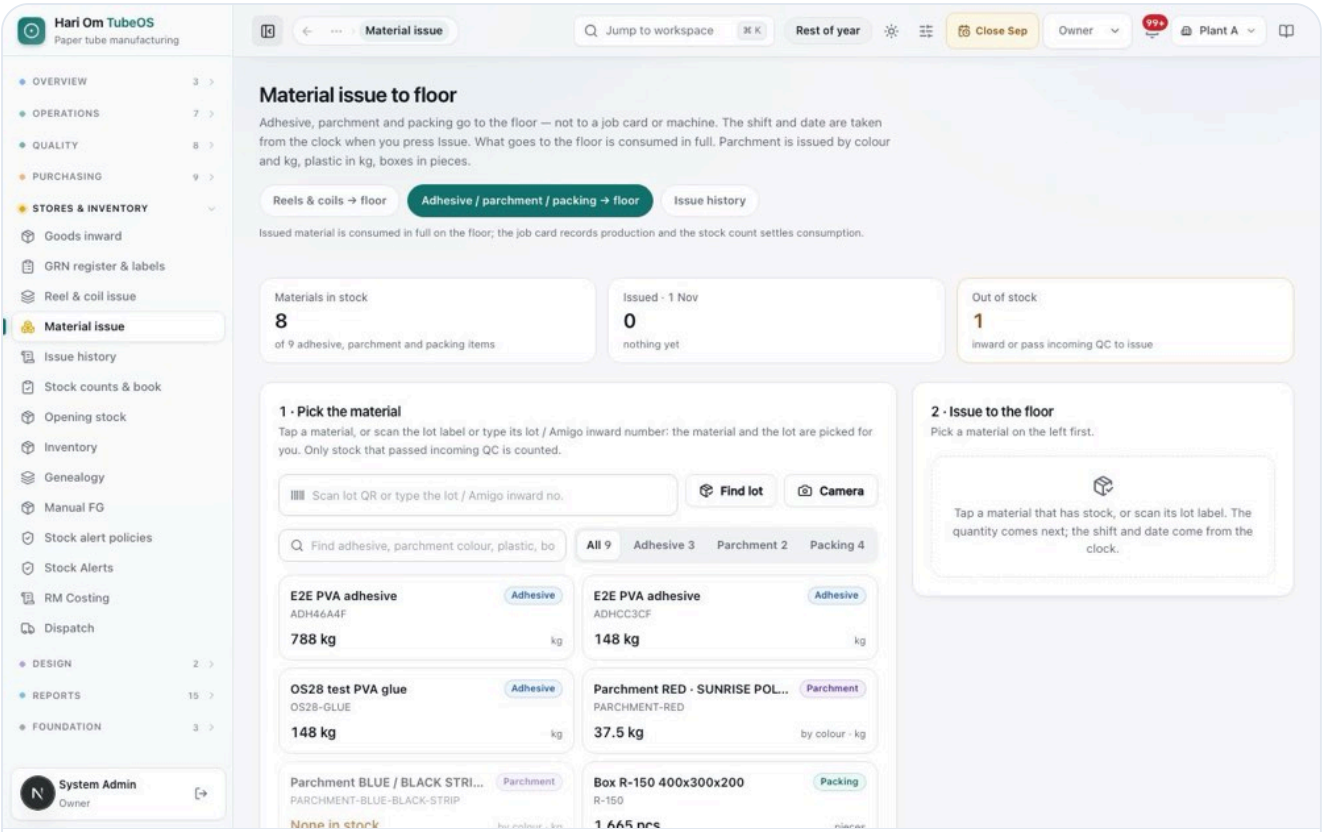



Figure: Material issue to floor. Tiles: Materials in stock 8 (of 9 adhesive, parchment and packing items), Issued · 31 Oct 0, Out of stock 1. Panel 1 · Pick the material has a lot scan box with Find lot and Camera, a search box, kind filters All 9 / Adhesive 3 / Parchment 2 / Packing 4 and material cards such as "E2E PVA adhesive, ADH46A4F, 788 kg" and "Parchment RED · SAGAR POLY..., 37.5 kg, by colour · kg". Panel 2 · Issue to the floor says "Pick a material on the left first."

What you see:

1. **Tiles**: **Materials in stock**, **Issued · date**, **Out of stock** ("inward or pass incoming QC to issue").
2. **1 · Pick the material**: scan box "Scan lot QR or type the lot / Amigo inward no." with **Find lot** and **Camera**; search box; kind filter **All**, **Adhesive**, **Parchment**, **Packing**; material cards with the cleared quantity and unit ("by colour · kg" for parchment, "pieces" for boxes). Only stock that passed incoming QC is counted.
3. **2 · Issue to the floor** (after picking): the material and "Cleared for issue: 788 kg in 3 lots"; **Lot (Amigo inward no.)** choices, with **Oldest first (FIFO)** selected by default and each lot's rack and inward date; a **Pick from** line with the rack; **Quantity** with "... available" and quick-quantity buttons; the shift strip; **Note** (optional); and **Issue 25 kg to floor**. For parchment, instead of lots it shows "Coils this issue takes", oldest first.
4. **Issued to the floor today**: by material and shift; parchment shows the coil it came from. **Issue history** link.

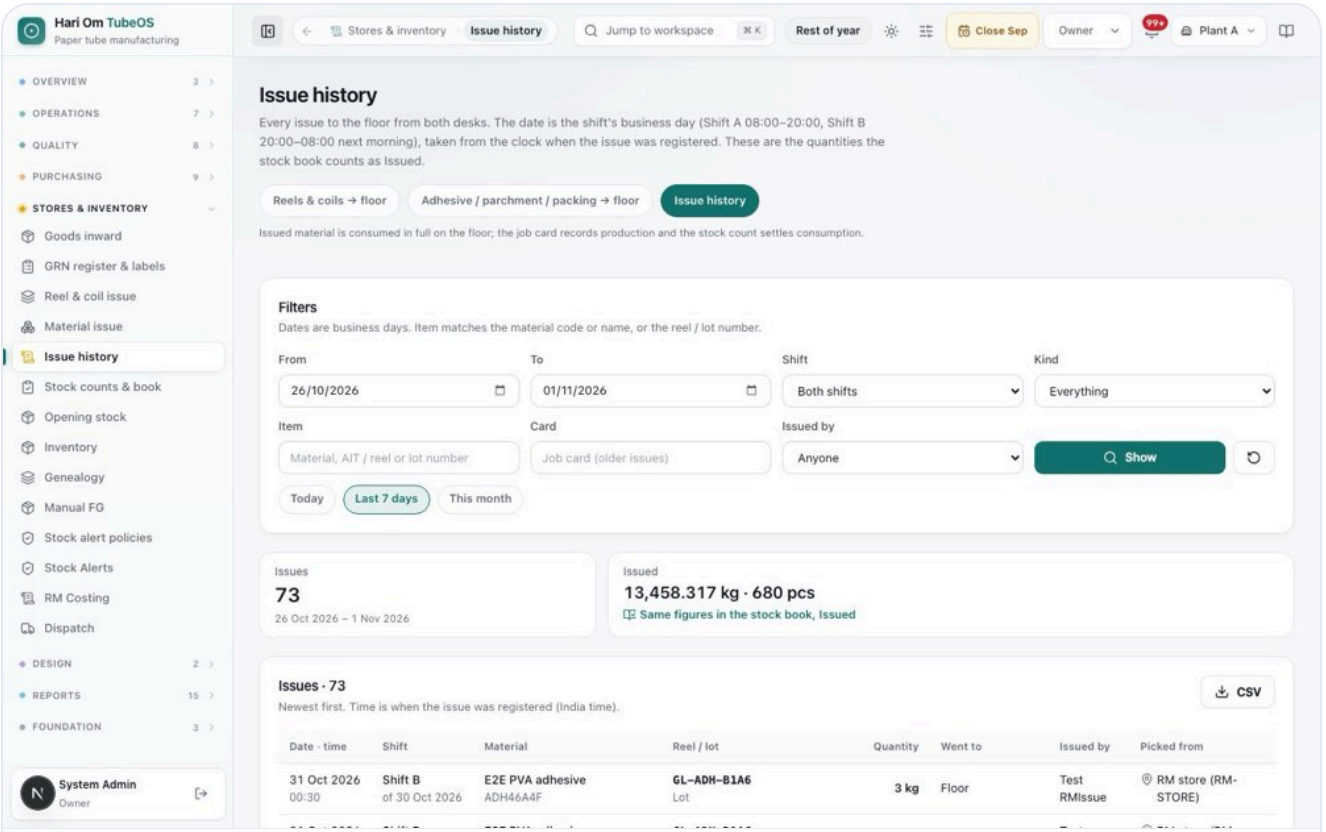



Figure: Issue history for 25–31 Oct 2026. Filters: From, To, Shift (Both shifts), Kind (Everything), Item, Card, Issued by (Anyone), Show and a reset button, plus Today / Last 7 days / This month. Tiles: Issues 79, Issued 14,328.317 kg · 840 pcs with a link "Same figures in the stock book, Issued". The table lists issues newest first, for example "31 Oct 2026 00:30 · Shift B of 30 Oct 2026 · E2E PVA adhesive · GL-ADH-B1A6 Lot · 3 kg · Floor · Test RMIssue · RM store".

What you see:

1. **Filters**: **From**, **To** (business days), **Shift** (Both shifts, Shift A (08:00–20:00), Shift B (20:00–08:00)), **Kind** (Everything, Paper reels & coils, Adhesive, parchment, packing), **Item** (material code or name, AT or lot number), **Card** (job card, older issues only), **Issued by**, **Show** and reset. Quick buttons **Today**, **Last 7 days**, **This month**.
2. **Tiles**: **Issues** (count and dates) and **Issued** (total per unit), with a link to the same figures in the stock book.
3. **Issues** table with **CSV**: **Date · time**, **Shift** ("Shift B of 30 Oct 2026"), **Material**, **Reel / lot**, **Quantity**, **Went to**, **Issued by**, **Picked from** (rack, or "No rack").

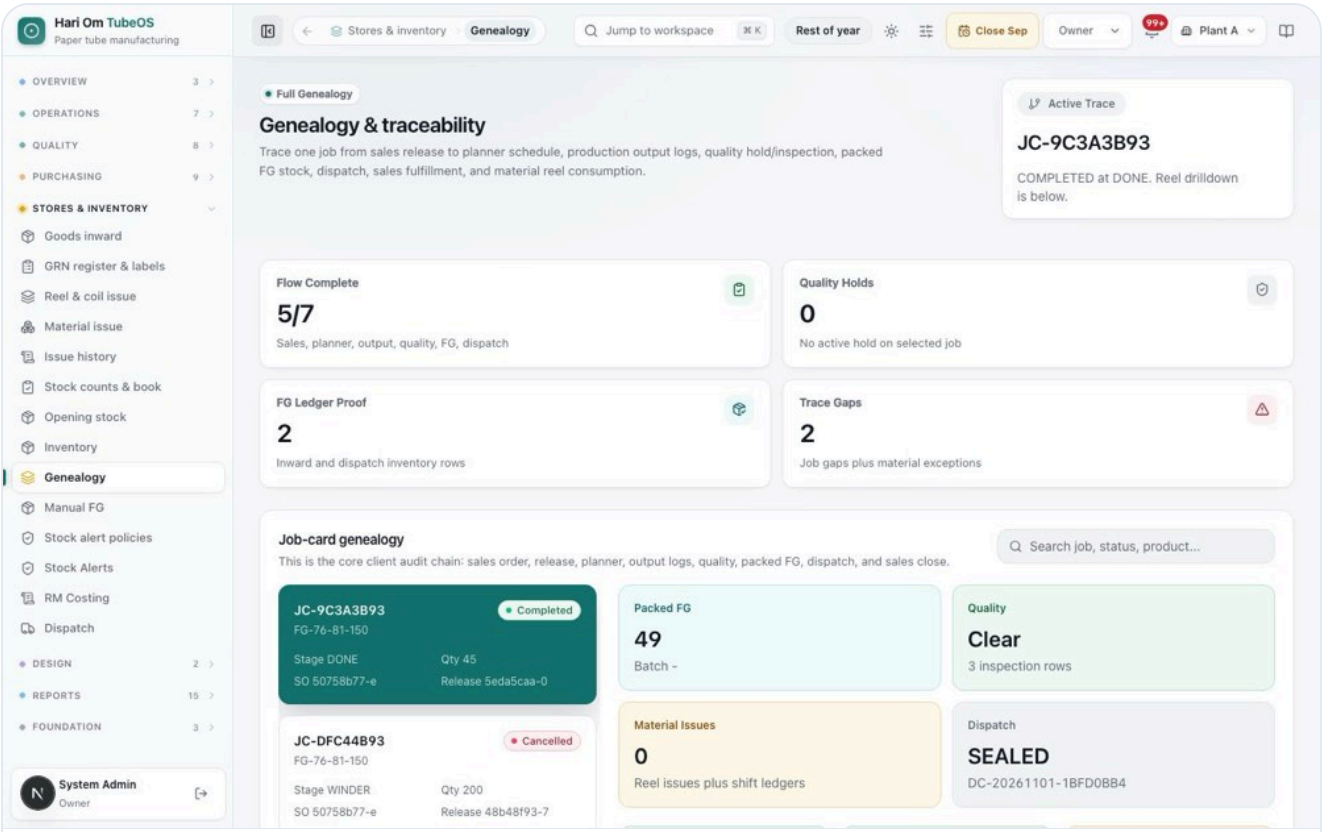



Figure: Genealogy & traceability. An Active Trace card shows the chosen job card (COMPLETED at DONE). Tiles: Flow Complete 6/7, Quality Holds 0, FG Ledger Proof 1, Trace Gaps 2. The Job-card genealogy panel lists job cards on the left and shows Packed FG 893, Quality Clear, Material Issues 0 and Dispatch SEALED for the selected card.

What you see:

1. **Active Trace** card and tiles: **Flow Complete** (steps done out of 7: sales, planner, output, quality, FG, dispatch), **Quality Holds**, **FG Ledger Proof** and **Trace Gaps**.
2. **Job-card genealogy**: search box and job card list; for the chosen card, panels such as **Packed FG**, **Quality**, **Material Issues** and **Dispatch**.
3. Further down (reel trace): **Reel selector** ("Scan the label or search reel code..."), **Genealogy chain** with five steps (**Inward reel** with kg received and vendor or "Opening stock (date)", **Slitting lineage** with parent or child reel, **Production issue** with kg issued and consumed, **Scan proof**, **FG and dispatch bridge**), **Linked reel issues**, **Scan and slit timeline** and **Genealogy exceptions** (trace gaps to fix before audit).

## Step by step

### How to issue reels and coils to the floor

Roles: RMIssue, Store, Plant Manager, Owner, Admin.

1. Open **Reel & coil issue**.
2. Scan the reel's QR label with the scanner or **Camera**, or type its AIT serial (or older AT number), vendor reel number or old mark in the scan box and press **Add**. Case, spaces and dashes do not matter; "ait 6281" finds AIT 06281. You can also tap rows in the **Ready for the floor** list.
3. The message confirms: "AIT 06281 added · reel → slitter." If the number fits several reels, a short list appears; tap the one in your hand.
4. Repeat for every reel and coil going out. A reel scanned twice stays picked once.
5. Check the shift strip, then click **Issue 3 to floor · 2,012 kg**. Each reel goes out at its full weight.
6. The message says "3 issued to the floor · Shift A · 6 Nov. Write the slitting card for the 3 reels once slit." with an **Issue history** link. Reels move to **Issued today**; reels sent to the slitter appear under **Slitting cards to write**.

## How to write a slitting card

Roles: RMIssue, Store, Plant Manager (Owner and Admin too).

1. Under **Slitting cards to write**, click **Write card** on the reel.
2. Fill **Coils made** (a whole number above 0), **Wastage kg** (0 up to the reel's weight), and if known **Coil width mm**, **Slitter operator** and **Notes**.
3. Click **Save slitting card**. The message says "Slitting card saved for AIT 06281: 7 coils, 12 kg wastage." The card feeds the slitting report.
4. A saved card can be corrected only by the Plant Manager, Owner or Admin, with a reason.

## How to issue adhesive, parchment or packing

Roles: RMIssue, Store, Plant Manager, Owner, Admin.

1. Open **Material issue** (or the **Adhesive / parchment / packing → floor** tab).
2. Tap the material card, or scan the lot label / type its Amigo inward number. Scanning picks both the material and the lot.
3. Leave **Oldest first (FIFO)** or tap a specific lot. Read the **Pick from** rack.
4. Type the **Quantity** (whole pieces for boxes) or tap a quick quantity.
5. Optionally add a **Note** (for example "for the night shift") and click **Issue 25 kg to floor**.
6. The message says, for example, "25 kg of E2E PVA adhesive issued to the floor · Shift A · 6 Nov. 763 kg left in stock."
7. For parchment, pick the colour and type the kg; the desk shows which coils the issue takes, oldest first.

## How to find and export past issues

Roles: Store, Plant Manager, RMIssue, Planner, GRN (Owner and Admin too).

1. Open **Issue history**.
2. Set **From** and **To**, or click **Today**, **Last 7 days** or **This month**. Narrow by **Shift**, **Kind**, **Item** or **Issued by** and click **Show**.
3. Click **CSV** to download the rows (date and time in India time, shift day, shift, material code and name, reel or lot, quantity, where it went, who issued it and the rack).

### How to trace a reel

1. Open **Genealogy**, or scan the reel's QR from the scan page.
2. In **Reel selector**, scan the label or type the reel code and pick the reel.
3. Read the **Genealogy chain**: where it came from, slit parent or children, issues, scans and whether consumption is closed. Check **Linked reel issues** and the **Scan and slit timeline** for the details.
4. To trace an order instead, pick a job card in **Job-card genealogy**.

### What to do if the wrong reel was issued

There is no undo: an issue to the floor is final and the reel counts as used.

1. Issue the correct reel normally.
2. If the wrong reel is still physically in the store, tell the Store in-charge. At the next stock count it is scanned and shows as **Issued, but found in store**.
3. The Owner decides when approving the count: **Leave as used (no change)** or **Add as new stock on QC hold**. Added stock must pass incoming QC again before it can be issued.

## Rules the system enforces

- **BLOCKS:** only stock with a cleared QC status can be issued. A held reel shows "AIT 06290 cannot go to the floor yet: waiting for incoming QC." A held lot shows "Lot … cannot be issued: it has not passed incoming QC yet. Only QC-cleared lots go to the floor."
- **BLOCKS:** a reel goes out whole ("… goes to the floor whole: issue its full 702 kg"). A reel already issued is refused ("… was already issued to the floor (Shift A, 6 Nov) and is used up. Nothing is left to issue."). Scrapped reels and reels with no weight cannot be issued.
- **BLOCKS:** parchment coils are not issued by coil number on the reel desk ("Parchment is issued by colour and kg, not by coil number."). Paper reels are not issued on the material desk ("Use reel/coil issue so physical identities and mandatory slitting are preserved."). Finished goods are never issued to the floor; they leave on a dispatch.
- **BLOCKS:** a quantity above the cleared stock is refused ("Only 40 kg of … is in stock and cleared for issue. You asked for 50 kg."; "Not enough cleared stock of … to issue …"). A chosen lot cannot give more than it holds.

- **BLOCKS:** labels from another plant ask you to switch plant; a rack, tool or job card label is refused with what it is.
- **BLOCKS:** no issue can be dated inside a month that has been closed.
- **BLOCKS:** a slitting card needs coils made above 0 and wastage between 0 and the reel weight; a written card is corrected only by the Plant Manager, Owner or Admin with a reason.
- **BLOCKS:** material issued to the floor cannot be returned ("Material issued to the floor is consumed in full; nothing comes back. Record the slitting card instead.").
- **AUTOMATIC:** shift and business date from the clock; reel → slitter and coil → winders; oldest cleared lot or coil first unless a lot is chosen; each issue saved once even if the button is pressed twice; the issue counts as **Issued** in the stock book.
- **FLAGS: Genealogy exceptions** lists slit children heavier than their parent reel, or children on QC hold, blocked or scrapped.

## Sample

Friday 7 Nov 2026, 10:15 (Shift A). Ramesh on the RM issue desk scans three reels of Kraft 230 GSM from GRN P/26/021 that QC passed yesterday, and one coil.

| Label number | Form | Weight | Went to |
|---|---|---|---|
| AIT 06281 | Reel | 702 kg | Slitter |
| AIT 06282 | Reel | 655.5 kg | Slitter |
| AIT 06283 | Reel | 654.5 kg | Slitter |
| AT-261104-011 (older reel number) | Coil | 98 kg | Winders |

He clicks **Issue 4 to floor · 2,110 kg**. At 13:00 Ramesh writes the slitting card for AIT 06281 from the slitter's figures: 7 coils, 12 kg wastage. Ramesh then issues 25 kg of PVA adhesive (oldest lot A/26/005) and 400 pcs of Box R-150 to the floor. In **Issue history** for 7 Nov, Shift A, the six issues appear with Ramesh's name and the racks they came from; the CSV matches the stock book's **Issued** column.

## Common questions

**The label says AIT 06281 but the desk asks for an AT number. Which do I type?**

Type what is on the label. New labels carry the AIT serial; older ones the AT number. Both are found.

**Why isn't there a shift or date box?**

The shift and date come from the clock when you press Issue. An issue at 01:30 on 7 Nov is Shift B of 6 Nov.

**A reel is in the store but not in Ready for the floor. Why?**

It has not passed incoming QC. It is under **Not cleared yet** with the reason. Ask QC to inspect it, or use **Inspect now** if you have QC access.

**Can I issue half a reel?**

No. A reel or coil goes to the floor whole. Material issue (adhesive, packing, parchment) is by quantity.

**The floor did not use all the adhesive. Can I take it back into stock?**

No. Nothing comes back from the floor; the stock count settles what was really used.

**I issued the wrong reel. How do I undo it?**

You cannot undo an issue. Issue the right reel. If the wrong one is still in the store, the next stock count shows it as "Issued, but found in store", and the Owner decides whether to add it back on QC hold.

**I scanned a parchment coil on the reel desk and got a message.**

Parchment is issued by colour and kg on the material desk. Click **Open material issue** in the message.

### What does the RMIssue role allow?

Raw material issue only: issue reels, coils and materials to the floor, write slitting cards, read issue history and genealogy, and take part in stock counts. Its home page is Reel & coil issue.

### What are "Older open issues"?

Reels issued to a machine before floor issue started. Close each once with **Used kg**, or **Back to stock, then issue to floor** to return it unchanged and issue it again. New issues never appear here.

### Why does the desk say "Stock is still loading"?

You scanned before the stock list finished loading. The label is checked as soon as it is ready; you do not need to scan again.

## Related chapters

- Goods inward, GRN register and labels
- Incoming QC
- Stock counts, stock book, locations and opening stock
- Reports (slitting report)
- Using TubeOS on a phone (scanning labels)
- Job cards

STOCK CONTROL, REPORTS AND SETUP

# Stock counts, stock book, locations and opening stock

**What it is:** the one place where the store counts its racks, corrects stock with the Owner's approval, reads the month's stock book, manages racks with QR labels, and (once, at go-live) enters the stock already in the plant.
**Who uses it:** every role can count; Store, RM issue, GRN and the Plant Manager raise corrections; only the Owner approves counts and corrections; Owner and Admin enter opening stock.
**Where:** Sidebar > Stores & inventory > Stock counts & book (/inventory/stock-control, tabs **Counts**, **Corrections**, **Stock book**, plus **Locations** at /inventory/locations). Opening stock: Sidebar > Stores & inventory > Opening stock (/inventory/opening-stock).

## At a glance

- **Anyone counts, only the Owner approves.** A count or a correction changes stock only when the Owner approves it. Admin cannot approve.
- **Two kinds of count.** A **Spot count** (a few racks, a few materials or the whole store) can run any day. A **Month-end count** covers every rack and the stock with no location, once per month; when approved it becomes the month's stock certificate.
- **Nothing comes back from the floor.** A reel or lot issued to the floor is used on its issue day. A count never "un-issues" it, and a correction cannot put it back.
- **Stock found without a known label goes on QC hold.** Incoming QC stays the only gate before anything can be issued.
- **The stock book is per material and per month:** Opening + Received – Sent back – Issued ± Corrections = Closing, always in the material's own unit (kg is never added to pcs).

## The flow

### Count to stock

1. **Start count** — Any role
2. **Count each rack** — Any role — scan reels and lots
3. **Rack done** — unscanned lots marked not found
4. **Send to the Owner** — Any role
5. **Approve and post** — Owner — stock changes

If it goes wrong after **Send to the Owner**

1. **Send back** — Owner — racks to recount, with note
2. **Count each rack** — Any role

If it goes wrong after **Count each rack**


1. **Cancel count** — Owner or starter — stock does not change

### Stock correction outside a count

1. **Raise a correction** — Store/RM issue/GRN/Plant Manager
2. **Waiting for the Owner**
3. **Approve** — Owner — posted today
4. **Stock book shows it**

If it goes wrong after **Waiting for the Owner**

1. **Reject with note** — Owner
2. **Stock does not change**

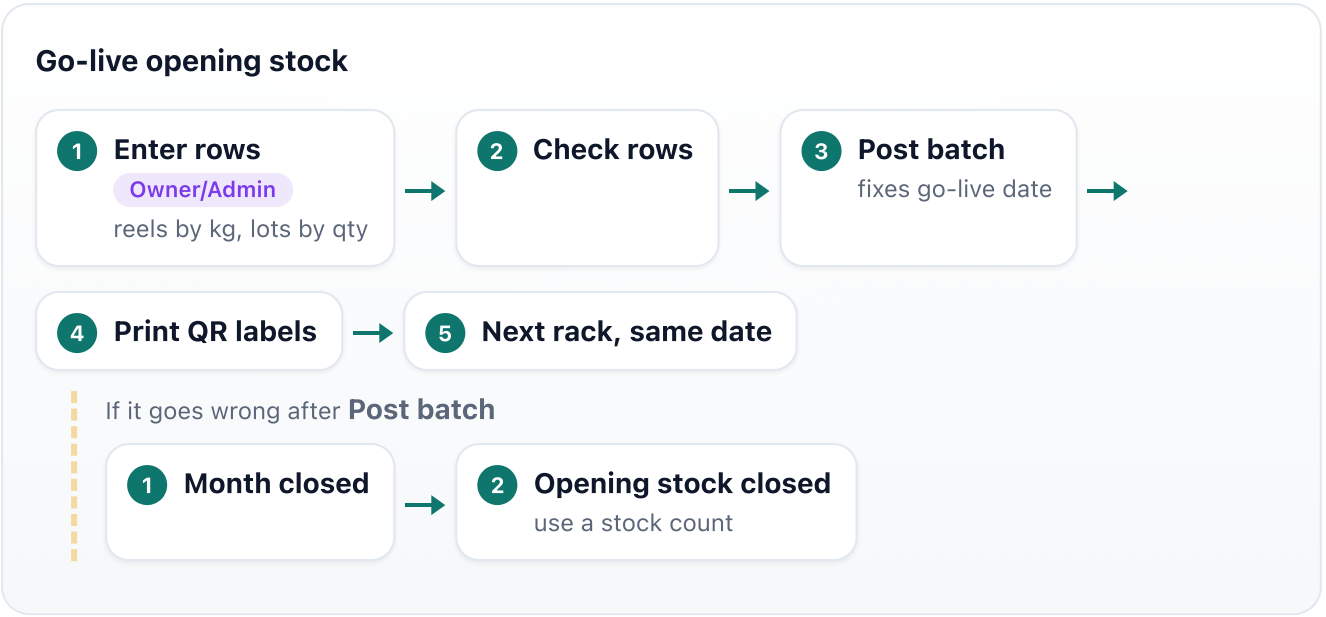


A count is worked rack by rack and only touches stock at the Owner's approval. Small fixes between counts go through a correction. Opening stock is a one-time go-live step; after the go-live month is closed, a count is the only way to fix stock.

## Screen tour

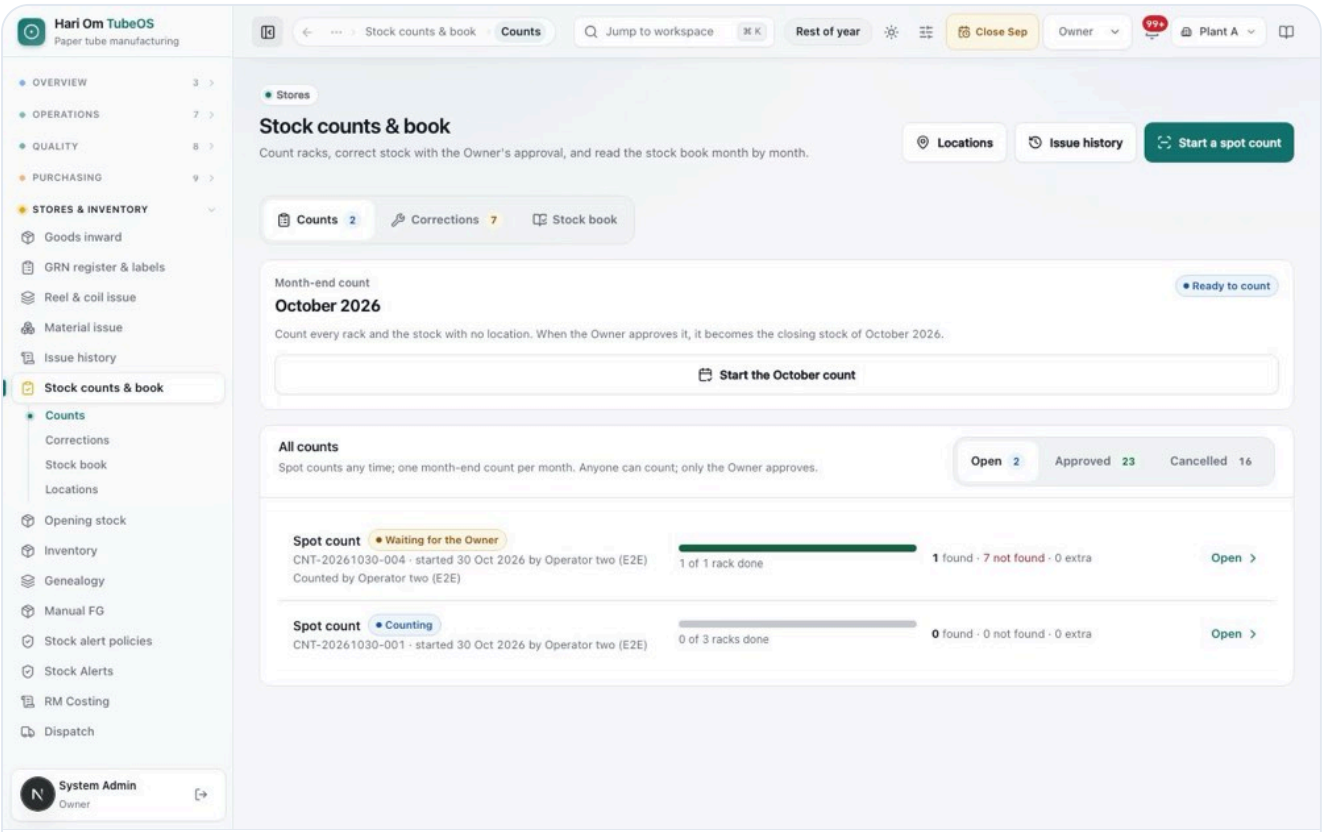



Figure: The Stock counts & book page on the Counts tab. At the top is the month-end count card for October 2026 with a **Start the October count** button. Below it is **All counts**, with Open, Approved and Cancelled filters and two open spot counts.

What you see:

1. **Header buttons**: **Locations** (rack list), **Issue history** (every issue to the floor, which feeds the book's Issued column) and **Start a spot count**.
2. **Tabs**: **Counts** (the badge shows how many counts are open), **Corrections** (the badge shows how many wait for the Owner) and **Stock book**.
3. **Month-end count card**: the month the store should count now. The chip says **Ready to count**, **Not open yet**, **Counting**, **Waiting for the Owner**, **Approved · month certificate** or **Month closed**. If the count cannot start yet, the card says why (for example, it opens in the last 3 days of the month). When the earlier month's count is approved but that month is not closed yet, a second card for it is shown too.
4. **All counts** list: each row shows the kind (**Spot count** or **Month-end count**), its status, the count number (like CNT-20261030-004), who started it and when, who counted, a rack progress bar ("1 of 1 rack done") and the result ("1 found · 7 not found · 0 extra", plus "issued, found" when there are any). **Open** opens the count.

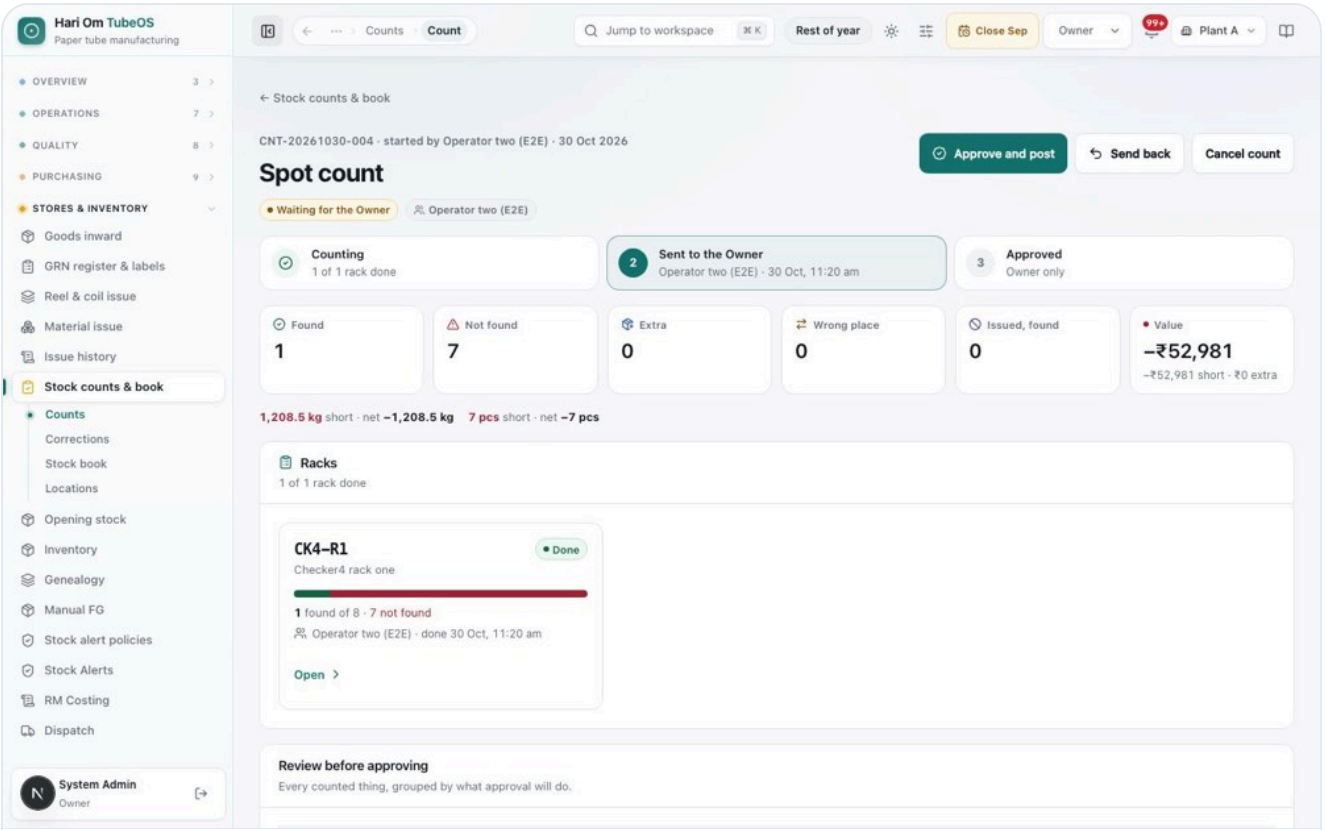



Figure: A spot count page while it waits for the Owner. The Owner sees **Approve and post**, **Send back** and **Cancel count**. A three-step bar shows Counting, Sent to the Owner and Approved. Tiles show Found 1, Not found 7, Extra 0, Wrong place 0, Issued found 0 and a Value of –₹52,981. One rack card shows 1 found of 8 and 7 not found.

What you see:

1. **Title line**: count number, who started it, date, kind and status chip, and the people who counted.
2. **Action buttons**: one main action at a time. While counting it is **Count** / **Continue counting** . When every rack is done, **Send to the Owner** appears. For the Owner, a submitted count shows **Approve and post** and **Send back**. **Cancel count** is shown to the Owner, or to the person who started the count while it is still being counted.
3. **Steps**: Counting (racks done), Sent to the Owner (who and when), Approved (Owner only). A month-end count's last step reads "Approved · certificate".
4. **Result tiles**: **Found**, **Not found**, **Extra** (includes stock without a label), **Wrong place**, **Issued, found** and **Value** (net ₹, with the ₹ short and ₹ extra underneath). Under the tiles, totals are shown per unit, for example "1,208.5 kg short · 7 pcs short".
5. **Racks**: one card per rack, plus a card for stock with no location. Each shows its status (**To count**, **Counting**, **Done**, **Count again**), a bar of found, not found and still to find, who counted and when it was marked done. If the Owner sent the rack back, the Owner's note is shown on it.
6. **Review before approving**: every line grouped by what approval will do. The groups are **Not found** (written off), **Extra stock**, **In the wrong place** (moved where found), **Quantity**

**different**, **Had no location** (filed where found), **Issued, but found in store**, **Used during the count**, **Arrived during the count**, **Moved away during the count**, **Moved after it was counted**, **Issued after it was counted**, and the collapsed **Found as the book says**. Each line shows the label, material, rack, Book qty, counted qty, who counted and the change in qty and ₹.

**The rack page** (opened from a rack card, /inventory/counts//rack/) is where the counting happens, usually on a phone. It shows **Found on this rack** with a progress bar and three lists: **Still to find**, **Not found** and **Counted here**. You scan each reel, coil or lot label. A reel counts at its label weight; tap the weight to re-weigh it. A lot asks "How much is here?". An unknown label or loose material opens **Stock without a label**, where you choose the material and quantity. **Rack done** asks you to confirm when lots are still unfound ("Mark 3 not found"), and **Look again** lets you go back. A rack marked done can be re-opened with **Look again** while the count is still being counted.

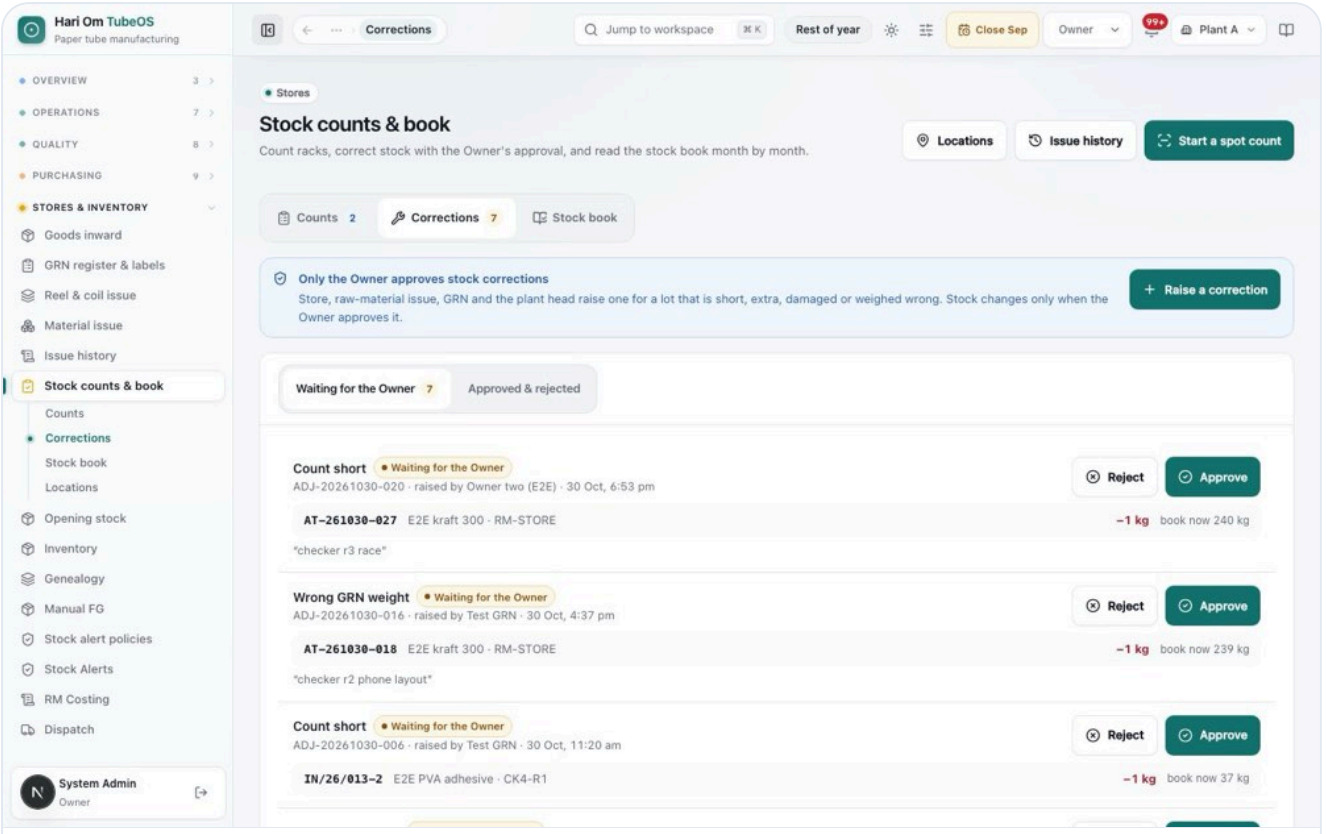



Figure: The Corrections tab. A blue note says only the Owner approves stock corrections, with a **Raise a correction** button. Below it, the **Waiting for the Owner** list shows corrections such as "Count short" and "Wrong GRN weight". Each has its voucher number, the lot, rack, change (−1 kg), the current book quantity and **Reject** / **Approve** buttons.

What you see:

1. **Notice and Raise a correction**: the button is shown only to roles that may raise (Store, RM issue, GRN, Plant Manager, Owner, Admin).
2. **List switch**: **Waiting for the Owner** (with count) and **Approved & rejected**.

3. **Correction card**: reason (Count short, Count extra, Damaged in store, Wrong GRN weight, Label lost / found, Other), status chip, voucher number (ADJ-YYYYMMDD-NNN), who raised it and when. Each line shows the lot or reel code, material and rack, the signed change and "book now". Cards made by a count show a **From a count** chip.
4. **Changed-since warning**: an amber line appears if the lot changed after the correction was raised. For example: "Since this was raised, this reel was issued to the floor ... reject this one". Or: "Approving now changes it by −0.5 kg".

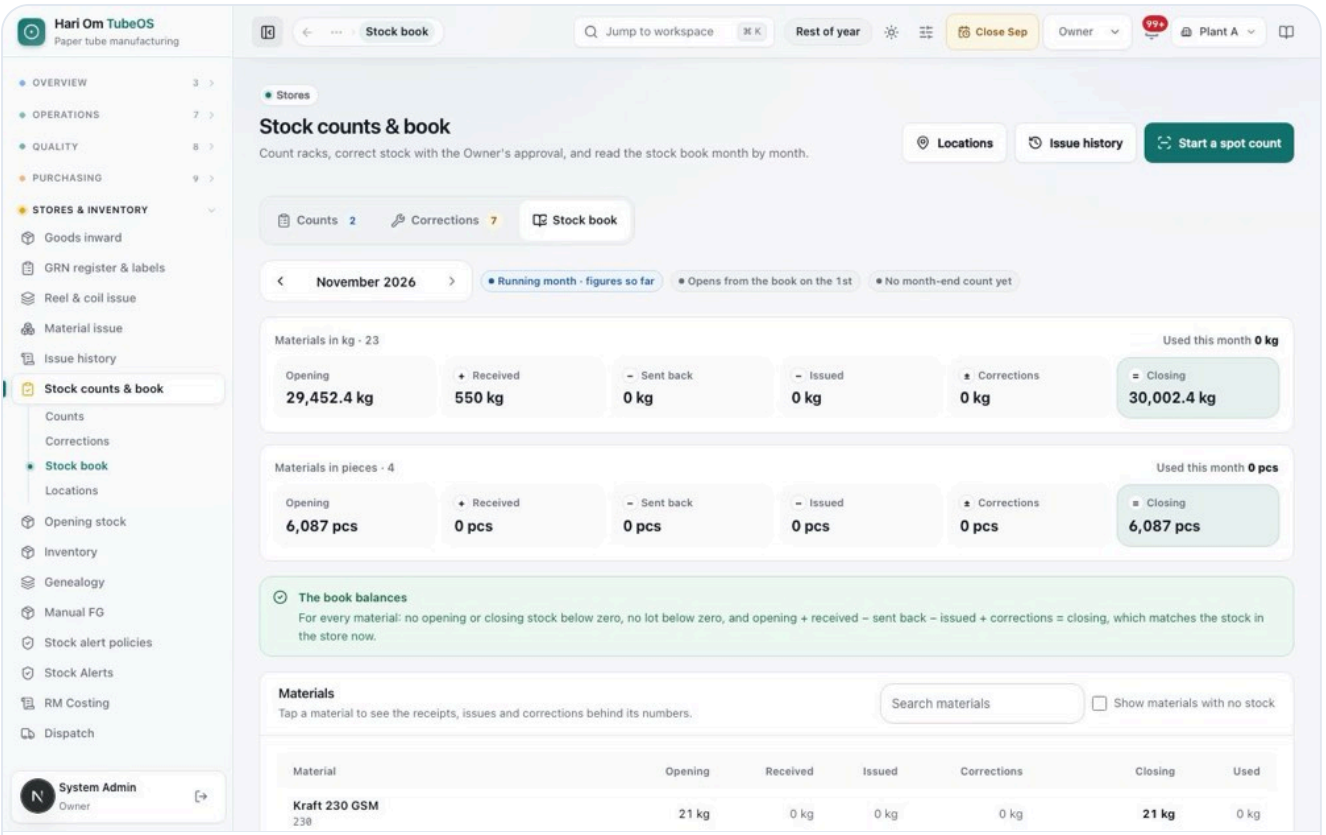



Figure: The Stock book tab for October 2026, the running month. One card covers materials in kg: Opening 0 kg, Opening loads 9,974 kg, Received 31,684 kg, Sent back 0, Issued 15,065.8 kg, Corrections −90.8 kg, Closing 26,501.4 kg. A second card covers materials in pieces. A green note says "The book balances".

What you see:

1. **Month picker** with previous and next arrows (you cannot go past the current month), and chips: **Running month · figures so far**, **Not closed yet** or **Month closed**; **Opens from last month's close** or **Opens from the book on the 1st**; and the month-end count state (click it to open the count).
2. **One card per unit** (kg, pcs and so on): Opening, Opening loads (only when there was go-live stock), Received (GRNs), Sent back, Issued, Corrections and Closing, plus **Used this month**.
3. **Balance check**: green **The book balances**, or red "N materials do not balance", naming each problem material (for example "opens below zero"). Month-end waits until it is fixed.

4. **Materials** table: search, a **Show materials with no stock** tick box, and one row per material with the same columns plus **Used**. A material that changed after the month-end count is marked "Changed after the month-end count". Clicking a row opens a side panel with every receipt, issue and correction behind the numbers (date, kind, lot, document, shift, reason, place).
5. **Go-live opening stock** strip (Owner and Admin only) with **Enter opening stock** or **See opening stock**.

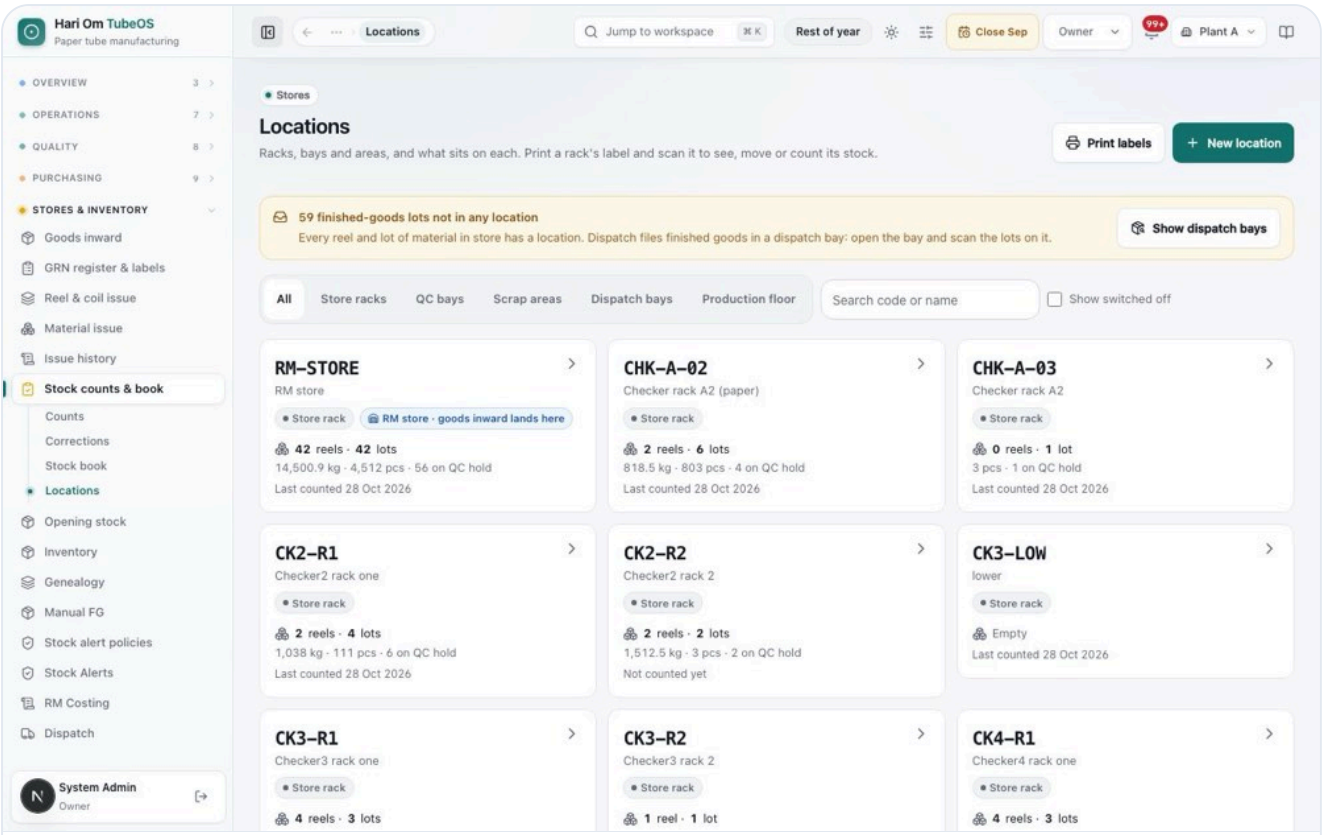



Figure: The Locations page with **Print labels** and **New location** buttons. An amber note says 45 finished-goods lots are not in any location. Filter chips are shown for All, Store racks, QC bays, Scrap areas, Dispatch bays and Production floor. Rack cards include RM-STORE (marked "RM store · goods inward lands here", 37 reels and 42 lots, 10,999.9 kg, 4,512 pcs, 51 on QC hold, last counted 28 Oct 2026).

What you see:

1. **Print labels** (select racks, then **Print N labels** or **Print all labels**) and **New location**: for Store, Plant Manager, Owner and Admin.
2. **Unplaced stock note**: "Not in any location yet: N reels and N lots", with **Put away by scan** (choose the rack you are at, then scan lots) and, for the Owner only, **Put all in RM store**. Finished-goods lots without a place are filed by Dispatch in a dispatch bay. When everything is placed the note turns green.
3. **Filters and search**, and **Show switched off**.
4. **Location cards**: code (big), name, kind chip (**Store rack**, **QC bay**, **Scrap area**, **Dispatch bay**, **Production floor**), the RM store chip, reels and lots on it, totals per unit, how many are

on QC hold, and **Last counted** date.

Opening a card shows the location page. It has **What is here** (**Reels & coils** and **Lots**), and the buttons **Move stock here**, **Count this rack** (starts or joins a spot count of that rack), **Raise correction** and **Print label**. Under **More actions** are **Edit name or code** and **Make this the RM store (goods inward lands here)**.

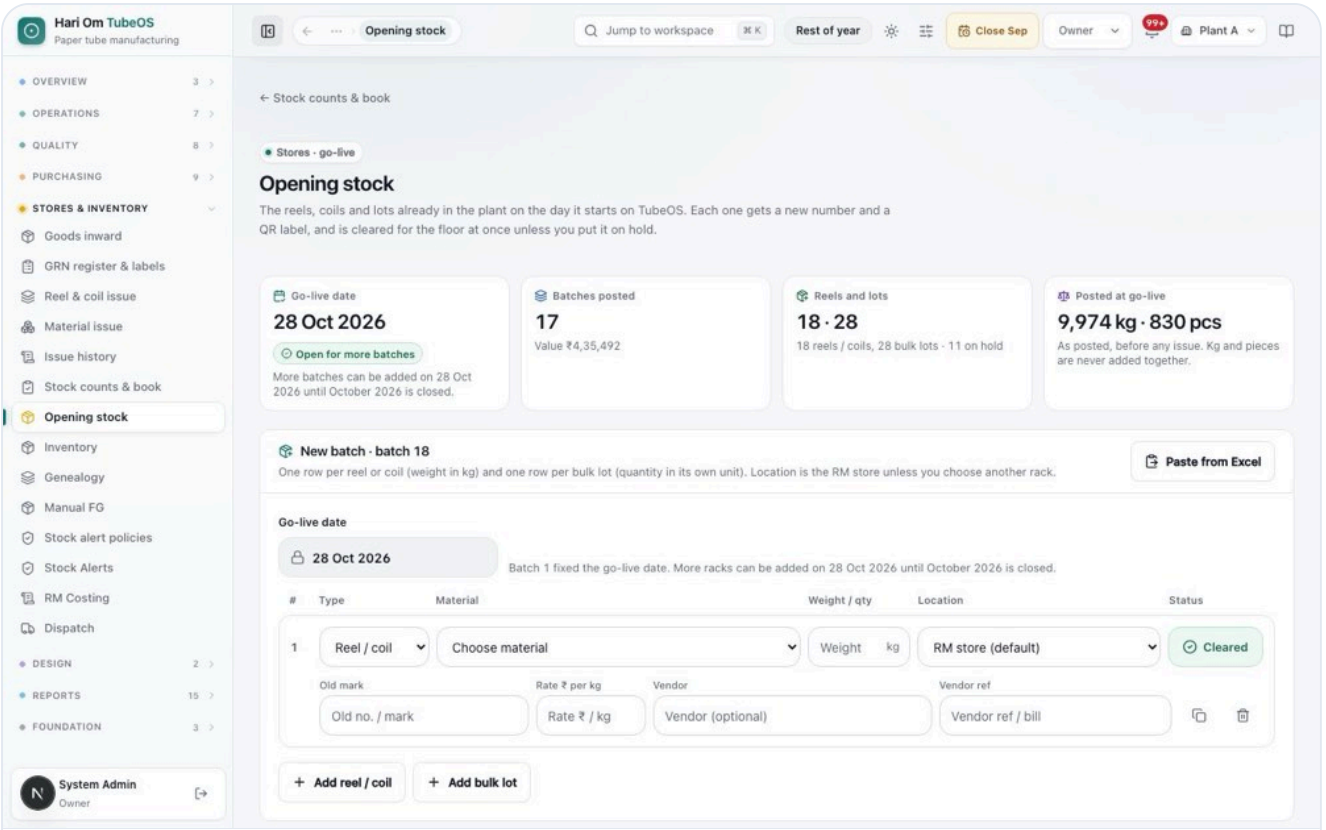



Figure: The Opening stock page. The tiles show the go-live date (28 Oct 2026, "Open for more batches"), batches posted (17, value ₹4,35,492), reels and lots (18 reels or coils, 28 bulk lots, 11 on hold) and what was posted at go-live (9,974 kg and 830 pcs). Below is the **New batch** form with a locked go-live date and one row: Type, Material, Weight / qty, Location (RM store default), Status (Cleared), Old mark, Rate, Vendor and Vendor ref.

What you see:

1. **Tiles**: **Go-live date** (with "Open for more batches" until the month is closed), **Batches posted** and their value, **Reels and lots**, and **Posted at go-live** (kg and pcs are never added together).
2. **New batch** form: **Paste from Excel**, a **Go-live date** field (locked after batch 1), and one row per reel or coil (**Reel / coil**, weight in kg) or per bulk lot (**Bulk lot**, quantity in its own unit). Each row has Location (default RM store), Status (**Cleared** or on hold, with **Why on hold** needed), **Old mark**, **Rate ₹ per kg/piece**, **Vendor** and **Vendor ref**. There are buttons to duplicate or remove a row.
3. **Add reel / coil**, **Add bulk lot**, **Clear all rows**, then **Review before posting** (totals per material) and **Post opening stock?**.

4. **Posted batches**: every batch so far, newest first, with label reprint.

## Step by step

### How to start a spot count

Any signed-in role. One plant must be selected at the top (Owner and Admin pick the plant).

1. Open **Stock counts & book** and click **Start a spot count**. The **Start a spot count** sheet opens.
2. Under **What to count**, choose **Some racks** (tick the racks), **Some materials** (search and pick; the racks that hold them are added for you) or **Whole store** (every store rack plus stock with no location).
3. Confirm. The count opens with one card per rack. The system refuses a rack that is already in another open count, with a message like "CK2-R1 is already in spot count CNT-20261030-001, which is still being counted", and gives you a link to open that count.

Tip: on a rack's own page, **Count this rack** starts a spot count of that rack, or joins one already running there.

### How to start the month-end count

1. On the **Counts** tab, look at the **Month-end count** card. When it says **Ready to count**, click **Start the count**.
2. The count covers every store rack and the stock with no location. If someone else already started it, you join the same count. There is never a second count for the same month.
3. If the card says **Not open yet**, read the reason. The running month opens only in its last 3 days. A month that has ended can be counted until it is closed. A month that is already closed, or that has a later closed month, cannot be counted.

### How to count a rack

1. On the count page, tap a rack card (or **Count** ). The rack page opens.
2. Scan each reel, coil or lot label on that rack. A reel is counted at its label weight. To re-weigh it, tap the weight and enter the scale reading (it cannot be more than its inward weight). A lot asks "How much is here?"; type the quantity you see and tap **Save count**.
3. For a label the system does not know, or material with no label, use **Stock without a label**: pick the material, enter the quantity and add a note if useful. It becomes a new lot on QC hold when the Owner approves.
4. To take a scan back, tap the undo arrow next to the line.

5. Tap **Rack done**. If lots the book expects are still not scanned, the sheet lists them and offers **Mark N not found**, or **Look again**. Lots that arrived on the rack after you started it are left out and are never marked not found. Reels issued from the rack while you counted are recorded as "Used during the count", not missing.
6. Repeat for every rack. Several people can count different racks at the same time.

## How to send the count to the Owner

1. When every rack is **Done**, **Send to the Owner** appears at the top of the count page.
2. Click it, add an optional note and click **Send**. Counting is now locked. If a rack is not done, the system refuses with "2 racks are not done yet: CK2-R1, CK3-R2."

## How to approve a count (Owner)

1. Open the count from the **Open** list. Read **Review before approving** group by group.
2. For each **Issued, but found in store** line, choose **Leave as used (no change)** or **Add as new stock on QC hold**. Approval is refused until every such line is decided.
3. Click **Approve and post**. The sheet lists what will happen: not-found lots are written off by their own label, lots with a different quantity are set to the counted qty, extra known lots add back, stock without a label becomes new lots on QC hold, and wrong-place lots move to where they were found. It also shows the net ₹ value and the posting date.
4. Click **Approve and post** again to confirm. A green note shows the voucher number (VAR-YYYYMMDD-NNN), the number of lines posted and the date. A month-end count becomes the stock certificate for that month.
5. If new lots were made, click **Print N new labels** and stick the labels on before the lots are moved.

## How to send racks back for a recount (Owner)

1. On a submitted count, click **Send back**.
2. Pick **Why it is counted again** from the list **Correction rejected / count sent back** (AR-RECOUNT Recount needed, AR-NO-PROOF No proof or photo, AR-WRONG-ITEM Wrong item or lot, AR-WRONG-QTY Quantity looks wrong, AR-OTHER), write in the note what should be counted again, and tick the racks. If you tick none, all racks go back.
3. Click **Send back**. The racks show **Count again** with your note. Scans already made stay. Lines made by Rack done are cleared so they are rebuilt when the rack is finished again.

## How to cancel a count

1. Click **Cancel count**, add an optional reason and confirm. Stock does not change and the count stays in the **Cancelled** list.
2. The Owner can cancel any open count. The person who started it can cancel only while it is still being counted. An approved count cannot be cancelled.

## How to raise a stock correction

Store, RM issue, GRN, Plant Manager, Owner or Admin.

1. On the **Corrections** tab click **Raise a correction** (or **Raise correction** on a location page).
2. Under **What to correct**, choose **A lot or reel** or **Found without a label**.
3. For a lot or reel: scan or type the code (for example AIT 06243, an older AT-261027-026, or IN/26/005-5). The sheet shows **Book now**. Enter **Quantity really there**, or tick **Not here / damaged (nothing usable left)**.
4. For stock found without a label: choose the **Material**, the quantity and, if you like, the location. If you leave the location empty, the RM store is used. It will be added as a new lot on QC hold.
5. Choose a **Reason** from the list **Stock correction**: COUNT_SHORT Count short, COUNT_EXTRA Count extra, DAMAGED_IN_STORE Damaged in store, WRONG_GRN_WEIGHT Wrong GRN weight, LABEL_LOST_FOUND Label lost / found, STOCK-OTHER Other. **Other** needs a written note of at least 5 characters.
6. Save. The correction waits for the Owner with a number like ADJ-20261030-020. Stock does not change yet.

## How to approve or reject a correction (Owner)

1. Open **Corrections** > **Waiting for the Owner**.
2. Read the amber note if the lot changed since it was raised. When nothing is left to post, **Reject** becomes the main button.
3. Click **Approve** to post it, dated today. Or click **Reject**, pick a reason from **Correction rejected / count sent back** (for example AR-NO-PROOF) with a note, and confirm; the person who raised it sees the reason and your note.

## How to read the stock book

1. Open the **Stock book** tab and choose the month with the arrows.
2. Read the unit cards for totals, then the **Materials** table. Click a material to see every movement behind its figures.
3. If the red "do not balance" note appears, tell the Owner. The month cannot be closed until the book balances.

## How to add, edit or switch off a location

Store, Plant Manager, Owner or Admin.

1. On **Locations** click **New location**. Fill **Code (on the label)**, **Name**, **What it is** (Store rack, QC bay, Scrap area or Dispatch bay), **Store / area**, and optionally **Zone** and **Bin**. Save.
2. To edit, open the location and use **More actions** > **Edit name or code**.

3. To switch a location off, first move out everything on it. You cannot switch off the RM store; make another rack the RM store first.

## How to print rack labels and lot labels

1. On **Locations** click **Print labels**, tick racks (or none for all) and click **Print N labels**. The **Rack labels** sheet prints on A4: a big code, the name and a QR. Stick one at eye level on each rack. Laminate them so they last. Scanning a rack QR with a phone camera opens that rack's page.
2. **Lot labels** for new lots made by a count are printed from the count page (**Print its label** or **Print N new labels**), or from **Lot labels**. Pick the **Label paper**: **A4 sheet · 8 per page** (cut them apart) or **One label per page**. Reels and coils print the plant's own reel label (heading, MILL NAME, invoice no., date, PLYBOND, VARIETY, GSM, ROLL NO., the AIT serial in big letters, WEIGHT and the QR; see "Goods inward, GRN register and labels"). Bulk lots print a lot label with the code and QR. Reel and coil labels do not print the QC state: "Lots on QC hold stay on hold until incoming QC clears them. Reel and coil labels do not print the QC state: scan the QR to see it."

## How to move stock to a rack

Store, GRN, RM issue, Plant Manager, Owner or Admin. Dispatch moves finished goods only.

1. Scan the rack label, or open the rack from **Locations**, and tap **Move stock here**.
2. Scan each reel or lot you put on it. Each line shows the result. Tap undo to put a move back (refused if the lot has moved again since).
3. QC status never changes when a lot is moved.

## How to enter go-live opening stock (Owner or Admin)

1. Open **Opening stock**. For the first batch, choose the **Go-live date** (not after today).
2. Add rows with **Add reel / coil** (weight in kg) and **Add bulk lot** (quantity in its unit), or use **Paste from Excel**. The columns, in order, are: item code or name, type (reel / coil / bulk), weight or qty, location, old mark, vendor, rate. A header row is skipped.
3. For each row, pick the material and location (the RM store by default), and keep **Cleared** or put it on hold with a **Why on hold** code from the list **QC hold placed** (for example QH-MOISTURE). Optionally fill the old mark, rate, vendor and vendor ref.
4. Review the totals per material. Fix any red row errors and read the warnings. Then post. The first posted batch fixes the plant's go-live date.
5. Print the labels for the new reels and lots and stick them on. Reels and coils get the next numbers of the plant's AIT series and print in the plant's own reel label layout. "Reels and coils print the plant's own label with a QR, numbered in the plant's AIT series. Print the A4 sheet (8 per page) and cut, or one label per page."

6. Enter the next rack the same way on later days. All batches use the same go-live date, until that month is closed.

## Rules the system enforces

- **Only the Owner approves** counts, corrections, send-backs, issued-but-found decisions and **Put all in RM store** (BLOCKS everyone else with "Only the Owner can do this."). An Admin, or an Owner switched to another desk, cannot approve.
- **Anyone may count and submit.** Every line keeps who counted it and when.
- **One month-end count per plant per month**. Two people starting it at once join the same count (automatic).
- **Month-end count window** (BLOCKS): the running month opens in its last 3 days. Months before the stock book starts, closed months, and months with a later closed month are refused. Approval is also refused if a later month was closed after the count started (LATER_MONTH_CLOSED).
- **No rack in two open counts** (BLOCKS, RACK_IN_OPEN_COUNT), so nothing is posted twice.
- **Submit needs every rack done** (BLOCKS). After submitting, counting is locked ("Counting is locked: this count is waiting for the Owner.").
- **A reel cannot weigh more than its inward weight** (BLOCKS) in a count or a correction.
- **Finished goods and tools are not counted** (BLOCKS, NOT_COUNTED). Materials outside a materials-only spot count are refused (NOT_IN_SCOPE).
- **Rack done** turns every expected lot not scanned into **Not found**. Lots that arrived after the rack was started, lots issued during the count and lots moved away during the count are never "not found" (automatic).
- **Issued, but found** (automatic flag, BLOCKS approval until decided): the issue is never reversed. The Owner leaves it as used, or adds it as a new lot on QC hold with a new label.
- **Approval posts one voucher** (VAR-YYYYMMDD-NNN) with exact reel and lot lines. A gain on a known lot keeps its QC state. Unknown or loose stock becomes a new lot on QC hold. A spot count posts today. A month-end count posts on the month's last day, or today if the month is still running. Lots received after the month end are changed on the approval day, on a second voucher.
- **A back-dated month-end posting may not push a material or lot below zero** in that month (BLOCKS; "Send the count back to recount that rack").
- **Value** uses each line's rate. Lines with no rate yet (usually a GRN whose invoice is pending) are left out of the ₹ total, but their stock change still posts in full (WARNS).
- **Corrections**: a **Stock correction** code is required, and **Other** needs a note of at least 5 characters; rejecting a correction or sending a count back needs a **Correction rejected / count sent back** code. Free text alone is refused (BLOCKS). Only one waiting correction per

lot (BLOCKS, CORRECTION_WAITING). A lot returned to the supplier, or a reel already issued to the floor, cannot be corrected ("Nothing comes back from the floor; if it is in the store, record it in a stock count."). If the book already equals the quantity typed, there is nothing to correct (BLOCKS).

- **At approval, a correction is re-based on the stock now.** If another count or correction already changed the lot, only the remaining difference posts (automatic). If the lot was issued after the correction was raised, approval is refused (ISSUED_SINCE_RAISED). Rejecting needs a reason code.
- **Closed months take no stock movement.** Counts, corrections and opening stock dated in a closed month are refused; ask the Owner to re-open the month.
- **Locations**: the production floor is never a move target, and stock reaches it only through the issue desks. A dispatch bay holds finished goods only. A switched-off location cannot receive stock. A location that still holds stock cannot be switched off. Each plant has exactly one RM store (receiving default), and it must be an active store rack or QC bay. Location codes are unique per plant.
- **Opening stock**: Owner or Admin only. The first batch fixes the go-live date, and later batches must use the same date (GO_LIVE_DATE_FIXED). The date cannot be in the future. Once the go-live month is closed, opening stock is closed ("Opening stock is closed. Use a stock count to correct stock."). Only raw materials can be entered, not finished goods or tools. A material kept as reels must be entered as a reel, and a material kept as lots as a bulk lot. Whole units (pcs, boxes, bags) need whole numbers. The floor, dispatch bays and scrap bays are refused as locations. On-hold rows need a **QC hold placed** code, and a rate cannot be below zero. The system WARNS (does not block) about a reel over 3,000 kg, a lot over 50,000, a repeated old mark, or a missing rate (counted at ₹0). Each batch posts all or nothing, once.
- **Opening stock is cleared at once** (no incoming QC) unless put on hold; held lots are cleared by incoming QC like any held lot. New reels and coils get the plant's AIT serial (AIT + 5 digits, the series of the financial year of the go-live date); lots get RM--yymmdd-nnn, dated the go-live date. Reels entered before 1 Nov 2026 keep their AT-yymmdd-nnn numbers. In the stock book they show as **Opening loads**.

## Sample

**Month-end count of October 2026, Plant A.** On 29 Oct the store opens the October card (it opened on 29 Oct, the last 3 days) and clicks **Start the October count**. It becomes CNT-20261029-001 with 12 racks plus "Not in any location".

| Rack | Result after Rack done |
|---|---|
| RM-STORE | 36 reels found; reel AT-261020-014 (412 kg) not found |
| CHK-A-02 | lot IN/26/031-2 of PVA adhesive: book 60 kg, counted 55 kg |
| CK3-R1 | reel AT-261011-006 found, but the system says it was issued on 14 Oct |
| CK2-R1 | one bag of BLUE parchment with no label, 25 kg |

The count is sent to the Owner on 31 Oct. The Owner chooses **Leave as used** for AT-261011-006 and clicks **Approve and post**. Voucher VAR-20261031-001 posts three lines dated 31 Oct 2026: −412 kg on AT-261020-014, −5 kg on IN/26/031-2, and +25 kg as a new lot on QC hold for the parchment, whose label is then printed. The count becomes **Approved · month certificate** for October 2026. The stock book's **Corrections** column for October now includes −392 kg. The Owner then closes October on **Month-end close**.

## Common questions

**? I counted a rack correctly, so why does it show lots "not found"?**

Rack done marks every lot the book expects on that rack and nobody scanned as not found. Use **Look again** before confirming. If the lot is on another rack, scan it there; it will show as **In the wrong place** and move on approval, not be written off.

**? A reel was issued to the floor but it is still lying in the store. Can I return it?**

No. Nothing comes back from the floor. Scan it in a count; it shows as **Issued, but found in store**, and the Owner either leaves it as used or adds it as new stock on QC hold with a new label.

**? Why can't I start the month-end count?**

Read the note on the card. The running month opens only in its last 3 days. A closed month, or a month before a closed month, cannot be counted. A spot count can run any time.

**? What is the difference between a whole-store spot count and the month-end count?**

Both change stock when approved, but only the month-end count becomes the month's stock certificate, which Month-end close uses.

**? The Owner approved a count with a mistake. How do we undo it?**

Approval cannot be undone. Fix it with a new spot count of that rack, or a correction for that lot.

**? Why did my correction post a different quantity from what I raised?**

At approval the system re-bases it on the stock at that moment. If a count or another correction already changed that lot, only the remaining difference is posted, and the note on the line says so.

**? Why does the stock book say "Opens from the book on the 1st" and not from last month's close?**

The previous month is not closed yet. After it is closed, the chip says "Opens from last month's close".

**? Why is the Value on a count shown in amber, with "with no rate"?**

Some lines have no rate yet, usually because the GRN invoice is pending. Those lines are left out of the ₹ total, but their stock change still posts in full.

**? Can I scan an old AT label in a count?**

Yes. Old AT numbers and new AIT serials are both found by scan or by typing ("ait 6243" finds AIT 06243).

**? Why doesn't the reel label say "QC hold"?**

The reel label matches the plant's own label and does not print the QC state. Scan its QR to see whether it is cleared.

**? We forgot one rack at go-live. Can we still add it?**

Yes, as a new batch on the same go-live date, until the go-live month is closed. After that, add the stock through a stock count.

**? Where does goods inward put stock if I do not choose a rack?**

In the location marked **RM store · goods inward lands here**. The Owner or Admin can make another active store rack the RM store from its **More actions** menu.

## Related chapters

- Goods inward and GRN register (labels, locations at inward)
- Reel & coil issue, Material issue and Issue history
- Month-end close and Usage limits
- Incoming QC (clearing lots on QC hold)
- Inventory and alerts
- QR scan

STOCK CONTROL, REPORTS AND SETUP

# Inventory, material items, manual FG, stock alerts and RM costing

**What it is:** the stock overview of the plant, the item master behind every material, the manual way to add finished tubes to stock, the stock alert rules and their inbox, and the Owner's standard cost sheet for raw materials.
**Who uses it:** Store, Planner, Plant Manager, GRN and RM issue (overview and items); Plant Manager and Store (alert policies and alerts); Owner and Admin (RM costing, item creation).
**Where:** Sidebar > Stores & inventory > Inventory (/inventory, sub-links **Stock overview**, **Material items**, **Goods inward**), Manual FG (/inventory/fg-inward), Stock alert policies (/inventory/stock-alert-policies), Stock Alerts (/inventory/stock-alerts), RM Costing (/inventory/rm-costing).

## At a glance

- **Stock overview** is a read-and-jump page: value, kg on hand, held stock, rack use, charts and quick links to the desks that change stock.
- **Material items** is the stock item list. Each master record (paper, adhesive, parchment, packing, tool) gets its stock item automatically. You set the unit, the tracking (reel or bulk) and the reorder, safety and lead-time numbers here.
- **Manual FG** adds finished tubes to stock without a job card: rework yield, a positive adjustment, or go-live FG, with a reason code from the list **Manual FG inward**. Customer returns are **not** entered here; they go through Quality > Customer complaints.
- **Finished goods from job cards arrive box by box.** On batch-entry cards each packed box is posted to stock as its own FG lot named by its box code (for example B2610315-001), with the box code and a part-box flag on the movement. It leaves stock when its challan is sealed. Boxes kept as surplus stay in stock as their own lots.
- **Stock alerts** work in two steps. A **policy** (safety, reorder and target in kg) is saved as a draft by one person and activated by a different person. **Evaluate** then opens one alert "episode" per material that falls below its line.
- **RM costing** is a planning (standard) cost per raw material. It is versioned, and activating it never changes PO rates, invoice rates or the cost of lots already received.

## The flow

### Stock alert policy to recovery


1. **Save draft policy** — Store/Plant Manager
2. **Activate as checker** — Plant Manager, a different person
3. **Evaluate active policies** — Store/Planner/Plant Manager
4. **Alert episode opens** — Warning or Critical
5. **Acknowledge** — Store/Planner/Plant Manager
6. **Review PO coverage**
7. **Recovered** — stock above reorder + margin

### RM standard cost version

1. **Pick raw material** — Owner/Admin
2. **Enter base and charges**
3. **Save audited draft**
4. **Activate** — Active, or Scheduled if future date
5. **Older version Superseded**

If it goes wrong after **Activate**

1. **Restore draft** — any old version
2. **Save audited draft**

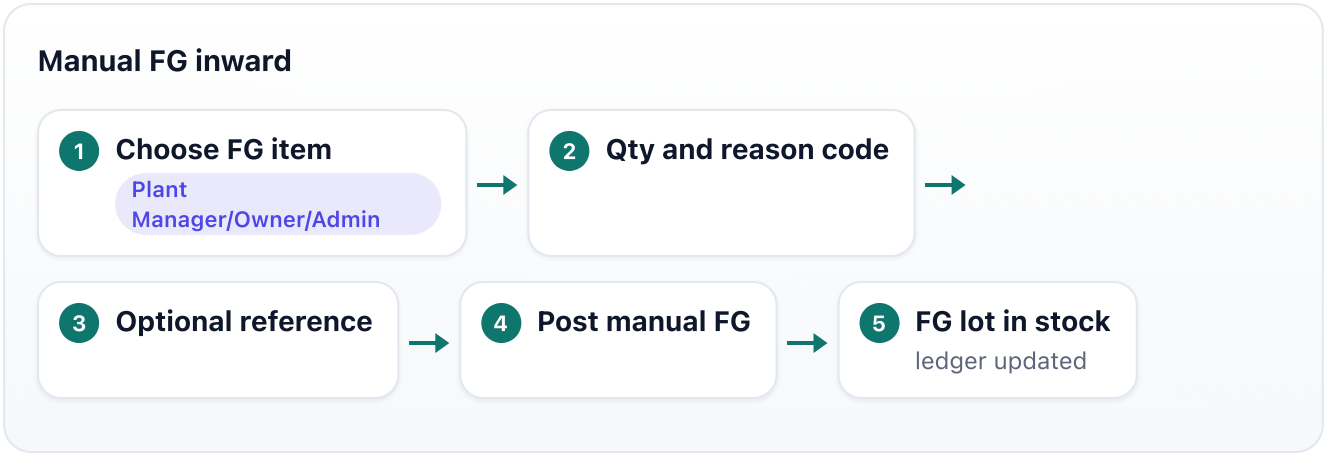


Alert policies are a maker-checker control: the person who drafts the numbers cannot switch them on. Cost versions are never edited after activation; a change is always a new version.

## Screen tour

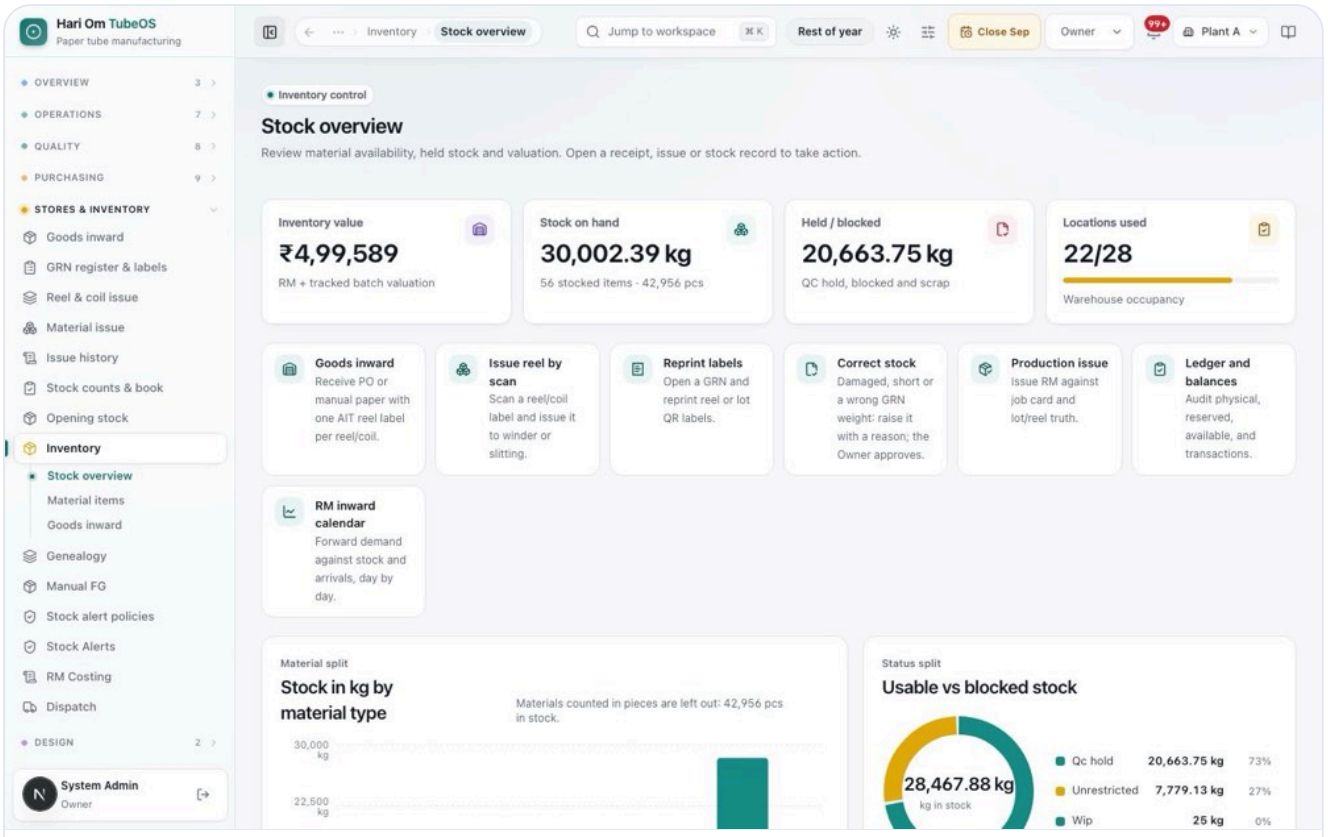



Figure: The Stock overview page. Four tiles: Inventory value ₹4,99,589; Stock on hand 26,501.39 kg (54 stocked items · 42,362 pcs); Held / blocked 17,162.75 kg; Locations used 22/28. Below them are quick-action cards (Goods inward, Issue reel by scan, Reprint labels, Correct stock, Production issue, Ledger and balances, RM inward calendar), the "Stock in kg by material type" bar chart and the "Usable vs blocked stock" donut.

What you see:

1. **Inventory value**: the value of raw material and tracked lots. It opens the Inventory intelligence report for Owner, Admin, Plant Manager, Planner and Store.
2. **Stock on hand**: total kg of materials counted in kg, with the number of stocked items and the pieces total beside it. Kg and pcs are never added together. It opens the ledger.
3. **Held / blocked**: kg on QC hold, blocked or scrap. It opens Holds & inspections.
4. **Locations used**: racks holding stock out of all racks. It opens Locations.
5. **Quick actions**: links to Goods inward, Issue reel by scan, Reprint labels (GRN register), Correct stock (Corrections tab), Production issue, Ledger and balances, and RM inward calendar.
6. **Material split**: a bar chart of stock in kg by material type (Paper, Adhesive, Parchment, Packing). Materials counted in pieces are left out, and the chart says how many pcs that is.
7. **Status split**: a donut of usable vs blocked stock in kg (for example Qc hold, Unrestricted, Wip).
8. Further down: **Top paper load** (the 8 papers with the most kg), **Old stock risk** (ageing), **Shortage and purchase queue** (Critical items are those at or below their reorder level), **Racks in use**, **Latest ledger postings** (Date, What happened, Change, Document, with a **Full ledger** link), **Stock on each rack**, and a **Counts and month-end** card linking to Stock counts & book.

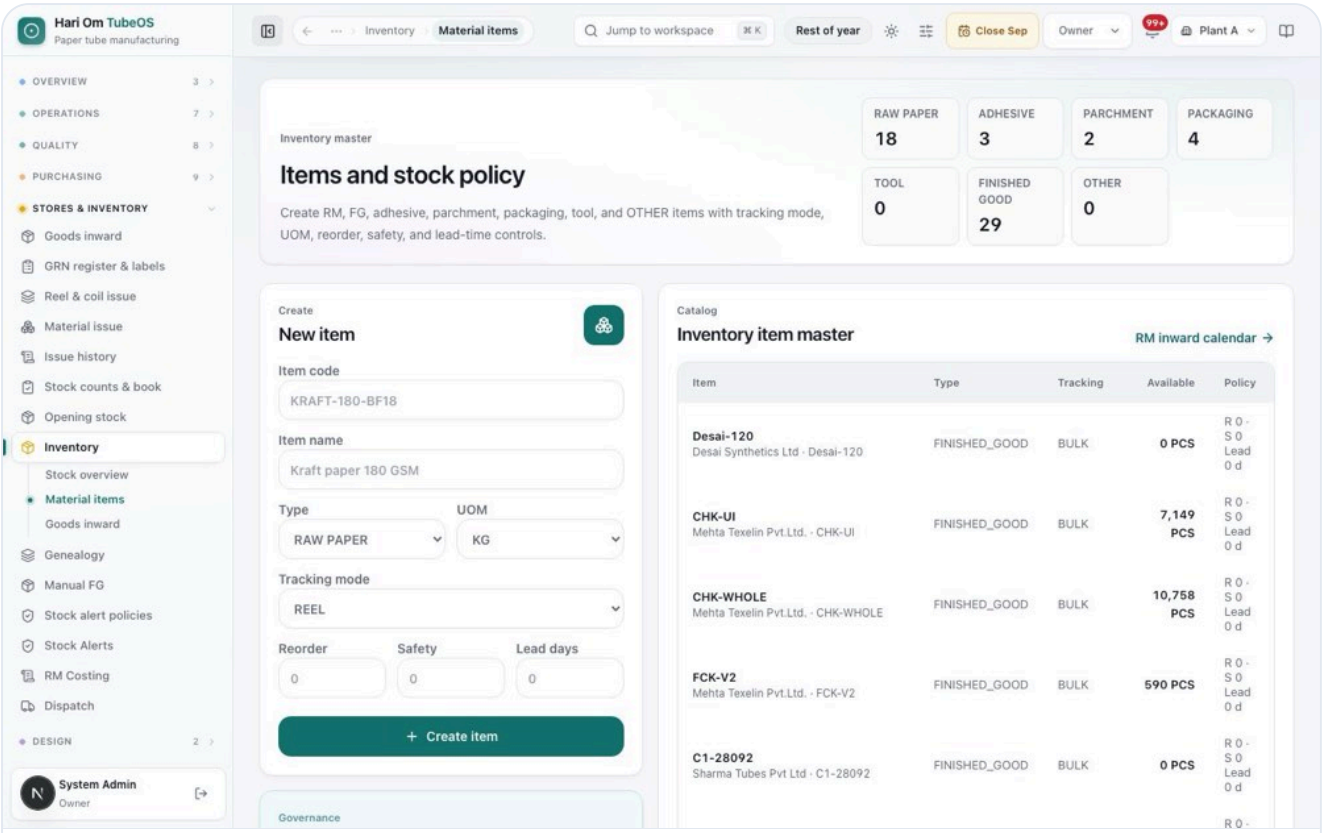



Figure: The Items and stock policy page. Counter tiles by type: RAW PAPER 18, ADHESIVE 3, PARCHMENT 2, PACKAGING 4, TOOL 0, FINISHED GOOD 27, OTHER 0. On the left is the **New item** form; on the right is the **Inventory item master** table with Item, Type, Tracking, Available and Policy columns.

What you see:

1. **Type counters**: how many items of each type exist in this plant.
2. **New item** form: **Item code** (for example KRAFT-180-BF18), **Item name**, **Type**, **UOM** (KG, L or PCS), **Density (kg per litre)** (only for L; it converts the spec BOM from kg to litres), **Tracking mode** (REEL or BULK), and **Reorder**, **Safety** and **Lead days**. Then **Create item**.
3. **MRP policy** panel: select a row with **Edit** to change its reorder, safety and lead days, then **Save policy**. With an item selected, an **Incoming QC profile** card shows its QC checks and revision and links to **Open material standards**.
4. **Inventory item master** table: item code and name, **Type**, **Tracking**, **Available** quantity in its unit, **Policy** ("R 0 · S 0 · Lead 0 d") and **Edit** / **Delete** buttons. An **RM inward calendar** link is in the corner.

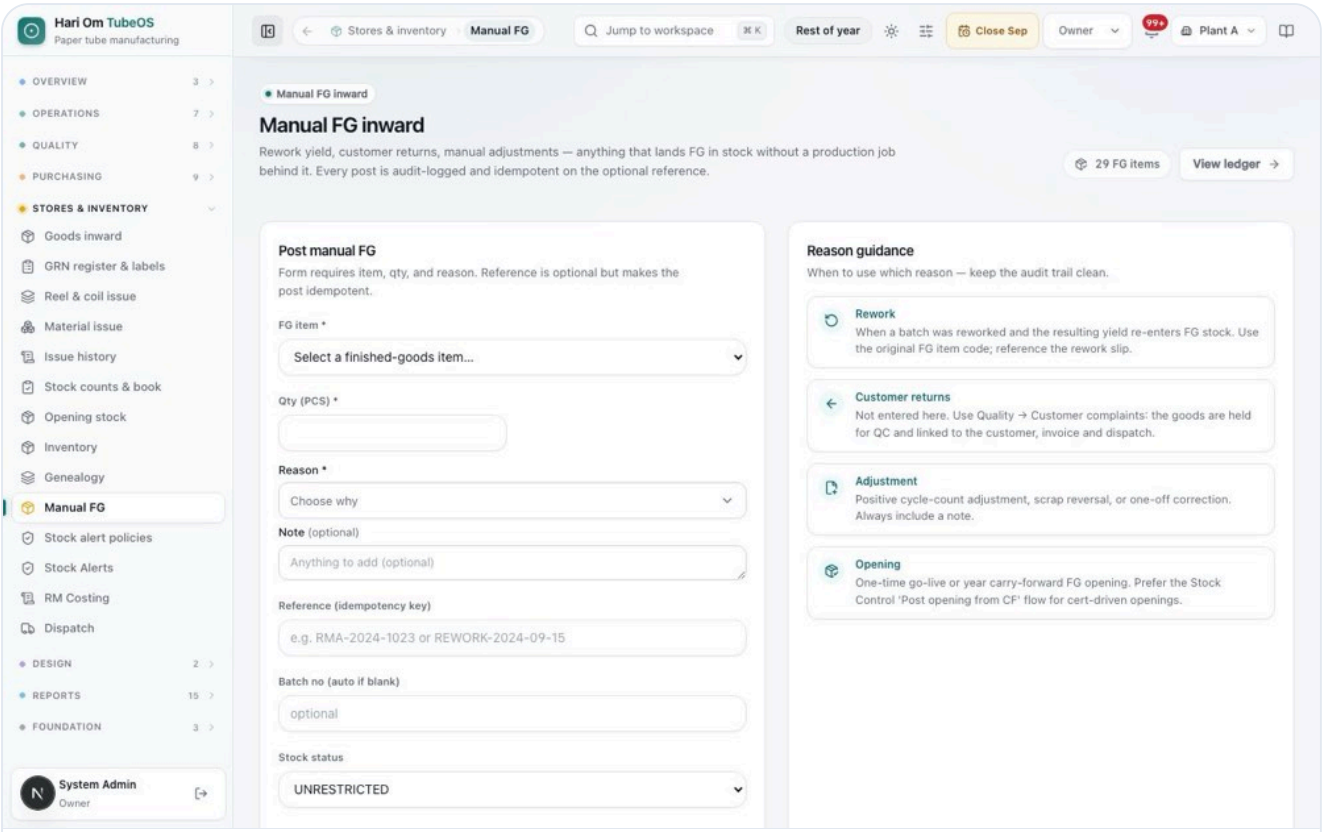



Figure: The Manual FG inward page. A **Post manual FG** form on the left has FG item, Qty (PCS), Reason, Reference, Batch no, Stock status and Notes. A **Reason guidance** panel on the right explains REWORK, Customer returns (not entered here), ADJUSTMENT and OPENING. The header shows "27 FG items" and a **View ledger** link.

What you see:

1. **FG item**: only finished-goods items (one per spec) are listed.
2. **Qty** in the item's unit (usually PCS) and **Reason**: a picker for the list **Manual FG inward**: FG-REWORK Reworked pieces taken back, FG-ADJUSTMENT Stock adjustment, FG-OPENING Opening stock, FG-OTHER Other (write a note).

3. **Reference (idempotency key)**: optional, for example REWORK-2026-10-15. Posting the same reference twice adds stock only once.
4. **Batch no (auto if blank)**: left blank, the lot number is made as FG--yymmdd-nnn.
5. **Stock status**: UNRESTRICTED (default), WIP, QC HOLD, DISPATCH STAGING or BLOCKED. Then **Notes** and **Post manual FG**.
6. **Recent FG inward (latest 10)** at the bottom: When, Item, Qty, Source (**Manual · Reworked pieces taken back** (the reason label), or the job card posting), Ref and Stock status. Boxes posted from job cards appear with the box code as the batch.

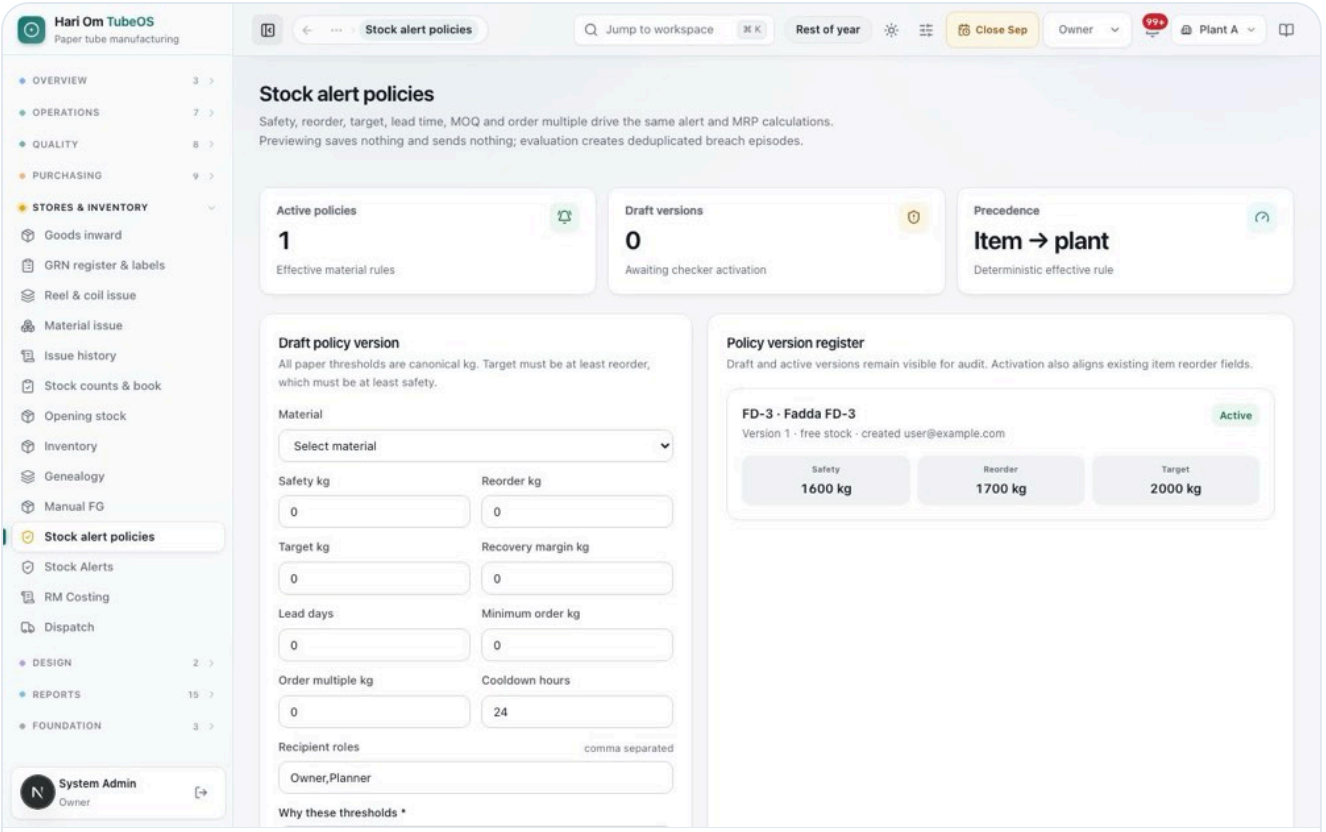



Figure: The Stock alert policies page. Tiles show Active policies 1, Draft versions 0 and Precedence "Item → plant". The **Draft policy version** form has Material, Safety kg, Reorder kg, Target kg, Recovery margin kg, Lead days, Minimum order kg, Order multiple kg, Cooldown hours (24), Recipient roles (Owner,Planner) and Required change reason. The **Policy version register** shows one active policy: Safety 1600 kg, Reorder 1700 kg, Target 2000 kg.

What you see:

1. **Active policies**, **Draft versions** (waiting for a checker) and **Precedence** (an item rule wins over a plant rule).
2. **Draft policy version** form, with a **Preview only** line: "Critical at ≤ safety kg · warning at ≤ reorder kg · recover above reorder + margin kg". Then **Save draft policy**.
3. **Policy version register**: every version with its material, version number, stock basis (free stock), creator, status chip (DRAFT, ACTIVE, INACTIVE) and Safety / Reorder / Target. Drafts have **Activate as checker**.
4. **Alert evaluator**: **Evaluate active policies now** and **Open alert inbox**.

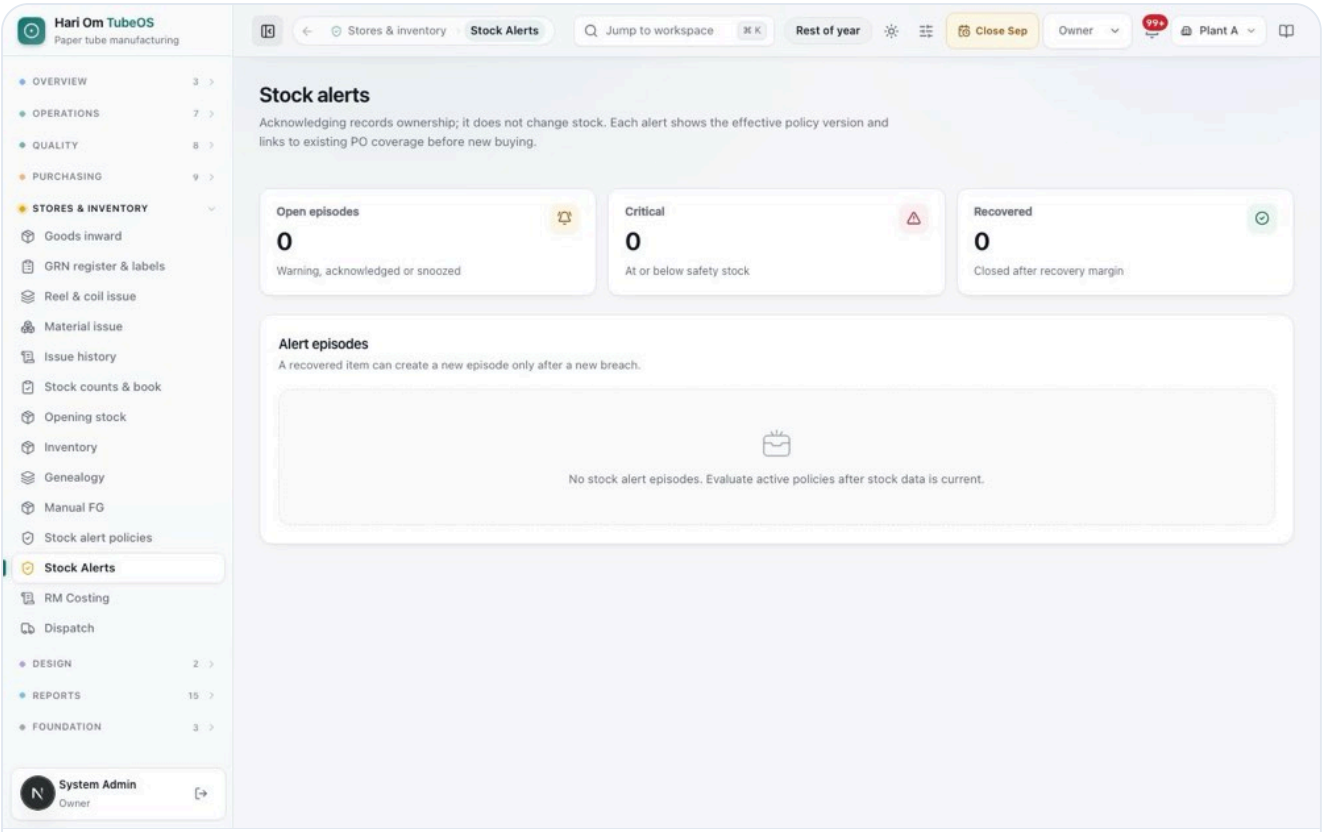



Figure: The Stock alerts page. Three tiles: Open episodes 0 (warning, acknowledged or snoozed), Critical 0 (at or below safety stock) and Recovered 0 (closed after recovery margin). Below them, the Alert episodes panel is empty with the message "No stock alert episodes. Evaluate active policies after stock data is current."

What you see:

1. **Open episodes**, **Critical** and **Recovered** counts.
2. **Alert episodes**: one card per episode with the material, policy version, when it breached, severity (WARNING or CRITICAL), status (OPEN, ACKNOWLEDGED, SNOOZED, RECOVERED), **Free stock** kg and **Breach threshold** kg. Open episodes have **Acknowledge** and **Review PO coverage** (opens Purchase orders filtered to that material).

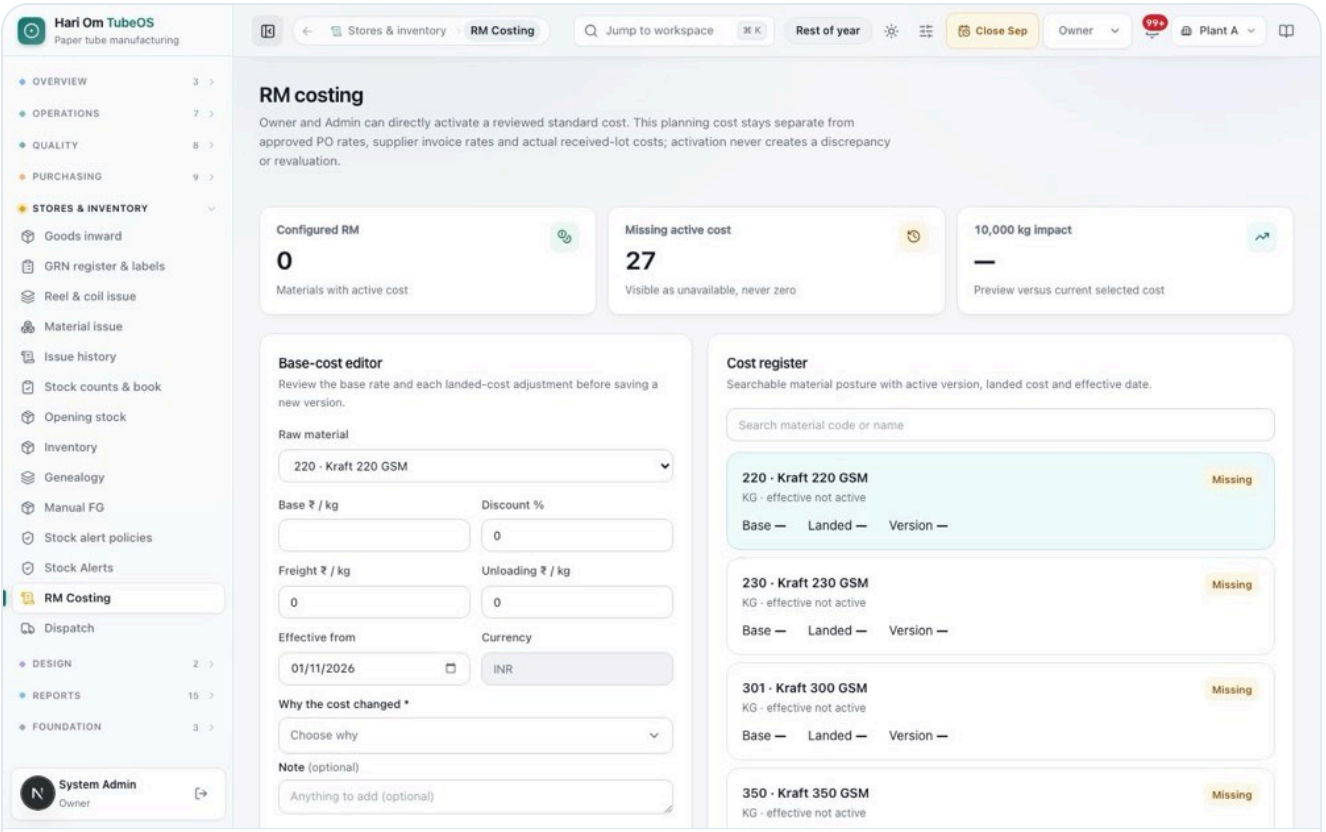



Figure: The RM costing page. Tiles show Configured RM 0, Missing active cost 27 and 10,000 kg impact "—". The **Base-cost editor** shows Raw material "220 · Kraft 220 GSM", Base ₹ / kg, Discount %, Freight ₹ / kg, Unloading ₹ / kg, Effective from 31/10/2026, Currency INR and Required change reason. The **Cost register** lists each kraft paper with a "Missing" chip.

What you see:

1. **Configured RM** (materials with an active cost), **Missing active cost** (shown as unavailable, never as zero) and **10,000 kg impact** (the ₹ difference for 10,000 kg between the draft and the current cost).
2. **Base-cost editor**: **Raw material**, **Base ₹ / kg**, **Discount %**, **Freight ₹ / kg**, **Unloading ₹ / kg**, **Effective from**, **Currency** (INR, fixed) and **Required change reason**. Under **Other charges & explicit calculation bases** you can add a charge with a name, a direction (**Add to cost** or **Discount**) and a basis (**₹ per kg**, **% of base** or **₹ per lot** with a reference kg). **Current landed** and **Draft landed** are shown side by side, then **Save audited draft**.
3. **Cost register**: search, then one card per material with its unit, effective date, status chip (Missing, DRAFT, ACTIVE, SCHEDULED), Base, Landed and Version.
4. **Version history** (below): Version, State, Base, Landed, Effective, Components (each in ₹/kg), Actor / reason, and the actions **Activate** (drafts) and **Restore draft**.

## Step by step

### How to read the stock overview

Owner, Admin, Store, Planner, Plant Manager, GRN, RM issue.

1. Open **Inventory**. Pick one plant at the top if you see several.
2. Read the four tiles. Click a tile to open the page behind it (report, ledger, holds or locations).
3. Use a quick-action card to go straight to the desk you need. This page itself changes nothing.

### How to create a material item

Owner or Admin. Most items are made for you when a master record is saved (each paper, adhesive, parchment colour, packing item or tool becomes a stock item with the same code), so you rarely need this.

1. Open **Inventory** > **Material items**.
2. Fill **Item code** and **Item name**, and choose **Type** and **UOM**. Paper defaults to **REEL** tracking and other types to **BULK**. For a unit of **L**, enter **Density (kg per litre)**.
3. Optionally fill **Reorder**, **Safety** and **Lead days**. Click **Create item**.
4. If you see "Item save failed. Check duplicate code and plant scope.", the code already exists in this plant.

### How to change an item's reorder, safety and lead time

Store, Owner or Admin.

1. Click **Edit** on the row. The **MRP policy** panel fills in.
2. Change **Reorder**, **Safety** and **Lead days**, and click **Save policy**.
3. These numbers are used by MRP and the critical-items count. Activating a stock alert policy also overwrites them for that material.

### How to delete (switch off) an item

Store, Owner or Admin.

1. Click **Delete** on the row and confirm "Soft-delete item ...? Historical ledger transactions remain intact."
2. If the item still has stock, the system refuses with ITEM_HAS_OPEN_BALANCE. Issue or correct the balance first. History is never deleted; the item only becomes inactive.

## How to post manual FG

Plant Manager, Owner or Admin. One plant must be selected; the "all plants" view is read-only.

1. Open **Manual FG**.
2. Choose the **FG item** and enter **Qty**.
3. Choose the **Reason**. Use **FG-REWORK** when a reworked batch comes back into stock (quote the rework slip in the reference). Use **FG-ADJUSTMENT** for a one-off correction, with a note. Use **FG-OPENING** for go-live FG. **FG-OTHER** needs a note of at least 5 characters.
4. Optionally type a **Reference**, a **Batch no** (blank = automatic) and a **Stock status**, and write **Notes**.
5. Click **Post manual FG**. The message "FG inward posted. Stock ledger updated, balance reflected immediately." appears and the row shows in **Recent FG inward** as **Manual · Reworked pieces taken back** (the label of the reason you chose).

## How to set up a stock alert policy

Draft: Store or Plant Manager (or Owner/Admin). Activate: Plant Manager (or Owner/Admin), and it must be a different person.

1. Open **Stock alert policies**. Under **Draft policy version** choose the **Material**.
2. Enter **Safety kg**, **Reorder kg** and **Target kg** (target ≥ reorder ≥ safety), **Recovery margin kg**, **Lead days**, **Minimum order kg**, **Order multiple kg**, **Cooldown hours** and **Recipient roles** (comma separated).
3. Write the **Required change reason** (at least 3 characters) and check the **Preview only** line.
4. Click **Save draft policy**. The message says "New draft policy version saved. A different checker must activate it."
5. A different person opens the register and clicks **Activate as checker** on the draft. The old active version for that material becomes INACTIVE, and the item's reorder fields are aligned to the new numbers.

## How to evaluate and work stock alerts

Store, Planner or Plant Manager (and Owner/Admin).

1. On **Stock alert policies**, click **Evaluate active policies now**. The message tells you how many policies were checked and how many episodes changed.
2. Open **Stock Alerts**. Read each open card: free stock, threshold and severity.
3. Click **Acknowledge** to record that you own it. This does not change stock.
4. Click **Review PO coverage** to see open POs for that material before raising a new one.
5. When free stock rises above reorder + recovery margin, the next evaluation marks the episode **RECOVERED**.

### How to set a raw material's standard cost

Owner or Admin, in their own Owner or Admin role.

1. Open **RM Costing** and pick the **Raw material** (or click its card in the **Cost register**).
2. Enter **Base ₹ / kg**, **Discount %**, **Freight ₹ / kg** and **Unloading ₹ / kg**. Add other charges if needed.
3. Set **Effective from** and write the **Required change reason**. Compare **Current landed** with **Draft landed** and read the **10,000 kg impact**.
4. Click **Save audited draft**. The message shows the draft version and its landed ₹/kg.
5. In **Version history**, click **Activate** on the draft. If the effective date is today or earlier, it becomes ACTIVE and older active versions become SUPERSEDED. If the date is in the future, it becomes SCHEDULED.
6. To go back to an old cost, click **Restore draft** on that version. This makes a new draft dated today, which you then activate. History stays unchanged.

## Rules the system enforces

- **Stock overview is read-only.** Totals are kept per unit: kg never includes pcs (automatic).
- **Item codes are unique per plant** (BLOCKS). **REEL tracking is only for paper or parchment items** (BLOCKS: "Only paper or parchment items can use physical reel/coil tracking").
- **Creating an item**: Admin or Owner. **Editing the policy**: Store, Admin or Owner. **Deleting**: Store, Admin or Owner, and it is a soft delete only.
- **An item with stock cannot be deleted** (BLOCKS, ITEM_HAS_OPEN_BALANCE).
- **Master records create their stock items automatically**, matched by code. Existing items are never changed. A code already used by another type of material is reported, not overwritten.
- **Manual FG** is only for finished-goods items (BLOCKS). Qty must be greater than zero (BLOCKS). The reason must be an active **Manual FG inward** code of the plant; OTHER needs a note; free text alone is refused (BLOCKS). **Customer returns are refused here** and sent to Quality > Customer complaints, so the goods are held for QC. A repeated **Reference** posts once (automatic). Posting needs Plant Manager, Owner or Admin, and one selected plant.
- **Stock alert policy**: target ≥ reorder ≥ safety (BLOCKS: "Target stock must be at least reorder point, which must be at least safety stock"). A reason of at least 3 characters is required. Paper policies need a KG material. **The person who drafted a policy cannot activate it** (BLOCKS: "A different person must activate the stock alert policy").
- **Severity** (automatic): CRITICAL when free stock ≤ safety; WARNING when free stock ≤ reorder. Free stock is cleared (usable) stock minus stock reserved for orders, so held lots

are not counted.

- **One open episode per material**. Repeated evaluations update it and never duplicate it. An episode recovers only when stock goes above reorder + recovery margin. After a recovery, no new episode opens within the cooldown hours.
- **Acknowledging** records ownership only. A recovered alert cannot be acted on ("Open stock alert not found").
- **Evaluation runs when someone clicks Evaluate.** Who can evaluate: Store, Planner, Plant Manager, Owner, Admin.
- **RM costing**: only a real Owner or Admin acting in that role can save, activate or restore ("RM costing changes require an actual Owner or Admin in an administrative role"). A change reason is required. Activated versions cannot be edited or deleted. If someone else changed the sheet first, you must reload ("Cost sheet changed; reload before saving"). Activation never rewrites PO, invoice or lot costs and never creates an invoice difference. A material with no active cost shows as unavailable, never as ₹0.

## Sample

**Alert policy for Kraft 180 GSM.** Store keeper Ramesh drafts: Safety 1,600 kg, Reorder 1,700 kg, Target 2,000 kg, Recovery margin 100 kg, Lead days 7, Minimum order 1,000 kg, Cooldown 24 hours, Recipients Owner,Planner, reason "Winder 2 runs 180 GSM daily from November". The preview reads "Critical at ≤ 1,600 kg · warning at ≤ 1,700 kg · recover above 1,800 kg". Plant Manager Suresh activates it.

| Day | Free stock | Evaluate result |
|---|---|---|
| 3 Nov | 1,650 kg | New episode, WARNING (threshold 1,700 kg) |
| 4 Nov | 1,420 kg | Same episode, now CRITICAL (threshold 1,600 kg); Planner acknowledges |
| 6 Nov | 1,760 kg (GRN from Bharat Paper Mills, part cleared by QC) | Still open: 1,760 is not above 1,800 |
| 7 Nov | 3,240 kg | RECOVERED |

**Standard cost for Kraft 220 GSM.** Base ₹42.50/kg, Discount 2%, Freight ₹1.20/kg, Unloading ₹0.15/kg. Draft landed = 42.50 × 0.98 + 1.20 + 0.15 = ₹43.0000/kg. If the current active cost is ₹41.80/kg, the 10,000 kg impact shows +₹12,000.

## Common questions

**Why does Stock on hand not include our cartons and cores?**

That tile and the material chart add up only materials counted in kg. Pieces are shown separately, because kg and pcs are never added together.

**I saved a stock alert policy but no alerts appear.**

A draft does nothing. A different person must click **Activate as checker**, and then someone must click **Evaluate active policies now**.

**I am the Plant Manager and drafted the policy myself. Why can't I activate it?**

Policies use maker-checker. Ask another Plant Manager, the Owner or the Admin to activate it.

**Stock went up but the alert is still open.**

It recovers only above reorder + recovery margin, and only when Evaluate runs again. Held lots do not count as free stock until QC clears them.

**Why do finished goods show many small lots like B2610315-001?**

Each box from a job card is its own FG lot, named by its box code. That is how a challan takes exact boxes out of stock. Reprinting a box label never adds stock.

**A customer sent back 500 tubes. Do I enter them in Manual FG?**

No. The system refuses customer returns here. Record them in Quality > Customer complaints, so they are held for QC and linked to the customer and dispatch.

**I posted manual FG twice by mistake.**

If you gave the same Reference both times, the second post was ignored. If not, ask the Plant Manager to correct the extra stock; the post cannot be undone from this page.

**Why can't I delete an old paper item?**

It still has stock. Issue, count or correct the balance to zero first. Deleting only switches the item off; its history stays.

**Does activating a new RM cost change what we paid on old POs?**

No. It is a planning cost only. PO rates, invoice rates and the cost of lots already received are never changed.

**Where does a new paper master show up as a stock item?**

Automatically, with the same code, when the master is saved. You then set its reorder, safety and lead days under **Material items**.

## Related chapters

- Stock counts, stock book, locations and opening stock
- Goods inward and GRN register
- Purchase orders and RM inward calendar
- Customer complaints (returns)
- Masters (papers, adhesives, parchments, packaging)
- Reports: Inventory intelligence

# Reports

**What it is:** the read-only report pages that show how the plant, the orders, the stock and quality are doing, with links back to the records behind every figure.
**Who uses it:** Owner and Admin (all reports); Plant Manager, Planner, Sales, Store, Dispatch, QC and Inward QC (the reports of their area).
**Where:** Sidebar > Reports (Intelligence at /analytics; the others under /reports/..., for example /reports/owner, /reports/plan-vs-actual, /reports/employees).

## At a glance

- **Reports never change data.** They read orders, job cards, floor logs, stock and QC records. To fix a number, fix the record it comes from.
- **Every report works on the plant chosen at the top bar.** Owner and Admin can pick a plant or all plants.
- **Each report has its own period control.** Some have buttons (7 days, 30 days, Month, Quarter, or 4 weeks, 13 weeks, 6 months), some have From / To dates, and some are fixed (for example Operations command is always the last 7 days).
- **Exports:** Owner daily pack (PDF and printable page), Planning performance and Plan vs actual (Excel), Slitting report and Employee performance (CSV), Throughput and Dispatch & SLA (Print).
- **New on 1 Nov 2026: Employee performance** (per operator, from the operator chosen on every floor log) and, on Sales pulse, **Cancelled / short-closed by reason**. Reasons in every report show the label of the reason code that was picked.
- **When a source cannot be read, a tile shows "Not reported" or "—", never a false zero.**

## The flow

### From the floor to a report

1. **Record work** — Sales/Operator/QC/Store — orders, runs, checks, issues
2. **Records saved**
3. **Report reads them** — for the chosen plant and period
4. **Click a figure**
5. **Source record opens**

### Plan against the floor log

1. **Planner places slot** — Planner
2. **Floor logs run** — Operator
3. **Run matched to slot** — same day, shift, machine
4. **As planned or Different**
5. **Planning performance and Plan vs actual**


If it goes wrong after **Planner places slot**

1. **No entry for 36 h**
2. **Planned, not run** — card back to queue

If it goes wrong after **Floor logs run**

1. **No slot yet**
2. **Run before planning**

**From the operator to Employee performance**

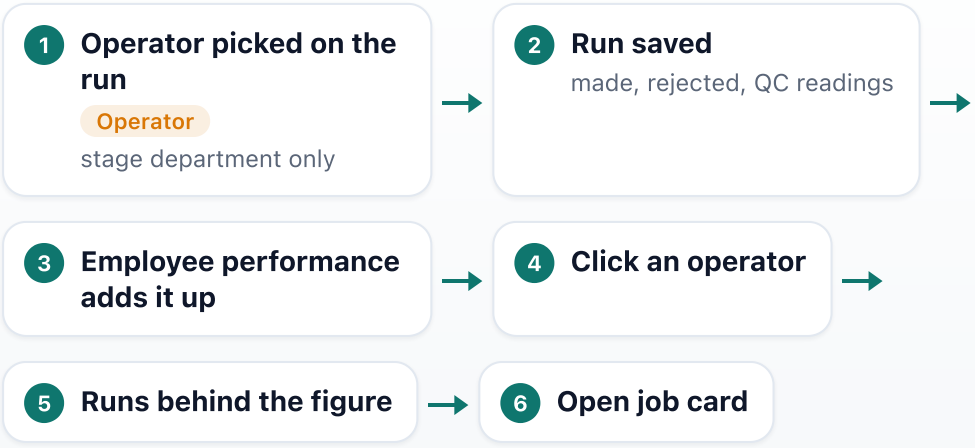


Reports only read what the desks record. Planning reports compare the planner's slots with the job card log; the log is the truth, and the plan never blocks the floor.

## Screen tour

### Intelligence (/analytics)

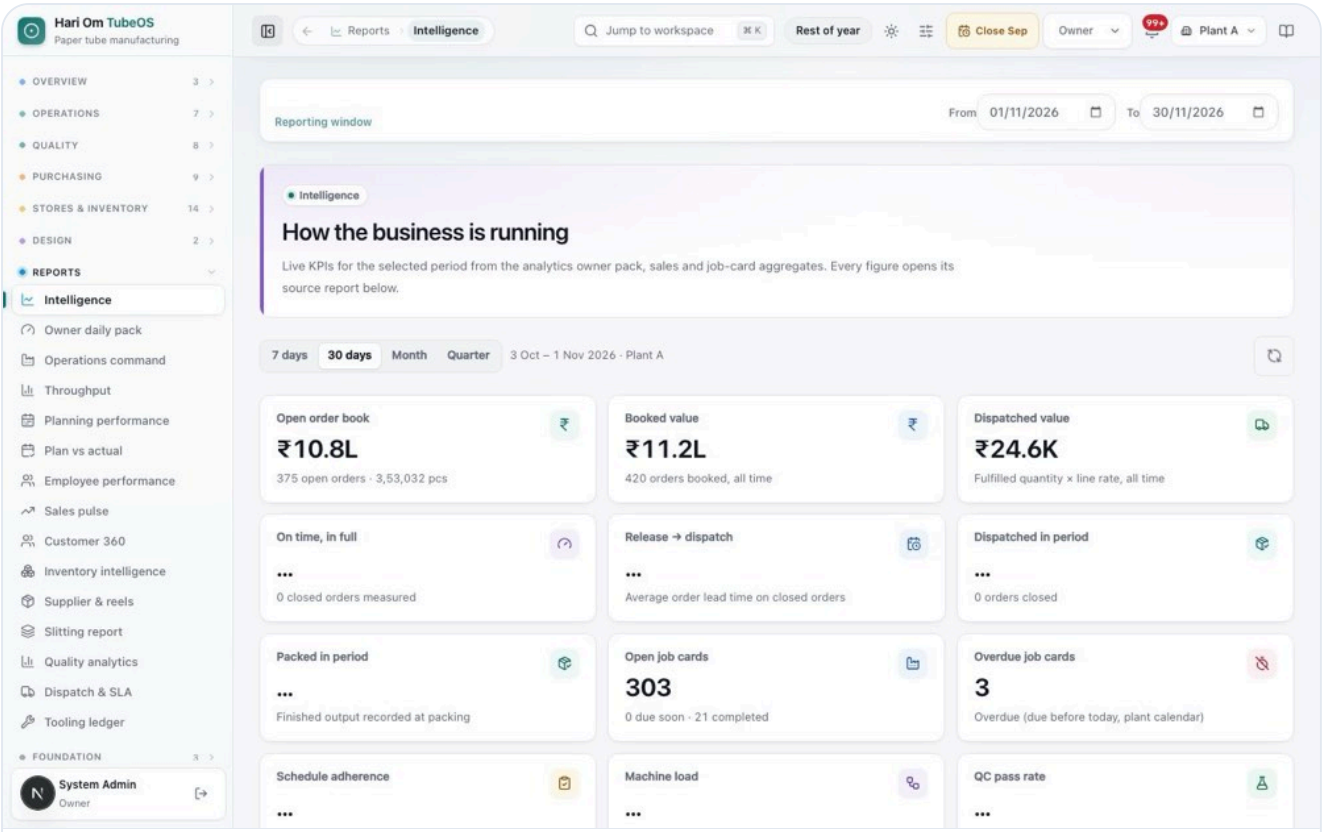



Figure: The Intelligence page, titled "How the business is running". At the top is a Reporting window (From 01/10/2026, To 31/10/2026). Below it are period buttons (7 days, 30 days, Month, Quarter) with "2 Oct – 31 Oct 2026 · Plant A". KPI tiles follow: Open order book ₹10.8L (374 open orders · 3,52,427 pcs), Booked value ₹11.1L, Dispatched value ₹16.2K, On time in full, Release → dispatch, Dispatched in period, Packed in period, Open job cards 303, Overdue job cards 3, Schedule adherence, Machine load and QC pass rate.

**Question it answers:** how is the business doing right now? **Who:** Owner, Admin, Planner, Plant Manager, Store, Dispatch, Sales, QC. Tiles that come from the analytics pack (OTIF, dispatched and packed in period, adherence, machine load, QC pass rate, inventory value) need Owner, Admin, Planner or Plant Manager; other roles see "Not reported" there.

What you see:

1. **Period buttons**: 7 days, 30 days, Month (month to date) and Quarter (quarter to date), plus a **Refresh** button. The tiles follow these buttons.
2. **Open order book**: ₹ value, count and pcs of orders not yet closed. **Booked value**: ₹ of all orders ever booked. **Dispatched value**: dispatched quantity × line rate, all time.
3. **On time, in full (OTIF)**: closed orders whose last dispatch was on or before the due date, divided by closed orders. **Release → dispatch**: average days from order creation to last

dispatch, over closed orders.

4. **Dispatched in period** (pcs and orders closed) and **Packed in period** (pcs recorded at packing).
5. **Open job cards** (with due soon and completed), **Overdue job cards** (due before today, by the plant calendar) and **Blocked cards**.
6. **Schedule adherence**: the share of stages whose actual finish day equals the planned day. **Machine load**: assigned load ÷ rated capacity, averaged over the busiest machines. If capacity and load are in different units, the tile says "Not comparable" and points to machine setup.
7. **QC pass rate**: passed ÷ (passed + failed) checks in the period. Record-only readings are not counted.
8. Below the tiles: charts (order flow, stage output, order status, cards by stage, commercial split, machines, quality, inventory, top customers) and the **report catalog**. The catalog lists every report as a card and can be filtered by audience (All audiences, Owner / exec, Operations, Commercial, Inventory, Quality, Dispatch). It also links to Period Close Workbook (Month-end close), Cross-plant Comparator and the RM inward calendar.

## Owner daily pack (/reports/owner)

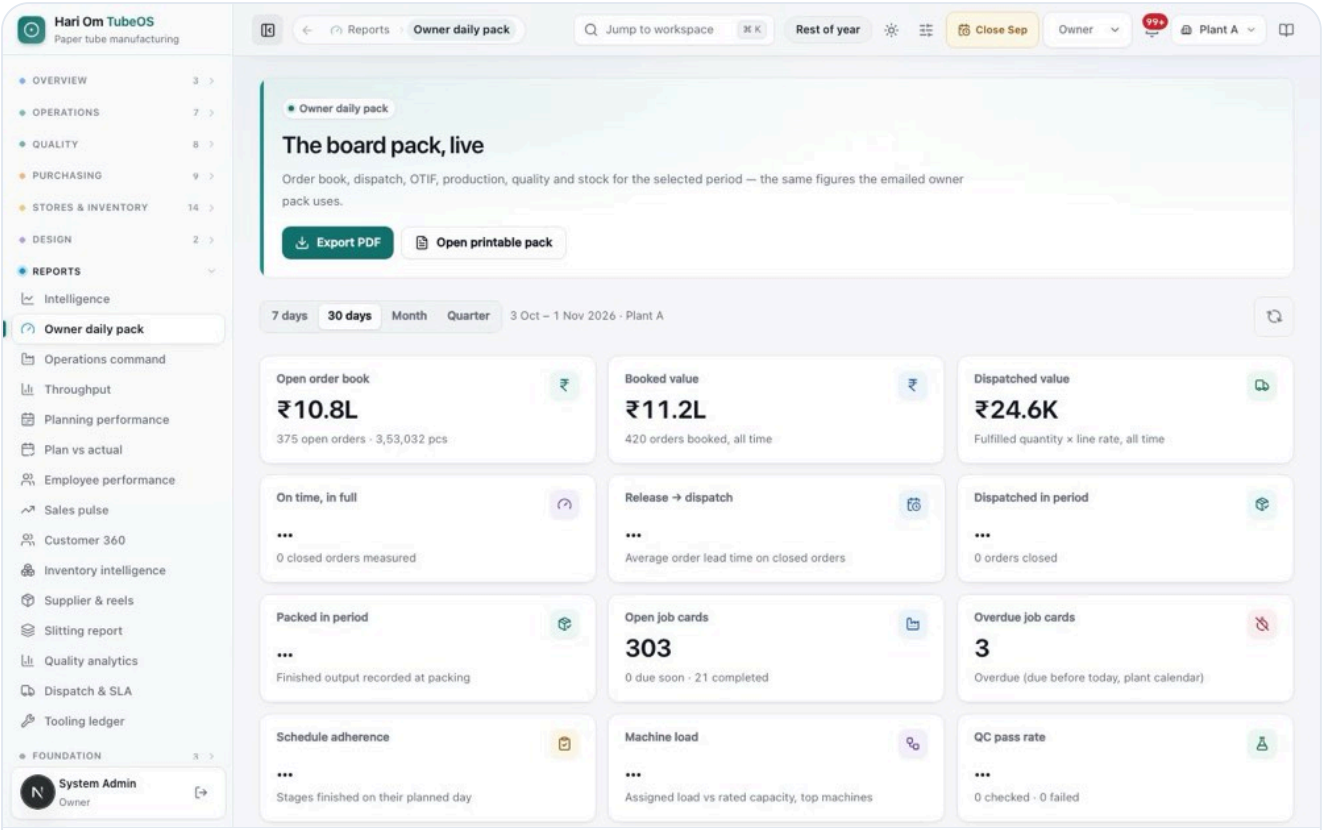



Figure: "The board pack, live", with **Export PDF** and **Open printable pack** buttons, the same period buttons and the same KPI tiles as Intelligence.

**Question:** the one-page board pack: order book, dispatch, OTIF, production, quality and stock. **Who:** Owner and Admin only. The figures are the same ones the emailed owner pack uses. **Export**

**PDF** downloads the pack; **Open printable pack** opens a page you can print.

## Operations command (/reports/operations)

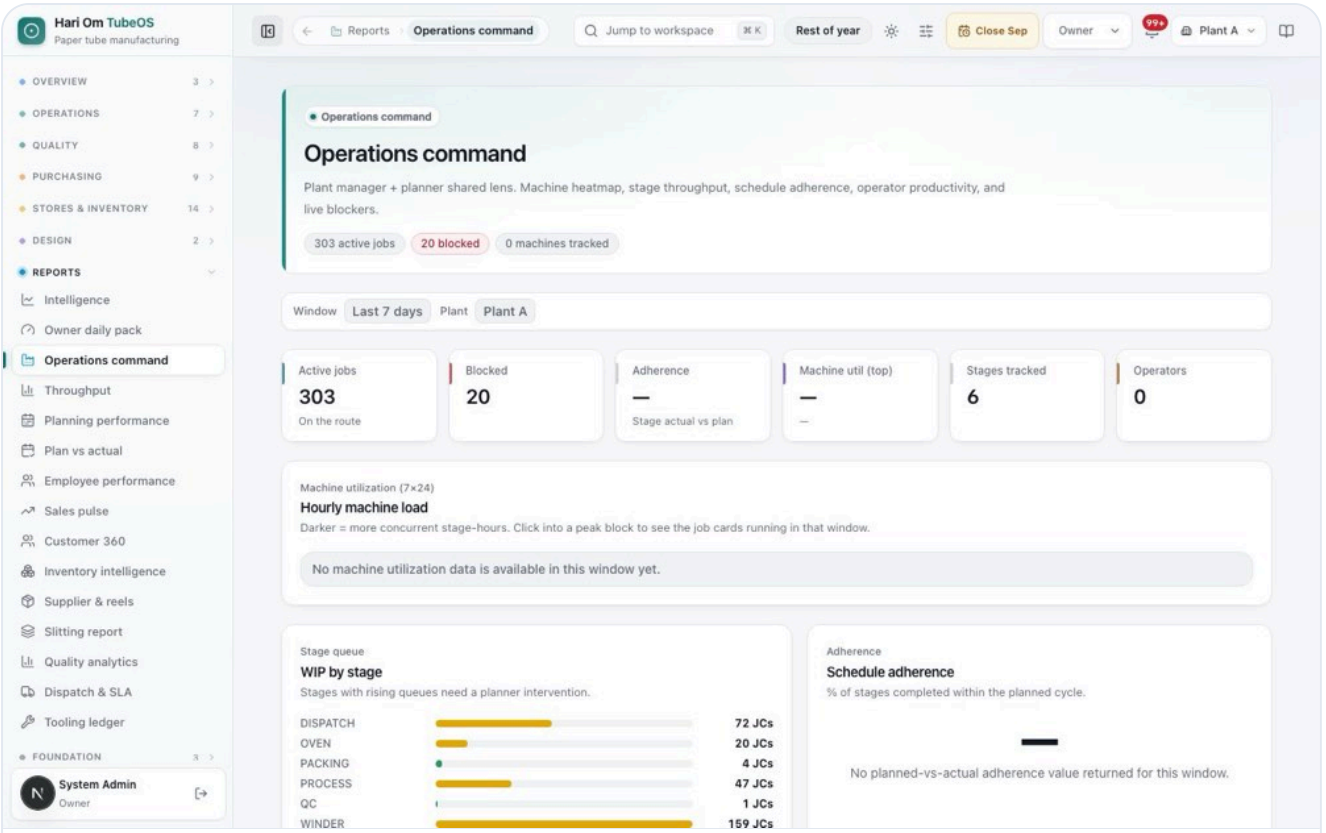



Figure: Operations command for the last 7 days, Plant A. Tiles: Active jobs, Blocked, Adherence, Machine util (top), Stages tracked, Operators. Below are the Hourly machine load heatmap, WIP by stage and Schedule adherence panels, each empty in this window.

**Question:** where is the floor stuck this week? **Who:** Plant Manager, Planner, Owner, Admin. **Filter:** fixed to the last 7 days and the chosen plant.

What you see: **Active jobs** (on the route), **Blocked**, **Adherence** (stage actual vs plan), **Machine util (top)**, **Stages tracked** and **Operators**. Panels: **Hourly machine load** (7 days × 24 hours; darker means more stage-hours running at once), **WIP by stage** (stages with more than 12 cards are marked), **Schedule adherence**, **Operator productivity** (Operator, Stage, Cards, Completed, Output, On-time), **Live blockers** (Job card, Customer, Stage, Reason), **How late is stage-output entry?** (lag = time entered minus actual end, with median, p90 and rows later than 6 hours), and **Where the planned qty went** (short-close events and machine downtime minutes).

## Throughput (/reports/production)

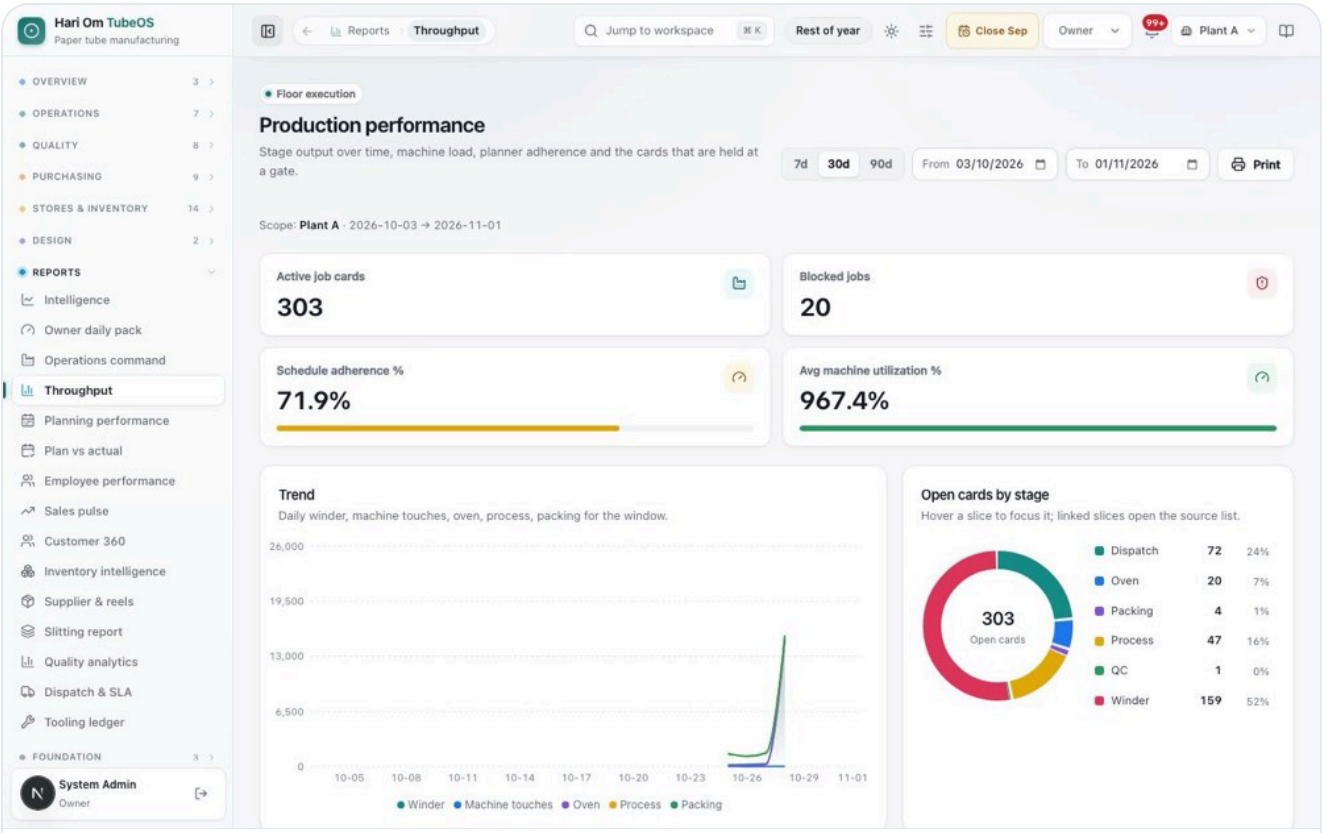



Figure: The "Production performance" page with 7d / 30d / 90d buttons, From and To dates and a Print button. Tiles: Active job cards 303, Blocked jobs 20, Schedule adherence 71.1%, Avg machine utilization. A Trend chart shows daily Winder, Machine touches, Oven, Process and Packing output. An "Open cards by stage" donut shows Winder 159, Dispatch 71, Process 48, Oven 20, Packing 4 and QC 1.

**Question:** how much did each stage and machine produce? **Who:** Plant Manager, Planner, Owner, Admin. **Filters:** 7d, 30d, 90d or From / To. **Print** prints the page.

What you see: **Active job cards** (not completed or cancelled), **Blocked jobs**, **Schedule adherence %** (as on Intelligence) and **Avg machine utilization %** (assigned load ÷ capacity, top 12 machines; it reads above 100% when capacity is set in a smaller unit than the load). Then a daily **Trend** of output qty per stage and **Open cards by stage** (click a slice to open those job cards). **Detail rows** has three tabs: **Held at a gate**, **Machine load** and **Stage pipeline**, with a search box and an arrow to open each record.

## Planning performance (/reports/planning)

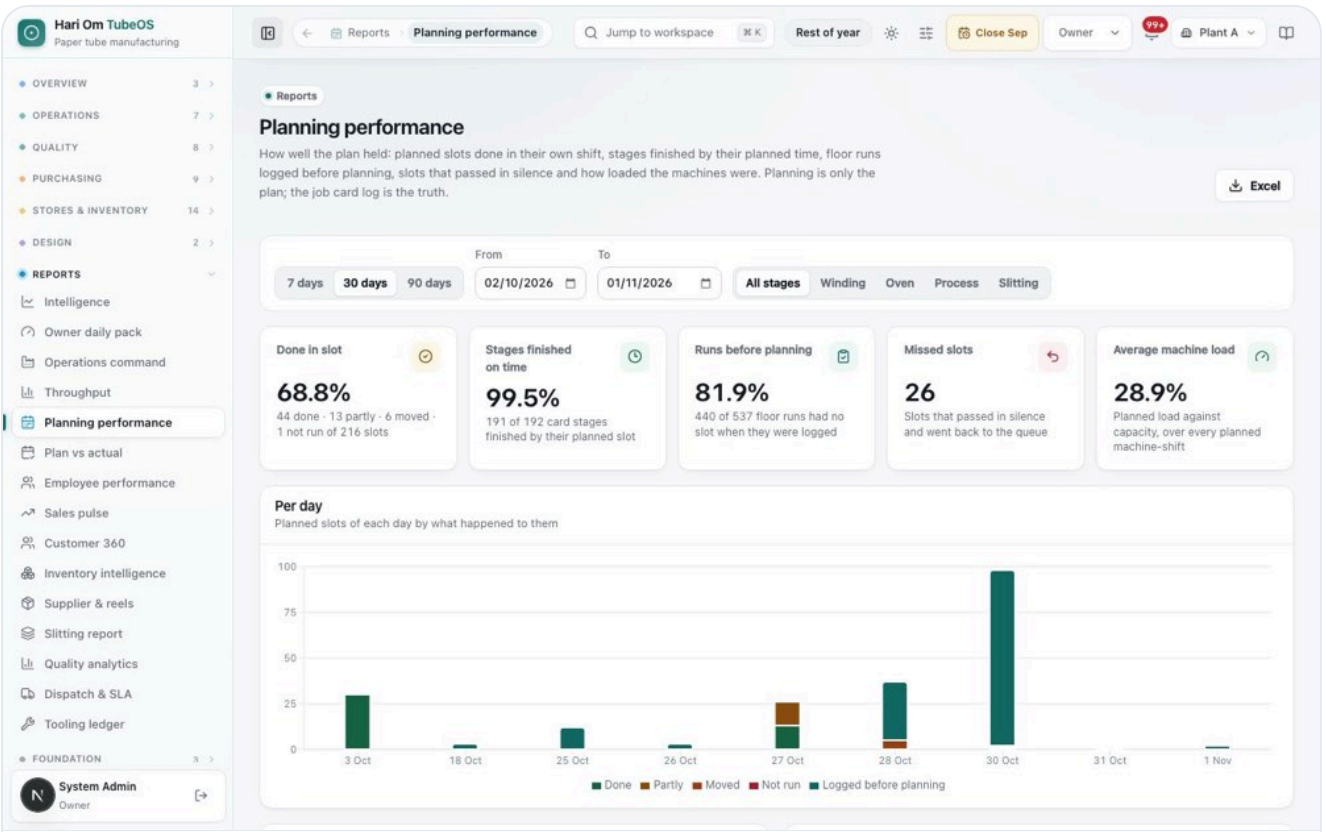



Figure: Planning performance for 30 days, all stages. Tiles: Done in slot 68.8% (44 done · 13 partly · 6 moved · 1 not run of 215 slots), Stages finished on time 99.5% (190 of 191), Runs before planning 81.3% (423 of 520 floor runs), Missed slots 25 and Average machine load 31.3%. A "Per day" bar chart colours each day's slots as Done, Partly, Moved, Not run or Logged before planning.

**Question:** how well did the plan hold? **Who:** Plant Manager, Planner, Owner, Admin. **Filters:** 7, 30 or 90 days, From / To, and stage (All stages, Winding, Oven, Process, Slitting). **Excel** downloads every table.

What you see:

1. **Done in slot**: done slots ÷ (done + partly + moved + not run). A slot is **Done** when at least 95% of its planned qty was logged in that slot. **Partly** means something was logged but less. **Moved** means it ran on another day or shift. **Not run** means nothing was logged. Upcoming and running slots are not counted.
2. **Stages finished on time**: card stages whose close (or last run) came by the end of their last planned slot.
3. **Runs before planning**: floor runs logged while the stage had no slot (the planner placed it afterwards from the log).
4. **Missed slots**: slots that passed with no floor entry for 36 hours and went back to the queue.
5. **Average machine load**: planned load ÷ machine capacity per shift, averaged over every planned machine-shift.

6. Tables: **By stage**, **By shift** (Shift A 08:00–20:00, Shift B 20:00–08:00), **By machine** (with Avg load), **Card stages finished late**, **Missed slots** and **Runs before planning** (first 100 shown; Excel has all).

## Plan vs actual (/reports/plan-vs-actual)

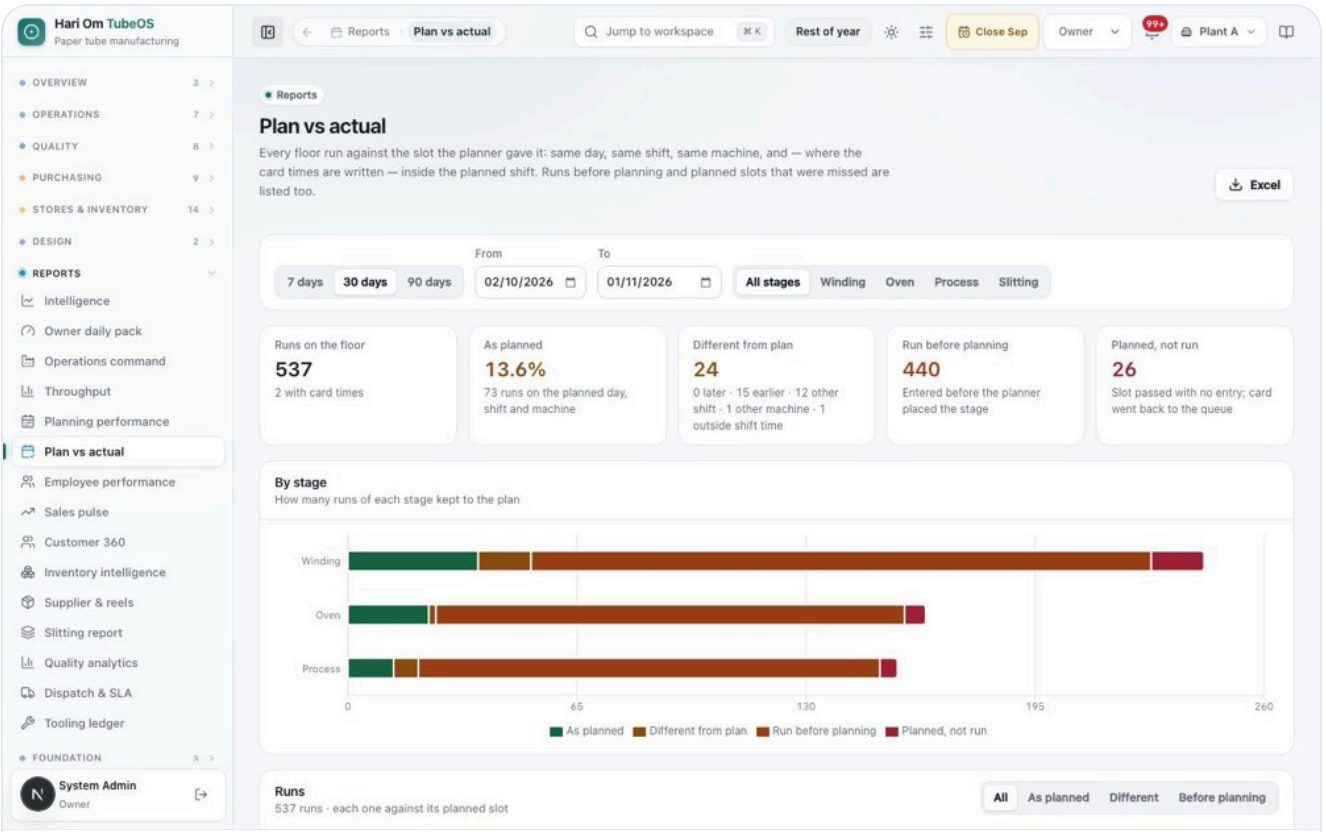



Figure: Plan vs actual for 30 days. Tiles: Runs on the floor 520 (2 with card times), As planned 14.0% (73 runs), Different from plan 24 (0 later · 15 earlier · 12 other shift · 1 other machine · 1 outside shift time), Run before planning 423 and Planned, not run 25. A "By stage" bar shows Winding, Oven and Process split by result. A **Runs** table has All / As planned / Different / Before planning filters.

**Question:** did each floor run happen on the planned day, shift and machine? **Who:** Plant Manager, Planner, Owner, Admin. **Filters and export:** as Planning performance.

Each run is compared with the slot in force when it was entered. It is **As planned** when the day, shift and machine match and, if card times were written, the times sit inside the planned shift. It is **Different from plan** when it ran later, earlier, in another shift, on another machine or outside the shift time. It is **Run before planning** when the stage had no slot when the run was entered; the reason is shown, for example "Its planner slot was more than 36 h old when the run was entered." **Planned, not run** lists slots that passed with no entry. Further tables: **By machine** and **Job cards furthest from plan**.

## Employee performance (/reports/employees)

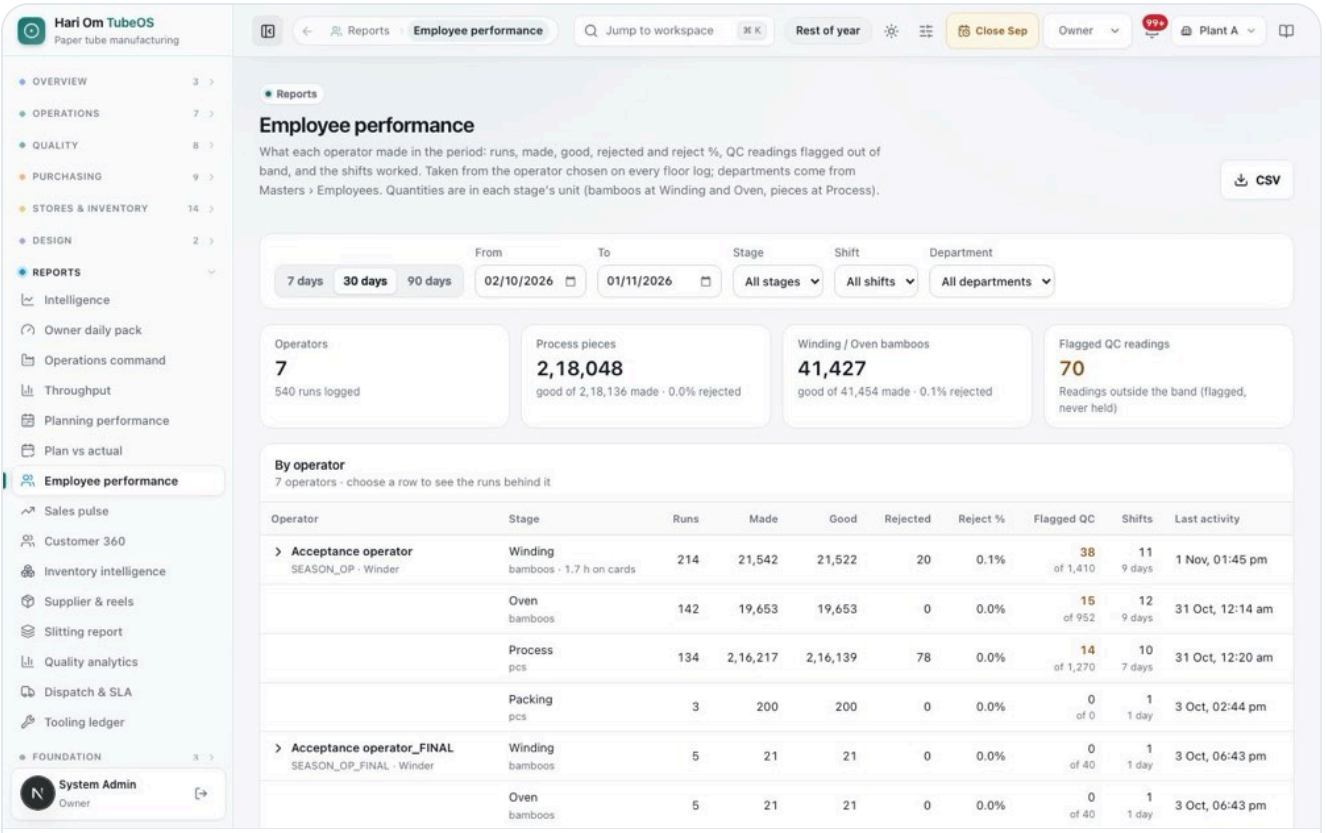



Figure: Employee performance for the last 30 days. Period buttons 7 days, 30 days, 90 days, From and To dates, Stage, Shift and Department filters and a CSV button. Tiles: Operators (with runs logged), Process pieces (good of made, % rejected), Winding / Oven bamboos and Flagged QC readings. The By operator table lists each operator per stage with Runs, Made, Good, Rejected, Reject %, Flagged QC, Shifts and Last activity; one row is opened to show its runs.

**Question:** what did each operator make, and how good was it? **Who:** Owner, Admin, Plant Manager, Planner. **Filters: 7 days**, **30 days**, **90 days** or **From** / **To**; **Stage** (All stages, Winding, Oven, Process); **Shift** (All shifts, Shift A, Shift B); **Department** (All departments, or one from Masters › Employees). **CSV** downloads every row with the filters written at the top (file employee-performance--to-.csv).

What you see:

1. **Description**: "What each operator made in the period: runs, made, good, rejected and reject %, QC readings flagged out of band, and the shifts worked. Taken from the operator chosen on every floor log; departments come from Masters › Employees. Quantities are in each stage's unit (bamboos at Winding and Oven, pieces at Process)."
2. **Tiles**: **Operators** ("N runs logged"), **Process pieces** (good, "good of N made · N% rejected"), **Winding / Oven bamboos** (the same in bamboo) and **Flagged QC readings** ("Readings outside the band (flagged, never held)").
3. **By operator** table: one row per operator and stage: **Operator** (with department), **Stage**, **Runs**, **Made**, **Good**, **Rejected**, **Reject %**, **Flagged QC**, **Shifts** (shifts worked, with "· N h on

cards" when card times were written) and **Last activity**.

4. **Runs** (click a row): every run behind it: **Date · shift**, **Job card** (opens the card), **Stage · run** (for example P#3, or "(old card form)"), **Made**, **Good**, **Rejected**, **Flagged QC**.
5. If Masters › Employees cannot be read, a note says "departments are missing. The figures are complete."

Reject % = rejected ÷ made in the stage's unit. Flagged QC counts readings outside the band on that operator's runs and QC entries; they never held anything. Shifts worked counts distinct date + shift pairs.

## Sales pulse (/reports/sales)

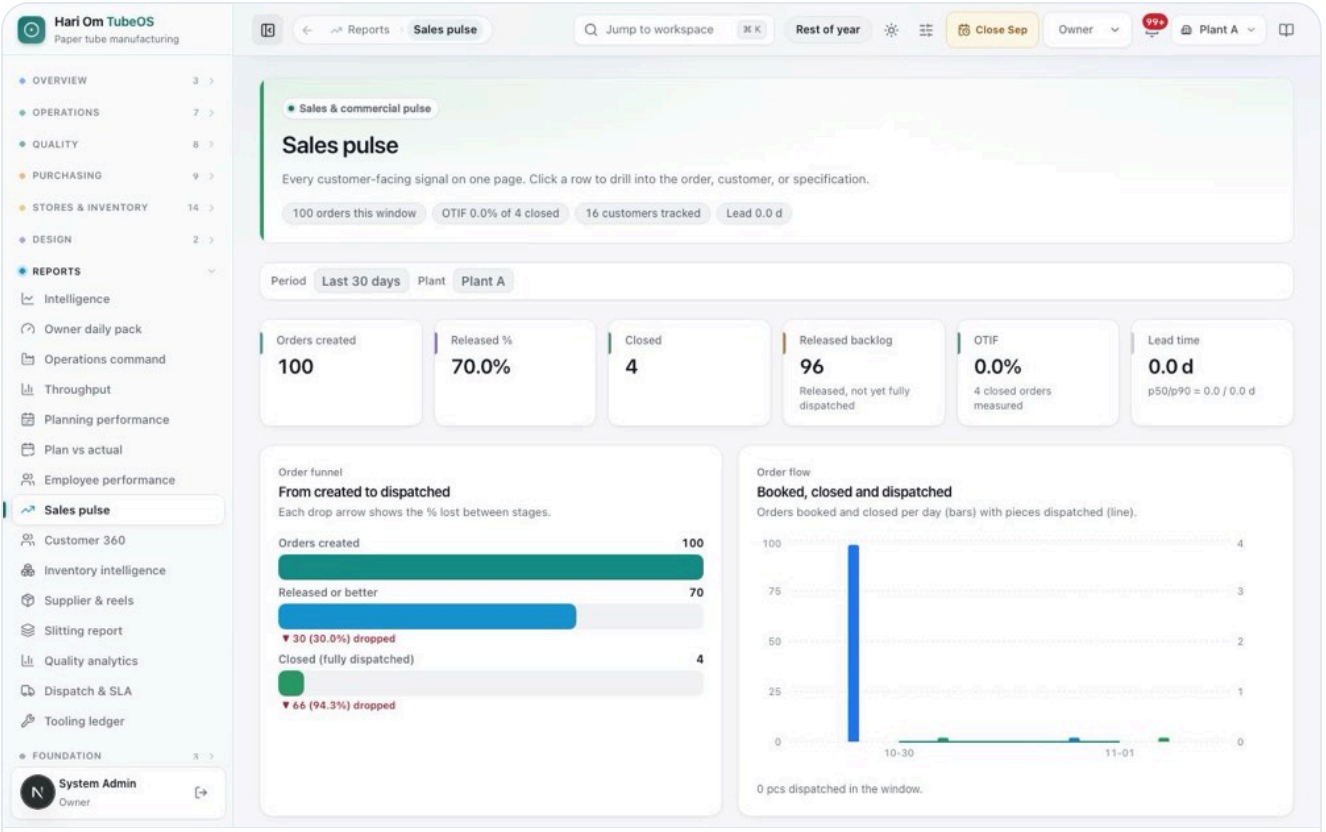



Figure: Sales pulse for the last 30 days. Tiles: Orders created 100, Released % 69.0%, Closed 2, Released backlog 98, OTIF 0.0% (2 closed orders measured), Lead time 0.0 d. Below are an order funnel (100 created, 69 released or better, 2 closed) and a "Booked, closed and dispatched" chart.

**Question:** how is order flow and delivery? **Who:** Sales, Plant Manager, Owner, Admin. **Filter:** fixed to the last 30 days.

What you see: **Orders created**, **Released %** (released or better ÷ created), **Closed** (fully dispatched), **Released backlog** (released but not fully dispatched), **OTIF** and **Lead time** (with p50/p90). Panels: **From created to dispatched** funnel (the drop between steps in % shown in red), **Booked, closed and dispatched** per day, **Cancelled / short-closed by reason**, **Where the lead-time days are going**, **Top customers — risk-sorted** and **Top SKUs by quantity**.

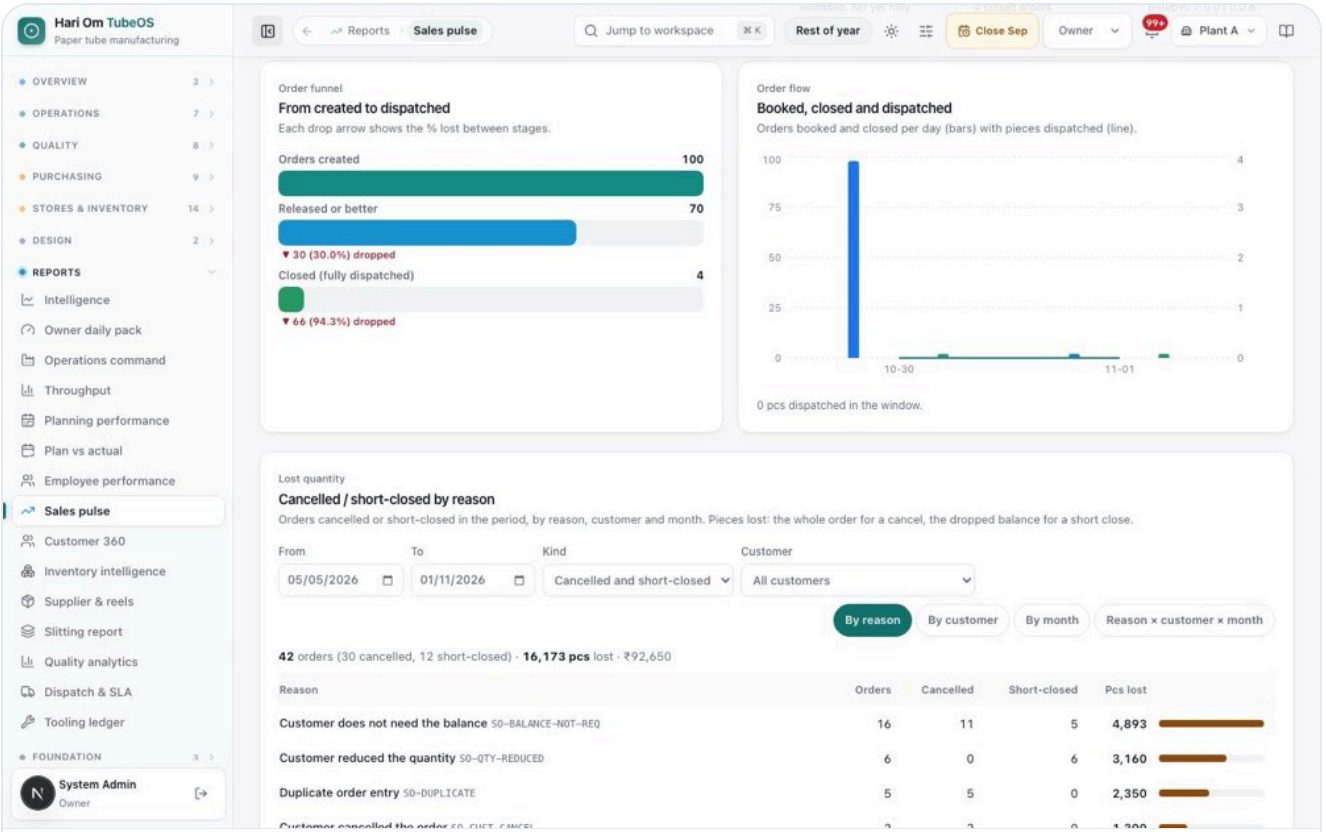



Figure: The Cancelled / short-closed by reason panel. Filters From, To, kind (Cancelled and short-closed / Cancelled / Short-closed) and customer; view buttons By reason, By customer, By month and Reason × customer × month; a table with Reason, Orders, Cancelled, Short-closed and Pcs lost with a bar for the lost pcs, and the hint "Click a reason to open those orders in the sales order register."

**Cancelled / short-closed by reason** has its own period (**From** / **To**, default the last 180 days), unlike the rest of Sales pulse. "Orders cancelled or short-closed in the period, by reason, customer and month. Pieces lost: the whole order for a cancel, the dropped balance for a short close." Filters: kind (**Cancelled and short-closed**, **Cancelled**, **Short-closed**) and **All customers** or one customer. Views: **By reason**, **By customer**, **By month** and **Reason × customer × month**. Columns: **Reason** (label and code), **Customer**, **Orders**, **Cancelled**, **Short-closed**, **Pcs lost**. Clicking a reason opens the Orders list filtered by that reason. A customer not in the masters shows as "Customer not in masters".

## Customer 360 (/reports/customer-360)

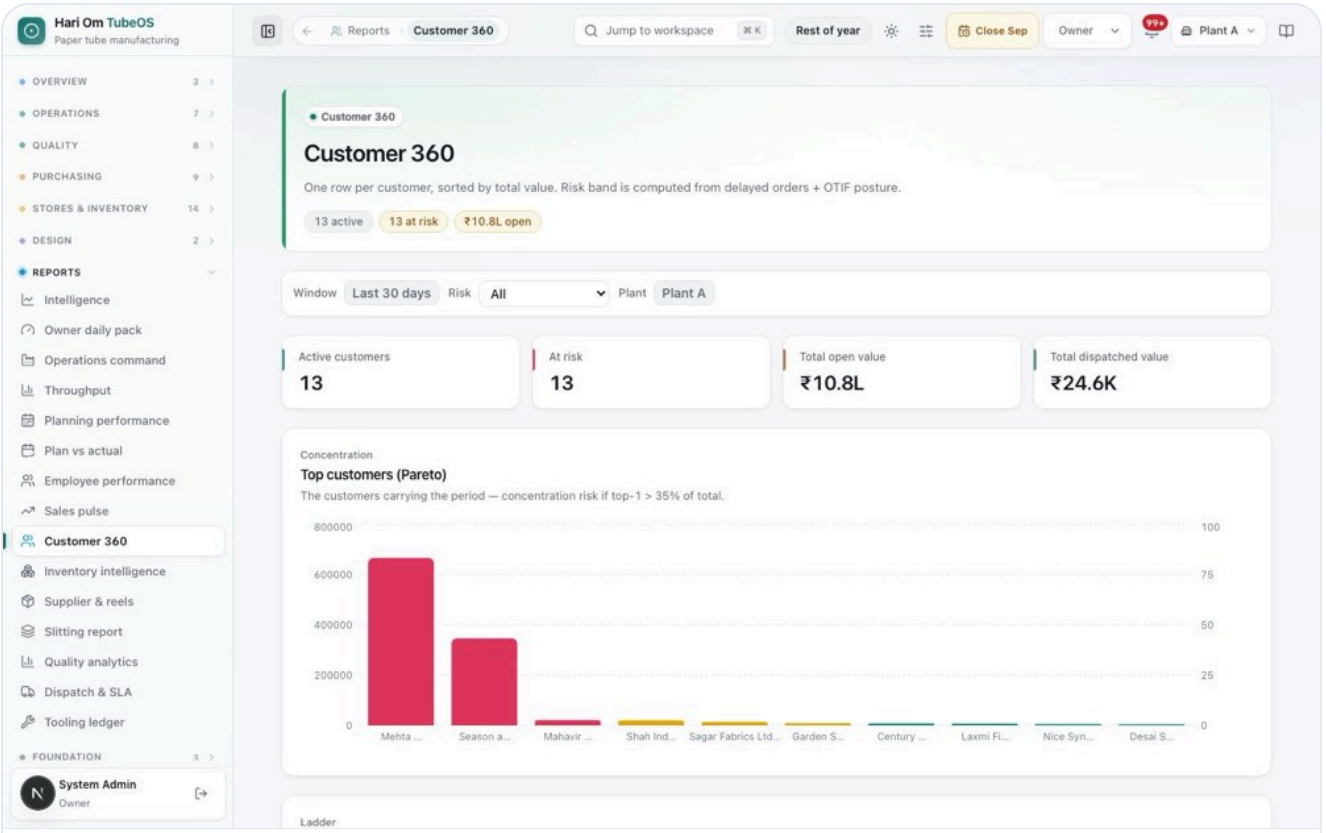



Figure: Customer 360 for the last 30 days with a Risk filter. Tiles: Active customers 13, At risk 13, Total open value ₹10.8L, Total dispatched value ₹16.2K. A "Top customers (Pareto)" bar chart shows each customer's value.

**Question:** which customers carry the business, and which are at risk? **Who:** Sales, Plant Manager, Owner, Admin. **Filters:** the last 30 days (fixed) and **Risk** (All, Watch + Critical, Critical only).

Customers are sorted by open value + dispatched value. A customer is **Critical** with 3 or more delayed open orders, or with 1 or more delayed orders and OTIF below 75%. A customer is **Watch** with 1 or more delayed orders, or OTIF below 90%. A delayed order is an open order past its promise date. A customer with no closed orders yet has OTIF 0, so it shows as Watch. The Pareto chart warns of concentration risk if the top customer is more than 35% of the total. The **Customer rows** table shows Open, Closed, Delayed, Open ₹, Dispatched ₹, OTIF, Risk and an Orders link.

## Inventory intelligence (/reports/inventory)

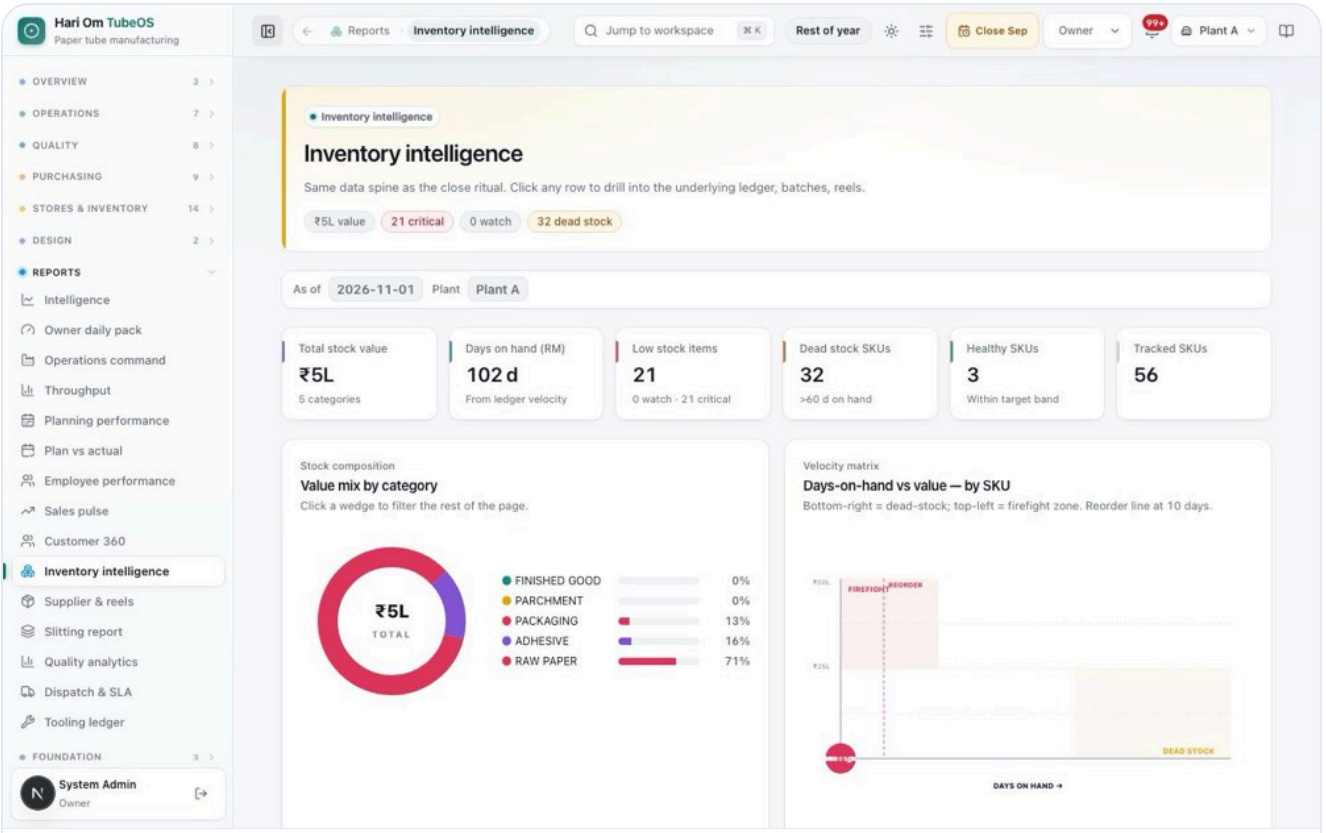



Figure: Inventory intelligence as of 2026-10-31. Tiles: Total stock value ₹5L (5 categories), Days on hand (RM) 106 d, Low stock items 20 (0 watch · 20 critical), Dead stock SKUs 32 (>60 d on hand), Healthy SKUs 2, Tracked SKUs 54. A "Value mix by category" donut (raw paper 71%, adhesive 16%, packaging 13%) and a "Days-on-hand vs value" matrix are shown.

**Question:** what is the stock worth, and what is short or dead? **Who:** Store, Planner, Plant Manager, Owner, Admin. **Filter:** as of today, for the chosen plant.

Days on hand = available qty ÷ (issued in the last 30 days ÷ 30). An item with stock but no issues counts as 180 days. **Critical** is 5 days or less, **watch** is 12 days or less, **dead** is 60 days or more, and **healthy** is anything in between. **Low stock items** = watch + critical. Panels: **Value mix by category** (click a wedge to filter), **Days-on-hand vs value** (reorder line at 10 days), a stock-as-on list with old label (Amigo) numbers, source documents, locations and QC status, **Highest-velocity items (30d)** and **Items below reorder** (with Available, Burn/day and a Demand and cover link).

## Supplier & reels (/reports/loss)

No useful screenshot (the charts were empty on 31 Oct). The page has two bar charts for the current month. **Material Loss % by Reel Supplier** takes each winder shift's loss from its reconciliation and shares it across the reels issued to that winder in that shift, by issued weight. **Loss % by GSM/BF Specification** shows the same loss grouped by paper GSM and BF. The top 10 are shown, and bars above 5% are coloured. **Who:** Store, Plant Manager, Owner, Admin.

## Slitting report (/reports/slitting)

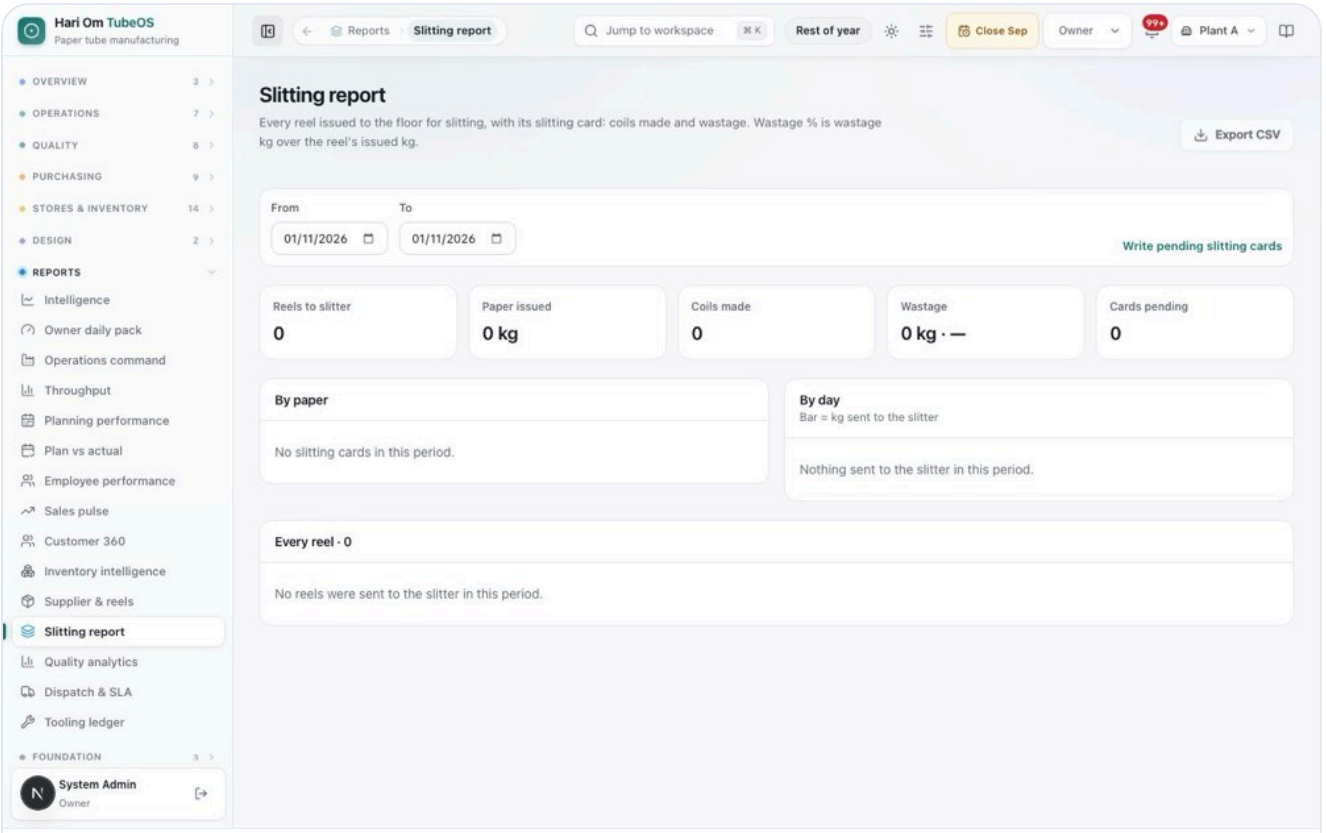



Figure: Slitting report for 01/10/2026 to 31/10/2026. Tiles: Reels to slitter 30, Paper issued 12,447 kg, Coils made 36, Wastage 67.5 kg · 1.9%, Cards pending 24. Tables "By paper", "By day" and "Every reel" (Date · shift, Reel, Paper, Issued, Coils, Wastage, Kg / coil, Card) are shown.

**Question:** what did each reel sent to the slitter turn into? **Who:** Store, Plant Manager, Planner, Owner, Admin. **Filters:** From / To (default: this month). **Export CSV** downloads every reel. **Write pending slitting cards** opens Reel & coil issue.

**Wastage %** = wastage kg ÷ the issued kg of the reels whose slitting card is written. Reels with a pending card are left out of the % but counted in **Paper issued** and **Cards pending**. In **By paper**, a wastage above 3% is shown in red.

## Quality analytics (/reports/quality)

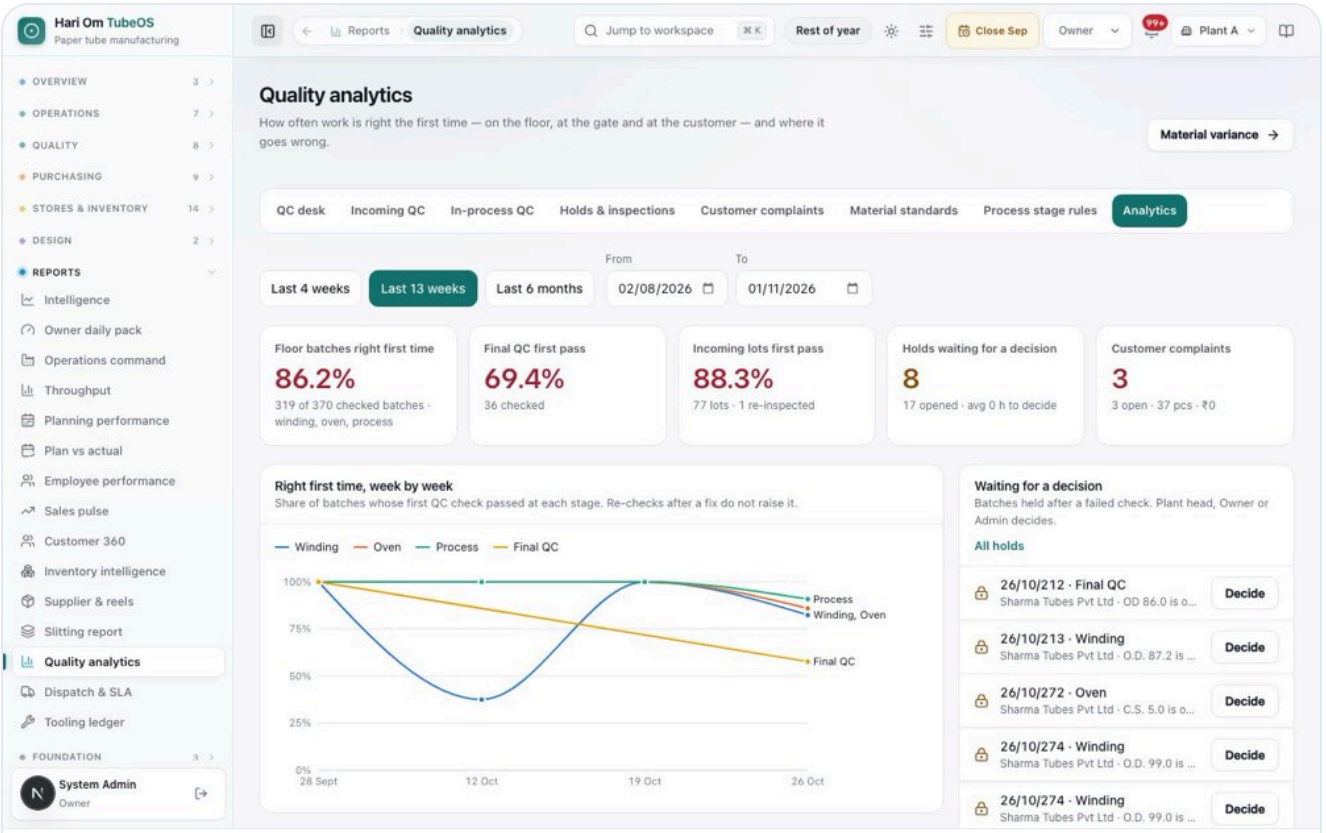



Figure: Quality analytics for the last 13 weeks. Tiles: Floor batches right first time 86.7% (307 of 354 checked batches), Final QC first pass 69.4% (36 checked), Incoming lots first pass 88.3% (77 lots · 1 re-inspected), Holds waiting for a decision 8 and Customer complaints 3. A weekly line chart shows Winding, Oven, Process and Final QC, and a "Waiting for a decision" list shows job cards like 26/10/212 with a **Decide** button.

**Question:** how often is work right the first time, and where does it fail? **Who:** QC, Inward QC, Plant Manager, Planner, Owner, Admin. **Filters:** Last 4 weeks, Last 13 weeks, Last 6 months, or From / To. **Material variance** opens the variance report.

Only the **first** check of each batch or lot counts toward "right first time"; a re-check after a fix never raises the rate. Readings that are only recorded (no band set) never count as a failure. Panels: **By stage**, **Checks that fail first time** (counted once per job card), **Incoming lots passing first time**, **Suppliers** (worst reject rate first; rejected means blocked, scrapped or returned), **Materials**, **Incoming checks that fail**, **Customer complaints by reason** and **by customer**, and **Holds by week**.

## Dispatch & SLA (/reports/dispatch)

No useful screenshot (the page was still loading on 31 Oct). The page is titled "Dispatch readiness" and has the same 7d / 30d / 90d, From / To and **Print** controls as Throughput. **Who:** Dispatch, Sales, Owner, Admin. Tiles: **Dispatch qty** (pcs dispatched in the window), **Ready job count** (finished and cleared cards at the gate), **Closed orders** and **Sealed dispatches**. A daily

trend, a **Gate readiness** donut (Sealed vs Awaiting seal) and a **Ready at the gate** detail table follow.

### Tooling ledger (/reports/tooling)

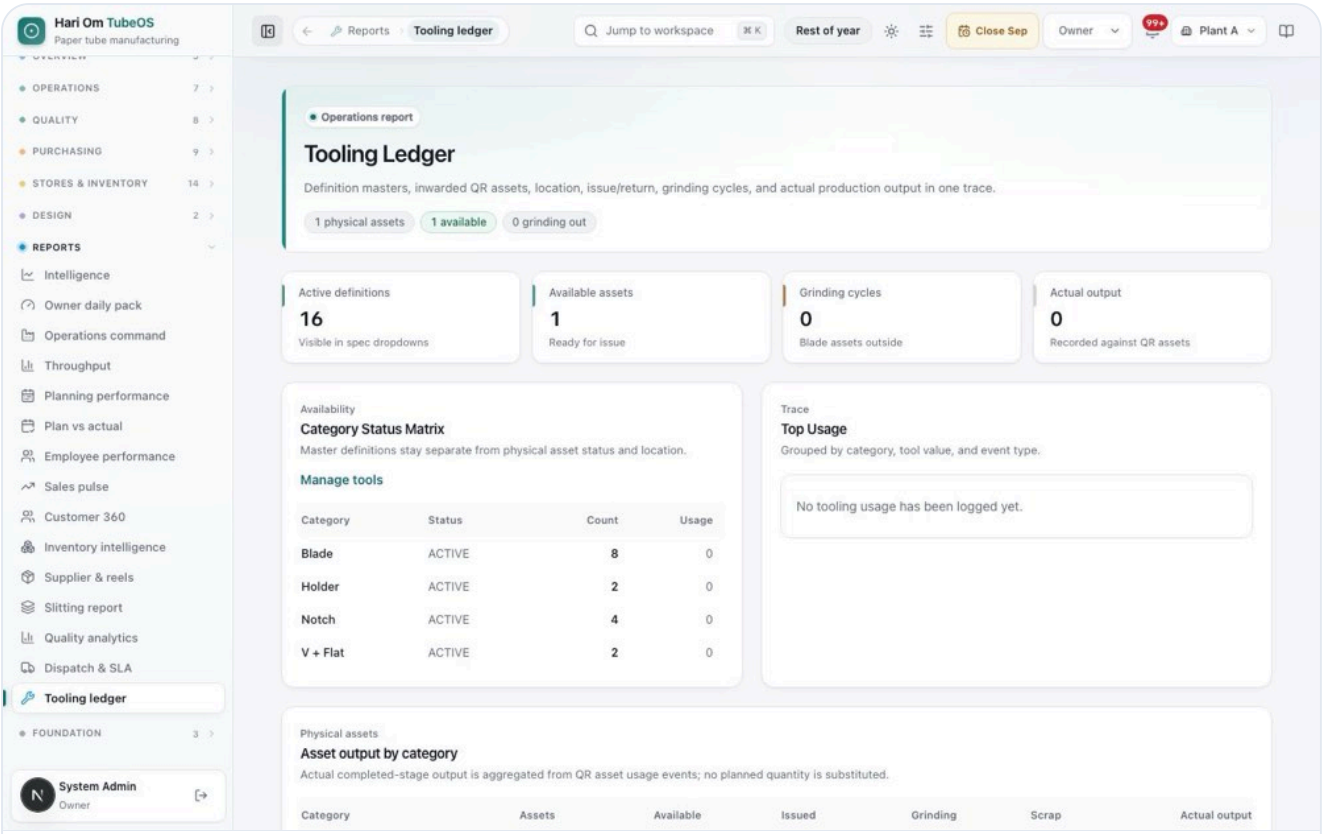



Figure: The Tooling Ledger. Tiles: Active definitions 16 (visible in spec dropdowns), Available assets 1 (ready for issue), Grinding cycles 0 (blade assets outside), Actual output 0 (recorded against QR assets). A Category Status Matrix (Blade 8, Holder 2, Notch 4, V + Flat 2, all ACTIVE) and a Top Usage panel are shown.

**Question:** which tools exist, where they are, and how much each produced. **Who:** Plant Manager, Owner, Admin. **Manage tools** opens the Physical tools master. Panels: **Category Status Matrix**, **Top Usage**, **Asset output by category** (Assets, Available, Issued, Grinding, Scrap, Actual output), **Lifetime output by physical tool**, **Output by blade grinding version** (each grinding return starts a new version) and **Recent Tool Trace**. Output is the real completed-stage output from QR asset usage; planned qty is never used in its place.

## Step by step

### How to open a report and set its period

1. Pick the plant at the top bar (Owner and Admin can choose all plants).

2. Open **Reports** in the sidebar and click the report. Only the reports of your role are listed.
3. Use that report's period control: the buttons, or the **From** and **To** dates. Fixed-window reports (Operations command, Sales pulse, Customer 360) say their window in the filter bar.
4. Click a tile, slice, row or arrow to open the source list or record.

## How to export or print

1. **Owner daily pack**: click **Export PDF** to download, or **Open printable pack** and print from the browser.
2. **Planning performance** or **Plan vs actual**: set the period and stage, then click **Excel**. The file holds every row, including those not shown on screen.
3. **Slitting report**: set From / To and click **Export CSV**.
4. **Throughput** or **Dispatch & SLA**: click **Print**; the period buttons are hidden on paper.

## How to check how well the plan held (Planner, Plant Manager)

1. Open **Planning performance**, choose **30 days** and **All stages**.
2. Read **Done in slot** and **Missed slots**. Open **Missed slots** to see which cards went back to the queue.
3. Open **Plan vs actual**, filter **Runs** to **Different** or **Before planning**, and read the reason on each run.

## How to see how each operator is doing (Plant Manager, Planner)

1. Open **Employee performance**. Choose **30 days**, or set **From** and **To**.
2. Pick **Stage** (for example Process) and, if needed, **Shift** or **Department**.
3. Read **Reject %** and **Flagged QC** per operator. Click a row to see the runs, and click a job card to open it.
4. Click **CSV** to keep the figures.

## How to see why orders are cancelled or short-closed (Sales, Owner)

1. Open **Sales pulse** and scroll to **Cancelled / short-closed by reason**.
2. Set **From** and **To**, the kind and the customer.
3. Switch views to see it by customer or by month. **Pcs lost** shows what each reason cost.
4. Click a reason to open those orders in the Orders list.

## How to find customers at risk (Sales)

1. Open **Customer 360** and set **Risk** to **Watch + Critical**.
2. Click a customer row to see their orders, dispatches and OTIF history.

### How to chase pending slitting cards (Store, RM issue)

1. Open **Slitting report** for this month. Read **Cards pending**.
2. Click **Write pending slitting cards** and write each card on Reel & coil issue.

### How to decide a QC hold from quality analytics

1. Open **Quality analytics**. In **Waiting for a decision**, click **Decide** on the job card. The Plant head, Owner or Admin decides.
2. Click **All holds** to see the full list on Holds & inspections.

## Rules the system enforces

- **Reports are read-only** and follow the selected plant (automatic). A page opened without the right role shows "This page is not open to your role" (BLOCKS).
- **OTIF** = closed orders whose last dispatch date ≤ due date ÷ closed orders (automatic). An order with no due date cannot be on time.
- **Lead time / Release → dispatch** = days from order creation to its last dispatch, averaged over closed orders (automatic).
- **Schedule adherence** = stages whose actual end day equals the planned day ÷ stages with both (automatic).
- **Machine utilization** = assigned load ÷ machine capacity. If the units do not match, Intelligence shows "Not comparable" (WARNS); fix the capacity in System > Machines.
- **Done in slot** counts a slot as done at 95% of its planned qty; upcoming, running and not-needed slots are left out (automatic).
- **Missed slot**: no floor entry for 36 hours after the slot; the card goes back to the planner's queue (automatic, never blocks the floor).
- **As planned** needs the same day, shift and machine, and card times inside the shift when they are written (automatic).
- **Customer risk** bands are Critical and Watch as described above (automatic).
- **Days on hand** uses the last 30 days of issues to the floor and dispatches (automatic).
- **Slitting wastage %** counts only reels with a written card (automatic).
- **Right first time** counts only the first check of a batch or lot; record-only readings never fail (automatic).
- **Employee performance** reads the operator picked on each floor log (only employees of the stage's department can be picked); quantities stay in the stage's unit; Reject % = rejected ÷ made (automatic). Only Owner, Admin, Plant Manager and Planner can open it (BLOCKS others).
- **Closures by reason**: pcs lost = the whole order qty for a cancel, the dropped balance for a short close; orders closed before reason codes keep their old text (automatic).

- **A failed data source shows "Not reported" or "—"**, never zero (automatic).

## Sample

**Monday review at Plant A, period 1–31 Oct 2026.**

| Report | Figure | What it means |
|---|---|---|
| Planning performance | Done in slot 68.8% (44 of 64 finished slots) | About two in three planned slots ran fully in their own shift |
| Planning performance | Missed slots 25 | 25 slots had no entry for 36 h; those cards are back in the queue |
| Plan vs actual | Run before planning 423 of 520 | Most runs were logged before the planner placed the stage |
| Slitting report | 6 carded reels, 3,575 kg issued, 67.5 kg wastage | Wastage % = 67.5 ÷ 3,575 = 1.9% |
| Customer 360 | Sharma Tubes Pvt Ltd: 1 delayed order, OTIF 80% | Watch (not Critical, because OTIF is not below 75%) |
| Inventory intelligence | Kraft 180 GSM: 2,400 kg available, 9,000 kg issued in 30 days | 9,000 ÷ 30 = 300 kg/day; 2,400 ÷ 300 = 8 days → watch |
| Employee performance | Suresh Patel, Process: 22 runs, 6,480 made, 6,350 good, 130 rejected, 4 flagged QC, 11 shifts | Reject % = 130 ÷ 6,480 = 2.0% |
| Sales pulse, closures by reason | SO-QTY-REDUCED: 3 orders, 0 cancelled, 3 short-closed, 4,200 pcs lost | Customers cutting quantity is the biggest cause of lost pcs |

## Common questions

**Why does a tile say "Not reported"?**

Either your role cannot read that source (pack figures need Owner, Admin, Planner or Plant Manager), or the source did not answer. Refresh after a minute; it never shows a false zero.

**Why is machine utilization above 100%?**

The load assigned to the machines is larger than the capacity set for them, often because capacity is entered in a different or smaller unit. Check the machine's capacity in System > Machines.

**OTIF shows 0% but we delivered on time.**

OTIF counts only closed (fully dispatched) orders with a due date. Few closed orders, or orders without a due date, give 0%.

**Why are so many runs "Run before planning"?**

The floor logged the run before the planner gave the stage a slot. The floor is never blocked by this; it only shows the planner where the plan lagged.

**Why is every customer "at risk" in Customer 360?**

A customer with no closed order in the window has OTIF 0, which is below 90%, so it shows as Watch until orders close on time.

**The slitting wastage % looks low compared with the paper issued.**

The % uses only reels whose slitting card is written. Write the pending cards to complete it.

**Can I change the window on Operations command or Sales pulse?**

No. Operations command is always the last 7 days and Sales pulse and Customer 360 the last 30 days. Use Throughput or Planning performance for other periods.

**An operator is missing from Employee performance.**

Only operators picked on floor logs in the period appear. Check the period and filters; runs logged before operators were asked for may have no operator.

**Why are Winding and Process figures in different units?**

Each stage counts in its own unit: bamboos at Winding and Oven, pieces at Process. The tiles keep them apart.

**A closed order shows a reason I don't see in the list any more.**

The reason was deactivated or renamed later. Records keep the label they were saved with.

**Can I get the owner pack by email?**

The system can send the owner pack every day (06:30 by default) through Background jobs. Ask the Admin whether it is switched on for your plant.

## Related chapters

- Dashboard and Inbox
- Planner (winder, oven, process and slitting planning)
- Log output and Log QC
- Sales orders (close reasons)
- Masters (Employees, Reason codes)
- Holds & inspections and Customer complaints
- Reel & coil issue (slitting cards)
- Month-end close
- System and audit (Machines, Background jobs)

# Masters

**What it is:** the base lists every other screen picks from: papers, mandrels, tube sizes, parchments, adhesives, packaging, inward QC bands, tools, customers, vendors, contacts, employees, shifts, holidays and reason lists.
**Who uses it:** Owner and Admin (all masters). The Plant Manager can also work on Reason codes. Sales, Plant Manager and Planner can read Order close reasons.
**Where:** Sidebar > Foundation > Masters (/masters/papers, with sub-links for each master). A tab strip at the top groups them as **Materials**, **Parties**, **Shop floor** and **Quality**.

## At a glance

- **Masters feed the dropdowns.** Specs pick papers, mandrels, tube sizes, adhesives, parchments, packaging and tools. Orders pick customers. POs and GRNs pick vendors. Floor screens pick shifts, employees and reasons.
- **Every reason in the app is a code from Reason codes.** There is one list per kind of action (for example Stage closed short, Floor rejection, QC hold placed, PO cancel / short close). No screen takes a reason as free text only.
- **Employee departments matter.** Floor logs list only the active employees of the stage's department (WINDER, OVEN, PROCESS).
- **Packaging weights matter.** Box, plastic and fadda weights per piece feed the month's packing theory; a missing weight shows a warning.
- **Nothing is ever erased. Disable**, **Deactivate** and even **Delete** only hide a record from new dropdowns. Old orders, specs, job cards and ledgers keep pointing to it, and you can reactivate it later.
- **Saved specs keep the values they were saved with.** A spec recipe stores each paper's GSM, BF and bulk at save time, so editing a paper master changes new work only, never an approved recipe version.
- **Every material master becomes a stock item automatically** (same code). Inward QC bands are set per material type, group, colour or line, and are versioned.
- **Customer and vendor details print on documents.** The delivery challan reads the customer's GSTIN and dispatch (ship-to) address; the PO prints the vendor's details. Keep them up to date.

## The flow

### How a master change reaches daily work

1. **Edit master** — Owner/Admin
2. **New dropdown value**
3. **New spec or order picks it** — Design/Sales
4. **Released job card keeps its copy**

If it goes wrong after **Edit master**

1. **Old specs and orders unchanged**

### Inward QC band change

1. **Choose scope** — Owner/Admin — type, group, colour or line
2. **Set bands and reason**
3. **Save bands** — new version
4. **New GRN lots checked against it** — Inward QC

If it goes wrong after **Save bands**

1. **Lots already received keep their old band**

Masters are the start of every chain. A change applies from the next use onward; anything already saved keeps its own copy, so history stays true.

## Screen tour

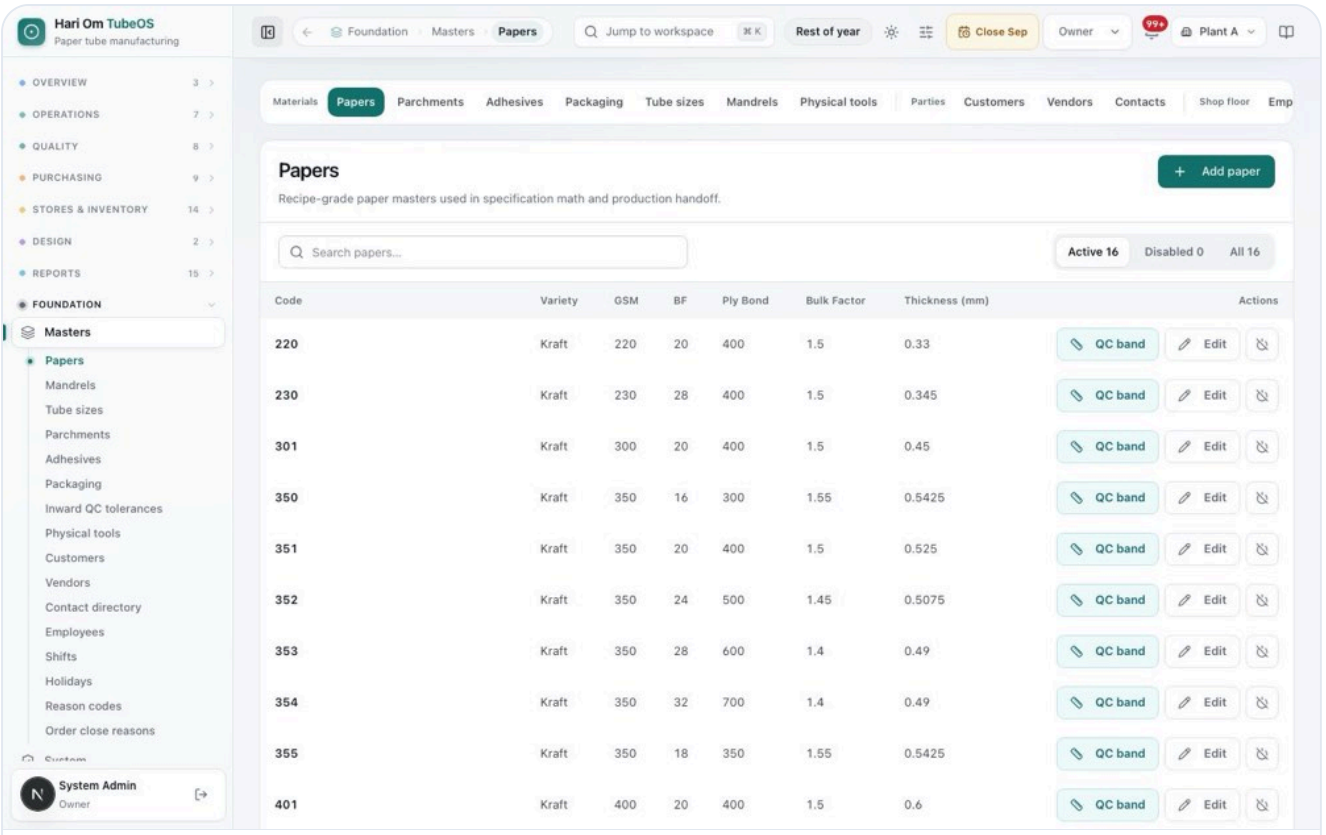



Figure: The Papers master. The tab strip at the top shows Materials (Papers, Parchments, Adhesives, Packaging, Tube sizes, Mandrels, Physical tools), Parties (Customers, Vendors, Contacts) and Shop floor. The table lists papers such as 220 (Kraft, GSM 220, BF 20, Ply Bond 400, Bulk Factor 1.5, Thickness 0.33 mm), each with **QC band**, **Edit** and a disable button. Top right is **Add paper**, with a search box and Active 16 / Disabled 0 / All 16 filters.

What you see (the same layout is used by Papers, Mandrels, Tube sizes, Parchments, Adhesives and Packaging):

1. **Add** button, **Search** box and **Active / Disabled / All** filter with counts.
2. **Table** with the master's columns. Disabled rows are greyed and marked **Disabled**.
3. **Row actions**: **QC band** (opens the inward QC band for that line; papers, adhesives and parchments), **Edit**, the disable icon, and **Reactivate** on a disabled row.

The masters and their key fields:

| Master | Key fields | Used by |
|---|---|---|
| Papers | Paper Code, Variety, GSM, BF, Bulk Factor, Ply Bond; Derived Thickness = GSM × bulk ÷ 1000 | Spec recipe math, reel labels, inward QC nominals |

| Master | Key fields | Used by |
|---|---|---|
| Mandrels | OD (mm), Length (mm) | Spec ID band and winder setup |
| Tube sizes | Inner Dia, Outer Dia, Length (mm), Description (for example 76.4 x 81 x 150) | Spec and customer ask |
| Parchments | Company, then Sub Parchment / Color (for example SUNRISE POLYFILMS · BLUE / BLACK STRIP) | Spec allows by company; orders, release and stock use the colour |
| Adhesives | Variety, Internal Code, Solid %, Viscosity, pH | Spec glue, material issue, inward QC |
| Packaging | Three kinds: Boxes (code, size label such as 400x300x200, dimensions, **Weight per box (kg)**), Plastic Sheets (**Weight per sheet (kg)**), Fadda, the sheet inside the box (**Weight per piece (kg)**) | Spec packing (picked by code), job card boxes, packing theory, challan packing block |

**Parchments** has two panels. **Companies** (parchment families allowed on spec sheets, with **Add company**, a QC band per company, and rename) and **Parchments** (the colour rows, with **Add parchment**). A note under the table reads: "Records are never deleted. Disabling hides a record from new dropdowns; old orders, specs, job cards and ledgers keep their references."

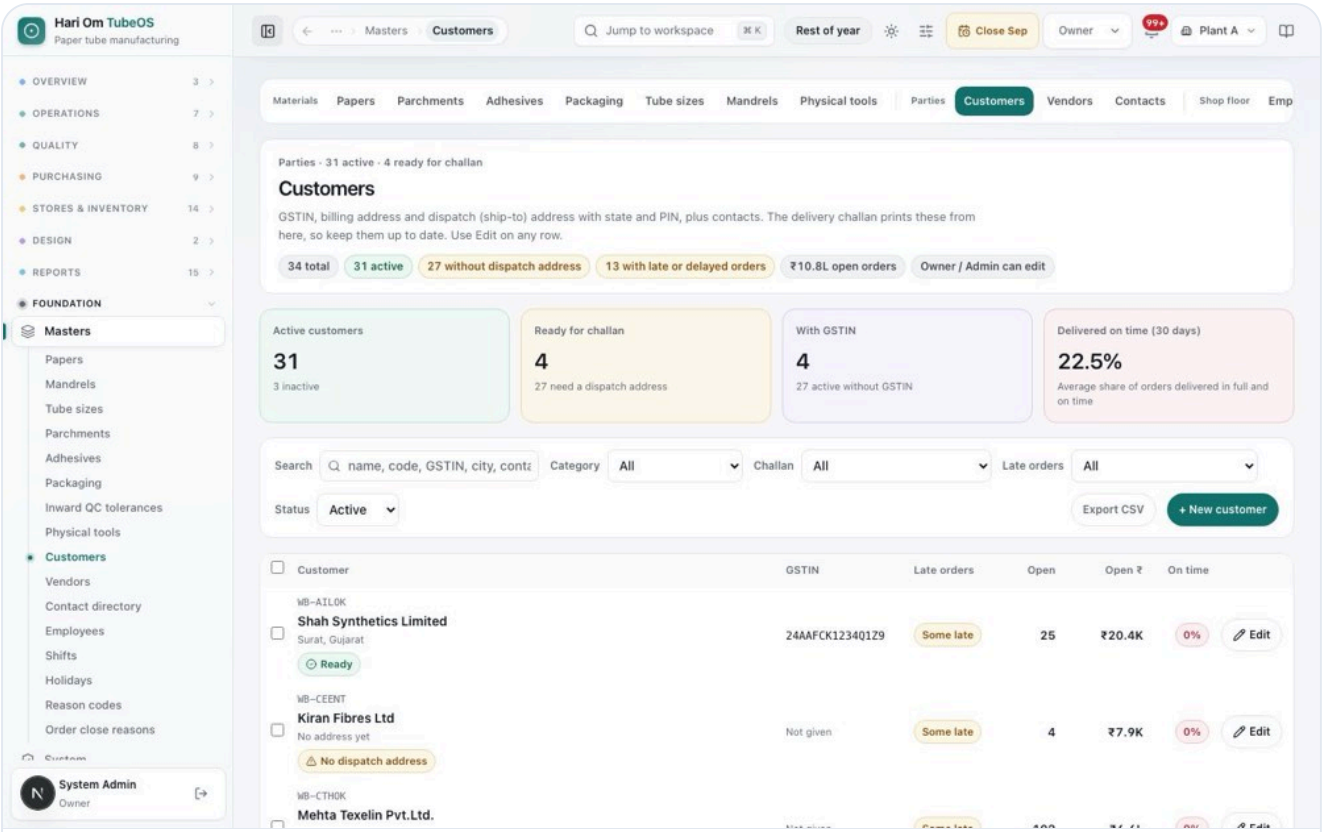



Figure: The Customers master: "31 active · 4 ready for challan". Tiles: Active customers 31, Ready for challan 4 (27 need a dispatch address), With GSTIN 4, Delivered on time (30 days) 25.0%. Filters for Search, Category, Challan, Late orders and Status, with **Export CSV** and **+ New customer**. Rows show code, name, city, a **Ready** or **No dispatch address** chip, GSTIN, Late orders, Open, Open ₹, On time and **Edit**.

What you see:

1. **Summary chips and tiles**: total, active, without dispatch address, with late or delayed orders, open order ₹, and "Owner / Admin can edit".
2. **Filters**: Search (name, code, GSTIN, city, contact), Category, **Challan** (Ready for challan, No dispatch address, GSTIN given, No GSTIN), **Late orders**, Status. **Export CSV**.
3. **Rows**: a **Ready** chip means the customer has what the challan needs. Clicking a row opens the detail panel (Overview, Contacts, Performance) with Billing address, Dispatch (ship-to) address, Tax, Payment and Main contact.
4. **Customer form** (New or Edit): Customer name, Code, Category, GSTIN, PAN, the billing address (Address, City, State, PIN code), the dispatch address (or tick **Same as the billing address**) with a Dispatch contact (stores / gate) and phone, Payment terms, Credit limit (₹), and the main contact (Contact person, Phone, Email). The form shows "Challan prints: ..." so you can see what will print.

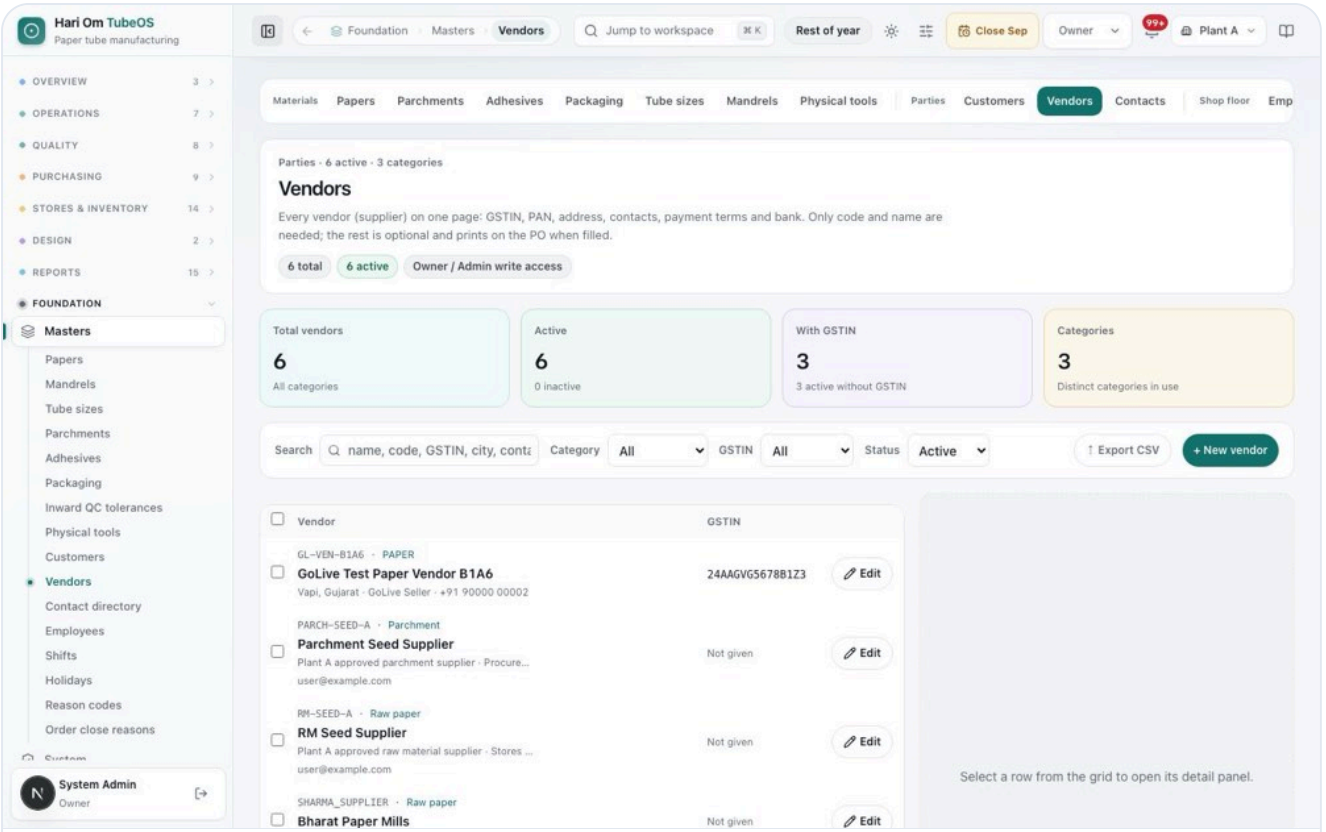



Figure: The Vendors master: Total vendors 6, Active 6, With GSTIN 3, Categories 3. Filters for Search, Category, GSTIN and Status, with **Export CSV** and **+ New vendor**. Rows show code, category (Paper, Parchment, Raw paper), name, city, GSTIN and **Edit**. A side panel says "Select a row from the grid to open its detail panel."

The vendor form has: Code, Vendor name, **Mill / short name** (for example AKSHAT; "Prints as MILL NAME on reel and coil labels"; when blank, reel labels print the vendor name), Legal name, Trade name (as on the GST certificate), Categories, GSTIN, PAN, MSME / Udyam number, the address (Address line 1 and 2, City, State, PIN code, Country), Payment terms (days), Credit days, Credit limit (₹), the bank (Bank name, Account number, IFSC), the main contact (Contact person, Phone, Alternate phone, Email) and Notes. Only code and name are required; whatever else you fill prints on the PO.

**Contact directory** (/masters/contact-directory) is a read-only list of every customer and vendor contact with Type, Master, Contact Name, Number and Email, plus a search box and Customers / Vendors counts. Edit contacts on the customer or vendor record.

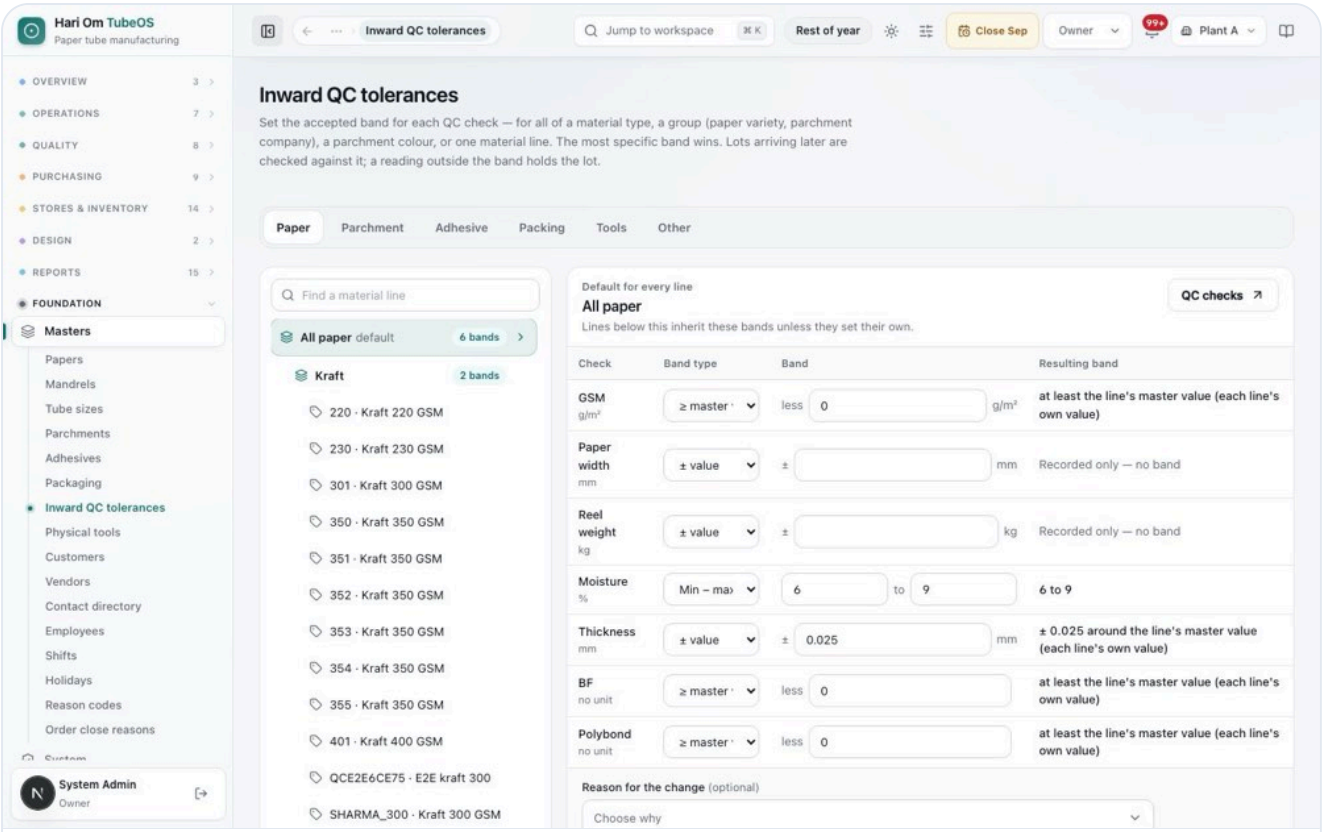



Figure: The Inward QC tolerances page on the Paper tab. On the left is a tree: All paper (default, 6 bands), the Kraft group (2 bands) and each paper line (220 · Kraft 220 GSM and so on). On the right is the band editor for "All paper": each check (GSM, Paper width, Reel weight, Moisture, Thickness, BF, Polybond) with a Band type, a Band and the Resulting band. Examples: Moisture "Min – max 6 to 9", Thickness "± 0.025 around the line's master value", GSM "at least the line's master value". At the bottom are **Reason for the change** and **Save bands**.

What you see:

1. **Material tabs**: Paper, Parchment, Adhesive, Packing, Tools, Other.
2. **Tree**: the default for the whole type, then groups (paper variety or parchment company), colours, and single lines, each with the number of bands set. **Find a material line** searches.
3. **Band editor**: for each check choose a **Band type**: **± value**, **± %**, **≥ master value**, **≤ master value**, **Min – max** or **No band here**. The **Resulting band** column shows what the lot will be checked against. A check with no band says "Recorded only — no band". On a single line you can type its **Nominal** and use **Copy nominals from master**.
4. **QC checks** opens Material standards (where the checks themselves are set).

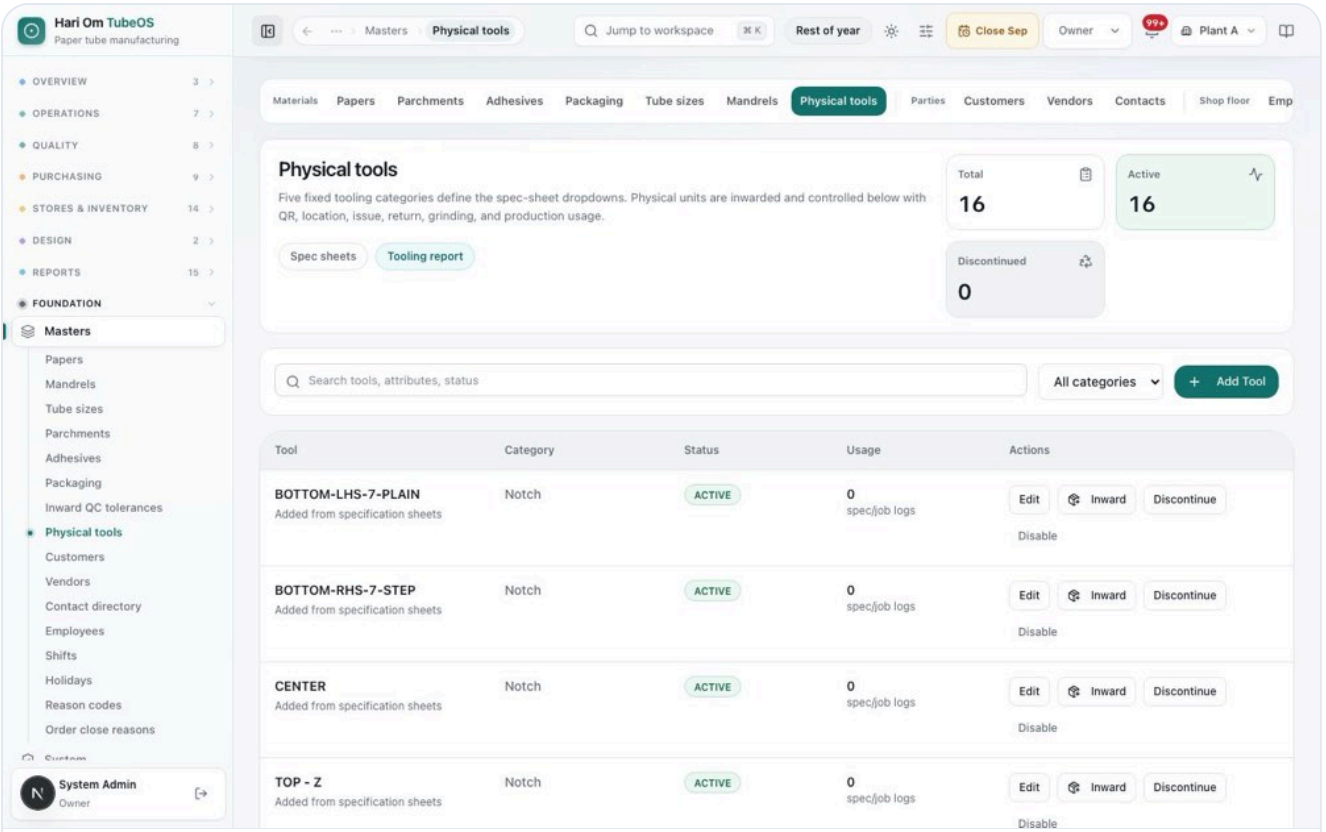



Figure: The Physical tools master: Total 16, Active 16, Discontinued 0, with **Spec sheets** and **Tooling report** links. A search box, an **All categories** filter and **Add Tool**. Rows such as BOTTOM-LHS-7-PLAIN (Notch, ACTIVE, 0 spec/job logs) have **Edit**, **Inward**, **Discontinue** and **Disable**.

Tools come in five fixed categories: **Notch**, **Blade**, **Holder**, **V + Flat** and **Punch**. Each category has its own required fields (for example a Notch needs type, thickness, design and degree; a Blade needs type, thickness and length). The dropdown values (Notch types, designs, degrees and directions; Blade types; Punch single or double) are editable under the **Editable dropdown registry**. **Inward** registers a physical unit with a receipt date, Receipt / GRN no, quantity and a **Location Master position**, and gives it a permanent QR label (**Print QR label**). Each unit then has a **QR asset ledger** of Issue, Return, Grinding out, Grinding return, Maintain, Move and scrap events.

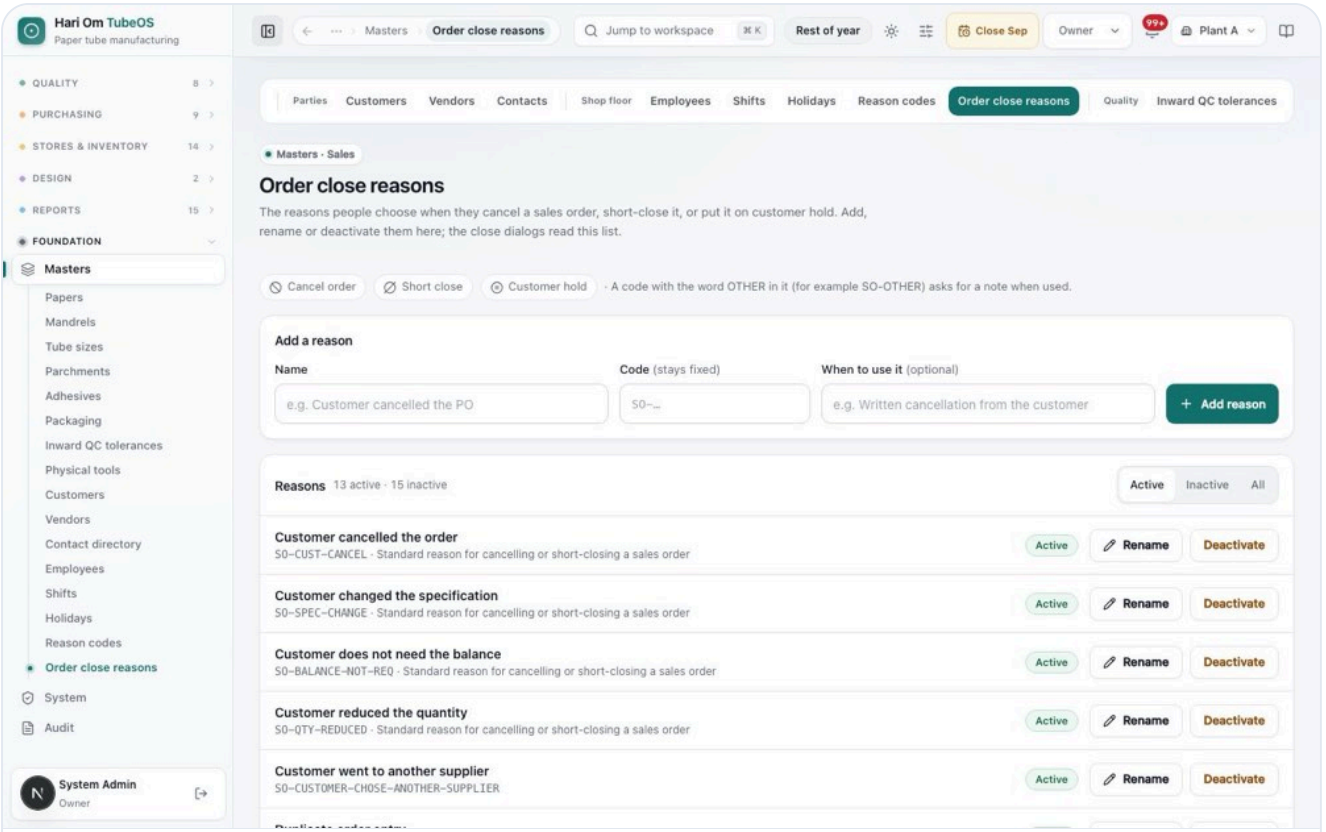



Figure: Order close reasons. Chips show where they are used: Cancel order, Short close, Customer hold, and the note "A code with the word OTHER in it (for example SO-OTHER) asks for a note when used." The **Add a reason** form has Name, Code (stays fixed) and When to use it. The list shows "13 active · 15 inactive", with reasons like "Customer cancelled the order (SO-CUST-CANCEL)", each with **Rename** and **Deactivate**.

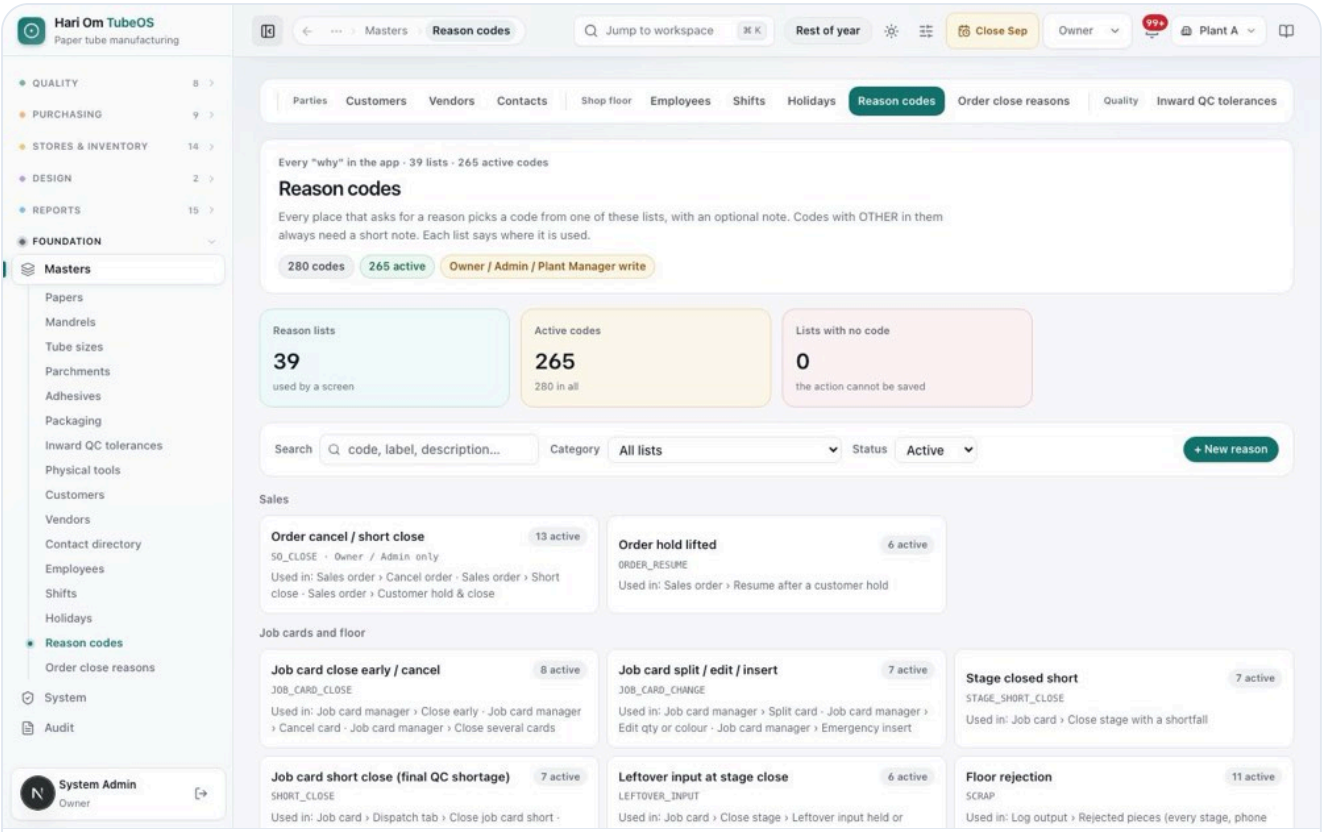



Figure: Masters › Reason codes. Header "Every 'why' in the app · N lists · N active codes" with the chip "Owner / Admin / Plant Manager write" and **+ New reason**. Tiles Reason lists, Active codes and Lists with no code. Below, list cards grouped under Sales, Job cards and floor, Quality, Stores and stock, Purchase, Dispatch and Not linked yet, each with its code count; picking a card shows where the list is used and its codes (Code, Label, Description, Severity, Status, Edit, Deactivate).

**Reason codes** (/masters/reason-codes): "Every place that asks for a reason picks a code from one of these lists, with an optional note. Codes with OTHER in them always need a short note. Each list says where it is used." What you see:

1. **Tiles**: **Reason lists**, **Active codes** ("N in all"), **Lists with no code** (amber when a list in use has no active code).
2. **List cards** grouped by area, with **All lists** to show every code. A list with no active code has an amber border. Picking one shows **Used in** (the screens that read it) and its codes. A list under **Not linked yet** says "No screen uses this list. Kept so older records stay readable."
3. **Codes table**: **Code** (fixed), **Label** (what people see), **Description**, **Severity** (OK, WATCH, CRITICAL), **Status** (Active / Inactive), **Edit**, **Deactivate** / **Reactivate** ("will be hidden from new entries. Existing rows referencing this code stay intact.").
4. **+ New reason**: **List** (required), **Code**, **Label**, **Severity**, **Description**. The Order cancel / short close list is changed on its own page: "Order close reasons are changed on their own page." with **Open Order close reasons**.

Every plant starts with standard codes in each list, and each list has an OTHER code (for example SO-OTHER, QH-OTHER, RJ-OTHER) that needs a note of at least 5 characters. The lists and

where they are used:

| Area | List (category) | Used when | Example codes |
|---|---|---|---|
| Sales | Order cancel / short close (SO_CLOSE) | Cancel order, Short close, Customer hold & close | SO-CUST-CANCEL, SO-QTY-REDUCED, SO-BALANCE-NOT-REQ |
| Sales | Order hold lifted (ORDER_RESUME) | Resume after a customer hold | RS-CUST-CONFIRMED, RS-PAYMENT, RS-HOLD-ERROR |
| Job cards and floor | Job card close early / cancel (JOB_CARD_CLOSE) | Force close, cancel, close several cards | JC-CUST-CANCEL, JC-RELEASED-TWICE, JC-MATERIAL-SHORT |
| Job cards and floor | Job card split / edit / insert (JOB_CARD_CHANGE) | Split card, edit qty or colour, emergency insert | CH-CUST-REQUEST, CH-URGENT, CH-MACHINE-LOAD |
| Job cards and floor | Stage closed short (STAGE_SHORT_CLOSE) | Close stage with a shortfall; old-form stage below plan | SS-MATERIAL-SHORT, SS-HIGH-REJECT, SS-MACHINE |
| Job cards and floor | Job card short close, final QC shortage (SHORT_CLOSE) | Dispatch tab › Close job card short; Operations control short close | SH-REJECT, SH-COUNT, SH-CUST-ACCEPT |
| Job cards and floor | Leftover input at stage close (LEFTOVER_INPUT) | Unused input held or scrapped at a stage close | LI-EXTRA-MADE, LI-DAMAGED, LI-NEXT-RUN |
| Job cards and floor | Floor rejection (SCRAP) | Rejected pieces and cutting loss on every stage | WL, PG, ID, OD, LN, WT, CS, DM, MS, NT, RJ-OTHER |
| Job cards and floor | Entry correction / void / reopen (ENTRY_CORRECTION) | Void a run, change saved readings, reopen a stage | EC-WRONG-QTY, EC-DUPLICATE, EC-REOPEN-MORE |
| Job cards and floor | Override (OVERRIDE) | Above 110% of target, carryover, run outside the plan, taking batches before QC | OV-CUST-EXTRA, OV-SETUP-LOSS, OV-PLAN-CHANGE |

| Area | List (category) | Used when | Example codes |
|---|---|---|---|
| Job cards and floor | Machine downtime (DOWNTIME) | Operations control › log or edit downtime | DT-POWER, DT-BREAKDOWN, DT-CHANGEOVER |
| Quality | Customer complaints (CUSTOMER_COMPLAINT) | Record a complaint | CC-DAMAGE, CC-SIZE, CC-STRENGTH |
| Quality | QC hold placed (QC_HOLD) | Place a hold; opening stock put on hold | QH-SUSPECT, QH-CUST-COMPLAINT, QH-RETEST |
| Quality | QC hold release (QC_RELEASE) | Release a hold | QR-RETEST-OK, QR-REWORKED, QR-MGMT-OK |
| Quality | Incoming material rejected / returned (RM_ISSUE) | Return a rejected lot to the supplier | RM-GSM, RM-MOISTURE, RM-WEIGHT |
| Quality | Concession (CONCESSION) | Use a failed lot under concession | CN-MINOR, CN-URGENT, CN-SUPPLIER-CREDIT |
| Stores and stock | Stock correction (STOCK_CORRECTION) | Raise a stock correction | COUNT_SHORT, COUNT_EXTRA, WRONG_GRN_WEIGHT |
| Stores and stock | Correction rejected / count sent back (APPROVAL_REJECT) | Reject a correction; send a count back for recount | AR-RECOUNT, AR-NO-PROOF, AR-WRONG-QTY |
| Stores and stock | Manual FG inward (MANUAL_FG) | FG inward › Manual inward | FG-REWORK, FG-ADJUSTMENT, FG-OPENING |
| Stores and stock | Receipt without PO (MANUAL_RECEIPT) | Receive without a PO | MR-URGENT, MR-SAMPLE, MR-CASH |
| Stores and stock | Books unlock (BOOKS_UNLOCK) | Unlock a closed month's store books | BU-LATE-GRN, BU-CORRECTION, BU-AUDIT |
| Stores and stock | Month-end variance (MONTH_END_VARIANCE) | Explain an item's variance outside tolerance | MV-WASTAGE, MV-COUNT, MV-MOISTURE |

| Area | List (category) | Used when | Example codes |
|---|---|---|---|
| Purchase | Purchase approval rejected (PURCHASE_REJECT) | Reject a PO, requisition or purchase plan | PJ-RATE-HIGH, PJ-NOT-NEEDED, PJ-STOCK-OK |
| Purchase | PO cancel / short close (PO_CLOSE) | Cancel or short close a PO | PC-SUPPLIER-CANNOT, PC-NOT-NEEDED, PC-DELAY |
| Purchase | PO revision (PO_REVISION) | Edit a PO (new revision) | PV-RATE, PV-QTY, PV-DATE |
| Purchase | Receiving more than the PO (OVER_RECEIPT) | GRN above the PO quantity | OR-ROLL-WEIGHT, OR-MIN-LOT, OR-TOLERANCE |
| Purchase | Invoice difference (INVOICE_DIFF) | Accept variance, reject invoice, release stock | ID-RATE, ID-FREIGHT, ID-TAX |
| Purchase | Debit note (DEBIT_NOTE) | Raise or void a debit note | DN-SHORT, DN-REJECT, DN-VOID-ERROR |
| Purchase | Supplier schedule change (SUPPLIER_SCHEDULE) | Change a supplier delivery; cancel an RM calendar delivery | SCH-SUPPLIER-DELAY, SCH-PLAN-CHANGE |
| Dispatch | Surplus kept (SURPLUS_RETAIN) | Retain surplus FG | SR-NEXT-ORDER, SR-CUST-LATER, SR-SAMPLE |
| Not linked yet | QC reject, Customer return, Other (general) | No screen; kept so older records stay readable | (old codes only) |

Each record that uses a reason keeps the code, the label at that moment and the note, so renaming a label later never changes old records; reports and histories show the label. Records made before 1 Nov 2026 keep their old typed text.

**Employees**: Code (EMP-001), Name, Role (Operator, Supervisor, Packer, QC Inspector, Storeman, Dispatcher, Manager), Dept (WINDER, OVEN, PROCESS, PACKING, QC, DISPATCH, STORE, GENERAL), Default shift, Skills (for example WINDER, OVEN), Phone and Email. **The department decides where a person can be picked as operator**: Log output and Log QC on Winding list only active WINDER employees, Oven only OVEN, Process only PROCESS (operators first). The server refuses anyone else. The operator chosen on every floor log feeds Reports › **Employee performance**. Employees are not login users; logins are made under System > Users.

**Shifts**: Code, Name, Start time, End time, Break (min), Hours / day and Night premium (%). Shifts are marked DAY or NIGHT. They feed machine availability, planner day boundaries and night-premium reports.

**Holidays** (Plant calendar): Date, Type (PUBLIC HOLIDAY, PLANT HOLIDAY, MAINTENANCE DAY, STRIKE, POWER CUT, OTHER), Description (for example Diwali) and Impact shifts (blank = the whole day). They are used by OTIF and adherence (a due date on a holiday moves to the next working day).

## Step by step

### How to add a paper (or mandrel, tube size, adhesive, parchment colour, packaging item)

Owner or Admin.

1. Open **Masters** and the right tab. Click **Add paper** (or the matching button).
2. Fill the fields. For a paper: **Paper Code** (for example KRAFT-230-18BF), **Variety**, **GSM** and **BF** (required), then **Bulk Factor** and **Ply Bond**. **Derived Thickness (mm)** fills itself.
3. Click **Save**. The paper appears in spec dropdowns, and a stock item with the same code is made for purchase, inward and issue.
4. Click **QC band** on the row to set its inward QC band, if it differs from the group default.

### How to edit or disable a master record

1. Click **Edit**, change the fields and **Save**. New specs and orders use the new values; saved recipe versions keep the values they were saved with.
2. To stop using a record, click the disable icon (or **Deactivate**). It disappears from new dropdowns only.
3. To bring it back, switch the filter to **Disabled** and click **Reactivate**.

### How to add a parchment company and its colours

1. Under **Companies**, click **Add company** and type the **Company Name** (for example SUNRISE POLYFILMS). Save.
2. Click **Add parchment**, pick the **Company** and type the **Sub Parchment / Color** (BLUE, RED, Printed and so on). Save.
3. Specs allow parchment by company. Sales orders and the release step pick the colour, and a parchment colour is compulsory at release.

## How to add or edit a customer

Owner or Admin.

1. Open **Customers** and click **+ New customer** (or **Edit** on a row).
2. Fill **Customer name** and **Code** (the only required fields). Add **GSTIN**; the PAN and billing state fill in from it.
3. Fill the billing address. For the dispatch address, tick **Same as the billing address** or type the ship-to address with its own state, PIN and dispatch contact.
4. Fill payment terms, credit limit and the main contact. Save. The row shows **Ready** when the challan has what it needs.

## How to add or edit a vendor

Owner or Admin.

1. Open **Vendors**, click **+ New vendor** (or **Edit**).
2. Fill **Code** and **Vendor name**, then GSTIN, PAN, MSME / Udyam, address, payment terms, bank and contact as needed. Save.
3. The vendor now appears in PO, inward and parchment-company dropdowns.

## How to set inward QC bands

Owner or Admin.

1. Open **Inward QC tolerances** and pick the material tab.
2. Click the level in the tree: the type default, a group, a colour or one line.
3. For each check, choose the **Band type** and enter the band. Read the **Resulting band** column.
4. Optionally write the **Reason for the change** (kept in history). Click **Save bands**. The message says how many lines now inspect against the new band; lots already received keep the band they arrived with.

## How to add and manage a physical tool

Owner or Admin (the Plant Manager can also change tool masters).

1. Open **Physical tools**, click **Add Tool**, choose the category and fill its required fields. Save. It appears in spec sheet dropdowns.
2. To register a real unit, click **Inward**, fill the receipt date, Receipt / GRN no, quantity and location, and click **Post inward**. Print its QR label.
3. Use **Discontinue** to stop new selections, or **Disable** to hide it.

## How to add, rename or deactivate an order close reason

Owner or Admin. Sales, Plant Manager and Planner see the list read-only.

1. Open **Order close reasons**. In **Add a reason**, type the **Name**. The **Code** fills in as SO- (you can change it now; it stays fixed afterwards). Add **When to use it** if helpful.
2. Click **Add reason**.
3. To change the wording, click **Rename**. To stop offering it, click **Deactivate** and confirm.

## How to add a reason code

Owner, Admin or Plant Manager.

1. Open **Reason codes**. Click the list card (for example **Stage closed short**) to see its codes and where it is used.
2. Click **+ New reason**. Pick the **List**, type the **Code** (for example SS-NO-ADHESIVE; it stays fixed), the **Label** people will see ("Adhesive not available"), the **Severity** and an optional **Description**. Click **Create**.
3. The code appears at once in every picker of that list in this plant.
4. To change the words, click **Edit** and change the label; records already saved keep the label they were saved with. To stop offering it, click **Deactivate**; old records keep it.
5. A code with OTHER in it (as a whole word, for example SS-OTHER) always asks for a note of at least 5 characters when used.

## How to add an employee so they can log runs

Owner or Admin.

1. Open **Employees**, click **+ New employee**.
2. Fill **Code**, **Name**, **Role** (Operator) and **Dept**: WINDER for winding, OVEN for the oven, PROCESS for the process line. Save.
3. The person now appears in the **Operator** list of Log output and Log QC for that stage only. To move someone to another stage, change the **Dept**. To stop listing them, **Deactivate** them.

## How to add a shift or holiday

1. Open the master and click **+ New shift** or **+ New holiday**.
2. Fill the fields shown above and save. Use **Deactivate** / **Reactivate** for shifts. Holidays can be edited or deleted.

## How to add a packaging item with its weight

Owner or Admin.

1. Open **Packaging**, pick **Boxes**, **Plastic Sheets** or **Fadda**, click add.
2. Type the code (the same code the spec and stock use, for example R-150), the **Size label** (for example 400x300x200), dimensions and the weight: **Weight per box (kg)**, **Weight per sheet (kg)** or **Weight per piece (kg)**. Save.
3. The item can now be picked on spec sheets and on Packing setup. When it is the only active plastic (or fadda) master, specs take it by default.

## Rules the system enforces

- **Who can change masters**: Owner and Admin (all). Reason codes also allow the Plant Manager. Order close reasons are Owner or Admin only ("Only the Owner or an Admin can change order close reasons."). Others are shown "This page is not open to your role" (BLOCKS).
- **No hard delete**: disabling, deactivating and deleting all just set the record inactive (automatic). History keeps its references.
- **Codes are unique per plant** (BLOCKS): for example "Paper code already exists in this plant", "Customer code or name already exists in this plant", "Supplier code or name already exists in this plant", "Employee code already exists in this plant", "Shift code already exists in this plant", "Reason code already exists in this plant". Holidays are unique per date and type.
- **Required fields**: paper code, variety, GSM and BF; customer code and name; vendor code and name; employee code and name; shift code and name; reason code and label (BLOCKS).
- **Derived paper thickness** = GSM × bulk factor ÷ 1000 (automatic).
- **GSTIN** must be 15 characters: a 2-digit state code, a 10-character PAN and 3 characters, for example 24ABCDE1234F1Z5 (BLOCKS). **PAN** must be 5 letters, 4 digits and 1 letter. **IFSC** must be 4 letters, a zero and 6 letters or digits.
- **GSTIN fills the PAN and billing state** when they are empty (automatic). A PAN that does not match the GSTIN is refused, and so is a billing state outside the GSTIN's state ("The billing address must be in the GSTIN's state"). When the GSTIN changes, a PAN and state that came from the old GSTIN follow the new one.
- **Vendor payment terms and credit days** must be 0 to 365 days, and the credit limit cannot be negative (BLOCKS).
- **Spec recipes snapshot paper values** (GSM, BF, bulk) when saved (automatic). Master edits never rewrite them.
- **Every material master record gets a stock item** with the same code. A code already used by another material type is reported, not overwritten (automatic).
- **Inward QC bands**: the most specific band wins (line, then colour, then group, then type default). Each save is a new version. New GRN lots are checked against the band in force;

earlier lots keep theirs. A reading outside the band holds an incoming lot.

- **Tools**: the category is fixed after creation ("Tool category is fixed after creation"). Each category has required fields (BLOCKS). Tool names are unique within a category, and dropdown values are unique.
- **Order close reasons**: the code never changes once made ("An order close reason keeps its code, because closed orders still point to it."). A code containing OTHER makes the close dialog ask for a note (automatic). They are stored as reason codes of category SO_CLOSE.
- **Reason codes**: the list must be one of the lists above and the severity OK, WATCH or CRITICAL (BLOCKS). Every service checks a chosen code itself: it must be active, of the right list and of the record's plant, and an OTHER code needs a note of at least 5 characters ("Write a short note (at least 5 characters) for the reason 'Other'."). A code from another list is refused ("SS-MACHINE belongs to the list 'Stage closed short', not 'Machine downtime'."); an unknown code says to pick one from the list or ask a Plant Manager, Admin or the Owner to add it (BLOCKS). If master data cannot be reached, the save waits and says to try again.
- **Operators by department**: a floor log refuses an employee whose department is not the stage (BLOCKS).
- **Packaging weights** feed packing theory; a material with no weight is listed as a warning, not dropped (WARNS).
- **Vendor mill / short name** prints as MILL NAME on reel and coil labels; blank prints the vendor name (AUTOMATIC).

## Sample

**New customer for the challan.** The Admin adds Sharma Tubes Pvt Ltd: Code WB-SHARMA, GSTIN 24AAKCS4821M1Z3. The system fills PAN AAKCS4821M and the billing state Gujarat (24). Billing address: Plot 14, GIDC Phase II, Vapi 396195. The Dispatch (ship-to) address is their Daman warehouse with stores contact Mr Patel, 98250 12345. The row now shows **Ready**. When Dispatch makes a challan for SO/26/10/412, it prints the GSTIN and the Daman ship-to address.

**Paper edit.** The Admin changes paper 350 (Kraft) bulk factor from 1.55 to 1.50, so the derived thickness goes from 0.5425 to 0.525 mm. Recipe version 3 of spec 76.4 x 81 x 150 for Sharma Tubes, approved last week, keeps 1.55 in its layers. The next recipe version saved will use 1.50.

**Reason code.** Paper often runs out because adhesive is late. The Plant Manager adds SS-NO-ADHESIVE "Adhesive not available" to the list **Stage closed short**. The next day, when Winding on 26/10/318 closes at 52 of 60 bamboo, the plant manager picks it; the card history, the order history and the returned balance all show "Adhesive not available".

**Order close reason.** The Owner adds "Customer moved the plant" and the code becomes SO-CUSTOMER-MOVED-THE-PLANT. Later the Owner renames it "Customer shifted the plant"; the code stays the same, so orders already closed with it still show it.

## Common questions

**I deleted a customer by mistake. Is it gone?**

No. Delete only deactivates it. Set Status to Inactive, find it and click **Activate**.

**Why can't I change an order close reason's code?**

Closed orders keep that code. Rename it instead, or deactivate it and add a new one.

**I changed a paper's GSM. Why does an old spec still show the old value?**

Saved recipe versions keep the values they were saved with. Save a new recipe version to use the new value.

**The customer row says "No dispatch address". Does it matter?**

Yes for dispatch. The challan prints the ship-to address from here. Edit the customer and fill it, or tick **Same as the billing address**.

**I typed a GSTIN and the PAN changed by itself.**

A GSTIN contains the PAN (characters 3 to 12) and the state code (first 2 digits), so the system fills them to match.

**A new paper does not appear in Material items.**

It is created automatically when the master is saved. Refresh Material items. If its code is already used by another type of material, the system reports a conflict instead; use a different code.

**Where do I change who can log in?**

Not here. Employees are shop-floor people for reports. Logins are under System > Users.

**? Why can't the Plant Manager edit papers?**

Masters are Owner and Admin only, except Reason codes, which the Plant Manager may also change.

**? A reason picker says "No reasons are set up for this list".**

That list has no active code in this plant. Add one in Reason codes (the picker links there).

**? An operator is missing from the Log output list.**

Check their **Dept** and that they are active in Employees. Winding shows WINDER people only, Oven OVEN, Process PROCESS.

**? What is the mill name on a reel label?**

The vendor's **Mill / short name** (for example AKSHAT). Fill it on the vendor; until then the label prints the vendor name.

## Related chapters

- Specifications (recipes, tools, parchment allowed)
- Sales orders (close reasons, customer PO, parchment at release)
- Purchase orders and goods inward (vendors)
- Incoming QC and Material standards
- Dispatch and delivery challan
- Inventory and alerts (Material items)
- System and audit (Users, Plants, Machines)

# System, audit, production season and the guide

**What it is:** the setup and control pages: who can log in and with which roles and plants, the plants and machines, the background jobs, the audit trail of every change, the global production season, and the in-app guide.
**Who uses it:** Owner and Admin (System and Audit); the Owner only for switching the production season; every user for the Guide.
**Where:** Sidebar > Foundation > System (/system/users, with **Users**, **Roles & access**, **Plants**, **Machines**, **Background jobs**), Sidebar > Foundation > Audit (/system/audit), Sidebar > Quality > Production season (/settings/production-season), Sidebar > Overview > Guide (/help).

## At a glance

- **One login per person, with one or more roles.** Access adds up across roles. Their highest role decides the page they land on, and they can switch role from the top bar.
- **Plant access is part of the login.** A user works only in their allowed plants. Only Owner and Admin can have **Allow all plants**.
- **Owner and Admin always see every screen.** Give these roles only to managers. The system always keeps at least one active Owner or Admin.
- **The audit trail records who did what, when, to which record, and what changed field by field.** It can be filtered and exported to CSV.
- **Each plant card also holds two Owner settings from 7 Nov 2026:** the **Weight check of a bill** limits (default 20 kg and 50 kg) and the **Gate** settings (gate close time, default 19:00, and how long visitor photos are kept, default 365 days). Gates and their QR posters are in **System › Gates**.
- **Watchman** is a gate-only role: a Watchman login opens only the gate desk.
- **The production season (Rest of year or Monsoon) is global.** Only the Owner switches it, after a readiness check. Released job cards keep the season and tolerances they were released with.

## The flow

### Giving someone access

1. **Add New User** — Owner/Admin
2. **Name, login, password**
3. **Tick roles**
4. **Primary and allowed plants**
5. **Create user**
6. **Person signs in** — lands on their role's page

If it goes wrong after **Create user**

1. **Change roles or plants** — Owner/Admin
2. **Person is signed out**
3. **Signs in with new access**

### Switching the production season

1. **Pick season** — Owner
2. **Readiness preview** — ready and blocked specs
3. **Acknowledge blocked specs**
4. **Reason**
5. **Confirm global switch**
6. **New releases use the new season**

If it goes wrong after **Confirm global switch**

1. **Released cards keep their old season**

Access changes take effect at the next sign-in, because the system signs the person out. The season switch only changes what new releases use; nothing already released changes.

## Screen tour

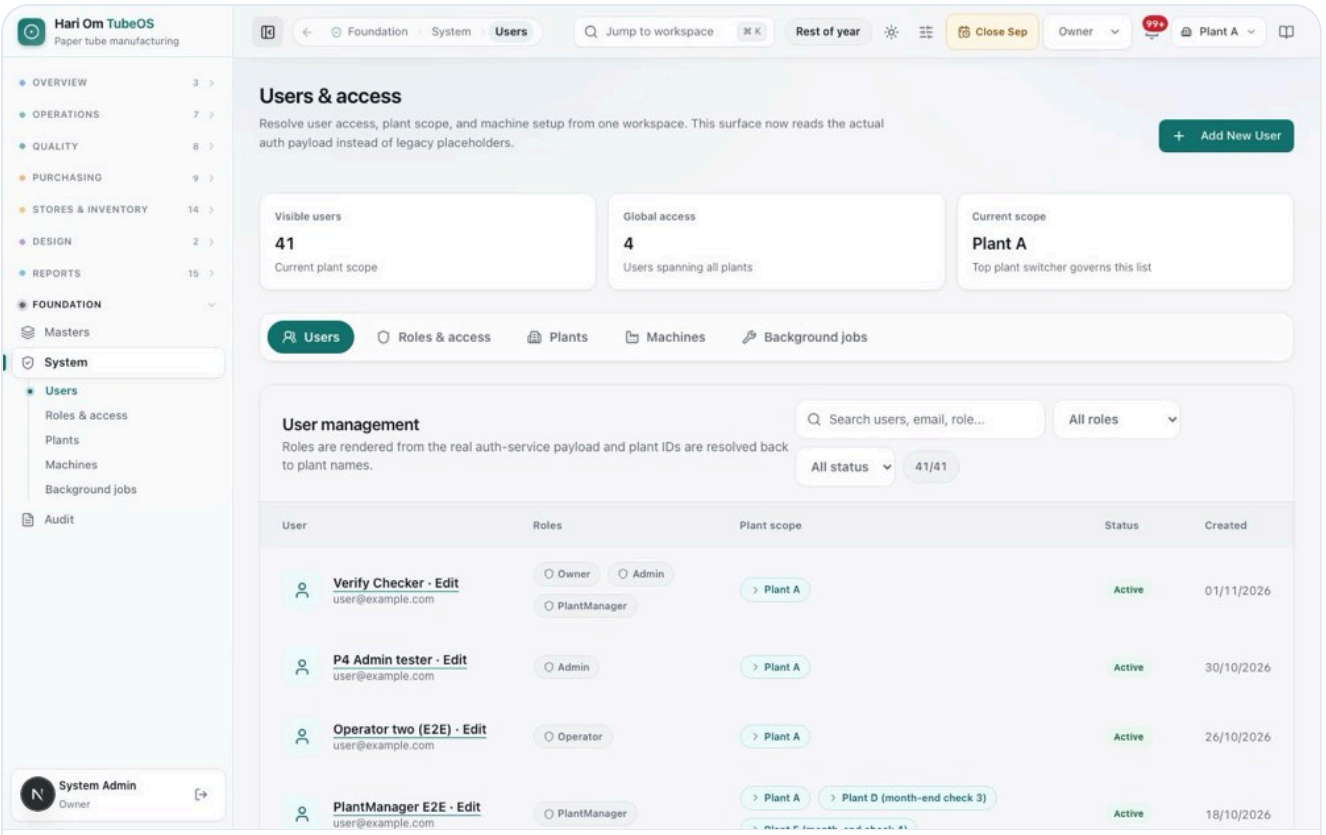



Figure: The Users & access page. Tiles: Visible users 40 (current plant scope), Global access 4 (users spanning all plants), Current scope Plant A. Tabs: Users, Roles & access, Plants, Machines, Background jobs. The User management table has search, an All roles filter, an All status filter and a 40/40 count. Each row shows a name with "· Edit" and the email, role chips (Admin, Operator, PlantManager, InProcessQC), plant scope chips (Plant A, Plant D), Status (Active) and Created date.

What you see:

1. **Add New User** button.
2. **Tiles**: **Visible users** (users of the plant chosen at the top), **Global access** (users with all plants) and **Current scope**. The top plant switcher decides which users are listed.
3. **Filters**: search (name, email, role), **All roles**, **All status** (Active, Inactive).
4. **Table**: User (click "Name · Edit" to open the editor), **Roles**, **Plant scope** ("All plants", the plant names, or "Global"), **Status** and **Created**.

The **user editor** (Add New User or Edit) has: **Full name**, **Email / login username**, **Password** (on edit: "Reset password (leave empty to keep current password)"), **Assigned roles** grouped as Management, Commercial, Production, Quality and Stores (Owner and Admin carry an **All access** badge; **See what each role can do** explains each), **Allow all plants** (Owner or Admin only), **Primary plant**, **Allowed plants**, and on edit **Account active** ("Inactive accounts retain their

history and cannot sign in"). Then **Create user** or **Save changes**. The note at the top says "Access changes sign the affected user out."

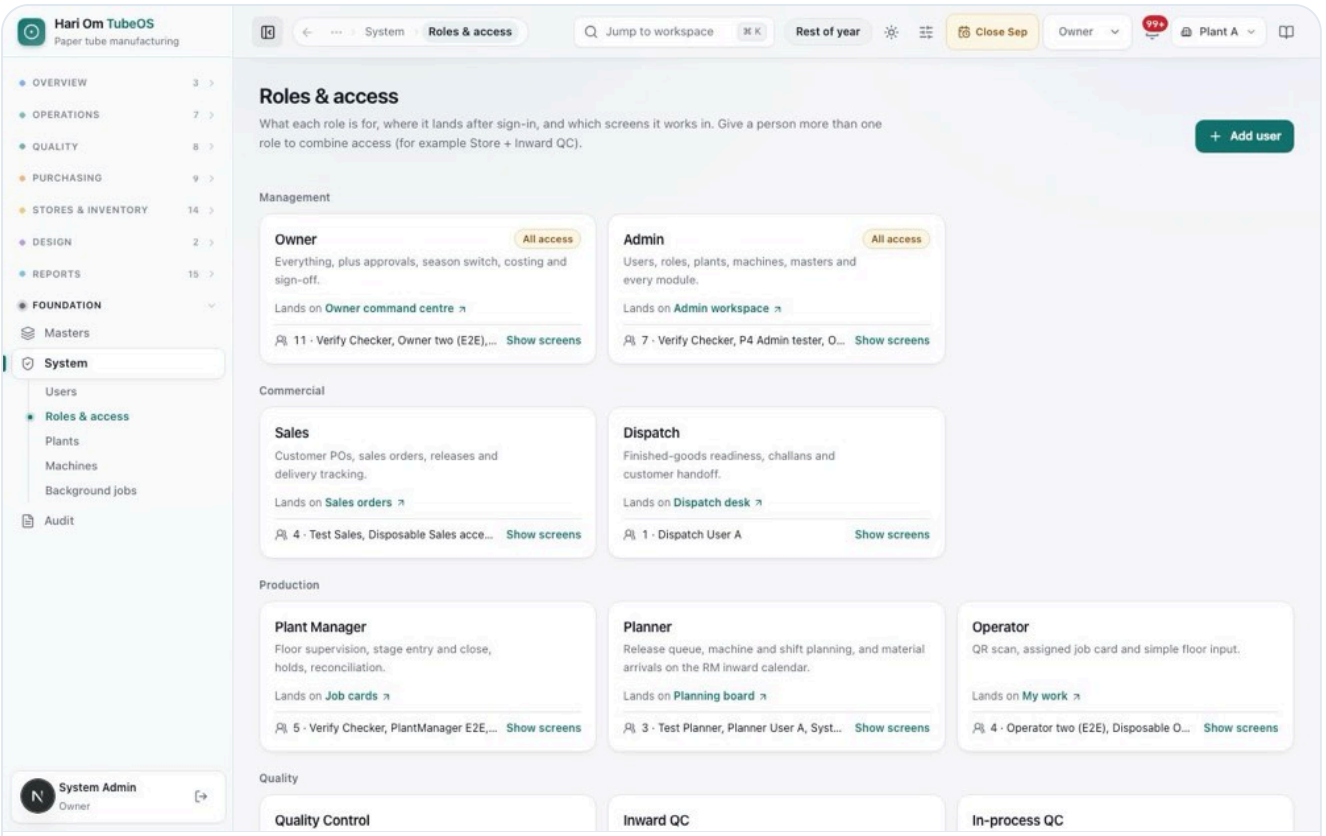



Figure: The Roles & access page with an **Add user** button. Role cards are grouped as Management (Owner, Admin, both "All access"), Commercial (Sales, Dispatch), Production (Plant Manager, Planner, Operator) and Quality (Quality Control, Inward QC, In-process QC). Each card shows what the role is for, "Lands on" a page, the number and names of people with it, and **Show screens**.

The roles and where they land:

| Role | What it is for | Lands on |
|---|---|---|
| Owner | Everything, plus approvals, season switch, costing and sign-off | Owner command centre |
| Admin | Users, roles, plants, machines, masters and every module | Admin workspace |
| Sales | Customer POs, sales orders, releases and delivery tracking | Sales orders |
| Dispatch | Finished-goods readiness, challans and customer handoff | Dispatch desk |

| Role | What it is for | Lands on |
|---|---|---|
| Plant Manager | Floor supervision, stage entry and close, holds, reconciliation | Job cards |
| Planner | Release queue, machine and shift planning, RM inward calendar | Planning board |
| Operator | QR scan, assigned job card and simple floor input | My work |

The Quality group (Quality Control, Inward QC, In-process QC) and the Stores group (Store, GRN, RM issue, Watchman (gate)) follow the same layout further down. **Watchman (gate)** is for the gate desk only (visitors in and out, photos of bills coming in and of goods going out) and lands on the **Gate desk**. Below the cards, the **Screen access matrix** shows which screens each role opens (**Show all roles** expands it), and **Giving someone extra access** explains that roles add up.

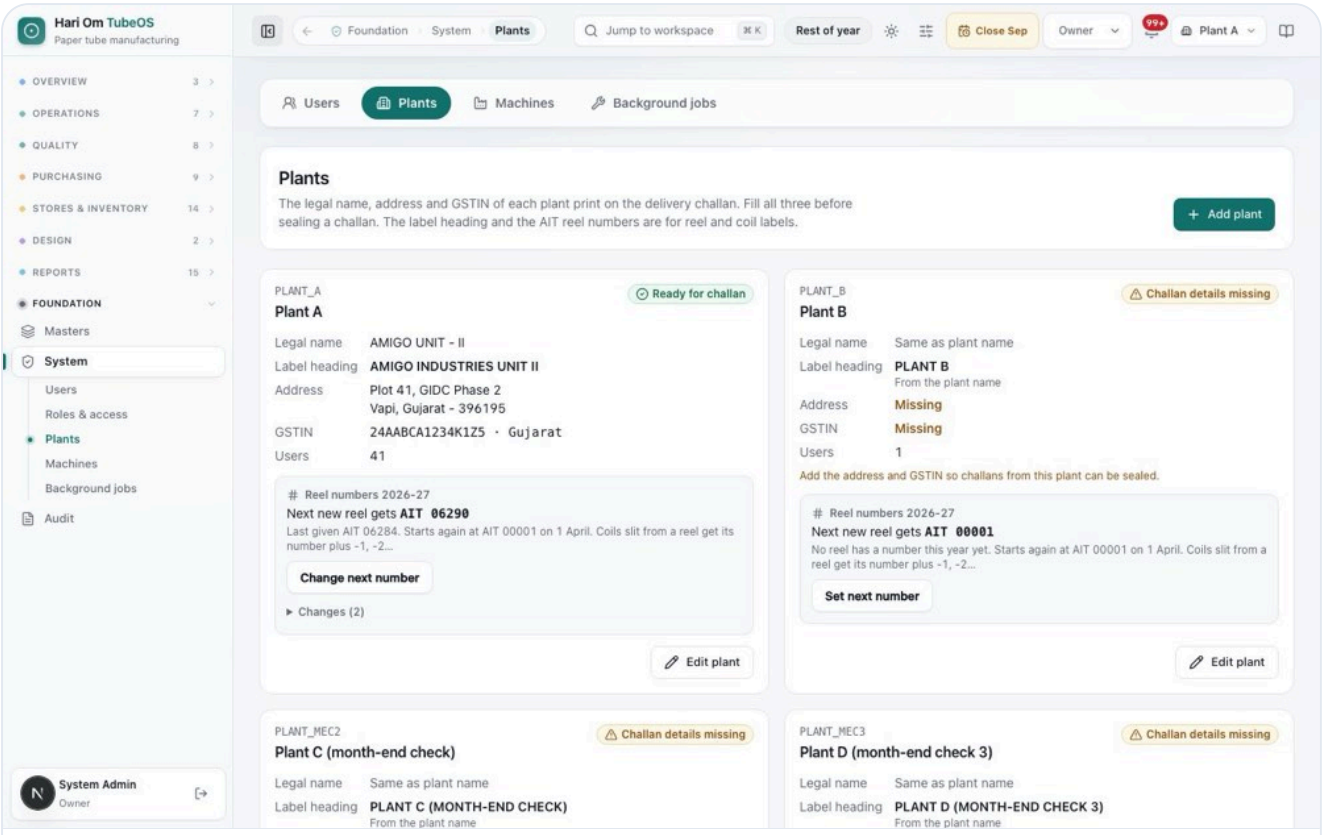



Figure: The Plants page with an **Add plant** button. Each plant card shows its code and name, Legal name, Address, GSTIN with state, the number of users, and a chip: "Ready for challan" (Plant A: AMIGO UNIT - II, Plot 41, GIDC Phase 2, Vapi, Gujarat - 396195, GSTIN 24AABCA1234K1Z5 · Gujarat, 40 users) or "Challan details missing" with "Add the address and GSTIN so challans from this plant can be sealed." Each card has **Edit plant**.

The plant form has **Plant code** and **Plant name** (both required), **Legal name (prints on the challan)**, **Address**, **GSTIN** and **Label heading (prints on reel and coil labels)**: "The first line of every reel and coil label, e.g. AMIGO INDUSTRIES UNIT II. Blank prints ." The same heading is the

top line of finished-goods box labels. Inside the edit dialog, **Disable this plant...** switches a plant off after a "Yes, disable" confirmation. The page note reads: "The legal name, address and GSTIN of each plant print on the delivery challan. Fill all three before sealing a challan. The label heading and the AIT reel numbers are for reel and coil labels."

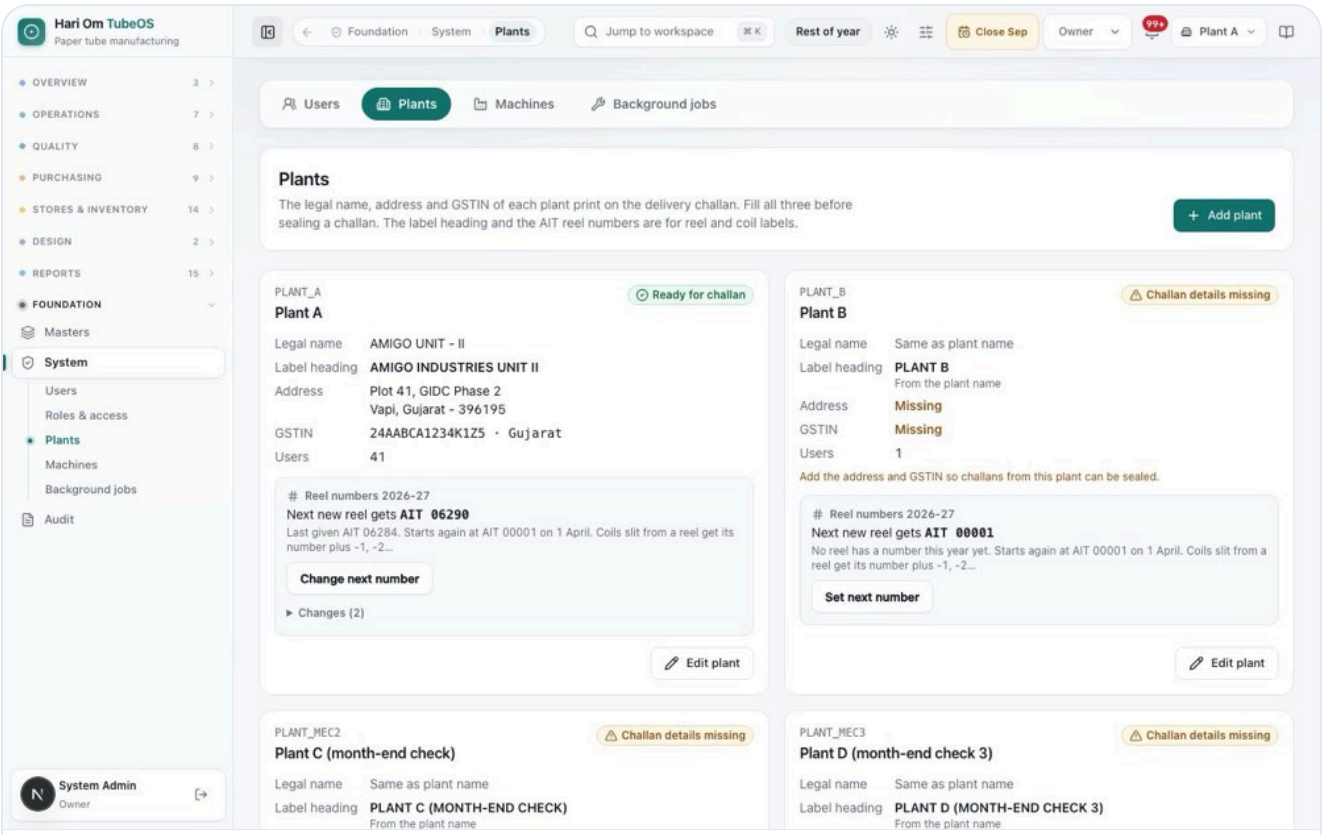



Figure: A plant card on the Plants page with its legal name, address, GSTIN, the Label heading line (AMIGO INDUSTRIES UNIT II), and a grey box "Reel numbers 2026-27": "Next new reel gets AIT 06280", "Last given AIT 06279. Starts again at AIT 00001 on 1 April. Coils slit from a reel get its number plus -1, -2...", with a Change next number button for the Owner or Admin.

What you see on each plant card:

1. **Label heading**: what prints as the first line of reel, coil and box labels.
2. **Reel numbers** (for example 2026-27): "Next new reel gets AIT 06280"; "Last given AIT 06279." (or "No reel has a number this year yet."); "Starts again at AIT 00001 on 1 April. Coils slit from a reel get its number plus -1, -2...".
3. **Set next number** / **Change next number** (Owner and Admin only): a small form with **Next number** and a reason (for example "Carry on from the plant's printed series"), **Save next number** and **Cancel**. Before the first reel of the year: "Set this once, before the first reel of this year is received in the system." After reels have numbers: "Reels already have numbers up to AIT 06279: the next number can only go up." Earlier changes are listed with who, when and why.

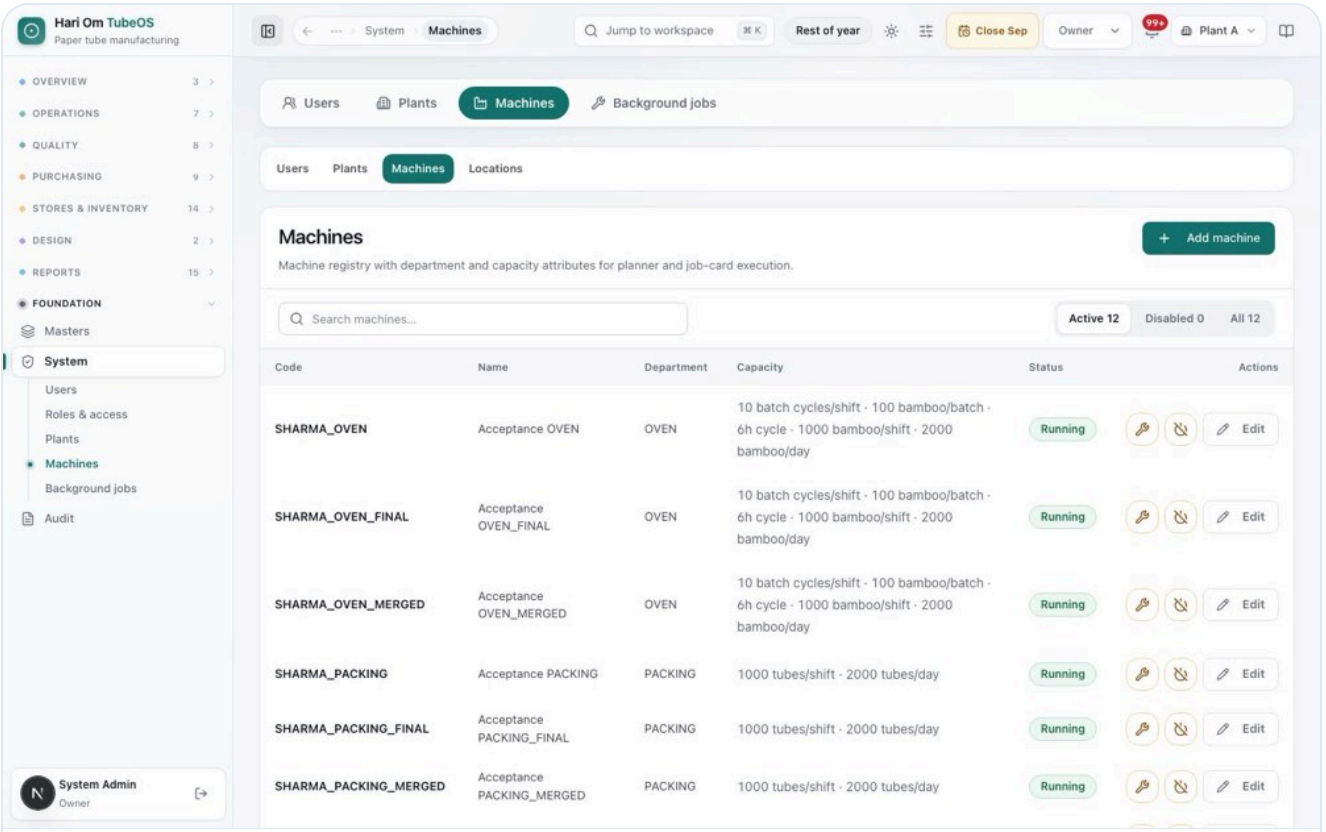



Figure: The Machines page with **Add machine**, a search box and Active 12 / Disabled 0 / All 12 filters. Rows show Code, Name, Department and Capacity, for example "10 batch cycles/shift · 100 bamboo/batch · 6h cycle · 1000 bamboo/shift · 2000 bamboo/day" for an oven, or "1000 tubes/shift · 2000 tubes/day" for packing. Each row has Status (Running) and actions: a wrench (Send to maintenance), Disable machine and **Edit**.

The machine form has **Machine Code** (W-01), **Machine Name** (Winder 1), **Process** (Slitting, Winder, Oven, Process, Packing), **Machine State** (Running / available, Maintenance, Down keep visible, Disabled hide from production) and the capacity. Capacity is entered **per shift**, and the daily figure is worked out for two shifts:

- Slitting: reels converted per shift.
- Winder: metres made per shift. The winder also has an **ID Range**, **OD Range** and **Length Range (mm)** (the capability window) that the planner checks before allowing a job on it.
- Oven: batch cycles per shift, **Bamboos per batch** and **Cycle hours per batch**. Shift capacity = cycles × bamboos per batch.
- Process: tubes completed per shift.
- Packing: packed tubes per shift.

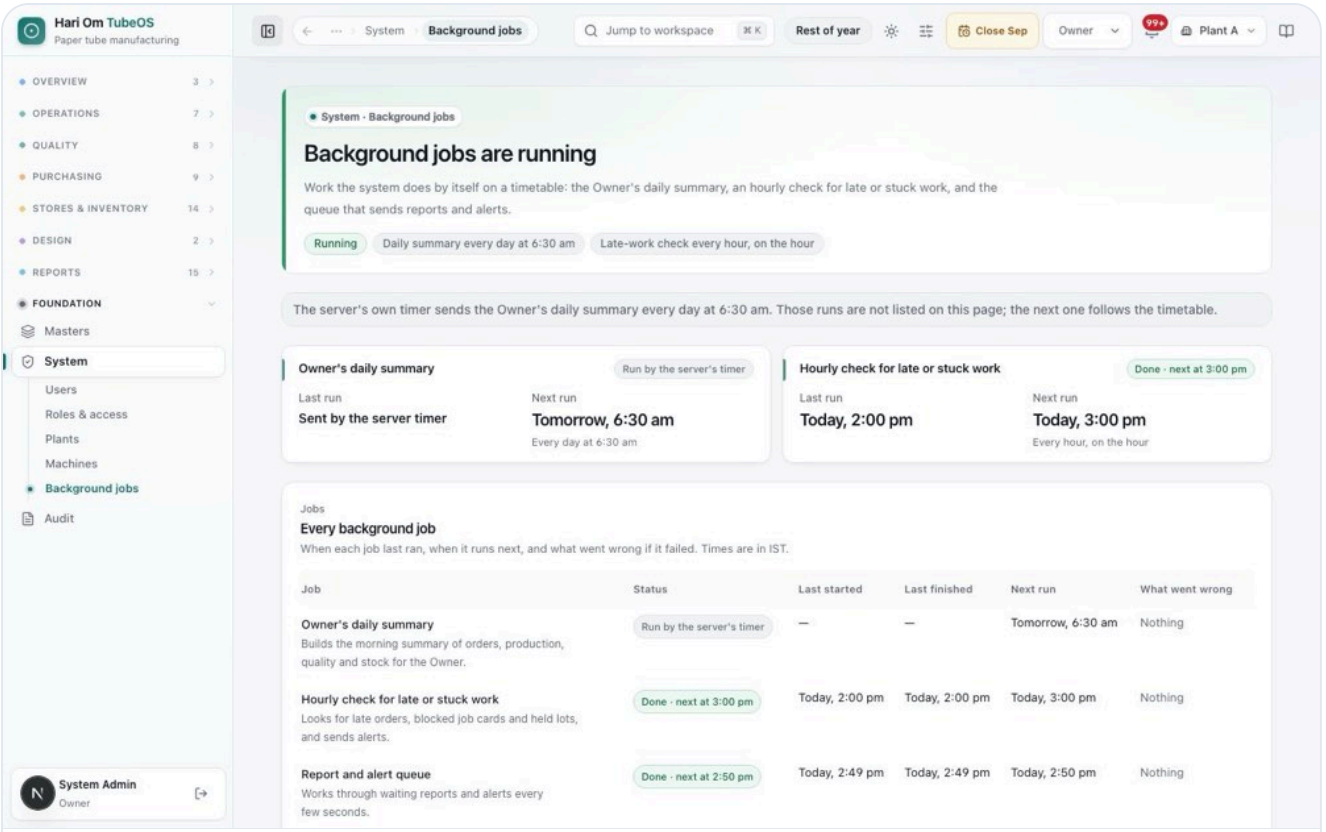



Figure: The Background jobs page titled "Background jobs are running", with chips "Daily summary every day at 6:30 am" and "Late-work check every hour, on the hour". Two cards show the Owner's daily summary (run by the server's timer, next run tomorrow 6:30 am) and the Hourly check for late or stuck work (last run today 11:00 am, next 12:00 pm). An "Every background job" table lists Job, Status, Last started, Last finished, Next run and What went wrong.

The three jobs:

1. **Owner's daily summary**: builds the morning summary of orders, production, quality and stock for the Owner, every day at 6:30 am. When the server's own timer sends it, the page shows "Run by the server's timer" and does not list those runs.
2. **Hourly check for late or stuck work**: looks for late orders, blocked job cards and held lots, and sends alerts, every hour on the hour.
3. **Report and alert queue**: works through waiting reports and alerts every few seconds.

Times are in IST. If the page says the job status could not be read, refresh in a minute; if it stays that way, the reports service needs a check by the developer.

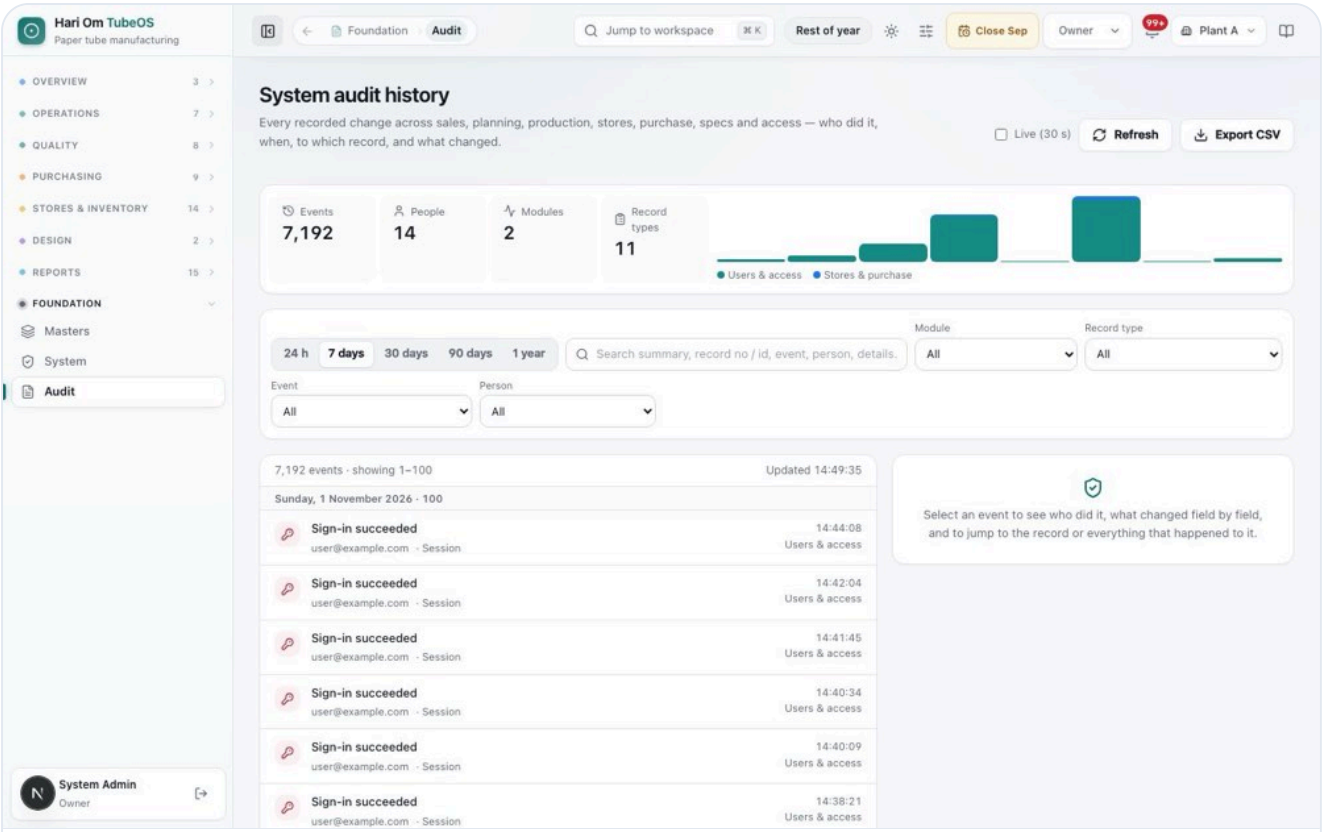



Figure: The System audit history page with a **Live (30 s)** tick box, **Refresh** and **Export CSV**. Tiles: Events 7,002, People 13, Modules 2, Record types 10, with an activity-by-day bar chart. Filters: 24 h, 7 days, 30 days, 90 days, 1 year, a search box, and Module, Record type, Event and Person dropdowns. The list shows "7,002 events · showing 1–100", grouped by day, each row with an event (for example "Sign-in succeeded"), the person, record type, time and module. A side panel says "Select an event to see who did it, what changed field by field, and to jump to the record or everything that happened to it."

What you see:

1. **Live (30 s)** refreshes every 30 seconds; **Refresh** reloads now; **Export CSV** downloads the filtered events.
2. **Tiles and Activity by day** for the chosen period.
3. **Filters**: Period, search (summary, record no / id, event, person, details), **Module** (Users & access, Stores & purchase, Sales, Production, Specs, Masters, Workspace), **Record type**, **Event**, **Person**. **Clear all** resets them.
4. **Event list** with **Newer** / **Older** paging.
5. **Event detail**: who and when, plant, source, the **What changed** table (Field, Before, After), **Open record**, **Full history of this record**, **all by them** (everything that person did) and **Copy JSON**.

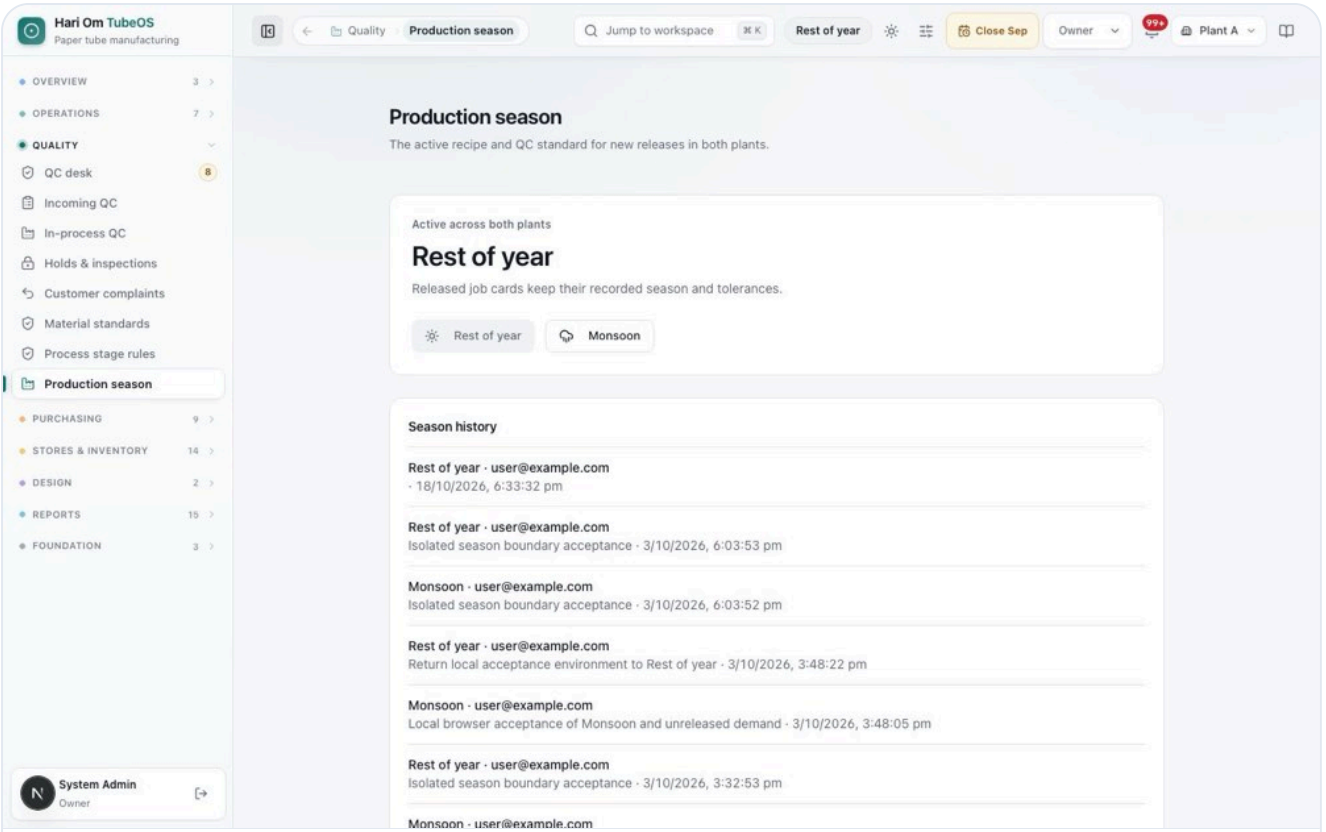



Figure: The Production season page. "Active across both plants: Rest of year", with the note "Released job cards keep their recorded season and tolerances." Two buttons: Rest of year and Monsoon. Below is the Season history, each line showing the season, who switched it, the note and the time.

The active season also shows as a chip in the top bar (for example "Rest of year") on every page; clicking it opens this page. Everyone can see the active season. Only the Owner sees the history and can switch.

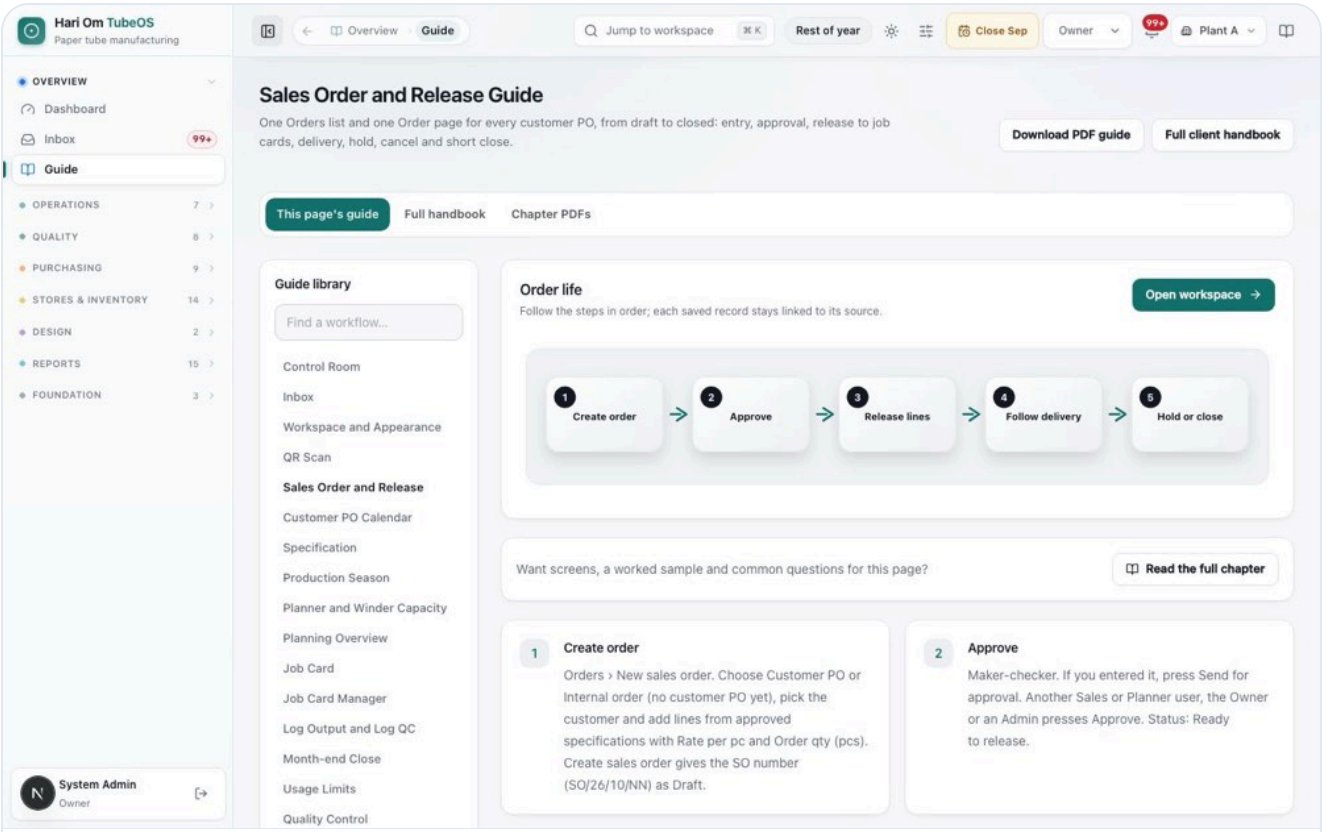



Figure: The Guide page showing the Sales Order and Release guide, with three tabs above it: This page's guide, Full handbook and Chapter PDFs. Top right: **Download PDF guide** and **Full client handbook**. On the left, a **Guide library** with a "Find a workflow..." search and the list of guides (Control Room, Inbox, Workspace and Appearance, QR Scan, Sales Order and Release, and more). On the right, the **Order life** flow (Create order → Approve → Release lines → Follow delivery → Hold or close) with an **Open workspace** button, a **Read the full chapter** button, the steps explained, and **Field rules** and **Control checks** panels.

Each guide shows its flow, the **Field rules**, **Control checks**, **Actions and outputs** and **Continue the workflow** links to the next guides. A **Read the full chapter** button opens the matching handbook chapter. The book icon in the top bar opens the guide for the page you are on. Three tabs sit above the guide: **This page's guide**, **Full handbook** (the whole handbook inside TubeOS, searchable, with **Open full screen**) and **Chapter PDFs** (one PDF per chapter, the whole handbook, and quick references such as the glossary). **Download PDF guide** downloads the whole handbook as a PDF; **Full client handbook** opens it as a web page. The handbook web page also opens from the sign-in screen, so people who cannot sign in yet can read it.

## Step by step

### How to create a user

Owner or Admin.

1. Open **System** > **Users** and click **Add New User**.
2. Fill **Full name**, **Email / login username** and a **Password** of at least 12 characters, with a lowercase letter, an uppercase letter, a number and a symbol.
3. Tick one or more **Assigned roles**. Use **See what each role can do** if unsure. For a desk person who does two jobs, tick both (for example Store + Inward QC).
4. Choose the **Primary plant** and tick the **Allowed plants**. Tick **Allow all plants** only for an Owner or Admin.
5. Click **Create user**. Give the person their login and password; they land on their role's page.

## How to change a user's roles, plants or password

1. On **Users**, click the person's "Name · Edit".
2. Change the roles (saving replaces their roles with your selection) and plants, or type a new password in **Reset password**.
3. Click **Save changes**. The person is signed out and signs in again with the new access.

## How to deactivate a user

1. Open the user and untick **Account active**. Save.
2. The person can no longer sign in, and their sessions end. Their history stays. You cannot deactivate yourself, and you cannot deactivate the last active Owner or Admin.

## How to add or edit a plant

1. Open **System** > **Plants** and click **Add plant** (or **Edit plant**).
2. Fill **Plant code** and **Plant name**, then **Legal name**, **Address** and **GSTIN**. The card turns **Ready for challan** when all three are filled.
3. Type the **Label heading** exactly as the plant's labels print it (for example AMIGO INDUSTRIES UNIT II), or leave it blank to print the legal name in capitals.
4. Save. To stop using a plant, open **Edit plant** > **Disable this plant...** > **Yes, disable**.

## How to set the next AIT reel number (Owner or Admin)

Do this once per plant, before the first reel of the year is received in the system, so the system carries on from the plant's own printed series.

1. Open **System** > **Plants**. On the plant card, find **Reel numbers 2026-27**.
2. Click **Set next number** (or **Change next number**).
3. Type the **Next number**, for example 6280 when the last label printed by hand was AIT 06279. Pick a **Reel serial number set** reason code (an OTHER code needs a note of at least 5 characters).
4. Click **Save next number**. The card now says "Next new reel gets AIT 06280". The next reel received (GRN, receipt without PO or opening stock) gets it.

5. Later, the number can only be raised above the highest given, never lowered, so no number is used twice in a year. On 1 April the series starts again at AIT 00001 by itself.

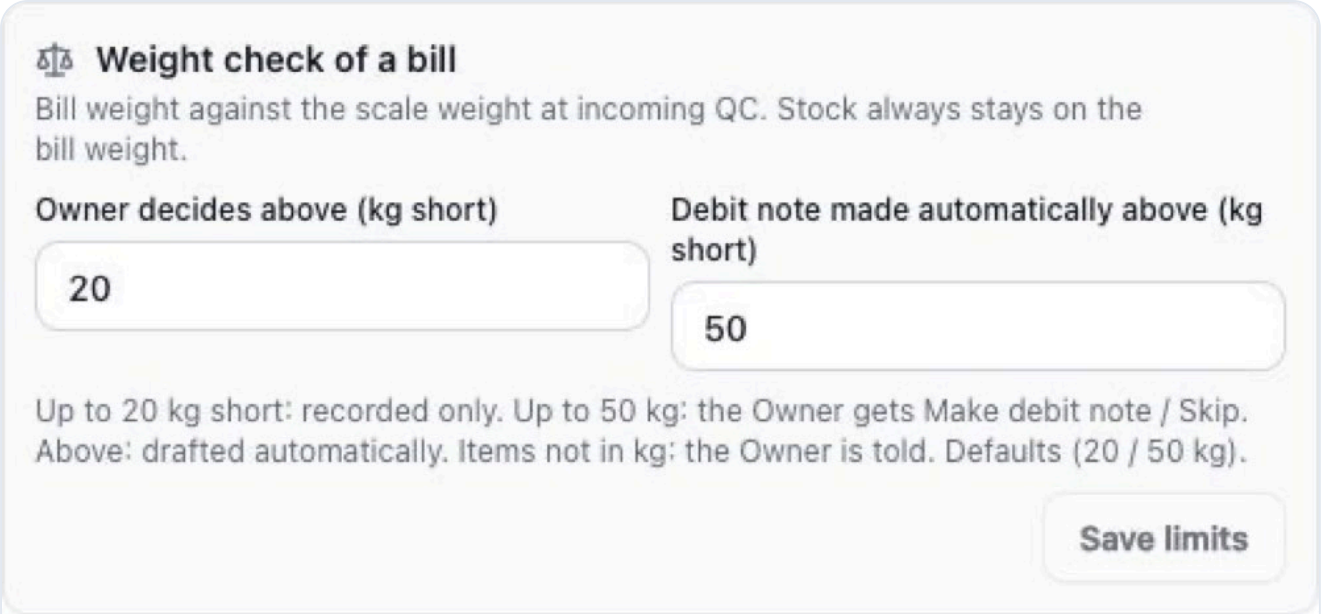



Figure: The **Weight check of a bill** box on a plant card: "Bill weight against the scale weight at incoming QC. Stock always stays on the bill weight." Two fields: **Owner decides above (kg short)** 20 and **Debit note made automatically above (kg short)** 50, with the note that between them the Owner gets Make debit note / Skip, above it a draft is made automatically, and for items not in kg the Owner is told.

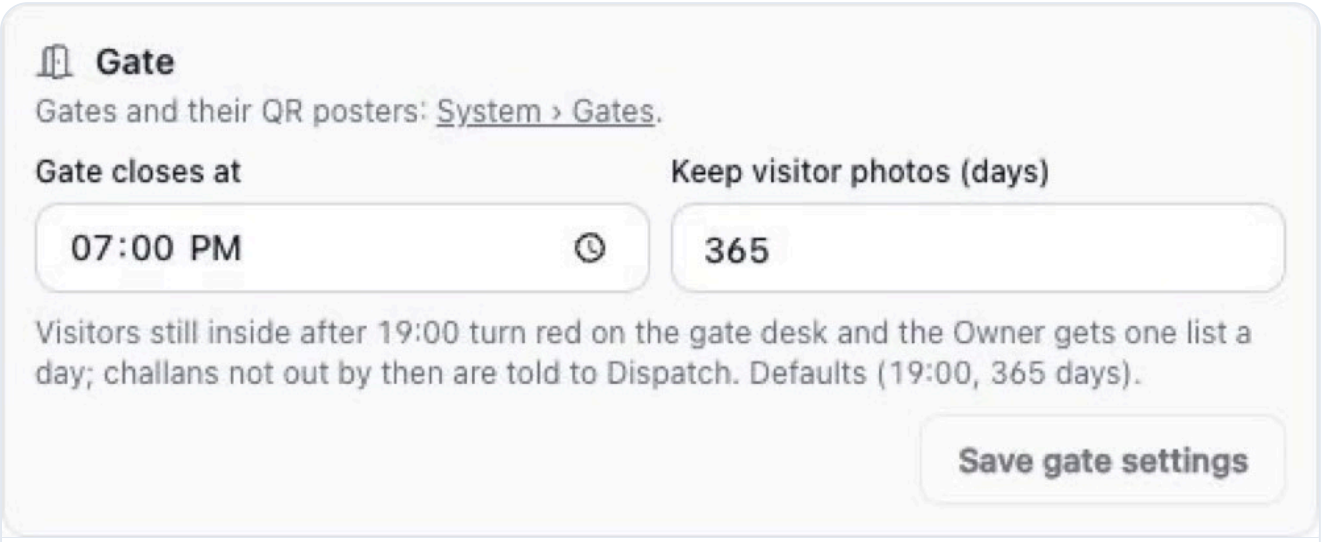



Figure: The **Gate** box on a plant card: a link to System › Gates, **Gate closes at** 19:00 and **Keep visitor photos (days)** 365, with the note "Visitors still inside after 19:00 turn red on the gate desk and the Owner gets one list a day; challans not out by then are told to Dispatch." and **Save gate settings** (Owner only).

## How to change the weight limits of a plant (Owner)

1. Open **System** > **Plants**, find the plant card and its **Weight check of a bill** box.

2. Type **Owner decides above (kg short)** (default 20) and **Debit note made automatically above (kg short)** (default 50). The second must be at least the first; neither can be below zero.
3. Save. New bills use the new limits; a bill already weighed keeps the limits it was checked with (shown on its weight case).

## How to set the gate close time and visitor photo days (Owner)

1. On the plant card, in the **Gate** box, set **Gate closes at** (for example 19:00) and **Keep visitor photos (days)** (30 to 3,650).
2. Click **Save gate settings**. Other roles see the values but "Only the Owner changes these."
3. Gates themselves (code, name, In / Out / Both, QR poster, New QR) are set up in **System › Gates**; see the Gate desk chapter.

## How to create a Watchman login

1. **System** > **Users** > **Add New User**: name, login, password, role **Watchman (gate)** only, and the plant of that gate.
2. The person signs in on the gate phone and lands on the **Gate desk**. Any other page sends them back to it.
3. Give the watchman no other role: a login with Watchman plus another role is not gate-only any more.

## How to add or edit a machine

1. Open **System** > **Machines** and click **Add machine** (or **Edit**).
2. Fill **Machine Code**, **Machine Name** and **Process**, and choose the **Machine State**.
3. Enter the capacity per shift. For an oven, also enter bamboos per batch and cycle hours. For a winder, enter the ID, OD and length ranges it can make.
4. Save. The planner uses the capacity to show the machine load. Use the wrench to send a machine to maintenance, and the disable button to hide it from production; a disabled machine can be restored.

## How to check background jobs

1. Open **System** > **Background jobs**.
2. Read the **Status** and **What went wrong** of each job. "Nothing" means the last run worked.
3. If the hourly check failed, the next run retries on the hour.

## How to find who changed a record

Owner or Admin.

1. Open **Audit**. Choose the period (for example **30 days**).

2. Type the record number in search (for example SO/26/10/412 or 26/10/315), or pick the **Module** and **Record type**.
3. Click an event to see **What changed** field by field. Click **Full history of this record** for every change to it, or **all by them** for everything that person did.
4. Click **Export CSV** to keep a copy.

### How to switch the production season (Owner)

1. Open **Production season** (or click the season chip in the top bar).
2. Click the other season (**Monsoon** or **Rest of year**). The preview opens: "Switch to Monsoon", the number of specifications ready and the number that require attention, how many released cards keep their frozen contracts, and the list of blocked specs with their reasons (for example "Approved season recipe missing" or "QC rules not published").
3. If any specs are blocked, tick "I understand the listed specifications cannot release until their seasonal setup is ready."
4. Type the **Reason for switching season** and click **Confirm global switch**. The switch is recorded in **Season history**.
5. Click **Cancel** to close the preview without switching.

### How to use the guide

1. Click **Guide** in the sidebar to open the **Full handbook** tab, or click the book icon in the top bar to open **This page's guide**.
2. In the handbook, pick a chapter on the left or type a word in the search box. In a page guide, pick a workflow from the **Guide library** or search with **Find a workflow...**.
3. Click **Read the full chapter** for screens, a sample and common questions, **Open workspace** to go to that page, or the **Chapter PDFs** tab to download a copy.

## Rules the system enforces

- **System and Audit pages are for Owner and Admin** (BLOCKS others with "This page is not open to your role").
- **Login usernames are unique**, including inactive accounts ("Username is already registered, including inactive accounts") (BLOCKS).
- **Password**: at least 12 characters, at most 72 bytes, with a lowercase letter, an uppercase letter, a number and a symbol (BLOCKS).
- **All-plant access needs an Owner or Admin role** ("All-plant access requires an Owner or Admin role") (BLOCKS). Removing Owner/Admin from a user removes all-plant access (automatic).

- **You cannot disable your own account**, and **at least one active Owner or Admin must remain** ("Keep at least one active Owner or Admin") (BLOCKS).
- **Changing roles, plants, activation or password signs the user out** (automatic). Each change is kept in the user's history with a before and after.
- **Deactivating a user keeps their history** and ends their sessions; they cannot sign in (automatic).
- **Sign-in is limited after 5 failed attempts within 15 minutes** (BLOCKS for a while).
- **Plants**: the code must be unique ("Plant code already exists") and the name is required. The GSTIN must be 15 characters with a valid state code (BLOCKS). "ALL" is a reporting scope, not a plant. The page asks for legal name, address and GSTIN before sealing a challan (WARNS on the card). A blank label heading prints the legal name, else the plant name, in capitals (AUTOMATIC).
- **AIT reel serial**: "AIT" + a space + 5 digits, one series per plant and financial year, restarting at 00001 on 1 April (AUTOMATIC). Only the Owner or Admin sets the next number; it must be 1 to 99999 and needs a reason ("Say why the reel number is being set (at least 3 characters)"). Once a reel of the year has a number, the next number can only be raised ("AIT 06279 is already on a reel this year. The next number can only be raised above 06279, never lowered.") (BLOCKS). Every change is kept with who, when and why (AUTOMATIC). Coils carry the parent serial plus -1, -2; old AT numbers stay valid.
- **Machines**: capacity is per shift and the daily figure is calculated for two shifts (automatic). Where capacity and load units differ, reports say "Not comparable" (WARNS).
- **Production season**: only an Owner with all-plant access can preview, switch or read the history (BLOCKS). A reason is required ("Season switch note is required"). If the specs changed after you opened the preview, the switch is refused ("Season preview changed; review it again"). If specs are blocked, the switch needs the acknowledgement (BLOCKS). After the switch, new releases using a blocked spec are refused until its seasonal recipe and QC setup are ready. Released cards keep their season (automatic).
- **Audit** records sign-ins, changes and approvals across modules; it is read-only.
- **Weight limits**: only the Owner changes them; the auto limit cannot be below the Owner limit ("The auto debit-note limit cannot be below the Owner-decides limit") (BLOCKS).
- **Gate settings**: only the Owner changes the close time and photo days; photos are kept 30 to 3,650 days (BLOCKS). Gates and QR posters: Owner and Admin (BLOCKS others).
- **Watchman-only login**: opens only /gate; the server refuses every other page for it (BLOCKS).

## Sample

**New store keeper.** The Admin adds Ramesh Patel: login ramesh.store@hariom.com, a 14-character password with upper and lower case letters, a number and a symbol, roles **Store** and

**Inward QC**, primary plant Plant A, allowed plants Plant A. Ramesh signs in and lands on his Store work page. He can raise stock corrections and inspect incoming lots, but he cannot see System or approve counts.

**Who changed the access?** Next week Ramesh suddenly cannot open Incoming QC. On **Audit** the Owner sets **7 days**, picks Module **Users & access** and searches "ramesh". The user-updated event shows under **What changed** that the Inward QC role was removed, by whom and when. The Owner opens the user, ticks Inward QC again and saves; Ramesh signs in again with the role back.

**Monsoon switch.** On 1 Jun the Owner clicks Monsoon. The preview shows 41 specifications ready, 3 requiring attention ("Approved season recipe missing") and 18 released cards keeping their contracts. The Owner ticks the acknowledgement, types "Monsoon from 1 June as per QC" and confirms. New releases now use the Monsoon recipes and QC bands; the 3 blocked specs cannot be released until QC and Design finish their monsoon setup.

## Common questions

**? I changed a person's role but they still see the old screens.**

Saving signs them out. Ask them to sign in again.

**? Where do I change the 20 kg and 50 kg weight limits?**

System › Plants, on the plant card, **Weight check of a bill**. Owner only.

**? The watchman can see other pages.**

Check his login has only the **Watchman (gate)** role. With any other role added, he is no longer gate-only.

**? Can a user have two roles?**

Yes. Tick both. Access adds up, and they can switch role from the top bar.

**? Why can't I tick "Allow all plants" for a Plant Manager?**

All-plant access is only for Owner and Admin. Tick each plant they need under **Allowed plants** instead.

**? A person left the company. Do I delete them?**

Untick **Account active**. They cannot sign in, and their history stays in the audit trail.

**? Why does the Users list show fewer people than I expect?**

It shows users of the plant chosen in the top plant switcher. Switch to all plants to see everyone.

**? Why did the season switch refuse with "Season preview changed"?**

Someone changed a spec or QC rule after you opened the preview. Click the season again to get a fresh preview.

**? Does switching the season change job cards already on the floor?**

No. Released job cards keep the season and tolerances they were released with. Only new releases use the new season.

**? The daily summary did not arrive.**

Check **Background jobs**. If it says "Run by the server's timer", the server sends it at 6:30 am. If an error shows under **What went wrong**, tell the Admin.

**? Where is the latest guide?**

The Guide page in the app (Full handbook tab) and the same handbook on the sign-in screen link. The book icon on any page opens the guide for that page.

**? Our hand-printed labels reached AIT 06279. How do we carry on?**

The Owner or Admin opens System > Plants, clicks **Set next number** on the plant card, types 6280 with a reason and saves. The next reel received gets AIT 06280.

**? Can we start the AIT series again mid-year?**

No. After reels of the year have numbers, the next number can only go up. The series restarts at AIT 00001 by itself on 1 April.

## Related chapters

- Dashboard and Inbox
- Masters
- Planner (machine load and capacity)
- Dispatch and delivery challan (plant and customer details)
- Specifications and seasonal recipes
- Process stage rules and Material standards
- Reports

GATE AND DOCUMENTS

# Gate desk and visitors

**What it is:** The watchman's phone desk at the plant gate: visitors in and out, photos of every bill or challan that comes in, and photos of the papers of every truck that goes out. Behind it: the Accounts **Bills inbox** for expense bills, the **Gate register** with CSV, and **System › Gates** for gates and their visitor QR posters.
**Who uses it:** Watchman (the gate desk only), Plant Manager (plant head), Owner and Admin. Store links material bills to GRNs and goods-out photos to challans. The plant head, Owner and Admin file expense bills.
**Where:** Sidebar > Gate > Gate desk (/gate), Bills inbox (/gate/bills), Gate register (/gate/history), Gates & QR posters (/system/gates). Visitors use the public check-in page from the QR poster (no login).

## At a glance

- **The watchman photographs; the office links.** At the gate nobody types bill numbers or picks challans. The watchman takes the photos, taps what kind of paper it is (and the vehicle number), and saves. **Store** links a material bill to its GRN on Goods inward (**At the gate**), and links a goods-out entry to its challan(s) on the dispatch register (**Gone out at the gate**). Expense bills are filed in the **Bills inbox**.
- **Visitors check themselves in** by scanning the QR poster at the gate with their own phone. They get a pass with a **V-** number and a QR. The watchman checks the ID and taps **Let in** or **Deny** (with a reason). The person they came to meet is told and can reply **Send in**, **Ask to wait** or **Not available**. The host does not have to approve first.
- **Every gate paper gets a GE- number** (for example GE-2611-020) and every visit a **V-** number (V-2611-014). Photos are kept in the Doc Vault and never deleted.
- **A truck is never held for an upload.** Photos taken with a weak network wait on the phone and upload by themselves. The desk shows what is still to upload.
- **Privacy:** visitor phone numbers and photos are seen only by the watchman, the plant head, the Owner and the Admin. Visitor photos are wiped after the plant's retention period (365 days unless the Owner changes it); the visit log stays.

# The flow

## A visitor at the gate

1. **Scan the QR poster** — Visitor — own phone, no login
2. **Fill the form, get a pass** — V-2611-014
3. **Show the pass** — Visitor
4. **Check ID, Let in** — Watchman
5. **Host is told** — Host — Send in / Ask to wait / Not available
6. **Visitor leaves, scan the pass or tap Out** — Watchman

If it goes wrong after **Show the pass**

1. **Deny with a reason** — Watchman — pass shows "Entry not allowed today"

If it goes wrong after **Fill the form, get a pass (V-2611-014)**

1. **No smartphone**
2. **+ Visitor at the desk** — Watchman
3. **Check ID, Let in** — Watchman

## A bill or challan coming in

1. **Truck arrives with a bill**
2. **Photograph every page**
   Watchman
3. **Tap the kind of bill, vehicle no.**
4. **Save**
   GE-2611-020
5. **Material: At the gate on Goods inward**
   Store
6. **Post the GRN**
   Store
   photos linked to GRN and every reel

If it goes wrong after **Save (GE-2611-020)**

1. **Electricity, maintenance, courier, other**
2. **Bills inbox**
   Plant head/Accounts
3. **Fill party, bill no., date, amount, cost head**
4. **Filed**

If it goes wrong after **Save (GE-2611-020)**

1. **Wrong kind picked**
2. **Wrong type? Move it**
   Store/Plant head
   logged

## A truck going out

1. **Truck leaves**
2. **Photograph the Tally bill and our challan**
   Watchman
3. **Type the vehicle no., tap Gone out**
4. **Gone out at the gate on the dispatch register**
   Store/Dispatch
5. **Link the challan, type or confirm the Tally bill no.**
   s
6. **Chip Out · Tally T-1189 ✓**

The watchman's work ends when the photos are saved. Everything that needs a number from the paper (GRN, vendor, Tally bill no., amount) is filled in later by the office from the same photo.

## Screen tour

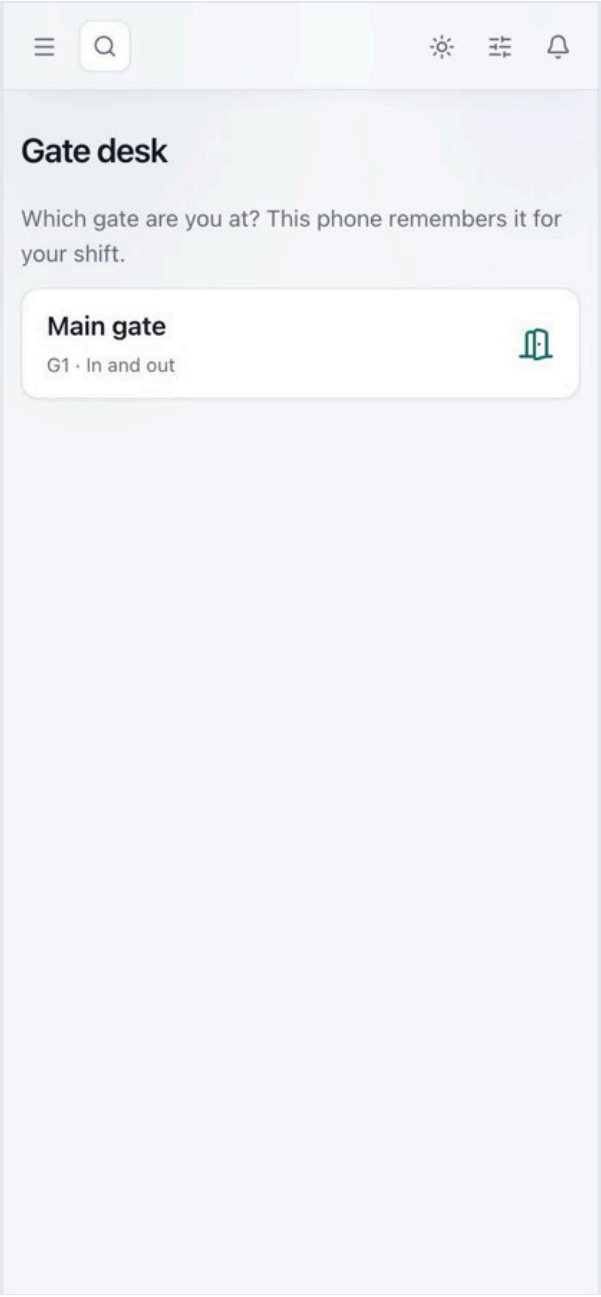



Figure: The first screen of a shift on the watchman's phone: "Which gate are you at? This phone remembers it for your shift." with one button per gate, for example **Main gate** · G1 · In and out.

What you see:

1. **Gate buttons**: name, code and what the gate is used for (**In and out**, **In only**, **Out only**). Tap yours. The phone remembers it; **Change gate** at the top of the desk picks another.

2. If the page says "Pick your plant at the top first", pick the plant. If it says "No gate is set up for this plant yet", the Owner or Admin must add one in System › Gates.

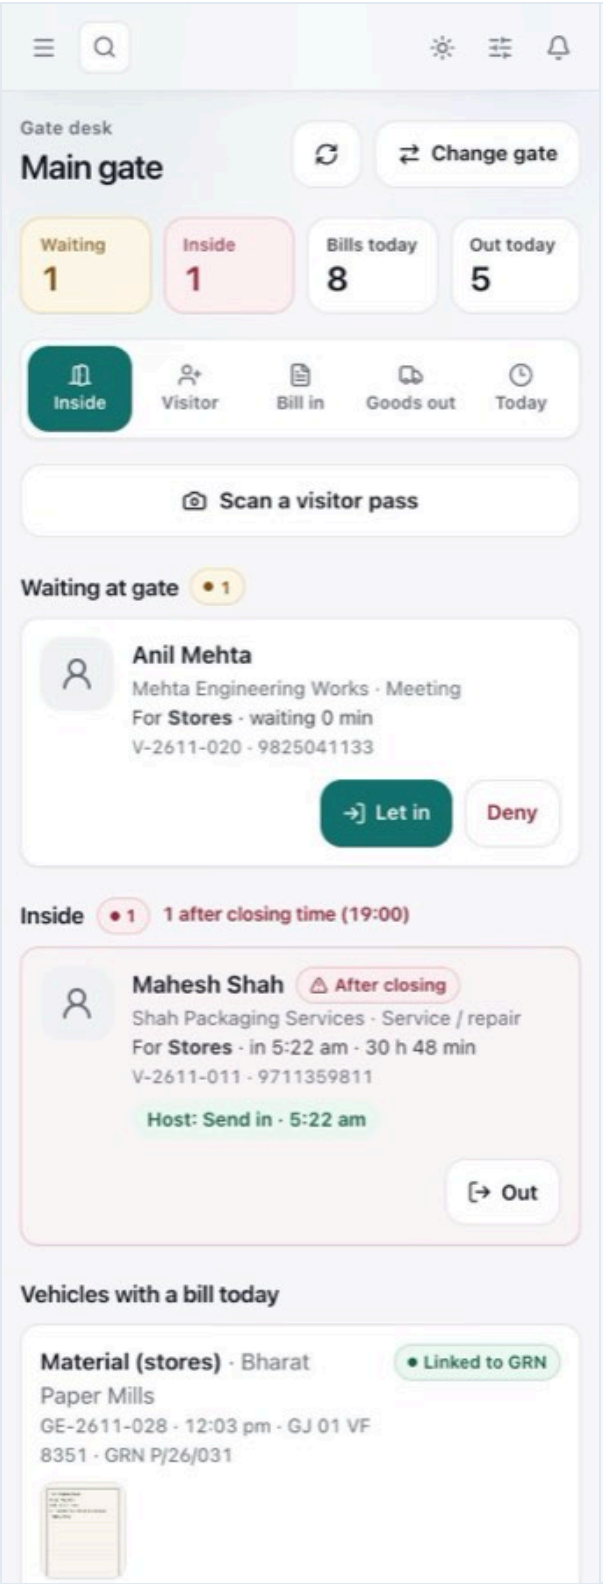



Figure: The gate desk, **Inside** tab, on a phone. Tiles: Waiting 1, Inside 1, Bills today 8, Out today 5. **Scan a visitor pass** button. Waiting at gate: Anil Mehta, Mehta Engineering Works · Meeting, For Stores, waiting 0 min, V-2611-020, with **Let in** and **Deny**. Inside: Mahesh Shah in red with "After closing", "1 after closing time (19:00)" and "Host: Send in · 5:22 am", with **Out**. Below: Vehicles with a bill today, Material (stores) entries from Bharat Paper Mills, for example GE-2611-028 **Linked to GRN** (GRN P/26/031), each with its photo.

What you see:

1. **Header**: "Gate desk", the gate name, a refresh button and **Change gate**. The desk refreshes by itself every 15 seconds.
2. **Count tiles**: **Waiting** (visitors at the gate), **Inside** (people inside; red when someone is inside after closing time), **Bills today**, **Out today** (trucks recorded going out). Tap a tile to open its tab.
3. **Tabs**: **Inside**, **Visitor**, **Bill in**, **Goods out**, **Today** (on a computer they read **Inside now**, **+ Visitor**, **+ Bill in**, **+ Goods out**, **Today**).
4. **Upload strip** (when photos are still sending): what is waiting on this phone. "You can keep working; they are kept on this device until sent."
5. **Scan a visitor pass**: opens the camera. A visitor who is inside is marked out; a visitor still waiting is shown so you can let them in or deny.
6. **Waiting at gate**: each visitor with name, company, purpose, whom they came to meet, how long they have waited, the V- number and mobile, and **Let in** / **Deny**.
7. **Inside**: each visitor with the time in and time inside, the host's reply (green **Send in**, amber **Ask to wait**, red **Not available**, or "Host told; no reply yet") and **Out**. "N after closing time (19:00)" and a red **After closing** chip mark people still inside after the gate close time.
8. **Vehicles with a bill today**: each bill entry with a vehicle number, its photos and its status. A card says "Photo uploading..." for a few minutes, "Photo saved · Stores and Accounts open it" when the photo is saved but this login may not open it, or "No photo".

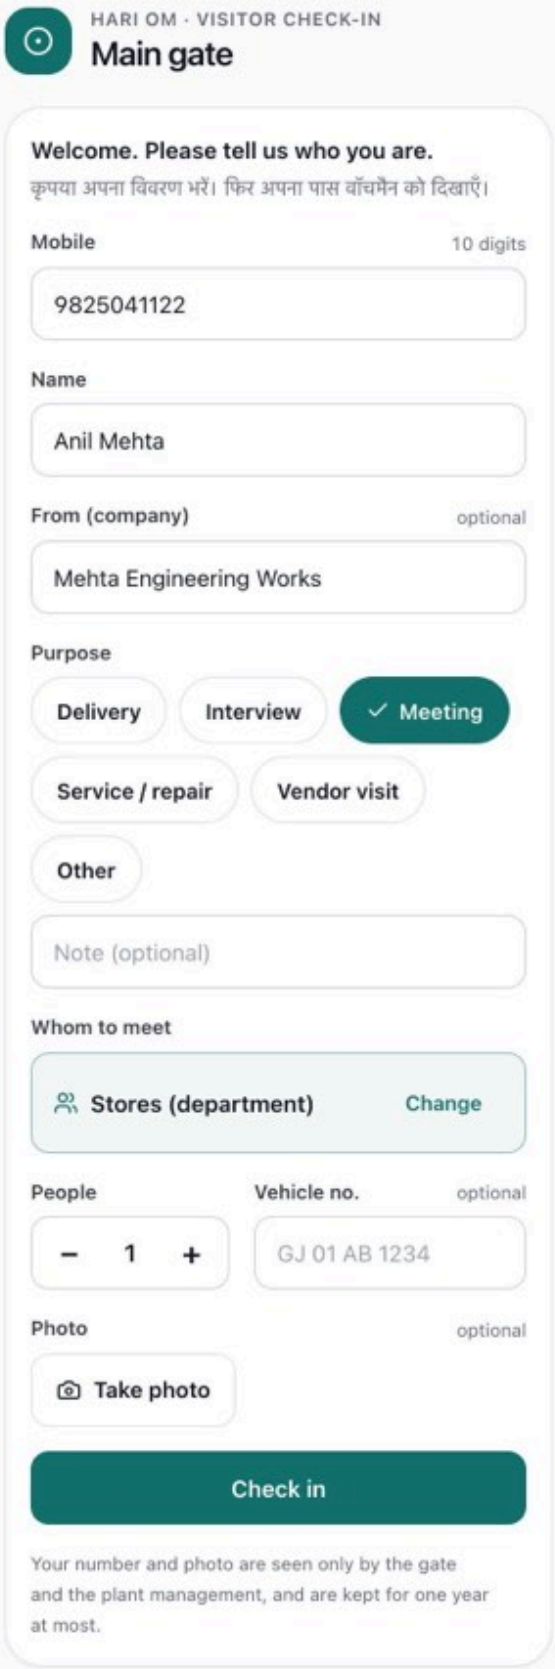



Figure: The visitor's own phone after scanning the poster: "Hari Om · visitor check-in", the gate name, "Welcome. Please tell us who you are." (with a Hindi line), then Mobile, Name, From (company), Purpose chips (Delivery, Interview, Meeting, Service / repair, Vendor visit, Other), Whom to meet (Stores chosen), People, Vehicle no., an optional Photo and **Check in**.

What you see:

1. **Mobile** (10 digits, starting 6, 7, 8 or 9), **Name**, **From (company)** (optional).
2. **Purpose**: the codes of the list **Visit purpose** (VP-DELIVERY Delivery, VP-INTERVIEW Interview, VP-MEETING Meeting, VP-SERVICE Service / repair, VP-VENDOR Vendor visit, VP-OTHER Other, which needs a few words).
3. **Whom to meet**: type a name, or pick a department (Management, Plant head, Stores, Quality, Planning, Dispatch, Sales, Office / admin, Production floor; a department shows only when it has people).
4. **People** (1 to 50), **Vehicle no.** (optional) and **Photo** (optional).
5. A line at the bottom: the number and photo are seen only by the gate and the plant management and kept for one year at most.




Figure: The visitor's pass: "Show this to the watchman" (amber), Visitor pass · Main gate, **V-2611-014**, a large QR, and Name, From, To meet, Purpose, Arrived. A button "Add your photo (optional)". "This page updates by itself. Keep it open until you leave."

What you see:

1. **Status box**: **Show this to the watchman** (waiting), **You are checked in**, **Visit over · thank you**, **Entry not allowed today** (with the reason) or **This pass has expired**. When the host replies, a line says, for example, "Stores: please come in".
2. **Pass number and QR**: the watchman scans this QR when the visitor leaves.
3. **Add your photo (optional)**: works only while the visitor waits at the gate, within 30 minutes of checking in.

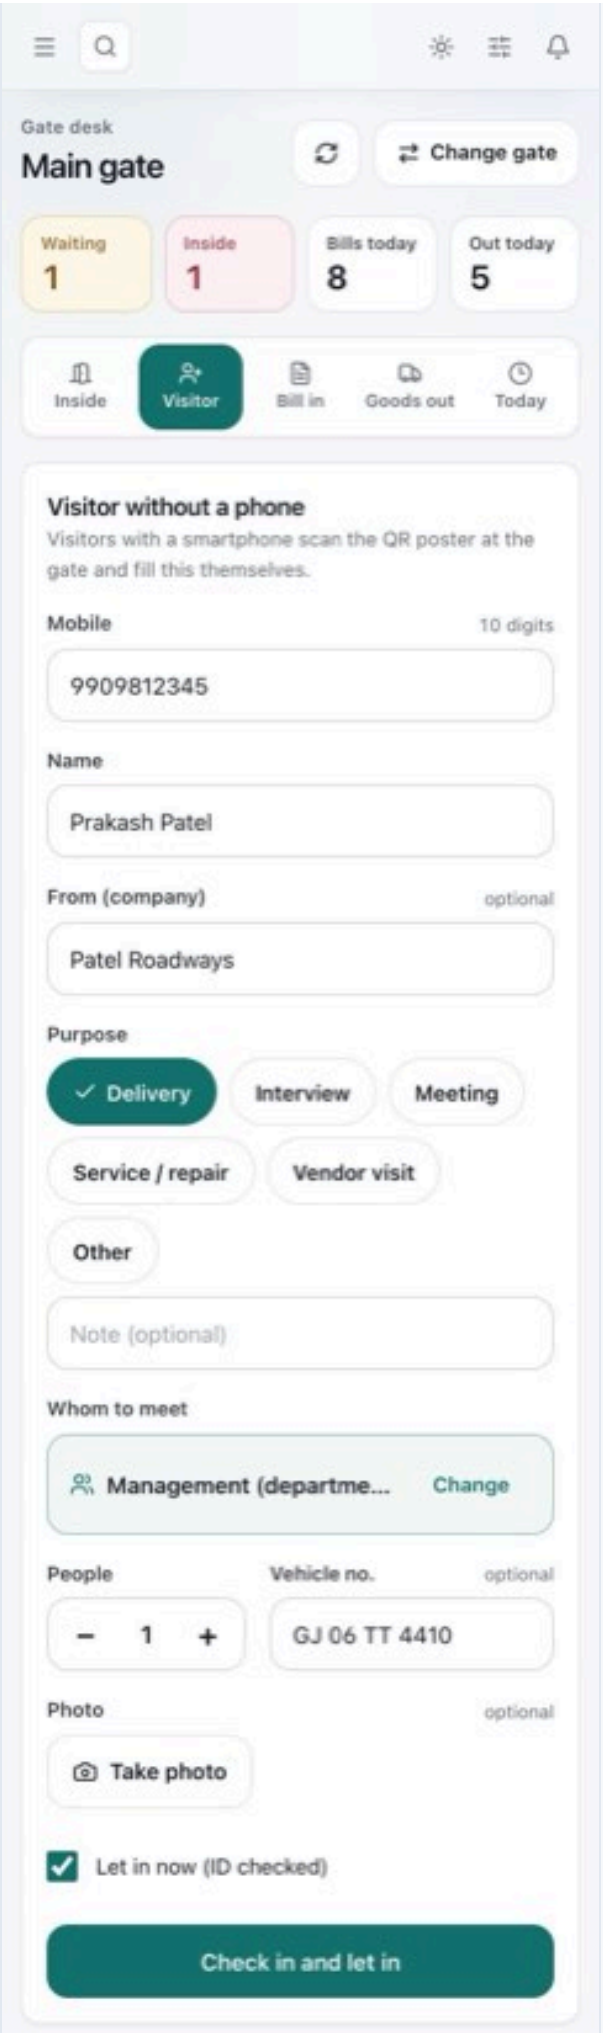

Gate desk
Main gate
Change gate
Waiting
1
Inside
1
Bills today
8
Out today
5
Inside
Visitor
Bill in
Goods out
Today
Visitor without a phone
Visitors with a smartphone scan the QR poster at the gate and fill this themselves.
Mobile
10 digits
9909812345
Name
Prakash Patel
From (company)
optional
Patel Roadways
Purpose
Delivery
Interview
Meeting
Service / repair
Vendor visit
Other
Note (optional)
Whom to meet
Management (departme...
Change
People
Vehicle no.
optional
1
GJ 06 TT 4410
Photo
optional
Take photo
Let in now (ID checked)
Check in and let in

Figure: The **Visitor** tab: "Visitor without a phone". The same fields as the public form (Mobile, Name, From, Purpose, Whom to meet, People, Vehicle no., Photo), a tick **Let in now (ID checked)** and the button **Check in and let in**.

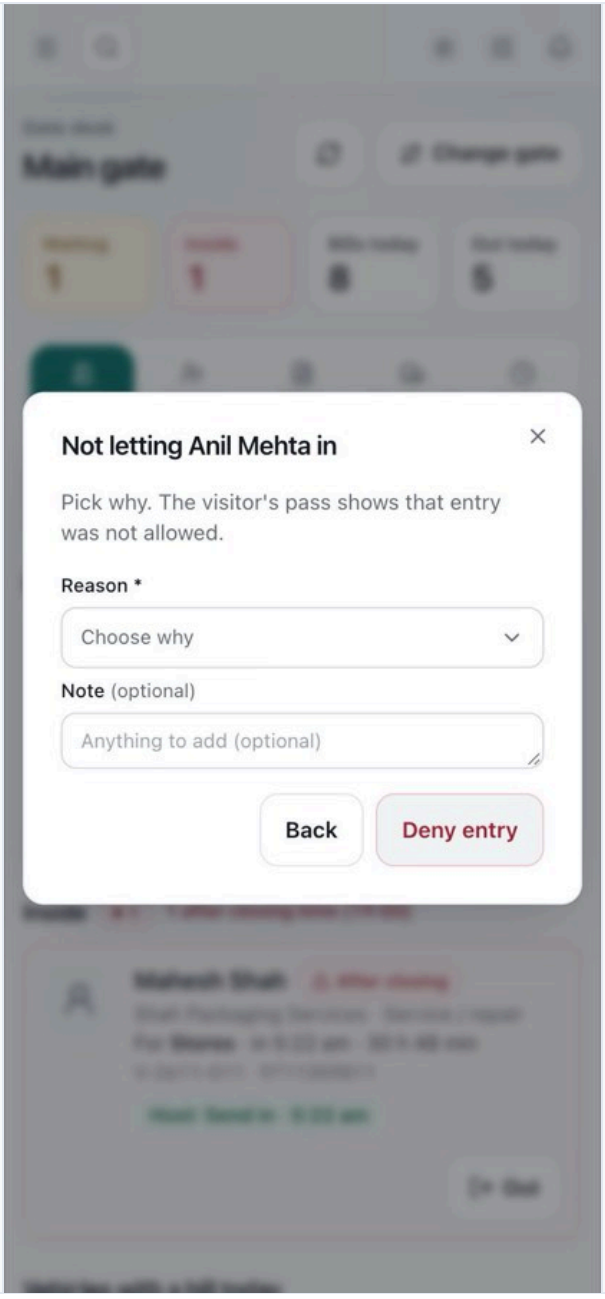



Figure: **Deny** opens "Not letting Anil Mehta in": pick why from the list **Gate entry denied** (GD-NO-ID No ID shown, GD-HOST-NA Host not available, GD-NO-APPOINTMENT No appointment, GD-NOT-ALLOWED Not allowed in the plant, GD-SAFETY Safety rule not met, GD-OTHER with a note), then **Deny entry** or **Back**.

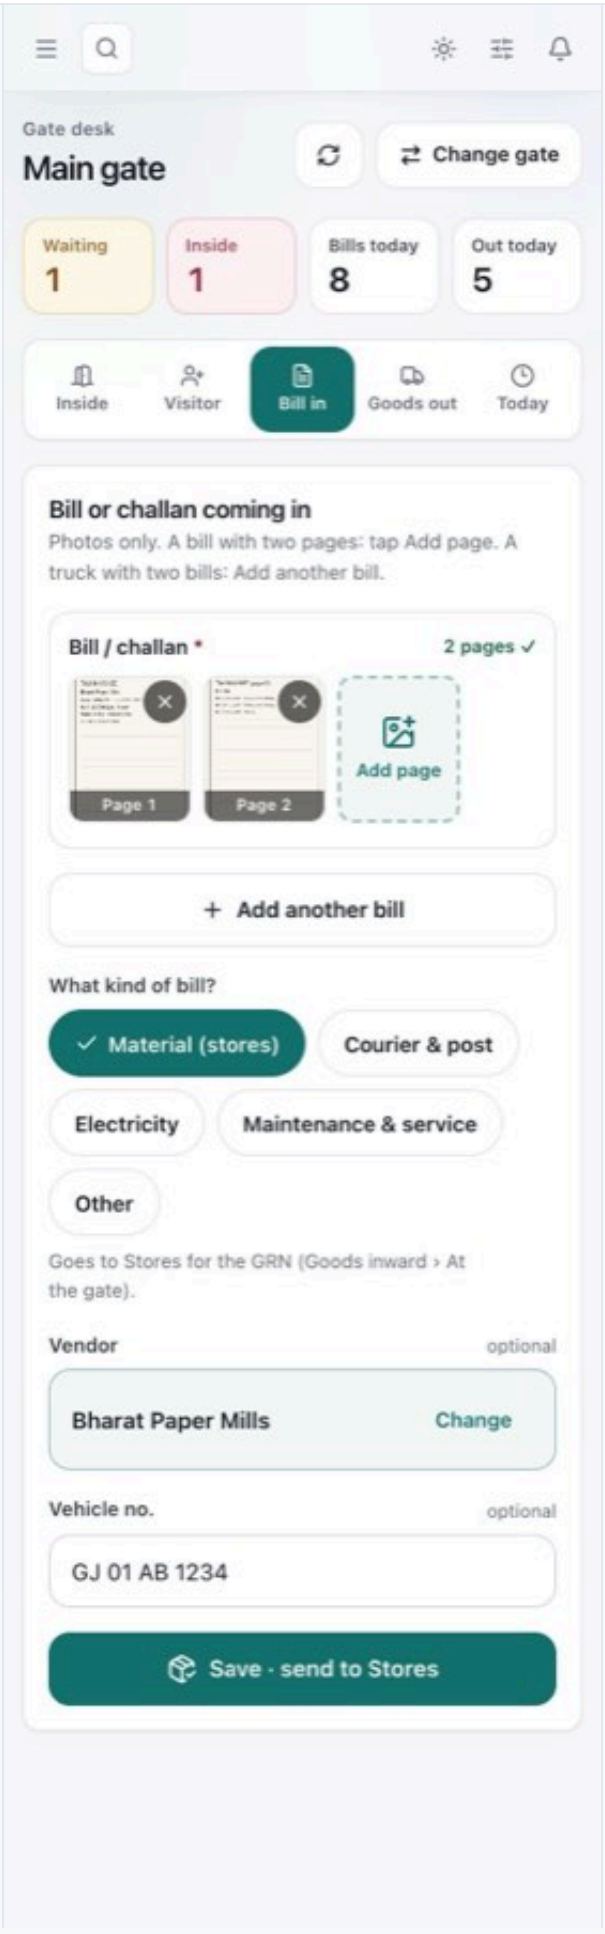

Gate desk
Main gate
Change gate
Waiting
1
Inside
1
Bills today
8
Out today
5
Inside
Visitor
Bill in
Goods out
Today
Bill or challan coming in
Photos only. A bill with two pages: tap Add page. A truck with two bills: Add another bill.
Bill / challan *
2 pages ✓
Page 1
Page 2
Add page
+ Add another bill
What kind of bill?
✓ Material (stores)
Courier & post
Electricity
Maintenance & service
Other
Goes to Stores for the GRN (Goods inward › At the gate).
Vendor
optional
Bharat Paper Mills
Change
Vehicle no.
optional
GJ 01 AB 1234
Save · send to Stores

Figure: The **Bill in** tab: "Bill or challan coming in. Photos only." Two pages photographed (Page 1, Page 2, **Add page**), **Add another bill**, "What kind of bill?" with **Material (stores)** chosen ("Goes to Stores for the GRN (Goods inward › At the gate)"), Vendor Bharat Paper Mills (optional), Vehicle no. GJ 01 AB 1234 (optional) and **Save · send to Stores**.

What you see:

1. **Bill / challan** photo box: **Take photo** opens the camera; each photo is one page. **Add page** for the next page of the same bill. **Add another bill** when one truck brings two bills (each becomes its own document).
2. **What kind of bill?**: the list **Gate bill type**: **Material (stores)** (GB-MATERIAL), **Courier & post**, **Electricity**, **Maintenance & service**, **Other** (Other needs a few words, for example "water tanker"). The line under it says where it goes.
3. **Vendor** (optional): recent vendors as chips, or type a name and tap **Use "..."**.
4. **Vehicle no.** (optional on a bill in), and **Save · send to Stores** or **Save · send to Accounts**.

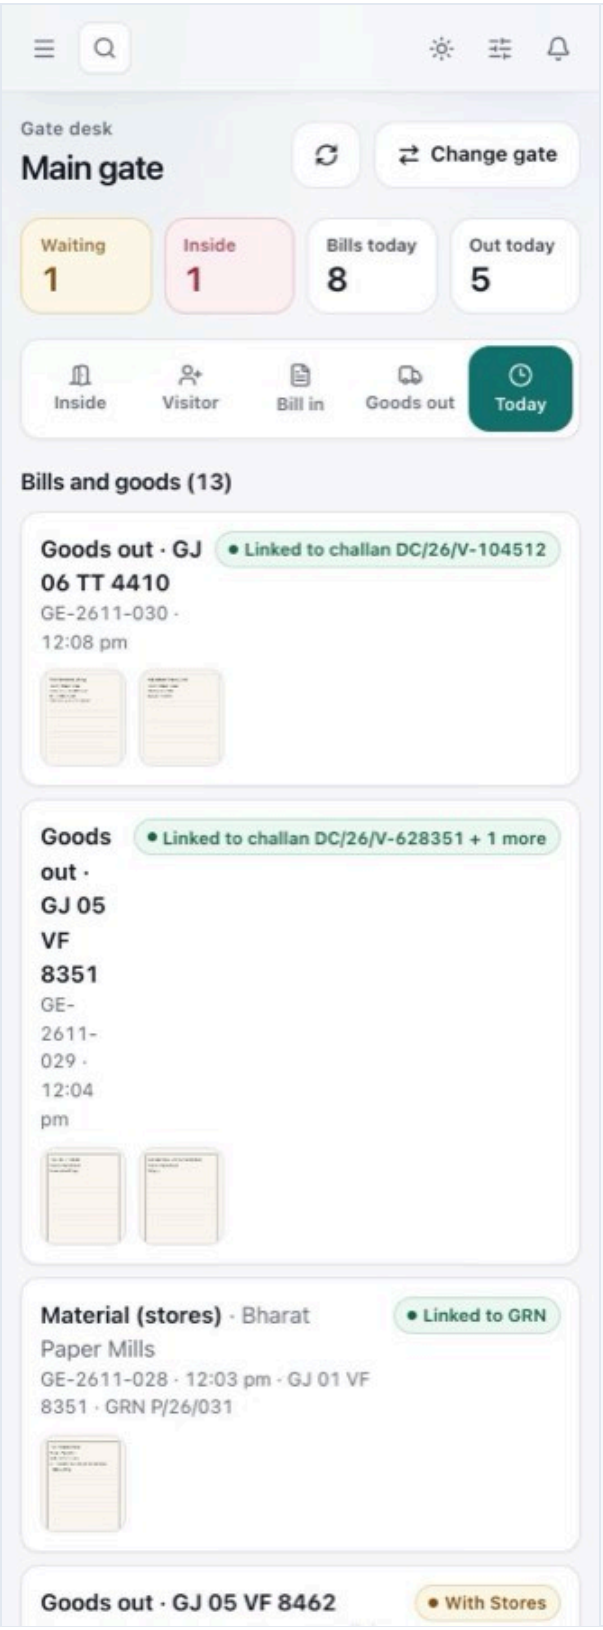



Figure: The **Today** tab: Bills and goods (13): Goods out · GJ 06 TT 4410, GE-2611-030, **Linked to challan DC/26/V-104512**, with its two photos; Material (stores) · Bharat Paper Mills GE-2611-028 **Linked to GRN**; Goods out · GJ 05 VF 8462, GE-2611-027, **With Stores** "Stores links the challan"; each with its photo thumbnails.

What you see:

1. **Bills and goods**: each entry of the day with its kind, GE- number, time, vehicle, GRN (when linked) and status chip: **With Stores** (a material bill waiting for its GRN, or a goods out waiting for Store to link the challan), **With Accounts**, **Linked to GRN**, **Linked to challan ...**, **Filed**, **Void**. Tap a photo to open it.
2. **Visitors**: the visits of the day.
3. A watchman login sees only its own entries of the day (and the self check-ins at its gate). The plant head, Owner and Admin see everything.

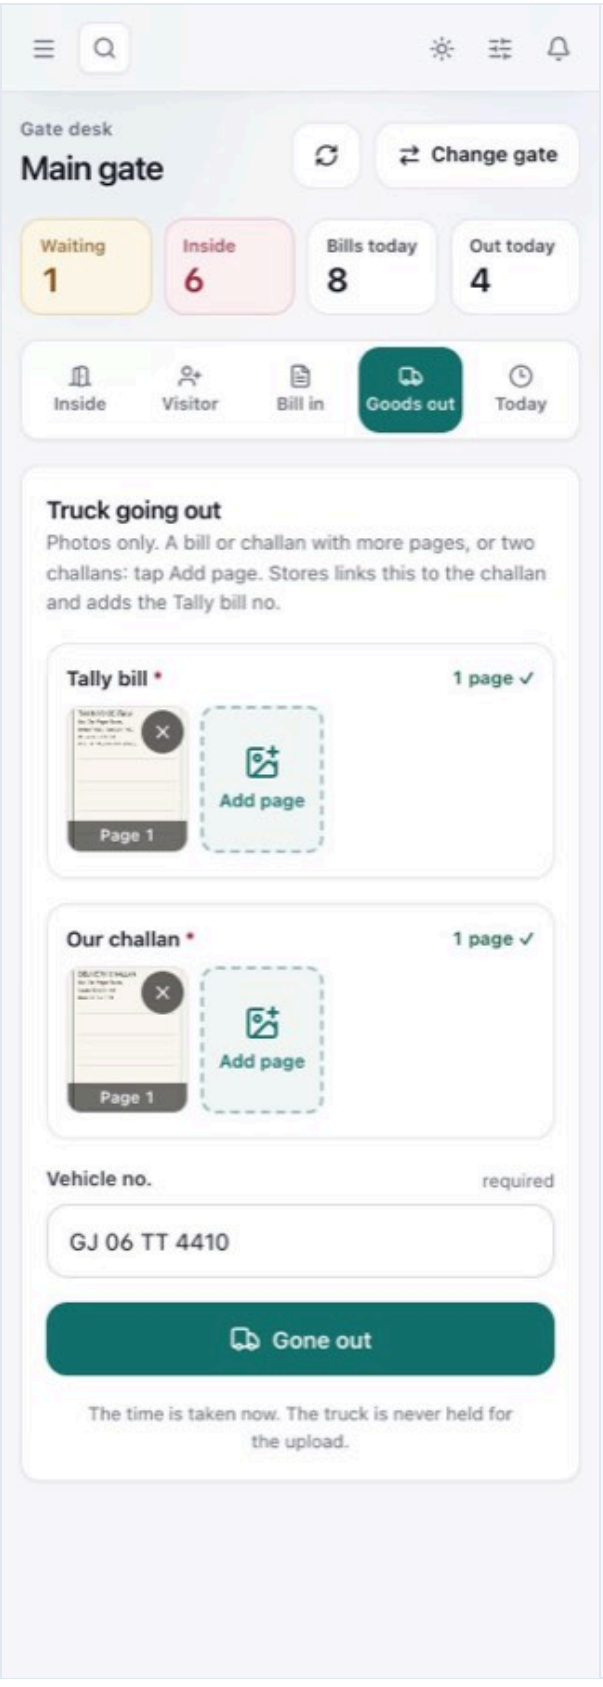



Figure: The **Goods out** tab: "Truck going out. Photos only. A bill or challan with more pages, or two challans: tap Add page. Stores links this to the challan and adds the Tally bill no." Two photo boxes, **Tally bill** (1 page ✓) and **Our challan** (1 page ✓), each with **Add page**; **Vehicle no.** (required) GJ 06 TT 4410; the button **Gone out**; "The time is taken now. The truck is never held for the upload."

What you see:

1. **Tally bill** and **Our challan** photo boxes (both required). **Add page** for more pages or a second challan.
2. **Vehicle no.** (required) and **Gone out**. The watchman does not pick the challan and does not type the Tally bill number.
3. Below the form, the trucks recorded today. A goods-out entry is **With Stores** until Store links it, then **Linked to challan ...**.

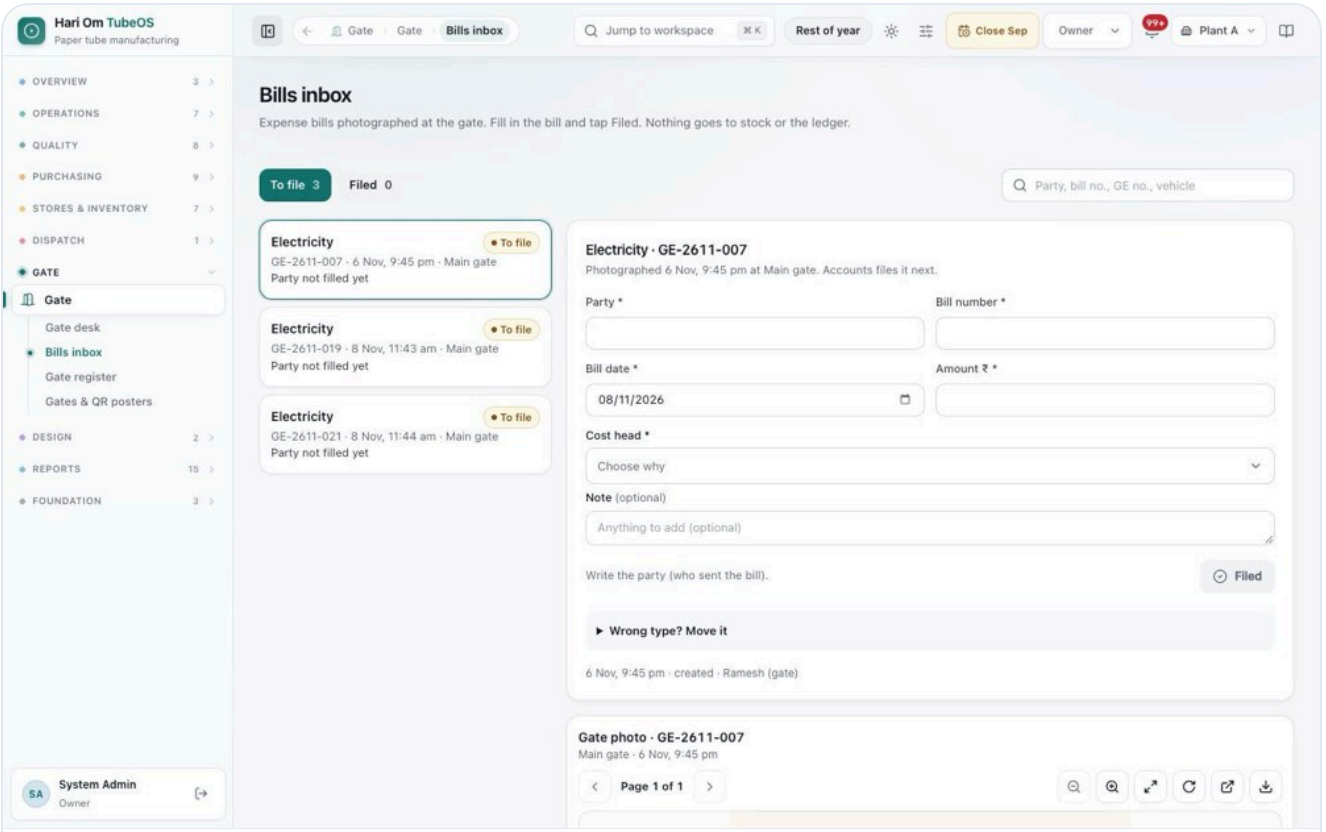



Figure: **Bills inbox**: "Expense bills photographed at the gate. Fill in the bill and tap Filed. Nothing goes to stock or the ledger." Tabs **To file 3** and **Filed 0**, a search box (party, bill no., GE no., vehicle). Left: Electricity GE-2611-007, To file, "Party not filled yet". Right: Electricity · GE-2611-007 with Party, Bill number, Bill date, Amount ₹, Cost head, Note, **Filed**, "Wrong type? Move it", the history line, and the gate photo below with zoom, rotate and page buttons.

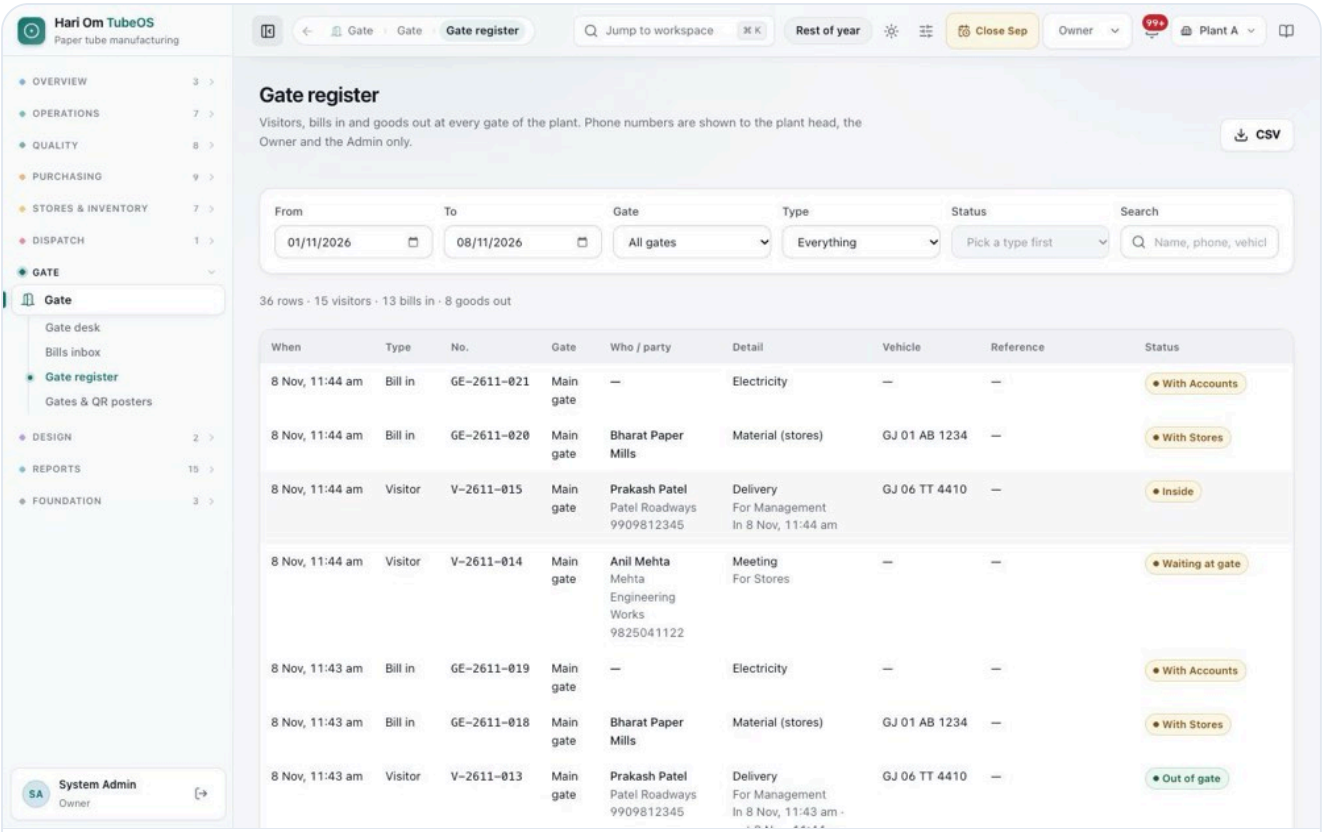



Figure: **Gate register**: "Visitors, bills in and goods out at every gate of the plant." Filters From, To, Gate, Type (Everything, Visitors, Bills in, Goods out), Status, Search, and a **CSV** button. The table shows When, Type, No., Gate, Who / party, Detail, Vehicle, Reference, Status.

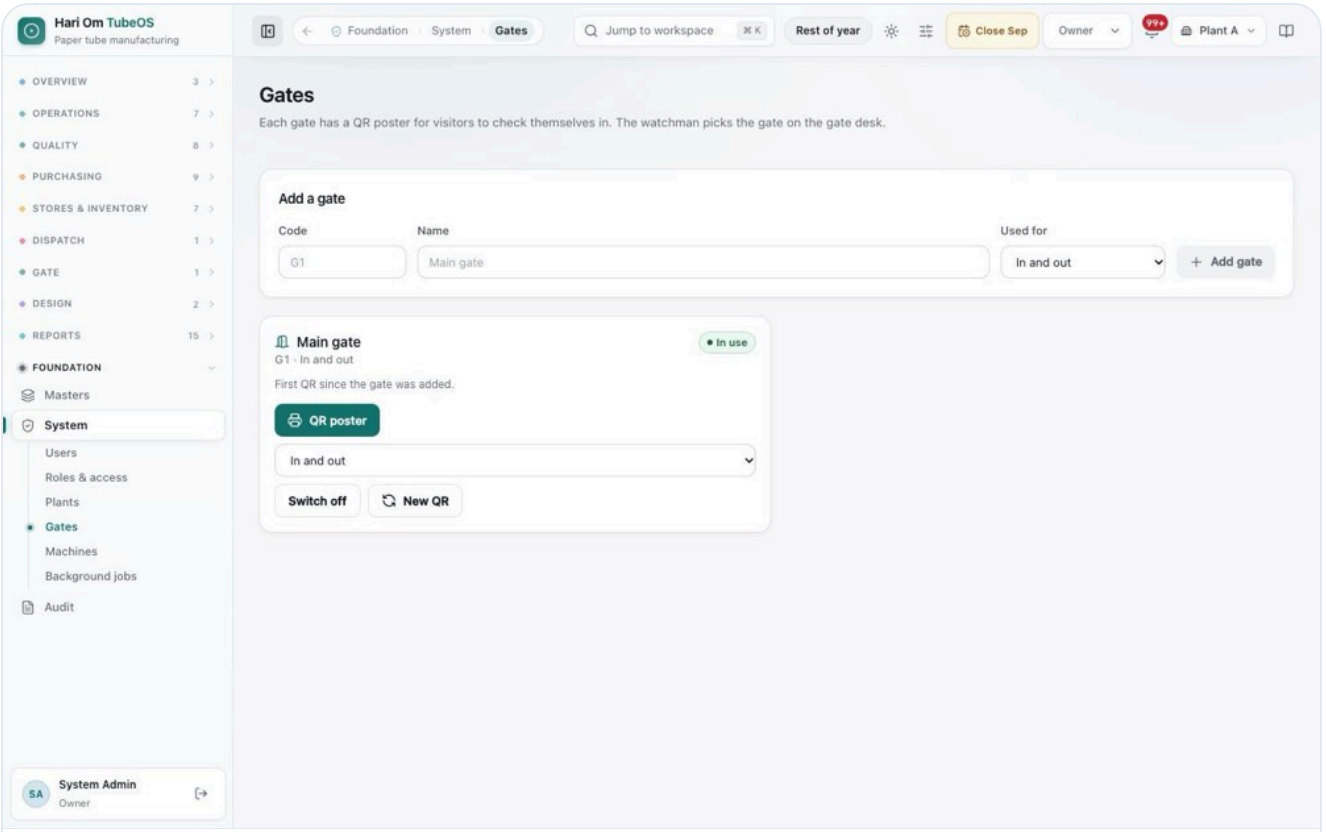



Figure: **Gates**: "Each gate has a QR poster for visitors to check themselves in." **Add a gate** with Code (G1), Name (Main gate), Used for (In and out / In only / Out only) and **Add gate**. Below, one card per gate: name, code, **In use** or **Switched off**, when the QR last changed, and **QR poster**, the Used-for picker, **Switch off** / **Switch on** and **New QR**.




Figure: The A4 QR poster: gate code and name, "Visitors: scan to check in" and the Hindi line, a large QR, short steps in English and Hindi, and "No smartphone? Please speak to the watchman."

**Print A4** prints it.

## Step by step

### How to start a shift at the gate

Roles: Watchman (also Plant Manager, Owner, Admin).

1. Sign in on the gate phone. A watchman login opens the gate desk straight away; it cannot open any other page.
2. If asked, pick the plant at the top, then tap your gate. The phone remembers it until **Change gate**.
3. Keep the phone on the network. If photos are waiting to upload, the strip at the top says so.

### How to let a visitor in (self check-in)

1. The visitor scans the QR poster, fills the form and shows the pass. They appear under **Waiting at gate**.
2. Check their ID. Tap **Let in**. The message says "Anil Mehta let in. Stores has been told."
3. The host (the person, or everyone with the department's role) gets a notification "Visitor for you: ..." with **Send in**, **Ask to wait** and **Not available**. Their reply shows on the visitor's card and on the visitor's pass.
4. If you cannot let them in, tap **Deny**, pick the reason and tap **Deny entry**. The pass shows "Entry not allowed today" with the reason.

### How to check in a visitor without a smartphone

1. Open **Visitor** (**+ Visitor**). Type the mobile, name and company, tap the purpose, pick whom to meet, set People and the vehicle number. Take a photo if useful.
2. Leave **Let in now (ID checked)** ticked and tap **Check in and let in**, or untick it and tap **Check in · waiting at gate**.
3. The visit gets its V- number; the host is told when the visitor is let in.

### How to mark a visitor out

1. Scan the QR on the visitor's pass with **Scan a visitor pass**, or tap **Out** on their card under **Inside**.
2. The message says "Mahesh Shah marked out." People still inside after the gate close time show **After closing** in red; mark them out when they leave.

## How to photograph a bill or challan coming in

1. Open **Bill in** (**+ Bill in**). Tap **Take photo** and photograph the first page. Tap **Add page** for every further page. If the truck brought a second bill, tap **Add another bill**.
2. Tap what kind of bill it is. Pick **Material (stores)** for anything for the store (paper, adhesive, packing, parts). Pick **Other** and write a few words if nothing fits.
3. Optional: pick or type the vendor, type the vehicle number.
4. Tap **Save · send to Stores** (material) or **Save · send to Accounts** (everything else). The message gives the GE- number: "GE-2611-020 saved · sent to Stores. 2 photos uploading; you can carry on."
5. Store gets "Material at the gate · GE-2611-020" with **Make GRN**. Expense bills go to the Bills inbox with **Open bill**.

## How to record a truck going out

1. Open **Goods out** (**+ Goods out**).
2. Photograph the **Tally bill** and **Our challan** (tap **Add page** for more pages or a second challan).
3. Type the **Vehicle no.** and tap **Gone out**. The time is taken at that moment. Do not wait for the upload; the truck can leave.
4. Store and Dispatch get "Goods out at the gate · GE-...". Store (or Dispatch, or the plant head) links the photos to the challan(s) on the dispatch register (**Gone out at the gate**, button **Link challan**) and types or confirms the Tally bill number. See the Dispatch chapter.

## How to file an expense bill (Bills inbox)

Roles: Plant Manager (plant head), Owner, Admin. (The page is also built for an Accounts role; TubeOS has no Accounts login set up today.)

1. Open **Gate › Bills inbox**. **To file** lists the expense bills, oldest first. Pick one; its gate photo is docked beside the form.
2. Read the photo and fill **Party**, **Bill number**, **Bill date** (not in the future) and **Amount ₹** (zero or more).
3. Pick the **Cost head** (list **Cost head**: CO-ADMIN Office & admin, CO-CIVIL Civil, CO-ELECTRICAL Electrical, CO-HOUSEKEEPING Housekeeping, CO-MECHANICAL Mechanical, CO-TRANSPORT Transport & courier, CO-UTILITIES Utilities, CO-OTHER with a note).
4. Tap **Filed**. "GE-2611-021 filed: ... bill 77810, ₹48,620.00, Utilities." The bill moves to **Filed** and stays there with its photo (Doc Vault › Expense bills). A filed bill can still be corrected with **Save changes**.
5. Nothing goes to stock or the ledger. This is a register with the photo.

### How to move a bill that was put in the wrong kind

Roles: Store, GRN, Plant Manager, Owner, Admin (and Accounts).

1. In the Bills inbox, open **Wrong type? Move it**, pick the right type (and a note for Other) and tap **Move**. A material bill goes to Stores for the GRN.
2. The change is logged on the entry. A bill already linked to a GRN, or already filed, cannot change its kind.

### How to set up a gate and its QR poster

Roles: Owner, Admin (one plant selected).

1. Open **System › Gates** (or Gate › Gates & QR posters). Under **Add a gate**, type a short **Code** (G1) and a **Name** (Main gate), choose **Used for** and tap **Add gate**.
2. Tap **QR poster**, then **Print A4**, and put the poster up at the gate.
3. If the QR was copied or posted somewhere it should not be, tap **New QR** and **Make a new QR**. The old printed QR stops working at once: print and put up the new poster straight away.
4. **Switch off** a gate that is not used. Its QR does not work until it is switched on.
5. The gate close time and how long visitor photos are kept are set by the Owner in **System › Plants** (Gate box). See System, roles and audit.
6. Create a **Watchman** login per gate person in **System › Users** (role Watchman, plant = their plant).

### How to read the gate register and export it

Roles: Plant Manager, Owner, Admin.

1. Open **Gate › Gate register**. It opens on the last 7 days.
2. Narrow by **From**, **To**, **Gate**, **Type** and **Status** (pick a type first), or search a name, phone, vehicle, bill or challan.
3. Tap **CSV** for the same rows in a file. The page shows the newest 5,000 rows; narrow the dates for older ones.

## Rules the system enforces

- **BLOCKS:** a watchman login opens only the gate desk; the server refuses every other page. A watchman sees only the entries they made today.
- **BLOCKS:** a bill in needs at least one photo and a kind; **Other** needs a few words. A bill cannot be saved on an **Out only** gate.

- **BLOCKS:** goods out needs the Tally bill photo, the challan photo and the vehicle number.
- **BLOCKS:** a visitor needs a 10-digit Indian mobile, a name of at least 2 letters, a purpose (Other needs a note) and whom to meet. People 1 to 50. One mobile number can have at most 3 open visits; the 4th self check-in is refused ("Please speak to the watchman at the gate").
- **BLOCKS:** only a visitor waiting at the gate can be let in or denied; only a visitor inside can be marked out. Deny needs a **Gate entry denied** reason.
- **BLOCKS:** only the host (the person, their department, the plant head, Owner or Admin) can reply to a visitor notification.
- **BLOCKS:** a switched-off gate, or an old QR after **New QR**, does not open the check-in form ("This gate QR is not in use any more. Ask the watchman to check you in."). Too many tries from one phone: "Too many tries. Wait a minute and try again."
- **BLOCKS:** the public check-in page never fills in a known visitor's details from their number.
- **BLOCKS:** filing an expense bill needs party, bill number, bill date (not in the future), amount (zero or more) and a cost head.
- **AUTOMATIC:** gate entries are numbered **GE-YYMM-NNN** and visits **V-YYMM-NNN**, per plant and month (India time).
- **AUTOMATIC:** a material bill goes to Stores (**With Stores**), every other kind to the Bills inbox (**With Accounts**). A goods out is **With Stores** until Store links it to its challan(s) (**Linked to challan**); Store and Dispatch are notified. Posting a GRN with the gate entry links its photos to the GRN and to every reel and lot (**Linked to GRN**).
- **AUTOMATIC (every 5 minutes):** a material bill with no GRN after 24 hours sends one reminder to Store, GRN and the plant head. A visitor still waiting after 12 hours becomes **Did not come in**. After the gate close time, the Owner gets one list a day of visitors still inside, Dispatch and Store get one list of challans sealed today that have not gone out of the gate, and Store and the plant head get one list of goods-out photos still not linked to a challan. Visitor photos older than the retention period are blanked and voided (the visit log stays).
- **WARNS:** a visitor inside after the gate close time (default 19:00) turns red with **After closing**.
- **NEVER BLOCKS:** the truck is never held for photos. Photos taken offline wait on that phone; the desk says which ones are still to upload.

**Statuses.** Gate entry: **With Stores**, **With Accounts**, **Linked to GRN**, **Linked to challan**, **Filed**, **Void** (and **At the gate**; goods out recorded before 8 Nov 2026 show **Out of gate**). Visit: **Waiting at gate**, **Inside**, **Out**, **Denied**, **Did not come in**.

## Sample

Saturday, Main gate, watchman Ramesh.

- 11:43 Bharat Paper Mills' truck GJ 01 AB 1234 brings invoice BPM/2241 (2 pages). Ramesh takes 2 photos, taps **Material (stores)**, picks the vendor and saves: **GE-2611-020 · sent to Stores**. Store gets "Material at the gate". At 14:10 Store picks it under **At the gate** on Goods inward and posts GRN P/26/031; the entry becomes **Linked to GRN** and the bill photo is on the GRN and on each of the 8 reels.
- 11:44 the electricity bill arrives by hand. One photo, **Electricity**, saved as **GE-2611-021 · sent to Accounts**. On Monday the plant head files it: party "Electricity board", bill 77810 3346, 8 Nov 2026, ₹48,620, cost head **CO-UTILITIES**.
- 11:44 Anil Mehta of Mehta Engineering Works scans the poster and gets pass **V-2611-014**, for Stores. Ramesh checks his ID and taps **Let in**. Store replies **Send in** from the notification. At 12:30 Ramesh scans the pass: **Out**.
- 16:20 our truck GJ 06 TT 4410 leaves with challan DC/26/V-1189 and Tally bill T-1189. Ramesh photographs both, types the vehicle number and taps **Gone out** (GE-2611-030). Store picks it under **Gone out at the gate**, ticks challan DC/26/V-1189, types T-1189 from the Tally bill photo and clicks **Link challan**; the dispatch register shows **Out · Tally T-1189 ✓** and the entry **Linked to challan**.

| Number | What | Status at day end |
|---|---|---|
| GE-2611-020 | Material bill, Bharat Paper Mills | Linked to GRN (P/26/031) |
| GE-2611-021 | Electricity bill | With Accounts (filed Monday) |
| V-2611-014 | Anil Mehta, Meeting, Stores | Out |
| GE-2611-030 | Goods out, GJ 06 TT 4410 | Linked to challan DC/26/V-1189 |

## Common questions

**? Do I have to type the bill number or the Tally bill number at the gate?**

No. The watchman only takes photos, taps the kind and (for goods out) types the vehicle number. Store reads the numbers from the photo later.

**? The network is down. Can the truck go?**

Yes. Save the entry; the photos stay on the phone and upload when the network is back. Keep the phone on and on the network. The desk shows what is still to upload.

**? The visitor has no smartphone.**

Use **+ Visitor** and fill the form for them, then **Check in and let in**.

**? Must the host approve before I let the visitor in?**

No. You let them in after checking the ID; the host is told and can reply Send in, Ask to wait or Not available.

**? I picked Electricity but it was a material bill.**

Ask Store or the plant head to use **Wrong type? Move it** in the Bills inbox. The bill then goes to Stores for the GRN.

**? The card says "Photo saved · Stores and Accounts open it". Why can't I see it?**

The same file was already in the vault, or it is a kind your login may not open. The photo is safe.

**? Why is a visitor shown in red?**

They are still inside after the gate close time. Mark them out when they leave; the Owner gets a daily list.

**? Who sees the visitors' phone numbers?**

Only the watchman, the plant head, the Owner and the Admin. Others see them masked (98xxxxxx22).

**? The QR poster was posted on social media.**

The Owner or Admin taps **New QR** in System › Gates and prints the new poster. The old QR stops working at once.

**? Can a watchman open the Doc Vault or other pages?**

No. A watchman login opens only the gate desk, and sees only the photos they took today.

## Related chapters

- Doc Vault
- Goods inward, GRN register and labels (At the gate)
- Dispatch (Gone out at the gate)
- Dashboard and Inbox (action buttons on notifications)
- System, roles and audit (gate settings, Watchman logins)

GATE AND DOCUMENTS

# Doc Vault


**What it is:** One place for every bill, challan and photo of the plant: vendor bills and challans, expense bills, Tally bills and our challans photographed at the gate, visitor photos, and a saved copy of every issued debit note. Search, view, link to a GRN, add pages, and void (never delete).
**Who uses it:** Owner, Admin, Plant Manager (plant head) see everything. Store, GRN, QC and Inward QC see material bills and challans. Dispatch sees outward papers. A watchman sees only the photos they took today.
**Where:** Sidebar > Stores & inventory > Doc Vault (/documents). The same documents also show in a **Documents** panel on the GRN, on the debit note and on the gate entry.

## At a glance

- **Every paper becomes a document with a DV number** (for example DV-2611-0019) and one or more pages. Several photos of one bill are pages of one document.
- **Documents are never deleted.** A wrong upload is **voided** by the Owner or Admin with a reason. The file and its history stay.
- **Documents are linked to the records they belong to:** a GRN and each of its reels and lots, a gate entry, a visit, a dispatch challan, a debit note. A document can have several links.
- **Photos taken on a phone are shrunk before they are sent** and wait on the phone when the network is weak. They upload by themselves.
- **An issued debit note's PDF is saved in the vault automatically** and linked to the note.

## The flow

### From photo to linked document

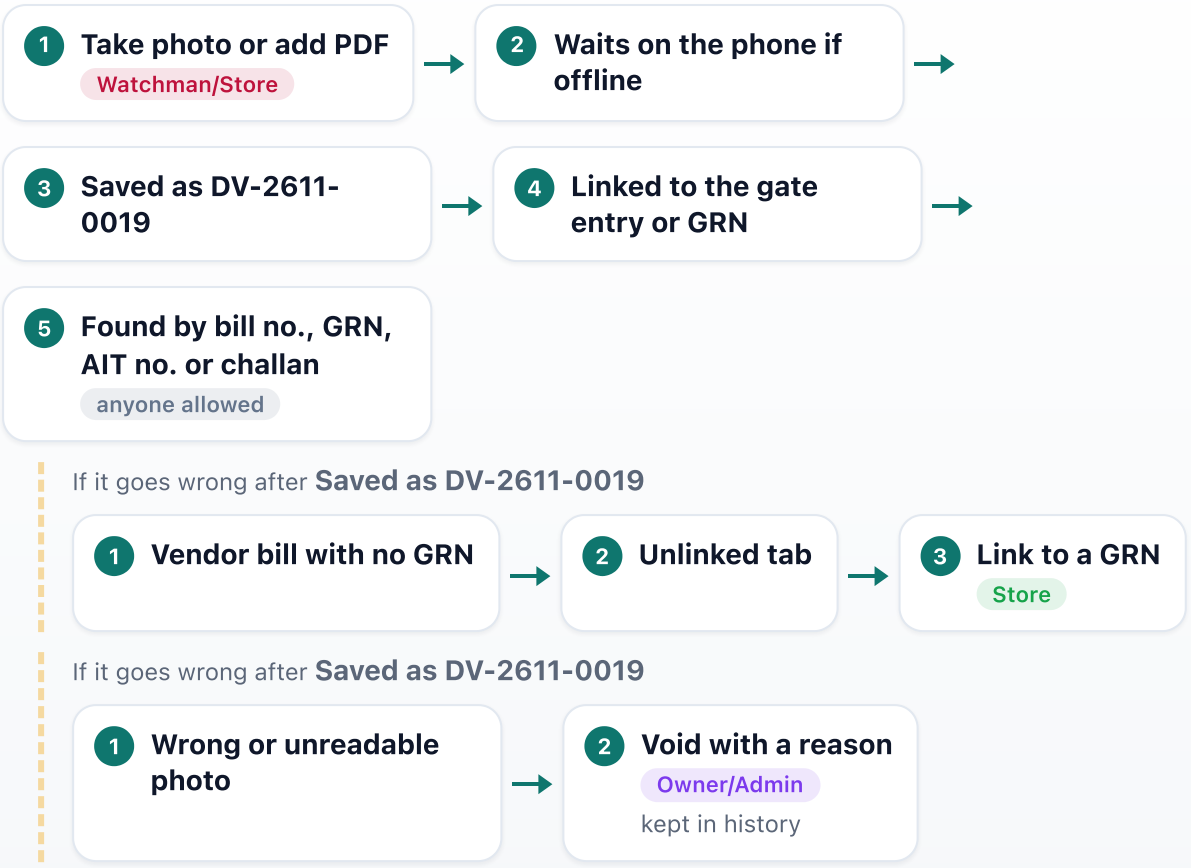


Most documents arrive without anyone opening the vault: the watchman's gate photos, the bill photos added on a GRN, and the debit note PDF. The vault is where you find them again.

## Screen tour

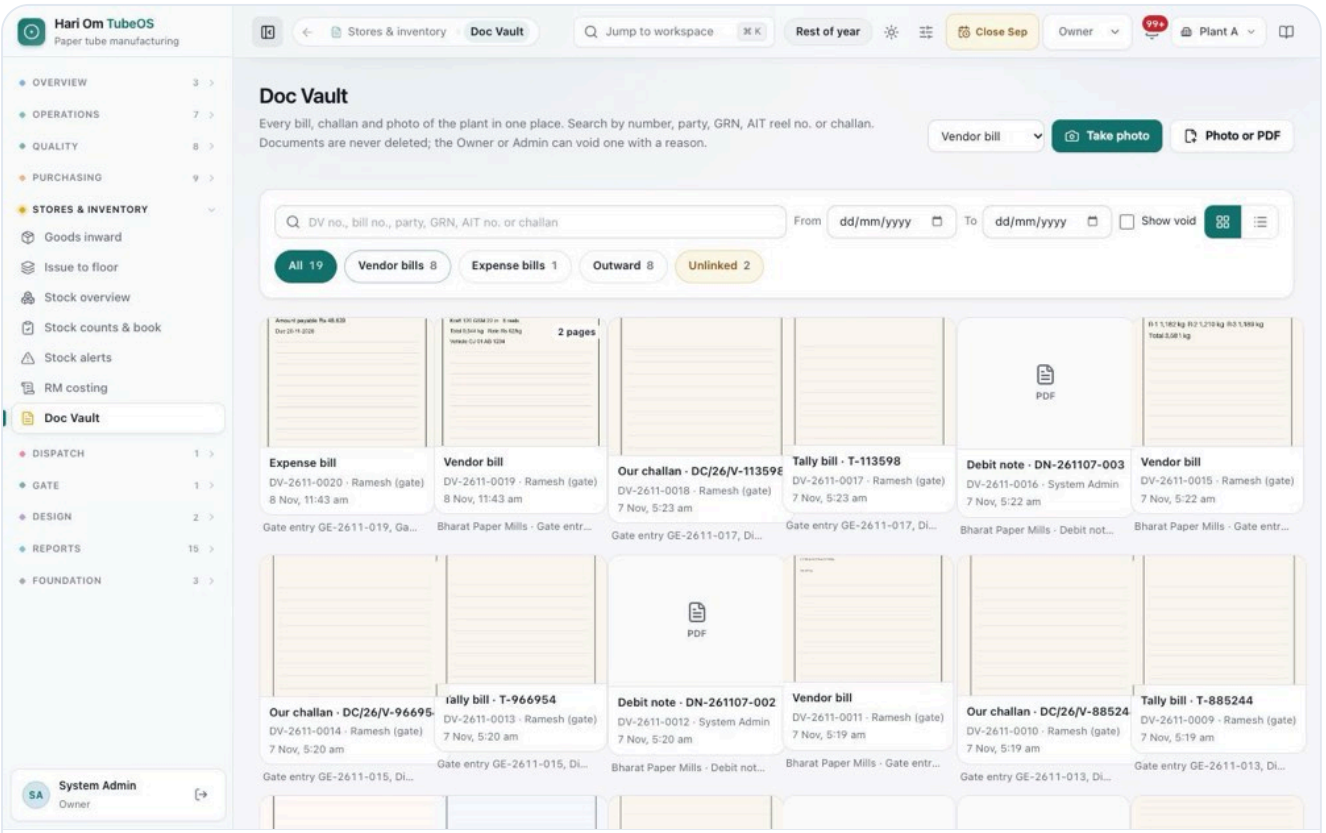



Figure: **Doc Vault**: "Every bill, challan and photo of the plant in one place. Search by number, party, GRN, AIT reel no. or challan. Documents are never deleted; the Owner or Admin can void one with a reason." Add buttons at the top right, a search box, From and To dates, **Show void**, grid or list layout, tabs with counts, and a grid of thumbnails each with its type, DV number, who saved it and when, and what it is linked to.

What you see:

1. **Add** buttons (top right): **Take photo** and **Photo or PDF**, with a document type picker (only the types your login may add).
2. **Search**: "DV no., bill no., party, GRN, AIT no. or challan". **From** / **To** dates, **Show void**, and a grid / list switch.
3. **Tabs**: **All**, **Vendor bills**, **Expense bills**, **Outward** (Tally bills and our challans), **Unlinked** (vendor bills and challans not yet tied to a GRN; amber when there are any).
4. **Grid**: one card per document with a thumbnail. **List** shows the columns Doc, Type, Party, No. · date, Linked to ("Not linked" in amber), From (Gate, Stores, Quality, Dispatch or System copy, who and when).
5. The page shows 60 at a time; **Show more** loads up to 200. Narrow the search or dates for older ones.

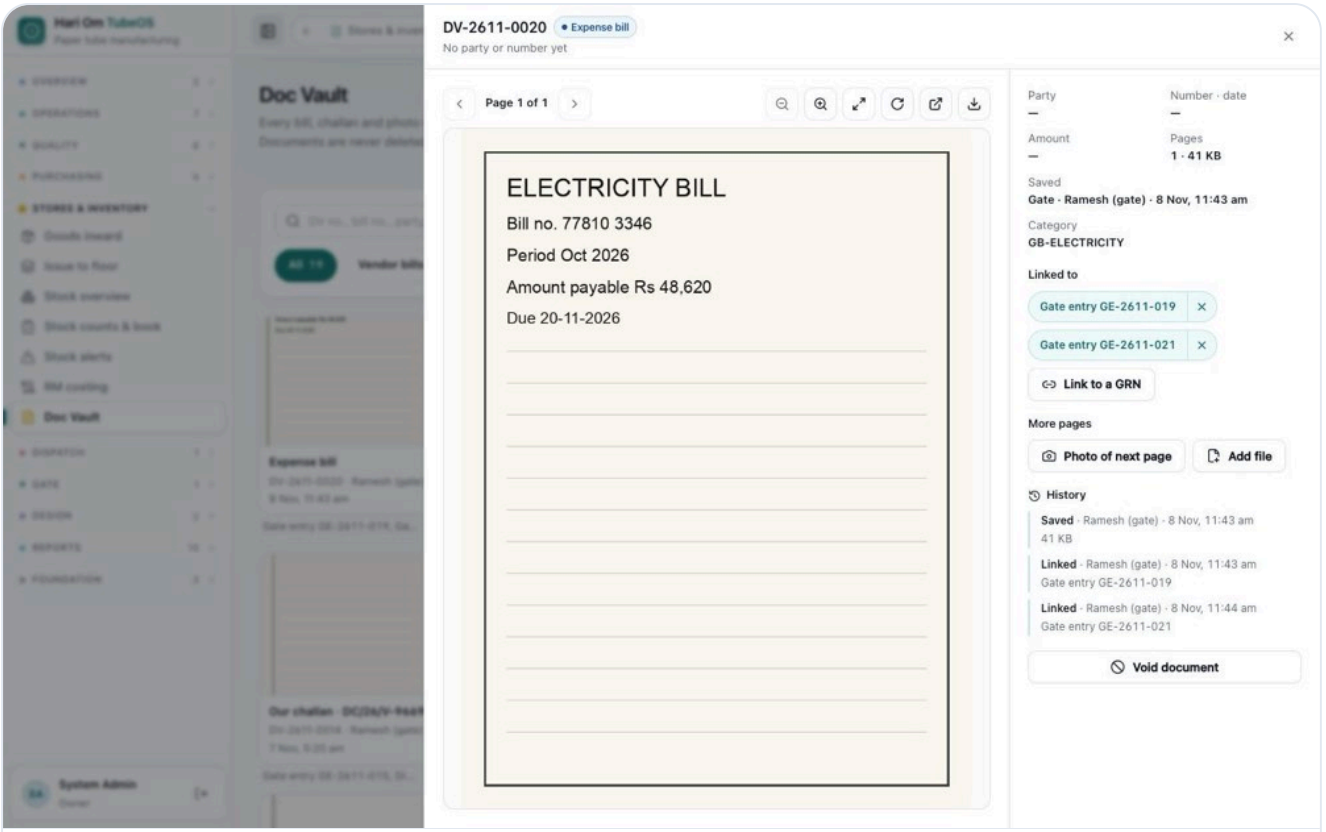



Figure: Opening a document. Left: the page with **Page 1 of 1**, zoom out, zoom in, fit, rotate, open in a new tab and download. Right: Party, Number · date, Amount, Pages (1 · 41 KB), Saved (Gate · Ramesh (gate) · 8 Nov, 11:43 am), Category GB-ELECTRICITY, **Linked to** (Gate entry GE-2611-019 and Gate entry GE-2611-021: the same photo sent twice was linked, not saved twice), **Link to a GRN**, **More pages** (**Photo of next page**, **Add file**), **History** (Saved, Linked) and **Void document**.

What you see:

1. **Header**: DV number, type chip, **Void** chip when voided, and party · number · date ("No party or number yet" until someone fills them).
2. **Viewer**: previous / next page, zoom, fit to screen, rotate a quarter turn, open in a new tab, download this page. Keys: arrows for pages, plus and minus to zoom, R to rotate. PDFs open in the viewer.
3. **Details**: **Party**, **Number · date**, **Amount**, **Pages** (count and size), **Saved** (source, who, when), **Category**.
4. **Linked to**: one chip per link (GRN, Reel, Lot, Gate entry, Visit, Dispatch, Debit note, PO, Weight case). The Owner and Admin can remove a link with the x.
5. **Link to a GRN**: search by GRN no., vendor, challan or invoice and pick it.
6. **More pages**: **Photo of next page** or **Add file** adds pages to this same document.
7. **History**: Saved, Added a page, Linked, Unlinked, Corrected, Voided, each with who and when.
8. **Void document** (Owner and Admin): asks "Void DV-...? Nothing is deleted: it is hidden from the vault and the record pages, and stays in the history.", a **Why void** reason, then **Void document** or **Keep it**.

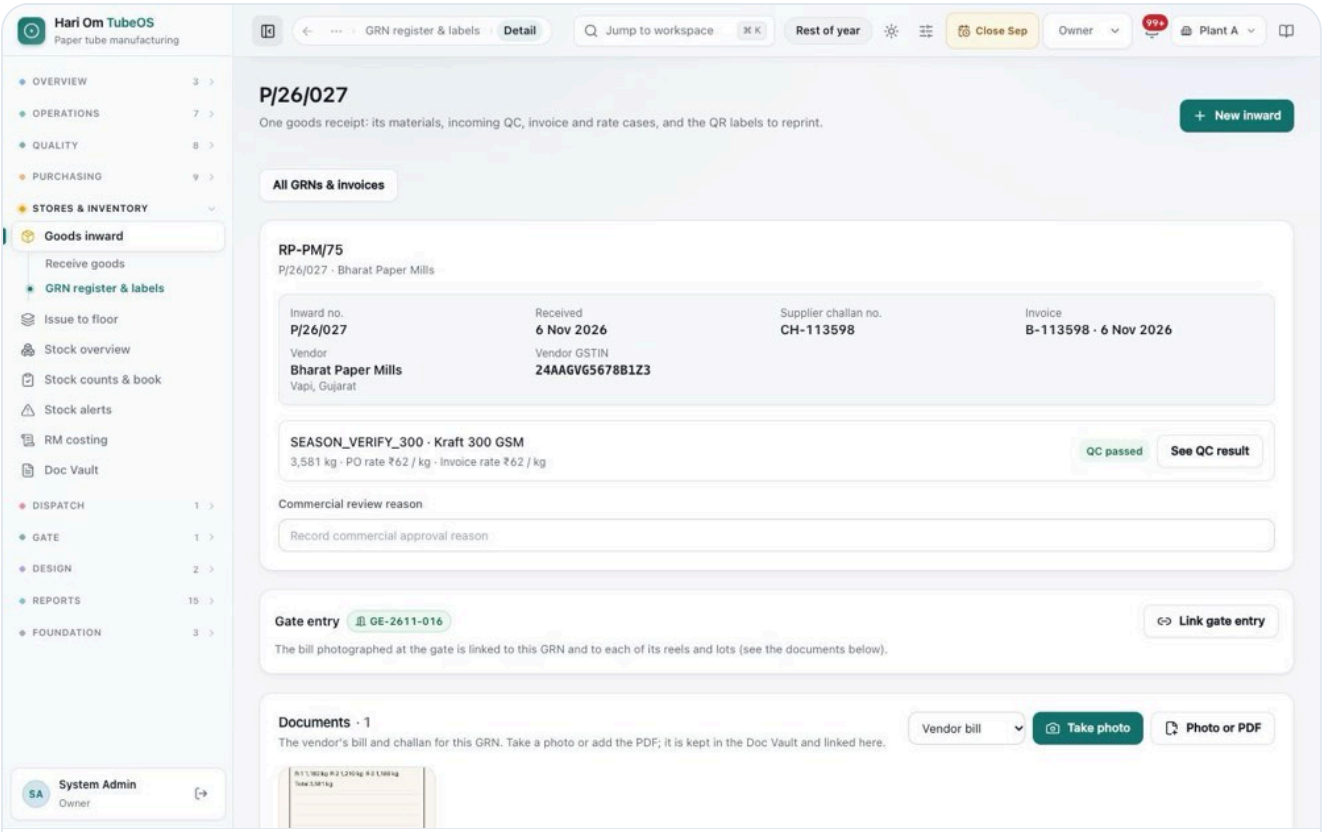



Figure: The bottom of a GRN page: **Gate entry** with the chip GE-2611-016 ("The bill photographed at the gate is linked to this GRN and to each of its reels and lots") and **Link gate entry**; below it **Documents · 1** with the document type picker, **Take photo** and **Photo or PDF**, and the bill thumbnail.

## Step by step

### How to add a bill or challan photo

Roles: Store, GRN, QC, Inward QC (material bills and challans), Dispatch (outward papers), Plant Manager, Owner, Admin (all types).

1. On the GRN (Documents panel) or in the vault, pick the document type (**Vendor bill**, **Vendor challan**, **Expense bill**, **Tally bill**, **Our challan**, **Other**).
2. Tap **Take photo** (camera) or **Photo or PDF** (a file). Several files picked together become pages of one document.
3. The photo shows in the upload strip and is saved as the next DV number. Added on a GRN, it is linked to that GRN.
4. To add a page later, open the document and tap **Photo of next page** or **Add file**.

### How to find a document

1. Open **Doc Vault** and type in the search: the DV number, the bill number, the party, the GRN number (P/26/027), an AIT reel number (AIT 06283) or a challan number.
2. Use the tabs and the **From** / **To** dates to narrow it. Tick **Show void** to include voided ones.
3. Tap a card to open it in the viewer.

### How to link a vendor bill to its GRN

Roles: Store, GRN, QC, Inward QC, Plant Manager, Owner, Admin.

1. Open the **Unlinked** tab. It lists vendor bills and challans not tied to a GRN yet.
2. Open the document, tap **Link to a GRN**, type at least 2 letters of the GRN no., vendor, challan or invoice, and pick the GRN.
3. "Linked. The document now shows on the GRN." A bill photographed at the gate is normally linked when Store posts the GRN from **At the gate**, or with **Link gate entry** on the GRN.

### How to void a wrong document

Roles: Owner, Admin.

1. Open the document and tap **Void document**.
2. Pick **Why void** (list **Document void**: DV-DUPLICATE Uploaded twice, DV-NOT-OURS Not our document, DV-UNREADABLE Photo not readable, DV-WRONG-FILE Wrong photo or file, DV-OTHER with a note).
3. Tap **Void document**. "DV-… is void. The file and its history are kept." It disappears from the vault and the record pages unless **Show void** is ticked.

### How to get an issued debit note's PDF

1. When a debit note is issued, its PDF is saved in the vault and linked to the note (source "System copy").
2. Open it from the **Documents** button on the debit note, or search the DN number in the vault.

## Rules the system enforces

- **BLOCKS:** only photos (JPEG, PNG, WebP) and PDF files, at most 10 MB each. A phone photo saved as HEIC is refused ("In the camera settings choose Most Compatible, or send a PDF").

- **BLOCKS:** each role sees and adds only its kinds. Owner, Admin and Plant Manager: everything. Store, GRN, QC, Inward QC: vendor bills and challans. Dispatch: Tally bills and our challans. Watchman: only their own uploads of today (and they can add gate photos).
- **BLOCKS:** visitor photos are seen only by the watchman, the plant head, the Owner and the Admin.
- **BLOCKS:** only the Owner and Admin can void a document or remove a link; void needs a **Document void** reason. Nothing is ever deleted.
- **BLOCKS:** All plants is view-only. Pick one plant at the top to add, link, add pages or void.
- **AUTOMATIC:** numbers are **DV-YYMM-NNNN**, one series per plant and month.
- **AUTOMATIC:** the same file (same bytes) sent again in a plant is not saved twice; the document already saved is linked to the new record.
- **AUTOMATIC:** photos are shrunk on the phone before sending. Photos taken offline wait on that phone (in the browser) and are sent when the network is back; the strip says what is still waiting.
- **AUTOMATIC:** posting a GRN with a gate entry links the gate photos to the GRN and to every reel and lot. An issued debit note's PDF is saved and linked.
- **AUTOMATIC:** visitor photos older than the plant's retention period are blanked and voided with DV-RETENTION.

## Sample

Store wants the invoice of reel AIT 06283. In **Doc Vault** she types "AIT 06283". One card shows: Vendor bill DV-2611-0012, Bharat Paper Mills, linked to GRN P/26/021 and to reels AIT 06283 and AIT 06284. She opens it, zooms into the reel list on page 2 and downloads the page for the vendor.

Later the plant head sees two identical photos of one challan in **Unlinked**. He asks the Admin, who voids the second with **DV-DUPLICATE**. The first is linked to GRN P/26/021 with **Link to a GRN**.

## Common questions

**? Can I delete a photo I took by mistake?**

No document is ever deleted. Ask the Owner or Admin to void it with a reason.

**I took the photo but it does not show yet.**

It is still on your phone waiting to upload. Keep the phone on the network; the strip at the top shows what is waiting.

**Why can't I see the electricity bill?**

Expense bills are seen by the plant head, Owner and Admin. Store sees material bills and challans; Dispatch sees outward papers.

**The bill has three pages. Do I make three documents?**

No. Take the first photo, then add the others with **Add page** at the gate, or **Photo of next page** in the viewer.

**What is the Unlinked tab?**

Vendor bills and challans not tied to a GRN yet. Link each one to its GRN.

**Where are the debit note PDFs?**

Each issued debit note's PDF is saved in the vault automatically and shows under **Documents** on the note.

## Related chapters

- Gate desk and visitors
- Goods inward, GRN register and labels
- Invoice differences, debit notes and purchase reports
- System, roles and audit