Laser/Actuator Position Map Calibration - A4

PRINT AT 100% / ACTUAL SIZE

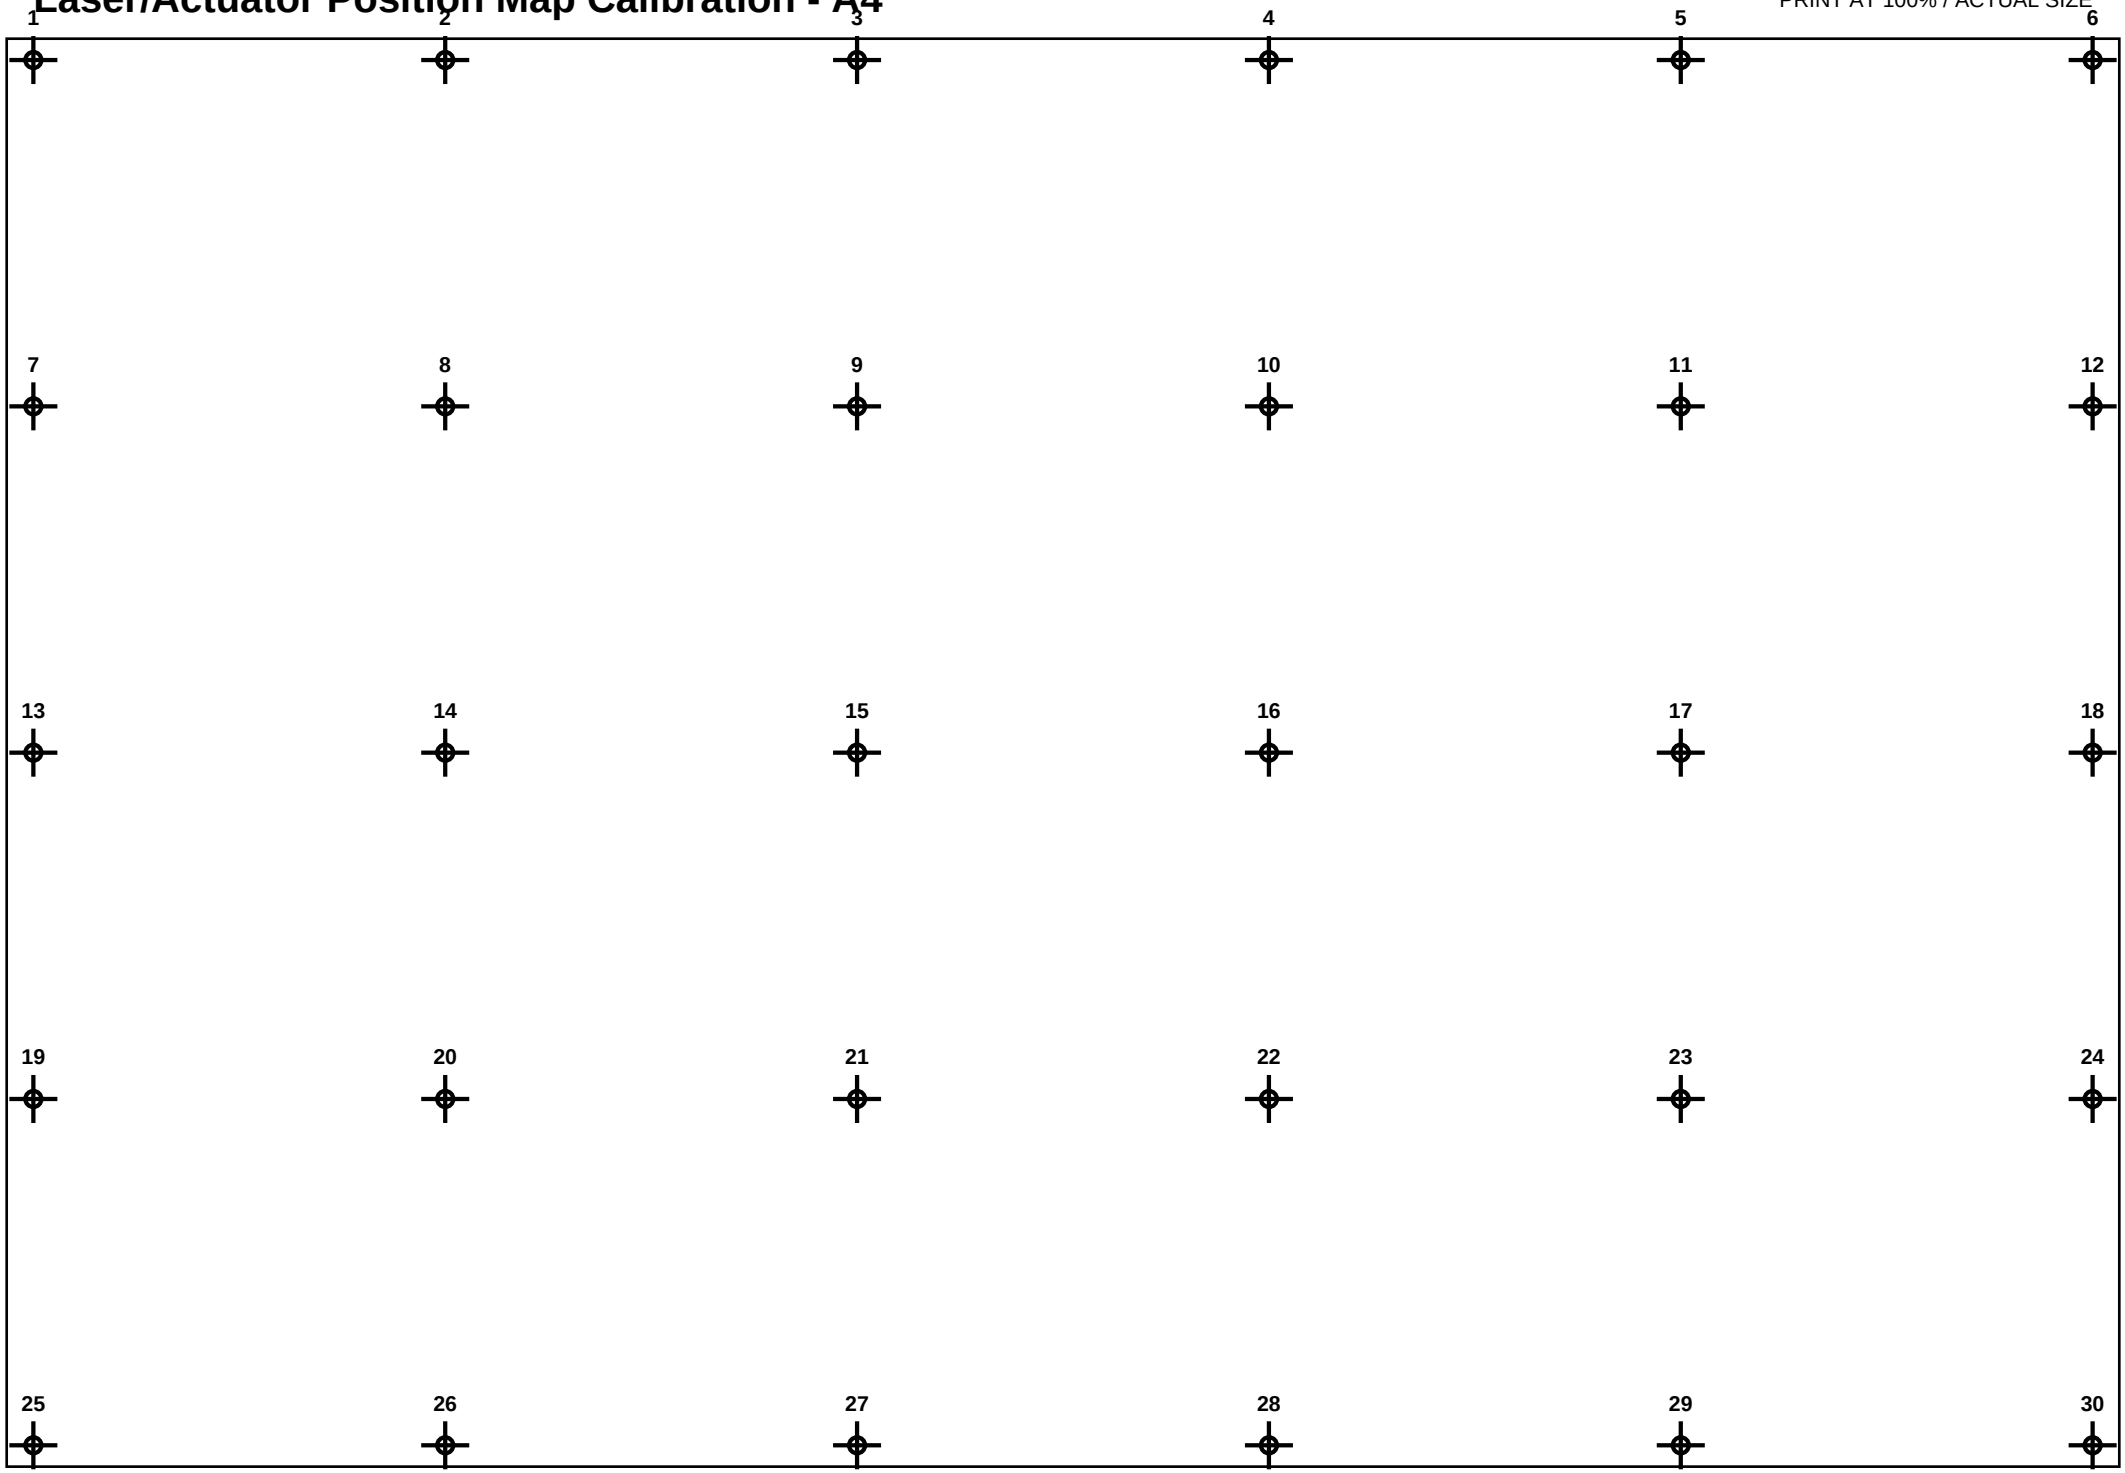

Calibration workflow: click each cross in numerical order, center the laser on it with the jog controls, then press SPACE to record.

Grid: 5 rows x 6 columns = 30 points