

Compressed air receiver tanks

WRV series

An air receiver stores compressed air, steadies pressure for the plant and gives condensate somewhere to settle before it travels down the line. Every WRV vessel is designed to requirement and hydrostatically tested, with ASME VIII fabrication available on request.



Standard models	Working pressure	Designed to requirement	Inlet air temperature
250 to 10,000 litres	7 · 10 · 12.5 bar g	0.5 to 40 m³, 6 to 30 bar g	Up to 100 °C

Inside this catalogue

Models & rating conditions	2	How it works & construction	3
Selection & applications	4		



Specifications online

Layout edition 2026-10 · Product-range information. Confirm the selected model and duty with Win Equipments before ordering.

Models & rating conditions

Rating conditions

Testing	Every vessel hydrostatically tested	Code	ASME VIII on requirement
Accessories	Supplied with standard accessories	Orientation	Vertical and horizontal

Capacity & operating data

Model	Capacity litres	Working pressure options bar g	Outer diameter mm	Overall height mm
WRV 025	250	7 · 10 · 12.5	490	1620
WRV 050	500	7 · 10 · 12.5	630	2000
WRV 100	1000	7 · 10 · 12.5	750	2750
WRV 150	1500	7 · 10 · 12.5	980	3100
WRV 200	2000	7 · 10 · 12.5	980	3250
WRV 300	3000	7 · 10 · 12.5	1250	2940
WRV 500	5000	7 · 10 · 12.5	1500	3525
WRV 1000	10000	7 · 10 · 12.5	2000	3450

Construction, dimensions & connections

Model	End connection BSP / NB	Access	Foundation
WRV 025	¾" BSP	Hand hole	Leg
WRV 050	1" BSP	Hand hole	Leg
WRV 100	1½" BSP	Hand hole	Leg
WRV 150	2" BSP	Hand hole	Leg
WRV 200	2" NB	Man hole	Skirt / leg
WRV 300	4" NB	Man hole	Skirt / leg
WRV 500	6" NB	Man hole	Skirt / leg
WRV 1000	8" NB	Man hole	Skirt / leg

- Pressure variants: 2 = 7 bar g working / 8 design / 12 hydro test; 3 = 10 / 11 / 17; 4 = 12.5 / 14 / 21 bar g.
- Vessels outside the standard range (0.5 to 40 m³, 6 to 30 bar g) are designed to requirement.

How it works & construction

How it works

Air drawn into a compressor carries moisture. Compression raises its temperature and its capacity to hold water vapour; when the air cools again, that vapour condenses.

1 Store

The receiver stores compressed air and evens out pressure swings between compressor and plant demand.


2 Cool

Air slows and cools in the vessel, so part of the condensate drops out downstream of the compressor.

3 Drain

Condensate collects at the bottom and is removed through the drain; the air leaving is still saturated and needs drying.

Typical compressed air installation

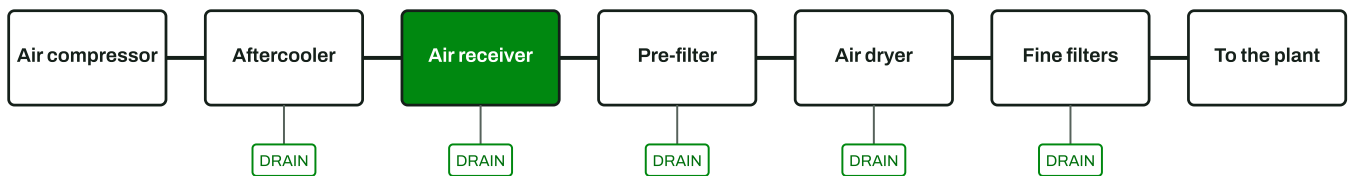

Typical arrangement only. Confirm filtration sequence and condensate handling for your application.

Construction & features

Pressure classes

- Variant 2: 7 bar g working, 8 bar g design, 12 bar g hydro test
- Variant 3: 10 bar g working, 11 bar g design, 17 bar g hydro test
- Variant 4: 12.5 bar g working, 14 bar g design, 21 bar g hydro test

Foundation

- Legs up to WRV 150
- Skirt or legs from WRV 200

Access

- Hand hole up to WRV 150
- Man hole from WRV 200

Selection & applications

Applications: Compressed air plants of all sizes · Wet receiver after the compressor · Dry receiver after the dryer and filters

What pressure ratings are available?

Each standard WRV size is offered at 7, 10 or 12.5 bar g working pressure, with design pressures of 8, 11 and 14 bar g and hydrostatic test pressures of 12, 17 and 21 bar g.

Do I need a wet and a dry receiver?

A typical installation uses a wet receiver after the compressor to settle condensate, and a dry receiver after the dryer and filters to buffer clean, dry air for the plant.

Can you build to ASME?

Yes. Vessels can be fabricated to ASME VIII on requirement.

Confirm your selection

Send the model, required capacity, operating temperatures, pressure and site conditions. For a model-specific datasheet or GA drawing, include your installation requirement.

Win Equipments

SF No. 4/195 B, Kallangadu, Nadu Arasur, Arasur Post,
Coimbatore 641 407, Tamil Nadu, India
+91 95972 28969 · +91 95972 28975
info@winequipments.com
winequipments.com

Catalogue values are for product selection. Confirm duty, materials, connections and final dimensions with Win Equipments before ordering. Layout edition 2026-10.