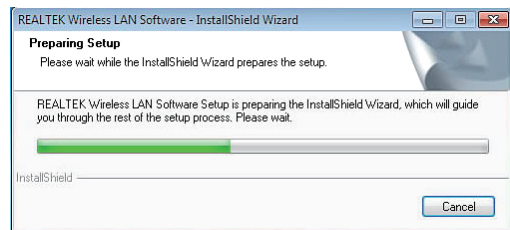# USB Wireless Adapter Quick Installation Guide
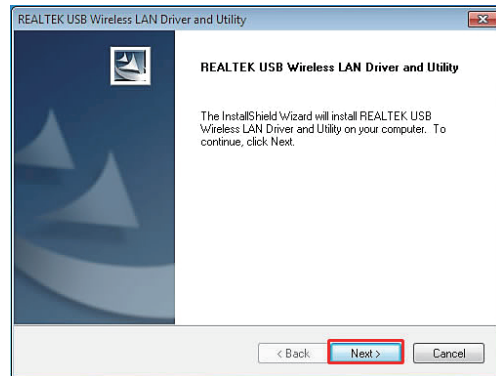
Note：This Manual based on Windows7

---

01. Once the wireless USB adapter be plugged into an USB port , put in the CD and find windows file "windows (xp,vista,win7,win8,win10)" andSetup.exe.

1 (G:) 2 Windows (xp,vista,win7,win8,win10) 3 Setup

02. Double click Setup.exe file, Software begin to initialization,then click the "Next".There shows the installation progress.

REALTEK Wireless LAN Software - InstallShield Wizard

Preparing Setup
Please wait while the InstallShield Wizard prepares the setup.

REALTEK Wireless LAN Software Setup is preparing the InstallShield Wizard, which will guide you through the rest of the setup process. Please wait.

InstallShield
Cancel

❶

REALTEK USB Wireless LAN Driver and Utility

REALTEK USB Wireless LAN Driver and Utility

The InstallShield Wizard will install REALTEK USB Wireless LAN Driver and Utility on your computer. To continue, click Next.
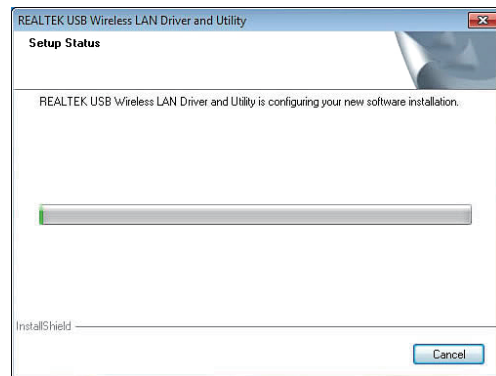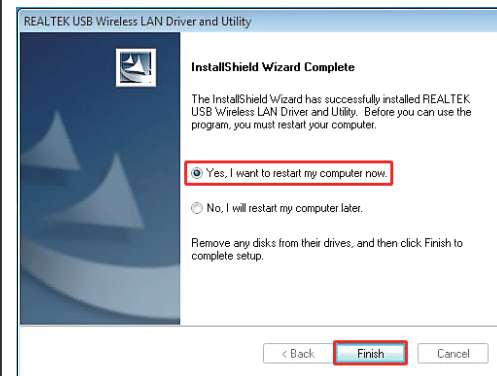
< Back   Next >   Cancel

03. Do not interrupt installation, Click "finish" to finish the driver installation.The computer automatically restart.

❷

REALTEK USB Wireless LAN Driver and Utility

Setup Status

REALTEK USB Wireless LAN Driver and Utility is configuring your new software installation.

InstallShield
Cancel

Now installing REALTEK USB Wireless LAN Driver

❸

REALTEK USB Wireless LAN Driver and Utility

InstallShield Wizard Complete

The InstallShield Wizard has successfully installed REALTEK USB Wireless LAN Driver and Utility. Before you can use the program, you must restart your computer.

◉ Yes, I want to restart my computer now.
○ No, I will restart my computer later.

Remove any disks from their drives, and then click Finish to complete setup.
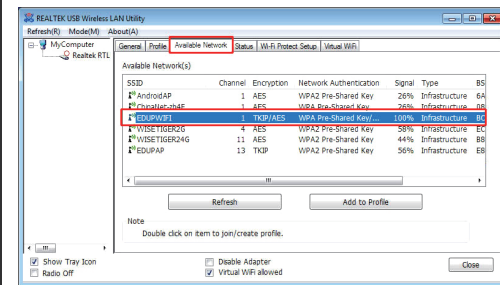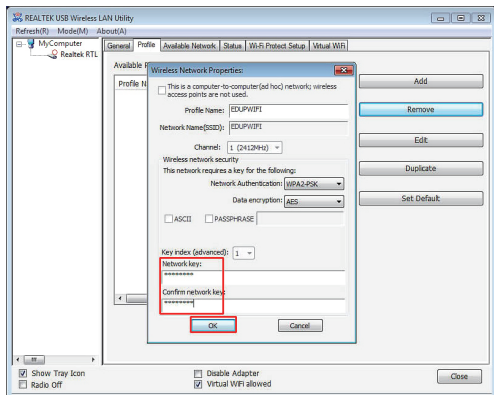
< Back   Finish   Cancel

Wireless connection (two ways to realize Wireless connection 1 :

❹

04.Click Icon [icon] in the Windows system tray, which locates in the bottom-right corner of your computer screen or double click [icon] , and pops up a message and click"Available Network" Double-click the utility icon or right click the icon ,and the Wireless Network Connection window appears then double click the SSID you preferred.
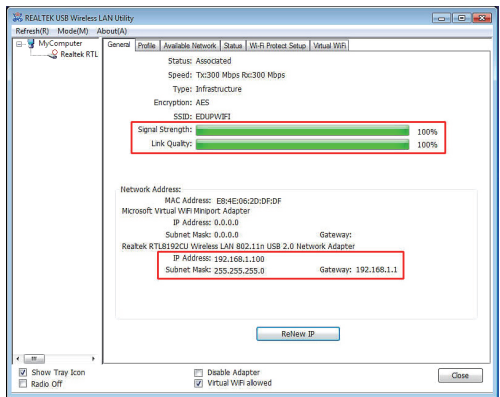
REALTEK USB Wireless LAN Utility

❺

Type the encryption key that you wrote down earlier in both the Network key and Confirm network key boxes, and then click "ok".

REALTEK USB Wireless LAN Utility
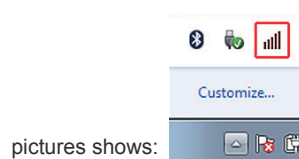
❻

REALTEK USB Wireless LAN Utility

Note:if there is no icon [icon] , please find it in the on right buttom,it have been hide as following

❼

---

pictures shows: Wireless Connection2.

Bluetooth   Customize...

05. Click Icon [icon] which locates in the bottom-right corner of your computer screen,click the wireless network list and choose the SSID you preferred. and double click (Or click "Connect").

❽

Not connected
Connections are available

Wireless Network Connection 2

EDUPWIFI   Connect
EDUP-2.4G
WISETIGER2G
WISETIGER24G
RT2602
EDUP-5.8G
EDUP2G

Open Network and Sharing Center

3:53 PM
5/24/2016

Type the encryption key and then click "ok".

❾

Connect to a Network

Type the network security key

Security key: ●●●●●●●●●●
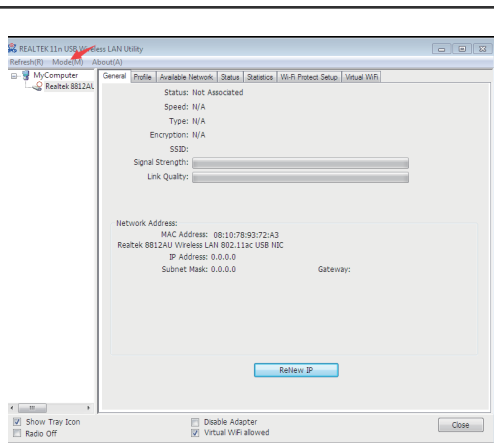☑ Hide characters

OK   Cancel

[tray icons]

❿

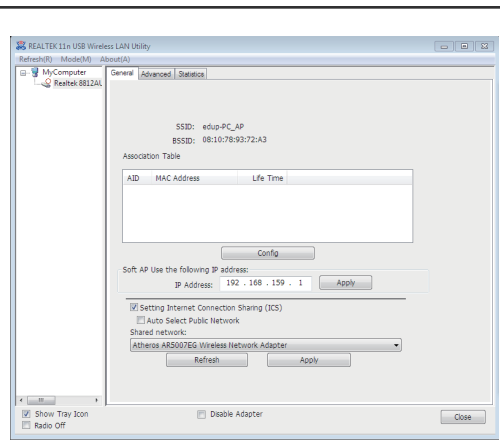## How to configure the AC1200 Dual Band Wireless USB Adapter?

Once the installation of drive software is completed, you can configure AC1200 Dual Band Wireless USB Adapter to connect a wireless network.

The wireless configure utility will start automatically, and y ou'll also find a tray icon [icon] in your Windows systems tray.Click the [icon] and your screen will be as below. Click the "MODE(M)" and switch to "Access Point". Select this option to use the Utility as an access point and to set up a wireless network as your own.
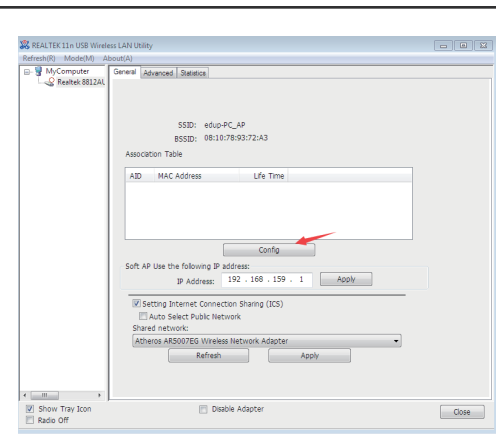
⑪

REALTEK 11n USB Wireless LAN Utility

And your screen will be as below.
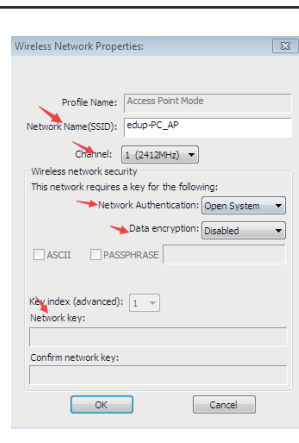
⑫

REALTEK 11n USB Wireless LAN Utility

Click the "config" and you can set up the "Network Name" "Channel " "Network Authentication Data encryption" and "Network key". Then click "OK" and you can use the "Access Point" mode.

⑬

REALTEK 11n USB Wireless LAN Utility

⑭

Wireless Network Properties

Profile Name: Access Point Mode
Network Name(SSID):   edup-PC_AP
Channel: 1 (2412MHz)

Wireless network security
This network requires a key for the following:
Network Authentication: Open System
Data encryption: Disabled

☐ ASCII   ☐ PASSPHRASE

Key index (advanced):   1
Network key:

Confirm network key:

OK   Cancel

1.The channel＞13 is 5G wireless network and the channel ≤13 is 2.4G wire network.
2.The wifi adapter can create a 2.4G access point or a 5G access point if your computer connect to internet by Ethernet cable.

⑮