

※ 본 매뉴얼의 Web Part는 직접 작성하였으며, 해당 제품의 Web Console과 Android App 일부 기능을 담당하였습니다

UBio-N Face Mini

User's Guide v1.1



Revision History

Version	Date	Description	Firmware Version
v1.0	2024-08-01	Initial Release	v000.002
v1.1	2024-09-12	Template Modification Environment Setup Update	v000.003

Table Of Contents

1 Before Use

This document provides information on how to configure and use the UBio-N Face Mini for access control solutions.



1.1 Safety Precautions

● Warning

Handling with wet hands or allowing liquid to flow into it is prohibited. -> It may cause an electric shock or damage. 	Do not place a fire source near the terminal. -> It may cause a fire. 
Do not disassemble, repair, or modify the terminal at discretion. -> It may cause an electric shock, fire or damage. 	Keep out of reach of children. -> It may cause an accident or damage. 

- If the above warning is ignored, it may result in death or serious injury.


● Cautions

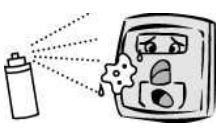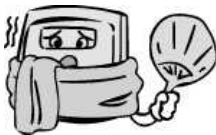Keep away from direct sunlight -> It may cause deformation or color change. 	Avoid high humidity or dust -> The terminal may be damaged. 
Avoid using water, benzene, thinner, or alcohol for cleaning -> It may cause an electric shock or fire. 	Do not place a magnet close to the terminal. -> The terminal may break down or malfunction. 
Do not contaminate the fingerprint input area. -> Fingerprints may not be well recognized. 	Avoid using insecticide or flammable spray near the terminal. -> It may result in deformation or color change. 
Avoid impacts or using sharp objects on the terminal. -> The terminal may be damaged and broken. 	Avoid severe temperature changes -> The terminal may be broken. 

- If the above cautions are ignored, it may result in property loss or human injury.

※ Under no circumstances will UNION COMMUNITY be responsible for accidents or damages caused by inappropriate use of the product without referring to the user manual.

1.2 Specific Names of the Terminal

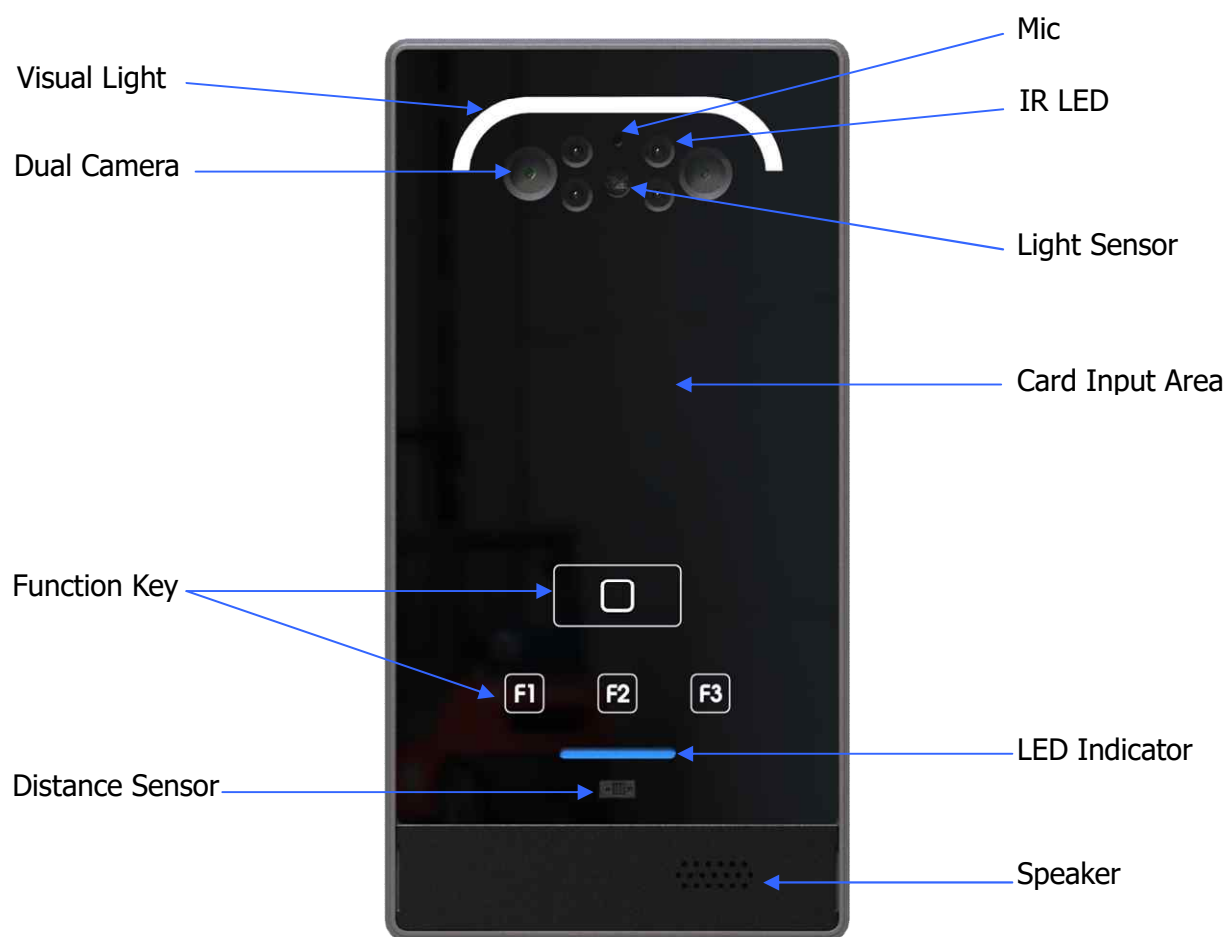

2 Product Introduction

This section outlines the key features and technical specifications of the UBio-N Face Mini, highlighting its performance, capabilities, and components.

2.1 Product Characteristics

- Face recognition device for office and home use
- Applied with 5M camera
- Anti-Spoofing possible with dual camera (color & IR)
- RF (125kHz) and Smart Card (13.56MHz) Reader can be used together
- Access control system using network (LAN)
- Simple design

2.2 Specifications

구 분	SPEC	REMARK	
CPU	Cortex A53 Quad Core 1.8GHz)		
MEMORY	eMMC 32GByte		
	LPDDR4 / 4GByte x 1EA		
USB Interface	USB2.0 C-Type OTG 1port	FW DOWNLOAD	
Camera	5MPixel Dual Camera (Color & IR)		
Wireless	Bluetooth LE		
Audio	Max 1W Speaker		
Temperature / Humidity	-20 ~ 50°C / Lower than 90% RH		
AC / DC Adapter	INPUT : Universal AC100 ~ 250V		
	OUTPUT : DC 24V		
PoE	IEEE802.3at PD, 24W (24V, 1A)		
Lock Control	EM, Strike, Auto Door		
I/O	1 Input, 1 Output		
Communication Port	TCP/IP (10/100/1000Mbps)		
	RS-232	Console	
	RS-485		
	Wiegand In/Out		
Card Reader	125KHz EM & 13.56MHz Smart Card Reader, ISO14443A/B, MiFare, MiFare Plus, Felica, ISO15693, HiD iCLASS(option), HiD Prox(option)		
ToF Sensor	60Hz, 400cm, 8x8 Multizone		
SIZE	85 x 165 x 41 (mm)		

3 Environment Settings

This section covers the essential environment settings required for proper system operation. It includes network configurations, hardware setups, and software compatibility checks. Ensure each step is followed carefully for successful setup.

3.1 Pre-Installation Checklist

Before installation, ensure all prerequisites are met to avoid setup issues. This checklist covers hardware, software compatibility, and network settings to help ensure a smooth installation.

3.1.1 Setting Network Information

Generate QR Code using NEC Initializer.

NEC Initializer

Network Type

☒ DHCP ☐ STATIC

IP Address

192.168.0.2

SubnetMask

255.255.255.0

Gateway

192.168.0.1

DNS1

8.8.8.8

DNS2

4.4.4.4

GENERATE



NEC Initializer Screen


Generated QR Code

Touch the F1 and F2 buttons on the UBio-N Face Mini for 8 seconds to change to QR recognition mode.


Change the network settings by recognizing the QR Code with the front camera.

3.1.2 Access the settings

Connect to UBio-N Face Mini by entering network information in a web browser.

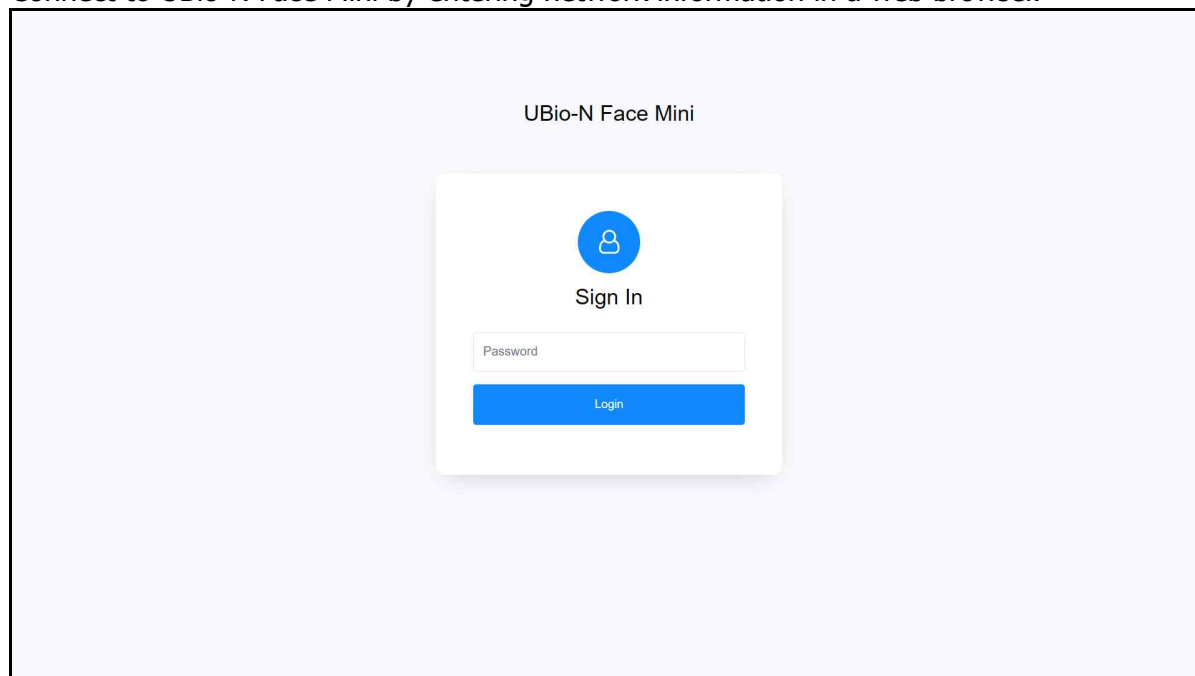

The connection port is 8080 and the initial password is 'admin'.

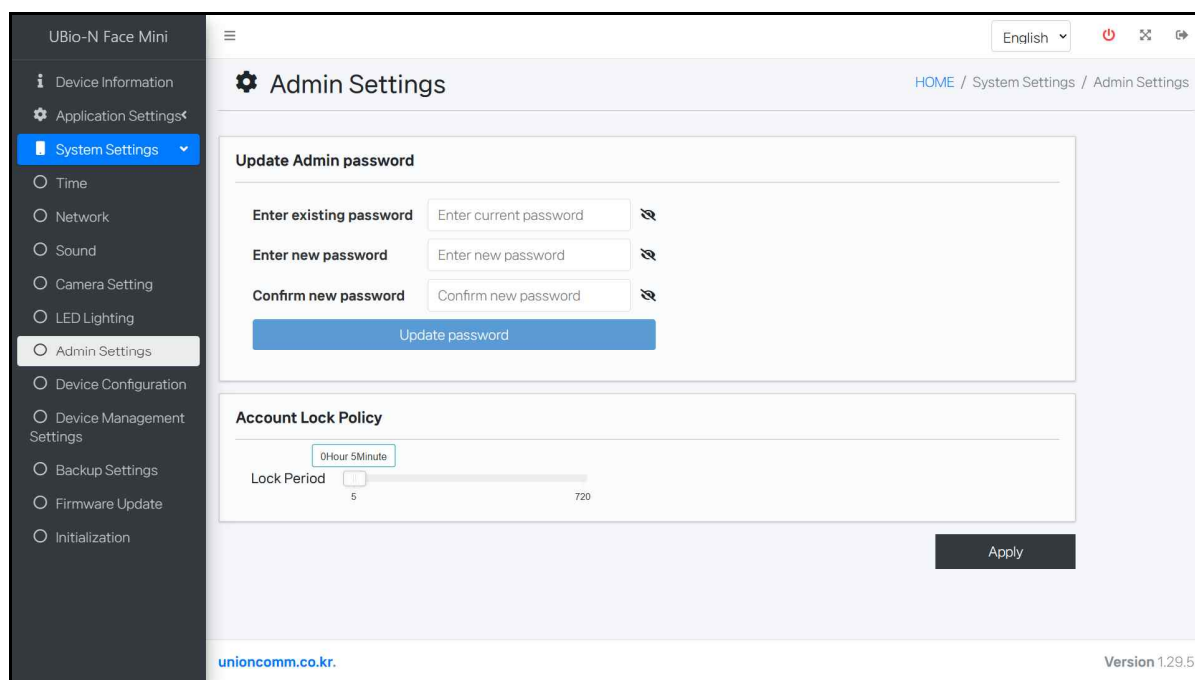


Change the initial password.


※ Other functions cannot be used until the password is changed.

3.1.3 Environment Settings Common Interface

This section explains the common UI elements of the environment settings screen in web browsers.

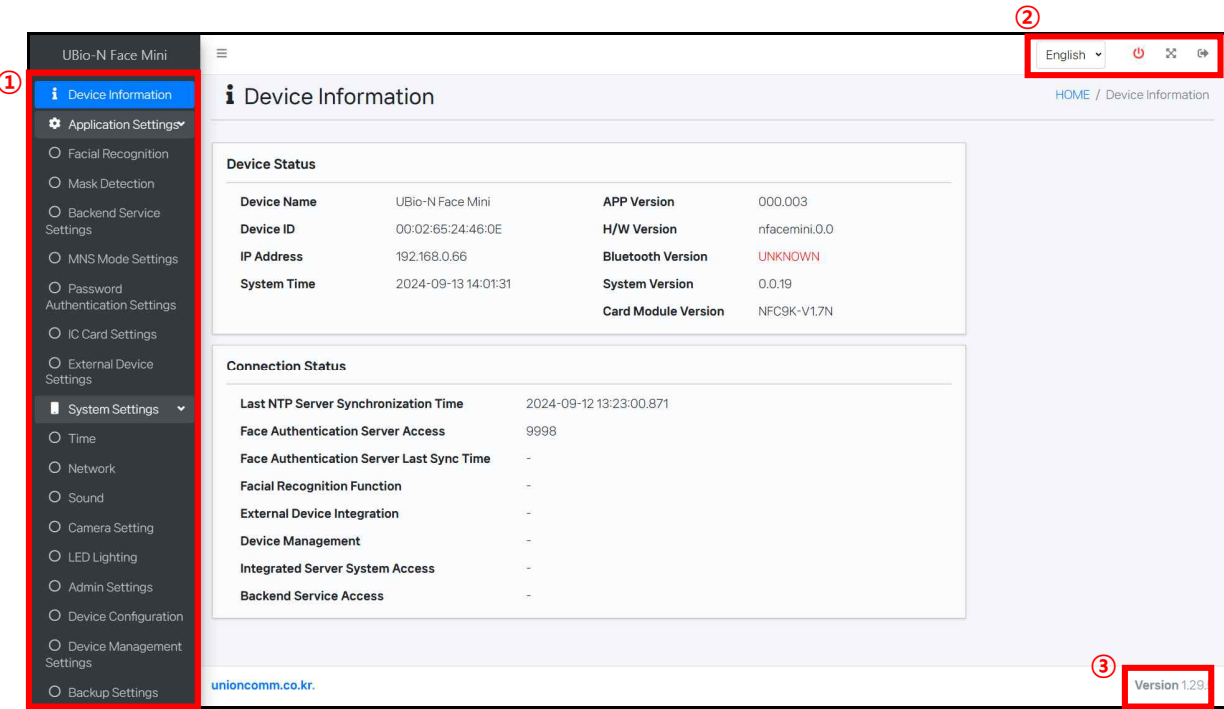

3.1.3 Device Information

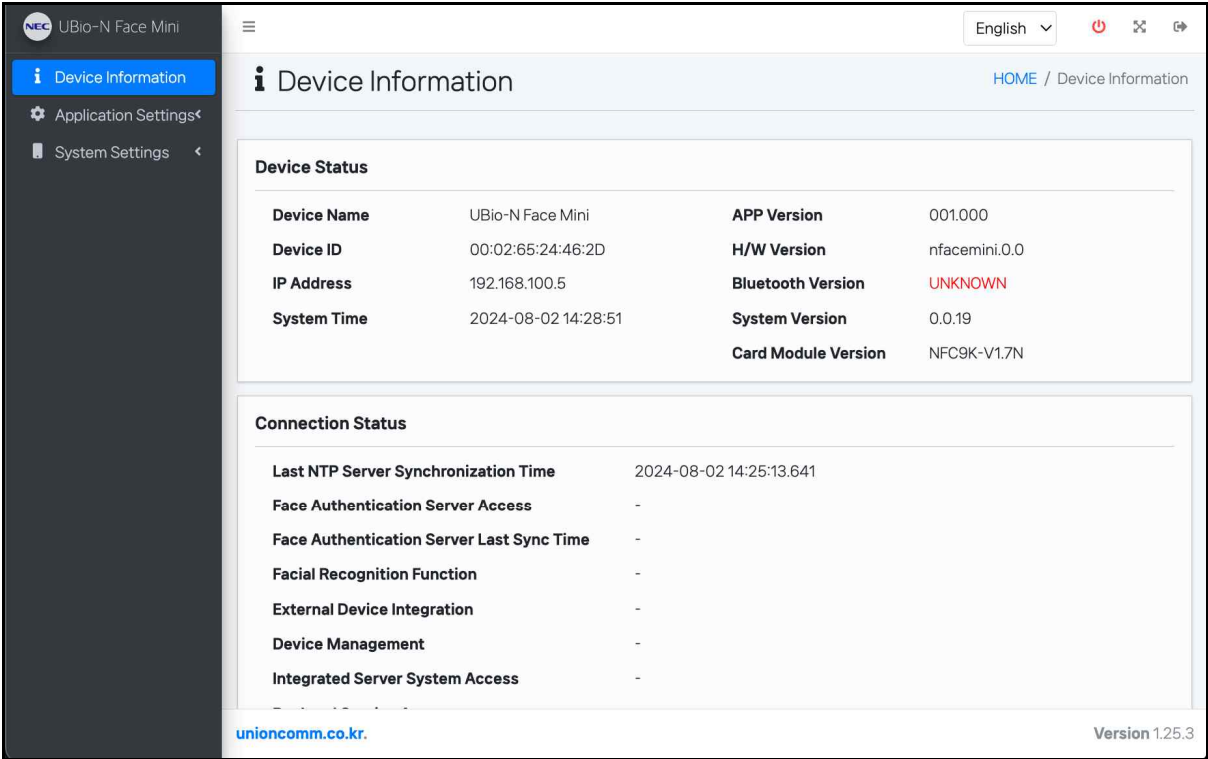


The Device's basic information is displayed.

3.2. Menu Tree

Device Information		▶ Device Status ▶ Connection Status
Application Settings	Authentication	▶ Authentication ▶ Detection Sensor Settings
	Facial Recognition	▶ Face Authentication Feature Settings ▶ Face Authentication Server Settings
	Mask Detection	▶ Mask Detection
System Settings	Time	▶ Time
	Network	▶ Network
	Sound	▶ Volume Setting ▶ Customizing Sound
	Camera Setting	▶ AE Setting ▶ Image Tuning
	LED Lighting	▶ LED Lighting
	Admin PW Update	▶ Update Admin password
	Device Configuration	▶ Device Configuration ▶ Terminal Management
	Firmware Update	▶ Firmware Update
	Initialization	▶ Reset application ▶ Reset system

3.3. Application

3.3.1. Authentication

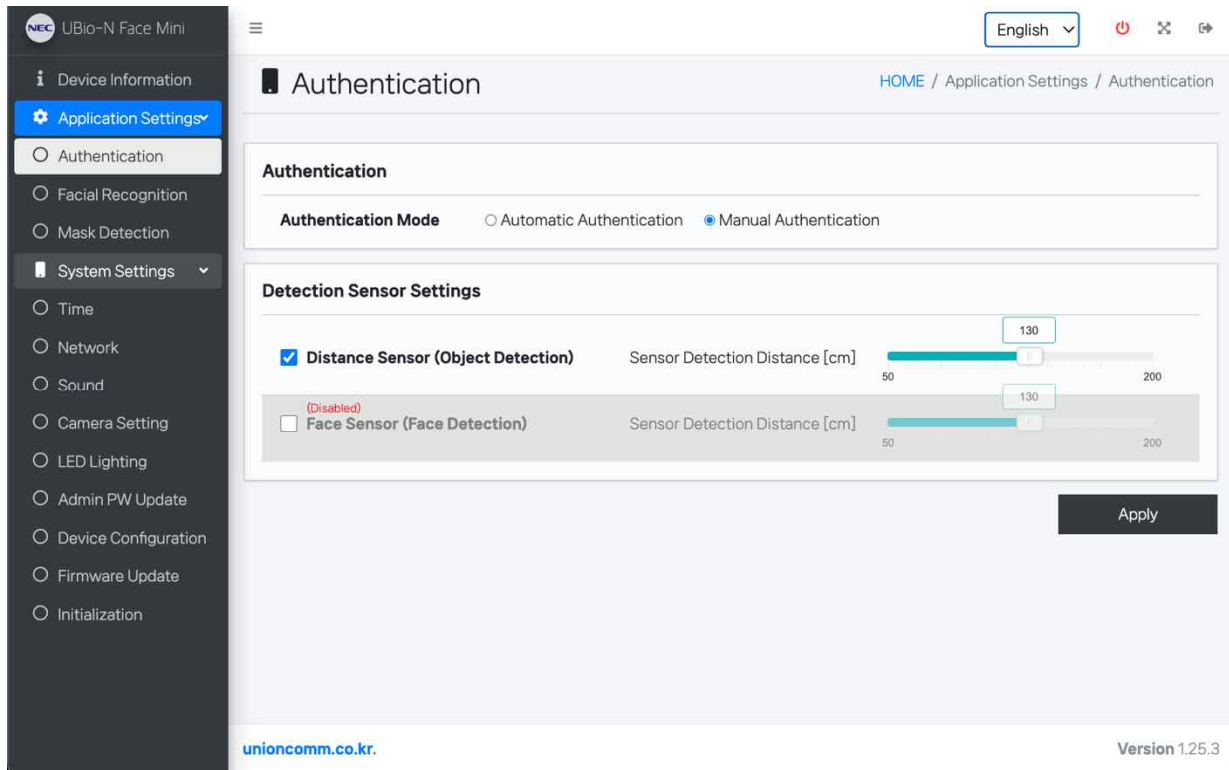

Set the authentication mode.

Automatic : After sensor recognition, automatically release the standby mode.

Manual : After sensor recognition, touch the button to release the standby mode.

Set the detection sensor.

Distance sensor: Set the recognition distance.

Face sensor: Set the recognition distance.

3.3.2. Facial Recognition

The image displays two screenshots of the UBio-N Face Mini web interface, specifically the 'Facial Recognition' settings page. The interface is in English and shows a sidebar menu on the left with options like Device Information, Application Settings, Authentication, Facial Recognition, Mask Detection, and System Settings. The main content area is divided into two sections: 'Face Authentication Feature Settings' and 'Face Authentication Server Settings'.

Face Authentication Feature Settings: This section includes several adjustable parameters:

- Authentication Area:** Set to 'WIDE' with a value of 29.
- Same User Authentications [Unit: sec]:** A slider ranging from 1 to 30, currently set at 29.
- Quick Authentication Mode:** Toggled ON.
- Anti-Spoofing:** Toggled ON.
- Anti-Spoofing Settings:** Set to 'Low'.
- Anti-Spoofing Alarm:** Toggled OFF.
- A-S Continuous Detection Count:** A slider ranging from 1 to 9, currently set at 60.
- Face Matching Settings (Default):** A slider ranging from 40 to 100, currently set at 90.
- Face Matching Settings (Mask):** A slider ranging from 40 to 100, currently set at 80.
- Face Detection Distance [Unit: cm]:** A slider ranging from 60 to 135, currently set at 135.

Face Authentication Server Settings: This section includes fields for:

- Server URL:** Set to 'what is this?'.
- UserName:** Set to 'myAdmin009'.
- UserPassword:** Set to '.....'.
- BIS WatchListIds:** A table with 5 entries: 1 (OMG), 2 (HELLO), 3 (WHO?), 4 (simple), and 5 (한국어).
- BIS WatchListCustomIds:** A table with 5 entries: 1 (OSGMG), 2 (HELLOWD), 3 (WHO?IS?), 4 (harder), and 5 (한국어101).


Both screenshots show the 'unioncomm.co.kr' logo and 'Version 1.25.3' at the bottom.

Configure settings related to face authentication.

Face Authentication Feature Settings: Configure settings for the face auth feature.

Face Authentication Server Settings: Configure settings for the face authentication server.

3.3.3. Mask Detection

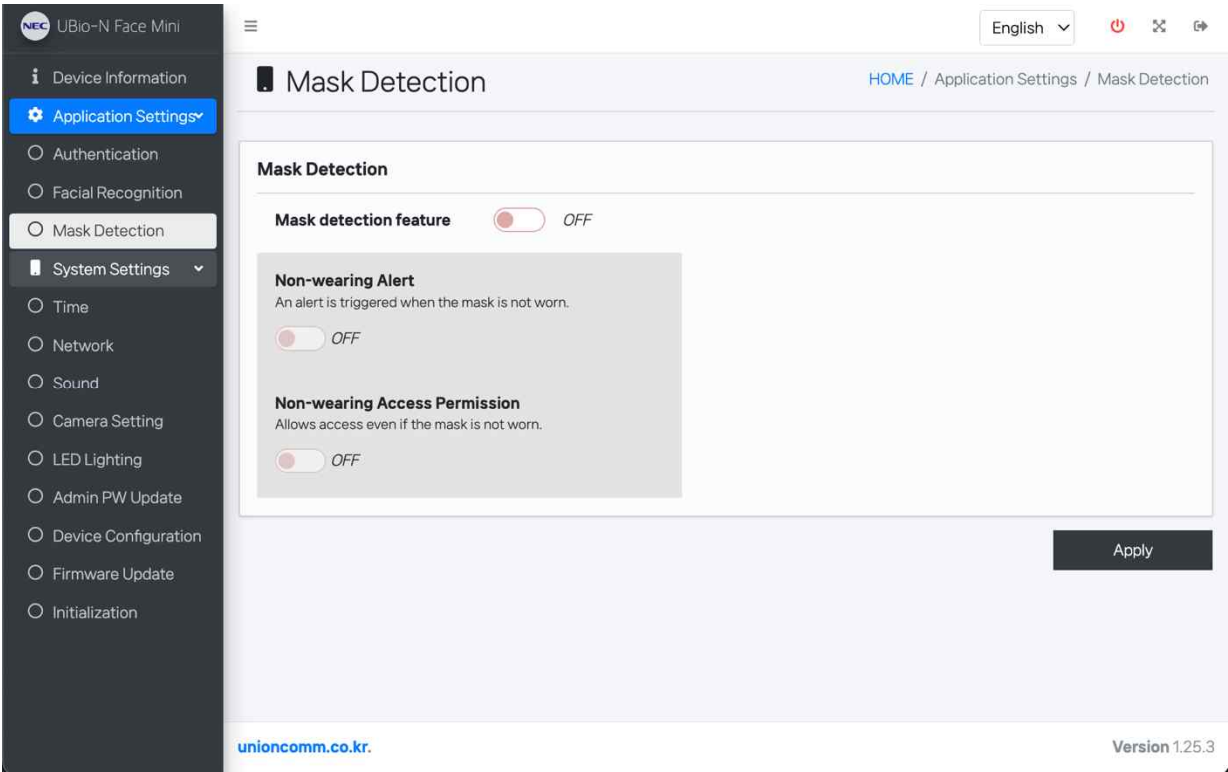

Configure settings related to mask detection.

Non-wearing Alert: An Alert is triggered when the mask is not worn.

Non-wearing Access Permission: Allow Access event if the mask is not worn.

3.4. System Settings

3.4.1. Time

UBio-N Face Mini

English

HOME / System Settings / Time

Time

Time Zone (Timezone) Asia/Tokyo

Automatic Time Setting ☒ ON

NTP Server 1 time.nist.gov

NTP Server 2 time.google.com

Manual Time Setting [Change Time](#)

Apply

unioncomm.co.kr

Version 1.25.3

Set the time zone and NTP server.

3.5.1. Network

UBio-N Face Mini

English

HOME / System Settings / Network

Network

☒ Automatically receive IP settings

☐ Use the following IP address (manual setting)

IP Address 192 . 168 . 0 . 2

Subnet Mask 255 . 255 . 255 . 0

Default Gateway 192 . 168 . 0 . 1

Primary DNS Server 8 . 8 . 8 . 8

Secondary DNS Server 4 . 4 . 4 . 4


Apply

unioncomm.co.kr

Version 1.25.3


Set network information.

3.5.2. Sound

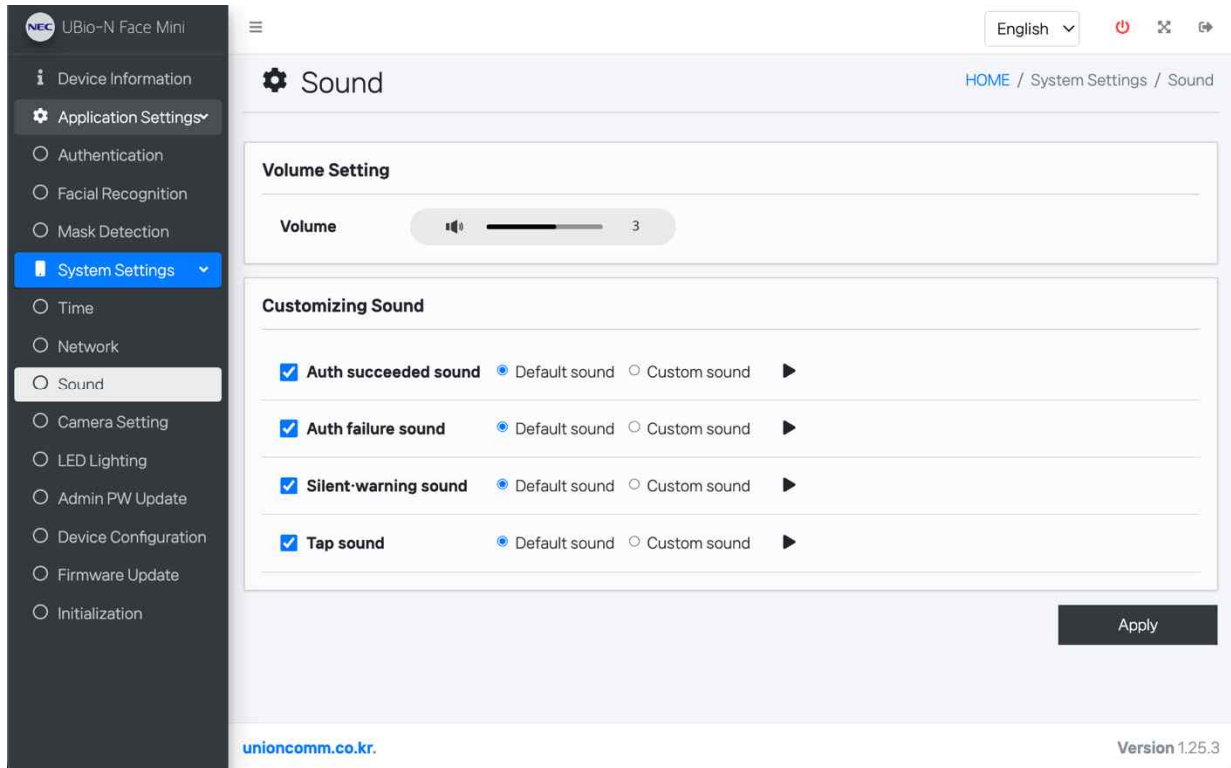


Set up the sound.

3.5.3. Camera Setting

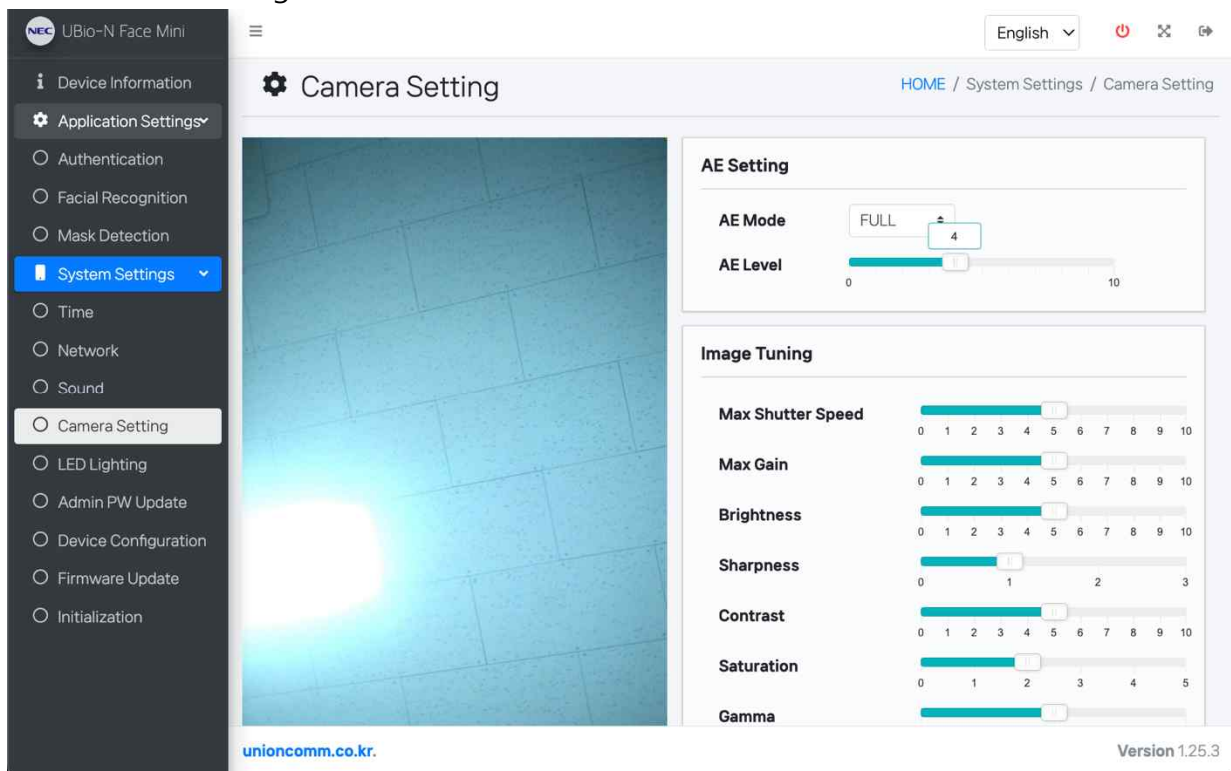


Set up the camera.

3.5.4. LED Lighting

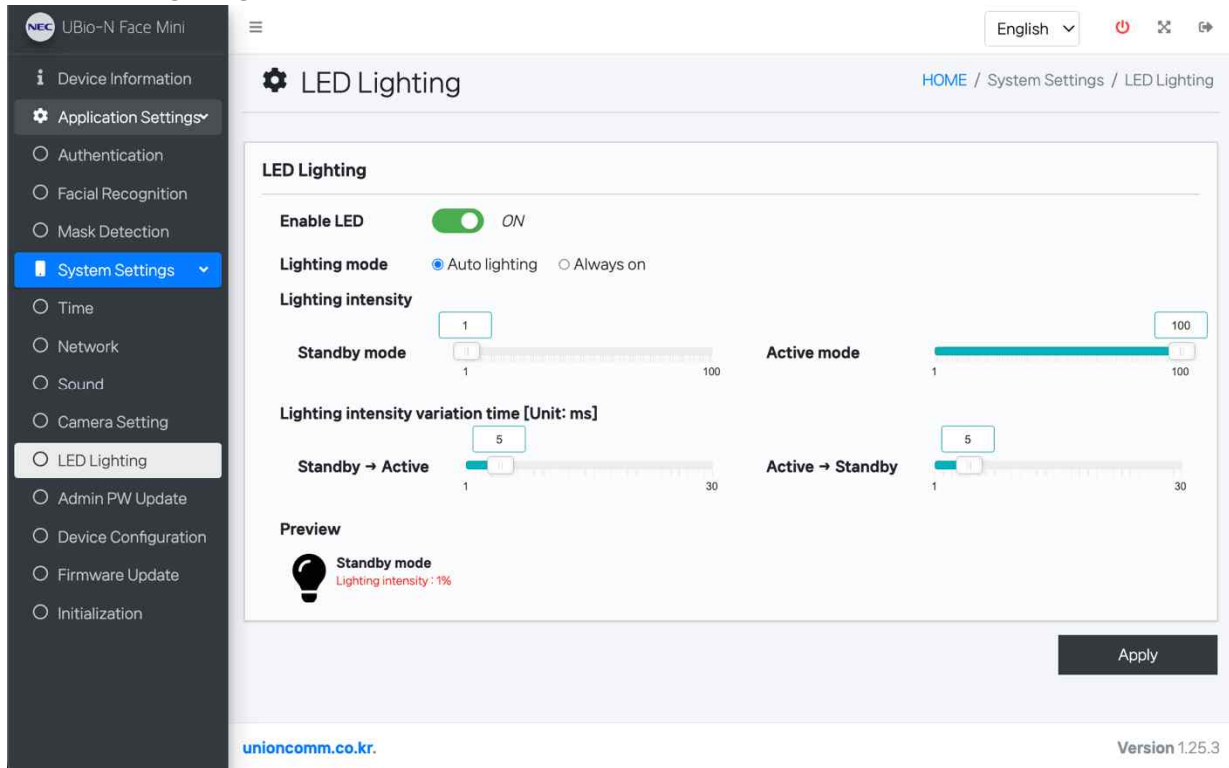


Set up the LED Light.

3.5.5. Admin PW Update

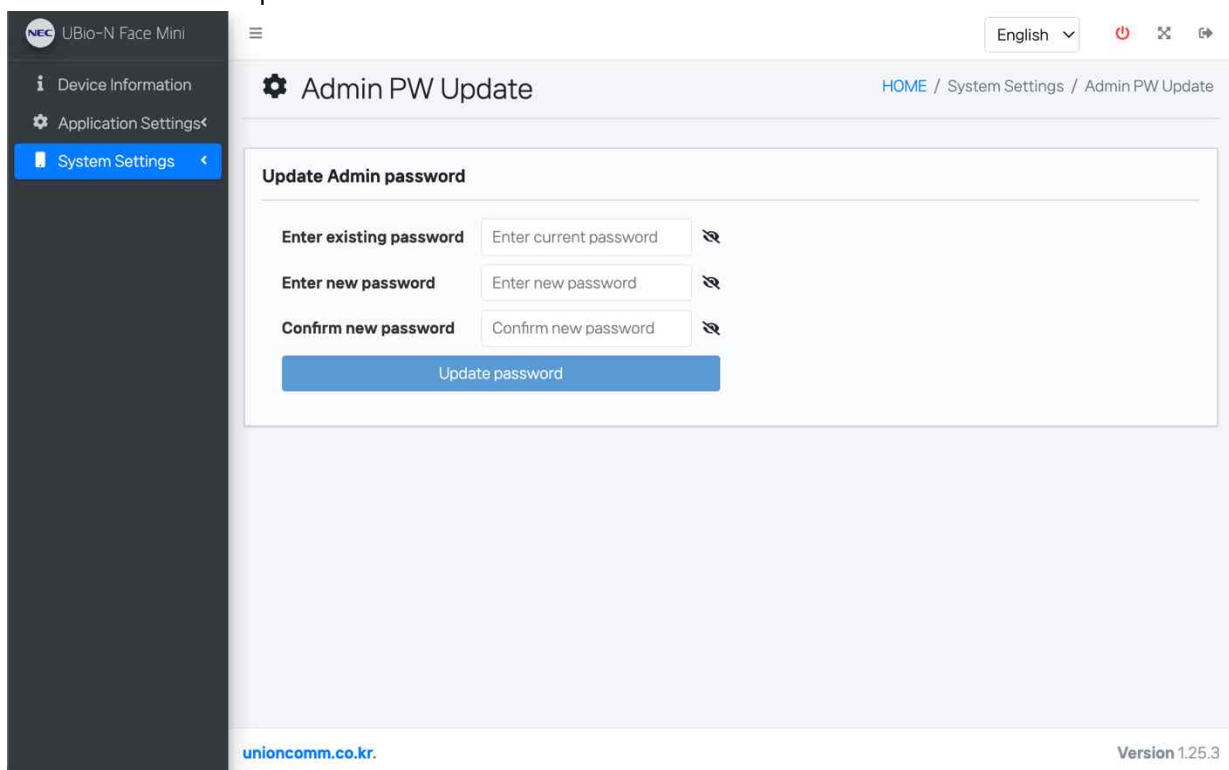


Change the admin password.

3.5.6. Device Configuration

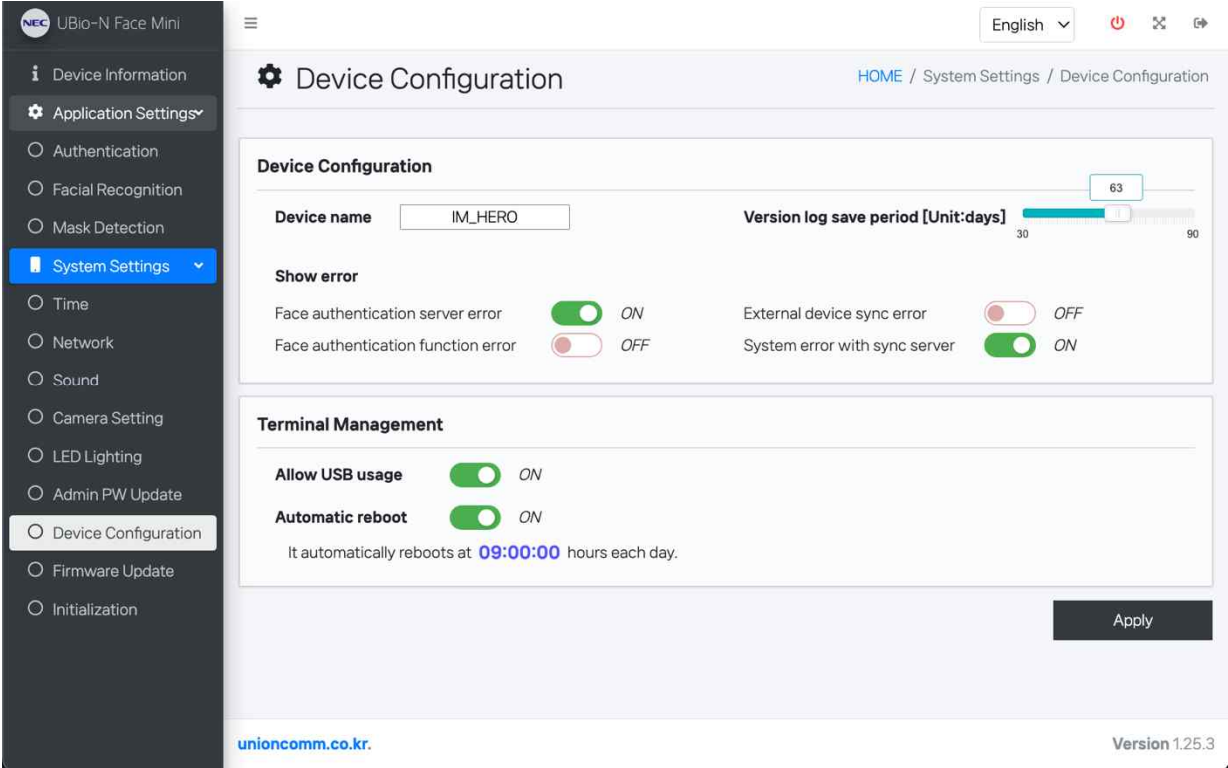

Change terminal settings.


3.5.7. Firmware Update

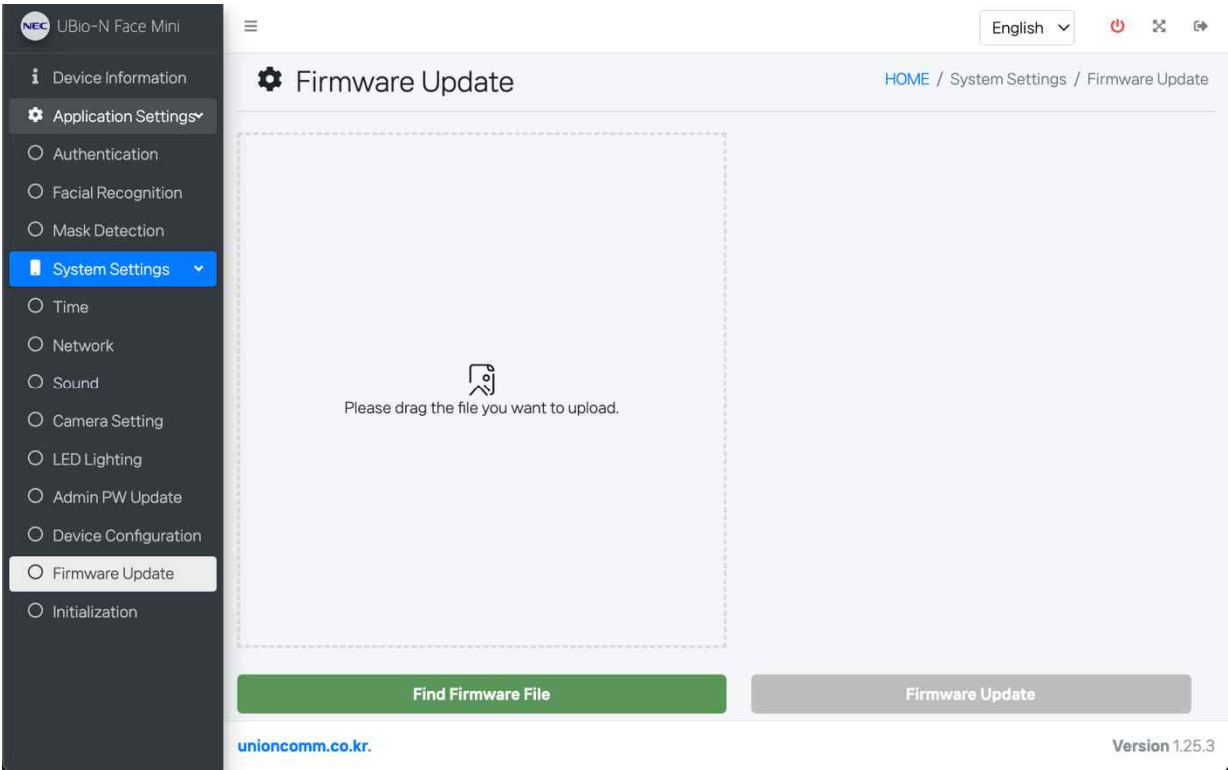

Update Firmware.



3.5.8. Initialization

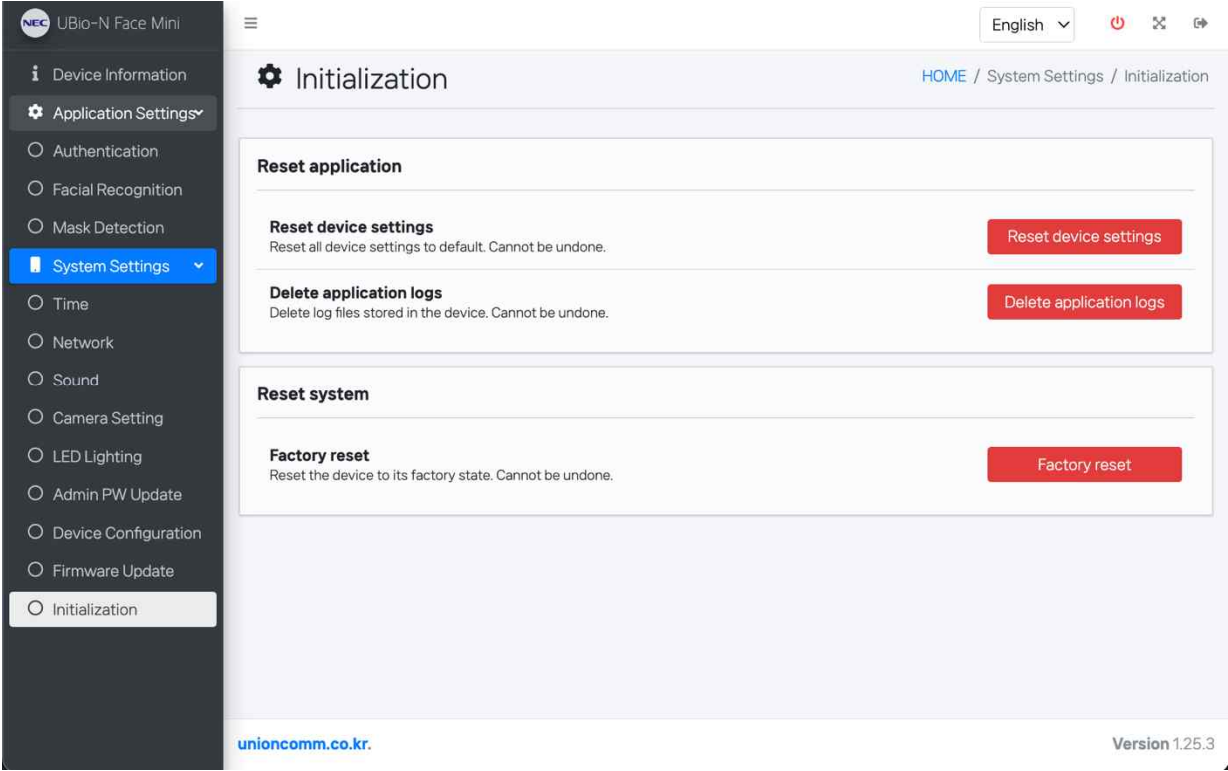

Initializes the terminal.