


WidowX AI

Servo #2-3 Cable Replacement Guide

**LOCTITE BOLTS DURING REASSEMBLY
UNLESS OTHERWISE STATED**

Servo ID

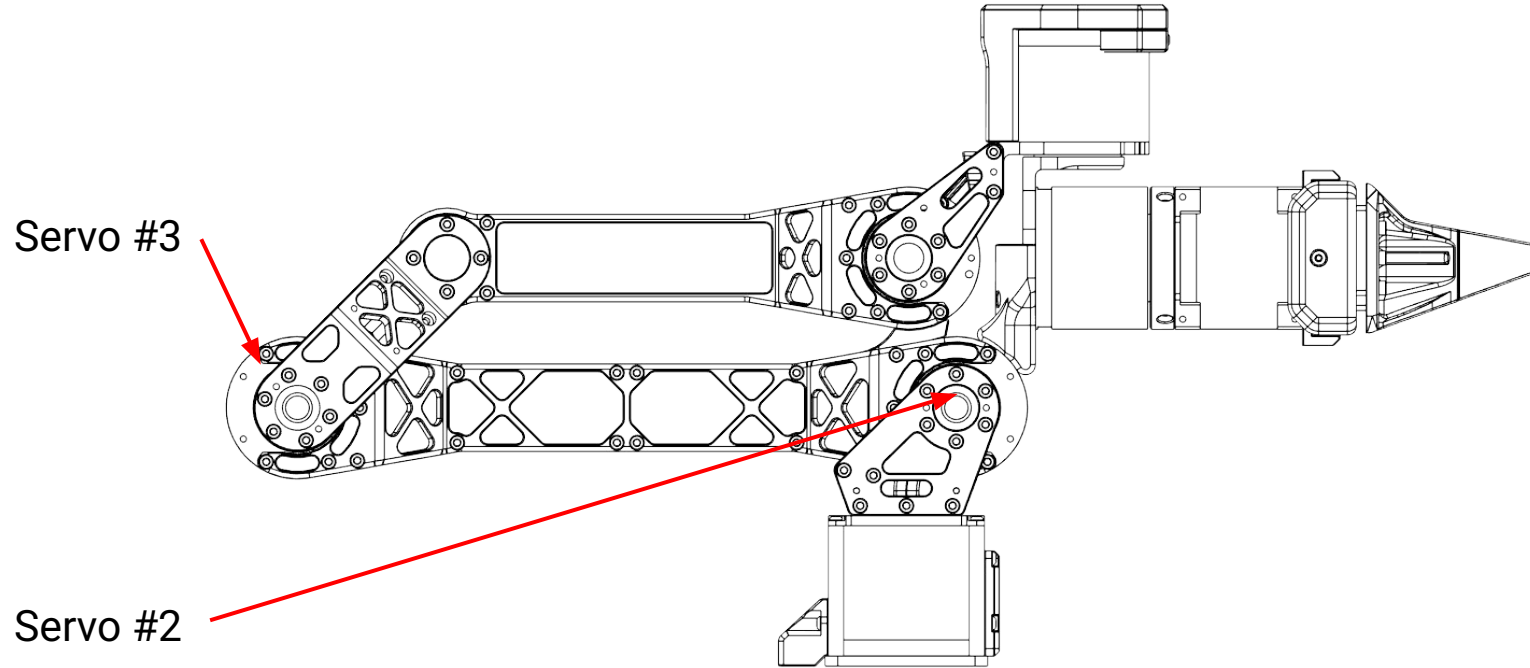


Remove Shroud Top

Parts:

- (12) M3 x 6s

**Use an M2.5 Driver to
remove bolts and set aside
for later*

**Rotate arm as needed to
access bolt heads*

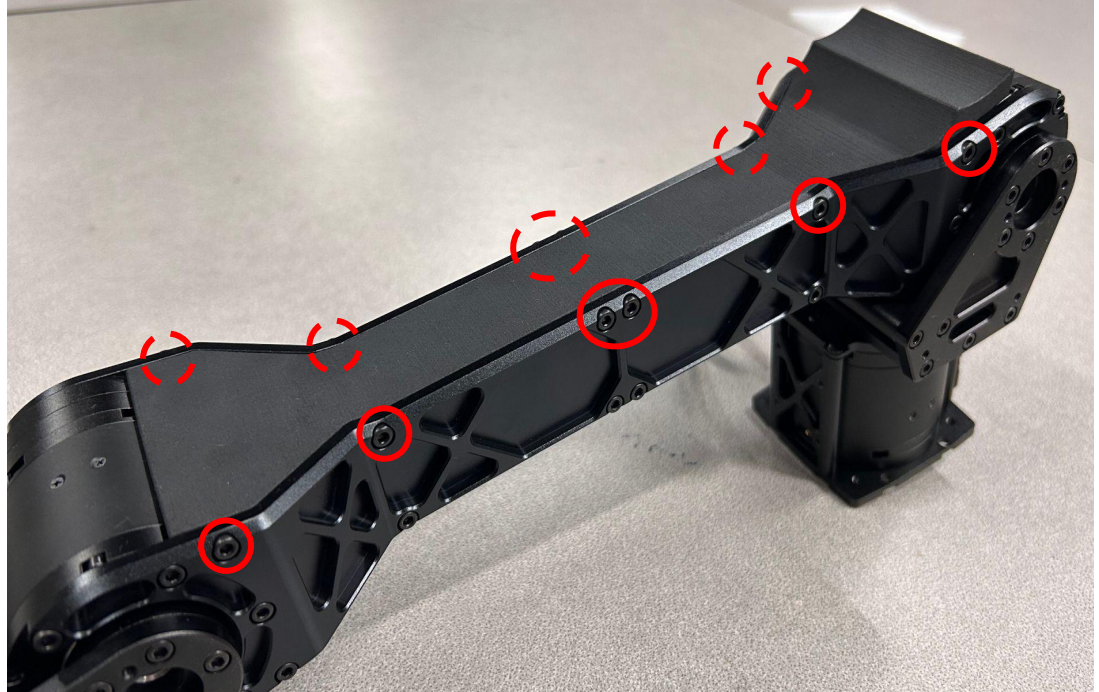


Disconnect Cable

Parts:

- *Straight-Straight 300mm Non-Braided Cable*

Disconnect 2-3 Cable from Servo #2

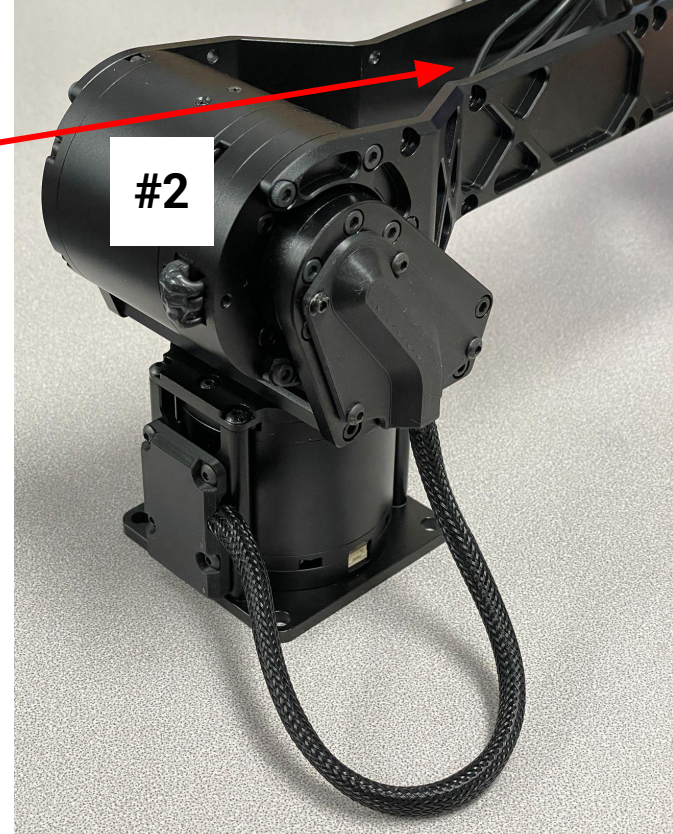

Disconnect Cable

Parts:

- *Straight-Straight 300mm Non-Braided Cable*

Disconnect 2-3 Cable from Servo #3



Grab Replacement Cable

Parts:

- *Straight-Straight 300mm Non-Braided Replacement Cable*

Set aside faulty cable and prepare replacement cable for use

**Both ends can be installed on either servo*



Connect Replacement Cable to Servo #3

Parts:


- *Straight-Straight 300mm Non-Braided Replacement Cable*



Connect Replacement Cable to Servo #2

Parts:

- *Straight-Straight 300mm Non-Braided Replacement Cable*

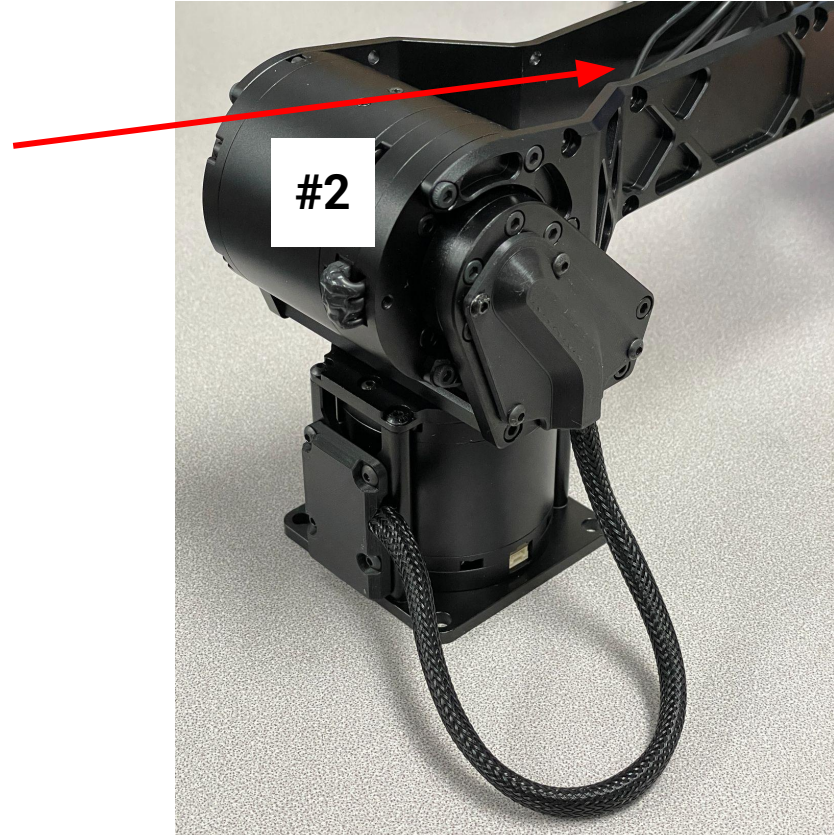

Attach Shroud Top

Parts:

- (12) M3 x 6s

**Use an M2.5 Driver to attach bolts*

**Rotate arm as needed to access bolt heads*

