


WidowX AI

Servo #5 - Y-PCB

Cable Replacement Guide

**LOCTITE BOLTS DURING REASSEMBLY
UNLESS OTHERWISE STATED**

Servo ID

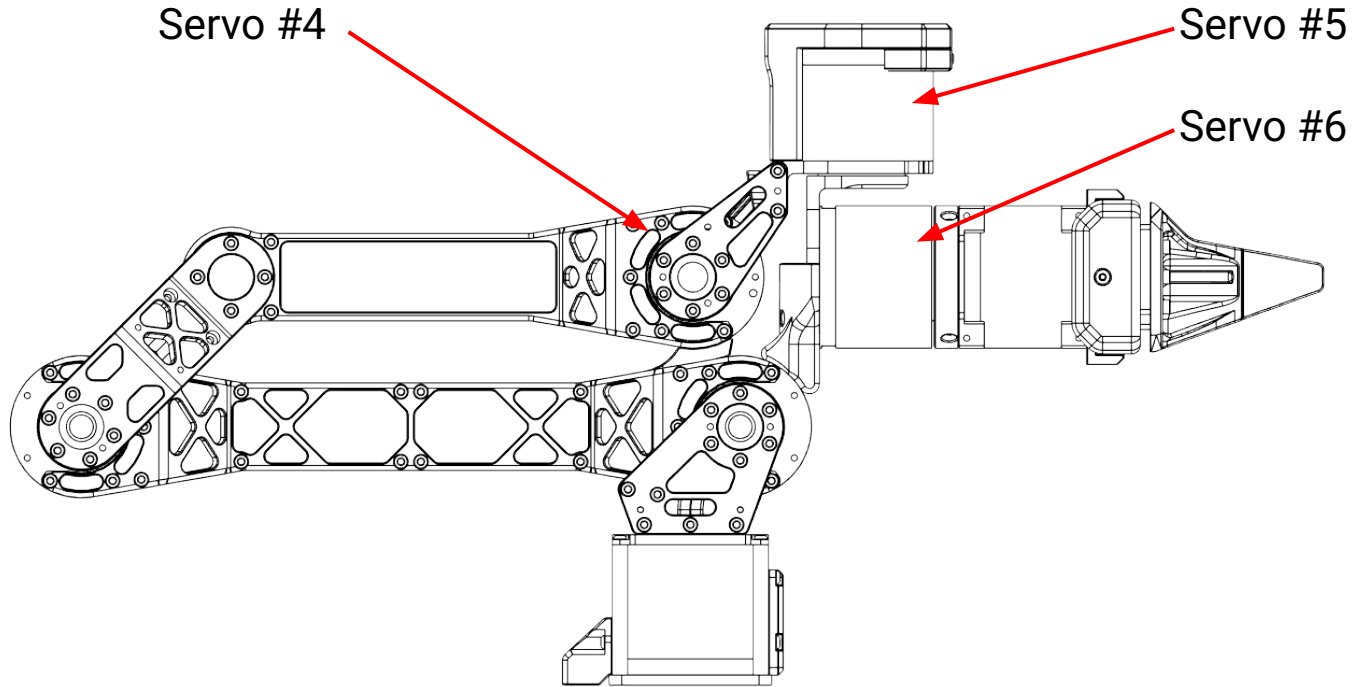

Remove Y-PCB Cable Lock from Servo 5

Parts:

- (2) M3 x 6b

**Use an M2 Driver to
remove bolts*




Remove Y-PCB Shroud

Parts:

- (2) M3 x 12s

**Use an M2.5 Driver to
remove bolts*

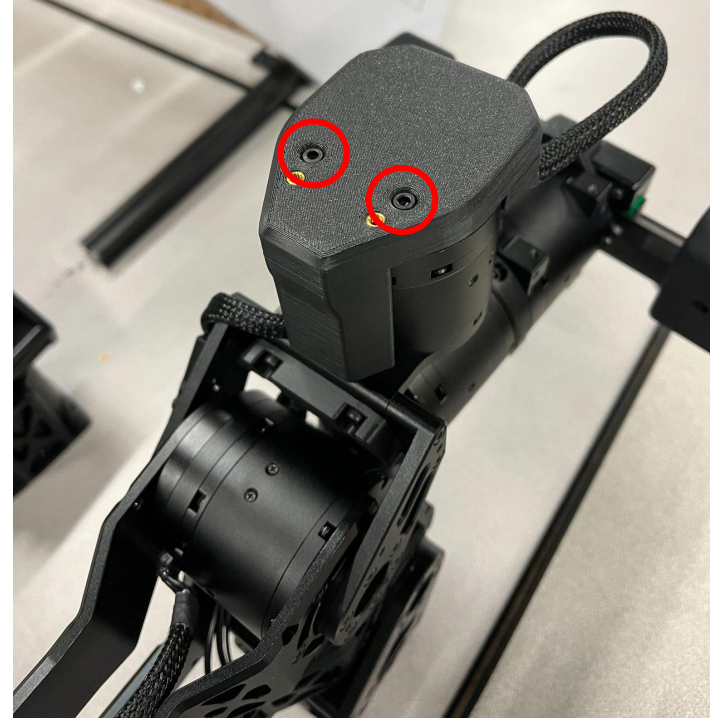


Remove Y-PCB Assembly

Parts:

- Y PCB Shroud
- Y Split PCB with Cables
- Y PCB Shim 1mm

*Disconnect the 35mm cable from Servo 5 (**SEE RED ARROW**)

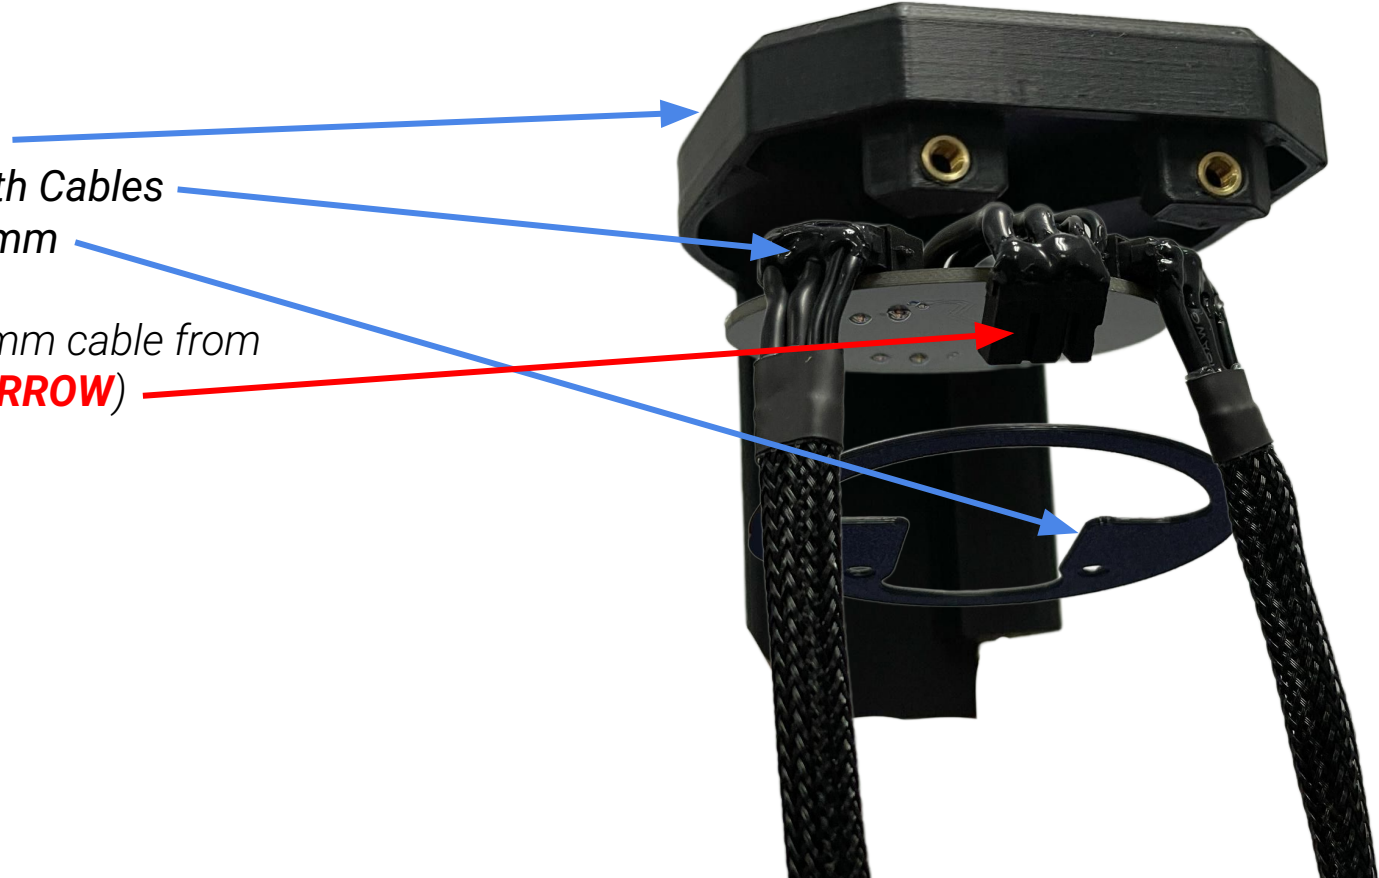

Replace Cable

Parts:

- *Down-Straight 35mm Non-Braided*

**Replace the 35mm cable*



Attach Y-PCB to Servo 5

Parts:

- Y-PCB Shroud
- Y-Split PCB with Cables
- Y-PCB Shim 1mm

**Ensure the PCB Stack is in the order shown in photo.*

**Ensure all cables are tightly secured into the PCB and their respective servos.*

**Connect 35mm Cable to Servo 5*




Attach Y-PCB Shroud to Servo 5

Parts:

- (2) M3 x 12s

**Use an M2.5 Driver to install bolts*

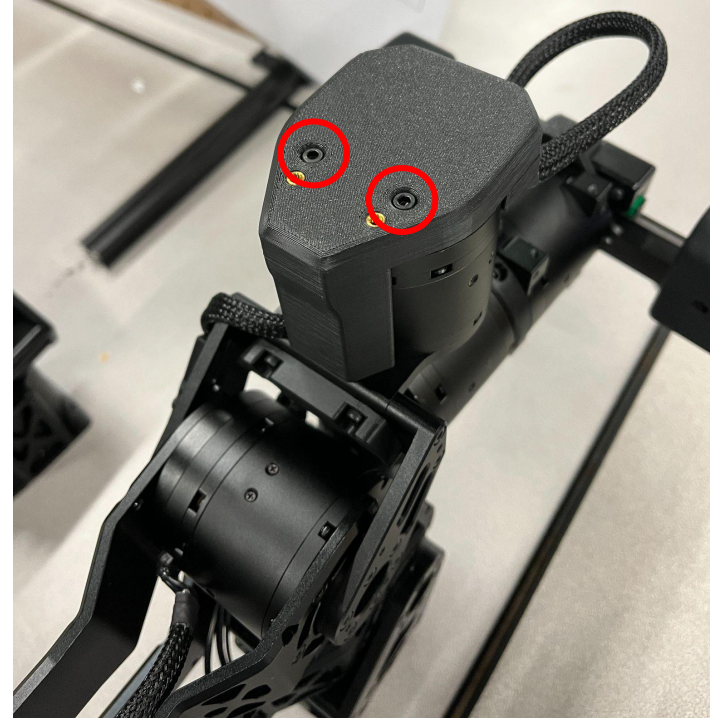

Attach Y-PCB Cable Lock to Y-PCB Shroud

Parts:

- (2) M3 x 6b

**Use an M2 Driver to install bolts*

****NO** Loctite*

