


WidowX AI

Servo #6 - Y-PCB

Cable Replacement Guide

**LOCTITE BOLTS DURING REASSEMBLY
UNLESS OTHERWISE STATED**

Servo ID

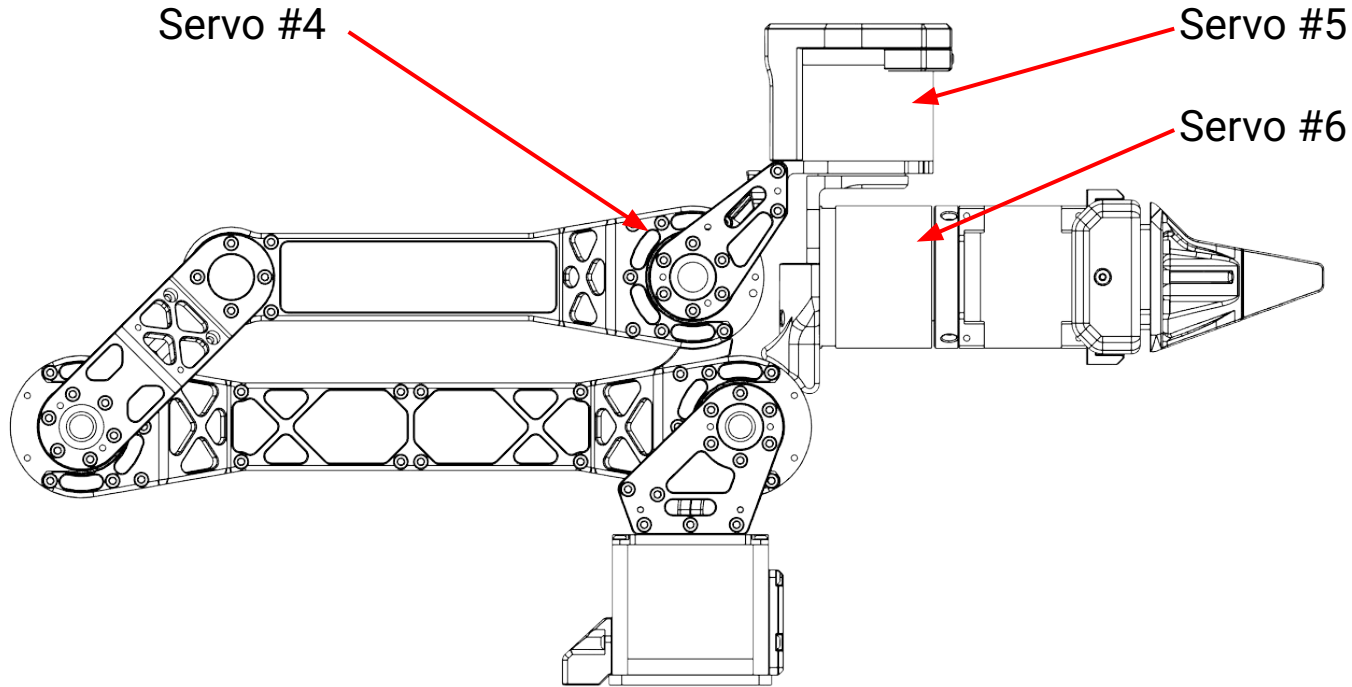

Remove Y-PCB Cable Lock from Servo 5

Parts:

- (2) M3 x 6b

**Use an M2 Driver to remove bolts and set aside for later*




Remove Y-PCB Shroud bolts

Parts:

- (2) M3 x 12s

**Use an M2.5 Driver to remove bolts
and set aside for later*

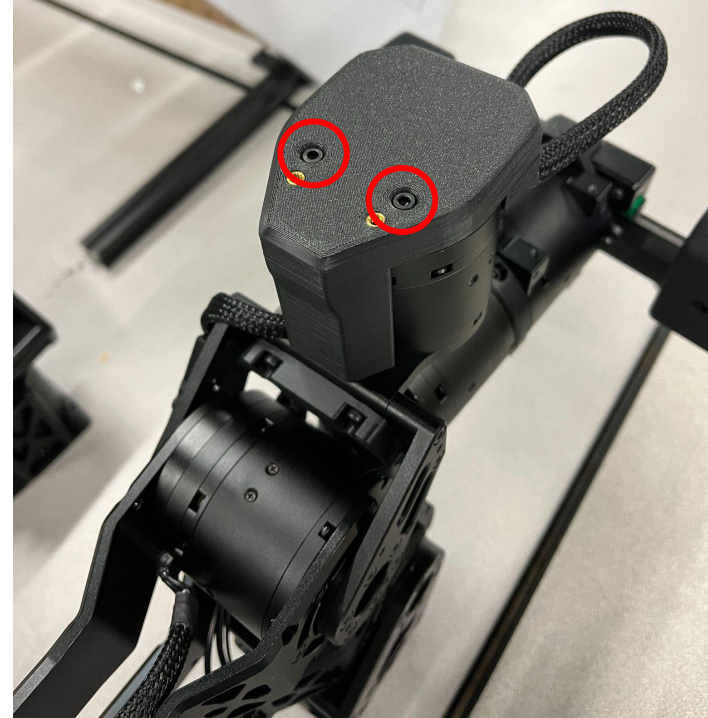


Remove Y-PCB Assembly

Parts:

- Y PCB Shroud
- Y Split PCB with Cables
- Y PCB Shim 1mm

*Disconnect the 35mm cable from Servo 5 (**See Red Arrow**)

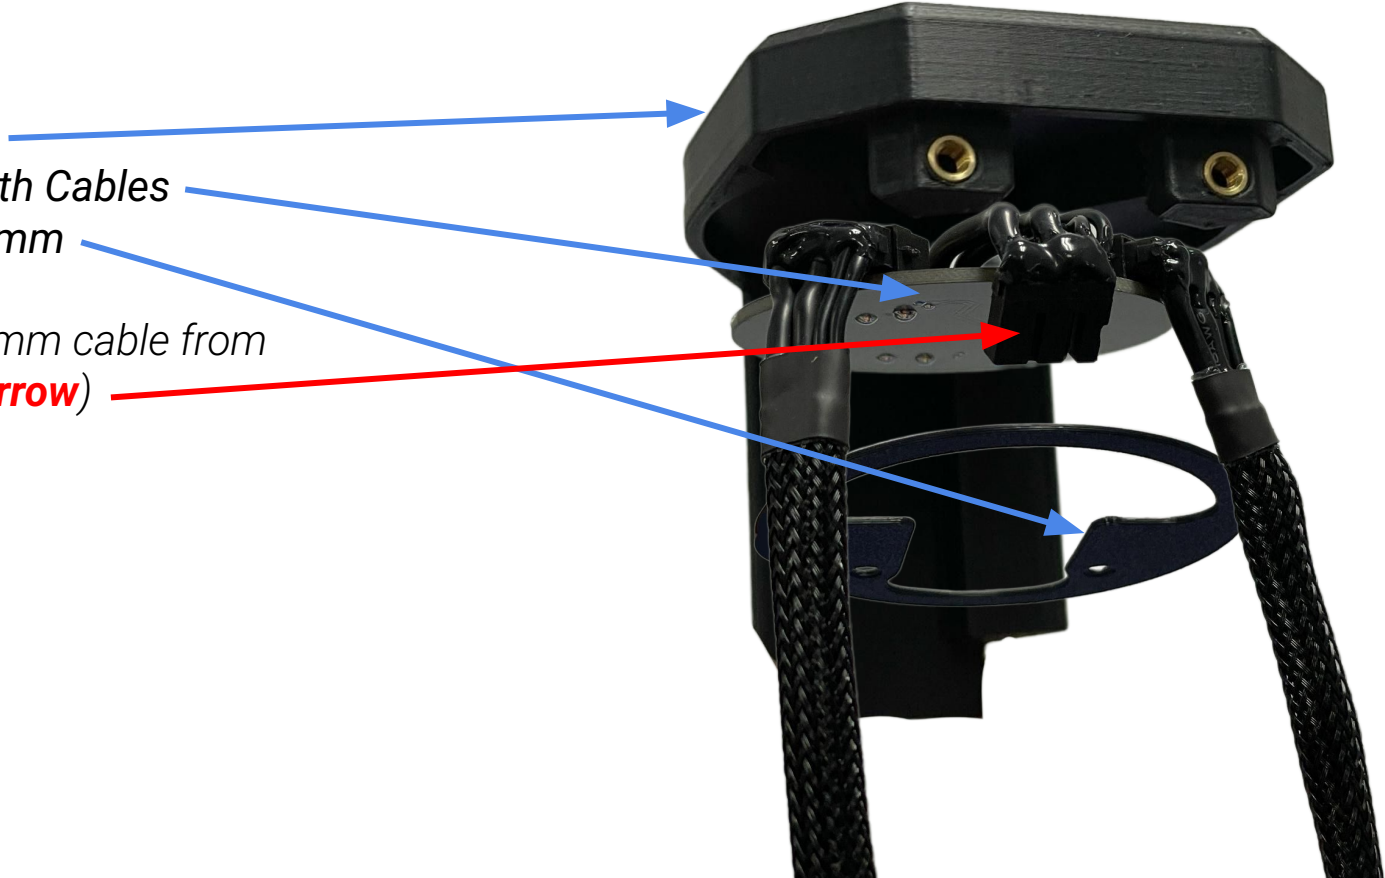


Remove Homing Bumper

Parts:

- (2) M3 x 6s

**Use an M2.5 Driver to remove the bolts and set aside for later*

**Remove the Homing Bumper*

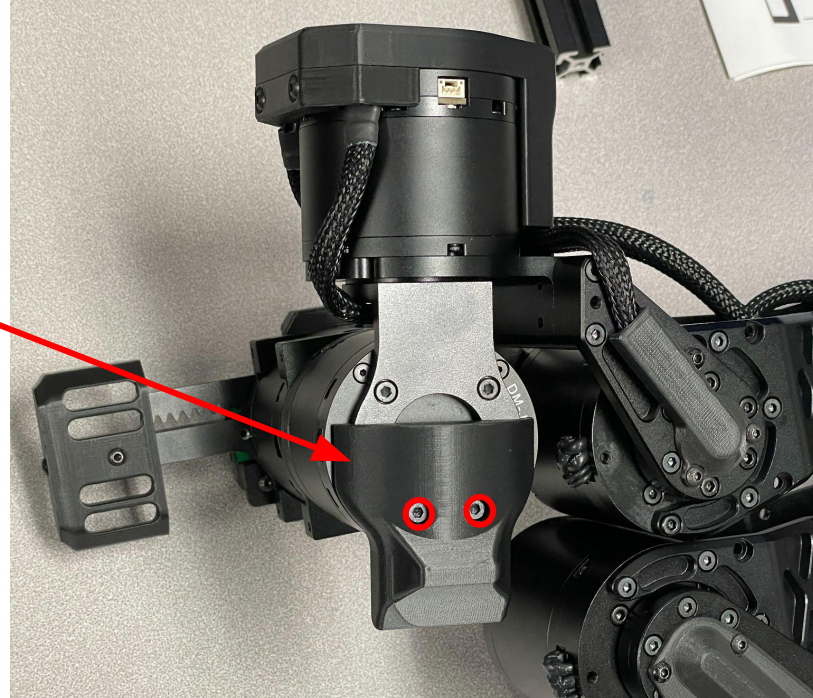


Remove Gripper Assembly

Parts:

- *Up-Up 110mm Braided*
- *(4) M3 x 6s*

**Use an M2.5 Driver to remove the bolts and set aside for later*

**Unplug Cable that goes from the Y-PCB to Servo #6*

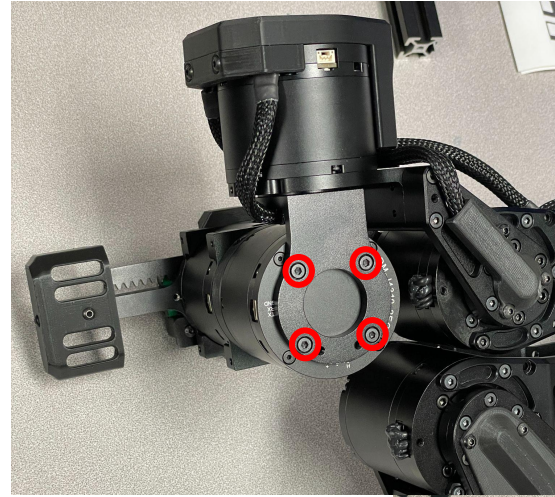

Replace Cable

Parts:

- *Up-Up 110mm Braided*

**Replace the 110mm cable*



Attach Gripper Assembly




Parts:

- Up-Up 110mm Braided
- (4) M3 x 6s

**Connect cable before mounting gripper.*

**Use an M2.5 Driver to install the bolts*

***MIND ORIENTATION - JST PORTS MUST
MATCH BLUE CIRCLES IN PHOTO**

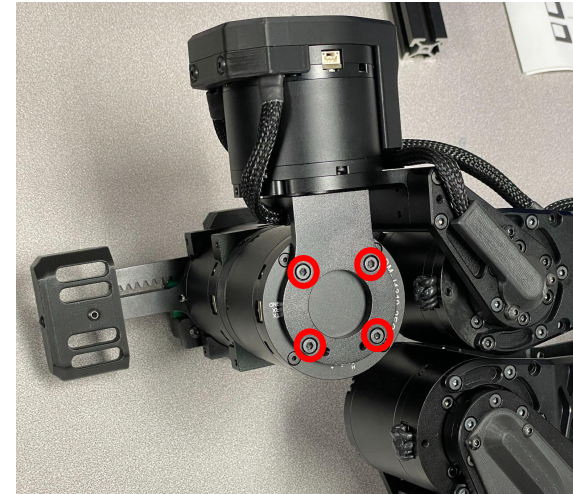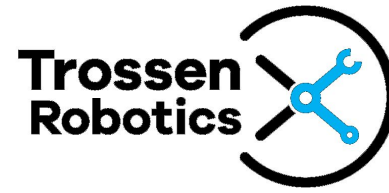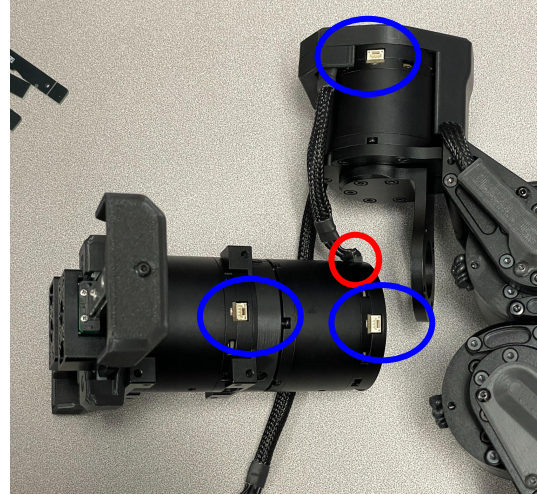


Attach Homing Bumper

Parts:

- (2) M3 x 6s

**Use an M2.5 Driver to install bolts and attach the Homing Bumper*

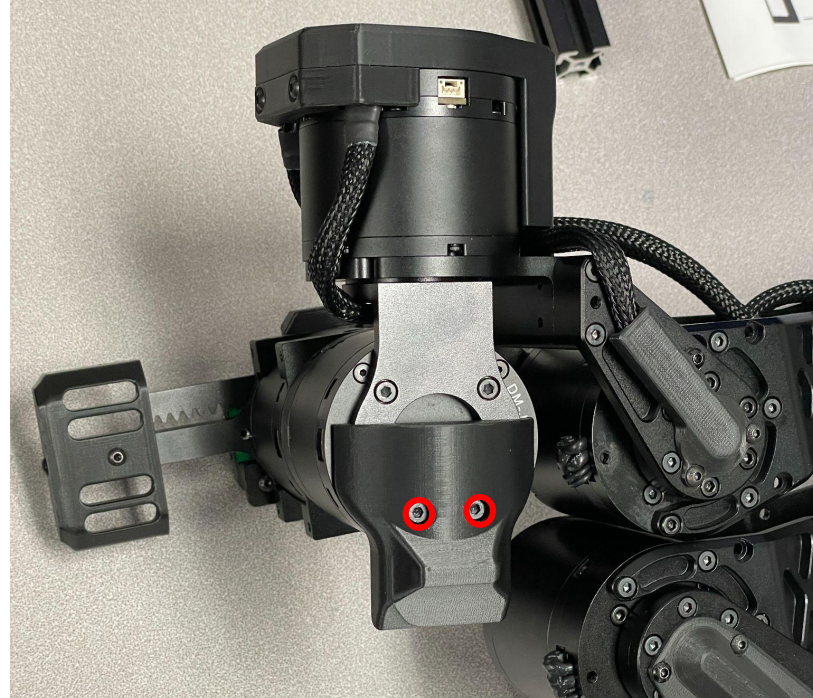

Attach Y-PCB to Servo 5

Parts:

- Y PCB Shroud
- Y Split PCB with Cables
- Y PCB Shim 1mm

**Ensure the PCB Stack is in the order shown in photo.*

**Ensure all cables are tightly secured into the PCB and their respective servos.*

**Connect 110mm Cable to Servo 6*




Attach Y-PCB Shroud to Servo 5

Parts:

- (2) M3 x 12s

**Use an M2.5 Driver to install bolts*

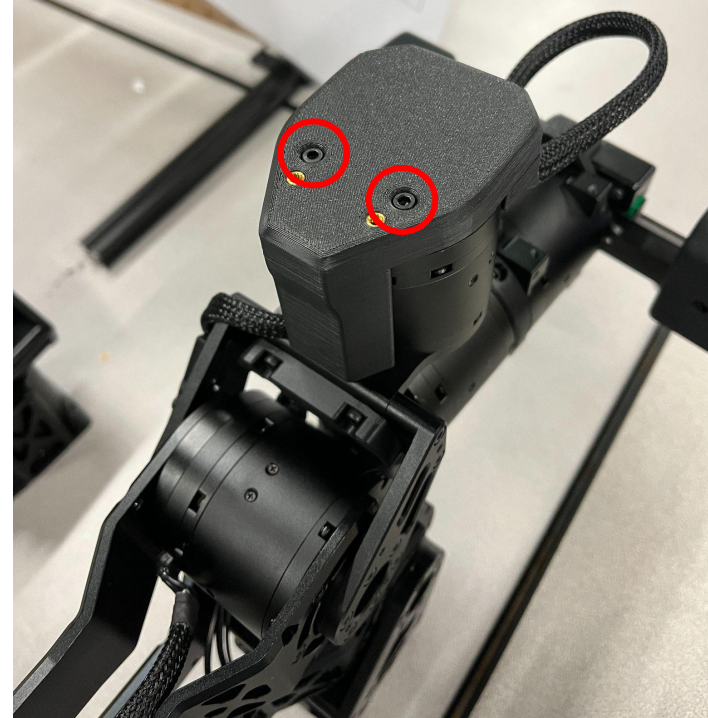

Attach Y-PCB Cable Lock to Y-PCB Shroud

Parts:

- (2) M3 x 6b

**Use an M2 Driver to install bolts*

****NO** Loctite*

