


WidowX AI

Servo #7 - Y-PCB

Cable Replacement Guide

**LOCTITE BOLTS DURING REASSEMBLY
UNLESS OTHERWISE STATED**

Servo ID

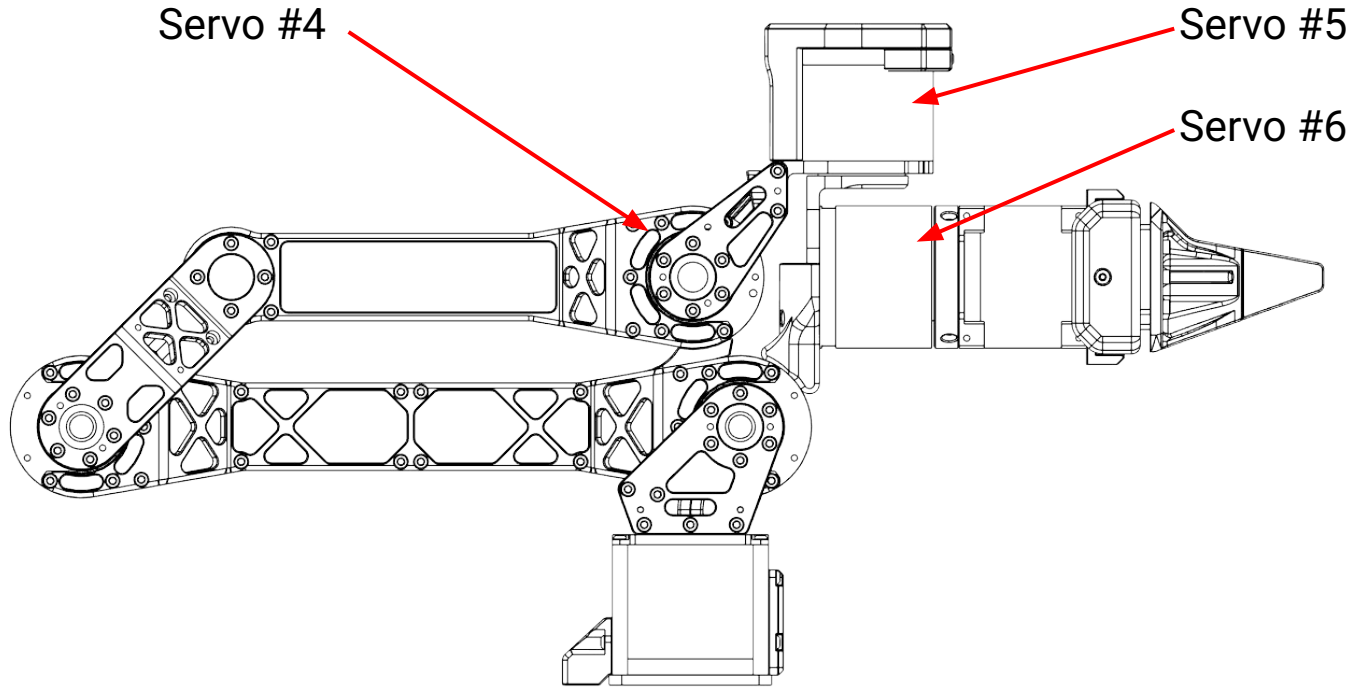

Remove Y-PCB Cable Lock from Y-PCB Shroud

Parts:

- (2) M3 x 6b

**Use an M2 Driver to remove bolts
and set aside for later*




Remove Y-PCB Shroud

Parts:

- (2) M3 x 12s

**Use an M2.5 Driver to remove bolts
and set aside for later*

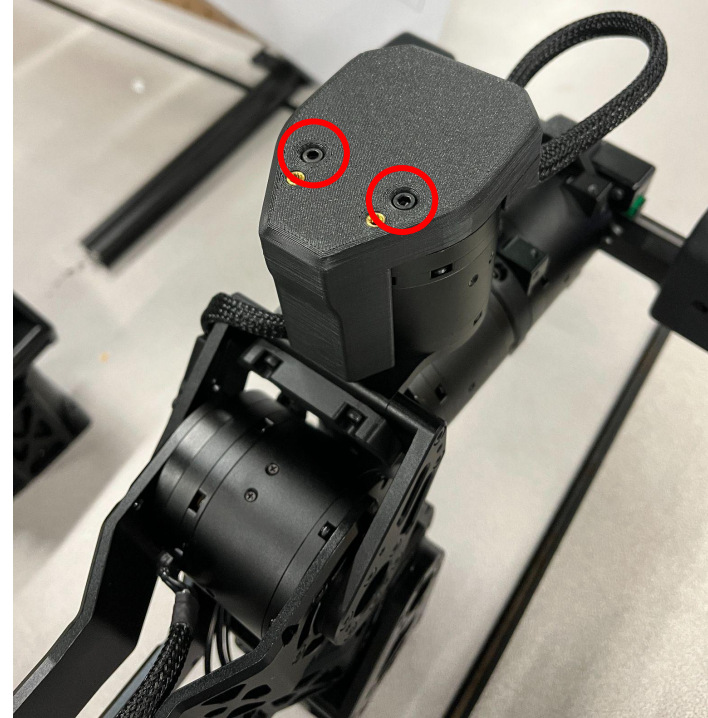


Remove Y-PCB Assembly

Parts:

- Y-PCB Shroud
- Y-PCB with Cables
- Y-PCB Shim 1mm

*Disconnect the 35mm cable from servo 5 (**See Red Arrow**)

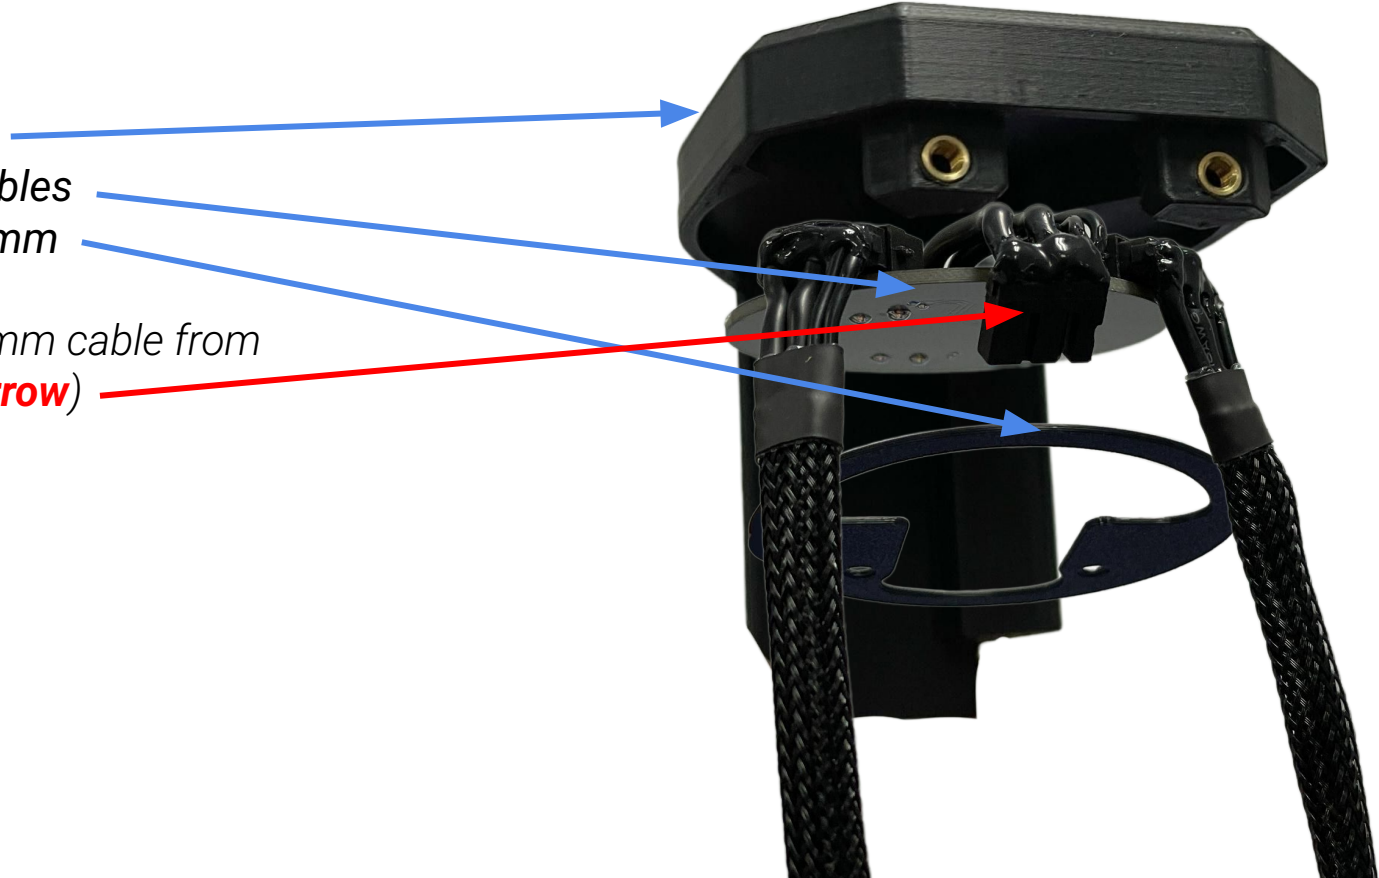

Remove Cable from Servo 7

Parts:

- *Up-Straight 200mm Braided Cable*



Replace Cable

Parts:

- *Up-Straight 200mm Braided Replacement*

**Set aside faulty cable.*


**Connect the replacement 200mm cable*



Connect Cable from Servo 7

Parts:

- *Up-Straight 200mm Braided Cable Replacement*

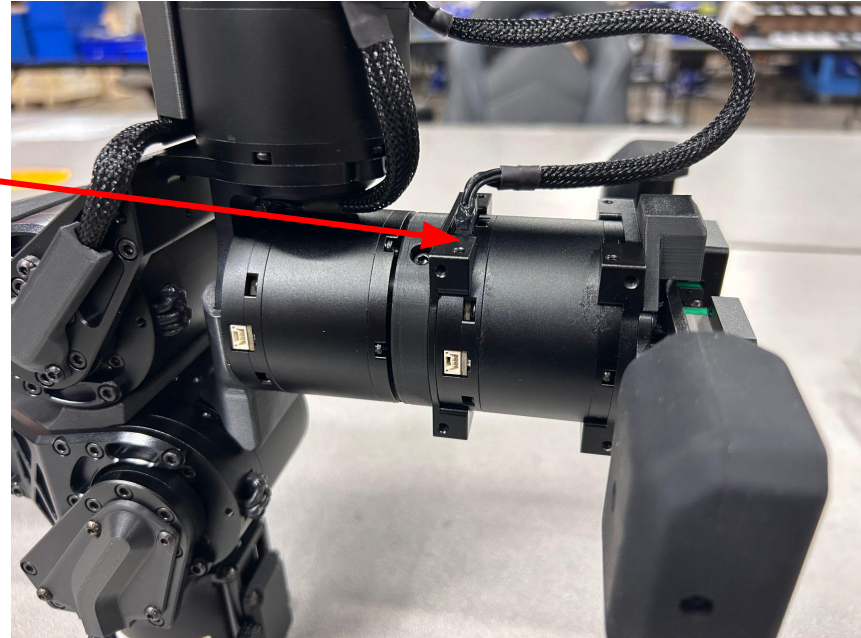

Attach Y-PCB to Servo 5

Parts:

- Y-PCB Shroud
- Y-PCB with Cables
- Y-PCB Shim 1mm

**Ensure the PCB Stack is in the right order.*

**Ensure all cables are tightly secured into the PCB Board and their respective servos.*

**Connect the 35mm cable to servo 5
(**See Red Arrow**)*




Attach Y-PCB Shroud to Servo 5

Parts:

- (2) M3 x 12s

**Use an M2.5 Driver to install bolts*

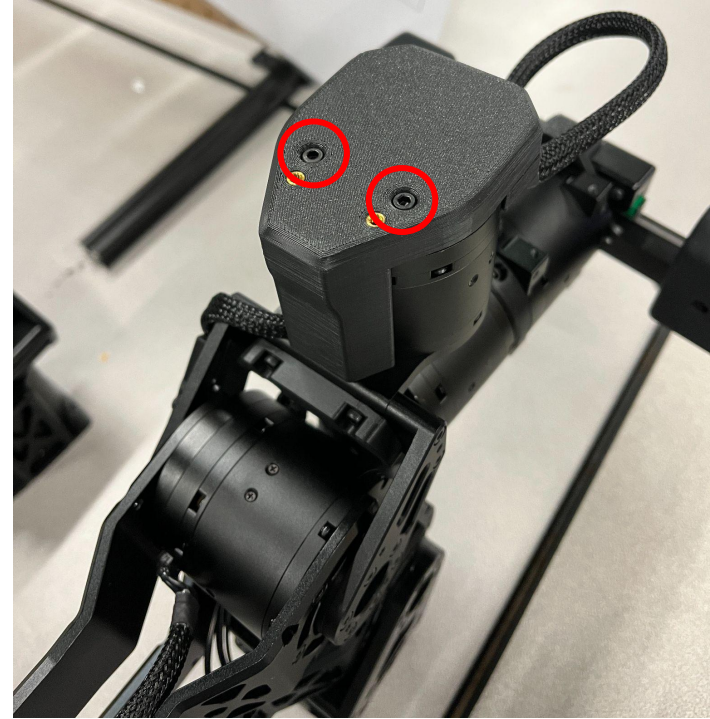

Attach Y-PCB Cable Lock to Y-PCB Shroud

Parts:

- (2) M3 x 6b

**Use an M2 Driver to install bolts*

****NO** Loctite*

