DOC. N.° 1SQC900028M0201

# ReliaGear® neXT

## Breaker Installation & Removal Instruction Sheet

**WARNING**



Danger of electrical shock or injury. Turn OFF power ahead of the panel board or switchboard before working inside the equipment or removing any component. Equipment is to be installed and maintained by properly trained and qualified personnel only.




a. Panelboard accessories may not be field installed in the wiring space of the enclosure panelboard unless the conductors, splices, taps and equipment at any cross section of the wiring space does not exceed 75 percent of the cross-sectional area of that space.

b. Accessories shall not block enclosure ventilation openings.

c. Accessories shall not block the breaker arc vents.

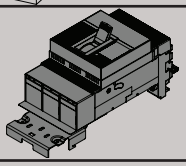
| | | Description | Qty |
|---|---|---|---|
| A |  | Circuit Breaker | 1X |
| B |  | Mounting Screws | 2X |

Features of Breaker Mounting Brackets

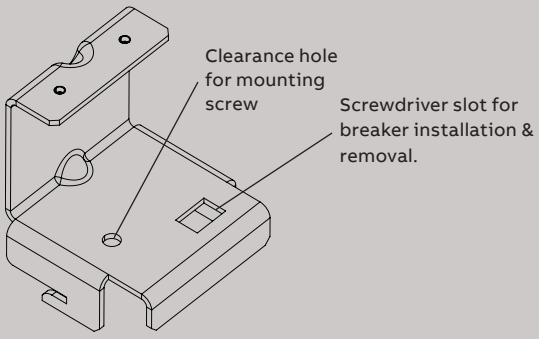


XT1, XT2 and XT4

Note: XT4 bracket shown as reference.

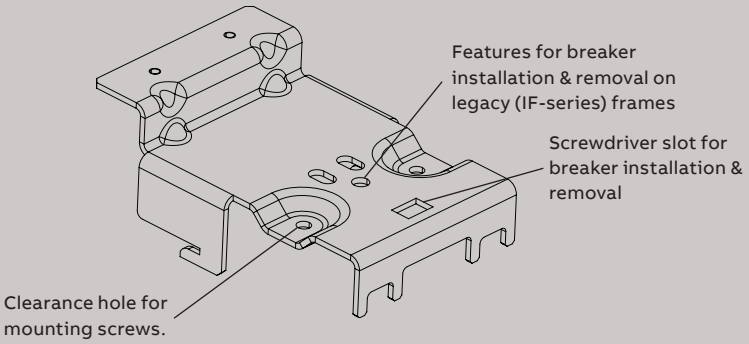



XT5, XT6 and XT7

Note: XT5 bracket shown as reference.

## Breaker Installation


(Note: XT7 Breaker shown as reference for insertion process)

1 Breaker Positioning

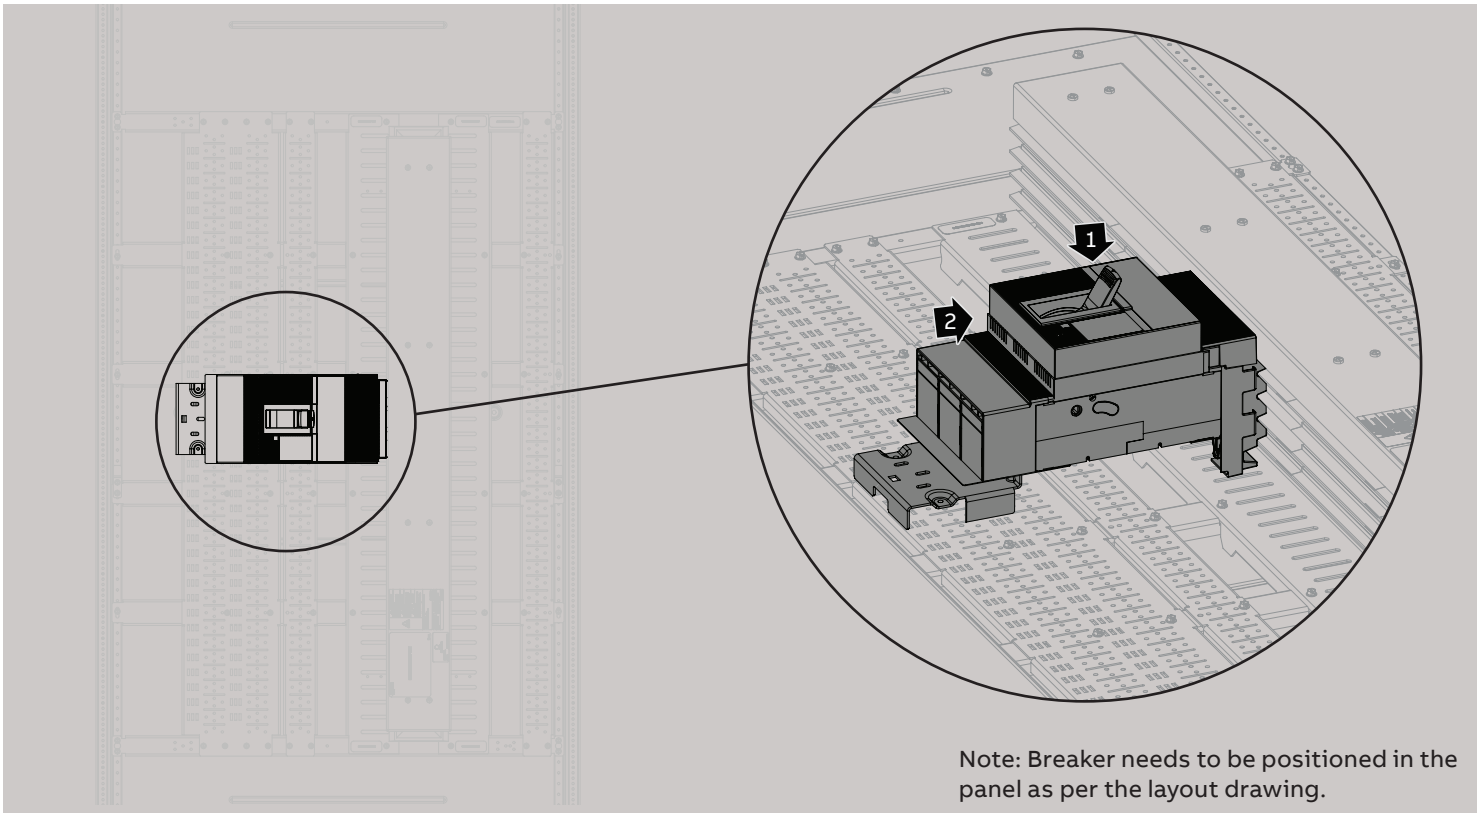



Note: Breaker needs to be positioned in the panel as per the layout drawing.

2 Insert Breaker into Bus Stack

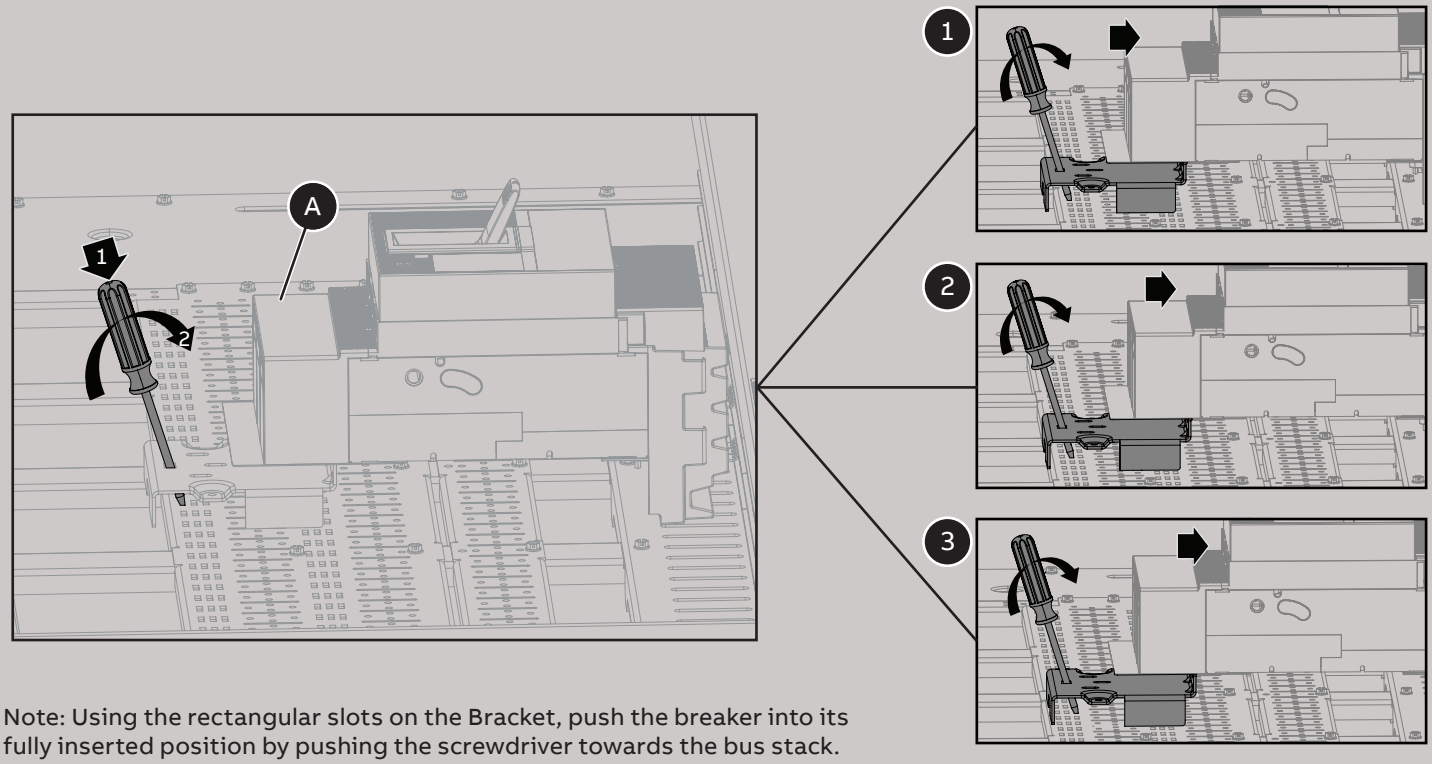



Note: Using the rectangular slots on the Bracket, push the breaker into its fully inserted position by pushing the screwdriver towards the bus stack.

## 3 Fully Inserted Positon of Breaker

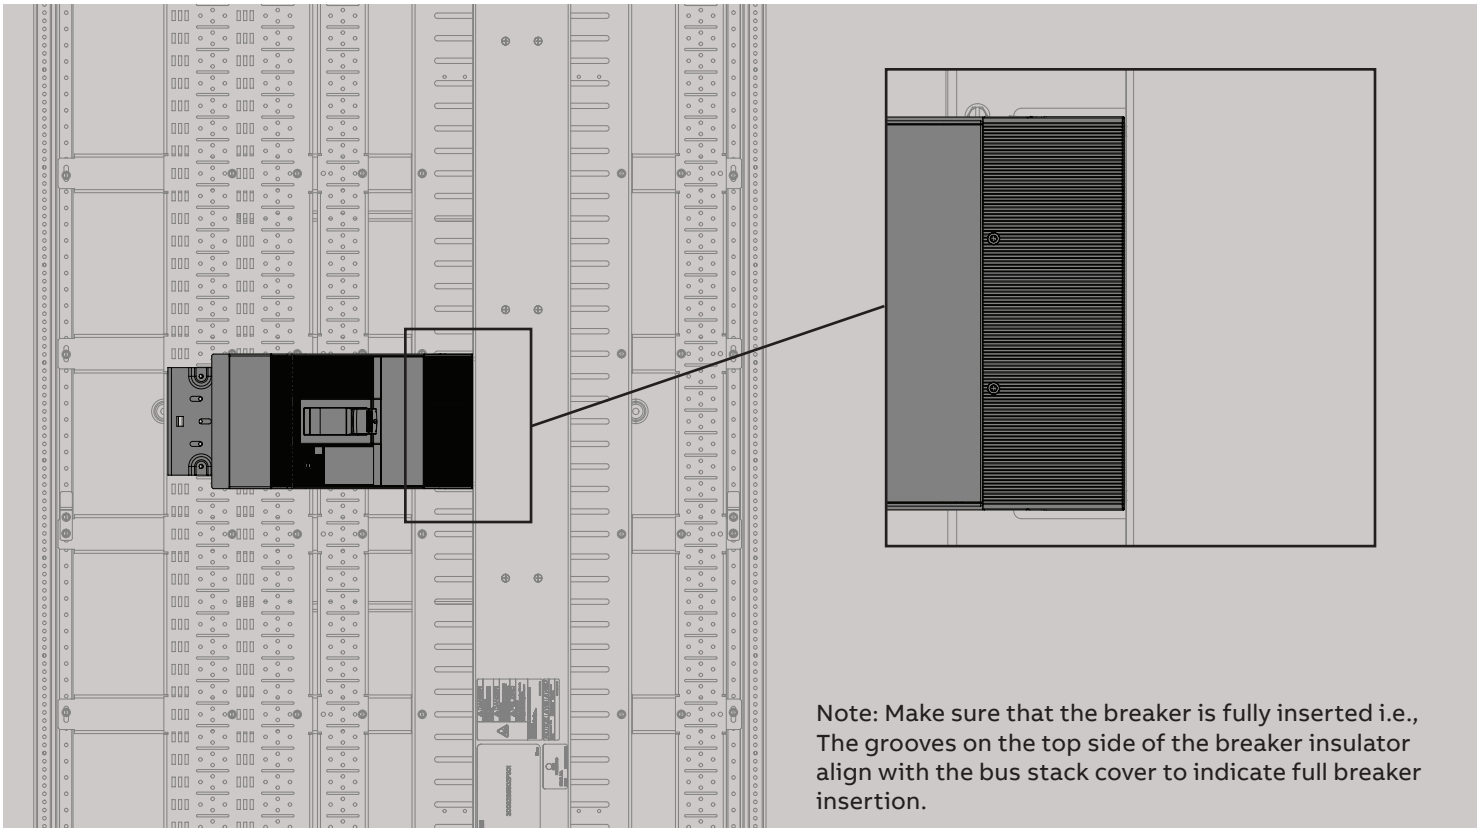

Note: Make sure that the breaker is fully inserted i.e., The grooves on the top side of the breaker insulator align with the bus stack cover to indicate full breaker insertion.


## 4 Install Mounting Screws and Secure Breaker

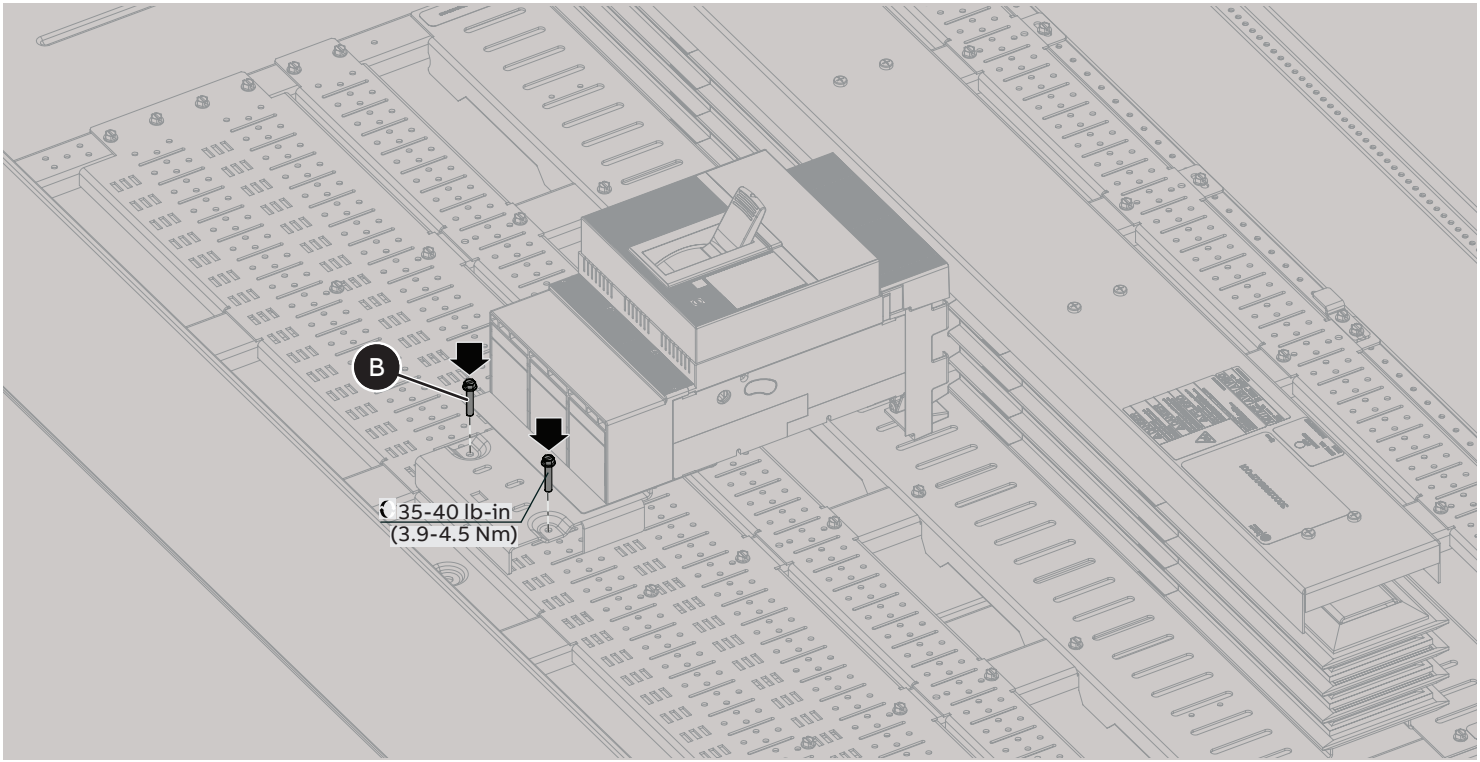


## Breaker Removal

(Note: XT7 Breaker shown as reference for removal process)

1 Remove Mounting Screws

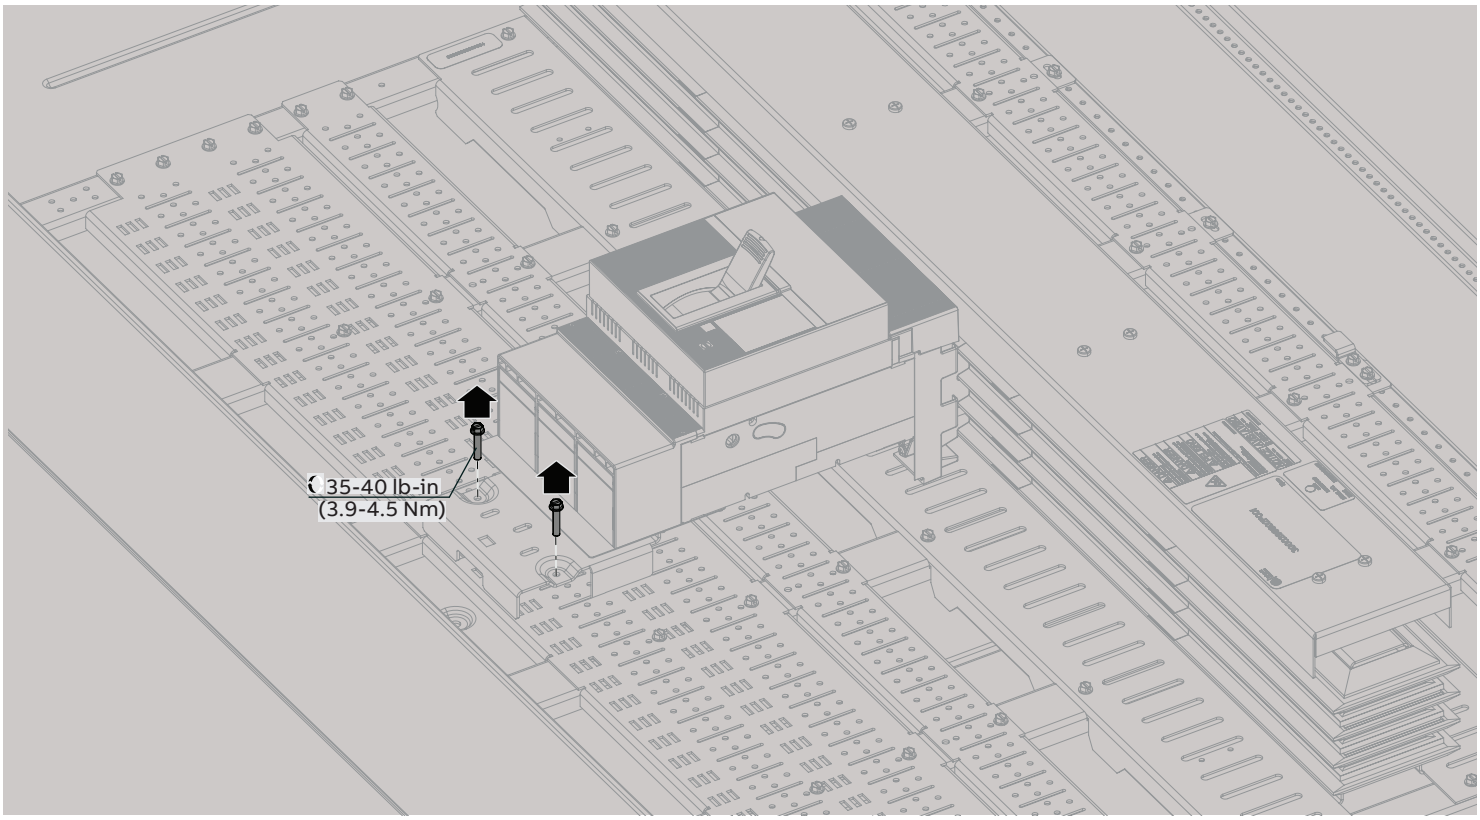



2 Dis-Engage Breaker from Bus Stack

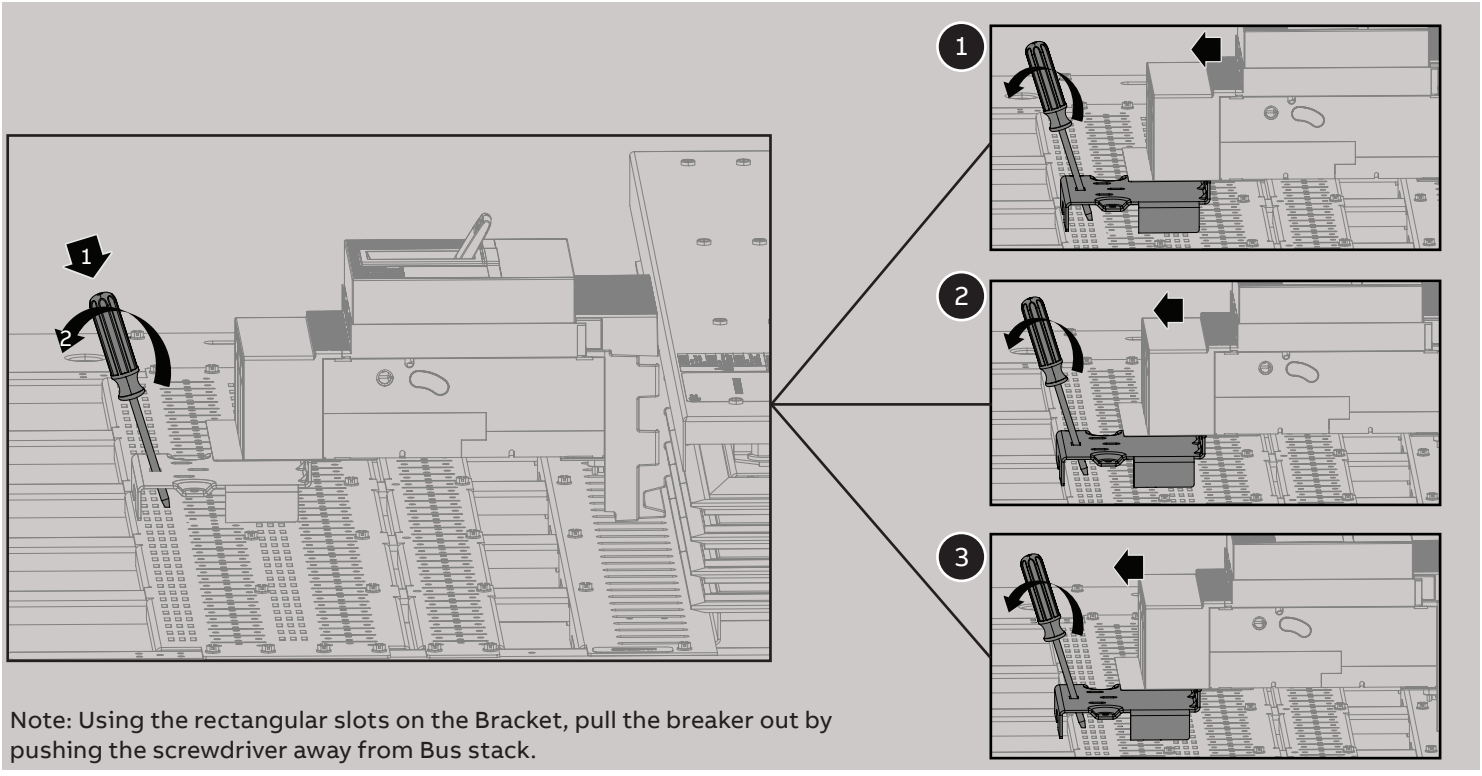


Note: Using the rectangular slots on the Bracket, pull the breaker out by pushing the screwdriver away from Bus stack.

## 3 Remove Breaker from Panel

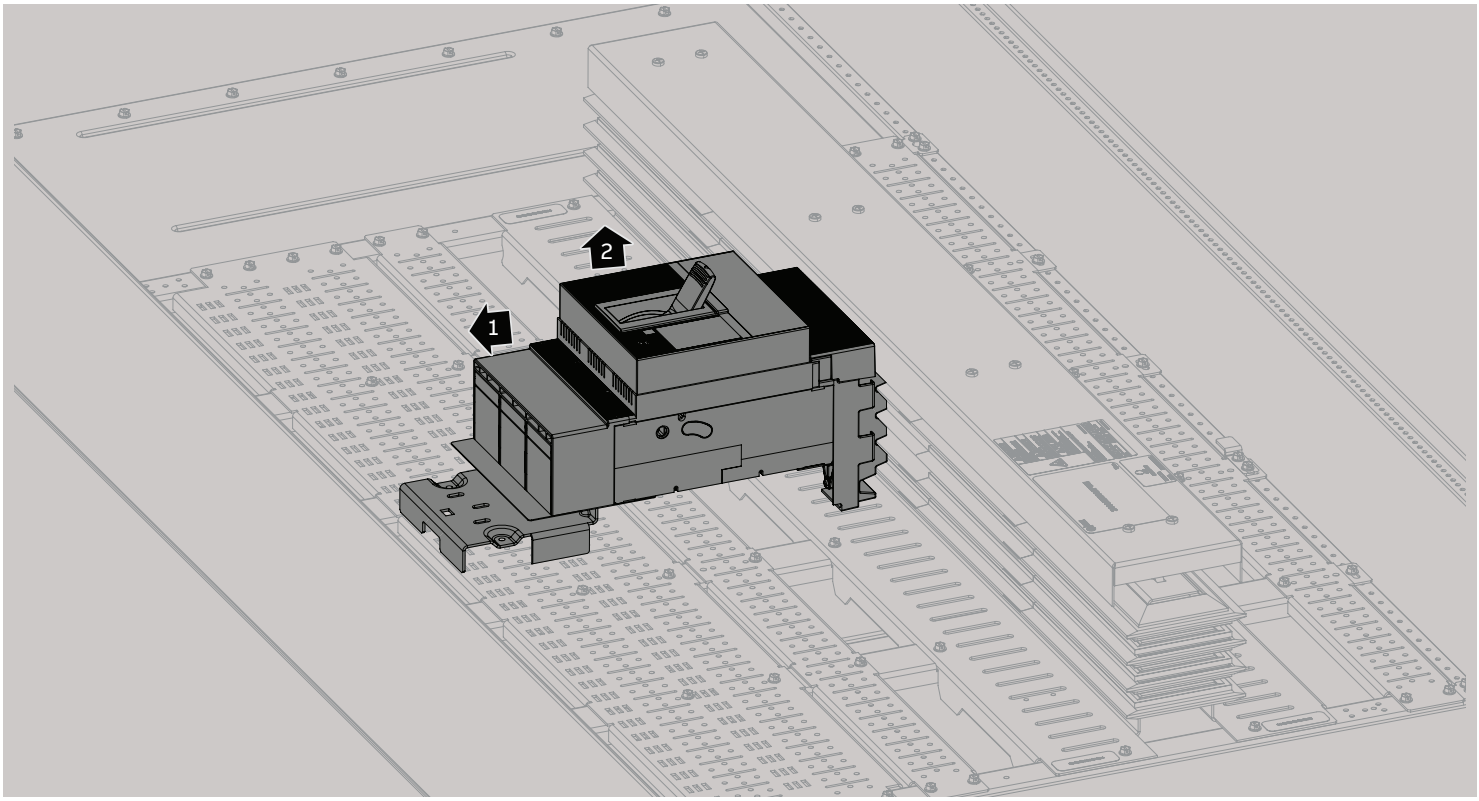


**Disclaimer :** These instructions do not cover all details or variations in equipment nor do they provide for every possible contingency that may be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to the ABB Company.

ABB Inc.
305 Gregson Drive
Cary, NC 27511

**abb.com**

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG. Copyright© 2025 ABB
All rights reserved

DOC. N.° 1SQC900028M0201