DOC. N.° 1SQC900029M0201

ReliaGear® neXT

Retrofit Bracket Kit (RGRPIFRK) Instruction Sheet

For use with XT5, XT6, and XT7 breaker frames

WARNING

Danger of electrical shock or injury. Turn OFF power ahead of the panel board or switchboard before working inside the equipment or removing any component. Equipment is to be installed and maintained by properly trained and qualified personnel only.

a. Panelboard accessories may not be field installed in the wiring space of the enclosure panelboard unless the conductors, splices, taps and equipment at any cross section of the wiring space does not exceed 75 percent of the cross-sectional area of that space.

b. Accessories shall not block enclosure ventilation openings.

c. Accessories shall not block the breaker arc vents.

	Description	Qty
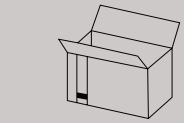	Retrofit Bracket	5x
	Mounting Screws	5x

Retrofit Bracket and Breaker Installation

1

Retrofit Bracket Installation

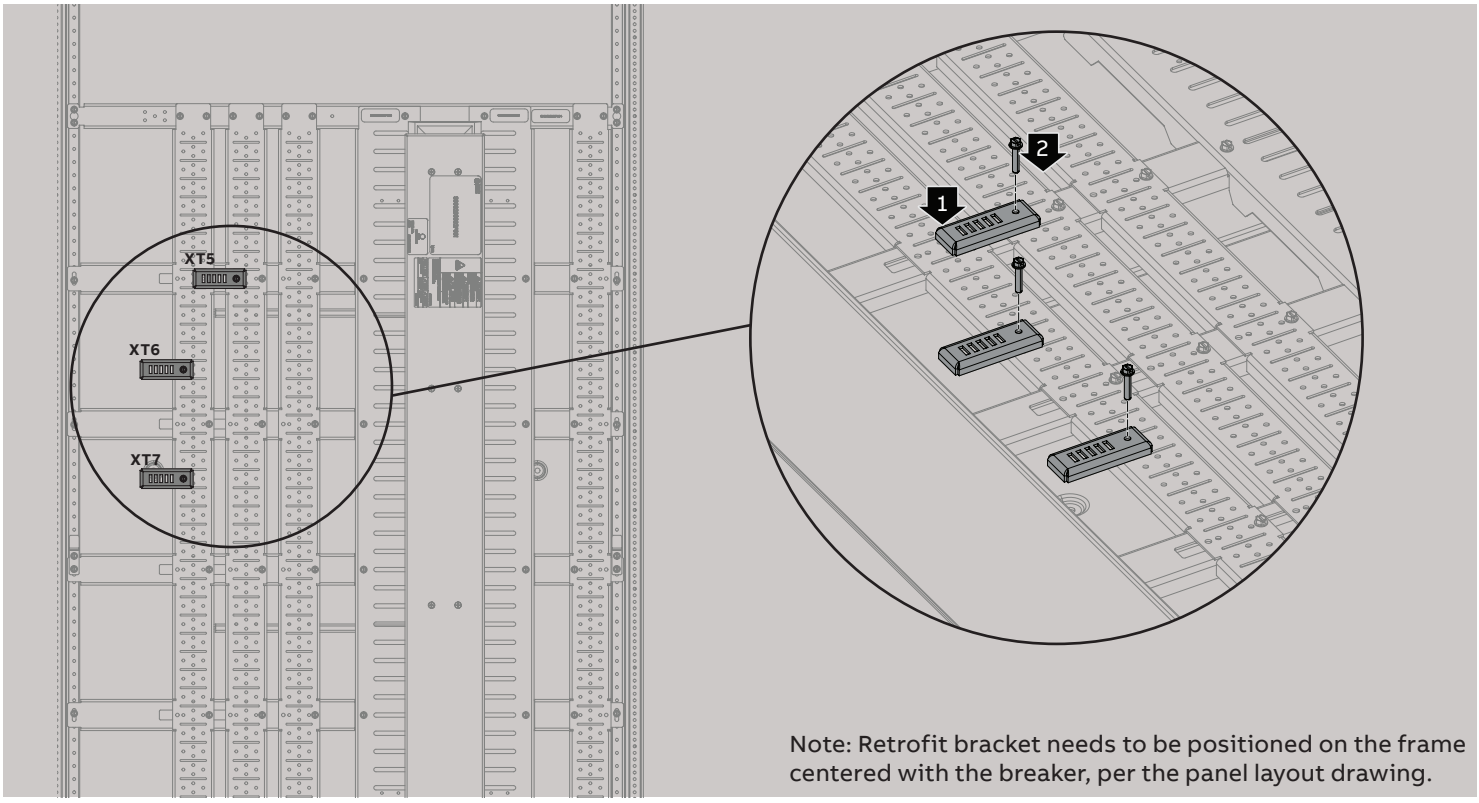

Note: Retrofit bracket needs to be positioned on the frame centered with the breaker, per the panel layout drawing.

2

Breaker Positioning
(Note: XT7 Breaker shown as reference for insertion process)

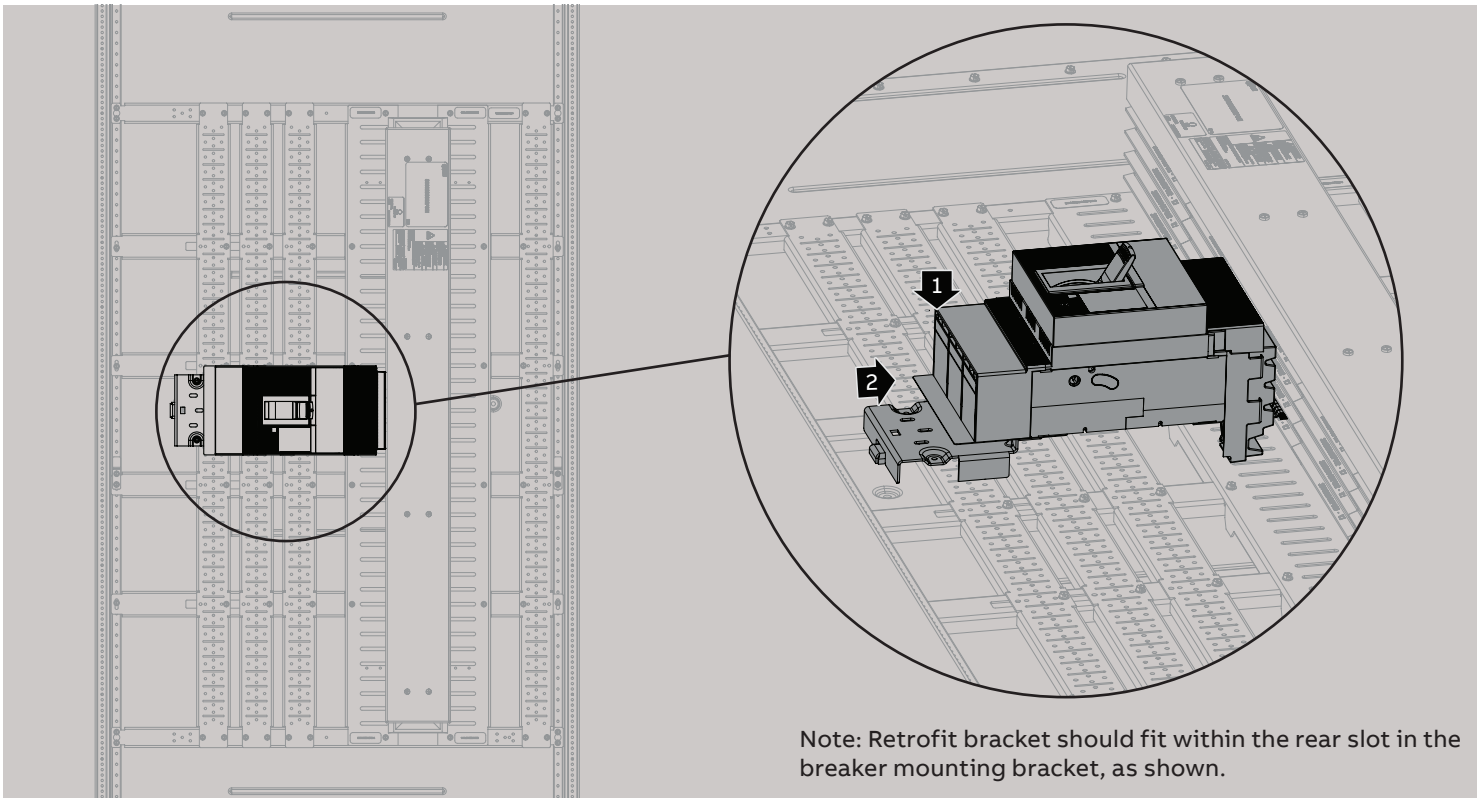

Note: Retrofit bracket should fit within the rear slot in the breaker mounting bracket, as shown.

3 Insert Breaker into Bus Stack

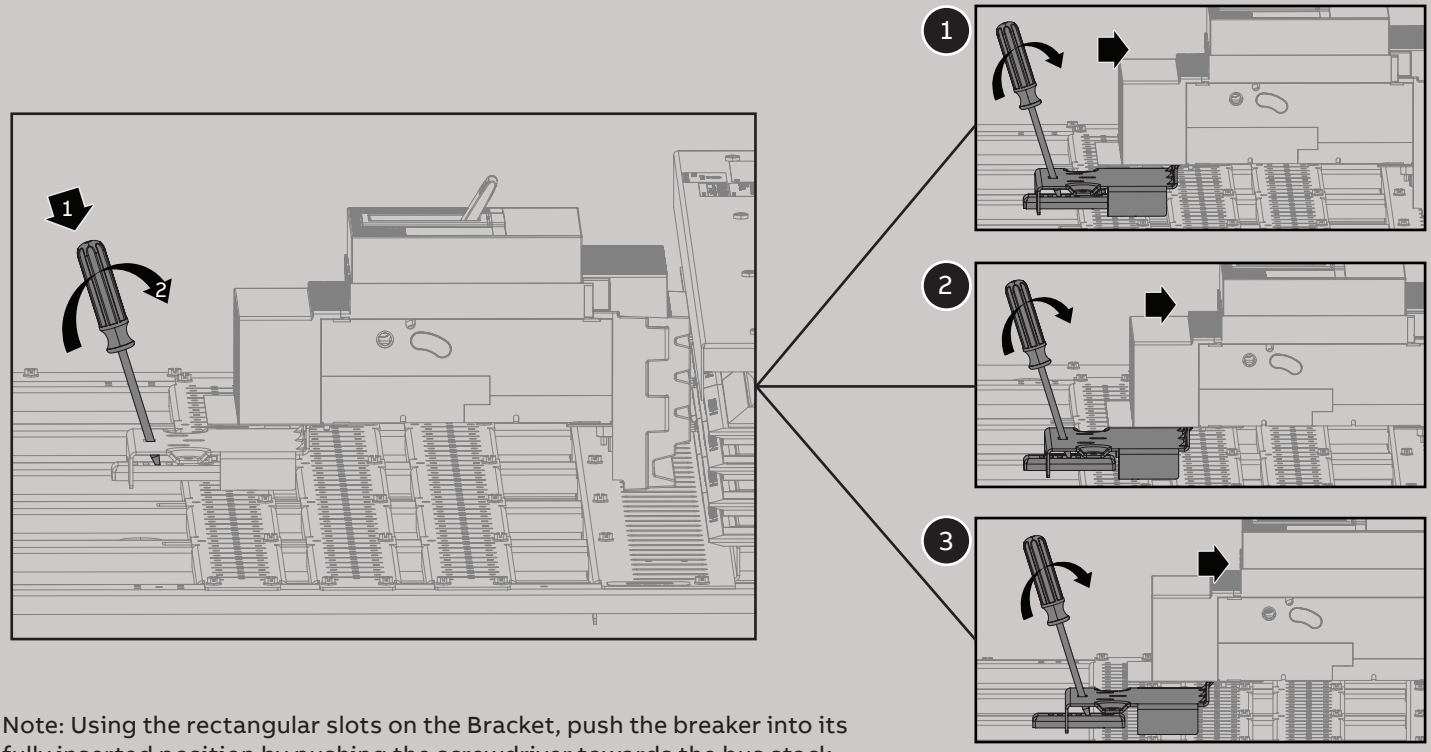

Note: Using the rectangular slots on the Bracket, push the breaker into its fully inserted position by pushing the screwdriver towards the bus stack.

4 Fully Inserted Positon of Breaker

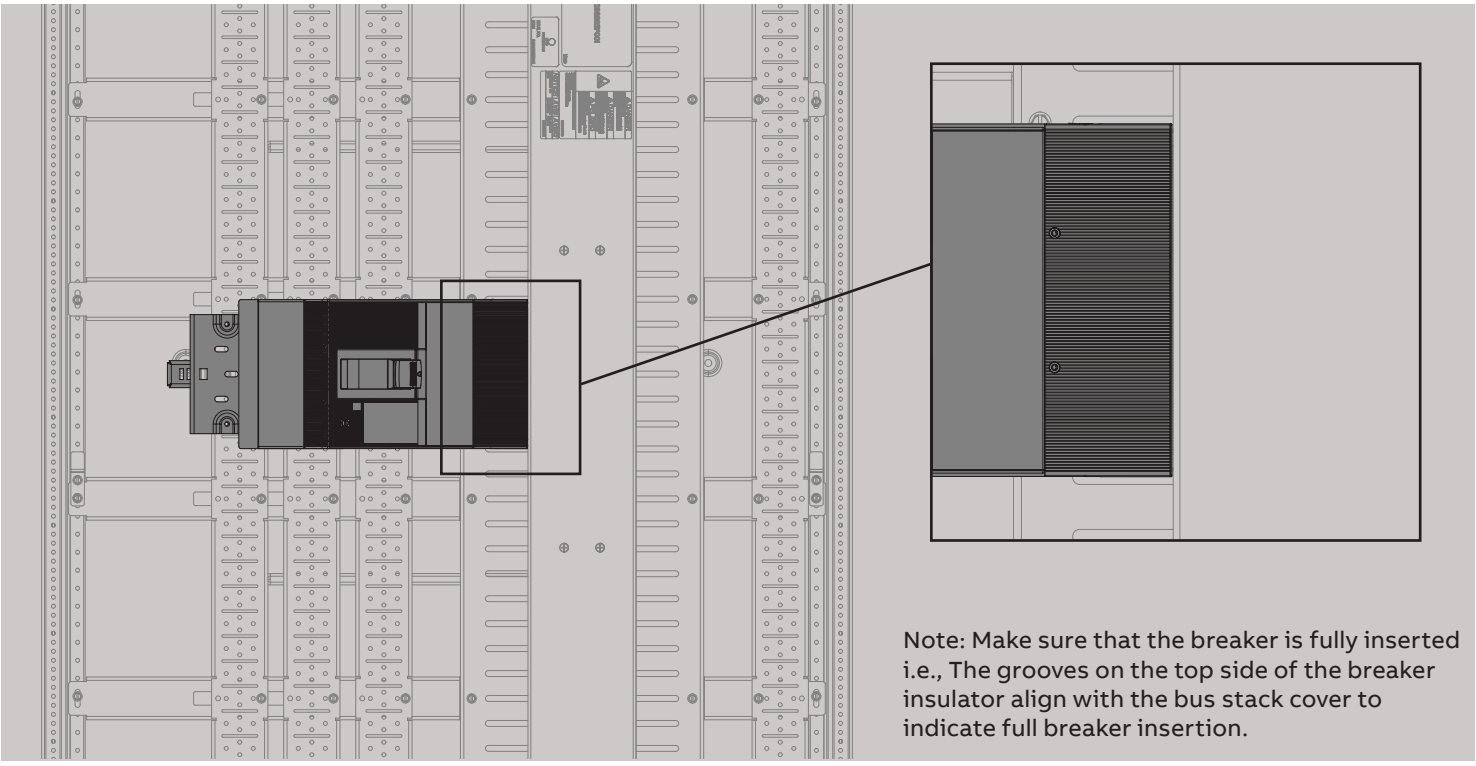

Note: Make sure that the breaker is fully inserted i.e., The grooves on the top side of the breaker insulator align with the bus stack cover to indicate full breaker insertion.

5 Install Mounting Screws and Secure Breaker

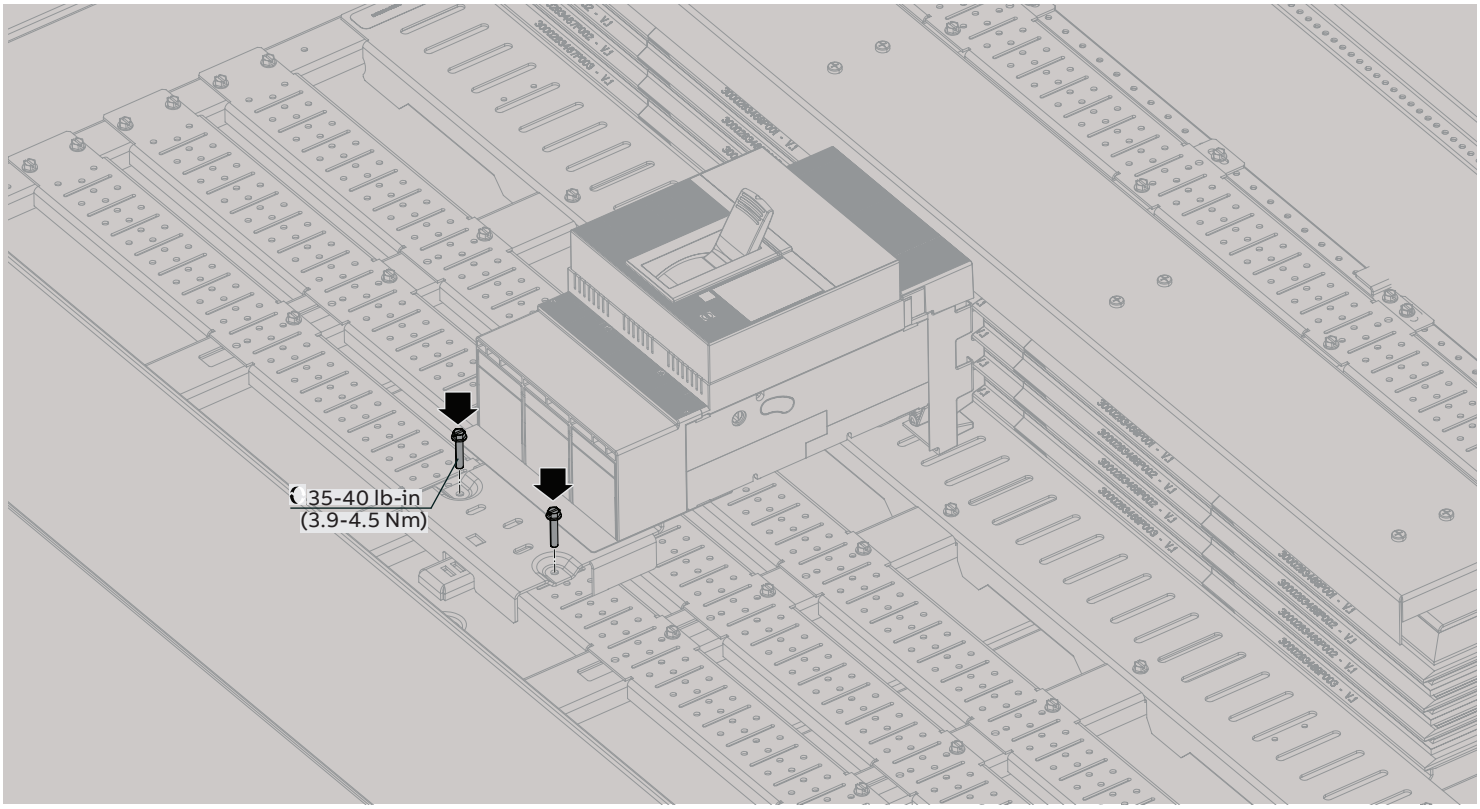

6 Installed Breakers Representation

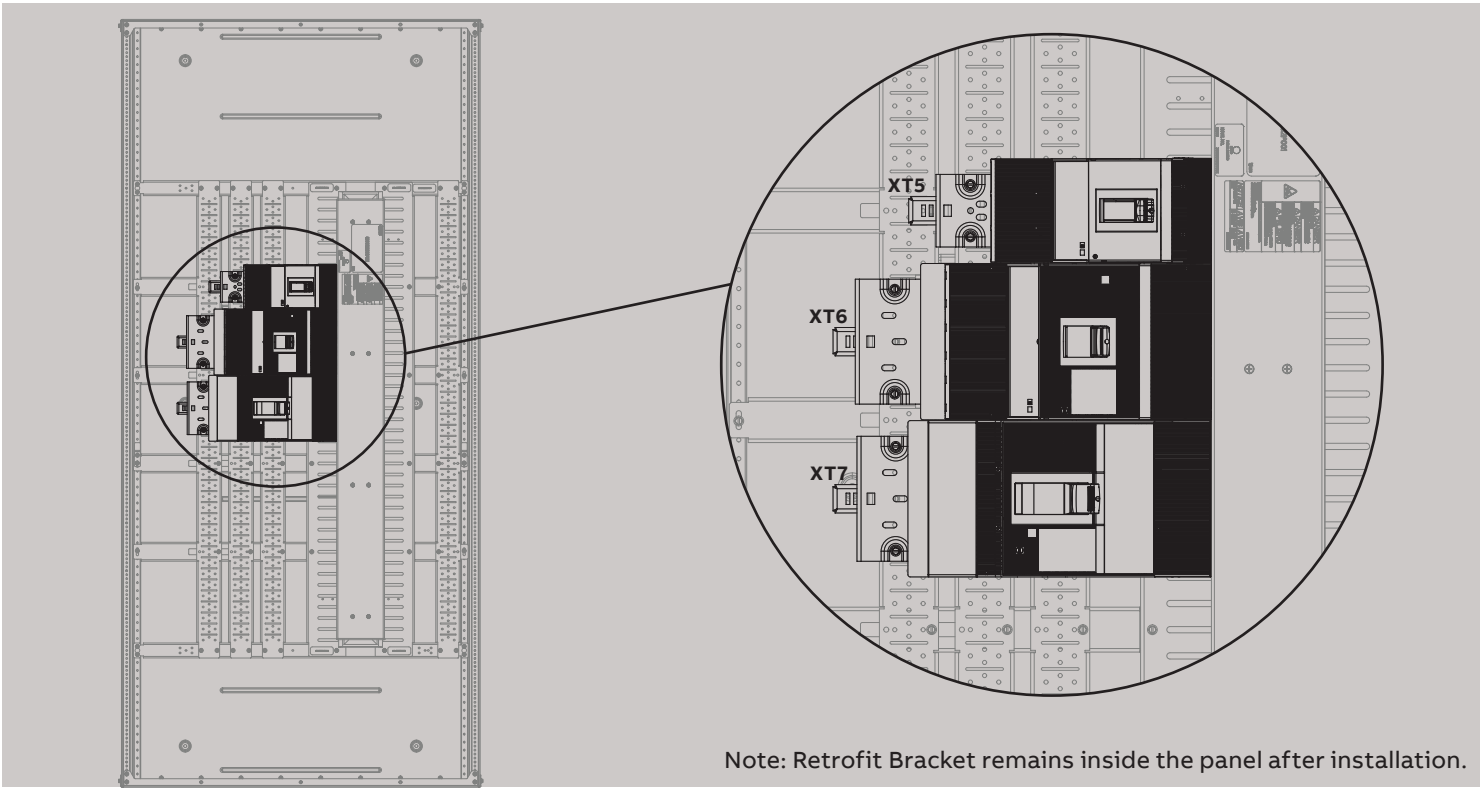

Note: Retrofit Bracket remains inside the panel after installation.

Breaker Removal

(Note: XT7 Breaker shown as reference for removal process)

1

Remove Mounting Screws

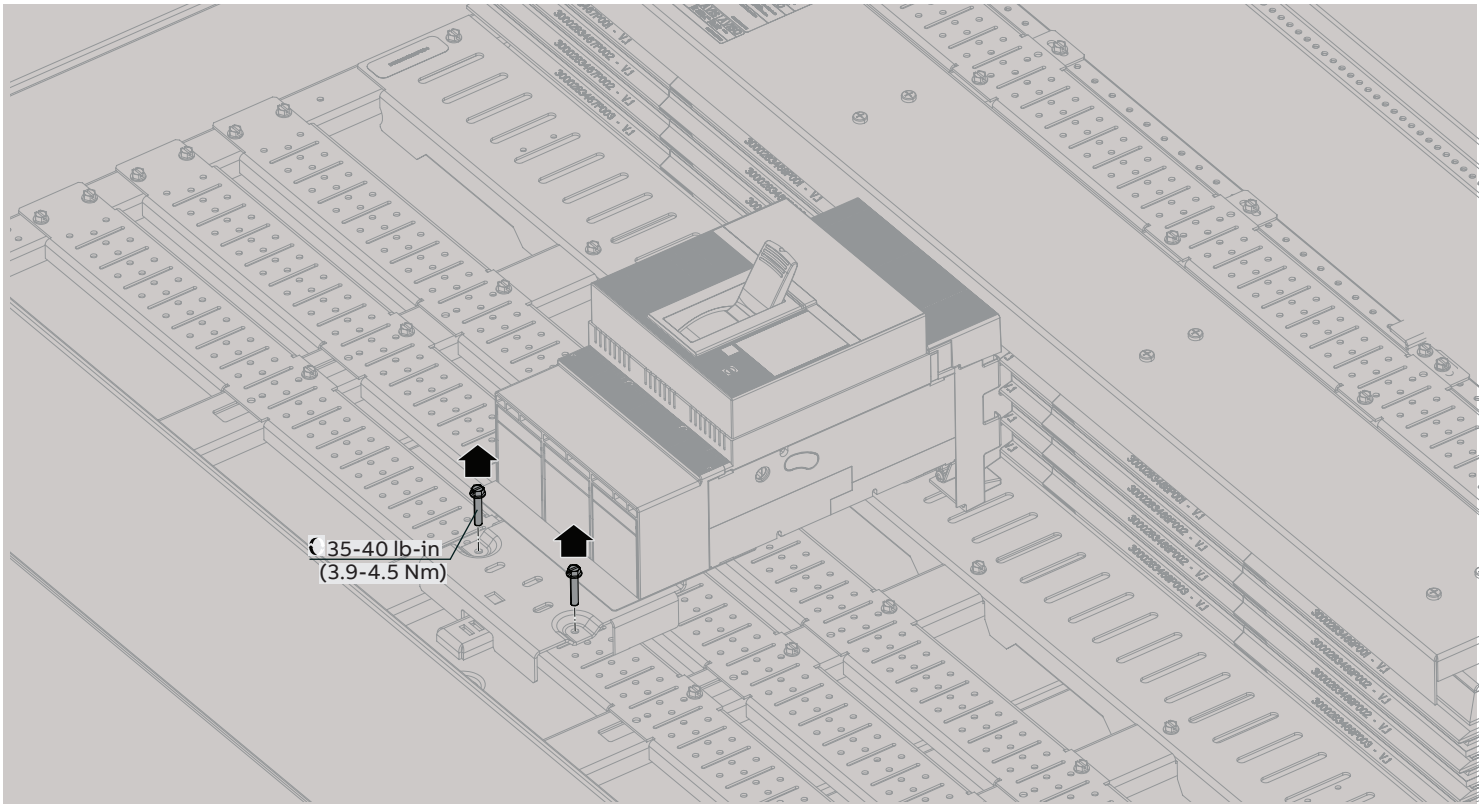

2

Dis-Engage Breaker from Bus Stack

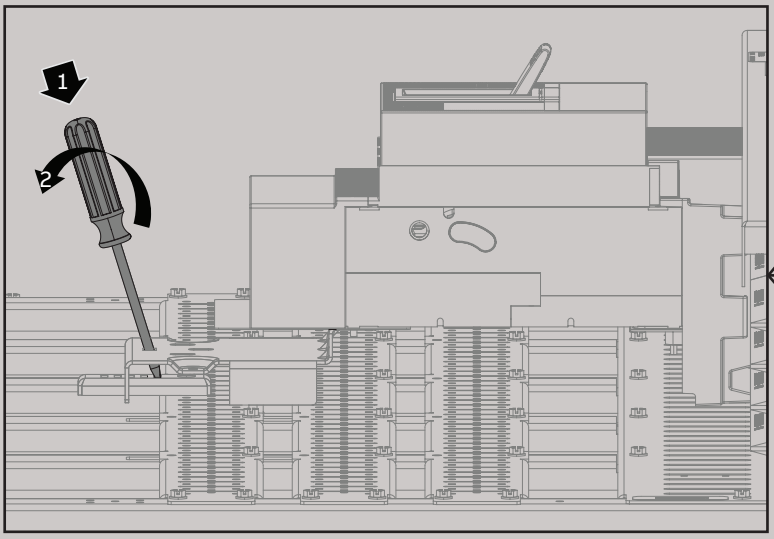

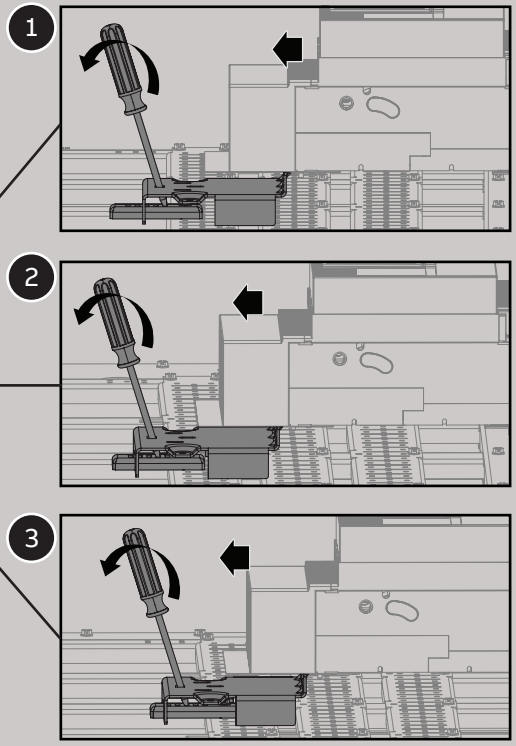

Note: Using the rectangular slots on the Bracket, pull the breaker out by pushing the screwdriver away from Bus stack.

3 Remove Breaker from Panel

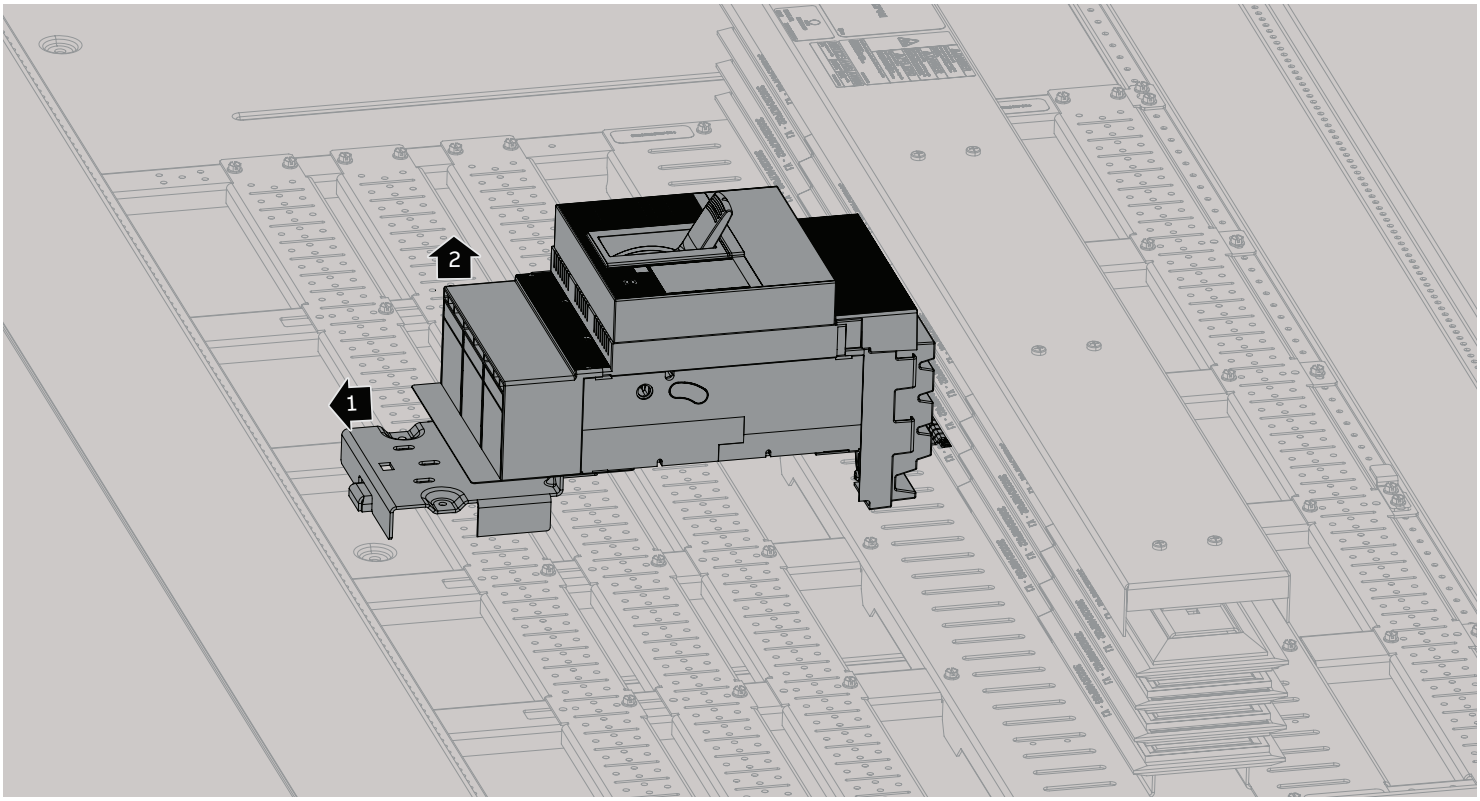

Disclaimer : These instructions do not cover all details or variations in equipment nor do they provide for every possible contingency that may be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to the ABB Company.

ABB Inc.
305 Gregson Drive
Cary, NC 27511

abb.com

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG. Copyright© 2025 ABB
All rights reserved

DOC. N.° 1SQC900029M0201