I-Line™ Circuit Breaker Power Distribution Panelboards

Information Manual
Class 2110

ENGLISH

Instruction Bulletin
80043-309-20 Rev.10

Retain for future use.

SQUARE D™



Schneider Electric™

Hazard Categories and Special Symbols

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **will result in** death or serious injury.

⚠ WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **can result in** death or serious injury.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol is not used with this signal word.

NOTE: Provides additional information to clarify or simplify a procedure.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

ENGLISH

Table of Contents

Introduction 4
Safety Precautions 4
Installation 5
Interior Mounting into Square D Brand Enclosures 5
Surface Mounting (Enclosure Mounted on Wall) 6
Flush Mounting (Enclosure Recessed in Wall) 6
Neutral Bonding Strap Installation 8
Standard Neutral Bonding Strap Installation 9
Neutral with Current Transformer Bonding Strap Installation 10
I-Line Circuit Breaker Installation and Removal 10
I-Line Circuit Breaker Installation 11
I-Line Circuit Breaker Removal 12
Circuit Breaker Reset Instructions 13
Interior Trim Barrier Preparation 13
I-Line Stack Assemblies 14
I-Line Solid Neutral Assemblies 14
Panelboards Equipped with Motor Operators for PowerPact H and J Frame Circuit Breakers 15
Appendix 1: Specifications 16
Typical Wiring 16
Panelboard Ratings 17
Additional Short Circuit Current Ratings 24
CE Marking 30
Appendix 2: Accessory Kits 30
Equipment Ground Bar Kits 30
Mechanical Interlock Kits 31
Main Lug Kits 31
Circuit Breaker Lug Kits 32
Extension Kits 34

ENGLISH

Introduction

This bulletin contains instructions for installing Square D™ brand I-Line™ circuit breaker panelboards. These panelboards are Underwriters Laboratories (cULus) listed and accept I-Line branch circuit breakers.



For technical support on the installation of this panelboard, contact Schneider Electric customer support at 1-888-778-2733.



See the labels on the equipment for rating and safety information. Additional equipment labels are provided with this document.

Safety Precautions

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, CSA Z462, or NOM-029-STPS.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Always use a properly rated voltage sensing device to confirm all power is off.
- Read and understand this entire instruction bulletin and the latest edition of the included NEMA PB 1.1 standards publication before installing, operating, or maintaining this equipment.
- Local codes vary, but are adopted and enforced to promote safe electrical installations. A permit may be needed to do electrical work, and some codes may require an inspection of the electrical work.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

ENGLISH

WARNING: This product can expose you to chemicals including Nickel compounds, which are known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Installation

This section provides instructions for the following I-Line panelboard procedures:

- Interior Mounting into Square D Brand Enclosures, on page 7
- Neutral Bonding Strap Installation, on page 10
- I-Line Circuit Breaker Installation and Removal, on page 12
- Interior Trim Barrier Preparation, on page 15

Interior Mounting into Square D Brand Enclosures

A separate standards publication, titled “General Instructions for Proper Installation, Operation, and Maintenance of Panelboards Rated 600 Volts or Less” (NEMA PB1.1-2007), has been provided with this equipment. Familiarize yourself with the content of this document before proceeding with any of the following procedures.

If you did not receive a copy of this document, or if you have any questions regarding this equipment, contact your local distributor or Schneider Electric representative.

NOTICE

HAZARD OF EXCESSIVE HEAT DUE TO LOOSE CONNECTIONS

- Ensure all connections are properly tightened.
- Refer to the torque information label provided on the panelboard before tightening the connections.

Failure to follow these instructions can result in equipment damage.

To properly mount and install the I-Line panelboard enclosure, please refer to the NEMA PB 1.1-2007 standards publication, and follow the

instructions below for either “Surface Mounting (Enclosure Mounted on Wall)” or “Flush Mounting (Enclosure Recessed in Wall).”

I-Line panelboards must be installed with the bus stack in the vertical orientation only.

Surface Mounting (Enclosure Mounted on Wall)


1. Mount the enclosure as instructed in the NEMA PB 1.1 standards publication.
2. Install one elevating nut on each enclosure stud.
3. Remove the interior trim from the trim brackets.
4. Install the interior as described below:
   a. Set the interior on the enclosure studs and secure with flange nuts (see Figure 1). A screwdriver blade may be inserted in the elevating nut slot to facilitate adjustment.
   b. Adjust each elevating nut to maintain a maximum distance of 0.125 in. between the interior trim and the front/door assembly.
   c. Tighten the flange nuts against the pan.
   d. Remount the interior trim after wiring.
5. If used as service entrance equipment, neutral bonding is required (see “Neutral Bonding Strap Installation” on page 10).
6. Apply equipment labels (located in the bag assembly) as directed by the instructions on the back of the equipment label sheet.

Flush Mounting (Enclosure Recessed in Wall)

1. Mount the enclosure as instructed in the NEMA PB 1.1-2007 standards publication.
2. Install one elevating nut on each enclosure stud.
3. Remove the interior trim from the trim brackets.
4. Install the interior as described below:
   a. Set the interior on the enclosure studs and secure with flange nuts (see Figure 1 on page 9). A screwdriver blade may be inserted in the elevating nut slot to facilitate adjustment.
   b. Adjust each elevating nut to position the lip of the interior trim approximately 0.25 in. from the outside wall line.
   c. Tighten the flange nuts against the pan.
   d. Remount the interior trim after wiring.

5. If used as service entrance equipment, neutral bonding is required. See the “Neutral Bonding Strap Installation” instructions on page 10.
6. Apply equipment labels (located in the bag assembly) as directed by the instructions on the back of the equipment label sheet.

Figure 1: Interior Mounting into Square D Brand Enclosures

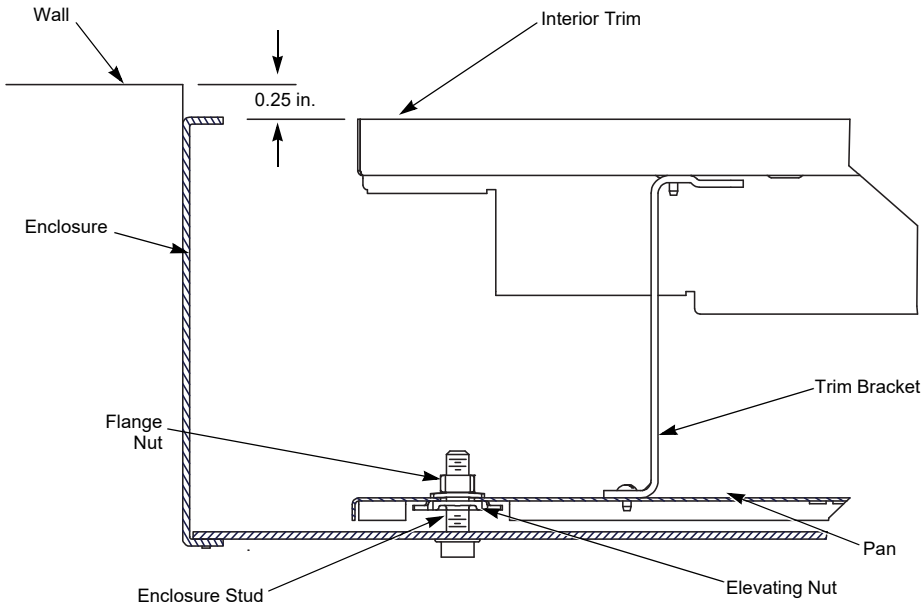

Neutral Bonding Strap Installation

The neutral bonding strap should be used only when the panelboard is **installed** as service equipment.

To properly bond the neutral to the panelboard, follow the instructions for either “Standard Neutral Bonding Strap Installation” or “Neutral with Current Transformer Bonding Strap Installation” on pages 11 and 12, respectively.

For field installation of I-Line Neutral assembly, please see Schneider Electric Instruction Manual 80043-846-01, Neutral Assembly Kits Installation Instructions.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, CSA Z462, or NOM-029-STPS.
- Turn off all power supplying this equipment before working on or inside the equipment.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Always use a properly rated voltage sensing device to confirm all power is off.
- The main bonding strap should be used only when the panelboard is installed as service equipment.
- Do not mix the mounting screws with the interior trim screws.

Failure to follow these instructions will result in death or serious injury.

NOTE: The bonding strap parts are found in the bag assembly provided with the interior for ready to install panelboards and only included with factory assembled panelboards when service entrance is selected.


ENGLISH

Standard Neutral Bonding Strap Installation

To install a neutral bonding strap on an I-Line panelboard, refer to Figure 2 and follow the instructions below.

1. Remove lug. Retain lug and fastening hardware.
2. Place bonding strap between neutral plate and lug, as shown.
3. Secure bonding strap to pan with bonding screw and beveled washer. Tighten the bonding screw to 65–75 lb-in (7.3–8.5 N•m).
4. Reinstall lug with the hardware retained in step 1. Tighten to 60–70 lb-in (6.8–7.9 N•m).

Figure 2: Standard Neutral Bonding Strap Installation

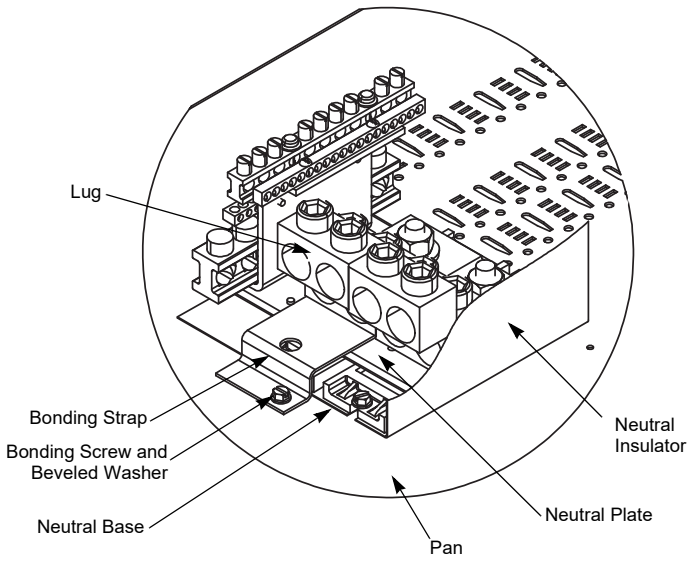

Neutral with Current Transformer Bonding Strap Installation

To install a neutral bonding strap on an I-Line panelboard with a current transformer, refer to Current Transformer Neutral Bonding Installation Instructions, Schneider Electric document 80043-706-xx or 80043-789-xx, that is supplied with the current transformer neutral.

I-Line Circuit Breaker Installation and Removal

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, CSA Z462, or NOM-029-STPS.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- All unused spaces must be filled with blank fillers.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

I-Line Circuit Breaker Installation

Refer to Figure 3 on page 14 for the following instructions:

1. Turn off all power to the panelboard.
2. Remove the interior trim barrier.

NOTE: Install the main circuit breaker adjacent to the main lugs.

3. Turn the circuit breaker off. Position the circuit breaker jaws against the bus bar stack so the guiding boss on the bottom of the circuit breaker is oriented towards the alignment groove in the bus insulator base, and the “fingers” of the circuit breaker mounting bracket fit into the keyslots in the pan.
4. Place a screwdriver through the rectangular hole in the circuit breaker mounting bracket and into the screwdriver slot in the mounting pan. Ratchet the circuit breaker firmly into the bus bar stack and align the retaining screw with the 7/32 in. (5.6 mm) mounting hole in the pan.

NOTE: Ensure the retaining screw is tight, but do not tighten it enough to bend the mounting bracket.


5. Tighten the retaining screw securely to prevent the circuit breaker from moving.
6. **For main circuit breakers only:**
   Attach the “Main Breaker” label to the circuit breaker cover.
7. Reinstall the interior trim barrier.
8. Re-energize the panelboard.
9. Turn the circuit breaker on.

NOTE: I-Line circuit breakers are supplied with factory-applied joint compound on the plug-on connectors. The compound must not be removed because it contributes to the overall performance of the connection.

Whenever an I-Line circuit breaker is removed and reinstalled, the joint compound must be reapplied. A two-ounce container of compound especially formulated for I-Line plug-on connectors is available for purchase (catalog number PJC-7201).

ENGLISH

Figure 3: I-Line Circuit Breaker Installation and Removal

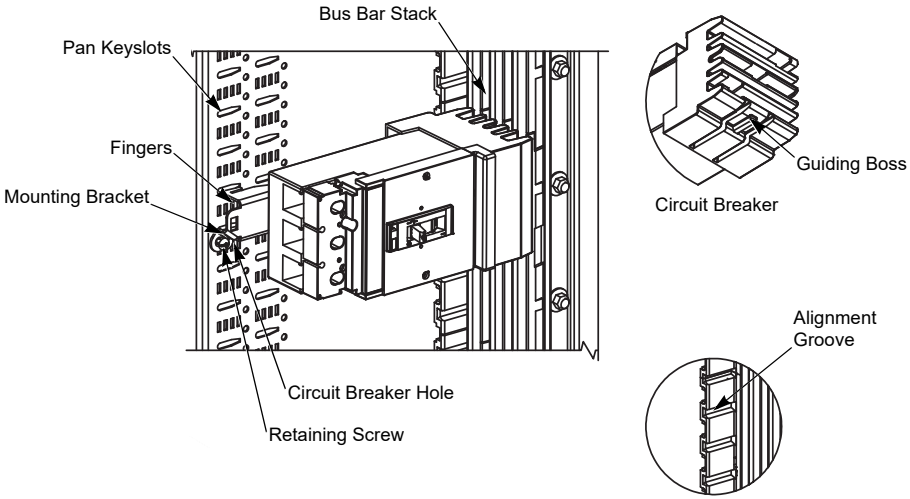

I-Line Circuit Breaker Removal

Refer to Figure 3 for the following instructions:


1. Turn off all power to the panelboard.
2. Turn the circuit breaker off.
3. Remove the interior trim barrier.
4. Loosen the retaining screw(s) in the circuit breaker mounting bracket until the screw(s) is completely removed from the 7/32 in. (5.6 mm) mounting hole in the mounting pan.
5. Place the screwdriver through the rectangular hole in the circuit breaker mounting bracket and into the screwdriver slot in the mounting pan. Ratchet the circuit breaker away from the bus bar stack.
6. Lift the circuit breaker away from the bus bars.
7. Install blank fillers, identified on the information label on the back of the deadfront or current Square D Digest, where the circuit breaker was removed.
8. Secure the blank filler extensions to the interior trim barrier (HCPSU, HCP, and HCRU panelboards only), using Table 1 on page 19 for reference. Mount the extension over the mounting bracket in the deadfront as shown in instruction bulletin 80030-695-02.

9. Reinstall the interior trim barrier.
10. Re-energize the panelboard.

Circuit Breaker Reset Instructions

If the circuit breaker is tripped, the handle will be at the mid-position between ON and OFF. To reset the circuit breaker, push the handle to the OFF position, then to the ON position.

Figure 4: Circuit Breaker Handle Positions

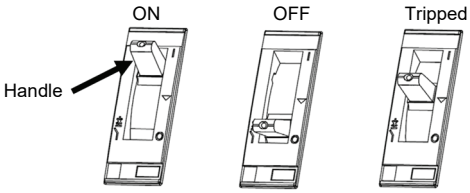

Interior Trim Barrier Preparation

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Before energizing the panelboard, all unused spaces must be filled with blank fillers.
- Replace all devices, doors, and covers before energizing this equipment.

Failure to follow these instructions will result in death or serious injury.

I-Line Stack Assemblies

NOTICE

RISK OF IMPROPER ASSEMBLY

- Do not disassemble the I-Line Bus Stack Assembly.
- If maintenance is required, contact Schneider Electric.

Failure to follow these instructions can result in severe equipment damage and will void the warranty.

I-Line Solid Neutral Assemblies

See I-Line Panelboards Neutral Assembly Kits Installation Instructions, 80043-846-01 for applicable neutral catalog numbers and installation instructions.

Panelboards Equipped with Motor Operators for PowerPact H and J Frame Circuit Breakers

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, CSA Z462, or NOM-029-STPS.
- This equipment must be installed and serviced only by qualified electrical personnel according to OSHA 1910.331 through 1910.335.
- Turn off all power sources supplying this equipment and de-energize all primary and secondary circuits before working on or inside equipment.
- Locking the manual operation or locking the motor cover does not disconnect the secondary motor circuit.
- Always use a properly rated voltage-sensing device to confirm equipment is de-energized.
- Always practice lock-out tag-out procedures according to OSHA requirements.
- Do not disable, remove, or modify any mechanical, electrical interlock or safety feature.

Failure to follow these instructions will result in death or serious injury.

NOTE: Panelboards for use in US service entrance applications installed after January 1st, 2017.


Refer to instruction bulletin 80043-839-01 for information on service entrance barrier kits.

ENGLISH

Appendix 1: Specifications

Typical Wiring

Figure 5: Main Lugs / Main Circuit Breaker Wiring Diagram

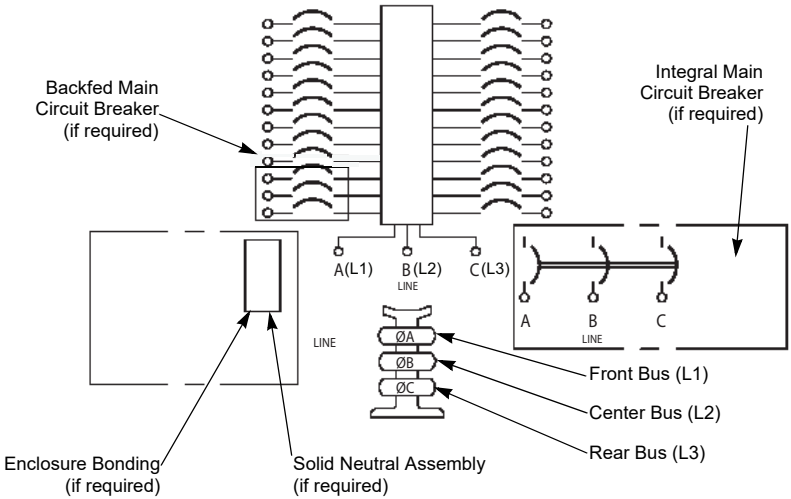

NOTE: For 1Ø systems, the center bus is not used.

NOTE: Branch connections phasing is determined by the circuit breaker selected. See the latest catalog or the Digest for circuit breaker selection.

NOTE: Assure that the circuit breaker voltage rating is appropriate for the system. With the selection of proper units, any of the listed voltage systems can be used.

ENGLISH

Panelboard Ratings

Refer to NEC section 110-22, 2017 Edition and CEC rule 14-014, 2015 Edition for more information. The series rated system label is located in the bag assembly. Short circuit tests are conducted at 100–105% of the maximum panelboard voltage. Interiors with CE mark meet IEC 61439-1 and IEC 61439-2.

Table 1: I-Line, Series Connected Circuit Breaker Ratings (RMS Symmetrical)

Maximum System Voltage AC [2]	Maximum Short Circuit Current Rating	Square D Brand Integral or Remote 2- or 3-Pole Main Circuit Breaker [1]	Square D Brand Branch Circuit Breaker	
			Catalog Designation	Poles
120	65,000	QG, BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	1
	100,000	QJ, BJ, HJ, HL, JJ, JL, LJ, LL, MJ, PJ	BD6, BG6	
	125,000	HL, JL, LL	BD6, BG6, BJ	
	200,000	HR, JR	BD6, BG6, BJ	
208Y/120	65,000	QG, BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	2, 3
	100,000	QJ, BJ, HJ, HL, JJ, JL, LJ, LL, MJ, PJ	BD6, BG6	
		QJ, PJ, RJ	QD	
240	42,000	LA	HD, JD, QD	
	65,000	HG, HJ, HL, JG, JJ, JL	HD	
		JG, JJ, JL	JD, QD	
		QG	QD	
		QG, BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	
		LH, PG, RG	HD, JD, QD	
		MG	HD, JD	1, 2, 3
		LG, LJ, LL	HD, JD, LA	
		LG, LJ, LL	LD	3
	100,000	PJ, RJ	QD	2
		LJ, LL	HD, HG, JD, JG, LA, MG	2, 3
		LJ, LL	LD, LG	3
		LL	LA, MG	2, 3
		QJ, BJ, HJ, HL, JJ, JL, LJ, LL, MJ	BD6, BG6	
		PJ	BG6	3
		HJ, HL, JJ, JL	HD, HG	2, 3
		JJ, JL	JD, JG	
		MJ, PJ, RJ	HD, HG, JD, JG	
		MJ	LA, LH	

ENGLISH

Table 1: I-Line, Series Connected Circuit Breaker Ratings (RMS Symmetrical) *(Continued)*

Maximum System Voltage AC [2]	Maximum Short Circuit Current Rating	Square D Brand Integral or Remote 2- or 3-Pole Main Circuit Breaker [1]	Square D Brand Branch Circuit Breaker	
			Catalog Designation	Poles
240	125,000	HL, JL	HD, HG, HJ	2, 3
		JL	JD, JG, JJ	
		HL, JL, LL	BD6, BG6, BJ	
		PL, RL	HD, HG, HJ, JD, JG, JJ	
	200,000	HR, JR	BD6, BG6, BJ	
		LR	BJ	3
		JR	QD	2, 3
		LR	HJ, HL, JJ, JL, LA, LH, QD, QG, QJ	
277	35,000	BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	1
	65,000	BJ, HJ, HL, JJ, JL, LJ, LL, MJ, PJ	BD6, BG6	
	100,000	HL, JL, LL	BD6, BG6, BJ	
	200,000	HR, JR	BD6, BG6, BJ	
480	30,000	LA	HD, JD	2, 3
	35,000	HG, HJ, HL, JG, JJ, JL	HD	
		JG, JJ, JL	JD	
		LH, MG, PG, RG	HD, JD	
		BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	
		LH	HG, JG	
		LG, LJ, LL	LD	3
		LG, LJ, LL	HD, JD, LA	2, 3
	42,000	RL	RG	
	65,000	HJ, HL, JJ, JL	HD, HG	
		BJ, HJ, HL, JJ, JL, LJ, LL, MJ, PJ	BD6, BG6	
		JJ, JL	JD, JG	
		LJ, LL	LD, LG	3
		LJ, LL	HD, HG, JD, JG, LA	2, 3
	100,000	HL, JL	HD, HG, HJ	
		HL, JL, LL	BD6, BG6, BJ	
		JL	JD, JG, JJ	
		PL, RL	HJ, JJ	
		LL	LD, LG, LJ	3
		LL	HD, HG, HJ, JD, JG, JJ, LA	2, 3
	200,000	HR, JR	BD6, BG6, BJ	
		HR	HD, HG, HJ, HL	
		JR	HD, HG, HJ, HL, JD, JG, JJ, JL	
		LR	HJ, HL, JJ, JL, LA, LH	

ENGLISH

Table 1: I-Line, Series Connected Circuit Breaker Ratings (RMS Symmetrical) *(Continued)*

Maximum System Voltage AC [2]	Maximum Short Circuit Current Rating	Square D Brand Integral or Remote 2- or 3-Pole Main Circuit Breaker [1]	Square D Brand Branch Circuit Breaker	
			Catalog Designation	Poles
480Y/277	35,000	BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	2, 3
	65,000	BJ, HJ, HL, JJ, JL, LJ, LL, MJ, PJ	BD6, BG6	
	100,000	HL, JL, LL	BD6, BG6, BJ	
	200,000	HR, JR	BD6, BG6, BJ	
600	18,000	HG, HJ, HL, JG, JJ, JL	HD	2, 3
		JG, JJ, JL	JD	
		MG, PG, RG	HD, JD	
		LG, LJ, LL	LD	3
		LG, LJ, LL	HD, JD	2, 3
	25,000	HJ, HL, JJ, JL	HD, HG	
		JJ, JL	JD, JG	
		LJ, LL	LD, LG	3
		LJ, LL	JD, JG, HD, HG	2, 3
	50,000	HL, JL	HD, HG, HJ	
		JL	JD, JG, JJ	
		PK	HJ, JJ	
		LL	LD, LG, LJ	3
		LL	HD, HG, HJ, JD, JG, JJ	2, 3
	100,000	HR	HD, HG, HJ, HL	
		JR	HD, HG, HJ, HL, JD, JG, JJ, JL	
		LR	HJ, HL, JJ, JL	
347	18,000	BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	1
	25,000	BJ, HJ, HL, JJ, JL, LJ, LL, MJ, PJ	BD6, BG6	
	50,000	HL, JL	BD6, BG6, BJ	
	100,000	JR, HR	BD6, BG6, BJ	
600Y/347	18,000	BG6, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL, MG, PG	BD6	3
	25,000	BJ, HJ, HL, JJ, JL, LJ, LL, MJ, PJ	BD6, BG6	
		LJ, LL	JD, JG	
	50,000	HL, JL, LL	BD6, BG6, BJ	
		LJ, LL	LG	
	100,000	HR, JR	BD6, BG6, BJ	
		LR	HJ, HL, JJ, JL	

[1] LD, LG, LJ, and LL are only available in 3 pole configurations

[2] For indicated circuit breakers rated less than this maximum voltage, the indicated short circuit current rating also applies, but at the voltage rating of the circuit breaker.

ENGLISH

Table 2: I-Line, Series Connected Circuit Breakers Ratings (RMS Symmetrical) with HQO Adapter

Maximum System Voltage AC	Maximum Short Circuit Current Rating	SquareD Brand Integral or Remote 2- or 3- Pole Main Circuit Breakers	SquareD Brand Branch Circuit Breaker Catalog Designation and Allowable Ampere Ranges			
			Type	1 Pole	2 Pole	3 Pole
120/240 1P/3W	25,000	BD, BG, BJ, HD, HG, HJ, HL, JD, JG, JJ, JL, LD, LG, LJ, LL	QO	15–30 A	15–30 A	—
208Y/120 3P/4W	42,000	LA	QO	15–30 A	15–30 A	—
	65,000	BG, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL	QO	15–30 A	15–30 A	—
240/120 3P/4W	100,000	BJ, HJ, HL, JJ, JL, LJ, LL	QO	15–30 A	15–30 A	—
	125,000	HL, JL	QO	15–30 A	15–30 A	—
	200,000	HR, JR	QO	15–30 A	15–30 A	—
240 1P/2W	25,000	BD, BG, BJ, HD, HG, HJ, HL, JD, JG, JJ, JL, LD, LG, LJ, LL	QO-H	—	15–30 A	—
	65,000	BG, BJ, HG, HJ, HL, JG, JJ, JL, LG, LJ, LL	QO-H	—	15–30 A	—
	100,000	BJ, HJ, HL, JJ, JL, LJ, LL	QO-H	—	15–30 A	—
	125,000	HL, JL	QO-H	—	15–30 A	—
208Y/120	18,000	LA/LH	QO	—	—	15–30 A
240/120 3P/4W	25,000	BD, BG, BJ, HD, HG, HJ, HL, JD, JG, JJ, JL	QO	—	—	15–30 A
	42,000	LA	QO-VH	—	—	15–30 A
	65,000	BG, BJ, HG, HJ, HL, JG, JJ, JL	QO	—	—	15–30 A
		LG, LJ, LL	QO	—	—	15-30 A
			QO-VH	—	—	15–30 A
240 3P/3W	100,000	BJ, HJ, HL, JJ, JL	QO	—	—	15–30 A
		LJ, LL	QO	—	—	15-30 A
			QO-VH	—	—	15–30 A
	125,000	HL, JL	QO	—	—	15–30 A
	200,000	HR, JR	QO	—	—	15–30 A

Table 3: Series Connected Fuse Ratings (RMS Symmetrical)

Maximum System Voltage AC [1]	Maximum Short Circuit Current Rating	Remote Main Fuse		Square D Brand Branch Circuit Breaker Catalog Designation (2- or 3-Pole) Unless Otherwise Stated
		Max A	Class	
120/240 1Ø 208Y/120	100,000	1200 A	L, T (300 V)	QD, QG
		800 A	T (600 V)	
		600 A	J, RK5	
240	65,000	1200 A	L, T (300 V)	QD
		800 A	T (600 V)	
		600 A	J, RK5	
	100,000	1200 A	L, T (300 V)	QD, QG (2-Pole)
		800 A	T (600 V)	
		600 A	J, RK5	
			J, T (600 V)	FA, FH, KA, KH, KC, LA, LH, MA, MH, MX, PG
			RK5	FH, KA, KH, LA, LH, MA, MH, MX, PG, HD, HG, HJ, HL, JD, JG, JJ, JL
			J	HD, HG, HJ, HL, JD, JG, JJ, JL

ENGLISH

Table 3: Series Connected Fuse Ratings (RMS Symmetrical) *(Continued)*

Maximum System Voltage AC [1]	Maximum Short Circuit Current Rating	Remote Main Fuse		Square D Brand Branch Circuit Breaker Catalog Designation (2- or 3-Pole) Unless Otherwise Stated
		Max A	Class	
240	100,000	800 A	T (600 V)	FH, KA, KH, LA, LH, MA, MH, MX, PG
			T (300 V)	PG
			L	FH, KA, KH, LA, LH, MA, MH, MX, PG
		1200 A	L	FH, KH, LA, LH, MA, MH, MX, PG
			T (600 V)	HD, HG, HJ, HL, JD, JG, JJ, JL
		1600/2000 A	L	NA, NC, NX, PJ, PL
		4000 A	L	HD, HG, HJ, HL, JD, JG, JJ, JL
	200,000	600 A	J, T (600 V)	FA (3-pole only) FH, FC, KH, KC, LA, LH, LC, MA, MH, MX, NA, NC, NX, PG, PJ, PL
			RK5	FH, FC, HD, HG, HJ, HL, JD, JG, JJ, JL, KH, KC, LA, LH, LC, MA, MH, MX, NC, NX, PG,PJ, PL
			J	HD, HG, HJ, HL, JD, JG, JJ, JL
		800 A	T (600 V)	FH, FC, KA, KH, KC, LA, LH, LC, MA, MH, MX, NA, NC, NX, PG, PJ, PL
			T (300 V)	PG, PJ, PL
			L	FH, FC, KH, KC, LA, LH, LC, MA, MH, MX, NA, NC, NX, PG, PJ, PL
		1200 A	L	FC, KH, KC, LC, MA, MH, MX, NA, NC, NX, PG, PJ, PL
			T (600 V)	HD, HG, HJ, HL, JD, JG, JJ, JL
		1600/2000 A	L	NA, NC, NX, PJ, PL
		4000 A	L	HD, HG, HJ, HL, JD, JG, JJ, JL
480	100,000	400 A	J, T(600 V)	HD, HG, HJ, HL, JD, JG, JJ, JL
		600 A	J, RK5	HJ, HL, JJ, JL
		600 A	J, T (600 V)	FC, KA, KH, KC, LA, LH, LC, MA, MH, MX, NA, PG, PJ
			RK5	FC, KA, KH, KC, LA, LH, LC, MA, MH, MX, NA, PG, PJ
		800 A	L, T(600V)	FC, KA, KH, KC, LA, LH, LC, MA, MH, MX, NA, PG, PJ
		1200 A	L	FC, KH, KC, LA, LH, LC, MA, MH, MX, NA, PG, PJ
			T (600 V)	HJ, HL, JJ, JL
		1600 A	L	KC, LC, MA, MH, MX, NA, PG, PJ
		2000 A	L	KC, LC, MH, MG, MJ, MX, NA, PG, PJ
		4000 A	L	HJ, HL, JJ, JL

Table 3: Series Connected Fuse Ratings (RMS Symmetrical) *(Continued)*

Maximum System Voltage AC [1]	Maximum Short Circuit Current Rating	Remote Main Fuse		Square D Brand Branch Circuit Breaker Catalog Designation (2- or 3-Pole) Unless Otherwise Stated
		Max A	Class	
480	200,000	200 A	RK5	HJ, HL
		400 A	J	FA, FH, FC, HJ, HL, JJ, JL, KA, KH, KC, LA, LH, LC, MA, MH, MX, NA, NC, NX, PG, PJ, PL
			T (600 V)	FA, FH, FC, HJ, HL, JJ, JL, KA, KH, KC, LA, LH, MA, MH, MX, NA, NC, NX
		600 A	J	FC, KA, KH, KC, LA, LH, LC, MA, MH, MX, MG, MJ, NA, NC, NX, PG, PJ, PL
			T(600 V)	KA, KH, KC, LA, LH, MA, MH, MX, NA, NC, NX
			RK5	KC, LA, LH, LC, MA, MH, MX, MG, MJ, NC, NX, PG, PJ
		800 A	T(300 V)	PG, PJ, PL
			T(600 V)	KA, KH, KC, LA, LH, MA, MH, MX, MG, MJ, NA, NC, NX, PG, PJ, PL
			L	KC, LA, LH, LC, MA, MH, MX, NA, NC, NX, PG, PJ, PL
		1200 A	L	KC, LC, MA, MH, MX, MG, MJ, NA, NC, NX, PG, PJ, PL
		1600/2000 A	L	NA, NC, NX
600	100,000	30 A	CC	HG, JG (Molded Case Switches)
		200 A	J	HD, HG, HJ, HL, JD, JG, JJ, JL
		400 A	J, T (600 V)	HJ, HL, JJ, JL

[1] For indicated circuit breakers rated less than this maximum voltage. The indicated short circuit current rating also applies, but at the voltage rating of the circuit breaker.

Table 4: NF Panel Mission Critical Breaker Selectivity

Maximum SCCR (RMS Symmetrical)	I-Line Circuit Breakers Used As Remote Mains	Remote Branch Circuit Breakers			
		Type[1]	1-pole	2-pole	3-pole
Series Rated and Selective to 18 kA at 240 Vac	J-W, 250 A	ED, EG, EJ	15–70	15–125	15–125
Series Rated and Selective to 7 kA at 480Y/277 Vac	J-W, 250 A	ED, EG, EJ	15–70	70–125	70–125
Series Rated and Selective to 10 kA at 480Y/277 Vac	J-W, 250 A	ED, EG, EJ	15–60	15–60	15–60
Series Rated and Selective to 30 kA at 480Y/277 Vac or at 240 Vac	L-W, 250 A L-W, 400 A L-W, 600 A	ED, EG, EJ	15–70	15–125	15–125

[1] Including EPD circuit breakers

Table 5: NQ Panel Mission Critical Breaker Selectivity

Maximum SCCR (RMS Symmetrical)	I-Line Circuit Breakers Used As Remote Mains	Remote Branch Circuit Breakers			
		Type[1]	1-pole	2-pole	3-pole
Fully Rated and Selective to 10 kA at 208Y/120 Vac or at 240/120 Vac	J-W, 250 A L-W, 250 A	QO(B)	10–70	10–125	10–125
		QO(B)-H			
		QO(B)-VH			
		QH			
Series Rated and Selective to 12 kA at 208Y/120 Vac or at 240/120 Vac	J-W, 250 A	QO(B)	10–70	10–125	10–60
		QO(B)-H			
		QO(B)-VH			
		QH			
Series Rated and Selective to 15 kA at 208Y/120 Vac or at 240/120 Vac	J-W, 250 A	QO(B)	10–60	10–60	10–30
		QO(B)-H			
		QO(B)-VH			
		QH			
Series Rated and Selective to 18 kA at 208Y/120 Vac or at 240/120 Vac	J-W, 250 A	QO(B)	10–30	10–30	—
		QO(B)-H			
		QO(B)-VH			
		QH			
	L-W, 250 A	QO(B)	10–60	10–60	10–60
		QO(B)-H			
		QO(B)-VH			
		QH			
Series Rated and Selective to 30 kA at 208Y/120 Vac or at 240/120 Vac	L-W, 400 A L-W, 600 A	QO(B)	15–70	15–150	15–150
		QO(B)-H			
		QO(B)-VH			
		QH			

[1] Including AFI, CAFI, EPD and GFI Circuit Breakers

Additional Short Circuit Current Ratings

Square D Brand I-Line plug-on lugs installed in this panelboard and protected by indicated Square D Brand circuit breakers are suitable for use where the available short circuit current is not greater than that shown in the following table. The short circuit current rating cannot exceed the rating marked on the protecting circuit breaker. The protecting circuit breakers may be the main, or if plugged onto the same I-Line bus stack, may be downstream from the plug-on lugs.

Table 6: Short Circuit Current Ratings for Plug-On Lugs with Protective Circuit Breakers[1]

Catalog Number and Ampere Rating	Protecting Circuit Breakers			Maximum Available Short Circuit Current	
	Catalog Prefix	Number of Poles	Maximum Amperes	RMS Sym. kA	Volts AC
SL100, 100 A SL225, 225 A SL250, 250 A SL400, 400 A SL800, 800 A SL800M5, 800 A SL1200, 1200 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A S33930, 1200 A S33931, 1200 A	FA	2, 3	100	25	240
				18	480
				14	600
	FH	2, 3	100	65	240
				25	480
				18	600
	FD	2, 3	100	25	240
				18	480Y
	FG	2, 3	100	65	240
				35	480Y
	FJ	2, 3	100	100	240
				65	480Y
SL225, 225 A SL400, 400 A SL800, 800 A SL800M5, 800 A SL1200, 1200 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A S33930, 1200 A S33931, 1200 A	KA	2, 3	225	42	240
				25	480
				22	600
	KH	2, 3	225	65	240
				35	480
				25	600
	KC	2, 3	225	100	240
				65	480
	KI	2, 3	225	200	240
				200	480
				100	600
SL400, 400 A SL800, 800 A SL800M5, 800 A SL1200, 1200 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A SL33930, 1200 A SL33931, 1200 A	DG	3	400	65	240
				35	480
	DJ	3	400	100	240
				65	480
	DL	3	400	125	240
				100	480
SL800, 800 A SL800M5. 800 A SL1200, 1200 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A S33930, 1200 A S33931, 1200 A	DG	3	600	65	240
				35	480
	DJ	3	600	100	240
				65	480
	DL	3	600	125	240
				100	480

ENGLISH

Table 6: Short Circuit Current Ratings for Plug-On Lugs with Protective Circuit Breakers[1] *(Continued)*

Catalog Number and Ampere Rating	Protecting Circuit Breakers			Maximum Available Short Circuit Current	
	Catalog Prefix	Number of Poles	Maximum Amperes	RMS Sym. kA	Volts AC
SL250, 250 A SL400, 400 A SL800, 800 A SL800M5, 800 A SL1200, 1200 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A S33930, 1200 A S33931, 1200 A	HD/JD	2, 3	150/250	25	240
				18	480
				14	600
	HG/JG	2, 3	150/250	65	240
				35	480
				18	600
	HJ/JJ	2, 3	150/250	100	240
				65	480
				25	600
	HL/JL	2, 3	150/250	125	240
				100	480
				50	600
	HR/JR	2, 3	150/250	200	240
				200	480
				100	600
	KI	2, 3	250	200	240
				200	480
				100	600
SL400, 400 A SL800, 800 A SL800M5, 800 A SL1200, 1200 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A S33930, 1200 A S33931, 1200 A	LA	2, 3	400	42	240
				30	480
				22	600
	LH	2, 3	400	65	240
				35	480
				25	600
	LD	3	400	25	240
				18	480
				14	600
	LG	3	400	65	240
				35	480
				18	600
	LJ	3	400	100	240
				65	480
				25	600
	LL	3	400	125	240
				100	480
				50	600
	LR	3	400	200	240
				200	480
				100	600
SL400, 400 A SL800, 800 A SL1200, 1200 A S33930, 1200 A S33931, 1200 A	LC/LX	2, 3	400	100	240
				65	480
				35	600
	LI/LXI	2, 3	400	200	240
				200	480
				100	600

ENGLISH

Table 6: Short Circuit Current Ratings for Plug-On Lugs with Protective Circuit Breakers[1] *(Continued)*

Catalog Number and Ampere Rating	Protecting Circuit Breakers			Maximum Available Short Circuit Current	
	Catalog Prefix	Number of Poles	Maximum Amperes	RMS Sym. kA	Volts AC
SL800, 800 A SL800M5, 800 A SL1200, 1200 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A S33930, 1200 A S33931, 1200 A	LD	3	600	25	240
				18	480
				14	600
	LG	3	600	65	240
				35	480
				18	600
	LJ	3	600	100	240
				65	480
				25	600
	LL	3	600	125	240
				100	480
				50	600
	LR	3	600	200	240
				200	480
				100	600
SL800, 800 A SL1200, 1200 A S33930, 1200 A S33931, 1200 A	LC/LX	2, 3	600	100	240
				65	480
				35	600
	LI/LXI	2, 3	600	200	240
				200	480
				100	600
	MA	2, 3	800	42	240
				30	480
				22	600
	MH/MX	2, 3	800	65	240
				65	480
				25	600
SL800M5, 800 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A	MG, PG	2, 3	800	65	240
				35	480
				18	600
	MJ, PJ	2, 3	800	100	240
				65	480
				25	600
	PK	2, 3	800	65	240
				50	480
				50	600
SL800M5, 800 A SL1200P5, 1200 A SL1200P6, 1200 A SL1200P7, 1200 A	PL	2, 3	800	125	240
				100	480
				25	600
	MA/MH/MX	2, 3	800	65	240
				65	480
				25	600

ENGLISH

Table 6: Short Circuit Current Ratings for Plug-On Lugs with Protective Circuit Breakers[1] *(Continued)*

Catalog Number and Ampere Rating	Protecting Circuit Breakers			Maximum Available Short Circuit Current	
	Catalog Prefix	Number of Poles	Maximum Amperes	RMS Sym. kA	Volts AC
SL1200, 1200 A S33930, 1200 A	NA	2, 3	1200	100	240
				50	480
				25	600
	NC/NX	2, 3	1200	125	240
				100	480
				65	600
SL1200P5, 1200A SL1200P6, 1200A SL1200P7, 1200A	PG/RG	2, 3	1200	65	240
				35	480
				18	600
	PJ/RJ	2, 3	1200	100	240
				65	480
				25	600
	PK	2, 3	1200	65	240
				50	480
				50	600
	RK	2, 3	1200	65	240
				65	480
				65	600
	PL	2, 3	1200	125	240
				100	480
				25	600
	RL	2, 3	1200	125	240
				100	480
				50	600
S33930, 1200 A S33931, 1200 A	MG	2, 3	800	65	240
	PG	2, 3	1200	35	480
				18	600
	MJ	2, 3	800	100	240
	PJ	2, 3	1200	65	480
				25	600
	PK	2, 3	1200	65	240
				50	480
				50	600
	PL	2, 3	1200	125	240
				100	480
S33930, 1200 A	RG	2, 3	1200	65	240
				35	480
				18	600
	RJ	2, 3	1200	100	240
				65	480
				25	600
	RL	2, 3	1200	125	240
				100	480
				50	600
	RK	2, 3	1200	65	240/480/600

[1] S33930, S33931, SL1200P5, SL1200P6, SL1200P7, SL kits are rated 1200 A and may be applied to 1200 ampere loads when installed into HCRU panelboards restrictively on the wide side.

Table 7: Short Circuit Current Ratings for Plug-On Lugs with Protective Circuit Breakers (DC)

Catalog Number and Ampere Rating	Protecting Circuit Breakers			Maximum Available Short Circuit Current	
	Catalog Prefix	Number of Poles	Maximum Amperes	RMS Sym. kA	Volts DC
SL250, 250 A	HD, HG, HJ, HL, JD, JG, JJ, JL	2, 3	250	20	250

CE Marking

Interiors with the "CE" mark meet the IEC 61439-1 and IEC 61439-2 standards. Main Lug interiors with the "CE" mark have been tested to withstand 42,000 RMS symmetrical amperes for 30 cycles. Only IEC rated circuit breakers may be used with "CE" marked interiors and the short circuit rating of the interior is limited to the lowest IEC rated branch breaker unless series rated with an IEC rated main breaker in Table 1. (See Digest for details)

Appendix 2: Accessory Kits

An assortment of field-installable accessory kits are available for I-Line panelboards:

- Equipment Ground Bar Kits, on page 30
- Mechanical Interlock Kits, on page 31
- Main Lug Kits, on page 31
  - — Versa-Crimp Lugs and Versatile Compression Lug Kits — Aluminum, on page 31
  - — Versa-Crimp Lugs and Versatile Compression Lug Kits — Copper, on page 32
- Circuit Breaker Lug Kits, on page 32
  - — Versa-Crimp Lugs and Versatile Compression Lug Kits, on page 33

Equipment Ground Bar Kits

Equipment ground bar kits, suitable for copper or aluminum wire, meet the grounding needs of I-Line panelboards. Select the required kit according to the interior catalog number. Kits can be field installed.

Table 8: Equipment Ground Bar Kits Specifications

Panelboard	Use Ground Bar Kit Catalog Number	
	Aluminum [1]	Copper [2]
HCN	PK27GTA	PK27GTACU
HCM, HCJ, HCRU, and HCP	PK32DGTA	PK32DGTACU

1 Aluminum bars suitable for 60° C or 75° C Copper or Aluminum conductors.

2 Copper bars suitable for 60° C or 75° C Copper conductors.

NOTE: Ground bar mounting locations are identified by the ground symbol ⏚ stamped into the back wall of the enclosure.

ENGLISH

Mechanical Interlock Kits

Kits can be field installed.

Table 9: Mechanical Interlocks Specifications

Catalog Number	Circuit Breaker Combinations		Panelboard Type
	Mains	Auxiliary	
HFK3DTI	FA	FA	HCN, HCM, HCJ, HCRU, and HCP
HFM3DTI	LA	FA	HCRU
HLM3DTI	LA	LA	HCP, HCRU
HPFK3DTI	MG/MJ	FA/KA	HCP, HCPSU, HCRU
HPHJ3DTI	MG/MJ	H/J	HCP, HCPSU, HCRU
HPL3DTI	MG/MJ	LA	HCP, HCPSU, HCRU
HPP3DTI	MG/MJ	MG/MJ	HCP, HCPSU, HCRU

Main Lug Kits

Versa-Crimp® and Versatile™ Kits can be field installed.

Table 10: Versa-Crimp Lugs and Versatile Compression Lug Kits — Aluminum

Panelboard Amps	Wire Range	Part Number	Versa-Crimp Tool	Crimp Lug Adapter Kit
225 A	4–300 kcmil AL/CU 21.1–151 mm^2	VCEL030516H1	VC-6 Series	—
400 A				HCN400VCA HCM400VCA HCW400VCA
	500–750 kcmil AL 253–380 mm^2	VCEL07512H1	VC-6FT, VC-8	—

ENGLISH

Table 10: Versa-Crimp Lugs and Versatile Compression Lug Kits — Aluminum

Panelboard Amps	Wire Range	Part Number	Versa-Crimp Tool	Crimp Lug Adapter Kit
600 A	2/0–500 kcmil AL/CU 67.4–253 mm^2	VCEL05038H1	VC-6 FT	HCN600VCA HCM600VCA HCW600VCA
800 A		VCEL05012H1		HCM800VCA HCW800VCA
1200 A	500–750 kcmil AL 253–380 mm^2 500 kcmil CU 253 mm^2	VCEL07512H1 [1]	VC-6FT, VC-8	HCW1200VCA

[1] When this lug is installed, the box extension HC4212DEX (F or S) must be added to the incoming cable end of the enclosure.

Table11: Versa-Crimp Lugs and Versatile Compression Lug Kits — Copper

Panelboard Amps	Wire Range	Part Number	Versa-Crimp Tool	Crimp Lug Adapter Kit
225 A	2/0–300 kcmil CU 67.4–151 mm^2	VCELC03038H1	VC-6-3 VC7 VC6-FT VC7-FT	—
400 A				HCN400VCA HCM400VCA HCW400VCA
	400–750 kcmil CU 203–380 mm^2	VCELC07512H1	VC-6FT VC7-FT VC8	—
600 A	250–500 kcmil CU 127–253 mm^2	VCELC05012H1	VC6-3 VC7 VC6-FT VC7-FT	HCN600VCA HCM600VCA HCW600VCA
800 A				HCM800VCA HCW800VCA
1200 A	400–750 kcmil CU 203–380 mm^2	VCELC07512H1	VC-6FT VC7-FT VC8	HCW1200VCA

Circuit Breaker Lug Kits

Versa-Crimp® and Versatile™ Kits can be field installed.

Table 12: Versa-Crimp Lugs and Versatile Compression Lug Kits [1]

Aluminum	Wire Range [2]	Versa-Crimp Tool	Copper	Wire Range [2]	Versa-Crimp Tool
VC100FA VC100FD	8–1/0 8.36–53,5 mm^2	VC-6	CVC100FA CVC100FD	6–1/0 CU 13.3–53.5 mm^2	VC-6 Series
VC250KA3	4–300 kcmil 21.1–151 mm^2		CVC250KA3	2/0–300 kcmil CU 67.4–151 mm^2	
VC250KA35	250–350 kcmil 127–177 mm^2		CVC400LA3	4–300 kcmil CU 21.1–151 mm^2	
VC400LA35	250–350 kcmil 127–177 mm^2		CVC400LA5 CVC600MA5	250–500 kcmil CU 127–253 mm^2	
VC400LA3	4–300 kcmil 21.1–151 mm^2		CVC1200NE5	2/0–500 kcmil 67.4–253 mm^2	
VC400LA5	2/0–500 kcmil 67.4–253 mm^2		CVC1200NE7	500–750 kcmil AL 253–380 mm^2 500 kcmil CU 253 mm^2	
VC400LA7	500–750 kcmil AL 253–380 mm^2 500 kcmil CU 253 mm^2	VC-6 FT VC-8			
VC400LA7	2/0-500 kcmil 67.4–253 mm^2	VC-6 Series	—		
VC800MA7	500–750 kcmil AL 253–380 mm^2 500 kcmil CU 253 mm^2	VC-6 FT VC-8			
VC1200NE5	2/0–500 kcmil 67.4–253 mm^2	VC-6 Series			
VC1200NE7	500–750 kcmil AL 253–380 mm^2 500 kcmil CU 253 mm^2	VC-6 FT VC-8			
LV426989 (B frame)	# 8–1/0 AWG	V-6, VC-6 FT	LV426987 (B frame)	# 6–1/0 AWG	V-6, VC-6 FT
YA060HD	# 6–#2 AWG	[3]	CYA060HD	# 6–1/0 AWG CU	[3]
YA150HD	# 1–4/0 AWG		CYA150JD	# 4–2/0 AWG CU	
YA150JD	# 1–3/0 AWG		CYA150HD	# 6–1/0 AWG CU	
YA250J35	3/0–350 kcmil		CYA250J3	1/0–350 kcmil CU	

1 Always ensure compression lugs are installed in panelboards that will provide wire bending space in accordance with NEC Article 312.6, 2017 Edition.

2 Unless otherwise specified, wire sizes apply to both aluminum and copper conductors.

3 Use crimp tools in accordance with instructions that are provided within each lug kit.

Table 13: Compression Lug Kits for L-, MG-, MJ-, P-, and R-Frame Circuit Breaker [1]

Aluminum	Wire Range [2]	Versa-Crimp Tool	Copper	Wire Range [2]	Versa-Crimp Tool
YA250P3	2/0–300 kcmil 67.4–151 mm^2	4, 5	CYA400P5	4/0–500 kcmil CU 107–253 mm^2	4, 5
YA300P5	4/0–500 kcmil 107–253 mm^2		CYA600P5	4/0–500 kcmil CU 107–253 mm^2	
YA400P3	2/0–300 kcmil 67.4–151 mm^2		CYA800P7	500–750 kcmil CU 253–380 mm^2	
YA400P7	500–750 kcmil 253–380 mm^2		CYA1200R5	4/0–500 kcmil CU 107–253 mm^2	
YA600P5	4/0–500 kcmil 107–253 mm^2		CYA1200R7	500–750 kcmil CU 253–380 mm^2	
YA800P7 [3]	500–750 kcmil 253–380 mm^2		—		
YA1200R3	2/0–300 kcmil 67.4–151 mm^2				
YA1200R5	4/0–500 kcmil 107–253 mm^2				
YA1200R7	500–750 kcmil 253–380 mm^2				
YA400L31K3 [7]	#4–300 kcmil 21–151 mm^2	4	CYA400L31K3 [7]	2/0–300 kcmil 67.4–151 mm^2	4
YA600L32K3 [7]			CYA600L32K3 [7]		
YA400L51K3 [7]	2/0–500 kcmil 67.4–253 mm^2		CYA400L51K3 [7]	250–500 kcmil 127–253 mm^2	
YA600L52K3 [7]			CYA600L52K3 [7]		
YA400L71K3 [6, 7]	500–750 kcmil 253–380 mm^2		—		

1 Always ensure compression lugs are installed in panelboards that will provide wire bending space in accordance with NEC Article 312.6, 2017 Edition.

2 Unless otherwise specified, wire sizes apply to both aluminum and copper conductors.

3 When this lug is installed on a vertically mounted main circuit breaker, in an HCP interior, add box extension HC4212DEX (F or S) to the end of that enclosure.

4 Use crimp tools in accordance with instructions that are provided within each lug kit.

5 Always ensure compression lugs are installed in panelboards that will provide wire bending space in accordance with NEC Article 312.6, 2017 Edition. I-LINE panelboards with a Type 1 enclosure require a 5.0 in. extended width box when the branch breakers use these lugs (these compression lugs may not be used in weatherproof enclosures). Contact your local Schneider Electric representative for assistance.

6 This lug is only allowed in HCP/HCPSU panelboards with Type 1 enclosures with a 5.0 in. wide side extension.

7 For L-frame circuit breakers only.

Extension Kits

Refer to current Square D Digest and Instruction Bulletin 80043-350-04 for information about box extension kits.

Schneider Electric USA, Inc.
800 Federal Street
Andover, MA 01810 USA
888-778-2733
www.se.com/us

Standards, specifications, and designs may change, so please ask for confirmation that the information in this publication is current.

Schneider Electric and Square D are trademarks and the property of Schneider Electric SE, its subsidiaries, and affiliated companies. All other trademarks are the property of their respective owners.

© 1996–2024 Schneider Electric All Rights Reserved

80043-309-20 Rev. 10, 07/2026
Replaces 80043-309-20 Rev. 09, 08/2024