


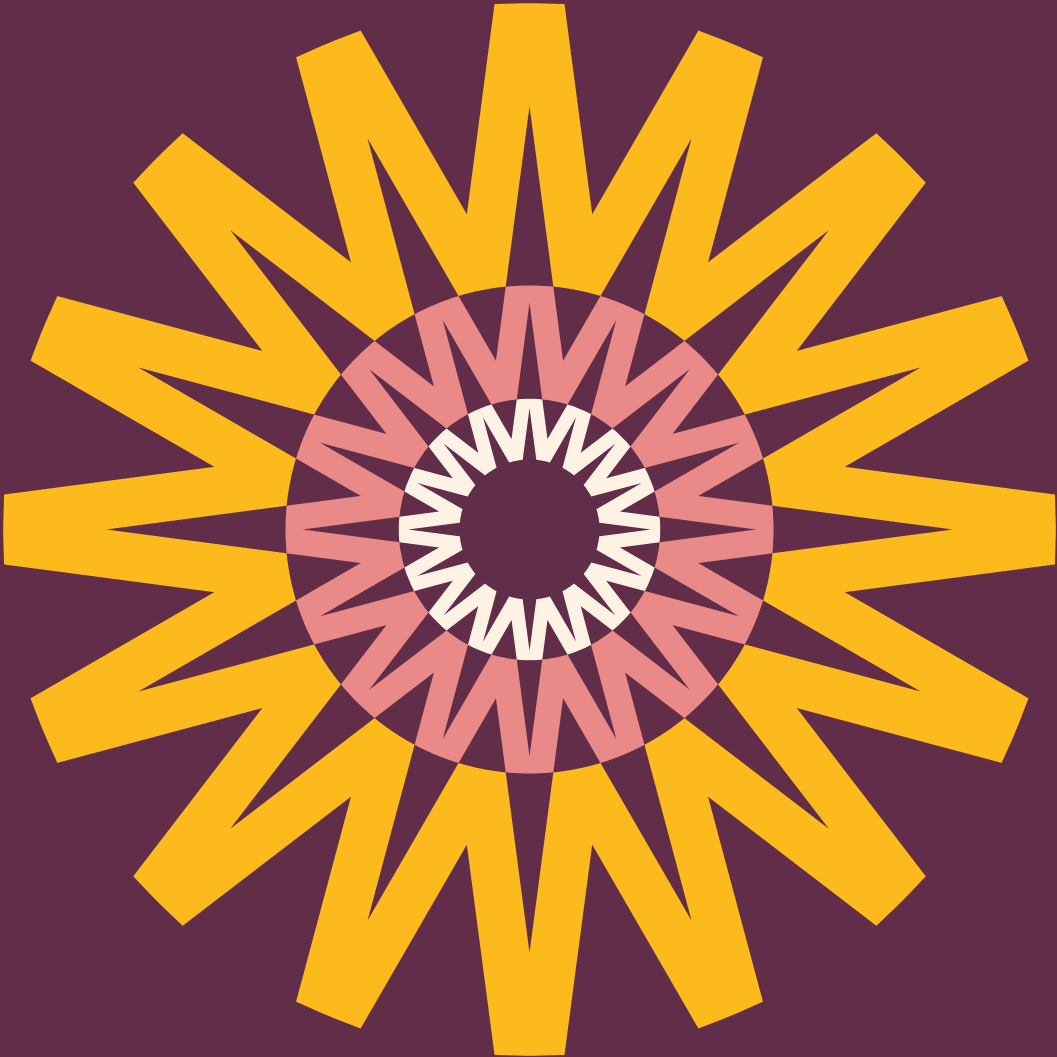

chase bliss ANALOGMAN



You can use MIDI with **Brothers AM** to control many of its parameters or save and recall up to 122 presets.

1. **Brothers AM** receives MIDI through a standard ¼" TRS patch cable. If your controller has a 5-pin output, the Chase Bliss MIDIBox is a simple way to convert 5-pin MIDI to TRS (the MIDIBox is not included with **Brothers AM**).

2. **Brothers AM** is set to MIDI channel 2 by default, but it's easy to change. Simply hold down both stomp switches when you power up the pedal. The pedal is now looking for the first "Program Change" message it sees, and it will set itself to that channel.

## SAVING A PRESET VIA MIDI

Presets are both saved and recalled using Program Change (PC) messages.

To save a preset, send a Program Change message while holding down both foot switches. Sending a Program Change message of 45, for example, will save your current settings to preset 45.

There are 122 total slots.

Slots 1 and 2 correspond to the preset toggle on the pedal. Slot 1 is the right slot. Slot 2 is the left slot.

## RECALLING A PRESET VIA MIDI

To recall a preset, simply send **Brothers AM** a Program Change message.

If the target slot is empty, nothing will be recalled. There are no factory presets besides the two that come loaded in slots 1 and 2.


Sending a Program Change message of 0 puts the pedal in "Live" mode, matching the pedal's current settings.

## Brothers AM Control Change Channels

| What:               | MIDI CC: | Value:                                          |
|---------------------|----------|-------------------------------------------------|
| <b>KNOBS</b>        |          |                                                 |
| GAIN 2              | 14       | 0 - 127                                         |
| VOLUME 2            | 15       | 0 - 127                                         |
| GAIN 1              | 16       | 0 - 127                                         |
| TONE 2              | 17       | 0 - 127                                         |
| VOLUME 1            | 18       | 0 - 127                                         |
| TONE 1              | 19       | 0 - 127                                         |
| PRESENCE 2          | 27       | 0 - 127                                         |
| PRESENCE 1          | 29       | 0 - 127                                         |
| <b>TOGGLES</b>      |          |                                                 |
| GAIN 2 TYPE         | 21       | BOOST = 0, 1<br>OD = 2<br>DIST = 3 OR >         |
| TREBLE BOOST        | 22       | FULL SUN = 0, 1<br>OFF = 2<br>HALF SUN = 3 OR > |
| GAIN 1 TYPE         | 23       | DIST = 0, 1<br>OD = 2<br>BOOST = 3 OR >         |
| <b>FOOTSWITCHES</b> |          |                                                 |
| CHANNEL 1 BYPASS    | 102      | off = 0<br>on = 1 or >                          |
| CHANNEL 2 BYPASS    | 103      | off = 0<br>on = 1 or >                          |

| What:                      | MIDI CC: | Value:               |
|----------------------------|----------|----------------------|
| <b>OTHER</b>               |          |                      |
| EOM (EXPRESSION OVER MIDI) | 100      | 0 - 127              |
| PRESET SAVE                | 111      | 1-122                |
| <b>DIP SWITCHES</b>        |          |                      |
| <b>LEFT BANK</b>           |          |                      |
| VOLUME 1                   | 61       | off = 0, on = 1 or > |
| VOLUME 2                   | 62       | off = 0, on = 1 or > |
| GAIN 1                     | 63       | off = 0, on = 1 or > |
| GAIN 2                     | 64       | off = 0, on = 1 or > |
| TONE 1                     | 65       | off = 0, on = 1 or > |
| TONE 2                     | 66       | off = 0, on = 1 or > |
| SWEEP                      | 67       | B = 0, T = 1 or >    |
| POLARITY                   | 68       | F = 0, R = 1 or >    |
| <b>RIGHT BANK</b>          |          |                      |
| HI GAIN 1                  | 71       | off = 0, on = 1 or > |
| HI GAIN 2                  | 72       | off = 0, on = 1 or > |
| MOTOBYP 1                  | 73       | off = 0, on = 1 or > |
| MOTOBYP 2                  | 74       | off = 0, on = 1 or > |
| PRES LINK 1                | 75       | off = 0, on = 1 or > |
| PRES LINK 2                | 76       | off = 0, on = 1 or > |
| MASTER                     | 77       | off = 0, on = 1 or > |

CC numbers are left to right as you look down over the top of the pedal. The left bank is labeled 61-68 and the right bank is 71-77.

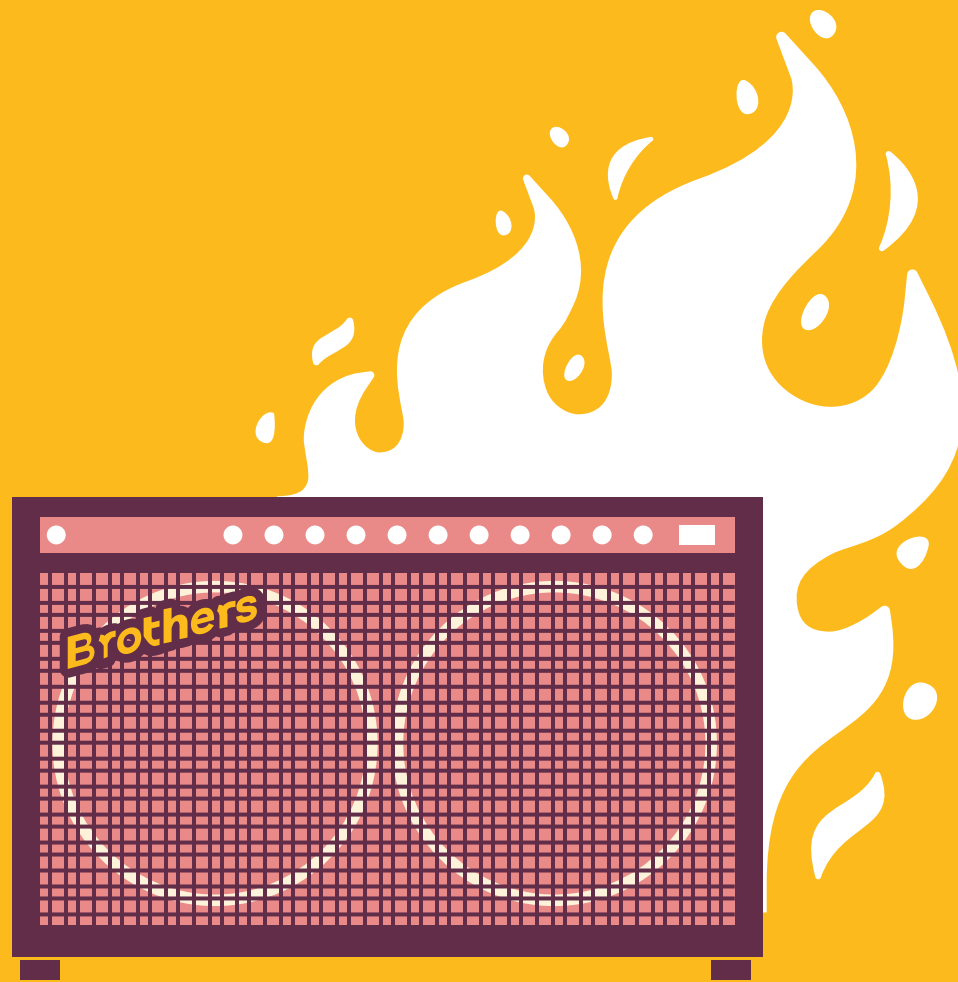

# Good Luck on Your MIDI Journey

Contact us any time: [midi@chasebliss.com](mailto:midi@chasebliss.com)