MEP Drawing Platform

Quick How To Use Manual

PDF mark-up, take-off, overlay and document control

Version 1.22.0

Part of the MEP Design Platform suite - D3D Design & Drafting

October 2026

Contents

1. Getting started . . . 3
2. The screen . . . 4
3. Moving around the drawing . . . 5
4. Markup tools . . . 5
5. Callouts and highlight colours . . . 6
6. Blocks - sketching with symbols . . . 6
7. Drawing cable . . . 6
8. Stamps . . . 6
9. Measuring and setting the scale . . . 6
10. The Markups List . . . 7
11. Saving and exporting . . . 7
12. Snipping a picture from one drawing onto another . . . 7
13. Working with the PDF itself . . . 8
14. Counting and measuring: legend, take-off and Auto Take-off . . . 8
15. Overlay Service Drawings (clash check) . . . 9
16. Pipe run for pump calculation . . . 10
17. The CDE menu - document control (ISO 19650) . . . 10
18. Look and layout . . . 11
19. Keyboard shortcuts . . . 11
20. If something looks wrong . . . 12
21. The other guides . . . 12

1. Getting started

The MEP Drawing Platform is a PDF mark-up and review tool for building services drawings. You open a drawing PDF, mark it up (comments, clouds, highlights, shapes, stamps, measurements, sketch symbols, cables), review everything in the Markups List and send it out. It also reads plotted drawings to count and measure them (Auto Take-off), lays service drawings over each other to find clashes (Overlay), and keeps a document register in the ISO 19650 style (CDE). Your original PDF is never changed.

Install

- Open the **MEP Drawing Platform** folder and double-click **Install MEP Drawing Platform.bat**. It builds the program, puts the icon on your Desktop and opens it. Run it again whenever you receive updated files.
- To send the program to another PC run **Build Setup Wizard.bat** afterwards (it needs the free Inno Setup). It asks whether to protect the Setup with a time-limited passcode, then writes one Setup file into the Setup Output folder. The other person double-clicks it and clicks Next, Next, Finish.

Passcode

Some copies of the Drawing Platform are issued with a passcode. If yours is, the first time you start it asks for the passcode (or it is already built in and you are never asked). Type it exactly as given, for example **20271028-A1B2C3D4**. Once accepted it is remembered on that PC and works for every other MEP program the passcode covers, so you are not asked again. When the date on the passcode passes, the program asks for a new one; contact D3D Design & Drafting. A passcode can cover all the MEP programs or only some of them - if it does not include the Drawing Platform the box says so.

Open a drawing


- File > Open (Ctrl+O), the Open PDF button on the toolbar, or double-click a name under Recents in the File Access panel.
- Several drawings can be open at once, each in its own tab. A drawing named the usual way (project-originator-volume-level-type-role-number-title-revision) is shown by the part that tells drawings apart, for example *E-0101 P02 BLOCK A FIRST FLOOR*; hover over a tab for the full name. Up to about seven tabs fit across; with more, the row scrolls.
- Your name appears as the Author on every markup. Set it under Drawing Platform > Preferences (it also asks the first time you start).
- Clear the Recents list with the **Clear recents** button or right-click > Remove from recents. Only the list is cleared, never your files.

Where your markups are kept

Markups are saved in a small file next to the PDF (the PDF name followed by **.dpmarkup**) and reload automatically the next time you open that PDF. Keep the two files together when you move a drawing. Press Ctrl+S to save.


> **Tip:** to give someone a PDF that already shows your markups, use File > Save As (see section 11). For a quick look, File > Email... makes a copy with the markups and starts an email.

2. The screen

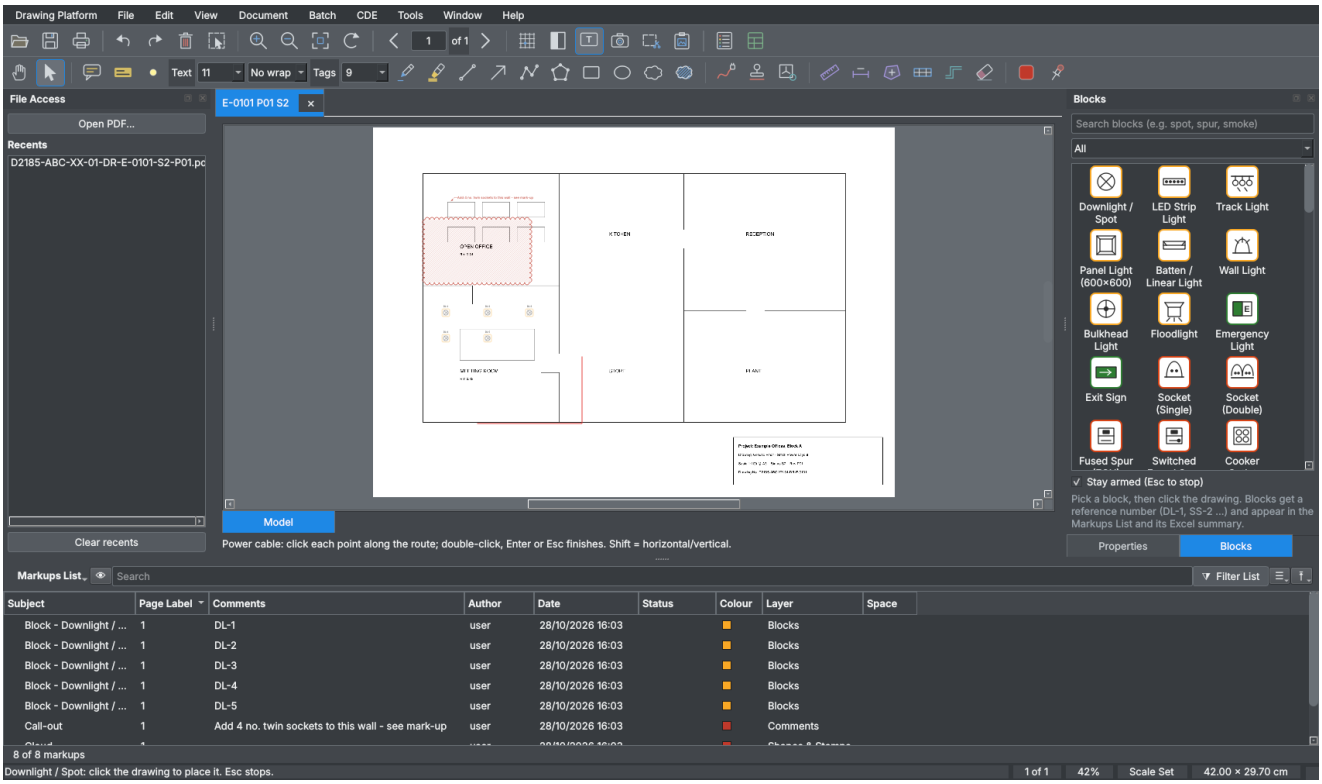

The main window with a few markups on a sample plan (Mid Grey theme).

Area	What it does
Menu bar	Drawing Platform, File, Edit, View, Document, Batch, CDE, Tools, Window and Help.
Top toolbar	Open, Save, Print, Undo/Redo, Delete, Select all, Zoom, Fit page, Rotate, page number box and arrows, Grid, Dark page, Show/Hide IDs, Snapshot, Snip and Paste a picture, Markups List and Excel export.
Markup toolbar	Pan, Select, Callout, Highlight Background, Text size, Wrap and Tag size, Pen, Highlighter, Line, Arrow, Polyline, Polygon, Rectangle, Ellipse, Cloud, Cloud fill, Cable, Stamps, Blocks, Calibrate, Measure, Duct/Pipe run, Eraser, Colour and Keep tool.
File Access (left)	Open button and your recent drawings.
Properties / Blocks (right)	Two tabs: the drawing's properties, and the Blocks palette for sketching with symbols.
Markups List (bottom)	A line for every markup with Subject, Page, Comments, Author, Date, Status, Colour and Layer.
Status bar	Page, zoom, scale (it says *Scale Not Set* until you calibrate) and page size, plus hints for the tool you are using.



The two toolbars: file and view (top) and mark-up tools (second row).

3. Moving around the drawing

- **Pan:** the hand tool (Shift+V) or just drag when no tool is selected. The sheet can be dragged anywhere in the free space around it, at any zoom level.
- **Zoom:** mouse wheel, the + and - keys, or the magnifier buttons.
- **Fit Page** Ctrl+9, **Fit Width** Ctrl+0, **Actual Size** Ctrl+8 (View menu).
- **Pages:** type a number in the page box, or use the arrows.
- **Rotate View** clockwise or counter-clockwise from the View menu (this turns your view, not the PDF).
- **Grid** (Shift+F9) shows a grid; Snap to Grid and Snap to Content make points land exactly.
- **Dark page** (Ctrl+3) inverts the drawing colours for a dark background.
- **Full Screen** F11. **Presentation** Ctrl+Return hides the panels for a clean view.

Lost the panels or title bar? Choose Window > Reset Layout. The program always starts as a normal window with every panel showing.

4. Markup tools

Click a tool, then click or drag on the drawing. After each markup the tool switches off - turn on **Keep tool** (pin icon at the end of the Markup toolbar) to stay on the tool; Esc stops it. Choose a colour from the colour button first.

Tool	Key	How to use it
Select / Pan	V / Shift+V	Select a markup by clicking it (Shift+click for several) and drag to move. Drag a callout's arrow tip to move only the tip; Alt+drag moves the whole callout.
Callout / text	Q or T	Click, type your note and confirm. Add a coloured backing with Highlight Background (section 5).
Pen	P	Freehand drawing.
Highlighter	H	Drag a yellow highlight over an area.
Line / Arrow	L / A	Drag from start to end. Shift keeps it horizontal or vertical.
Polyline	Shift+N	Click each point; double-click or Enter finishes; Esc finishes and stops the tool.
Polygon	Shift+P	As Polyline but closed into a shape.
Rectangle / Ellipse	R / E	Drag a box.
Cloud	C	Drag a revision cloud around changed work. New clouds are hatched by default - see Cloud fill below.
Eraser	Shift+E	Click a markup to remove it.

- **Move:** Select tool, then drag. **Delete:** select and press Del. **Copy / Paste:** Ctrl+C, Ctrl+V (Ctrl+Shift+V pastes in place). **Undo / Redo:** Ctrl+Z / Ctrl+Y. **Multiply:** Edit > Multiply (Ctrl+M) makes the number of copies you ask for of the selected markup.
- Right-click any markup for its options (edit text, highlight colour, pin label, rotate, delete and more).
- **Copy to another drawing with a base point:** select the markups (or Edit > Select All Clouds), choose Edit > Copy with Base Point (Ctrl+Alt+C) and click a reference point - a corner or grid intersection you can find again. Switch to the other drawing, choose Edit > Paste at Point (Ctrl+Alt+V) and click where that same point is on it. The markups land lined up. If both drawings are calibrated at different scales you are asked whether to resize them to match. Esc cancels either click; Ctrl+Z undoes the paste.
- **Cloud fill:** the Fill button beside the Cloud tool sets how new clouds look - No fill, Hatched or Solid - with a Transparency choice and a fill colour. To change clouds already drawn, select them and choose *Apply these settings to the selected markups* (or *to every cloud on this drawing*). Right-click any cloud, rectangle, ellipse or highlight and choose *Fill / Hatch / Transparency...* for a live slider.

5. Callouts and highlight colours

- Place a callout with Q. Right-click it and choose Edit Text to change the words. Add Comment and Edit Text accept several lines (Enter = OK, Shift+Enter = new line).
- **Highlight Background:** right-click a callout and choose Highlight Background to put a coloured box behind the text. It stays on when you save, close and reopen.
- **Colours:** right-click > Highlight Colour offers ten colours (yellow, green, pink, orange, blue, purple, cyan, red, grey, white).
- **New comments:** switch on the highlight button next to the Callout and pick the colour from the dot beside it; every new callout then comes with that backing.
- **Text size:** the Text box on the Markup toolbar sets the size for new callouts and changes every callout you have selected.
- **Wrap:** choose No wrap, Narrow, Medium or Wide, or select a callout and drag the small yellow handle on its side to set the width by eye.
- **Tags:** the Tags box sets the size of measurement labels and duct, pipe and tray tags.

6. Blocks - sketching with symbols

The Blocks panel (right-hand tab) holds 88 symbols grouped by trade so you can sketch a layout quickly: lighting, power (sockets, fused and switched spurs, cooker), switching and control, distribution, fire alarm, data and security, ventilation, heating and cooling, water and plant, and sanitary fittings.

- Pick a block in the panel, then click the drawing to place it. Use the search box (for example *spot* or *spur*) or the group list. **Stay armed** keeps the block selected so you can place several; Esc stops.
- Each block gets an ID such as DL-1 or SS-2, which also appears in the Markups List and the Excel summary. The label icon on the toolbar (or View > Show Block IDs and Labels) shows or hides the IDs.
- **Edit the ID:** right-click a block > Edit ID / Tag and type your own (for example SS-GF/12). Leave it empty to go back to the automatic one. **Rotate:** right-click > Rotate 90.

7. Drawing cable

- Click the Cable tool (or Tools > Markup > Cable) and pick a type: power, lighting, spur, data, fire alarm, containment / tray, or earth / bonding. Each has its own colour, line style and weight.
- Click each point along the route; double-click or Enter finishes. Hold Shift for horizontal / vertical runs.
- Each cable appears in the Markups List as its own item. Once the drawing scale is set its length is shown too.

8. Stamps


- Open the Stamps button (or Tools > Stamp), choose a stamp, then click the drawing. The list includes For Review, Approved, Revised, Released, Draft Print, Preliminary, Seal, Watermark, the ISO 19650 suitability stamps (S2 For Information, S3 For Review / Comment, S4 For Stage Approval, A1 Authorised / Accepted, B1 Accepted with Comments, CR As Constructed), Rejected, Not For Construction and Void.
- Stamps pick up your name and the date automatically. Make your own with **Create Stamp...** (text, colour, border style, date and user fields).
- **Size:** right-click a stamp > Size... and type the width or height as a percentage of the sheet width. Select several and they scale together. **]** and **[** nudge a selected stamp larger or smaller; Tools > Stamp > Size for New Stamps sets how big new ones are placed.
- **Resize by eye:** in Select mode click a cloud, rectangle, ellipse, highlight or stamp - square handles appear on the corners and edges. Hold Shift on a corner to keep the proportions.

9. Measuring and setting the scale

- **Calibrate Scale** (Tools > Measure): drag along a dimension you know and type its real length. This is the most reliable method and needs no sheet size. The status bar then says *Scale Set*.

- **Set Scale from Sheet Size...**: choose A0-A4 and a ratio such as 1:100. Only correct if the PDF is at true print size.
- **Length** (Shift+L), **Area** and **Polygon Area** give lengths and areas in real units. **Duct Run** and **Pipe Run** draw service lines you can label and total.
- Measurements and cable lengths feed straight into the Markups List and the Excel summary.

10. The Markups List

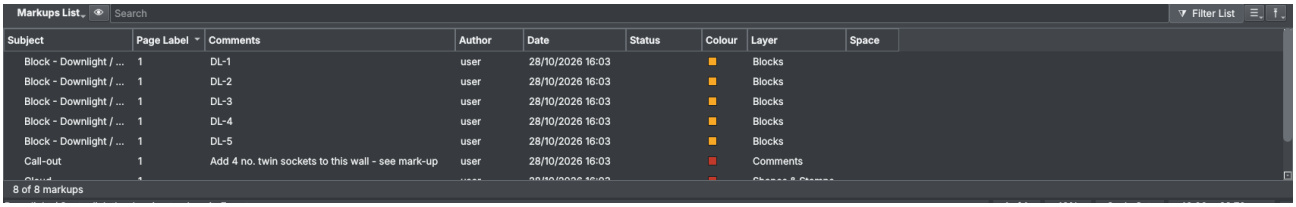

The Markups List for the sample drawing: five downlight blocks and a callout.

- Click a line to jump to and select that markup. Subject and Comments describe it; the other columns are Author, Date, Status (right-click to set Accepted, Rejected, Completed or your own), Colour, Layer and Space.
- Right-click to Reply, change status, delete, or Change Author for one or all markups. Use the search box and Filter List to narrow the list; the column button chooses which columns show. The eye icon hides all markups temporarily.

Excel, CSV and PDF summaries

This is the mark-up schedule. Use File > Export > Markups Summary (Excel, CSV or PDF) or the Excel button on the toolbar. The Excel file has a Markups sheet with one line per markup and a Summary sheet counting each type (for example how many downlights and sockets), ready to use as a quantity take-off.

11. Saving and exporting

Command	What it does
Save (Ctrl+S)	Saves your markups beside the PDF. The PDF itself is untouched.
Save As (Ctrl+Shift+S)	Writes a copy of the PDF with the markups drawn on it as sharp vector graphics - the one to send out. The markups stay editable: open that PDF here again, choose Yes, and they come back as live markups (the clean drawing is saved beside it as an '(editable)' copy).
Email... (Ctrl+E)	Makes a copy of the drawing with its markups in your Documents folder, shows it in Explorer and starts a new email - drag the file in.
Export	Commented drawing as an image; Markups Summary (Excel, CSV, PDF); Drawing as DXF.
Print (Ctrl+P)	Prints the drawing with markups.
Flatten (Ctrl+Shift+M)	Makes the markups part of the page. You are asked whether to keep the PDF **recoverable** (the clean drawing and your markups are stored inside, so opening it here offers to bring every markup back) or **flat only**, a plain PDF to issue to others.
Revert As	Goes back to the last saved markups.


12. Snipping a picture from one drawing onto another

Use this to show part of one drawing on another - for example a section detail on the layout it affects.

- **Edit > Snip a Picture from this Drawing** (Ctrl+Alt+S, or the dashed-box button on the toolbar), then drag a rectangle round the part you want. It is copied as a sharp picture (the drawing and any markups inside the box) and is also on the Windows clipboard, so it pastes into Word or an email as well.
- Open the other drawing and use **Edit > Paste Picture** (Ctrl+Alt+P, or the clipboard button), or just Ctrl+V straight after a snip. The picture arrives in the middle of the view in Move mode: drag it into place, drag a corner or edge to resize it, right-click for Size... and Edit Caption....

- A small caption underneath says *From <drawing file name>*; edit or clear it from the right-click menu. A screenshot or any picture copied from elsewhere can be pasted the same way.
- Pictures appear in the Markups List as *Picture - caption*, save with the markups and are included in Save As PDF and Flatten (not in DXF). They are ordinary images, so they go soft if enlarged a long way.

13. Working with the PDF itself

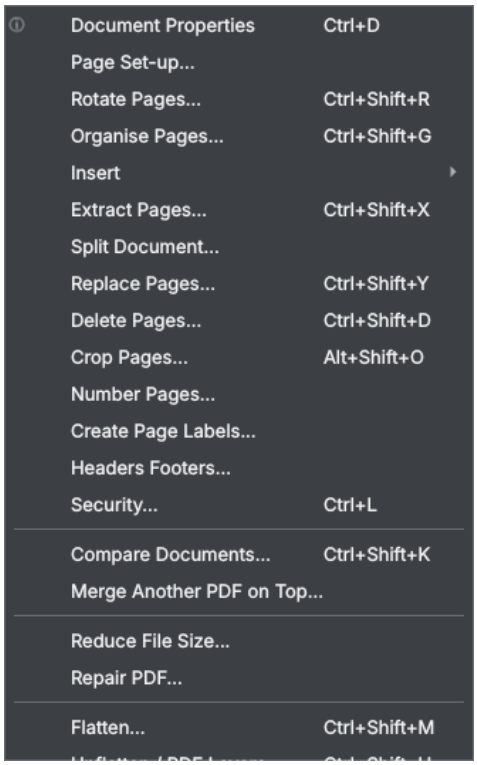

The Document menu. These work on the PDF pages and always save to a new file; your original is not changed.

- **Compare Documents** (Ctrl+Shift+K) checks what changed between two issues of a drawing. A new PDF opens in which lines only on the old drawing are red (removed), only on the new drawing are blue (added) and unchanged lines are black. Both sheets should be the same size and position.
- **Organise Pages...** (Ctrl+Shift+G) shows every page as a thumbnail: drag pages into a new order, rotate, delete, duplicate and add blank pages, several at a time. Apply saves a new PDF and opens it; Start again puts everything back.
- **File > Create > PDF from Word / Excel / PowerPoint...** turns Office documents (.docx, .xlsx, .pptx and similar) into PDFs that open straight away. Microsoft Office does the conversion in the background; if it is not installed the free LibreOffice is used. Other Create options make a PDF from images or the clipboard; **Combine...** joins several PDFs. Together with Organise Pages you can make up and order a pack without leaving the program.
- **Unflatten / PDF Layers** (Ctrl+Shift+U): a drawing that still has its layers (Revit plots usually do) lists them - switch off furniture, hatching or hidden lines and save a copy. A flattened drawing is split back into real, switchable layers without changing how it looks.
- Rotate, Extract, Replace, Delete and Crop pages; insert a blank page or pages from another PDF; split a document; number pages; headers and footers; merge another PDF on top; security (passwords); reduce file size; repair a damaged PDF.
- The **Batch** menu runs several of these across many files at once, including applying a stamp or flattening.

14. Counting and measuring: legend, take-off and Auto Take-off

Three different tools, from quick to full.

Legend from Blocks Used

Tools > Markup > Legend from Blocks Used reads the blocks placed on the drawing and builds a symbol key - the icon, its name and (if you tick it) how many there are. Drag it to a clear corner. After adding blocks, run it again and it

updates the same legend.

Take-off Schedule (Excel)

Tools > Take-off Schedule (Excel) writes a workbook from your own markups: equipment counted by type, page and room, cable lengths by type, and for mechanical drawings ductwork (by purpose and size, with surface area for insulation), pipework (by purpose, material and size) and containment (by tray width). The dialog asks for an allowance for each (for fittings, bends, offcuts and waste); the same figures sit in yellow cells in the workbook and the totals recalculate. Lengths need the drawing scale to be set first. A run whose size is not known is listed as *Unsized* in red so it is not missed. Lengths follow the drawn route in plan only, so add rises through the allowance.

Auto Take-off from PDF Drawings

Tools > Auto Take-off from PDF Drawings reads **plotted** PDF drawings with no mark-up at all. Add the drawings (small power, lighting, fire alarm, ventilation, heating, water, drainage, containment, builderswork) and it finds and counts every legend symbol (with its room), counts tagged equipment (CTA, EPH, TR, FSD and so on), and measures coloured services (containment, pipework, ductwork) from the scale in the title block, sizing them from the labels on the drawing.

- **Check and correct runs...** opens the drawing with translucent bands over every measured run, each labelled with its line number, size and length. Click a band to pick that run (drag a rectangle to pick part of it), then set the size, remove it, or tick it as checked. A solid outline means the size came from a label or from you; a dashed outline and *est.* mean it was estimated. Colour is never the only clue - each service also has its own fill pattern.
- **Confidence:** every stretch of run records how its size was obtained (checked by you, label on the run, nearest label, estimated). It is shown in the take-off table, on a Confidence sheet in the Excel file, and in the report.
- **Weights:** weight and point-load reports for the structural engineer (each service, hangers, contingency, cable fill, load per support). The report says throughout that it is an approximation, typically within about +/-20 %.
- **Outputs:** Excel (take-off, weights, assumptions), a Weights report (PDF), and a marked-up PDF that rings every counted symbol and bands every measured run so you can check each count in a minute.
- Auto Take-off needs numpy, OpenCV and PDFium, which the installer adds (the installed program is roughly 70-80 MB larger). Everything else works without them.

> The full step-by-step is in **MEP Drawing Platform - Auto Take-off and Layers How To Use.pdf**.

15. Overlay Service Drawings (clash check)

Tools > Overlay Service Drawings lays the electrical, ventilation, water, heating and fire drawings (each its own PDF) over each other on one sheet and finds where they clash on plan.

- Pick the same point of the building on each drawing (like the base point of Copy / Paste) and they are laid so the points coincide. Different sheet sizes and scales are brought to the same real size from the title blocks. **Align automatically** matches the building outline; it also works with no base points when the drawings show the same building. The point used is marked on the overlay as *Base point*.
- Each service has its own colour and pattern (colour-blind safe). **Find clashes** looks for two different services in the same place on plan within a distance you set. Each is ringed with a numbered square, listed with the two services, the room and the length; click a row to zoom to it.
- **Checks:** the overlay checks itself whenever you add, pick, align or nudge a drawing - different or missing scales, a drawing whose building is the wrong size (a wrong scale is caught even when the title block has one), sheets turned the other way, missing base points. Each message carries a word and a shape: Problem, Check or OK.
- **Heights:** for each clash it reads what the drawings say about height (AT H/L, AT L/L, 2430 mm AFFL) and says *same height*, *different heights* or *height not known* - shown as a word and as a solid, dashed or dotted ring. The assumptions can be changed under Height assumptions....
- **Outputs:** a PDF (the overlaid plan with the clashes numbered, a key, then the clash list with a close-up of each), the clash list in Excel, and the set of drawings with their base points so the next revision is checked in a minute.
- **Coordinate a level (CDE):** lists the latest revision of every discipline's drawing for a level and opens the overlay with them. When a drawing is re-issued the next check re-uses the positions and says which clashes are new, still open or resolved.

This is a plan-view check. It tells you where to look, not whether the services meet in height. Full guide: **MEP Drawing Platform - Overlay Service Drawings How To Use.pdf**.


16. Pipe run for pump calculation

This passes pipe lengths drawn on a plan to the Design Platform's Pump Calculation, so the pipe length, elbows and fittings do not have to be counted by hand.

- Set the drawing scale first (Tools > Measure > Calibrate Scale) against a dimension you know. A drawing with no scale, or a run with no size, is refused - nothing is guessed.
- Draw the circuit with Tools > Measure > Pipe Run (flow and return, each with its size). Place valve, strainer and pump blocks from the Blocks panel near the runs.
- Tools > **Pipe Run for Pump Calculation...** measures each run, counts bends (as 45 or 90 degree elbows by the angle drawn) and the valves, strainers and pumps near it. Tick the runs of one circuit, type the vertical rise of each (a plan shows no heights), then **Save run file...**.
- In the Design Platform (2.370 or later): Tools > Pump Calculation > Import pipe run file.... A scale set from the sheet size rather than calibrated is flagged, and the warning is saved in the file.

Guide for the whole route: **MEP Platform - Pump Calculation How To Use.pdf**.

17. The CDE menu - document control (ISO 19650)

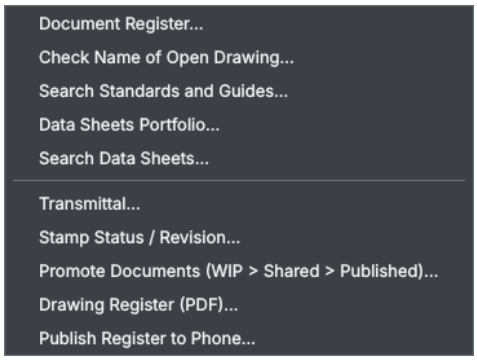

The CDE menu keeps a register of every file in a project folder and moves documents through the containers WIP, Shared, Published and Archive. Scanning is read-only; nothing is ever renamed, moved or deleted by a scan.

- **Document Register** builds the register: the document ID split into its fields, revision (P01 / C01), status (S0, S2, A ...) and container, with checks that flag names that do not follow the convention, a status in the wrong container, old revisions left in Shared or Published, and duplicates. Every scan is written to an audit log; export to Excel or CSV. It opens on a Home page of cards (Documents by container, Needs attention, Recent activity) with saved views on the left; filter by container, revision and status. Revisions are read from the file name and from the title block of the PDF; set one by hand with right-click > Set revision / status by hand....
- **Check Name of Open Drawing** explains a file name field by field.
- **Search Standards and Guides** searches the text inside a library of PDFs (scanned pages can be read with the free Tesseract OCR) and opens the document at the right page.
- **Data Sheets Portfolio** and **Search Data Sheets** keep manufacturers' data sheets once, tag them to projects with a status, and build a submittal pack (cover sheet, contents, bookmarks, reference stamp).
- **Transmittal...** writes a transmittal sheet PDF (documents, revisions, statuses and a fingerprint of every file), an Excel copy and optionally a zip issue pack.
- **Stamp Status / Revision** saves a COPY with a status / revision stamp and a QR code on every page, named to ISO 19650.
- **Promote Documents** moves a document WIP > Shared > Published as a NEW stamped copy, with a preview first; older issued revisions go to Archive (moved, never deleted); every step can be undone and is in the audit log.

- **Drawing Register (PDF)** makes the clean list of drawings you send out, one line per drawing at its current revision, with optional issue history; its choices are remembered for next time.
- **Publish Register to Phone** saves one small file that a phone app (installable from the browser) opens, so the register can be searched on site, offline and read-only.

> Guides: **MEP Drawing Platform - CDE How To Use Manual.pdf** and **MEP Drawing Platform - Data Sheets How To Use.pdf**.

18. Look and layout

- **Themes:** View > Theme - Mid Grey (default), Light and Dark. Your choice is remembered. The CDE windows have their own Dark / Light choice.
- **Panels:** Window > Panels shows or hides File Access, Properties, Blocks, Markups List and Layers / Sheets; Shift+F4 hides them all; Window > Reset Layout brings everything back.
- **Toolbars:** Tools > Toolbars shows or hides each toolbar. If a toolbar is too narrow for all its tools, a small button at its right-hand end opens the rest; the list stays open until you click elsewhere.
- **Menu items** only appear when they work; features still planned are listed in ROADMAP_Drawing_Platform.md in the program folder.

19. Keyboard shortcuts

Key	Action	Key	Action
V	Select	Ctrl+O	Open
Shift+V	Pan	Ctrl+S	Save
Q / T	Callout / text	Ctrl+Shift+S	Save As
P	Pen	Ctrl+E	Email
H	Highlighter	Ctrl+P	Print
L / A	Line / Arrow	Ctrl+Z / Ctrl+Y	Undo / Redo
Shift+N	Polyline	Ctrl+C / Ctrl+V	Copy / Paste
Shift+P	Polygon	Ctrl+Shift+V	Paste in place
R / E / C	Rectangle / Ellipse / Cloud	Ctrl+Alt+C / V	Copy with base point / Paste at point
Shift+E	Eraser	Ctrl+Alt+S / P	Snip a picture / Paste picture
Shift+L	Measure length	Ctrl+M	Multiply
[/]	Stamp smaller / larger	Del	Delete selected
Esc	Finish / stop the tool	Ctrl+A	Select all
Enter / double-click	Finish a polyline, polygon or cable	Ctrl+9 / 0 / 8	Fit page / Fit width / Actual size
G	Snapshot to clipboard	+ / -	Zoom in / out
Ctrl+Shift+K	Compare documents	Shift+F9	Show grid
Ctrl+Shift+G	Organise pages	Ctrl+3	Dark page
Ctrl+Shift+U	Unflatten / PDF layers	F11 / Ctrl+Return	Full screen / Presentation
Ctrl+Shift+M	Flatten	Shift+F4	Hide / show panels

20. If something looks wrong

Problem	What to do
No panels, no title bar, or the window fills the screen	Press F11 or Ctrl+Return, then Window > Reset Layout.
Cannot see the block IDs	Click the label icon on the top toolbar, or View > Show Block IDs and Labels.
The wrong name appears as Author	Drawing Platform > Preferences, or right-click in the Markups List > Change Author.
Measurements show no units / the status bar says Scale Not Set	Set the scale with Calibrate first (section 9).
It asks for a passcode, or says the passcode does not include this program	Enter the passcode D3D gave you. If it has expired, or does not cover the Drawing Platform, ask D3D for a new one.
Install fails with Access denied	Run Install MEP Drawing Platform.bat again; it builds in a local folder to avoid sync clashes. If Google Drive is syncing the folder, pause it while you build.
Auto Take-off says a component is missing	Run Install MEP Drawing Platform.bat again - it adds numpy, OpenCV and PDFium.
To check the version	Help > About MEP Drawing Platform.

21. The other guides

This manual covers the everyday tools. Each larger feature has its own guide in the program folder:

Guide	Covers
MEP Drawing Platform - CDE How To Use Manual.pdf	The document register, saved views, transmittals, stamping, promotion, drawing register and the phone app.
MEP Drawing Platform - Data Sheets How To Use.pdf	The data sheets portfolio and submittal packs.
MEP Drawing Platform - Auto Take-off and Layers How To Use.pdf	Auto Take-off, checking runs, weights, and PDF layers.
MEP Drawing Platform - Overlay Service Drawings How To Use.pdf	The clash check, step by step.
MEP Platform - Pump Calculation How To Use.pdf	Pump calculation across the Design Platform, Model Viewer and Drawing Platform.