PixelLogic

Complete Application Tutorial

Version 20.0.2

Professional LED wall design, pixel mapping, and AV engineering tool.

This tutorial covers all tabs and features with screenshots and detailed explanations.

Designed for AV technicians, LED engineers, and production designers.

Author: Dhiraj Kalra

Generated: September 16, 2026

Table of Contents

1 **Projects** — Page 3
Create & Manage Your LED Shows

2 **Saved Projects** — Page 5
Finalized & Archived Shows

3 **Pixel Designer** — Page 7
LED Wall Geometry & Configuration

4 **Special Effects** — Page 9
Visual Overlays & Annotations

5 **2D Visualizer** — Page 11
Full-Resolution Preview & Export

6 **3D Visualizer** — Page 13
Perspective 3D View

7 **Output Maps** — Page 15
Canvas Composition & Layout

8 **LED Patching** — Page 17
Automatic & Manual Signal / Power Routing

9 **AV Schematics** — Page 19
Professional AV System Diagrams

10 **PDF Export** — Page 21
Professional Report Generation

11 **Power Calculator** — Page 23
LED Wall Power Consumption Analysis

12 **Utility Tools** — Page 25
Aspect Ratio Calculator & LTC Generator

13 **Projector Test Pattern** — Page 27
Projection Calculator & Test Patterns

14 **Help & Reference** — Page 30
Documentation & Tutorials

14 sections • 32 total pages

1. Projects

Create & Manage Your LED Shows


PURPOSE

Central hub for creating, organizing, and managing all your LED wall projects.

The Projects tab is your starting point in PixelLogic. Here you create new shows, manage existing drafts, and organize your saved projects. Each project contains all pixel maps, canvas layouts, effects, and export settings for a complete LED wall deployment.

Save project details in place without closing the editable project card. Auto-save is enabled by default every three minutes and can be disabled from the Projects tab. Saved Projects are for shows you explicitly archive, while JSON export/import provides portable backups.

The tab supports full project metadata including event name, date, location, venue, and salesperson. This information carries through to PDF exports and helps organize shows for multi-event operations.

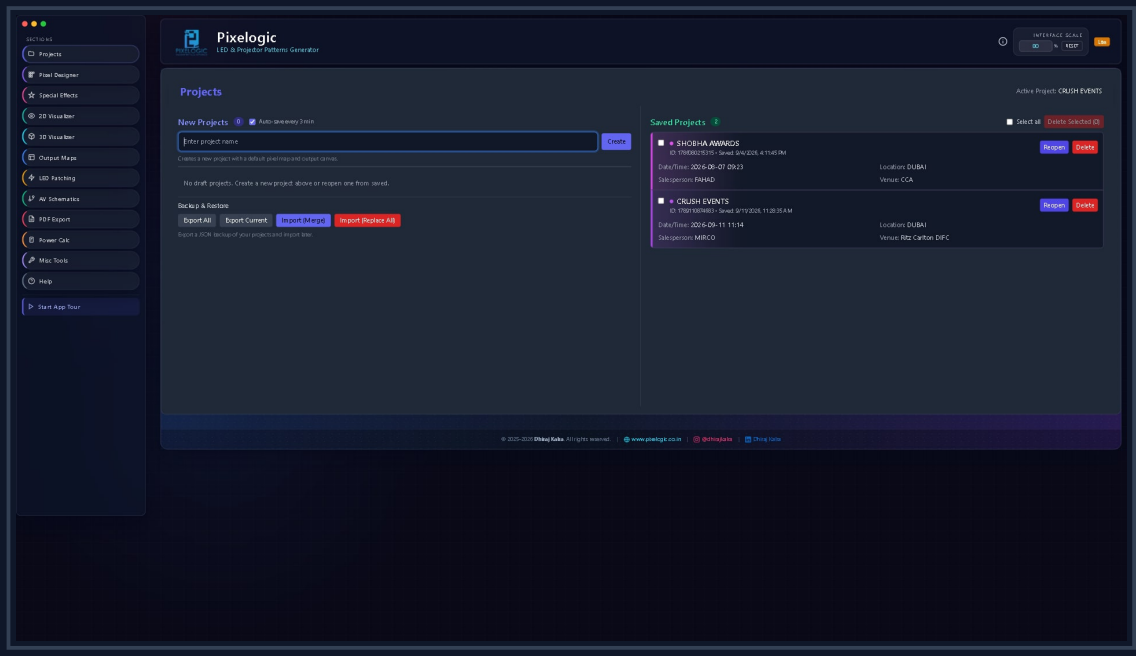

1. Projects — Features & Workflow

Key Features

- Create new projects with custom names
- Edit project metadata (event date, location, venue, salesperson)
- Save project details in place without closing the project
- Optional auto-save every three minutes, enabled by default
- Duplicate existing projects
- Export individual projects as JSON backup files
- Import projects from JSON backup files
- Bulk export/import all projects
- Delete projects with confirmation
- Color-coded project cards for easy identification
- Auto-save to local storage

Typical Workflow

1. Click "New Project" and enter a project name
2. Fill in event metadata (date, location, venue)
3. Work on pixel maps, effects, and canvases in other tabs
4. Click "Save" to persist details while keeping the project open
5. Export as JSON for backup before delivery

2. Saved Projects

Finalized & Archived Shows


PURPOSE

View and manage all saved/finalized projects in a dedicated archive view.

The Saved Projects section displays all projects that have been marked as "saved" or finalized. These represent completed shows that are ready for deployment or have been archived after an event. The view provides a clean overview of your project library.

Each saved project displays its name, unique ID, save date, and event metadata. Projects can be reopened for further editing if modifications are needed, or permanently deleted when no longer required.

Multi-select functionality allows batch operations on saved projects, making it easy to manage large project libraries. Color coding helps visually distinguish between different projects at a glance.

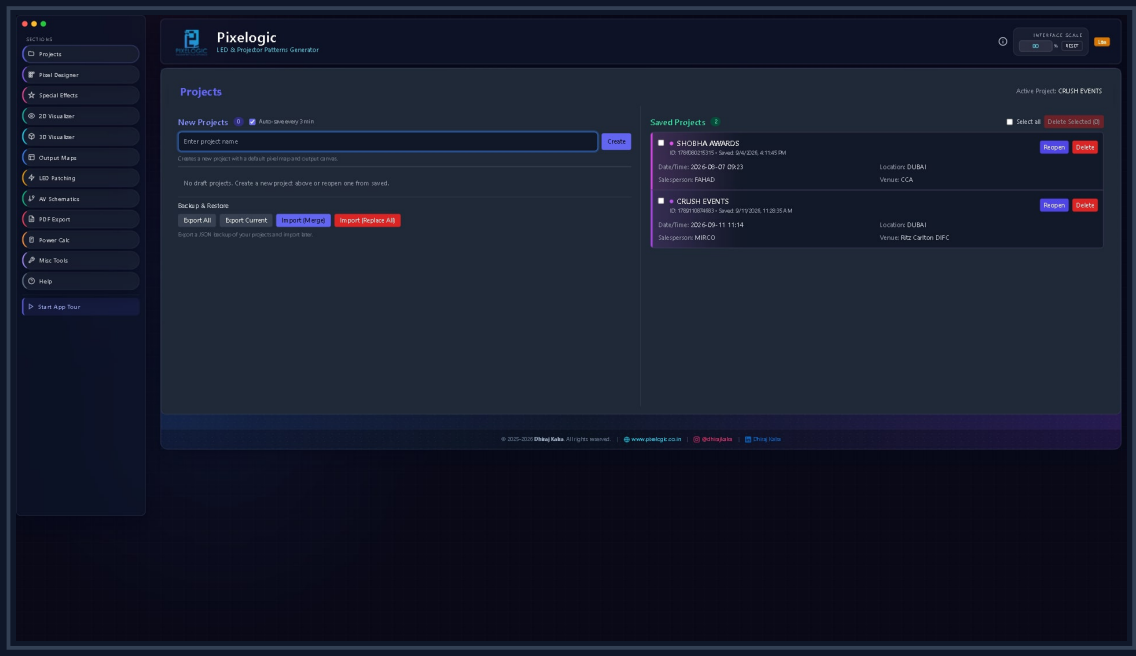

2. Saved Projects — Features & Workflow

Key Features

- View all finalized/saved projects
- Multi-select with checkboxes for batch operations
- Reopen saved projects for further editing
- Delete saved projects permanently
- Color-coded project identification
- Display project metadata (name, ID, date, venue)
- Sort and filter projects

Typical Workflow


1. Navigate to the saved projects section
2. Review archived shows and their metadata
3. Select projects for batch operations if needed
4. Click "Reopen" to move a project back to drafts for editing
5. Use delete to permanently remove old projects

3. Pixel Designer

LED Wall Geometry & Configuration

PURPOSE

Design and configure LED pixel maps with precise panel dimensions, pitch, and resolution settings.

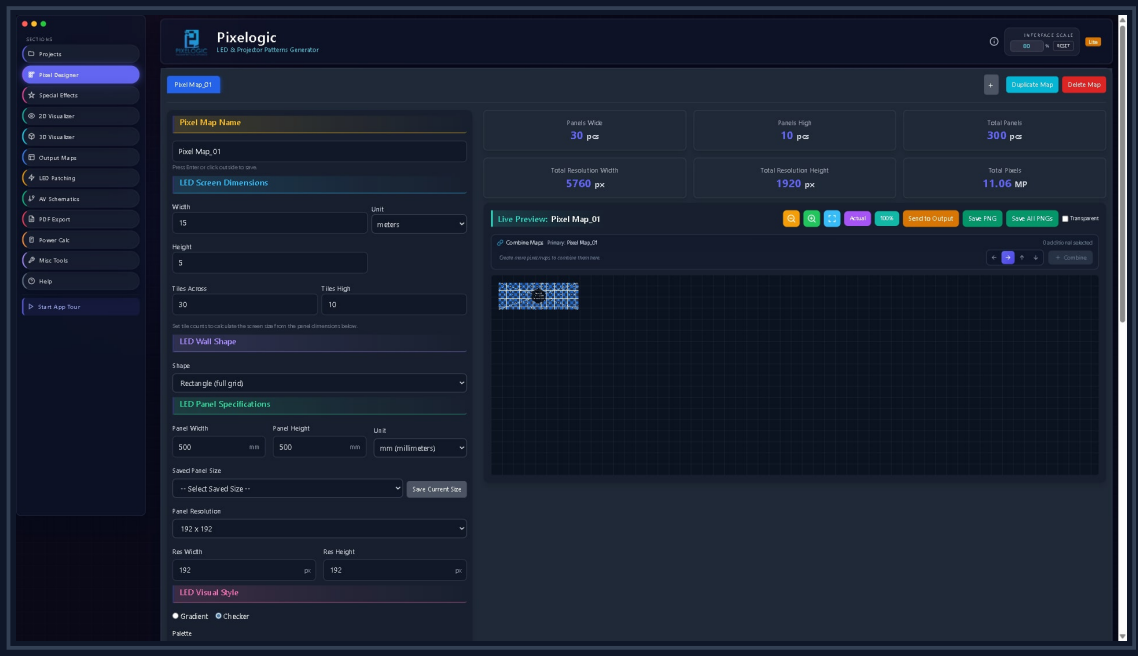

The Pixel Designer is the core design tool of PixelLogic. It allows you to define LED wall geometry by specifying panel dimensions (width × height in pixels), pixel pitch, and physical panel sizes. The designer calculates total resolution, physical dimensions, and generates visual representations of your LED walls.

Each project can contain multiple pixel maps representing different LED surfaces (main wall, side fills, floor, ceiling, etc.). The designer supports various visual styles including checker patterns, gradient fills, and solid colors to help visualize panel boundaries and pixel density.

Shape-based pixel maps let you build non-rectangular LED walls — Circle, Ellipse/Oval, Triangle, Diamond, Hexagon, Cross/Plus, or a fully custom hand-painted outline. Choosing a shape automatically disables the panels that fall outside it, yet the project still calculates as a rectangular grid so export, 3D, LED patching and power all keep working unchanged. For circular walls you can enter just a Radius, Diameter or Circumference and the wall size is computed for you — ideal when a client only gives one measurement.

Advanced features include panel gap simulation, automatic aspect ratios, rotation, and precise millimeter-level measurements. Screen dimensions and tile counts synchronize in both directions: Width updates Tiles Across, Height updates Tiles High, and changing tile counts recalculates the matching screen dimension. The calculated ratio is shown in reduced and decimal forms, for example 5:4 (1.25:1).

3. Pixel Designer — Features & Workflow

Key Features

- Define pixel map dimensions (width × height in panels)
- Two-way synchronization between screen dimensions and tile counts
- Set pixel pitch (mm) for accurate physical calculations
- Configure panel pixel resolution (e.g., 500×500, 250×250)
- Shape-based walls: Circle, Ellipse, Triangle, Diamond, Hexagon, Cross & Custom
- Size a circle by Radius, Diameter or Circumference — enter any one value
- Click-to-paint panels in the Live Preview for custom shapes & logos
- Disabled panels render transparent (no black background)
- Multiple visual styles: checker, gradient, solid, numbered
- Panel gap simulation for realistic visualization
- Multiple pixel maps per project
- Auto-calculate total resolution, physical size, pixel count
- Automatic reduced and decimal aspect ratio, such as 5:4 (1.25:1)
- Custom naming for each pixel map
- Duplicate and resize existing maps
- Real-time dimension preview
- Support for non-standard panel sizes
- Lock aspect ratio option

Typical Workflow

1. Select or create a pixel map from the map list
2. Enter panel count (columns × rows)
3. Pick a Wall Shape (or leave Rectangle) — for a circle, choose Radius / Diameter / Circumference and type one value
4. Set pixel pitch (e.g., 2.6mm, 3.9mm)
5. Define panel resolution (pixels per panel)
6. Choose visual style for the preview
7. Click panels in the Live Preview to fine-tune or paint a custom shape
8. Verify calculated dimensions match requirements
9. Add additional maps for multi-surface setups

4. Special Effects

Visual Overlays & Annotations


PURPOSE

Add visual overlay effects, text badges, markers, logos, and color adjustments to pixel maps.

The Special Effects tab provides tools for annotating and enhancing your pixel map visualizations. You can add text overlays showing resolution info, coordinate markers, dimension labels, and custom badges. Enable Include Metrics on the centre badge to add screen size, pixel resolution, and both aspect-ratio formats automatically. These effects help communicate technical specifications visually on exported images and PDFs.

Color adjustment tools allow you to modify the visual appearance of pixel maps with brightness, contrast, and tint controls. This is useful for creating presentation materials where different LED surfaces need distinct visual identification.

Logo placement, custom watermarks, and grid overlays round out the effects toolkit. All effects are non-destructive and can be toggled on/off independently, allowing you to create multiple export variations from the same base design.

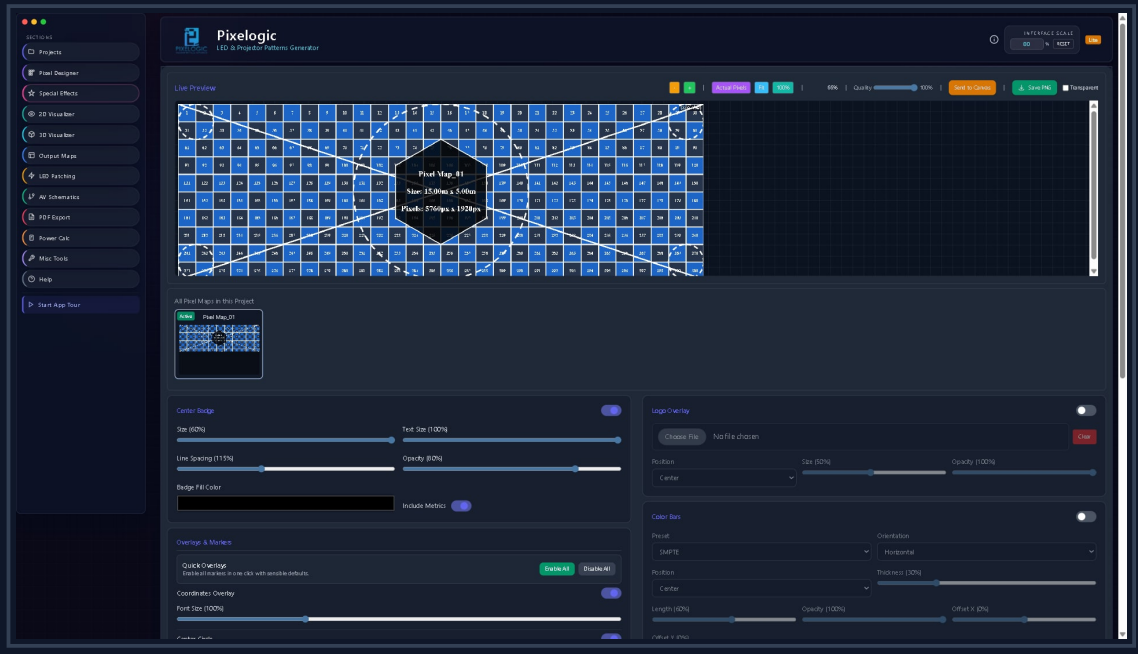

4. Special Effects — Features & Workflow

Key Features

- Text overlay with resolution/dimension info
- Coordinate markers (X/Y axis labels)
- Custom text badges and labels
- Centre badge metrics include screen size, pixels and dual-format aspect ratio
- Logo/watermark placement
- Color bars and test patterns
- Brightness and contrast adjustment
- Grid overlay with customizable spacing
- Dimension lines and arrows
- Panel numbering overlay
- Non-destructive effect stacking
- Per-effect visibility toggle
- Effect presets for common configurations

Typical Workflow

1. Select the pixel map to add effects to
2. Choose effect type from the toolbar
3. Configure effect parameters (text, position, color)
4. Toggle effects on/off to preview
5. Export with effects applied to 2D Visualizer

5. 2D Visualizer

Full-Resolution Preview & Export


PURPOSE

Render full-resolution 2D previews of pixel maps and export as high-quality PNG images.

The 2D Visualizer renders your pixel maps at full resolution with all applied effects, providing an accurate preview of what the LED wall will look like. It supports zooming, panning, and measuring tools for detailed inspection of the design.

Export functionality allows saving the visualization as high-resolution PNG images suitable for client presentations, technical documentation, and print materials. You can export individual maps or combine multiple maps into a single composite view.

The visualizer respects all Special Effects settings, showing text overlays, dimension markers, and color adjustments as they will appear in the final output. This makes it the primary quality-check tool before generating PDFs or sharing designs with clients.

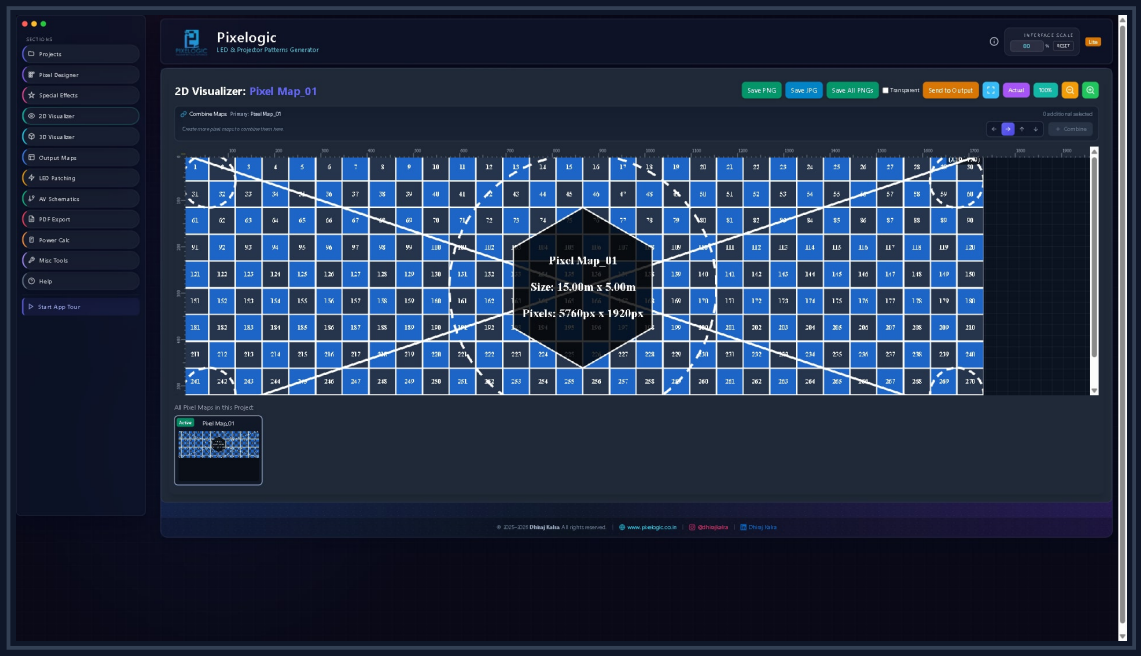

5. 2D Visualizer — Features & Workflow

Key Features

- Full-resolution pixel map rendering
- Zoom and pan controls
- Export as high-resolution PNG or JPG
- Batch export — Save All Pixel Maps as PNGs in one click
- Combine multiple maps in one view via a simple chip strip (click to add/remove, Right / Below / Left / Above / Grid placement with pixel gap)
- Per-map styles (gradient, palette, numbering, colour bars) preserved in composites
- Show/hide individual maps
- Background color customization
- Measurement and dimension tools
- Scale indicator
- Print-ready resolution output
- Effects preview integration

Typical Workflow

1. Navigate to 2D Visualizer tab
2. Select which pixel maps to display
3. Adjust zoom level for desired view
4. Toggle effects visibility as needed
5. Click Export to save as PNG image
6. Use exported image in presentations or documents

6. 3D Visualizer

Perspective 3D View

PURPOSE


View LED wall designs in an interactive 3D perspective environment with camera controls.

The 3D Visualizer provides an interactive perspective view of your LED wall designs. You can rotate, zoom, orbit, and pan around your LED surfaces to understand spatial relationships, viewing angles, and overall installation appearance.

Multiple pixel maps are rendered in 3D space at their configured positions, allowing you to visualize multi-surface installations (main wall + side fills + floor) as they would appear in the real venue. Camera presets let you quickly switch between front, side, top, and perspective views.

The Stage Builder adds dimensioned stage decks beneath LED walls. Choose Move and drag a selected stage directly in the scene, use Snap Below LED for placement, or use Span to LED Bottom to align the back edge and match the selected wall width.

Every LED screen has a high-contrast callout containing its map name, physical W x H, and pixel resolution. Stage callouts contain the deck name and W x D x H. PNG and JPG exports retain these callouts while automatically omitting editor axes and transform gizmos.

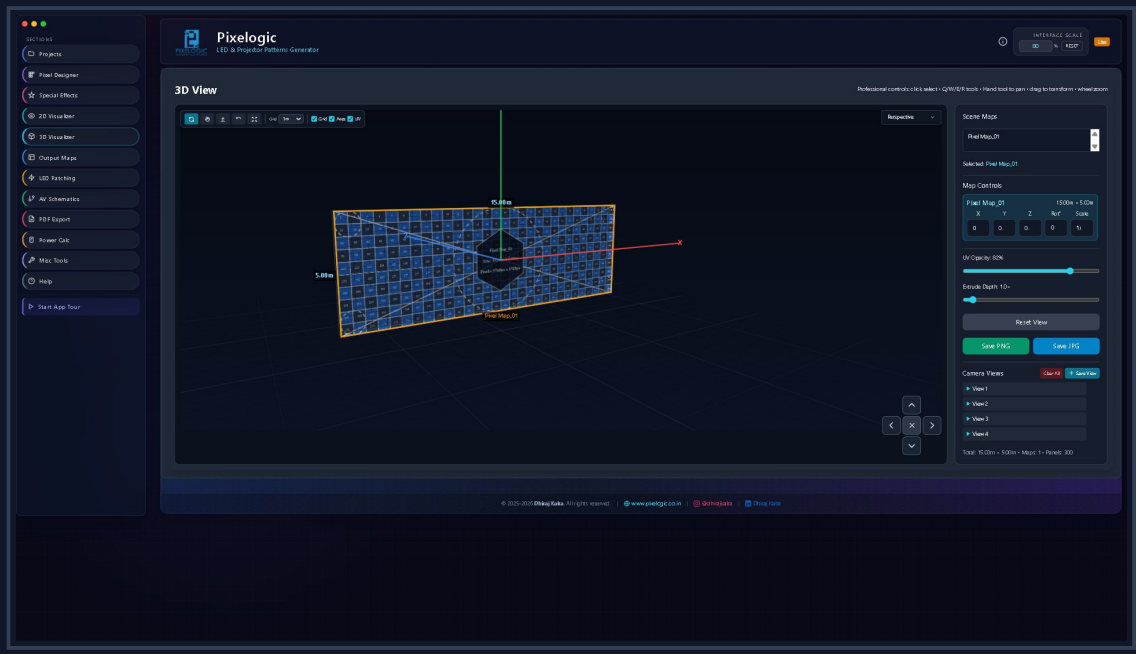

6. 3D Visualizer — Features & Workflow

Key Features

- Interactive 3D orbit/pan/zoom controls
- Multiple camera angle presets (front, side, top, perspective)
- Save & recall named camera views
- Per-map position / rotation / scale controls with readable labels
- Direct stage dragging with the Move tool
- Snap Below LED and Span to LED Bottom stage actions
- Boxed screen and stage dimension callouts
- Multi-map 3D composition
- UV texture overlay with opacity and extrude-depth sliders
- Auto Revolve for presentations
- Ground plane and grid reference
- Real-time rotation and manipulation
- Clean PNG / JPG export without editor axes or transform gizmos
- Include 3D View Snapshot in the PDF Export

Typical Workflow

1. Open 3D Visualizer tab
2. Use mouse to orbit around the LED walls
3. Scroll to zoom in/out
4. Select camera presets for standard views
5. Add a stage deck, select Move, and drag it into position
6. Use Span to LED Bottom to align and width-match the stage
7. Confirm each screen and stage callout is readable
8. Save PNG or JPG for a clean client-facing image

7. Output Maps

Canvas Composition & Layout

PURPOSE


Arrange pixel maps into output canvases with drawing tools, masks, and cropping for media server output configuration.

The Output Maps tab is where you compose your final media server output configuration. It allows you to arrange multiple pixel maps onto output canvases (representing physical video outputs), positioning and cropping them to match your media server's output mapping.

Drawing tools enable adding reference lines, masks, and annotations directly on the canvas. Select masks directly to move and resize them on the tile grid; hold Shift while dragging a polygon vertex for precise free positioning. Crop tools let you define which portion of each pixel map receives content from each output.

Output maps remain linked to their source Pixel Designer map. Designer changes refresh the source content while retaining the map placement and crop configured on the output canvas.

Multiple canvases can be configured to represent different video outputs (e.g., Output 1 = Main Wall, Output 2 = Side Fills). The canvas dimensions are fully configurable and can match common output resolutions (HD, 4K, custom). This tab bridges the gap between pixel map design and actual media server programming.

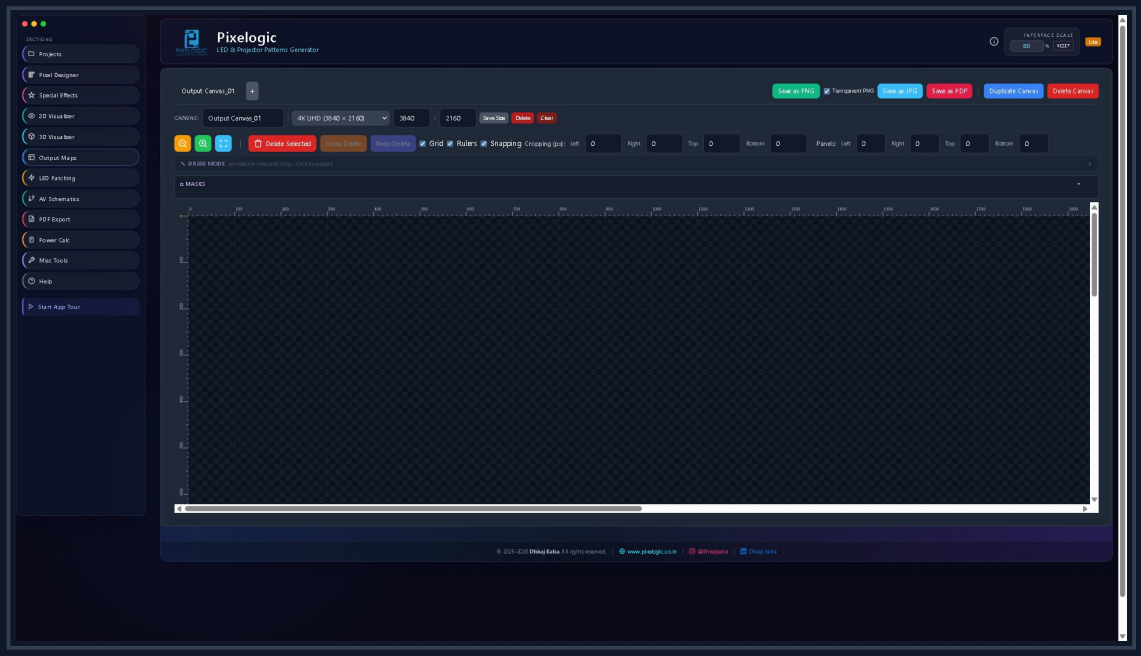

7. Output Maps — Features & Workflow

Key Features

- Multiple configurable output canvases
- Drag-and-drop pixel map placement
- Precise positioning with pixel coordinates
- Crop/region selection per map
- Drawing tools (lines, rectangles, text)
- Mask overlay tools
- Direct mask selection with tile-snapped move and resize; Shift precision for polygon vertices
- Source-linked map refresh that retains canvas placement and crop
- Canvas dimension presets (HD, 4K, custom)
- Snap-to-grid alignment
- Layer ordering for overlapping maps
- Save as PNG (with transparent background option), JPG, or single-page PDF sized to the canvas
- Background color/pattern options
- Zoom and pan navigation

Typical Workflow

1. Create a new output canvas or select existing
2. Set canvas dimensions to match your output resolution
3. Drag pixel maps from the list onto the canvas
4. Position and size maps precisely using coordinates
5. Apply cropping if only a portion needs this output
6. Add annotations and reference markings
7. Export the layout for documentation

8. LED Patching

Automatic & Manual Signal / Power Routing


PURPOSE

Plan processor ports and power circuits automatically or draw every LED tile route by hand with live capacity feedback.

The LED Patching workspace combines display-array inputs, an interactive tile diagram, processor and output-card configuration, port allocation, and power distribution in one screen. Data and Power overlays can be viewed independently or together.

Auto Patch generates Vertical or Horizontal Snake/ZigZag routes using processor bandwidth, panel resolution, refresh rate, bit depth, tile amperage, and breaker capacity. The Hardware Rack shows controller requirements, used ports, per-port pixels, and load percentages.

Draw Lines mode lets you build the real installation route tile-by-tile. Click or drag through adjacent tiles, finish a line with Next Port or Next Circuit, and watch the enlarged dock report live pixels or amps and overload status. Undo, Redo, Clear All, and Done keep manual planning fast and recoverable.

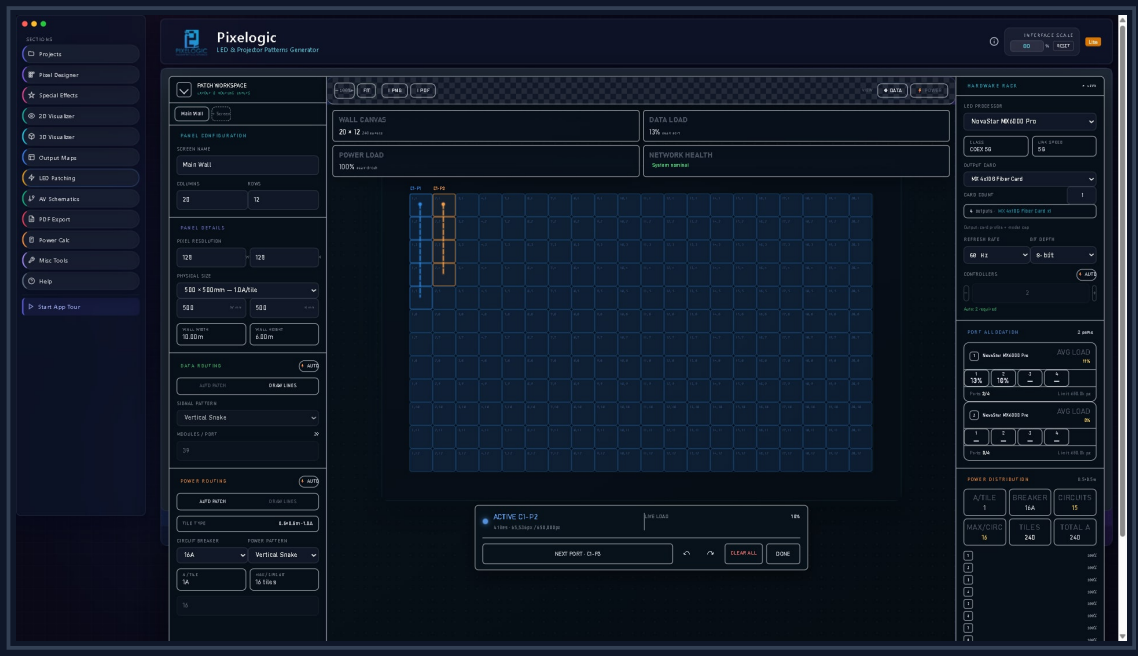

8. LED Patching — Features & Workflow

Key Features

- Automatic Vertical/Horizontal Snake and ZigZag routing
- Manual click-or-drag routing across adjacent LED tiles
- Independent Data and Power routing modes and overlays
- Automatic C1-P1 onward port assignment with controller rollover
- Sequential power-circuit assignment
- Live active-line tile, pixel, amp, and load percentage feedback
- Overload and unassigned-path warnings
- Undo and Redo history for manual routes
- Clear All with undo recovery for the active route layer
- NovaStar/COEX processor and output-card profiles
- Refresh-rate and bit-depth-aware port capacity
- Automatic or fixed controller count
- Per-controller port allocation and load display
- Tile-aware breaker and circuit calculations
- FIT plus explicit zoom/pan controls without wheel-triggered resizing
- PNG and professional two-page PDF export

Typical Workflow

1. Set the wall columns, rows, panel resolution, physical size, tile type, and breaker rating
2. Select the processor, output-card profile, refresh rate, bit depth, and controller mode
3. For automatic routing, choose Auto Patch and select a Snake or ZigZag pattern
4. For manual signal routing, select Draw Lines under Data Routing and click or drag through adjacent tiles
5. Review live pixels and load percentage, then select Next Port to advance to the next C/P assignment
6. For manual power routing, select Draw Lines under Power Routing and use Next Circuit between feeds
7. Use Undo/Redo for corrections, Clear All to reset the active layer, and Done to leave drawing mode
8. Review port allocation, circuit load, and Network Health, then export PNG or PDF documentation

9. AV Schematics

Professional AV System Diagrams


PURPOSE

Create comprehensive AV system schematics with 50+ device types and 14 signal types.

The AV Schematics tab is a full-featured schematic diagram editor for designing audio-visual system architectures. It includes a catalog of 50+ professional AV devices across categories (video, audio, control, networking, power) that can be placed and connected on an infinite canvas.

Fourteen distinct signal types are supported including HDMI, SDI, DisplayPort, HDBaseT, Dante, AES67, analog audio, DMX, Art-Net, control (RS-232, IR, IP), and power. Each signal type has distinct visual styling for clear identification in complex diagrams.

Templates provide starting points for common system configurations (lecture halls, broadcast studios, live events, corporate AV). The built-in rack view allows organizing equipment into standard 19" rack elevations with accurate RU sizing. All schematics can be exported as professional PDF documents.

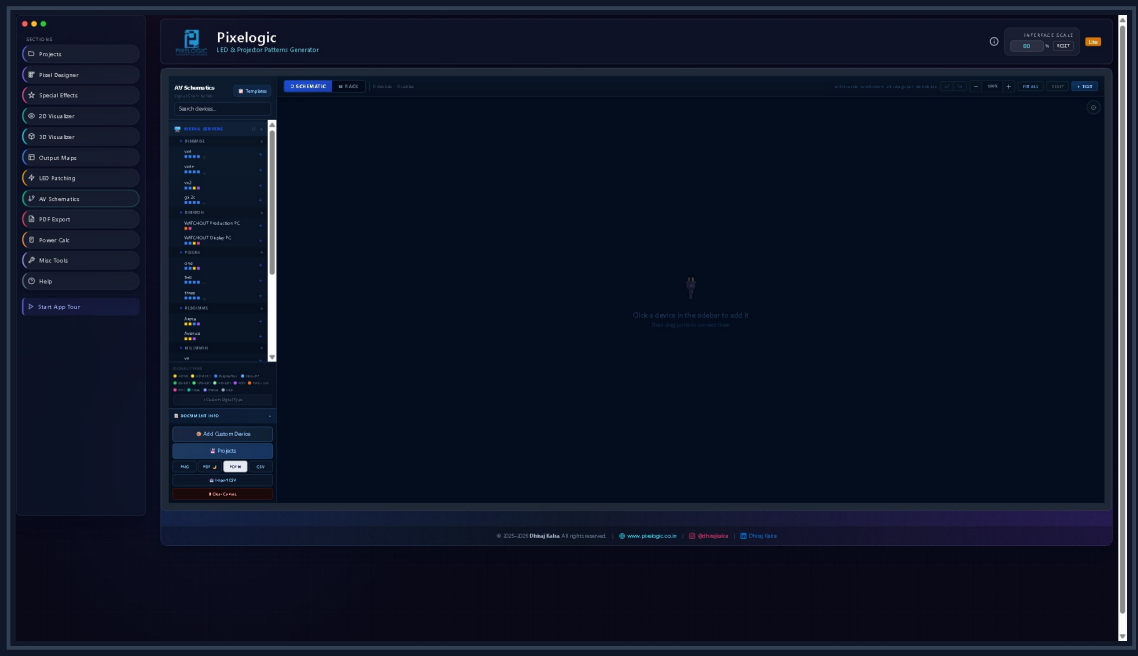

9. AV Schematics — Features & Workflow

Key Features

- 50+ device catalog (video, audio, control, networking)
- 14 signal type definitions with visual distinction
- Infinite canvas with zoom/pan
- Templates for common system architectures
- Rack elevation view (19" standard)
- Auto-routing signal paths
- Device properties panel (model, IP, notes)
- Layer management for complex diagrams
- Snap-to-grid alignment
- Export as PDF or image
- Custom device creation
- Signal flow validation
- Grouping and labeling tools
- Undo/redo history

Typical Workflow

1. Start from a template or blank canvas
2. Browse device catalog by category
3. Place devices on the canvas
4. Connect devices with appropriate signal types
5. Configure device properties (model, IP address)
6. Organize into rack views if needed
7. Add labels and annotations
8. Export schematic as PDF for documentation

10. PDF Export

Professional Report Generation

PURPOSE


Generate multi-page PDF reports with customizable templates, title blocks, and layout regions.

The PDF Export tab creates professional documentation packages from your PixelLogic designs. It generates multi-page PDF reports that include pixel map visualizations, technical specifications, dimension drawings, and project metadata in a polished presentation format.

The template system allows customizing report layouts with configurable regions, title blocks, headers/footers, and typography settings. You can define which pixel maps appear on which pages, add custom artwork backgrounds, and configure the information hierarchy.

Export options include page size (A4, A3, Letter, custom), orientation (landscape/portrait), quality settings, and selective page inclusion. Reports can include delivery specifications, cable schedules, power requirements, and any other project data — making this a one-stop documentation solution for LED installations.

Video Delivery Specifications include quick picks for Resolume, Disguise d3, Dataton Watchout 6/7, Playback Pro, Green Hippo, and Pixera. Choosing one synchronizes the Media Server dropdown and applies its matching codec, links, frame rate, audio, and naming details.

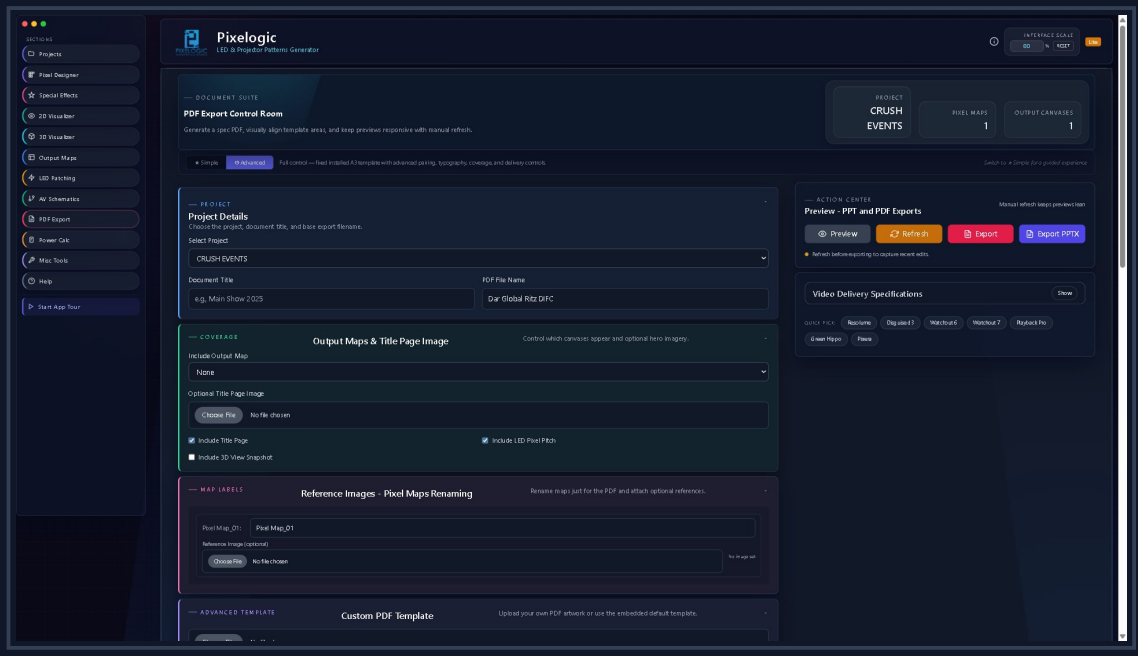

10. PDF Export — Features & Workflow

Key Features

- Multi-page PDF report generation
- Customizable page templates
- Title block with project metadata
- Header and footer configuration
- Selective pixel map inclusion
- Custom artwork/background support
- Page size options (A4, A3, Letter, custom)
- Landscape and portrait orientation
- Typography and font settings
- Technical specification tables
- Delivery specification pages with cleaner line spacing on the final page
- Advanced mode media server presets include Green Hippo and Pixera
- Quick-pick presets synchronize the Media Server dropdown and delivery details
- Pixel-map details include total pixel size and reduced + decimal aspect ratio
- Table of contents generation
- Company branding/logo placement
- Quality/resolution settings
- Batch export multiple projects

Typical Workflow

1. Configure page template and title block
2. Select which pixel maps to include
3. Arrange page layout and regions
4. Add project metadata and specifications
5. Verify each map details block shows pixel size and aspect ratio
6. Choose a Video Delivery quick pick or Media Server dropdown; its server-specific details populate automatically
7. Preview the PDF layout
8. Choose export settings (size, orientation, quality)
9. Generate and save the PDF document

11. Power Calculator

LED Wall Power Consumption Analysis


PURPOSE

Calculate LED wall power requirements using real bench-measured amperage data from 65+ panel models.

The Power Calculator uses real bench-measured amperage data from professional testing labs to accurately calculate power consumption for LED wall installations. The database contains 65+ LED tile models across 10 major brands (Gloshine, Absen, Unilumin, Infiled, and more).

For each selected model, the calculator provides per-tile amperage data across 5 color scenarios (Full Red, Full Green, Full Blue, Full White, and Standby) at both 100% and 50% brightness levels. It then scales these values based on your total tile count and voltage configuration.

The tool calculates total current draw, active power (kW), apparent power (kVA with power factor), and recommends breaker sizes with a 1.25× safety factor. For 3-phase configurations, it shows per-phase load distribution ensuring balanced power delivery. Results can be exported as a professional PDF power report.

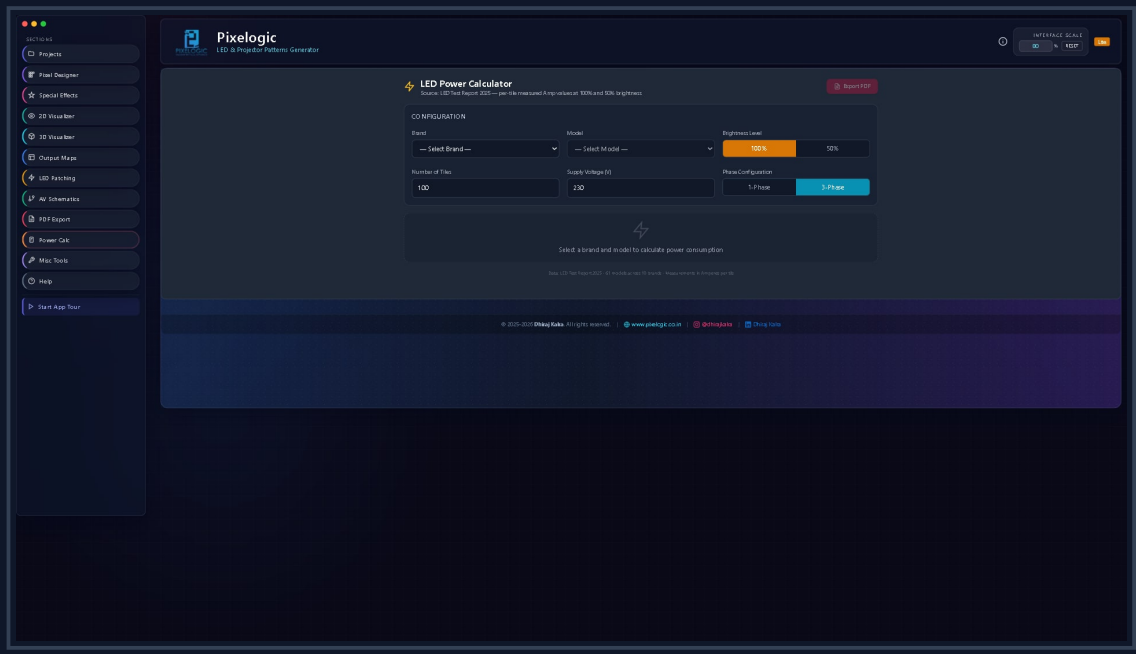

11. Power Calculator — Features & Workflow

Key Features

- 65+ LED models across 10 brands
- Real bench-measured amperage data
- 5 color scenarios (R, G, B, White, Standby)
- 100% and 50% brightness levels
- Configurable tile count (1-9999)
- Supply voltage selection (100-480V)
- 1-Phase and 3-Phase configuration
- Active power calculation (kW)
- Apparent power calculation (kVA)
- Breaker sizing with 1.25× safety factor
- Per-phase load distribution analysis
- IEC standard breaker size recommendations
- Professional PDF power report export
- Color-coded scenario comparison cards

Typical Workflow

1. Select LED brand from dropdown
2. Choose specific model (auto-populated based on brand)
3. Set brightness level (100% or 50%)
4. Enter total number of tiles
5. Configure supply voltage (default: 230V)
6. Select phase configuration (1-phase or 3-phase)
7. Review power summary and scenario breakdown
8. Export power report as PDF if needed

12. Utility Tools

Aspect Ratio Calculator & LTC Generator


PURPOSE

Quick-access utility tools for common AV calculations and timecode generation.

The Utility Tools tab houses two essential tools for AV professionals: an Aspect Ratio Calculator and a Linear Timecode (LTC) Generator. These tools provide quick access to common calculations needed during LED wall design and show programming.

The Aspect Ratio Calculator has two modes: Custom Calculator (enter any resolution to find its aspect ratio and scaling options) and Universal Ratios (browse a comprehensive reference of standard display ratios from 1:1 through ultrawide formats). It helps ensure content is created at the correct proportions for your LED surfaces.

The LTC (SMPTE Timecode) Generator creates standard timecode signals for synchronization purposes. It supports multiple frame rates (23.976, 24, 25, 29.97, 30 fps) and can generate timecode audio signals for triggering media servers and show control systems.

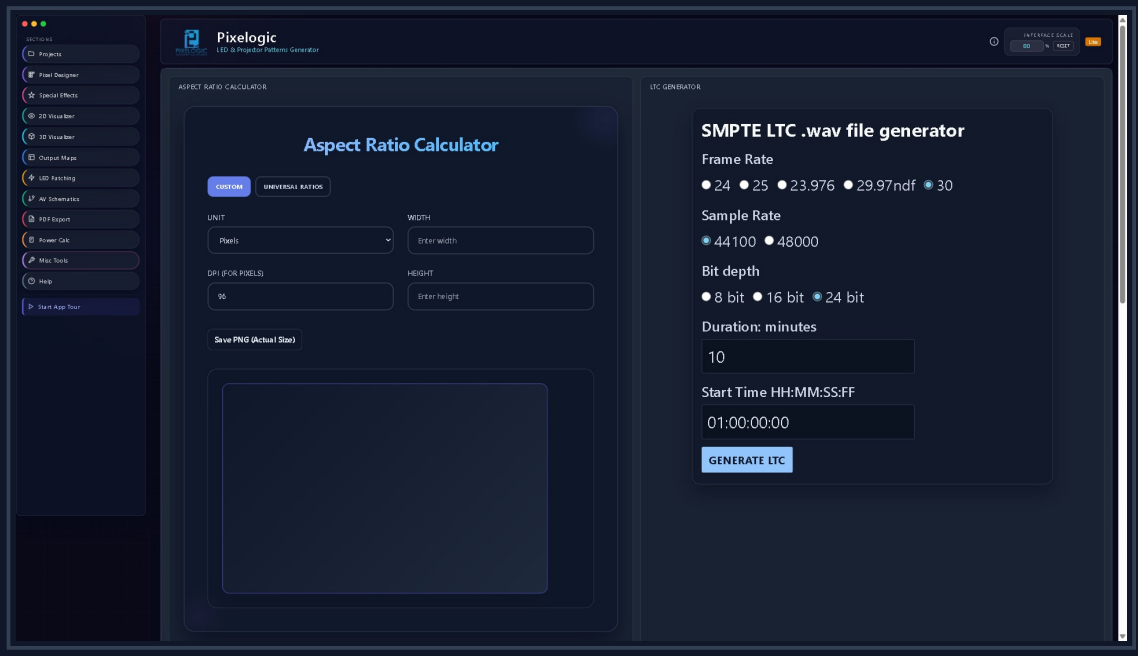

12. Utility Tools — Features & Workflow

Key Features

- Aspect Ratio Calculator - Custom mode
- Aspect Ratio Calculator - Universal Ratios reference
- Calculate ratio from any resolution
- Scale resolution maintaining aspect ratio
- Common ratio presets (16:9, 4:3, 21:9, etc.)
- LTC/SMPTE Timecode Generator
- Multiple frame rate support (23.976 - 30fps)
- Timecode audio signal output
- Start/stop time configuration
- Real-time timecode display

Typical Workflow

1. Select the desired utility tool
2. For Aspect Ratio: Enter resolution or select standard ratio
3. Review calculated ratio and equivalent resolutions
4. For LTC: Configure frame rate and start time
5. Generate timecode signal as needed

13. Projector Test Pattern

Projection Calculator & Test Patterns


PURPOSE

Generate test patterns and calculate projection parameters for flat, curved, and circular surfaces.

The Projector Test Pattern tool is PixelLogic's projection mode centerpiece. It generates professional test patterns for projector alignment, edge-blending calibration, and geometry correction. The tool includes comprehensive calculators for three projection surface types: flat, curved, and circular/dome.

The Flat Calculator computes throw distances, image sizes, lens shift requirements, and multi-projector overlap zones for standard flat-screen installations. The Curved Calculator handles cylindrical and custom-curve surfaces with wrap angle calculations. The Circular/Dome Calculator addresses planetarium-style and immersive dome projections.

Test pattern generation includes grid patterns, crosshatch, color bars, focus charts, geometry test images, and custom resolution patterns. All patterns can be displayed fullscreen on connected displays for real-time projector calibration during installation.

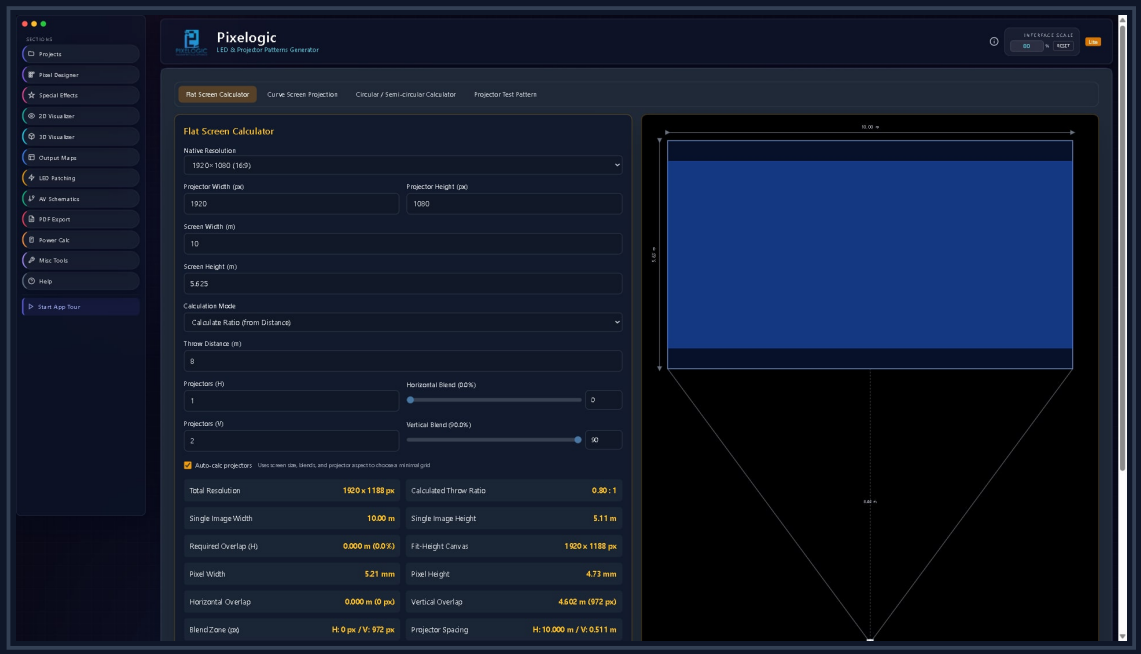

13. Projector Test Pattern — Features & Workflow

Key Features

- Test pattern generation (grid, crosshatch, color bars, focus)
- Fullscreen pattern display on connected monitors
- Custom resolution pattern generation
- Flat projection calculator (throw distance, image size)
- Lens shift calculation
- Multi-projector overlap zone calculation
- Curved surface projection calculator
- Wrap angle and surface radius computation
- Circular/dome projection calculator
- Projector specification database
- Edge blend overlap visualization
- Geometric correction reference patterns

Typical Workflow

1. Select projection surface type (flat/curved/dome)
2. Enter projector specifications (lens, throw ratio)
3. Configure surface dimensions
4. Calculate throw distance and image size
5. For multi-projector: configure overlap and blending
6. Generate appropriate test pattern
7. Display fullscreen on projector for calibration

13. Projector Test Pattern — Subtabs

Tab 1

Settings

Base projector and surface inputs, pattern type selection, rendering options

Tab 2

Flat Calculator

Standard flat-surface projection: throw ratio, distance, multi-projector layouts

Tab 3

Curved Calculator

Cylindrical/curved surface projection calculations with wrap angle

Tab 4

Circular/Dome Calculator

Dome and circular projection geometry, coverage calculations

14. Help & Reference

Documentation & Tutorials

PURPOSE


In-app documentation, keyboard shortcuts, workflow guides, and troubleshooting tips.

The Help tab provides comprehensive in-application documentation covering all features, keyboard shortcuts, workflow guides, and troubleshooting information. It serves as both a quick reference for experienced users and a learning resource for new users.

Content includes feature descriptions for every tab, step-by-step workflow tutorials, keyboard shortcut reference, performance optimization tips, and known limitations. The "What's New" section highlights recent updates and added features.

A performance toggle allows switching between quality and performance rendering modes, useful for older hardware or very large pixel map configurations. Troubleshooting guides address common issues like display scaling, export problems, and browser compatibility.

The Help header also includes Start App Tour, which covers automatic dual-format aspect ratios, Special Effects badge metrics, draggable 3D stages, Span to LED Bottom, boxed screen/stage callouts, clean 3D exports, and PDF/PPTX map metrics.

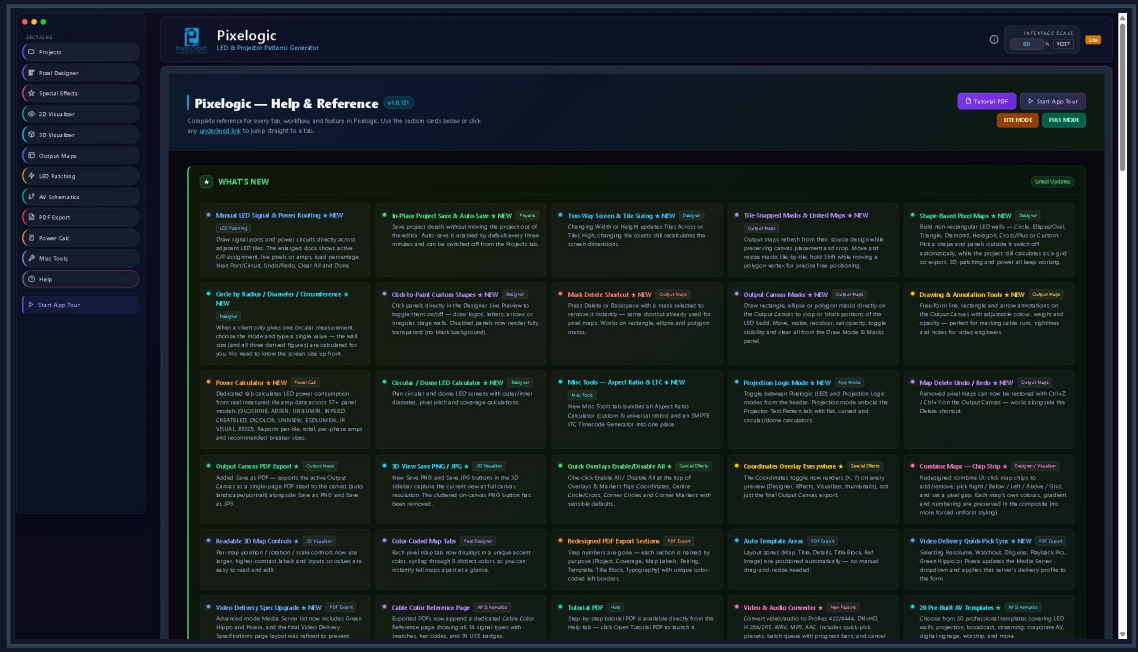

14. Help & Reference — Features & Workflow

Key Features

- Complete feature documentation
- Keyboard shortcuts reference
- Step-by-step workflow tutorials
- What's New changelog
- Performance mode toggle
- Troubleshooting guides
- Start App Tour button with updated guided walkthrough content
- Tips and best practices
- System requirements information
- Export format specifications
- Contact and support information

Typical Workflow

1. Open Help tab for documentation
2. Browse by topic or search for specific features
3. Follow workflow guides for new features
4. Check troubleshooting for common issues
5. Toggle performance mode if experiencing lag

Quick Reference — All Tabs at a Glance

1. **Projects**
Central hub for creating, organizing, and managing all ...

2. **Saved Projects**
View and manage all saved/finalized projects in a dedic...

3. **Pixel Designer**
Design and configure LED pixel maps with precise panel ...

4. **Special Effects**
Add visual overlay effects, text badges, markers, logos...

5. **2D Visualizer**
Render full-resolution 2D previews of pixel maps and ex...

6. **3D Visualizer**
View LED wall designs in an interactive 3D perspective ...

7. **Output Maps**
Arrange pixel maps into output canvases with drawing to...

8. **LED Patching**
Plan processor ports and power circuits automatically o...

9. **AV Schematics**
Create comprehensive AV system schematics with 50+ devi...

10. **PDF Export**

13. **Projector Test Pattern**
Generate test patterns and calculate projection paramet...

14. **Help & Reference**
In-app documentation, keyboard shortcuts, workflow guid...

Pro Tips

- Use Ctrl+S to quick-save your project at any time
- Switch between Pixelogic and Projection Logic modes using the mode toggle in the header
- Export your work frequently — use JSON backup for complete project preservation
- The Power Calculator uses real lab-measured data, not manufacturer specifications
- All tools work offline — no internet connection required after installation