Impinj ItemTest Software – Complete User Manual

This document is a comprehensive user manual for the Impinj ItemTest software. It explains each screen, option, field, and control shown in the ItemTest UI, including its purpose, meaning, and real-world usage. This manual is written by referencing official Impinj documentation and best practices.

Inventory Screen

The Inventory screen is used to continuously or selectively read RFID tags. The Play button starts the inventory operation, while the timer shows elapsed read duration. Columns such as EPC, TID, RSSI, Read Count, and timestamps help analyze tag visibility, signal strength, and read behavior.

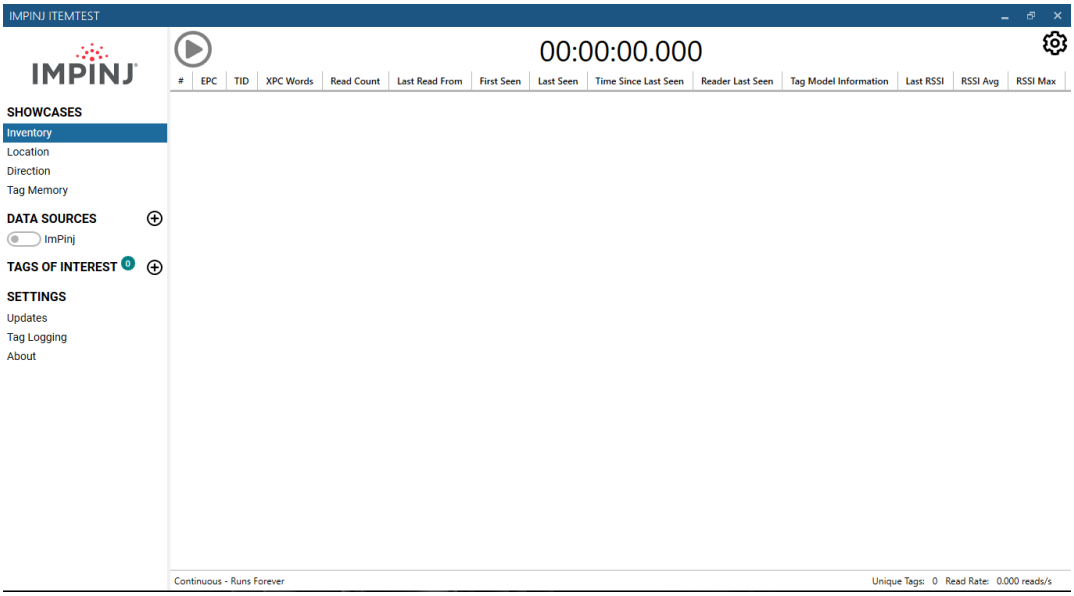

Tag Memory Screen

The Tag Memory screen allows direct interaction with RFID tag memory banks. Users can read or write EPC, TID, USER, or RESERVED memory. Word Offset and Word Count define where reading starts and how much data is accessed.

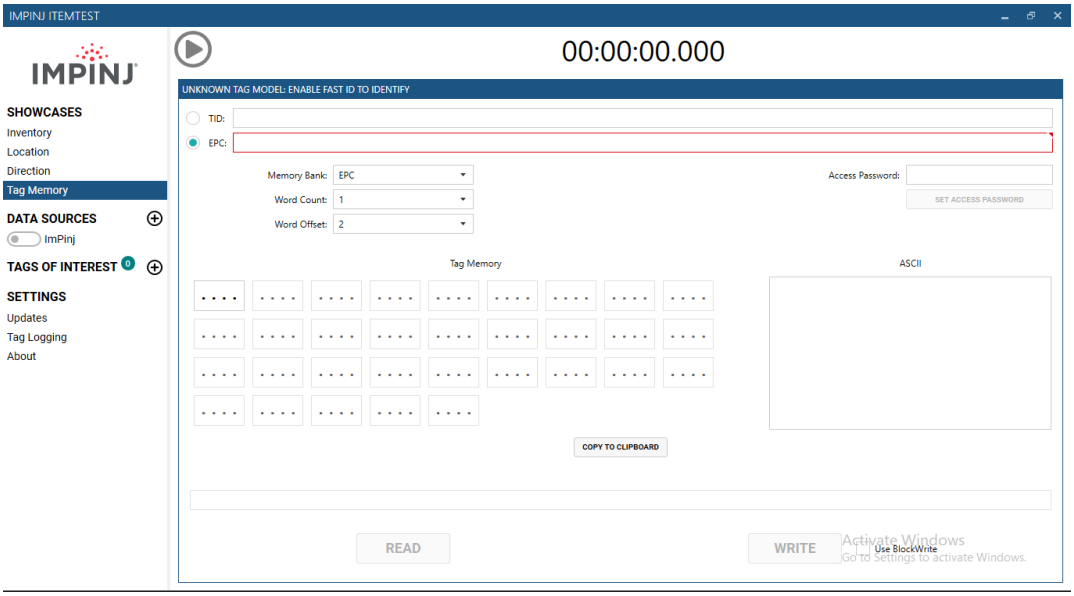

Updates Screen

The Updates screen manages ItemTest software updates. Automatic update checking ensures the application stays compatible with new readers and firmware. Manual update checking allows controlled environments to update on demand.

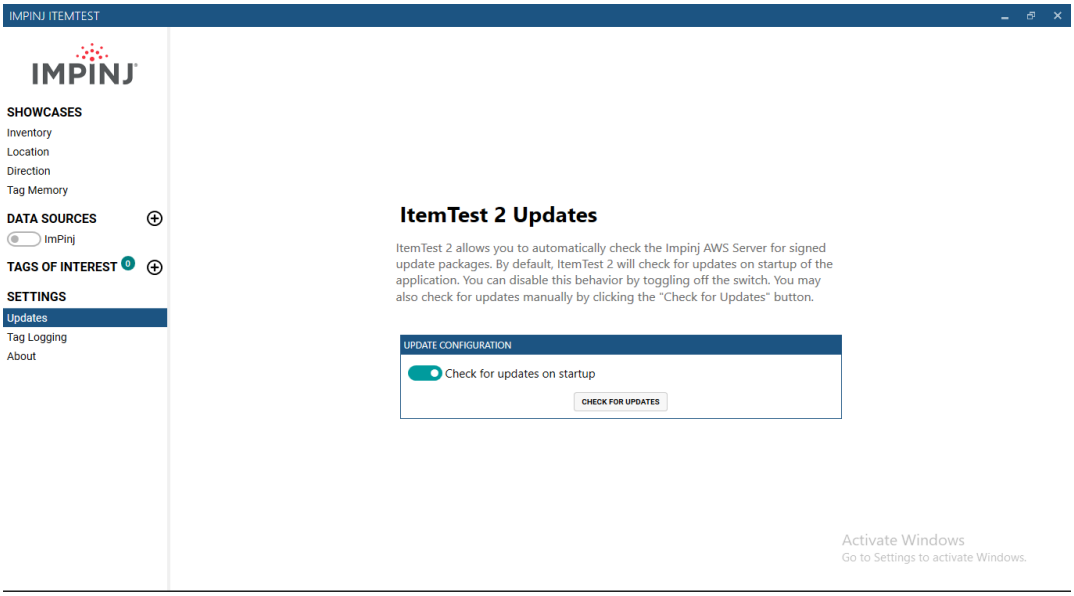

Tag Logging Screen

Tag Logging enables saving tag read data to local files. This is useful for debugging, audits, testing, and performance analysis. Users can configure destination paths, file prefixes, and unique EPC logging.

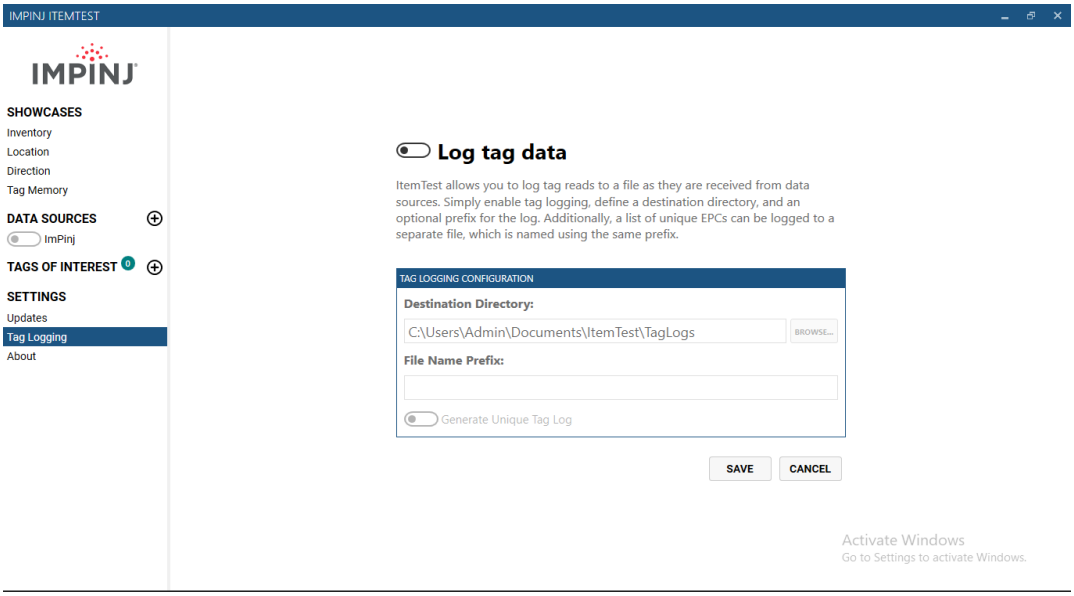

Data Source Connection Screen
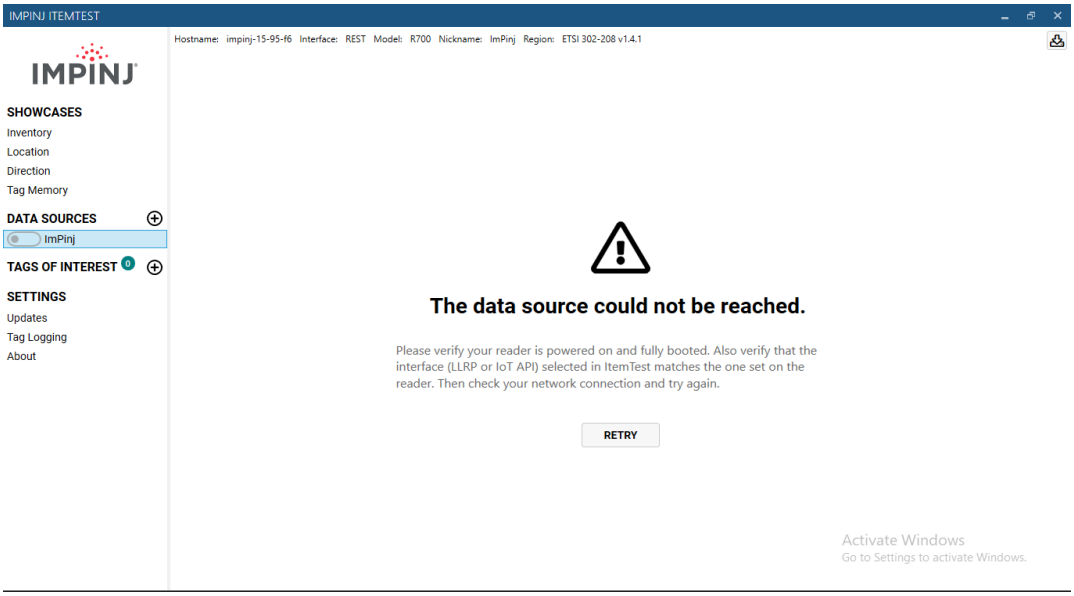
This screen shows reader connectivity status. Errors indicate mismatches in network settings, interface type, or reader availability. Retry attempts reconnection after configuration or network correction.