Layout

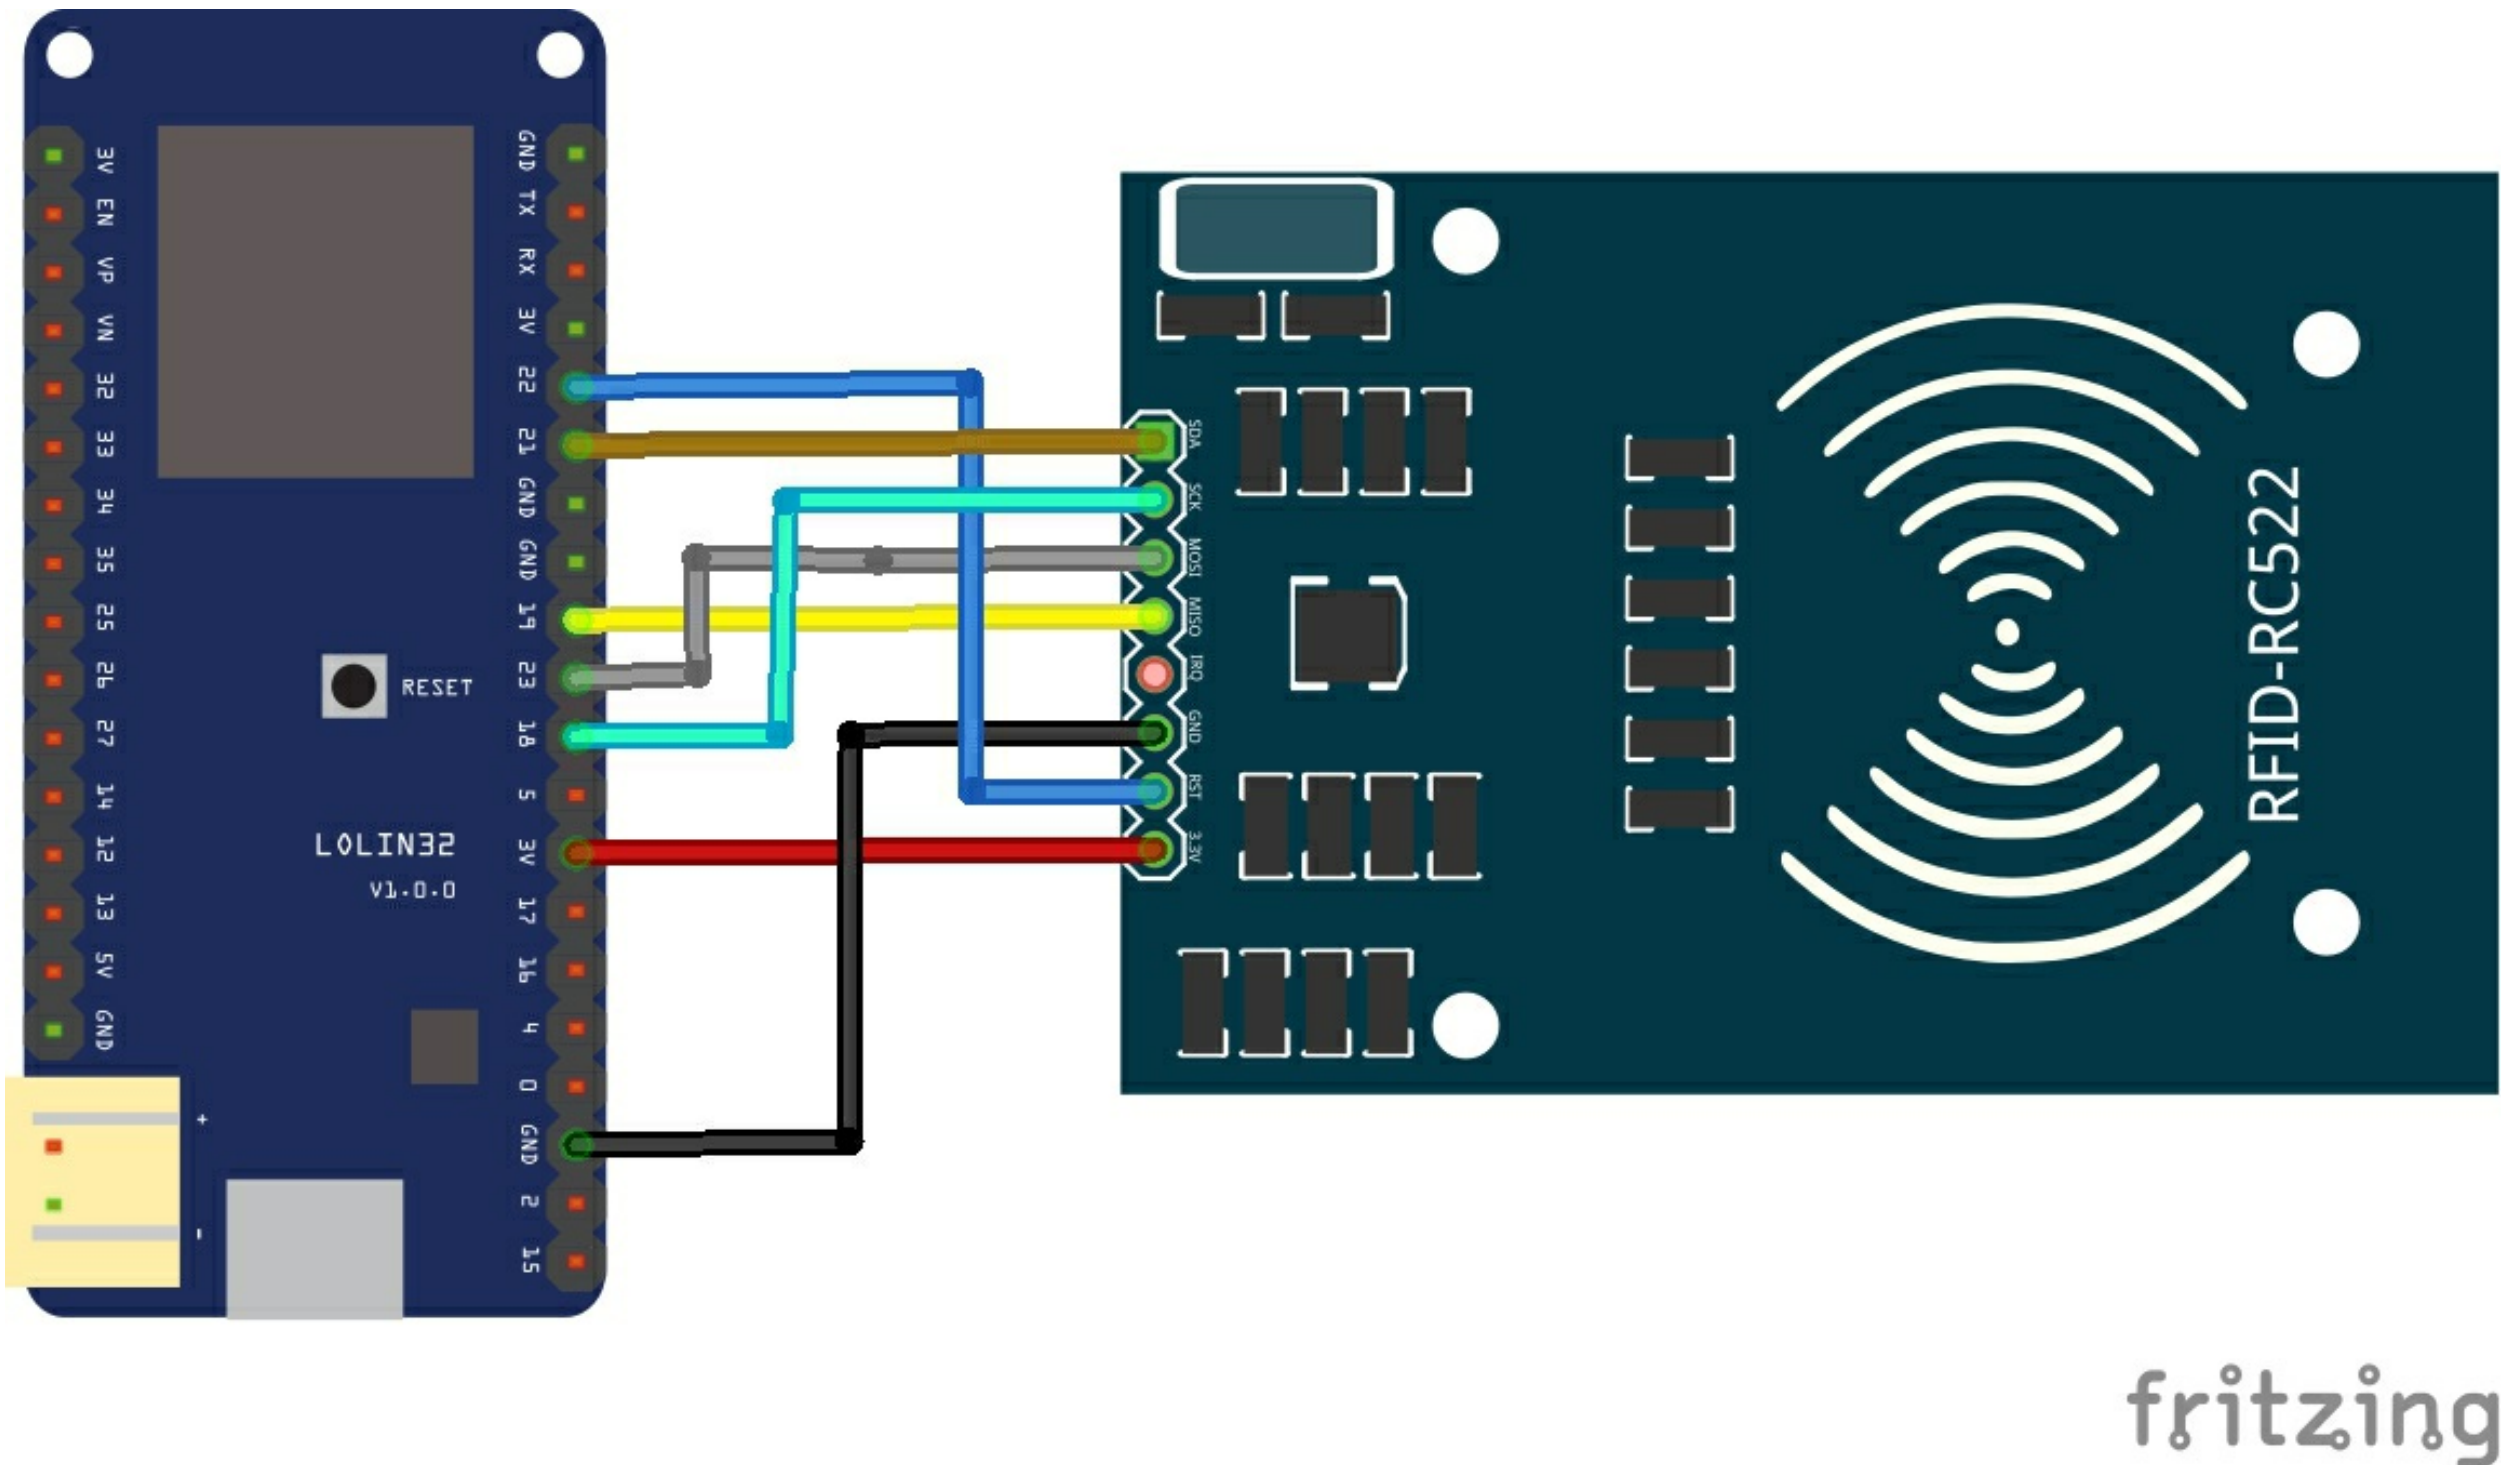

Code

Install the RFID522 library - https://github.com/miguelbalboa/rfid

This is the DumpInfo example modified

```
#include <SPI.h>
#include <MFRC522.h>

//#define RST_PIN 9 // Configurable, see typical pin layout above
//#define SS_PIN 10 // Configurable, see typical pin layout above
const int RST_PIN = 22; // Reset pin
const int SS_PIN = 21; // Slave select pin

MFRC522 mfrc522(SS_PIN, RST_PIN); // Create MFRC522 instance

void setup() {
Serial.begin(9600); // Initialize serial communications with the PC
while (!Serial); // Do nothing if no serial port is opened (added for Arduinos based on ATMEGA32U4)
SPI.begin(); // Init SPI bus
mfrc522.PCD_Init(); // Init MFRC522
mfrc522.PCD_DumpVersionToSerial(); // Show details of PCD - MFRC522 Card Reader details
Serial.println(F("Scan PICC to see UID, SAK, type, and data blocks..."));
}
```

```
void loop() {
// Look for new cards
if ( ! mfrc522.PICC_IsNewCardPresent()) {
return;
}

// Select one of the cards
if ( ! mfrc522.PICC_ReadCardSerial()) {
return;
}

// Dump debug info about the card; PICC_HaltA() is automatically called
mfrc522.PICC_DumpToSerial(&(mfrc522.uid));
}
```

Output

This is the output in the serial monitor

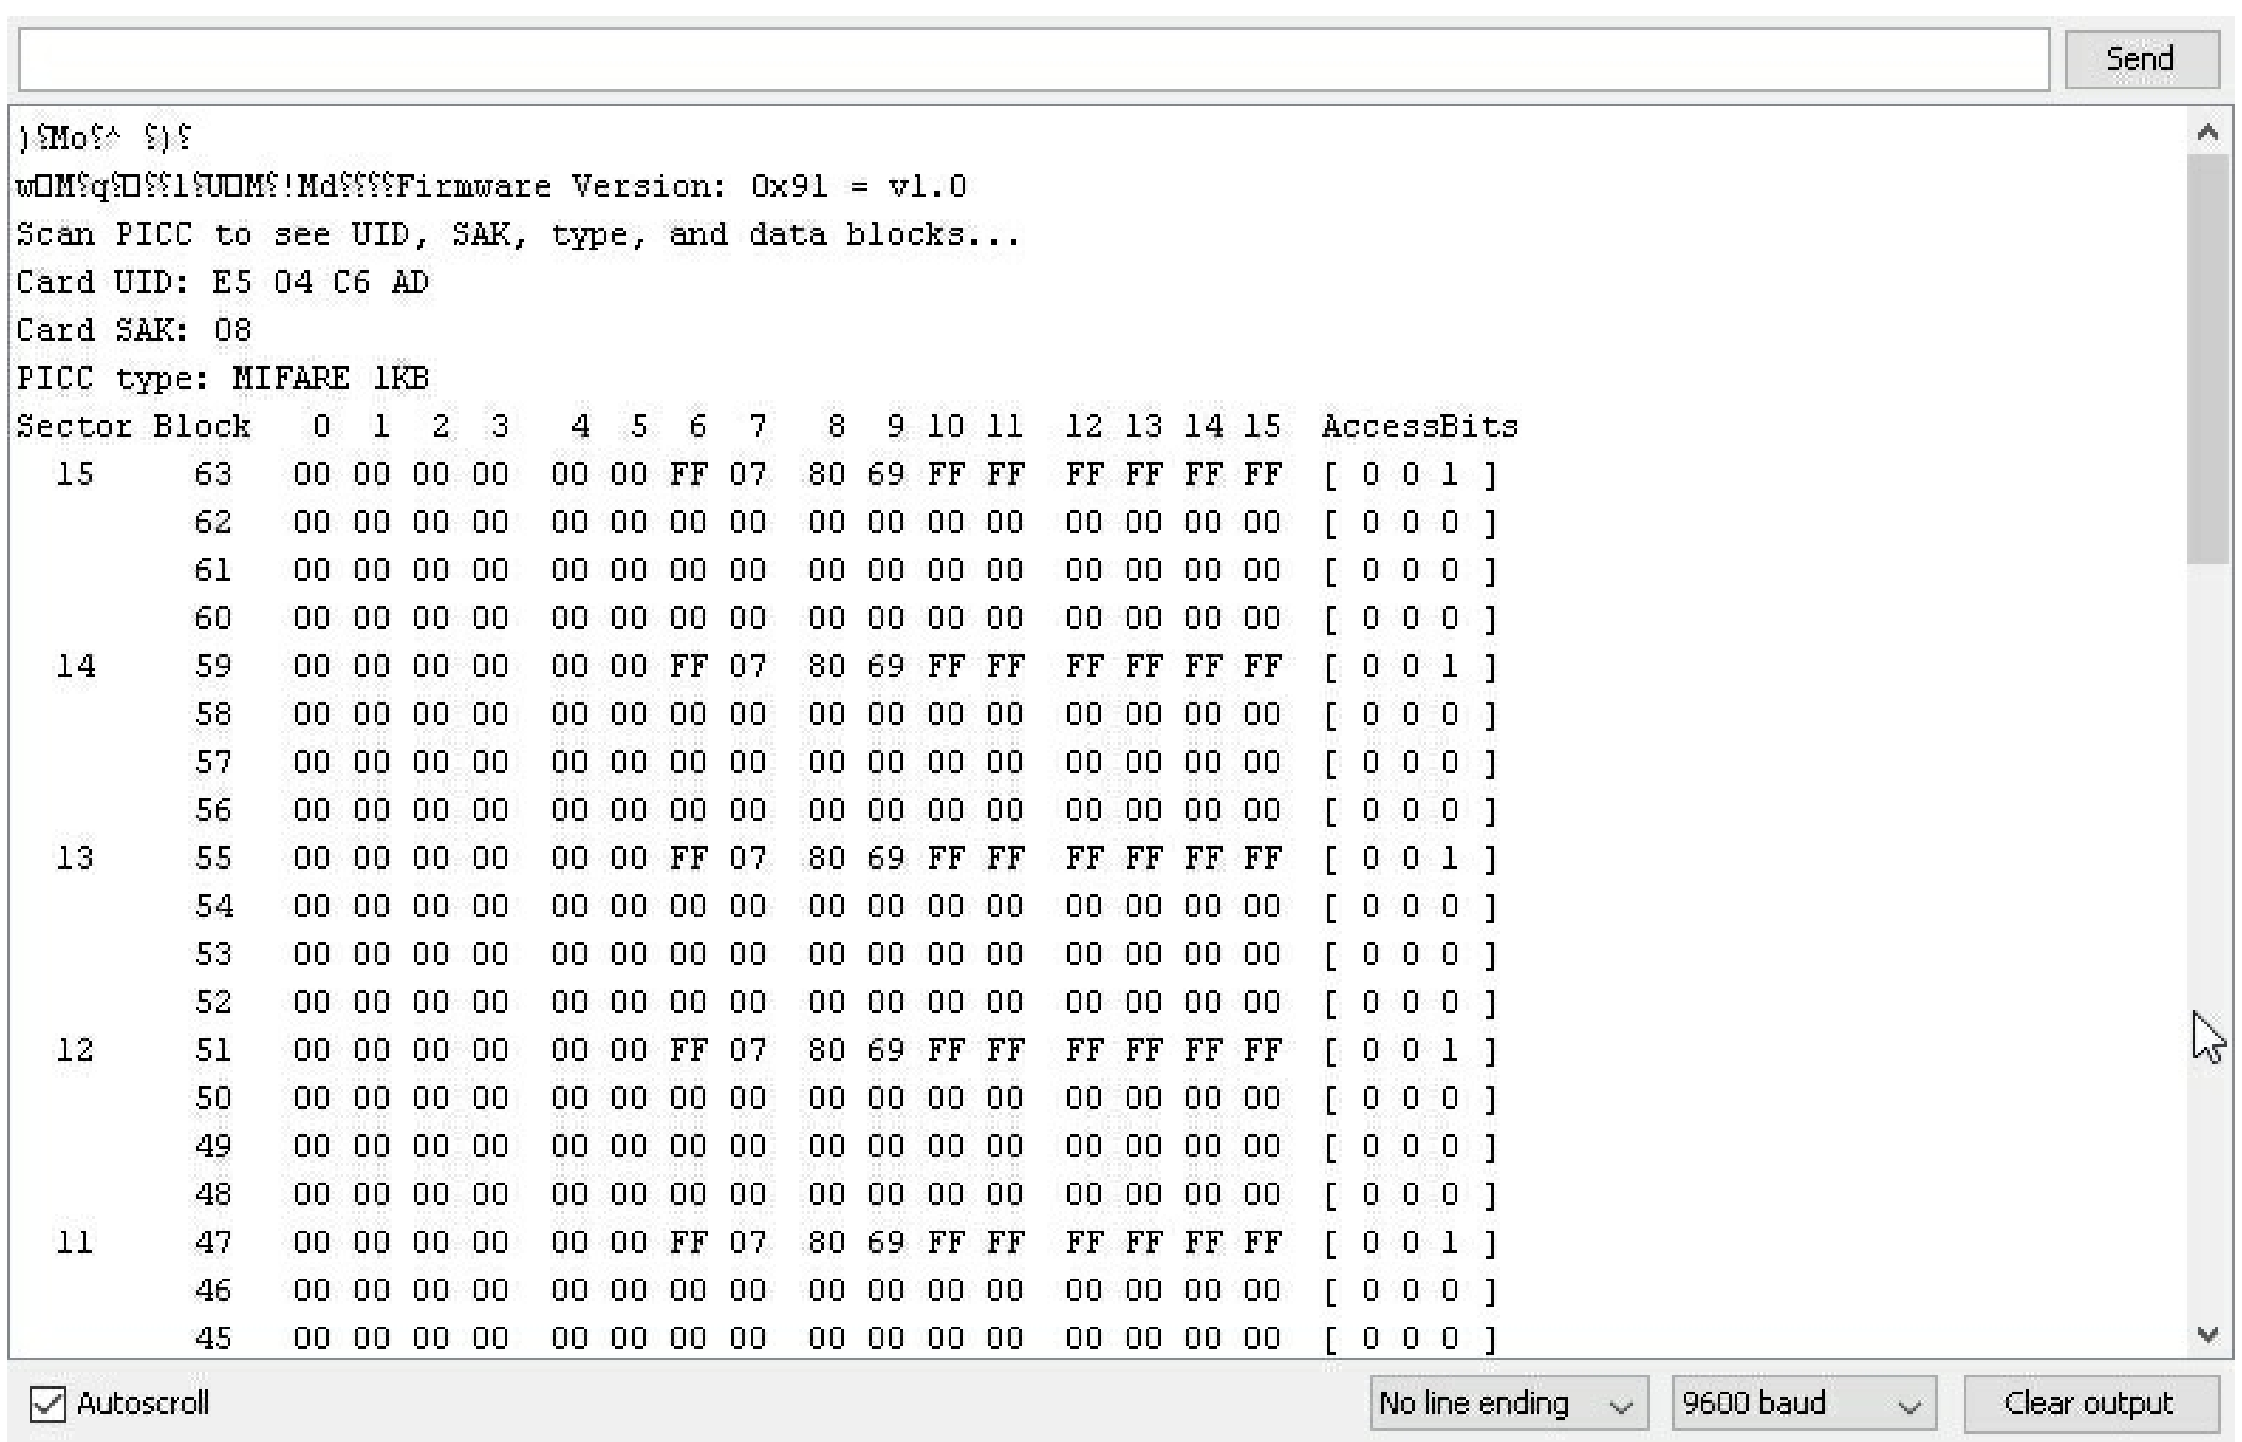

There are many other good examples in the library