


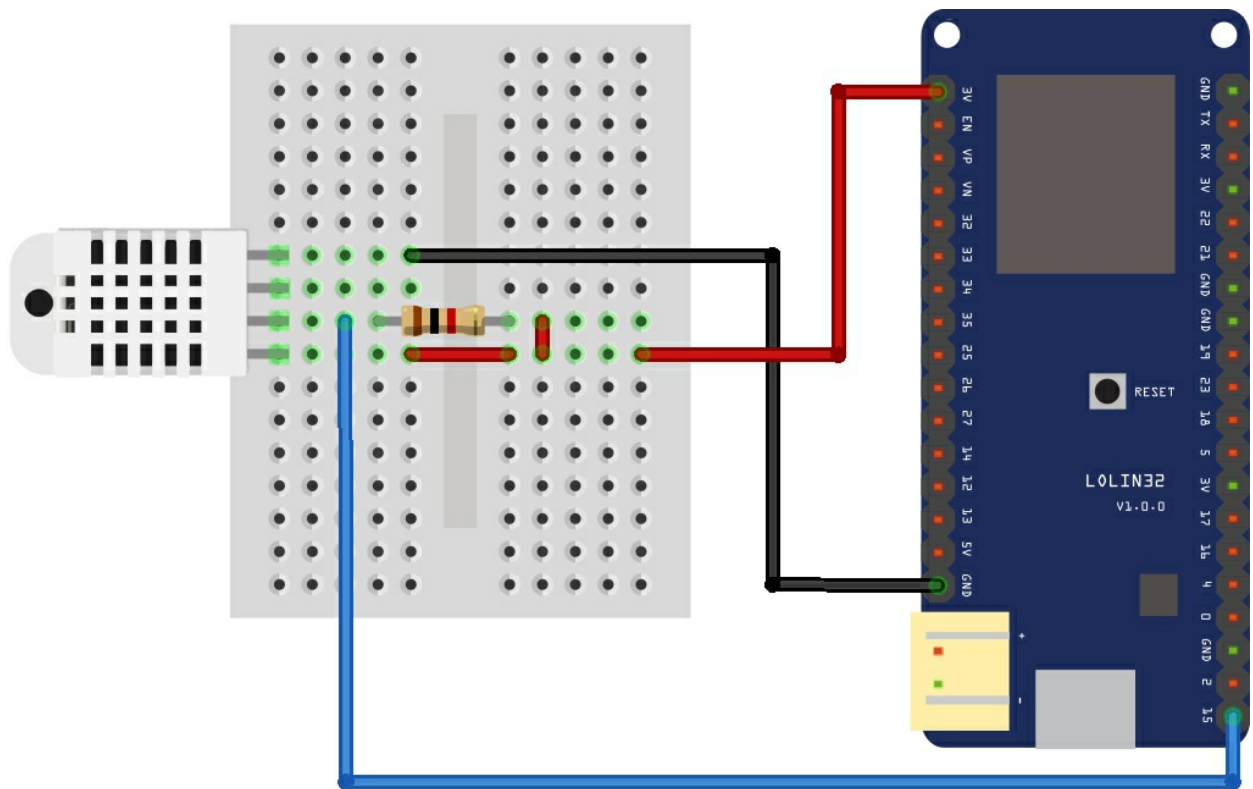

fritzing

Code

You need to add the DHT library from adafruit to the Arduino IDE - <https://github.com/adafruit/DHT-sensor-library>

```
#include "DHT.h"

#define DHTPIN A13
//our sensor is DHT22 type
#define DHTTYPE DHT22
//create an instance of DHT sensor
DHT dht(DHTPIN, DHTTYPE);
void setup() {
  Serial.begin(115200);
  Serial.println("DHT22 sensor!");
  //call begin to start sensor
  dht.begin();
}

void loop() {
  //use the functions which are supplied by library.
  float h = dht.readHumidity();
  // Read temperature as Celsius (the default)
  float t = dht.readTemperature();
  // Check if any reads failed and exit early (to try again).
  if (isnan(h) || isnan(t)) {
    Serial.println("Failed to read from DHT sensor!");
    return;
  }
  // print the result to Terminal
  Serial.print("Humidity: ");
  Serial.print(h);
  Serial.print(" %\t");
  Serial.print("Temperature: ");
  Serial.print(t);
  Serial.println(" *C ");
  //we delay a little bit for next read
  delay(2000);
}
```

Output

Open the serial monitor and you should see something like this

Humidity: 53.30 % Temperature: 28.90 *C

Humidity: 53.30 % Temperature: 28.90 *C