Serial to Ethernet converter E-P732-X

Serial to Ethernet converter E-P732-X

IP Address change prosses:

1:-insert cd
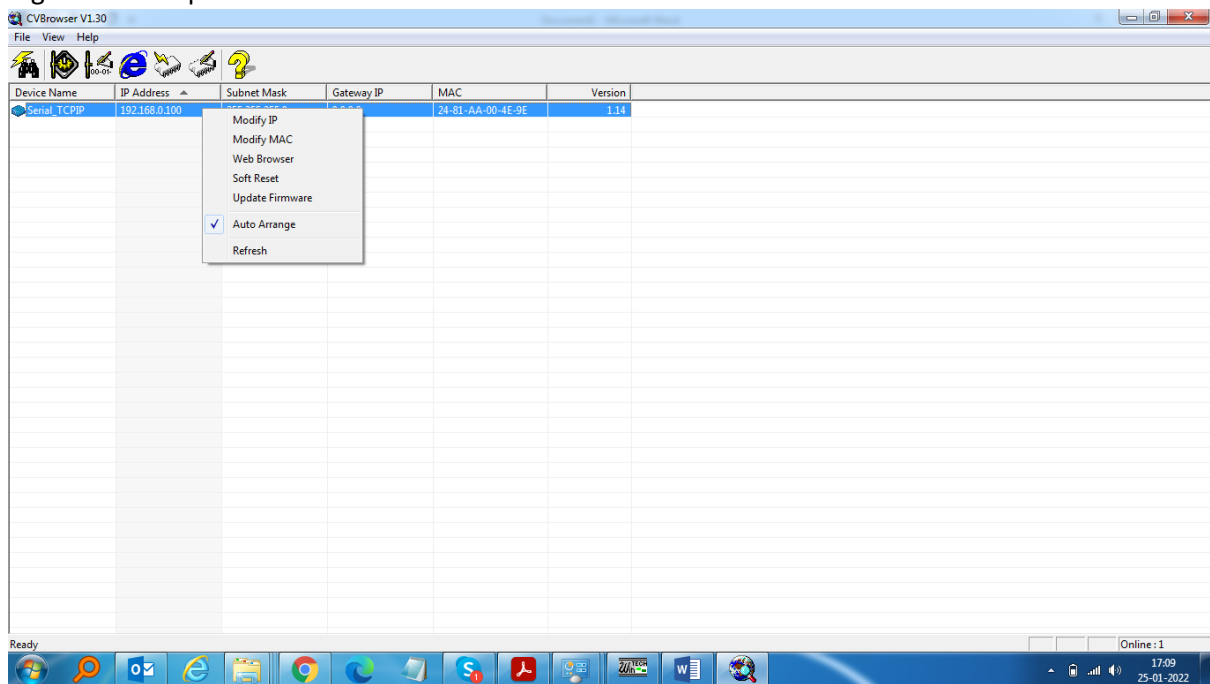
2:- E:\E-P732\1. IP Search Utility

3:-

CVBrowser_V1.30.ra-

4:- run this software
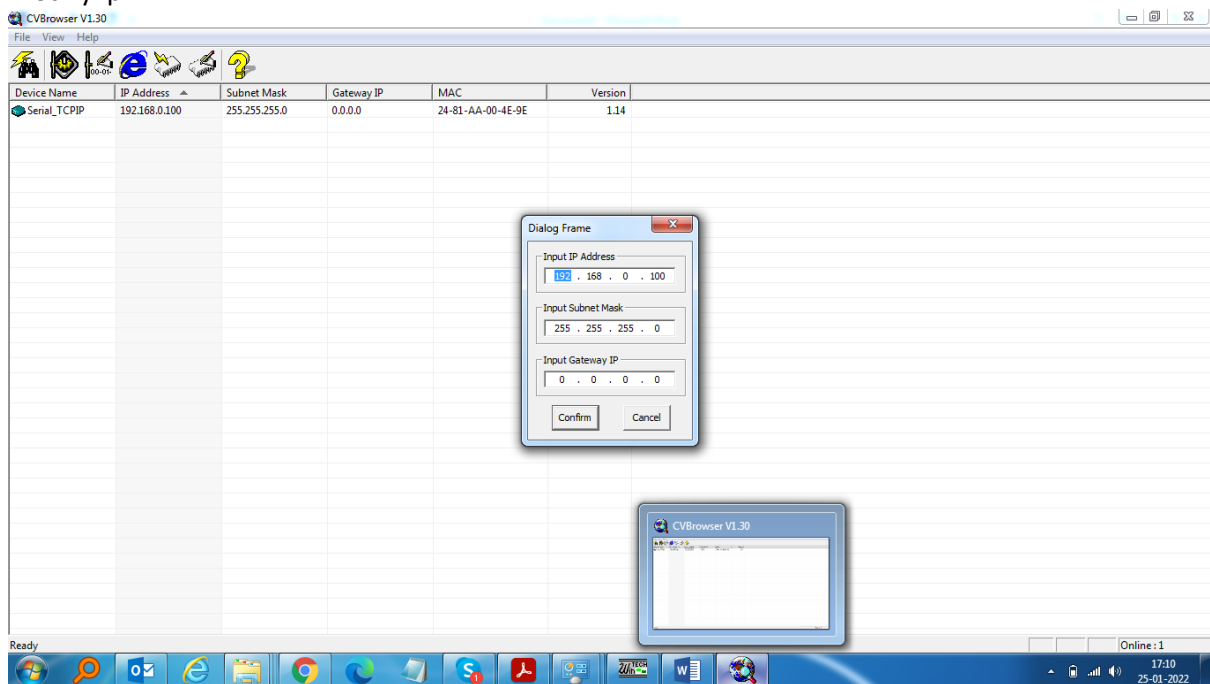
Serial to Ethernet converter E-P732-X
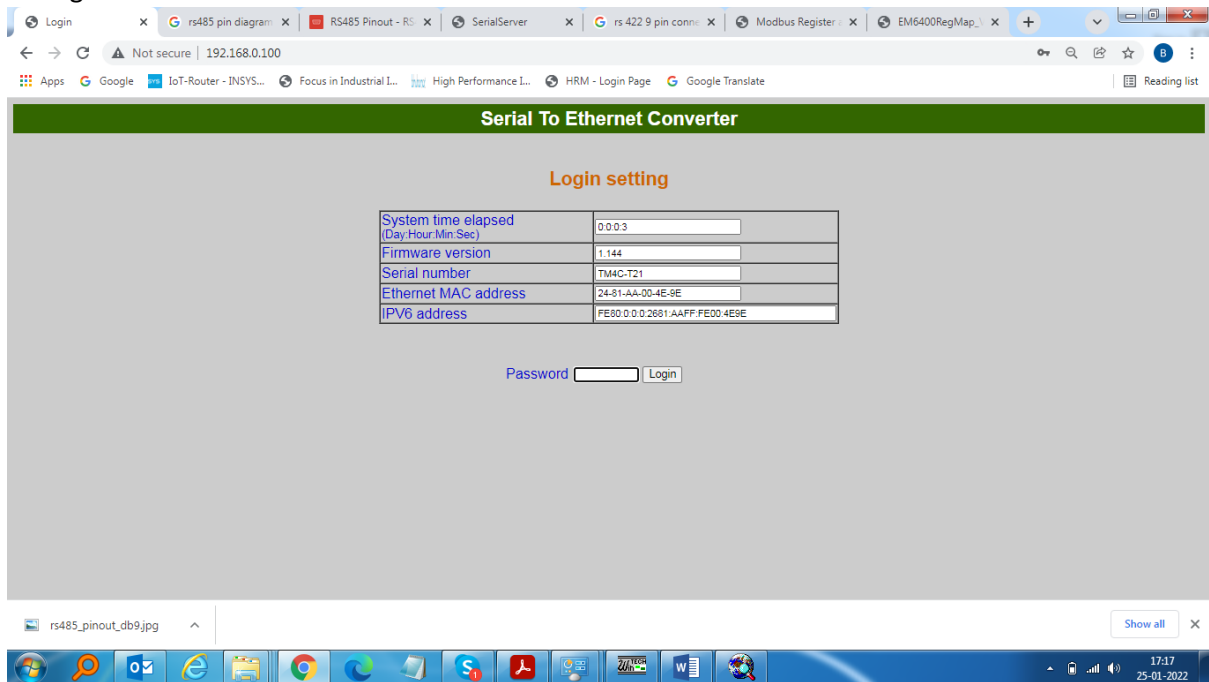
Right click the ip address:-

Modify ip:-

Insert your ip address and conform:-
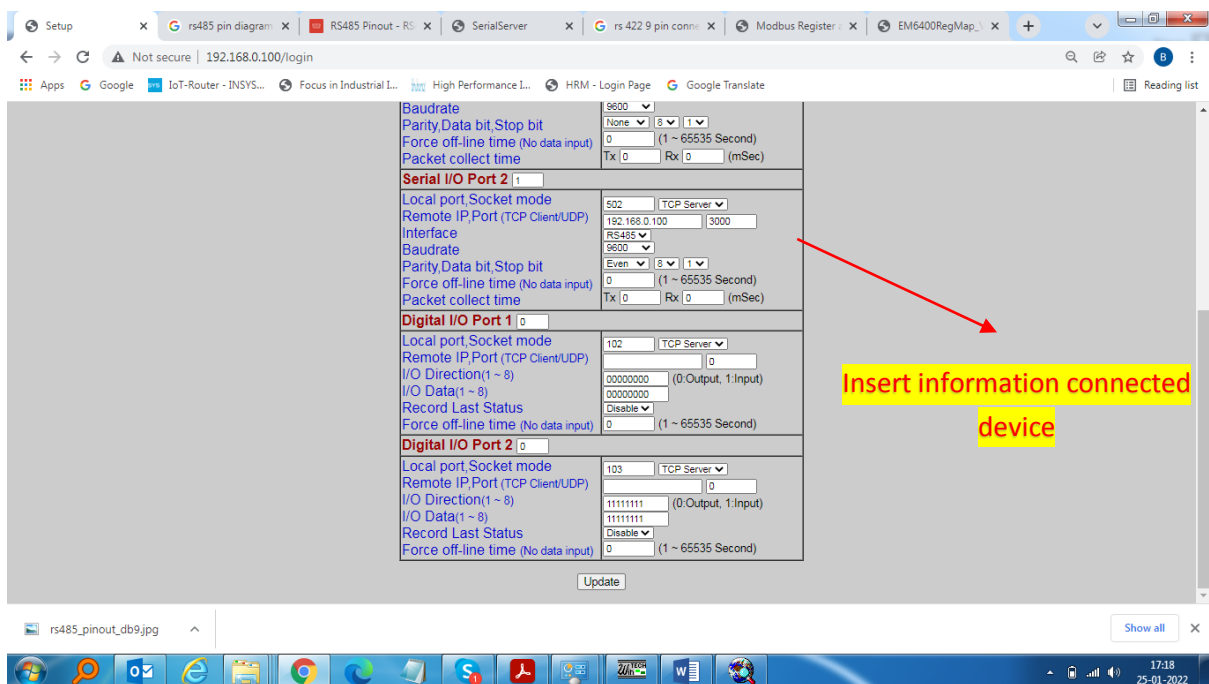
Go to chrome browser and login ip add

Change laptop ip address same range is E-P732-X devices

Serial to Ethernet converter E-P732-X

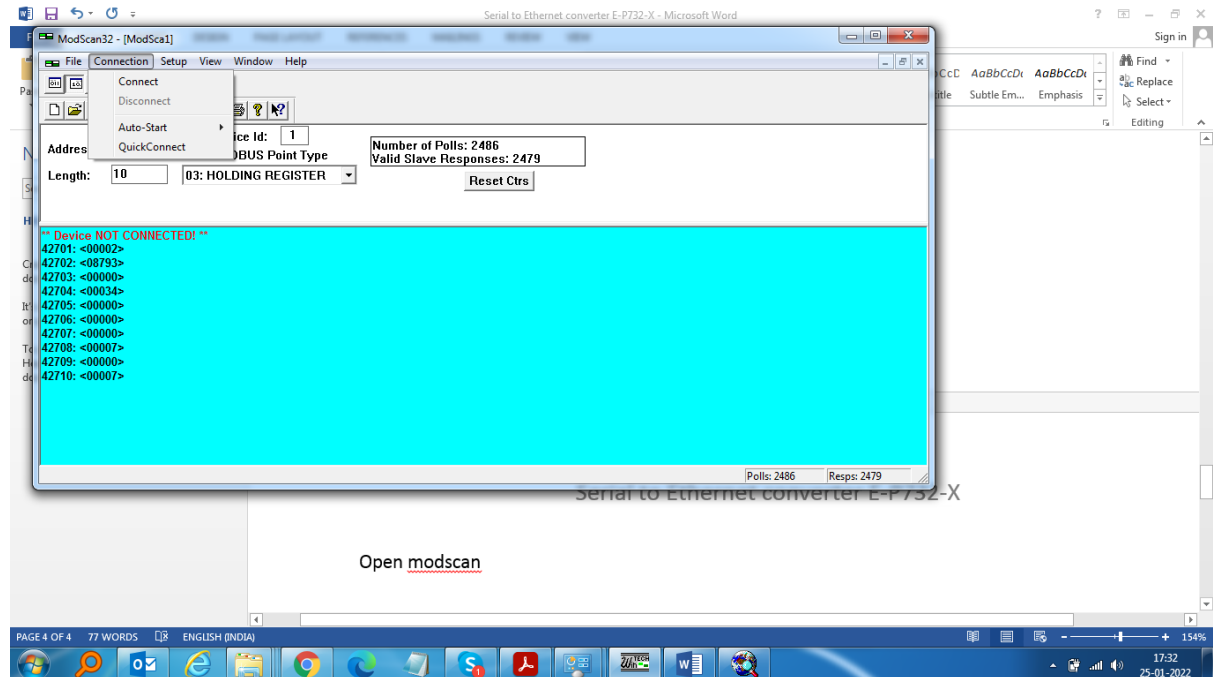Configuration of this devises:-

Login page:- click login

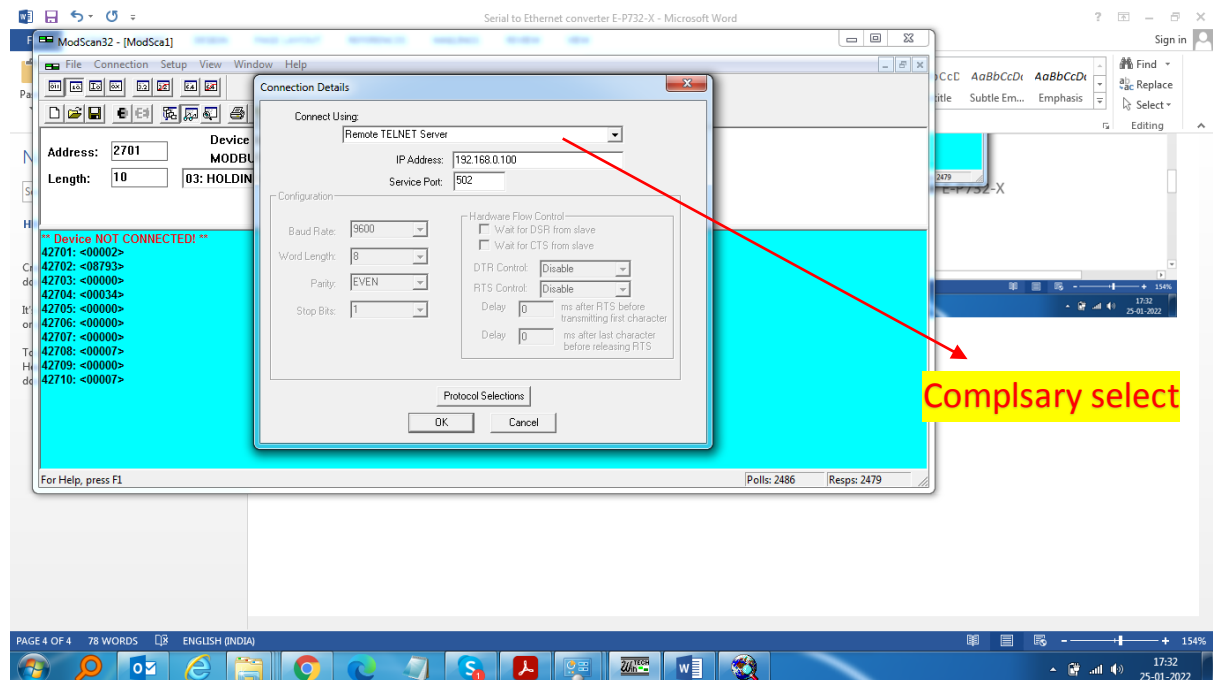Update this configuration..

Device will be restart :-
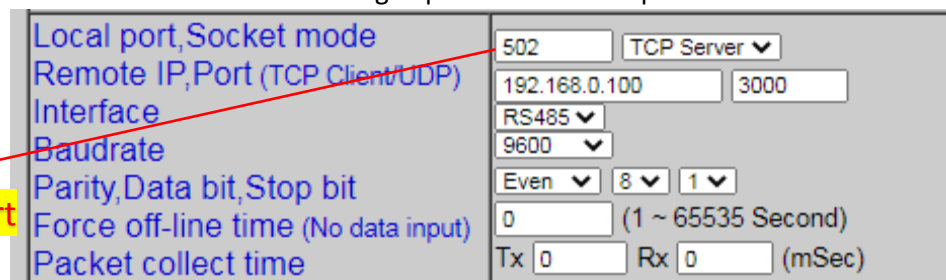
Wait & login agin
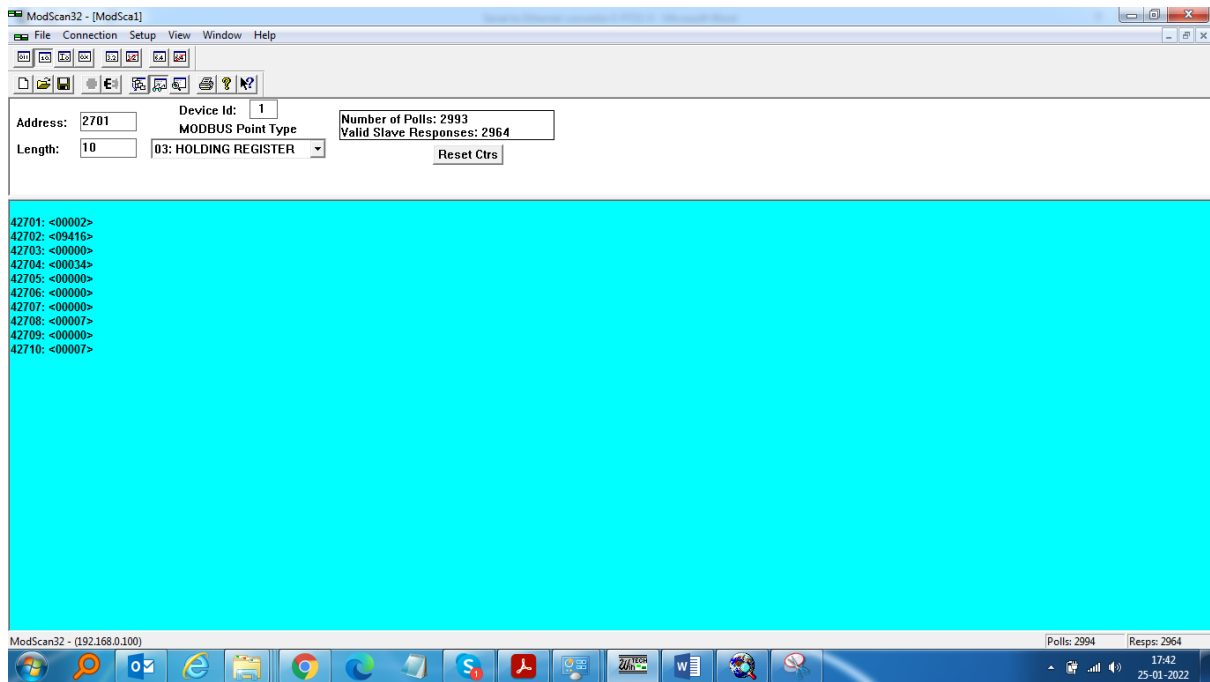
Serial to Ethernet converter E-P732-X

Open modscan

Connect:-

Complsary select

Insert login ip address & local port installed.

Local port,Socket mode	502	TCP Server
Remote IP,Port (TCP Client/UDP)	192.168.0.100	3000
Interface	RS485	
Baudrate	9600	
Parity,Data bit,Stop bit	Even	8 1
Force off-line time (No data input)	0	(1 ~ 65535 Second)
Packet collect time	Tx 0 Rx 0	(mSec)

Servise port

Serial to Ethernet converter E-P732-X
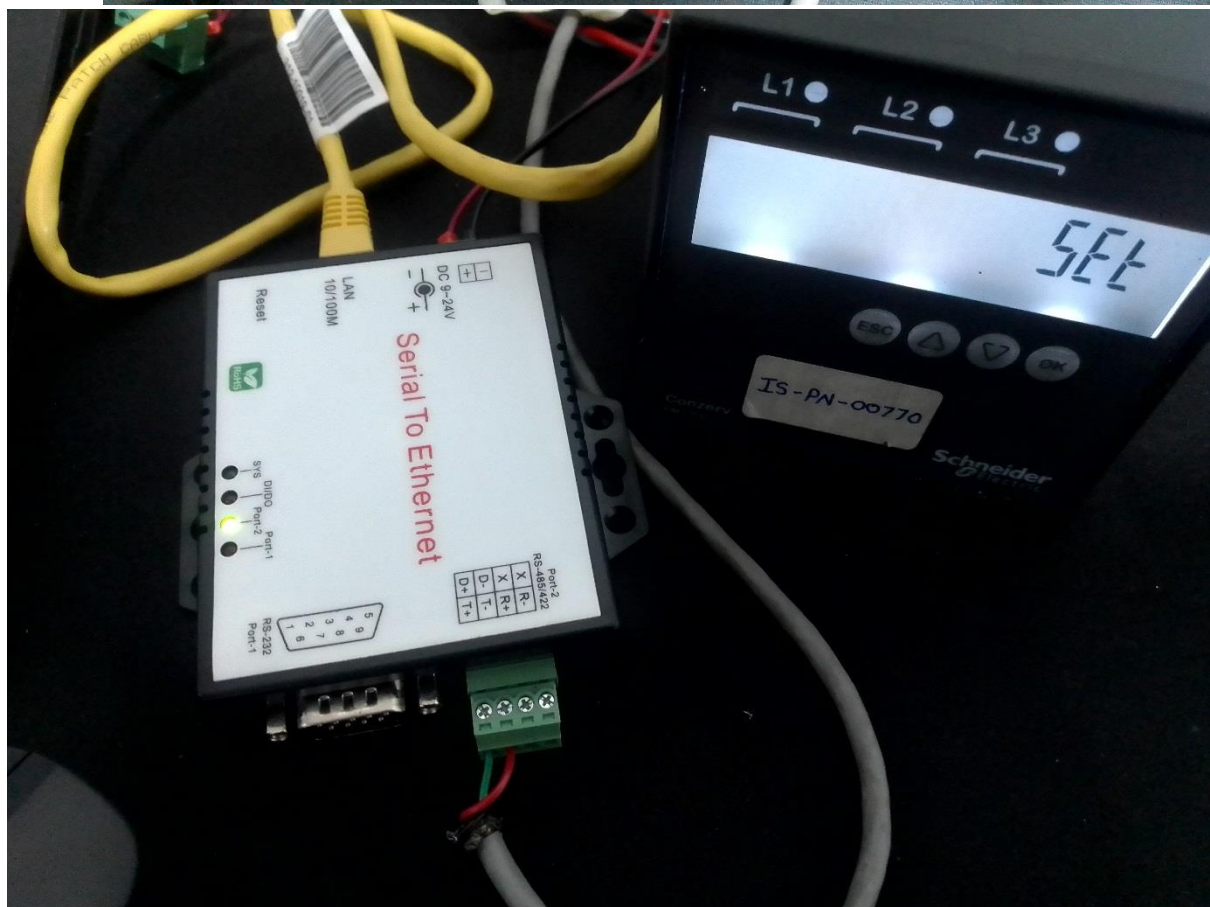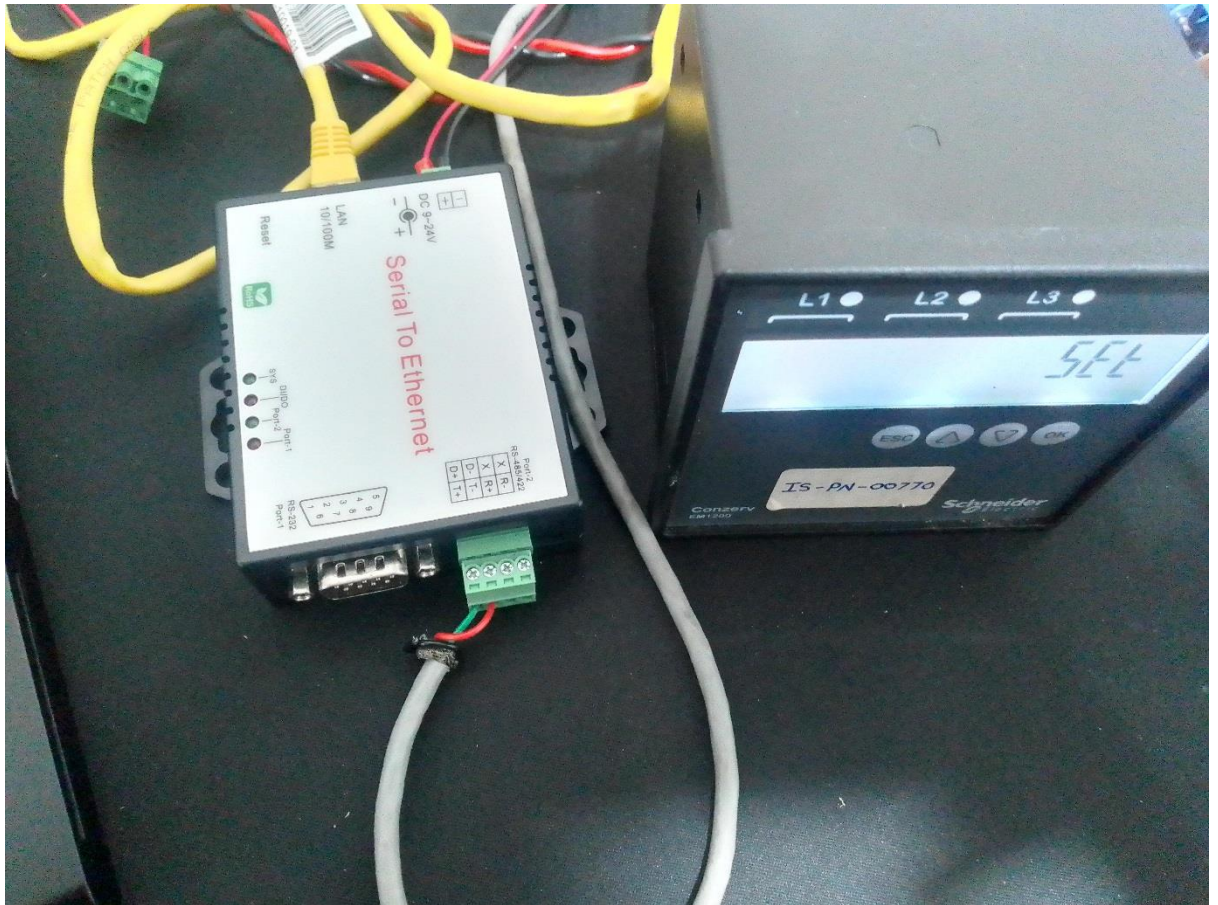

Out put shows the configuration susses.

Remark : this device more data loss

Continually hanged

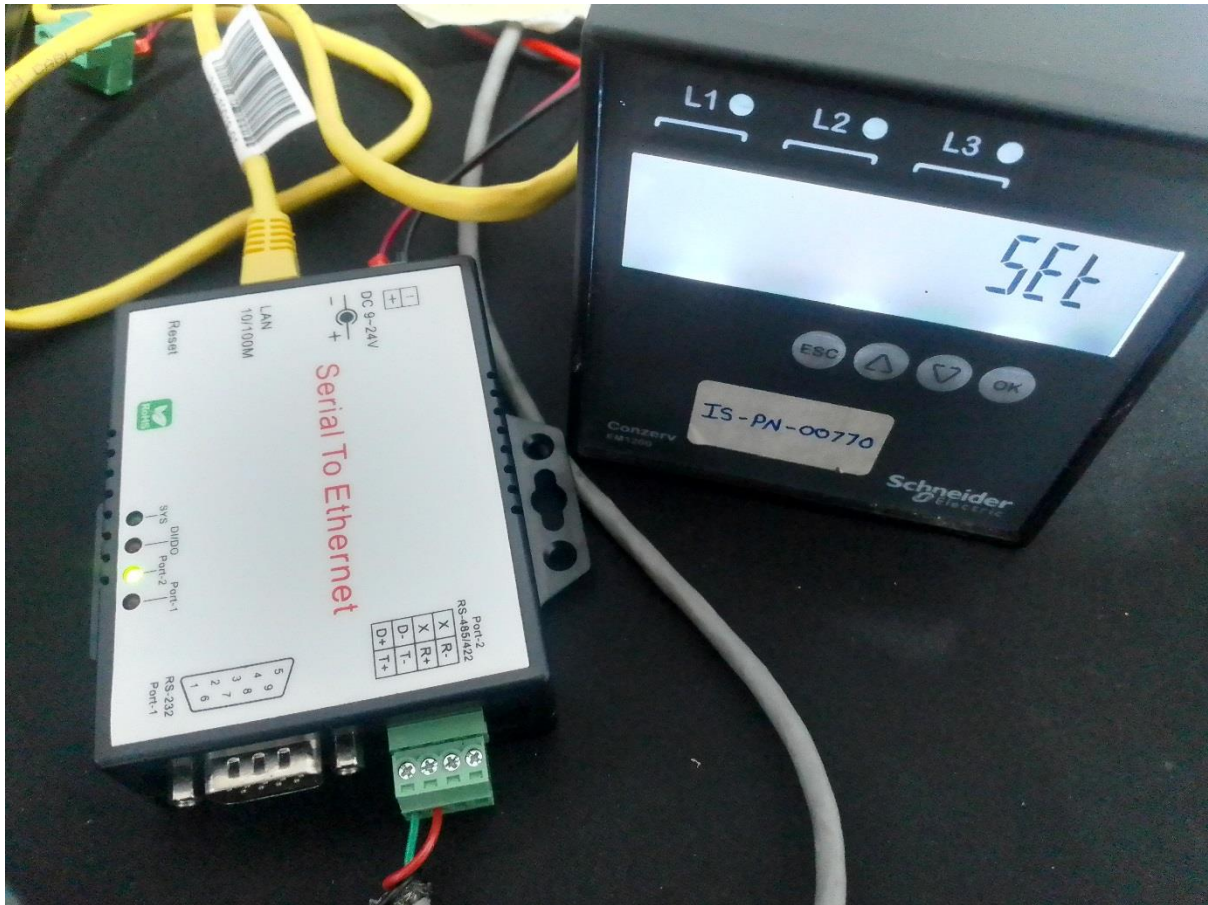Not working in stable . compare 3onedata.

Serial to Ethernet converter E-P732-X

Serial to Ethernet converter E-P732-X

Serial to Ethernet converter E-P732-X

Serial to Ethernet converter E-P732-X

WORKING TIME PICTURES.