# LV08

## Product Manual

**Jun. 2024**

**Ver 1.0**

LuckyMinerClub.com

# 1. Specification

| Product Glance | Value |
|---|---|
| Model | LV08 |
| Version | V1.0.0 |
| Crypto algorithm/coins | SHA256 |
| Typical hashrate, GH/s | 4200±10% |
| Power on @25°C, Watt | 120±10% |
| **Detailed Characteristics** | **Value** |
| **Power supply** | |
| Power supply AC input voltage range, V | 100～240V AC |
| Power supply AC input frequency range, Hz | 50/60 |
| Power supply AC input current, A | 1.5(max) |
| Adapted AC output power requirement, W | 150(max) |

LuckyMinerClub.com

| Hardware configuration | |
|---|---|
| Networking connection mode | WiFi 2.4G/Hotspot |
| Server size (Length*Width*Height, w/o package), mm | 200*128*70 |
| Server size (Length*Width*Height, with package), mm | 250*241*93 |
| Net weight, kg | 1.1 |
| Gross weight, kg | 1.5 |
| Noise, dBA @25°C | 38 |
| **Environment requirements** | |
| Operation temperature, °C | 0~30 |
| Storage temperature, °C | -20~70 |
| Operation humidity, RH | 10%~90% |
| Operation altitude, m | ≤2000 |

LuckyMinerClub.com

# 2. Conditions for using "Luckyminer LV08"

## 2.1 Power Requirements:

Ensure the device is connected to a stable power source and meets the corresponding voltage and power requirements.

## 2.2 Environmental Conditions:

It is recommended to use the device in a dry, well-ventilated environment to avoid overheating or moisture.

2.2.1 Good ventilate;

2.2.2 It is prohibited to stack multiple devices or place them close together;

2.2.3 Do not place the device in a confined space.

## 2.3 Temperature Range:

Operate within ≤30℃ to ensure device stability and performance.

## 2.4 Equipment heat dissipation:

2.4.1 Ensure smooth ventilation at the air inlet and outlet of the device.

2.4.2 Blocking the air inlet and outlet of the device is strictly prohibited.

## 2.5 Network Connection:

Ensure the device is properly connected to the network and compatible with the selected mining pool protocol.

### 2.6 Maintenance:

Regularly clean the device and pay attention to maintaining the cooling system to ensure proper operation.

### 2.7 Usage Restrictions:

2.7.1 Avoid using the device in excessively harsh environmental conditions and adhere to manufacturer's recommendations and warnings to maintain long-term stability.

2.7.2 It is prohibited to upgrade to unofficial firmware. No after-sales service will be provided when upgrading firmware under unofficial guidance.

# 3. Recommended parameters

3.1 Frequency: ≤575MHz, when the power consumption is >130W, please gradually reduce the frequency;

3.2 Core voltage: ≤1300mV, when the power consumption is >130W, please gradually reduce the voltage.

# 4. Mining Mode

| Mining mode | Mechanism description |
|---|---|
| SOLO | SOLO mining means mining cryptocurrency alone, earning full rewards upon discovering new blocks. |
| PPLNS | PPLNS mining refers to a payment model where miners' rewards are calculated based on their last N submitted valid shares. |
| P2P | P2P mining refers to mining directly within the blockchain network by connecting to other nodes, rather than using centralized mining pools. |
| PPS | PPS mining refers to a payment model where miners receive rewards based on |

| | |
|---|---|
| | the number of valid shares they submit. |

# 5. Mineable projects

| Item | Project Name | Reference mining pools | | |
|---|---|---|---|---|
| | | Pool 1 | Pool 2 | Pool 3 |
| 1 | BTC | pool.vkbit.com:3333 | public-pool.io:21496 | btc.viabtc.io:3333 |
| 2 | BCH | p2p-spb.xyz:9338 | Solo-bch.2miners.com:9090 | www.viabtc.com:3333 |
| 3 | BSV | bsv.gorillapool.io:3333 | europe.mining-dutch.nl:4014 | |
| 4 | DGB | pool4ever.com:5109 | pool.dgb256.online:8080 | p2p-spb.xyz:5027 |
| 5 | XEC | hashpool.live:10043 | xec.luckymonster.pro:9113 | mining.viabtc.io:3014 |
| 6 | RBL | mining4people.com:4181 | afinepool.xyz:4931 | pool4ever.com:5014 |
| 7 | BTCP | na.mining4people.com:3452 | 82.137.50.129:3420 | btcp.mr-miner.org:5448 |
| 8 | BIT | 38.242.200.177:4611 | 103.230.158.177:50114 | 54.39.49.96:3442 |
| 9 | AUR | p2p-spb.xyz:12349 | pool4ever.com:5115 | valhala.is:3730 |
| 10 | WCN | pool4ever.com:5112 | na.mining4people.com:3334 | 103.249.70.25:4369 |
| 11 | PPC | pool4ever.com:5010 | solo.1pool.org:4004 | kriptokyng.com:3312 |
| 12 | RVB | connect.reversedbitcoin.org:11300 | zeusminingpool.com:5110 | na.mining4people.com:3415 |
| 13 | ACG | pool4ever.com:5140 | mining-pool.zapto.org:3450 | |
| 14 | LCC | sha256.na.mine.zergpool.com:3333 | us-stratum.coinminerz.com:3310 | p2p-spb.xyz:5555 |
| 15 | GLT | au.merged.stratum.cminors-pool.com:58900 | pool.cryptopowered.club:1064 | |
| 16 | X1C | Mining4people:3355 | poolkh.com:4468 | |

# Notes:

※ LV08 is applicable to all SHA256 algorithm projects;

※ For more mining pools, please refer to https://miningpoolstats.stream/bitcoin;

※ Due to regional and mining pool access difficulties, LV08 cannot access all mining pools.

# 6.Operating instructions

## 6.1 Product list

6.1.1 LV08 miner * 1

6.1.2 AC line *1

## 6.2 Power on

6.2.1 Connect the AC cable to the adapter Input;

6.2.2 Connect adapter output to miner DC port;

6.2.3 After power on, the adapter indicator light is green, the miner fan is running, and the miner screen displays "connect to ssid: Lucky_ ****".

## 6.3 Connect to network

6.3.1 Search for the miner hotspot "Lucky_ ****" through WiFi on your phone or computer;

6.3.2 Select the "Lucky_ ****" hotspot (mobile or computer);

6.3.3 Wait for 5-10 seconds, automatically redirect to the mining configuration interface;

## 6.4 Mining configuration

6.4.1 We can enter the settings interface in 6.3.3 or by entering the IP in the browser;

6.4.2 Explanation of Setting Interface;



LuckyMinerClub.com

| No. | Setting items | Explanation |
|---|---|---|
| 1 | WiFi SSID | WiFi name (special characters are strictly prohibited) |
| 2 | WiFi Password | WiFi password (special characters are strictly prohibited) |
| 3 | Stratum URL | Mining pool address or IP address |
| 4 | Stratum Port | Mining pool port number (multiple ports in the same mining pool correspond to different difficulties) |
| 5 | Stratum User | Registered username or main network wallet address for the mining pool |
| 6 | Frequency | ASIC IC operating Frequency(500-575MHz) |
| 7 | Core Voltage | ASIC IC core voltage(1200-1300mV) |

6.4.3 Settings completed, click the "Save" button;

6.4.4 After saving the settings, click the "Restart" button.

## 6.5 View running status

6.5.1 Restart completed, wait for 30-60 seconds, the Home page will display the real-time running status of the miner.Contains information such as "Overview", "Power", "Pool information", "Results", etc...

6.5.2 The miner screen will synchronously scroll to display the above information.

## 6.6 View the status of pool

6.6.1 Log in to the mining pool website or app used by Miner;

6.6.2 Check online device status through username or wallet address.

# 6. FAQ for Luckyminer LV08

| No. | Fault Descripption | Fault pictures | Possible causes | Solution | Solving diagram |
|---|---|---|---|---|---|
| 1 | Miner is powered on but can not connect to WiFi | 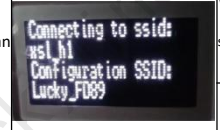 | Using non 2.4G WiFi | Check WiFi type, must use 2.4G WiFi (Router/Hotspot) |  |
| | | | WiFi name or password has special characters | WiFi name and password must be in English/numbers, or a combination of English and numbers. | 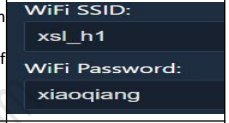 |
| | | | The control IC is not started | When powered on, press the reset button to reset the main control chip (1-3 times). | |
| 2 | Miner is powered on, the screen and fan do not work. | | The power cord may be loose. | Measure the power cord for poor contact, if it doesn't work after plugging and unplugging, please replace the power cord. | |

| | | | | | |
|---|---|---|---|---|---|
| 3 | Miner is powered on, the screen does not light up and the fan works. | | The control IC is not started | When powered on, press the reset button to reset the main control chip (1-3 times). | |
| 4 | WiFi, Power consumption is normal, hash value is 0. | | Mining pool address | Check the mining pool address carefully and query mining pool related information thttps://miningpoolstats.stream/bitcoin | https://miningpoolstats.stream/bitcoin |
| | | | Port number | There may be multiple port numbers in the same mining pool. Generally, different port numbers correspond to the difficulty of access. Please choose the appropriate port number. | |
| | | 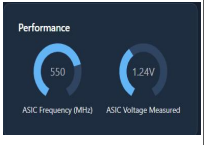 | Mining pool difficulty | All mining pools have a minimum access difficulty. Please ensure that the device computing power is below the mining pool access difficulty. Experience value: 500G can access a mining pool with difficulty <1000 (port number) |  |

| | | | | | |
|---|---|---|---|---|---|
| | | | Wallet address | You must use the mainnet wallet address of the currency being mined. For example: the BTC mainnet address generally starts with 1/3/bc1. | |
| | | | Username | Some mining pools require a registered account to use. For this kind of mining pool, you need to fill in the miner name of the mining pool during configuration. | |
| 5 | Miner runs with low power consumption, <20w | | The control IC is not started | When powered on, press the reset button to reset the main control chip (1-3 times). | |
| 6 | Successfully connected to WiFi, miner restarted repeatedly. | | Mining pool resolution failed | Change mining pool. | |
| 7 | Miner keeps restarting and the Hashrate is unstable. | 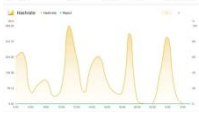 | WiFi congestion and instability. | Change to a stable WiFi or hotspot. | |
| | | | Mining pools are regulated. | Change to a locally allowed mining pool or a well-known mining pool. | |
| | | | High power consumption, high temperature, high temperature protection. | The environment temperature is <30℃, and the equipment should be placed in a well-ventilated place. | |

LuckyMinerClub.com

LuckyMinerClub.com