

Luckyminer LV02

Device Configuration and Operation Instructions

1. Locate the USB port to power the device. After connecting the power supply, the screen will display...




2. The device will automatically turn on after 3-5 seconds, as shown in the image below.




3. Connecting to Wi-Fi

Search for "Luckyminer AP" on your mobile phone's Wi-Fi settings (or your computer's Wi-Fi settings), select the corresponding Wi-Fi network, and enter the device password:

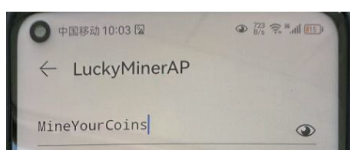


4. The screen will automatically switch to the image below; click "Configure Wi-Fi".

5. Enter the interface shown in the image below and wait for the Wi-Fi list to appear (within 30 seconds) to configure the solo mode.

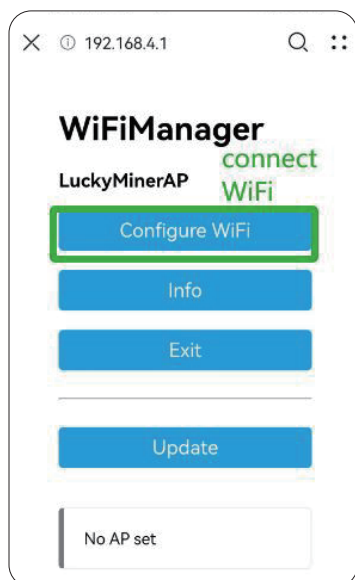

4

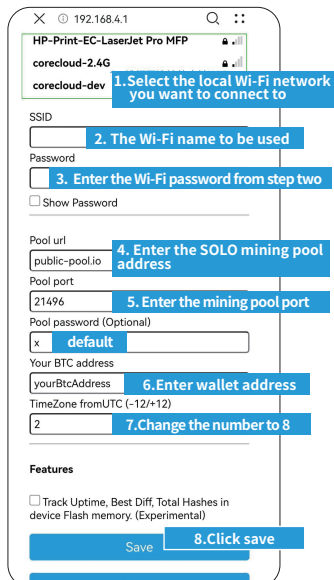


5

6. Configuration Information: The system will restart automatically after completion. The interface will look like the image below after successful configuration.



7. View real-time computing power

Open <https://web.public-pool.io/#/>, enter your wallet address, and click "My Workers" to view your mining status.

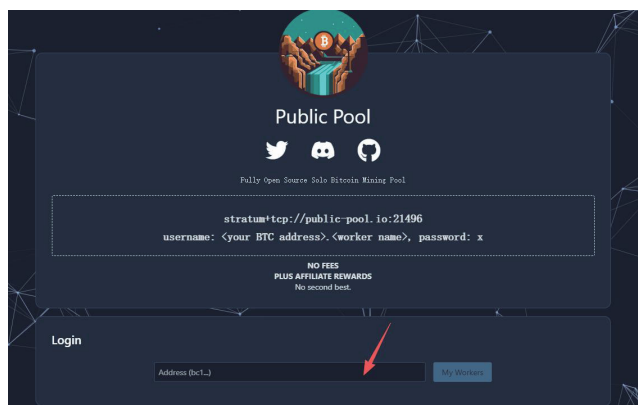

8. Device button instructions



① Short press once to switch screens; press and hold the button for 6 seconds to reset.

② Short press once to turn the screen off or on.

③ Restart the device.

9. Attachment: Mining Pool Instructions

No.	Pool URL	Port	Web	Direct connection
1	public-pool.io	21496	https://web.public-pool.io	Yes
2	pool.nerdmniners.org	3333	https://nerdmniners.org	Yes
3	pool.tazmining.ch	33333	https://tazmining.ch/#btc2	No
4	solo.ckpool.org	3333	https://solo.ckpool.org	No
5	btc.zsolo.bid	6057	https://zsolo.bid/en/btc-solo-mining-pool	No
6	eu.stratum.slushpool.com	3333	https://brains.com/pool	No
7	btc.luckymonster.pro	7112	https://luckmonster.pro	No
8	btc.millpools.cc	4567	https://millpool.cc/btc-pool	No
9	stratum.solomining.io	7777	https://btc.molepool.com	No
10	aminingpool.com	3004	https://aminingpool.com/#btc	No
11	pool.mynewmining.com	3333	https://pool.mynewmining.com/#btc2	No