
## Base


Normal typing. Colored keys lead to the other layers (colors match the status light).

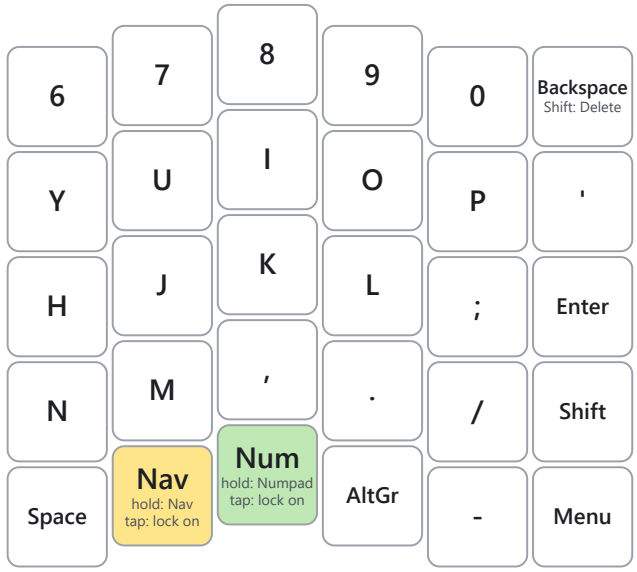



## Layer Lock


TAP the Thumb key, then press ONE key below. It does that one thing and Layer Lock ends. Gray keys just type normally.


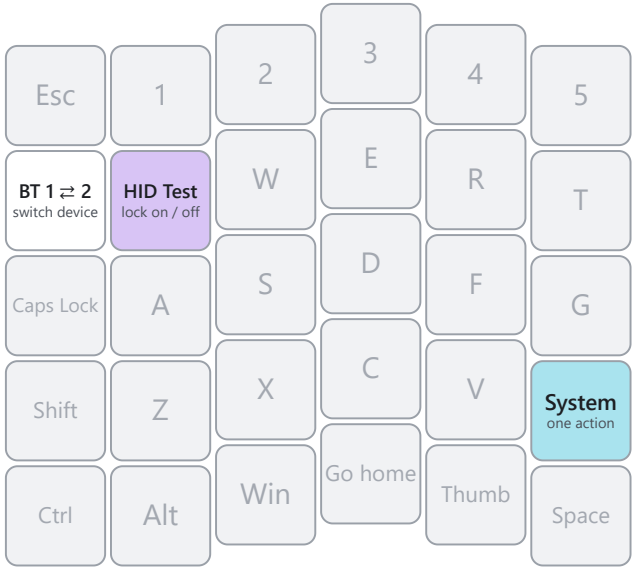
## Numpad

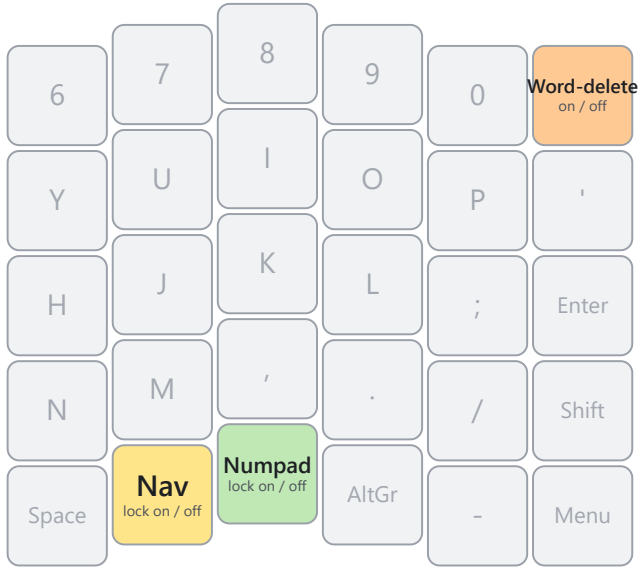HOLD Thumb or Num. To keep it on: tap Num (or Layer Lock, then Num). Go home turns it off.




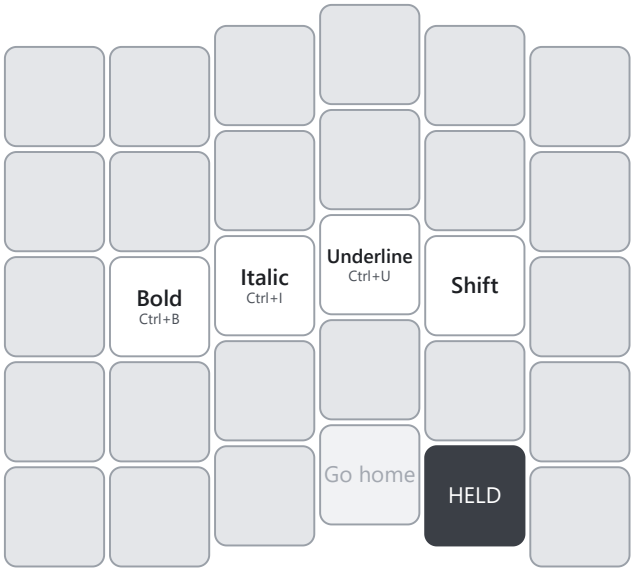


`
/
*
-
,
Backspace
Shift: Delete
|
7
8
9
+
\
Tab
4
5
6
=
Enter
1
2
3
[
]
0
0
HELD
.
{
}

## Nav / Media


HOLD Nav. To keep it on: tap Nav (or Layer Lock, then Nav). Go home turns it off.

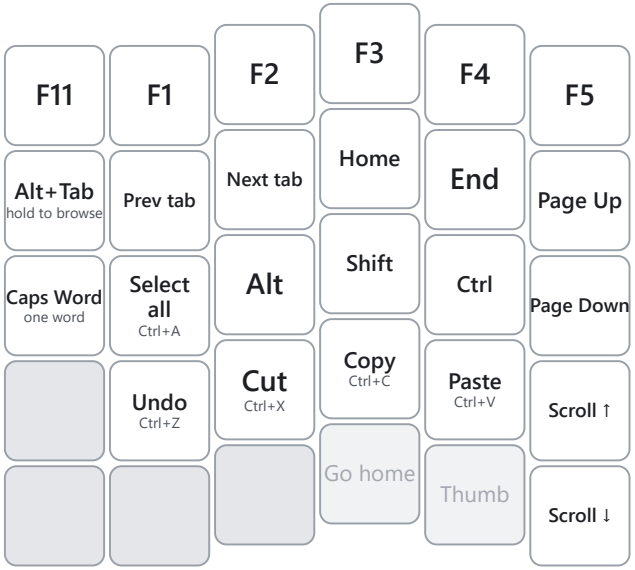

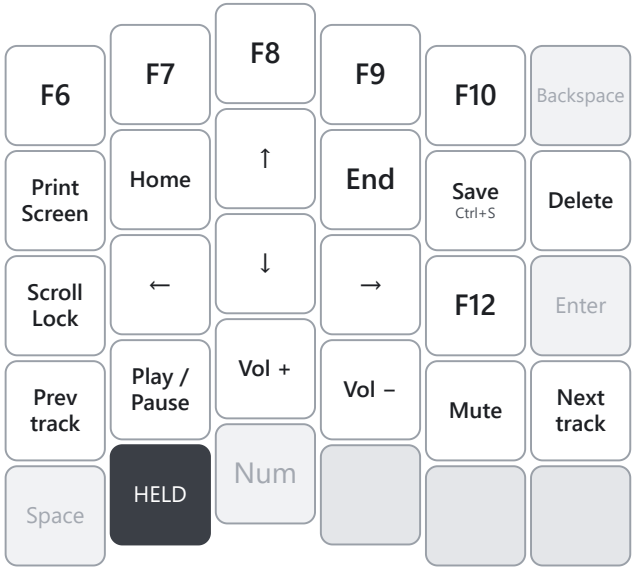
# System

Layer Lock, then B. Do ONE thing, then it closes by itself (or after 5 s). Blank keys do nothing.

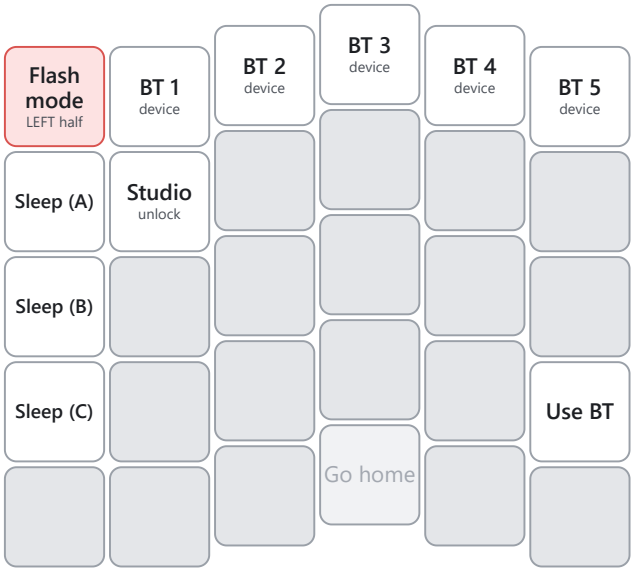


## Key colors

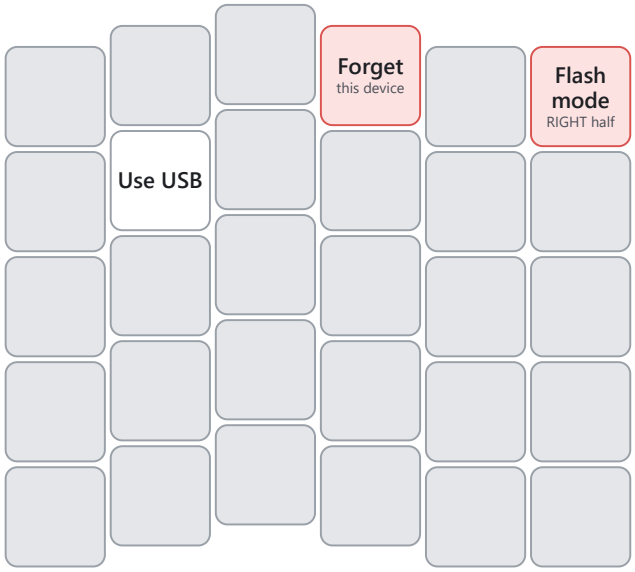Layer Lock | Numpad | Nav | System | Word-delete

gray = types like Base | blank = off | red = careful

The status light uses the same colors (white = Caps Lock).

## Word-delete mode

Turn on/off: tap **Thumb**, then **Backspace**.
While on: Backspace deletes the previous word, Shift+Backspace the next word, and Nav's Delete deletes the next word. Numpad's Backspace still deletes one character. Starts off after waking or power-on.

## Flashing new firmware

Plug that half in by USB. Layer Lock, B, then the **Flash mode** key for that half (Esc spot = left, Backspace spot = right). A drive appears: copy the .uf2 file onto it.

## Bluetooth

Quick switch between devices 1 and 2: tap **Thumb**, then **Tab**. Devices 1-5 and "Forget": System layer. The status light blinks blue: 1 blink = device 1, 2 = device 2.