OPTIMUS SERIES

ULTRA AREA LUMINARE

INSTALLATION GUIDE

STRAIGHT ARM BRACKET ADJUSTABLE - R

SAVE THESE INSTRUCTIONS



BEFORE YOU BEGIN

Read and follow Safety instructions


⚠ WARNING

RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

- This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electric Code) and all local codes.
- Turn off electrical power before inspection, installation or removal.
- Use only UL (or other NTRL) approved wire for input/output connections. Minimum size 18 AWG or 14 AWG for continuous runs.
- Make sure LEDs and drivers are cool to touch when performing maintenance. Make sure the supply voltage is the same as the rated voltage of the luminaire.
- Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.
- Keep tightly closed when in operation





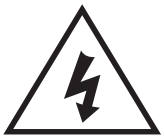

PREPARE ELECTRICAL WIRING

Electrical Requirements

The LED driver must be supplied with the voltage specified on the product label and connected to an individual, properly grounded branch circuit protected by a 20 Ampere circuit breaker. Use min. 75°C supply.

Grounding instructions

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.

OPTIMUS SERIES

OPTIMUS SERIES

ULTRA AREA LUMINARE


BEFORE STARTING

- Ensure that the supply power is shut off.
- Unpack the fixture and ensure that there are no damaged or missing parts.
- NOTE: Fixture must sealed where it contacts the mounting surface with a silicone sealant.

TOOL REQUIRED:

Hexagon wrench
Cross screwdriver


STRAIGHT ARM BRACKET ADJUSTABLE INSTALLATION METHOD

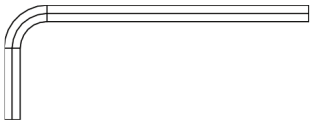


14MM INNER
OPEN WRENCH




6MM INNER
HEXAGON WRENCH



CROSS SCREWDRIVER

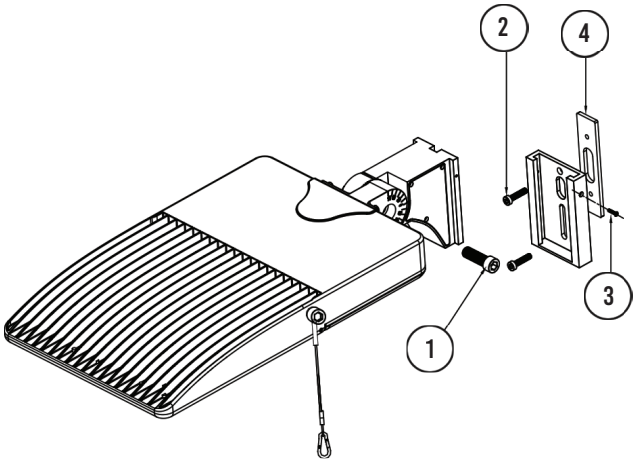



M16*50MM 1 PCS




M8*35MM 2 PCS



M4*12MM 2 PCS

4

E STAMPING SHEETS 1PCS

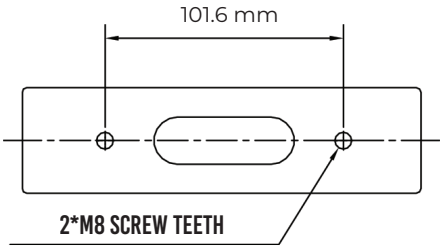


NOTE: Installation tool is not included with product

OPTIMUS SERIES


ULTRA AREA LUMINARE

A

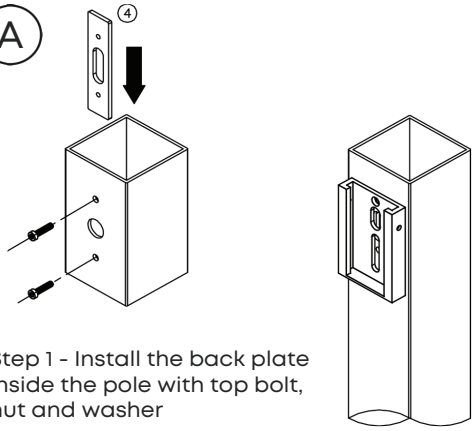


Step 1 - Install the back plate inside the pole with top bolt, nut and washer

B

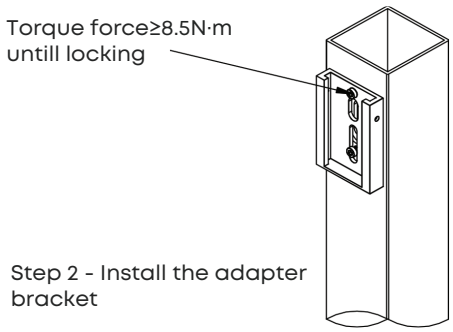


Step 2 - Install the adapter bracket

C

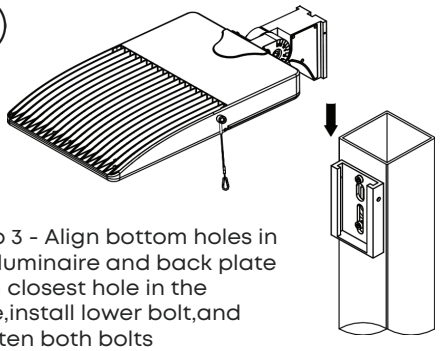


Step 3 - Align bottom holes in the luminaire and back plate with closest hole in the pole,install lower bolt,and tighten both bolts

D

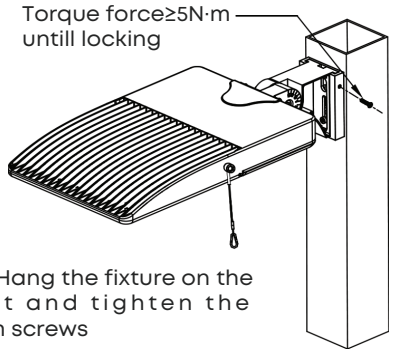

Step 4 - Hang the fixture on the bracket and tighten the M4*12mm screws


E

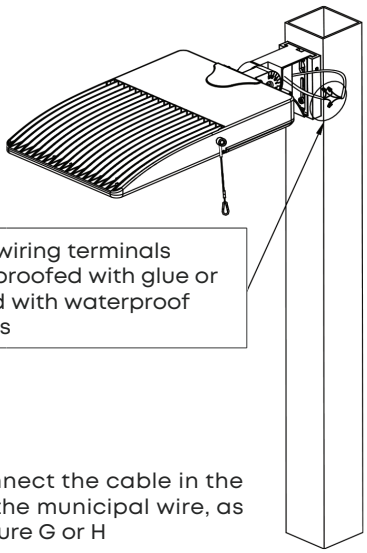

Note: The wiring terminals are waterproofed with glue or connected with waterproof connectors

Step 5 - Connect the cable in the B holder to the municipal wire, as shown in Figure G or H

F

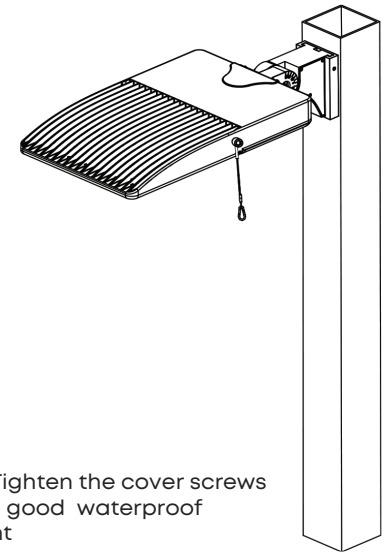

Step 6 - Tighten the cover screws and do a good waterproof treatment

OPTIMUS SERIES

ULTRA AREA LUMINARE

