OPTIMUS SERIES
ULTRA AREA LUMINARE

INSTALLATION GUIDE

YOKE - U

SAVE THESE INSTRUCTIONS



BEFORE YOU BEGIN
Read and follow Safety instructions

⚠ WARNING

RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

- This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electric Code) and all local codes.
- Turn off electrical power before inspection, installation or removal.
- Use only UL (or other NTRL) approved wire for input/output connections. Minimum size 18 AWG or 14 AWG for continuous runs.
- Make sure LEDs and drivers are cool to touch when performing maintenance. Make sure the supply voltage is the same as the rated voltage of the luminaire.
- Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.
- Keep tightly closed when in operation



PREPARE ELECTRICAL WIRING

Electrical Requirements

The LED driver must be supplied with the voltage specified on the product label and connected to an individual, properly grounded branch circuit protected by a 20 Ampere circuit breaker. Use min. 75°C supply.

Grounding instructions

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.

OPTIMUS SERIES

ULTRA AREA LUMINARE


BEFORE STARTING

- Ensure that the supply power is shut off.
- Unpack the fixture and ensure that there are no damaged or missing parts.
- NOTE: Fixture must sealed where it contacts the mounting surface with a silicone sealant.


TOOL REQUIRED:


Open wrench

YOKE BRACKET INSTALLATION METHOD



13MM INNER
OPEN WRENCH

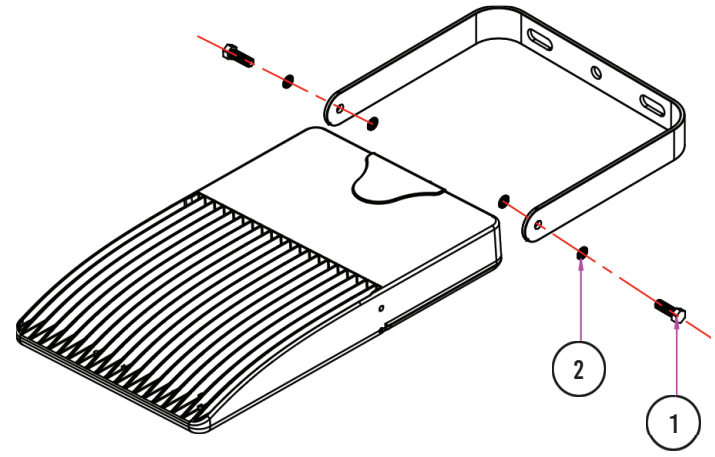



M8*25MM 2 PCS




M8MM 2 PCS

NOTE: Installation tool is not included with product

OPTIMUS SERIES


ULTRA AREA LUMINARE

A

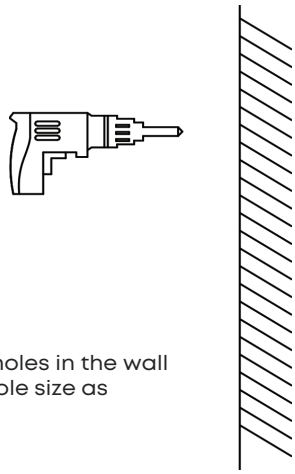


Step 1 - Play two holes in the wall or ceiling, open hole size as shown in Figure E.

B

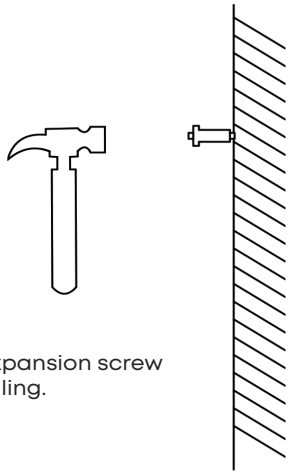


Step 2-Push the expansion screw into the wall or ceiling.

C

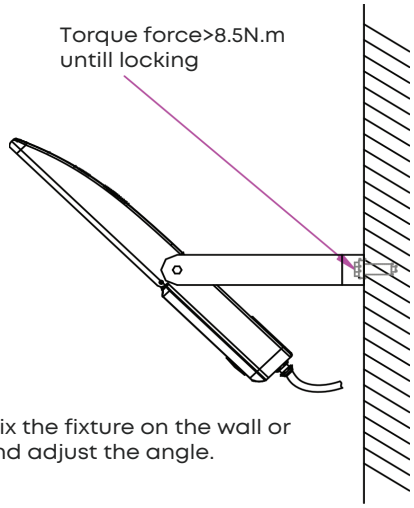


Step 3 - Fix the fixture on the wall or ceiling and adjust the angle.

D

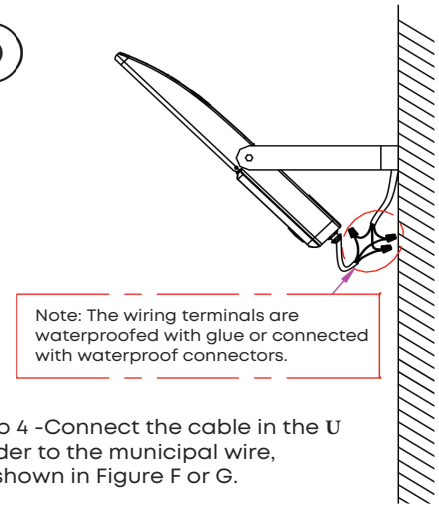

Step 4 -Connect the cable in the U holder to the municipal wire, as shown in Figure F or G.


E

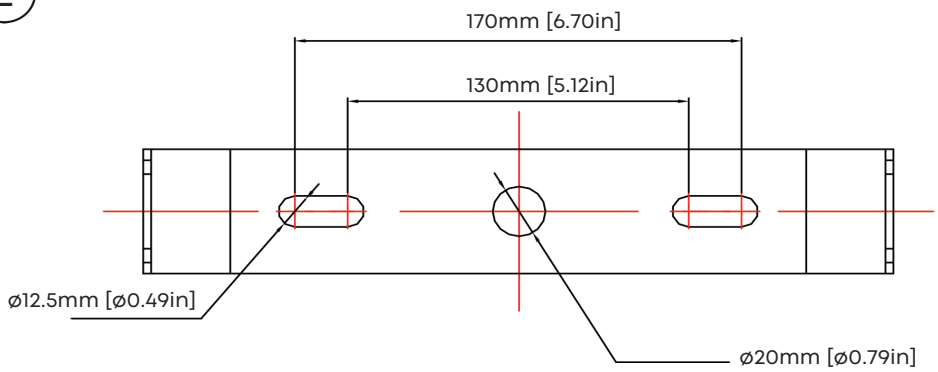

OPTIMUS SERIES

ULTRA AREA LUMINARE

F

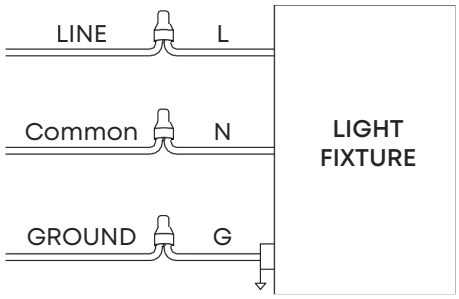

G **0-10V Dim Wiring**

