LED CONNECTION

INSTALLATION GUIDE

FLOODLIGHT

Selectable flood light · LC-FL-WS-3CCT

FL-Y YOKE MOUNT

FOR LC-FL-WS-3CCT-Y (YOKE)

LC FL WS 3CCT **Y**

TOOLS

Electric drill
Hammer
Wrench
Hex (Allen) driver
Cross (Phillips) screwdriver

SET ON SITE

Wattage 40 / 60 / 80W
CCT 3000 / 4000 / 5000K

IN THE BOX

Floodlight with yoke bracket
Expansion bolts, flat washers, spring washers and nuts

BEFORE YOU BEGIN

Read and follow the safety instructions on the next page. Save these instructions.

WARNING · RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

Only persons qualified for electrical work should carry out the electrical work.

Turn off the power supply before installation, and cut it off at once in any abnormal situation.

Be sure to ground the fixture.

The fixture runs on 120-277V only. Never connect it directly to a 480V circuit.

Do not wipe the fixture with water or caustic solution, and avoid high pressure.

Be careful when handling and storing the fixture.

ELECTRICAL REQUIREMENTS

Supply the fixture with the voltage on its label (120-277V AC). On a 480V circuit it must be fed through the 480V-to-277V step-down transformer: see the last section of this guide.

GROUNDING


Connect the green wire to the ground of the supply, in accordance with the NEC and local codes.

BEFORE STARTING


- Ensure that the supply power is shut off.
- Unpack the fixture and check that nothing is damaged or missing.
- Check the part number on the label: -Y is the yoke bracket, -SF the slip-fitter.

INSTALLATION


1 Before mounting, set the wattage and CCT. Lay the fixture face down and unscrew the selector cover on the back with a cross (Phillips) screwdriver.

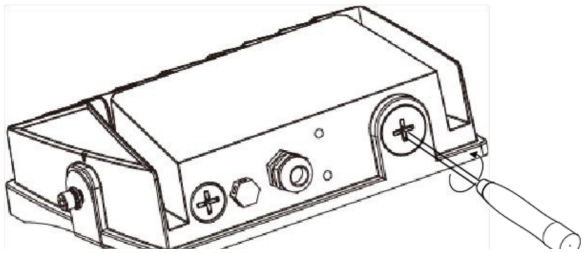


2 Take out the cover and put it aside.

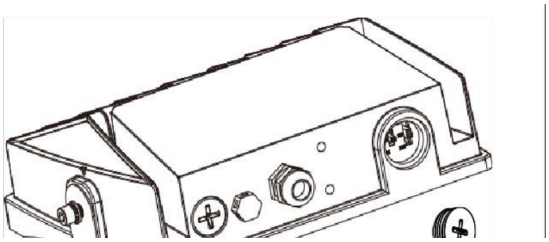

3 Turn the POWER and CCT selectors to the setting the design calls for.

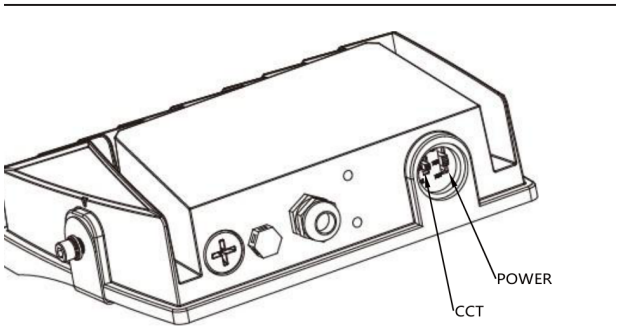


4 Screw the cover back into the fixture.

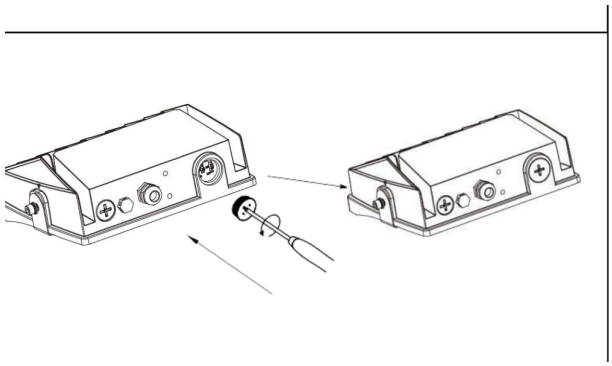


INSTALLATION, CONTINUED


5 Mark the position of the fixing holes with the yoke bracket, then drill the holes.

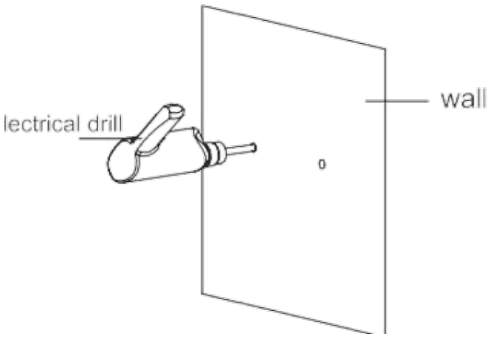


6 Drive the expansion bolts into the drilled holes, thread outside.

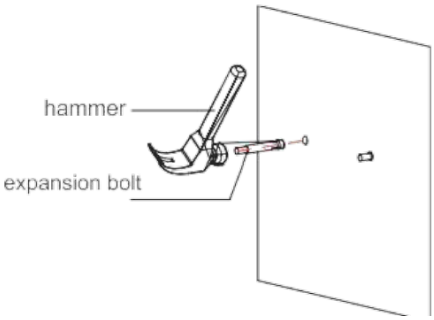

7 Fit the bracket tightly against the surface over the bolt threads.

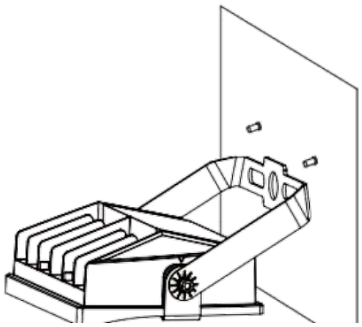


8 Fasten each nut clockwise with its flat washer and spring washer, using a wrench.

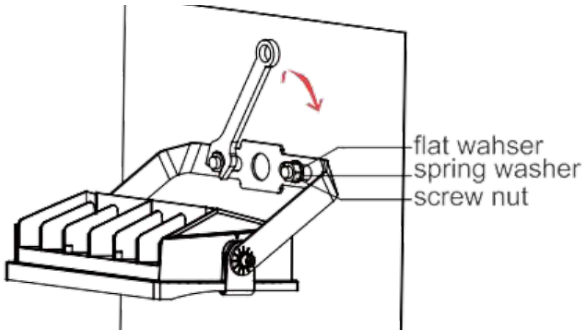


INSTALLATION, CONTINUED


9 Rotate the light to the angle the design calls for and fasten the screws.

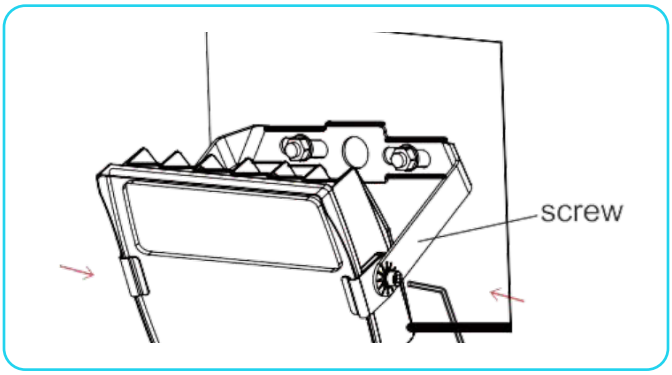

10 Fasten the screws on both sides with the hex (Allen) driver.

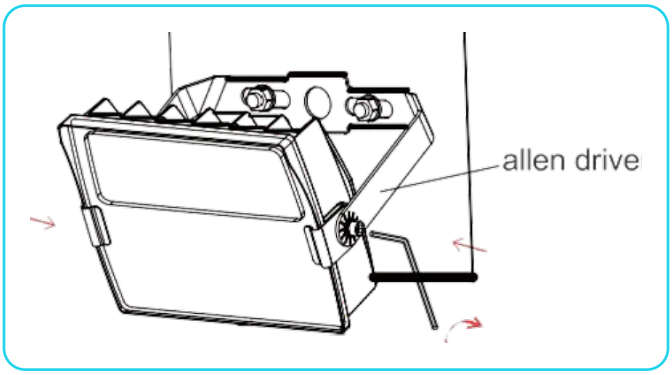

11 Connect the wires: black to line (L), white to neutral (N), green to ground. For 0-10V dimming, purple to DIM+ and pink to DIM-. Cap the dimming wires if they are not used.

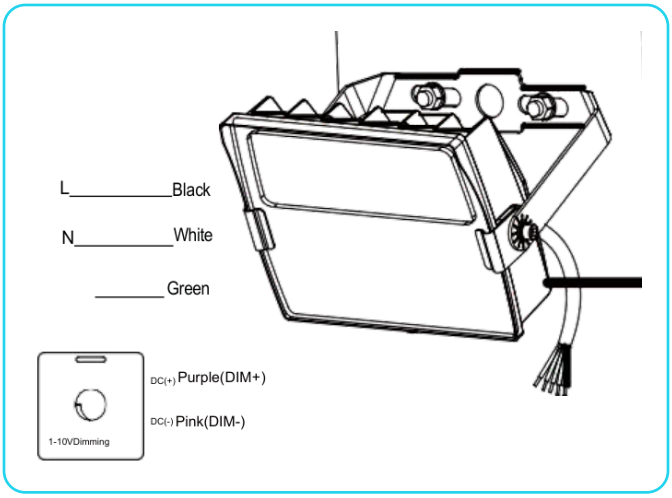

480V CIRCUIT: THE STEP-DOWN TRANSFORMER

This flood runs on 120-277V. Where the circuit is 480V, a 480V-to-277V step-down transformer feeds it. On Kroger 345 it ships with the flood and sits in the flood's junction box.

- Mount the transformer in the junction box before connecting the flood.
- Connect the transformer's 480V input to the supply circuit and its 277V output to the flood's black (L) and white (N) wires; green to ground.
- Use the wiring diagram printed on the transformer's own label for its lead colours and taps. They are not repeated here because they differ between transformer models.
- Check the label's input voltage against the circuit before switching on.

> **NEVER**
> Never connect the flood straight to 480V. It is rated 120-277V and will be damaged.

RECORD THE INSTALL

- In the LC Installer App, open the fixture's pin, take a photo of the installed fixture (and its label if you can), and SAVE AS INSTALLED. Every head is its own pin.
- Anything not as designed (mounting, height, aim, setting): write it in the pin's note.

QUESTIONS ON SITE

LED CONNECTION
702.847.7680
info@ledconnection.com · www.ledconnection.com