LED CONNECTION

INSTALLATION GUIDE

# OPTIMUS

Ultra area luminaire · LC-SLOT

## R ADJUSTABLE STRAIGHT ARM BRACKET

FOR EVERY OPTIMUS PART NUMBER WITH BRACKET R

LC | SLOT | wattW | volt | L5 | sensor | cct | cri | optic | **R** | color

### TOOLS

14 mm open wrench
6 mm hexagon wrench
Cross (Phillips) screwdriver

### TORQUE

at least 5 N·m, until locking
at least 8.5 N·m, until locking

### IN THE BOX

4 kinds of parts, 6 pieces
Numbered list and drawing on page 3

### BEFORE YOU BEGIN

Read and follow the safety instructions on the next page. Save these instructions.

**WARNING · RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK**

This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electrical Code) and all local codes.

Turn off electrical power before inspection, installation or removal.

Use only UL (or other NRTL) approved wire for input/output connections. Minimum size 18 AWG, or 14 AWG for continuous runs.

Make sure LEDs and drivers are cool to touch when performing maintenance.

Make sure the supply voltage is the same as the rated voltage of the luminaire.

Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.

Keep tightly closed when in operation.

## ELECTRICAL REQUIREMENTS

The LED driver must be supplied with the voltage specified on the product label and connected to an individual, properly grounded branch circuit protected by a 20 Ampere circuit breaker. Use min. 75°C supply.

## GROUNDING

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.

## BEFORE STARTING

- Ensure that the supply power is shut off.
- Unpack the fixture and ensure that there are no damaged or missing parts.
- The fixture must be sealed with a silicone sealant where it contacts the mounting surface.

## TOOLS

14 mm open wrench | 6 mm hexagon wrench | Cross (Phillips) screwdriver

Installation tools are not included with the product.

## IN THE BOX


| | | | | | |
|---|---|---|---|---|---|
| 1 | M16×50 mm screw | × 1 | 3 | M4×12 mm screw | × 2 |
| 2 | M8×35 mm screw | × 2 | 4 | E stamping sheet | × 1 |




14MM INNER
OPEN WRENCH




6MM INNER
HEXAGON WRENCH



CROSS SCREWDRIVER

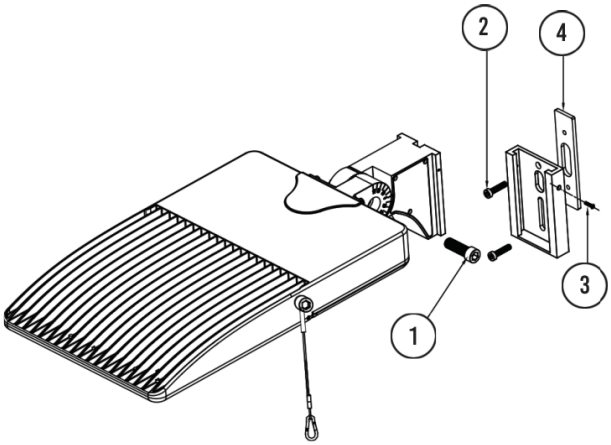


M16*50MM 1 PCS





M8*35MM 2 PCS




M4*12MM 2 PCS





E STAMPING SHEETS 1PCS

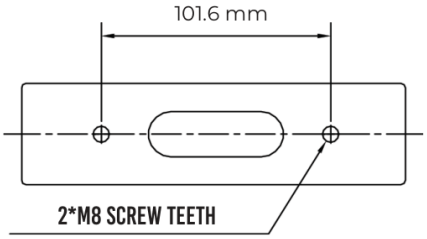


NOTE: Installation tool is not included with product


## INSTALLATION

**1** Install the back plate inside the pole with the top bolt, nut and washer.

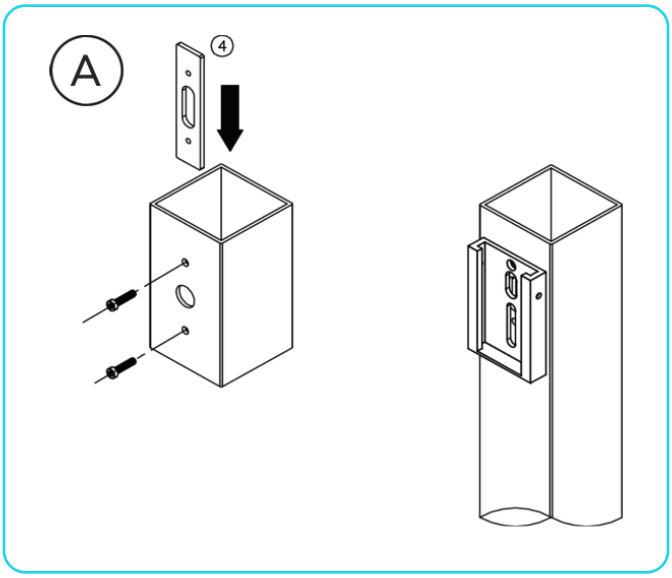



**2** Install the adapter bracket.

**TORQUE at least 8.5 N·m, until locking**

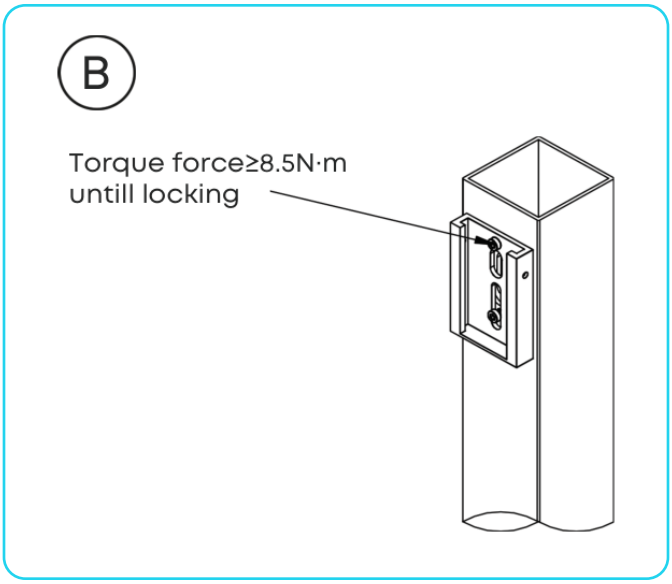



**3** Align the bottom holes in the luminaire and back plate with the closest hole in the pole, install the lower bolt, and tighten both bolts.

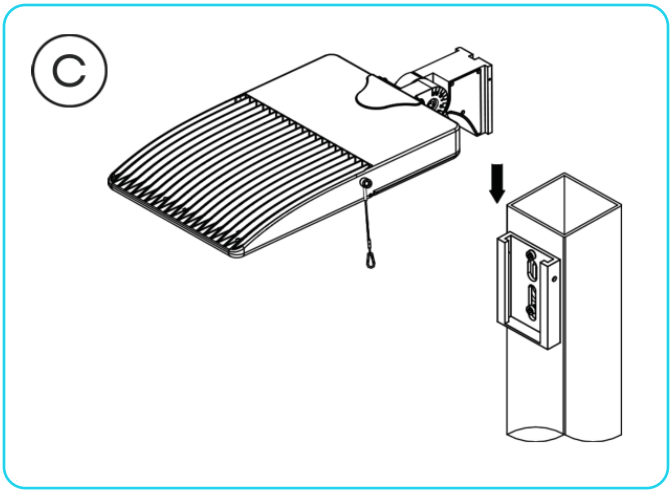


**4** Hang the fixture on the bracket and tighten the M4×12 mm screws.


**TORQUE at least 5 N·m, until locking**

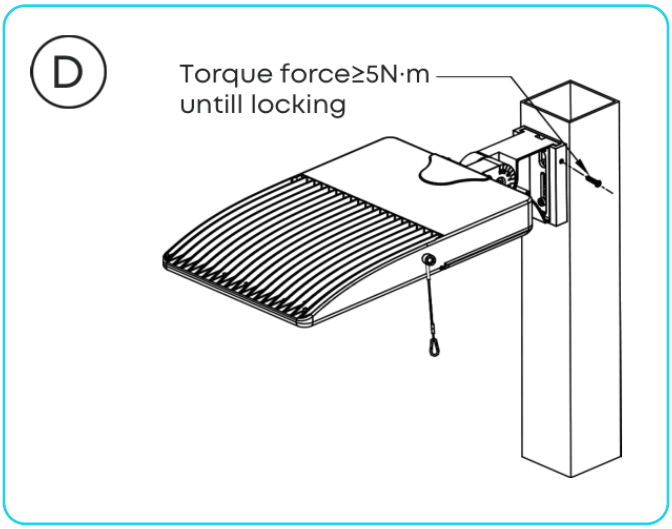

## INSTALLATION, CONTINUED


**5** Connect the cable in the bracket holder to the municipal (supply) wire, as shown in the wiring diagram.

E

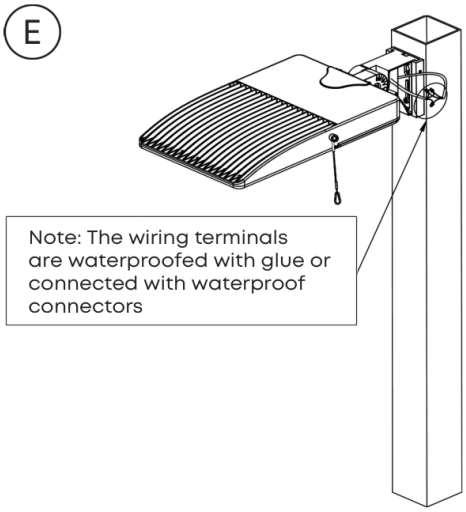


**6** Tighten the cover screws and make a good waterproof seal.

F

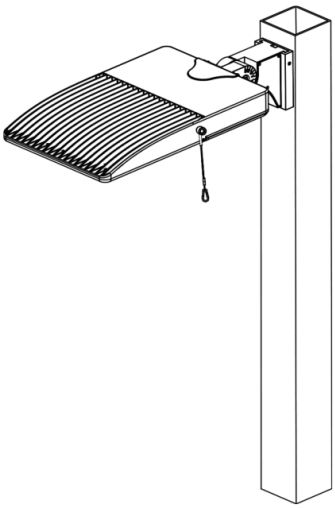


## WIRING

Connect the cable in the bracket holder to the municipal (supply) wire, as shown in the wiring diagram: standard wiring, or 0-10V dim wiring.


> **NOTE**
> The wiring terminals are waterproofed with glue or connected with waterproof connectors.

### STANDARD WIRING

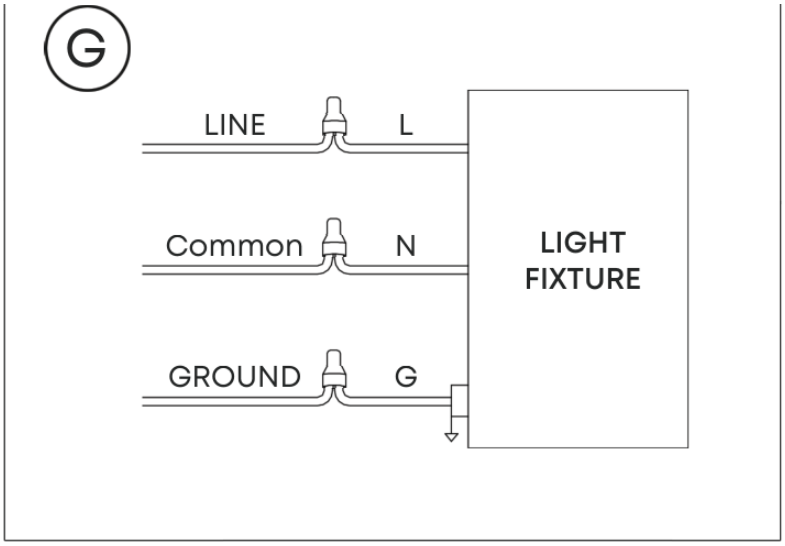

## WIRING, CONTINUED

### 0-10V DIM WIRING

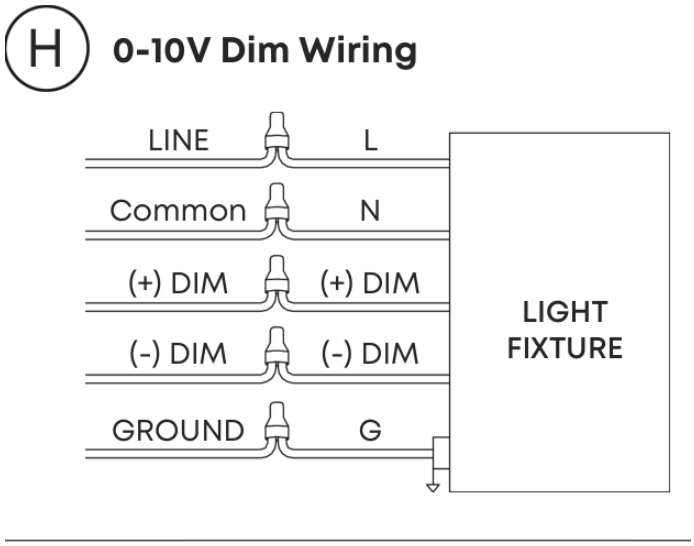


## RECORD THE INSTALL

- In the LC Installer App, open the fixture's pin, take a photo of the installed fixture (and its label if you can), and SAVE AS INSTALLED. Every head is its own pin.
- Anything not as designed (bracket, height, aim): write it in the pin's note.

## QUESTIONS ON SITE

LED CONNECTION
702.847.7680
info@ledconnection.com · www.ledconnection.com