LED CONNECTION

INSTALLATION GUIDE

DOWNLIGHT

Universal downlight, 8 in · LC-UDL-8-A

UDL RECESSED + GOOF RING

FOR LC-UDL-8-A, WITH GOOF RING LC-UDL-8-GR

LC UDL **8** A

TOOLS

None to mount: spring clips

Wire connectors for the supply

SET ON SITE

Wattage 12 / 16 / 22W

CCT 3000 / 3500 / 4000K

YOU NEED

Downlight with its junction box on a metal-clad whip

Goof ring LC-UDL-8-GR where the old opening is larger

BEFORE YOU BEGIN

Read and follow the safety instructions on the next page. Save these instructions.

WARNING · RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

Installation must be done by a qualified electrician, wired in accordance with the National Electrical Code and all local codes.

Be certain the power is OFF before and during installation and maintenance.

Make sure the supply voltage is the same as the rated voltage on the fixture's label: 120-277V AC.

To prevent wiring damage, do not expose the wiring to sheet-metal edges or sharp objects.

Read these instructions before installation and keep them for future reference.

ELECTRICAL REQUIREMENTS

Supply the downlight with 120-277V AC, as on its label. It dims with 0-10V. The driver is built in, with a factory metal-clad whip (15-3/4 in) to its IC-rated junction box.

GROUNDING

Connect the ground of the supply in the fixture's junction box, in accordance with the NEC and local codes.

BEFORE STARTING

- Ensure that the supply power is shut off.
- Unpack the downlight and check that nothing is damaged or missing.
- The downlight installs from below the ceiling, into the existing opening. It is IC rated and airtight, and rated for wet locations.


INSTALLATION


1. Set the wattage and CCT on the two toggle switches on the back of the fixture, to what the design calls for (the SET UP line on the pin card): 12, 16 or 22W; 3000, 3500 or 4000K.

2. Connect the supply in the fixture's junction box: line, neutral and ground, and the 0-10V dimming leads if used, as marked on the fixture's label. Close the junction box.

3. Where the old opening is larger than the downlight, slide the goof ring LC-UDL-8-GR over the fixture, up against its trim.


4. Pass the junction box up through the opening. Squeeze the two spring clips upright and insert the downlight into the opening.

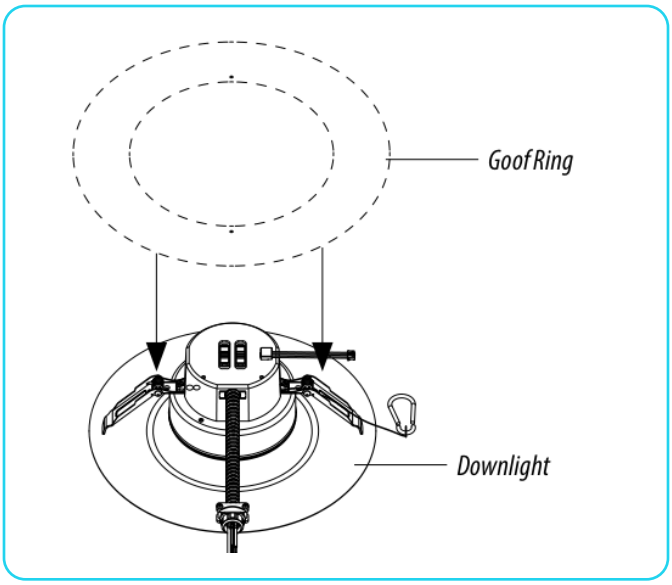

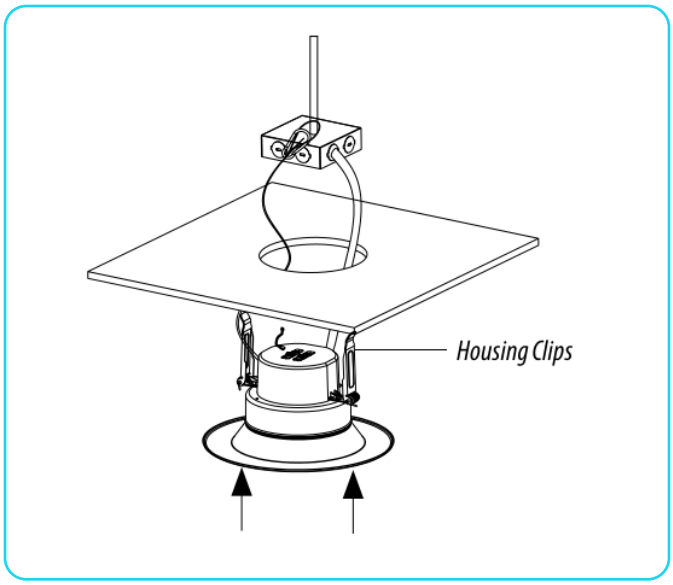

INSTALLATION, CONTINUED

5 Once the downlight is inside the opening, release the clips and keep pushing it up until it is held securely and flush with the ceiling, the goof ring held between the trim and the ceiling.

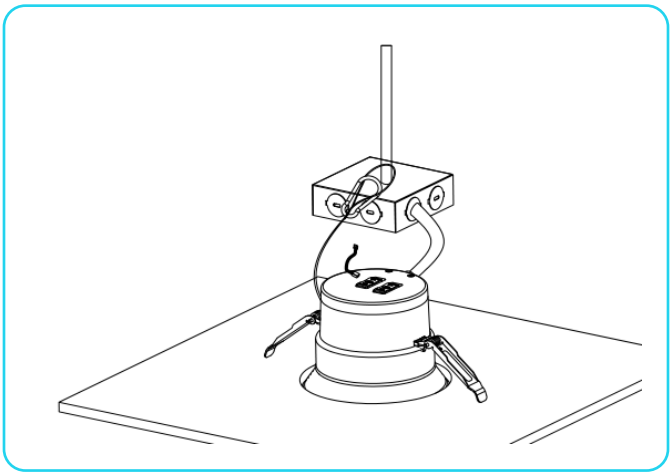


GOOF RING LC-UDL-8-GR

A goof ring is a flat trim ring that covers a ceiling opening larger than the downlight's own trim, such as the opening left by an older, larger downlight.

- LC-UDL-8-GR fits this 8 in downlight and covers an opening up to 12 in in diameter.
- It goes on before the downlight goes into the ceiling (step 3) and needs no tools: the downlight's spring clips hold it against the ceiling.
- Measure the opening first. Over 12 in, the ring will not cover it: flag it on the pin (FLAG A PROBLEM) instead of installing.

DIMENSIONS, 8 IN

- A 10-5/16 in, trim diameter · B 7-7/8 in · C 4-7/8 in, height · D 1-1/3 in
- Metal-clad whip 15-3/4 in (400 mm) to the junction box.

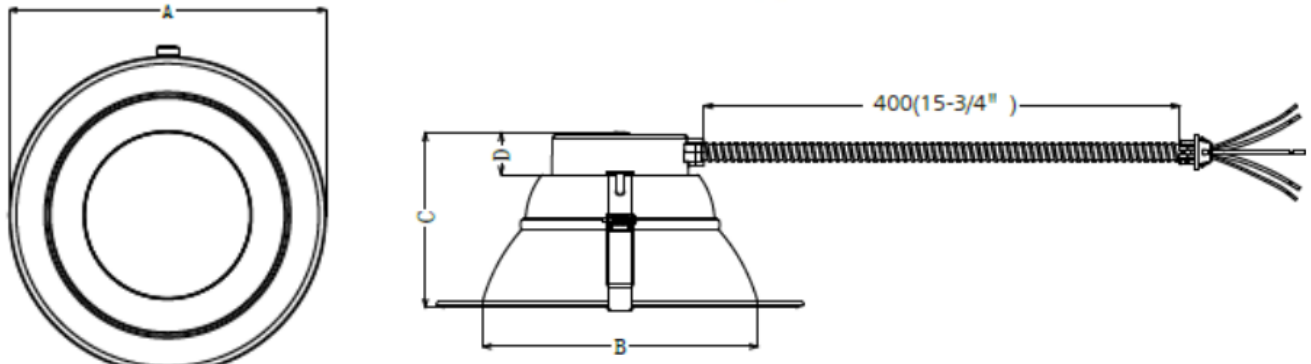

RECORD THE INSTALL

- In the LC Installer App, open the fixture's pin, take a photo of the installed fixture (and its label if you can), and SAVE AS INSTALLED. Every head is its own pin.
- Anything not as designed (setting, opening size, goof ring): write it in the pin's note.

QUESTIONS ON SITE

LED CONNECTION
702.847.7680
info@ledconnection.com · www.ledconnection.com