LED CONNECTION

INSTALLATION GUIDE

OPTIMUS

Ultra area luminaire · LC-SLOT

SR STRAIGHT ROUND ARM BRACKET

FOR EVERY OPTIMUS PART NUMBER WITH BRACKET SR

LC | SLOT | wattW | volt | L5 | sensor | cct | cri | optic | **SR** | color

TOOLS

13 mm open wrench
6 mm hexagon wrench
Cross (Phillips) screwdriver

TORQUE

at least 8.5 N·m, until locking

IN THE BOX

7 kinds of parts, 14 pieces
Numbered list and drawing on page 3

BEFORE YOU BEGIN

Read and follow the safety instructions on the next page. Save these instructions.

WARNING · RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electrical Code) and all local codes.

Turn off electrical power before inspection, installation or removal.

Use only UL (or other NRTL) approved wire for input/output connections. Minimum size 18 AWG, or 14 AWG for continuous runs.

Make sure LEDs and drivers are cool to touch when performing maintenance.

Make sure the supply voltage is the same as the rated voltage of the luminaire.

Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.

Keep tightly closed when in operation.

ELECTRICAL REQUIREMENTS

The LED driver must be supplied with the voltage specified on the product label and connected to an individual, properly grounded branch circuit protected by a 20 Ampere circuit breaker. Use min. 75°C supply.

GROUNDING

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.

BEFORE STARTING

- Ensure that the supply power is shut off.
- Unpack the fixture and ensure that there are no damaged or missing parts.
- The fixture must be sealed with a silicone sealant where it contacts the mounting surface.


TOOLS

- 13 mm open wrench
- 6 mm hexagon wrench
- Cross (Phillips) screwdriver

Installation tools are not included with the product.

IN THE BOX


1	M8×50 mm screw	× 2	5	Through	× 1
2	M8 mm	× 2	6	M4×8 mm screw	× 4
3	M8 mm	× 2	7	E stamping sheet	× 1
4	M8 mm	× 2			




13MM INNER
OPEN WRENCH



6MM INNER
HEXAGON WRENCH



CROSS SCREWDRIVER

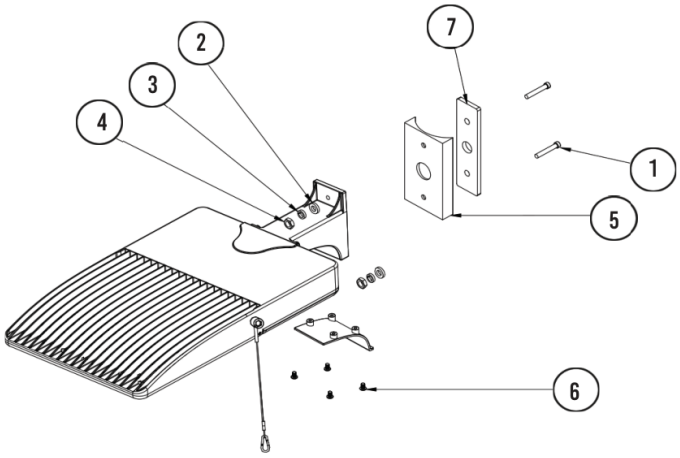



1 M8*50MM 2 PCS




2 M8MM 2 PCS



3 M8MM 2 PCS



4 M8MM 2 PCS




5 THROUGH 1PCS



6 M4*8MM 4 PCS

NOTE: Installation tool is not included with product


7 E STAMPING SHEETS 1PCS

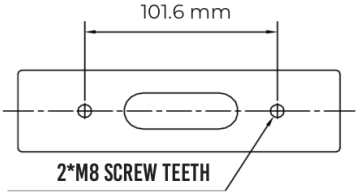

INSTALLATION


1 Install the back plate and bracket adapter on the pole with the top bolts, nuts and washers.

A

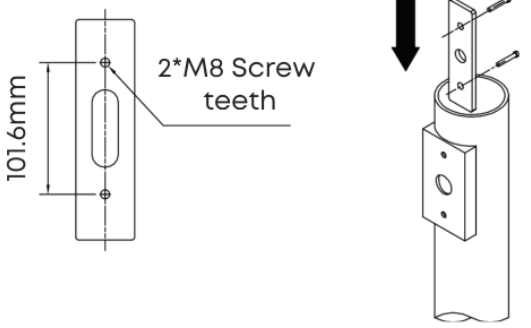

2 Remove the screw and open the cover.


B

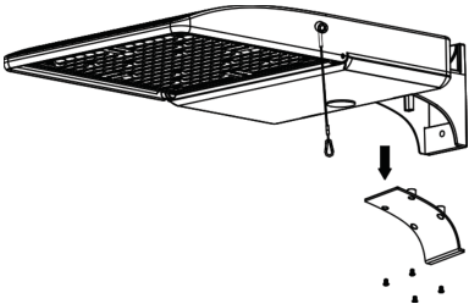

3 Fix the luminaire on the stand adapter and secure it with the M8 screw.


`TORQUE at least 8.5 N·m, until locking`

C

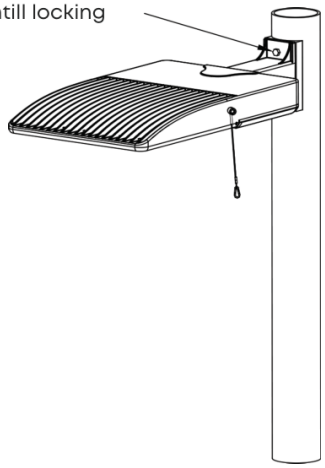

4 Connect the cable in the bracket holder to the municipal (supply) wire, as shown in the wiring diagram.

D

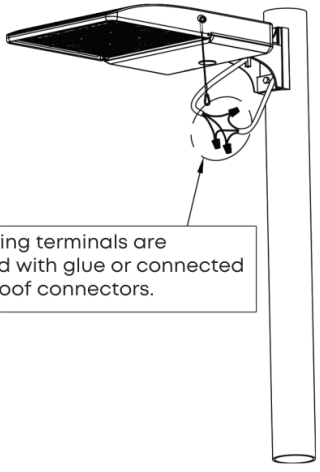


Note: The wiring terminals are waterproofed with glue or connected with waterproof connectors.

INSTALLATION, CONTINUED

5 Finally, install the bracket cover and secure it with the screw.

E

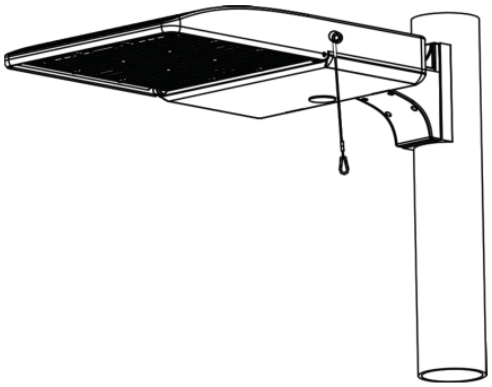


WIRING

Connect the cable in the bracket holder to the municipal (supply) wire, as shown in the wiring diagram: standard wiring, or 0-10V dim wiring.

> **NOTE**
> The wiring terminals are waterproofed with glue or connected with waterproof connectors.


STANDARD WIRING

F

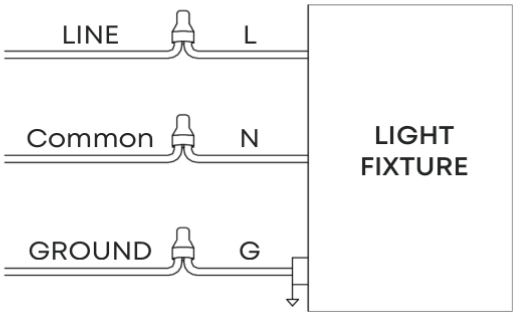

WIRING, CONTINUED

0-10V DIM WIRING

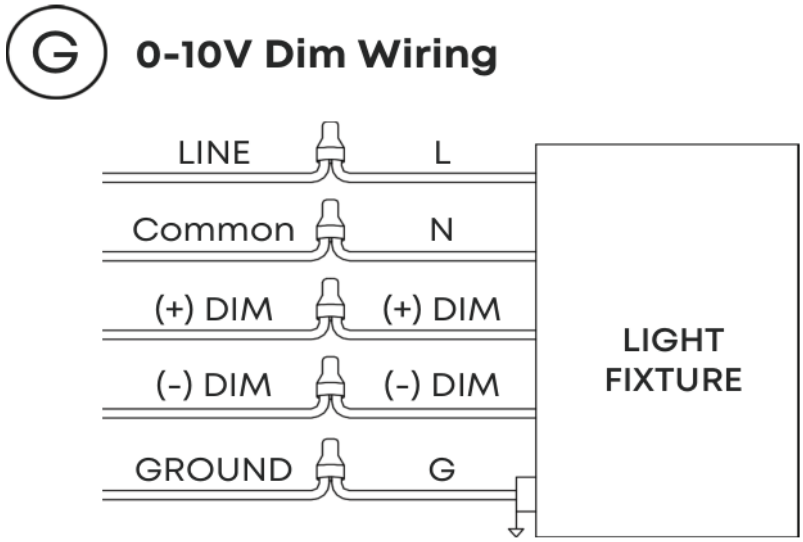

RECORD THE INSTALL

- In the LC Installer App, open the fixture's pin, take a photo of the installed fixture (and its label if you can), and SAVE AS INSTALLED. Every head is its own pin.
- Anything not as designed (bracket, height, aim): write it in the pin's note.

QUESTIONS ON SITE

LED CONNECTION
702.847.7680
info@ledconnection.com · www.ledconnection.com