LED CONNECTION

INSTALLATION GUIDE

OPTIMUS

Ultra area luminaire · LC-SLOT

T TRUNNION BRACKET

FOR EVERY OPTIMUS PART NUMBER WITH BRACKET T

LC | SLOT | wattW | volt | L5 | sensor | cct | cri | optic | **T** | color

TOOLS

13 mm open wrench
7 mm open wrench

TORQUE

at least 5 N·m and 8.5 N·m, until locking
at least 8.5 N·m, until locking

IN THE BOX

8 kinds of parts, 16 pieces
Numbered list and drawing on page 3

BEFORE YOU BEGIN

Read and follow the safety instructions on the next page. Save these instructions.

WARNING · RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electrical Code) and all local codes.

Turn off electrical power before inspection, installation or removal.

Use only UL (or other NRTL) approved wire for input/output connections. Minimum size 18 AWG, or 14 AWG for continuous runs.

Make sure LEDs and drivers are cool to touch when performing maintenance.

Make sure the supply voltage is the same as the rated voltage of the luminaire.

Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.

Keep tightly closed when in operation.

ELECTRICAL REQUIREMENTS

The LED driver must be supplied with the voltage specified on the product label and connected to an individual, properly grounded branch circuit protected by a 20 Ampere circuit breaker. Use min. 75°C supply.

GROUNDING

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.

BEFORE STARTING

- Ensure that the supply power is shut off.
- Unpack the fixture and ensure that there are no damaged or missing parts.
- The fixture must be sealed with a silicone sealant where it contacts the mounting surface.

TOOLS


13 mm open wrench

7 mm open wrench


Installation tools are not included with the product.

IN THE BOX

1	M16×25 mm screw	× 2	5	M4×20 mm screw	× 2
2	M8 mm	× 2	6	M4 mm	× 2
3	M8 mm	× 2	7	M4 mm	× 2
4	M8 mm	× 2	8	M4 mm	× 2





13MM INNER
OPEN WRENCH



7MM INNER
OPEN WRENCH

NOTE: Installation tool is not included with product

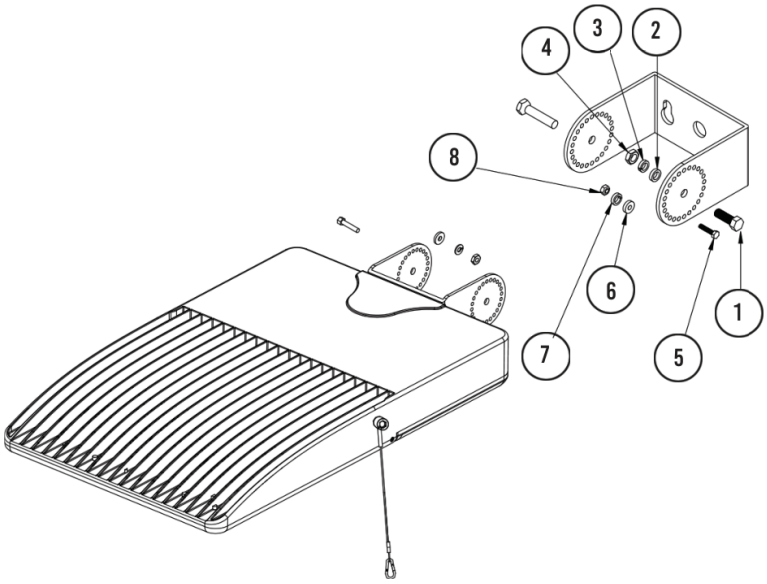





M16*25MM 2 PCS




M8MM 2 PCS



M8MM 2 PCS




M8MM 2 PCS




M4*20MM 2 PCS



M4MM 2 PCS



M4MM 2 PCS




M4MM 2 PCS


INSTALLATION

1 Make two holes in the wall or ceiling. Hole sizes and spacing as shown.

A

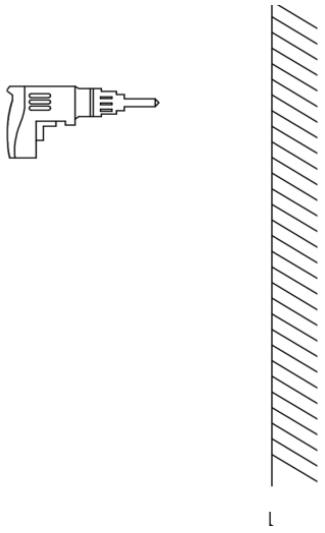


F

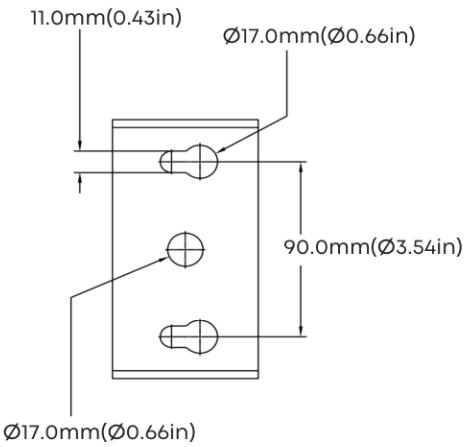

2 Push the expansion screws into the wall or ceiling.


B

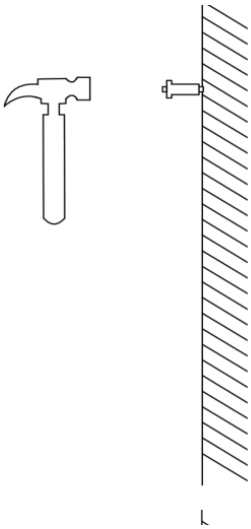

3 Fix the fixture on the wall or ceiling.

TORQUE at least 8.5 N·m, until locking


C

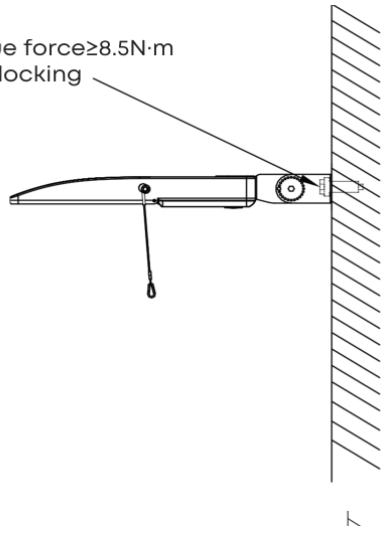


INSTALLATION, CONTINUED

4 Loosen the screw for angle adjustment.

TORQUE at least 5 N·m and 8.5 N·m, until locking

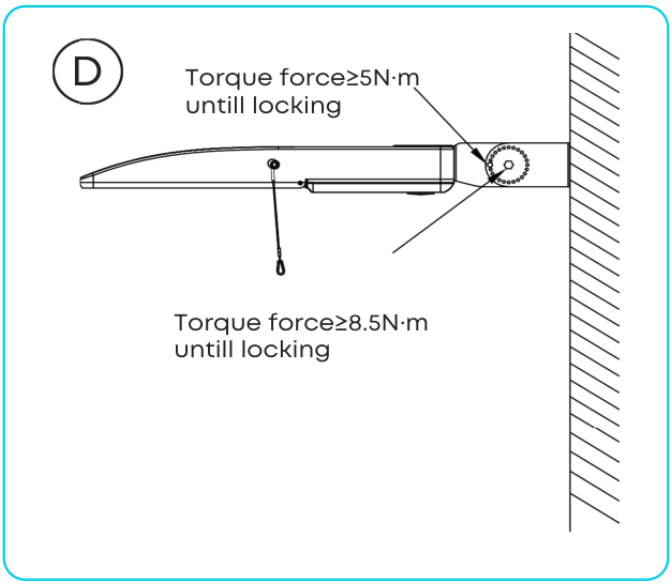

5 Connect the cable in the bracket holder to the municipal (supply) wire, as shown in the wiring diagram.

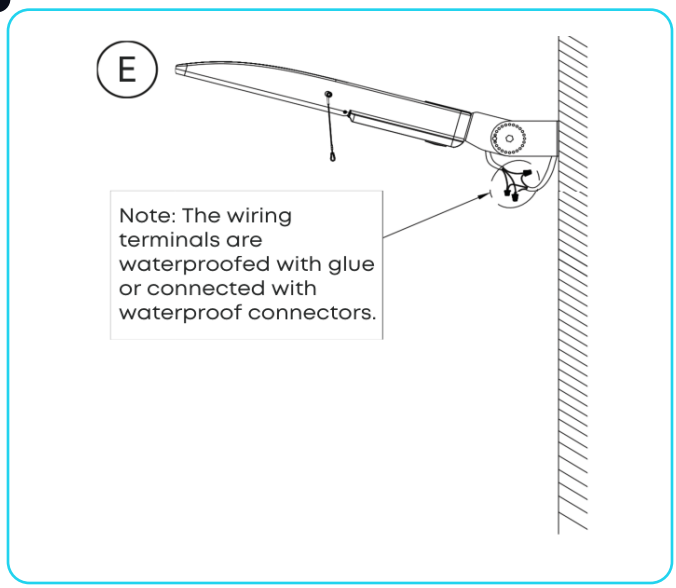


WIRING

Connect the cable in the bracket holder to the municipal (supply) wire, as shown in the wiring diagram: standard wiring, or 0-10V dim wiring.


> **NOTE**
> The wiring terminals are waterproofed with glue or connected with waterproof connectors.

STANDARD WIRING

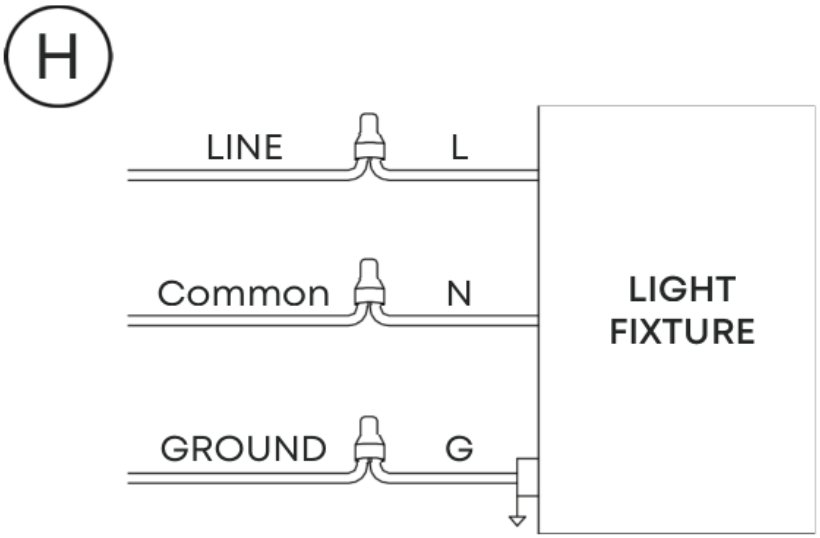


WIRING, CONTINUED

0-10V DIM WIRING

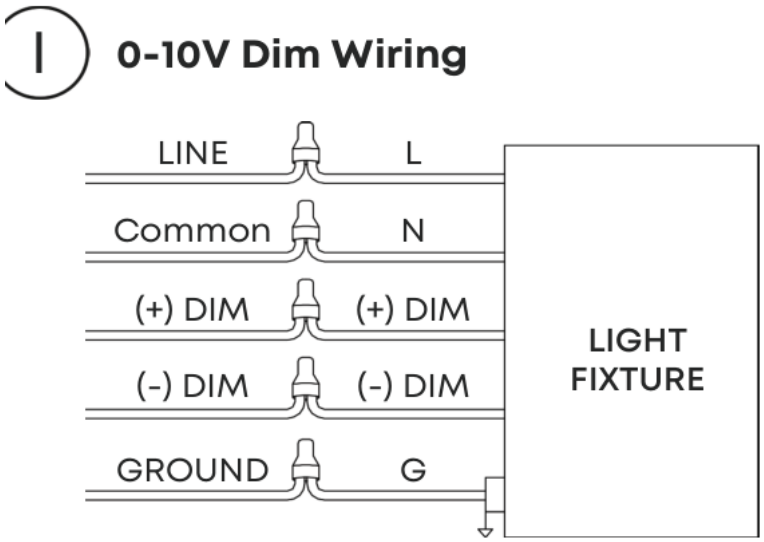

TRUNNION BRACKET DIMENSIONS

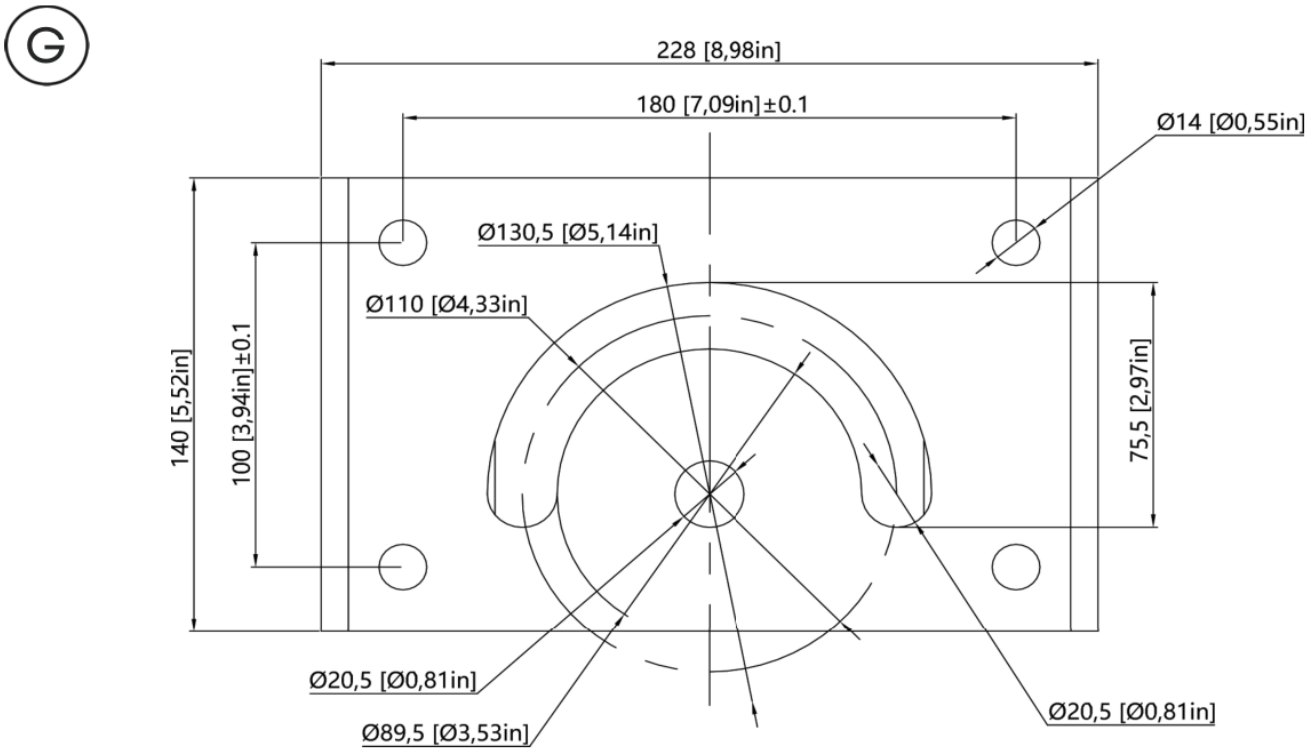

RECORD THE INSTALL

- In the LC Installer App, open the fixture's pin, take a photo of the installed fixture (and its label if you can), and SAVE AS INSTALLED. Every head is its own pin.
- Anything not as designed (bracket, height, aim): write it in the pin's note.

QUESTIONS ON SITE

LED CONNECTION
702.847.7680
info@ledconnection.com · www.ledconnection.com