OPTIMUS SERIES

OPTIMUS SERIES

ULTRA AREA LUMINARE

INSTALLATION GUIDE

TRUNNION BRACKET - T

SAVE THESE INSTRUCTIONS

STOP

BEFORE YOU BEGIN

Read and follow Safety instructions

⚠ WARNING

RISK OF FIRE, EXPLOSION AND ELECTRIC SHOCK

- This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with the NEC (National Electric Code) and all local codes.
- Turn off electrical power before inspection, installation or removal.
- Use only UL (or other NTRL) approved wire for input/output connections. Minimum size 18 AWG or 14 AWG for continuous runs.
- Make sure LEDs and drivers are cool to touch when performing maintenance. Make sure the supply voltage is the same as the rated voltage of the luminaire.
- Do not install in a hazardous atmosphere, except where the ambient temperature does not exceed the rated operating temperature of the fixture.
- Keep tightly closed when in operation



PREPARE ELECTRICAL WIRING

Electrical Requirements

The LED driver must be supplied with the voltage specified on the product label and connected to an individual, properly grounded branch circuit protected by a 20 Ampere circuit breaker. Use min. 75°C supply.

Grounding instructions

The grounding and bonding of the overall system shall be done in accordance with NEC Article 600 and local codes.

OPTIMUS SERIES

OPTIMUS SERIES

ULTRA AREA LUMINARE


BEFORE STARTING

- Ensure that the supply power is shut off.
- Unpack the fixture and ensure that there are no damaged or missing parts.
- NOTE: Fixture must sealed where it contacts the mounting surface with a silicone sealant.


TOOL REQUIRED:

Hexagon wrench
Cross screwdriver

TRUNNION BRACKET INSTALLATION METHOD





13MM INNER
OPEN WRENCH




7MM INNER
OPEN WRENCH

NOTE: Installation tool is not included with product

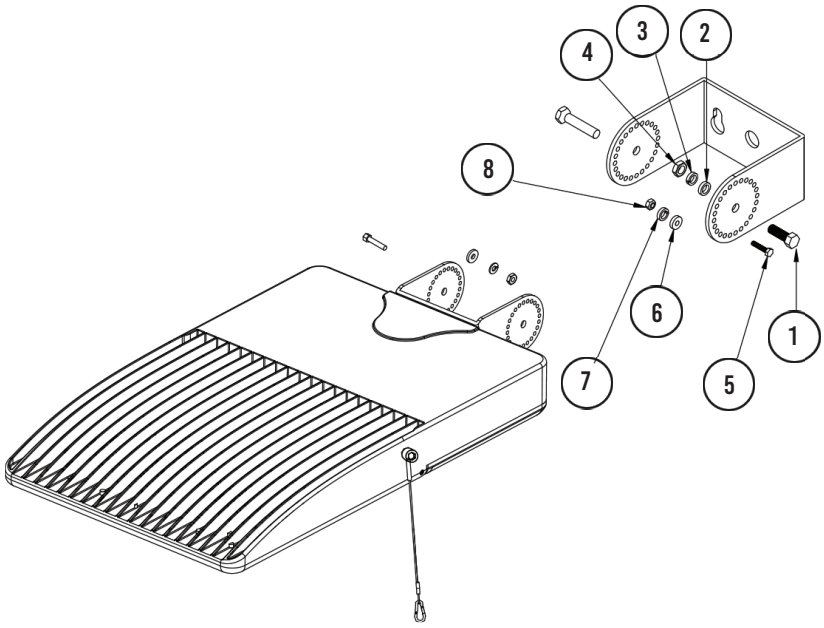





M16*25MM 2 PCS




M8MM 2 PCS



M8MM 2 PCS




M8MM 2 PCS




M4*20MM 2 PCS



M4MM 2 PCS



M4MM 2 PCS




M4MM 2 PCS

OPTIMUS SERIES


ULTRA AREA LUMINARE

A



Step 1 - Play two holes in the wall or ceiling,open hole size as shown in Figure F .


B

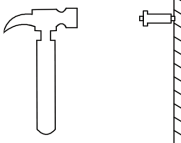

Step 2 -Push the expansion screw into the wall or ceiling

C


Torque force≥8.5N·m untill locking

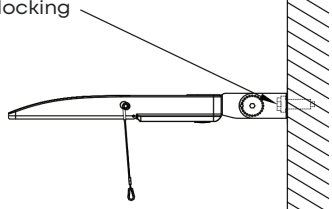

Step 3 -Fix the fixture on the wall or ceiling

D


Torque force≥5N·m untill locking

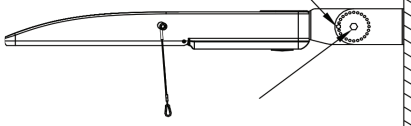

Torque force≥8.5N·m untill locking

Step 4 - Loosen screw for angle adjustment


E

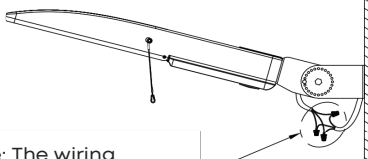

Note: The wiring terminals are waterproofed with glue or connected with waterproof connectors.

Step 5 - Connect the cable in the G holder to the municipal wire, as shown in Figure H or I .


F

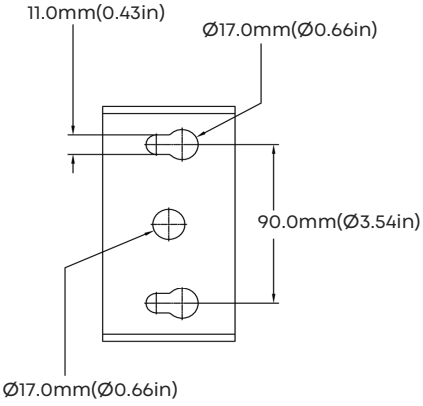


OPTIMUS SERIES

ULTRA AREA LUMINARE

G

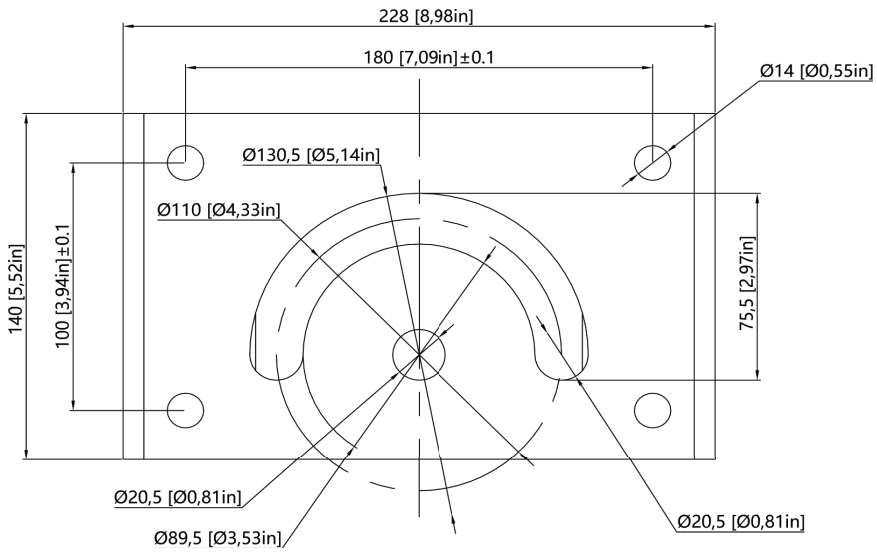

H

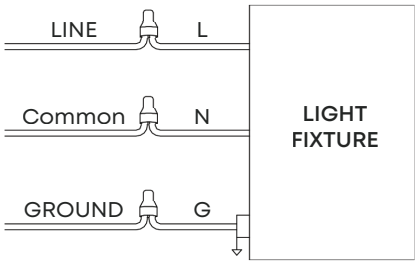

I **0-10V Dim Wiring**

