# PlanAhead Software Tutorial I/O Pin Planning

UG 674 (v 12.3) September 21, 2010





Xilinx is disclosing this Document and Intellectual Property (hereinafter "the Design") to you for use in the development of designs to operate on, or interface with Xilinx FPGAs. Except as stated herein, none of the

Design may be copied, reproduced, distributed, republished, downloaded, displayed, posted, or transmitted in any form or by any means including, but not limited to, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Xilinx. Any unauthorized use of the Design may violate copyright laws, trademark laws, the laws of privacy and publicity, and communications regulations and statutes.

Xilinx does not assume any liability arising out of the application or use of the Design; nor does Xilinx convey any license under its patents, copyrights, or any rights of others. You are responsible for obtaining any rights you may require for your use or implementation of the Design. Xilinx reserves the right to make changes, at any time, to the Design as deemed desirable in the sole discretion of Xilinx. Xilinx assumes no obligation to correct any errors contained herein or to advise you of any correction if such be made. Xilinx will not assume any liability for the accuracy or correctness of any engineering or technical support or assistance provided to you in connection with the Design.

THE DESIGN IS PROVIDED "AS IS" WITH ALL FAULTS, AND THE ENTIRE RISK AS TO ITS FUNCTION AND IMPLEMENTATION IS WITH YOU. YOU ACKNOWLEDGE AND AGREE THAT YOU HAVE NOT RELIED ON ANY ORAL OR WRITTEN INFORMATION OR ADVICE, WHETHER GIVEN BY XILINX, OR ITS AGENTS OR EMPLOYEES. XILINX MAKES NO OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, REGARDING THE DESIGN, INCLUDING ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT OF THIRD-PARTY RIGHTS.

IN NO EVENT WILL XILINX BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, EXEMPLARY, SPECIAL, OR INCIDENTAL DAMAGES, INCLUDING ANY LOST DATA AND LOST PROFITS, ARISING FROM OR RELATING TO YOUR USE OF THE DESIGN, EVEN IF YOU HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE TOTAL CUMULATIVE LIABILITY OF XILINX IN CONNECTION WITH YOUR USE OF THE DESIGN, WHETHER IN CONTRACT OR TORT OR OTHERWISE, WILL IN NO EVENT EXCEED THE AMOUNT OF FEES PAID BY YOU TO XILINX HEREUNDER FOR USE OF THE DESIGN. YOU ACKNOWLEDGE THAT THE FEES, IF ANY, REFLECT THE ALLOCATION OF RISK SET FORTH IN THIS AGREEMENT AND THAT XILINX WOULD NOT MAKE AVAILABLE THE DESIGN TO YOU WITHOUT THESE LIMITATIONS OF LIABILITY.

The Design is not designed or intended for use in the development of on-line control equipment in hazardous environments requiring fail-safe controls, such as in the operation of nuclear facilities, aircraft navigation or communications systems, air traffic control, life support, or weapons systems ("High-Risk Applications" Xilinx specifically disclaims any express or implied warranties of fitness for such High-Risk Applications. You represent that use of the Design in such High-Risk Applications is fully at your risk.

© 2010 Xilinx, Inc. All rights reserved. XILINX, the Xilinx logo, and other designated brands included herein are trademarks of Xilinx. Inc. All other trademarks are the property of their respective owners.

#### Demo Design License

© 2010 Xilinx. Inc.

This Design is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Library General Public License along with this design file; if not, see: <a href="http://www.gnu.org/licenses/">http://www.gnu.org/licenses/</a>



The PlanAhead<sup>™</sup> software source code includes the source code for the following programs:

#### Centerpoint XML

- The initial developer of the original code is CenterPoint Connective Software
- Software Engineering GmbH. portions created by CenterPoint Connective Software
- Software Engineering GmbH. are Copyright© 1998-2000 CenterPoint Connective Software Engineering GmbH. All Rights Reserved. Source code for CenterPoint is available at http://www.cpointc.com/XML/

#### **NLView Schematic Engine**

• Copyright© Concept Engineering.

#### Static Timing Engine by Parallax Software Inc.

Copyright© Parallax Software Inc.

#### Java Two Standard Edition

- Includes portions of software from RSA Security, Inc. and some portions licensed from IBM are available at <a href="http://oss.software.ibm.com/icu4j/">http://oss.software.ibm.com/icu4j/</a>
- Powered By JIDE <a href="http://www.jidesoft.com">http://www.jidesoft.com</a>

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR

PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



#### Free IP Core License

This is the Entire License for all of our Free IP Cores.

Copyright (C) 2000-2003, ASICs World Services, LTD. AUTHORS

All rights reserved.

Redistribution and use in source, netlist, binary and silicon forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of ASICS World Services, the Authors and/or the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

# Table of Contents

I/O Pin Planning	7
Introduction	7
Sample Design Data	7
Xilinx ISE Design Suite and PlanAhead Software	8
Required Hardware	8
PlanAhead Software Documentation and Information	8
Tutorial Description	8
Tutorial Objectives	9
Tutorial Procedures	9
Step 1: Creating an I/O Pin Planning Project Step 1	10
Step 2: Examining Device I/O Resources Step 2	14
Step 3: Defining Alternate Compatible Devices Step 3	17
Step 4: Creating and Configuring I/O Ports Step 4	18
Step 5: Importing an I/O Port List Step 5	20
Step 6: Exporting the Device and I/O Pin Assignments Step 6	21
Step 7: Analyzing I/O Port Placement Step 7	23
Step 8: Creating I/O Port Interfaces Step 8	26
Step 9: Clearing Imported I/O Placement Constraints Step 9	30
Step 10: Placing I/O Ports Step 10	31
Step 11: Placing Gigabit Transceivers and Clock Logic Step 11	37
Step 12: View Multi-function pins/set Device Config Mode Step 12	46
Step 13: Running DRC and SSN Analysis Step 13	49
Conclusion	51

# PlanAhead Software Tutorial I/O Pin Planning

#### Introduction

This tutorial introduces the Xilinx<sup>®</sup> PlanAhead<sup>™</sup> software capabilities and benefits when performing I/O pin assignment for FPGA devices. It describes the procedure for creating and assigning I/O ports to physical package pins. The I/O Planner environment enables you to create, import, and configure the initial list of I/O ports. You can group the related ports into *Interfaces* and then assign them to package pins.

The capabilities include fully automatic pin placement or semi-automated interactive modes to allow controlled I/O port assignment. The I/O Planner environment shows the relationship of the physical package pins and banks with their corresponding I/O die pads. Intelligent decisions can be made to optimize the connectivity between the PCB and the FGPA device.

I/O Pin Assignment can be performed at various stages of the design cycle. Early package I/O exploration and assignment can be performed with a pin planning project even before the design source files are available. A CSV format file can be imported for I/O planning, or exported for use in PCB schematic symbol or HDL header generation.

PlanAhead also enables I/O pin planning in the elaborated RTL design or in the synthesized Netlist design. PlanAhead is able to perform more comprehensive I/O and clocking DRCs when using the Netlist Design. This tutorial covers both.

Not all commands or command options are covered in this tutorial. This tutorial uses the features contained in PlanAhead, which is bundled as a part of ISE<sup>®</sup> Design Suite version 12.

# Sample Design Data

This tutorial uses the sample design data included with PlanAhead in the following directory:

<ISE\_install\_Dir>/PlanAhead/testcases/PlanAhead\_Tutorial.zip

Extract the zip file into any write-accessible location. The location of the unzipped PlanAhead Tutorial data is referred to as the <Extract Dir> throughout this document.

The tutorial sample design data is modified while performing this tutorial. A new copy of the original PlanAhead\_Tutorial data is required each time you run the tutorial. Refer to the *Tutorial Description* section for more information about the example design.



www.xilinx.com

7

## Xilinx ISE Design Suite and PlanAhead Software

The PlanAhead software is installed with ISE Design Suite software. Before starting the tutorial, be sure that the PlanAhead software is operational, and that the sample design data is installed. For installation instructions and information, see the ISE Design Suite 12: Installation, Licensing, and Release Notes on the Xilinx website:

http://www.xilinx.com/support/documentation/sw manuals/xilinx12 3/irn.pdf

## Required Hardware

Xilinx recommends a minimum of 2 GB of RAM when using the PlanAhead software on larger devices. For this tutorial, a smaller xc6vlx75t design is used, and the number of designs open at one time is limited. Although 1 GB is sufficient, it might impact performance.

#### PlanAhead Software Documentation and Information

For information about the PlanAhead software, please see the following documents, which are available with your software:

- PlanAhead User Guide (UG632) Provides detailed information about the PlanAhead software.
   http://www.xilinx.com/support/documentation/sw manuals/xilinx12 3/PlanAhead UserGuide.pdf
- Floorplanning Methodology Guide (UG633) Provides floorplanning hints.
   <a href="http://www.xilinx.com/support/documentation/sw">http://www.xilinx.com/support/documentation/sw</a> manuals/xilinx12 3/Floorplanning Methodology Guide.pdf
- Hierarchical Design Methodology Guide (UG748) Provides an overview of the PlanAhead hierarchical design capabilities.
   http://www.xilinx.com/support/documentation/sw\_manuals/xilinx12\_3/Hierarchical\_Design\_Methodology\_Guide.pdf
- For additional information about PlanAhead, including video demonstrations, go to http://www.xilinx.com/planahead.

# **Tutorial Description**

The small sample design used in this tutorial includes:

- A RISC processor CPU core
- A pseudo FFT
- Four gigabit transceivers (GTs)
- Two USB interfaces

The design targets an xc6vlx75t device. A small design is used to:

- Allow the tutorial to be run with minimal hardware requirements
- Enable timely completion of the tutorials
- Minimize data size

8

If you have any questions or comments about the tutorial, contact Xilinx Technical Support.

# **Tutorial Objectives**

The objective of this tutorial is to familiarize you with the I/O pin planning process using the I/O Planner functionality in the PlanAhead software.

#### **Tutorial Procedures**

This tutorial is separated into steps, followed by general instructions and supplementary detailed steps allowing you to make choices based on your skill level as you progress through the lab.

If you need help completing a general instruction, go to the detailed steps below it, or if you are ready, simply skip the step-by-step directions and move on to the next general instruction.

This tutorial consists of the following I/O pin planning tasks:

- Step 1: Create an empty I/O pin planning project.
- Step 2: Examine device I/O resources and the I/O bank die to package relationships
- Step 3: Define alternate compatible devices for pin assignment consistency
- Step 4: Create and configure I/O ports
- Step 5: Import I/O ports
- Step 6: Group I/O Ports into interfaces
- Step 7: Export the package and I/O pin configuration data
- Step 8: Open a Netlist Design and analyze I/O Port placement
- Step 9: Clear I/O placement and clock logic constraints
- Step 10: Place I/O Ports on physical pins using the various placement modes
- Step 11: Place gigabit transceivers (GTs) and clock logic
- Step 12: Examine multi-function pins and set device configuration modes
- Step 13: Run DRC and SSN analysis to check for legal placement



www.xilinx.com

## Step 1: Creating an I/O Pin Planning Project

Step 1

The PlanAhead software provides an I/O pin planning environment called the I/O Planner. Opening the I/O Planner environment loads a PlanAhead software view layout with views more applicable to placing I/O Ports. I/O Planner can be invoked without a design for device resource analysis purposes. It is also available for any open RTL or Netlist Design.

# 1-1. Create a new project, open the I/O Planner environment, and explore the views.

- **1-1-1.** Open the PlanAhead software and create the project\_pinout I/O Pin Planning project.
  - On Windows, double-click the Xilinx PlanAhead 12 Desktop icon, or select Start > Programs
     Xilinx ISE Design Suite 12.3 > PlanAhead > PlanAhead.
  - On Linux, go to < Extract\_Dir > / PlanAhead\_Tutorial\_Tutorial\_Created\_Data directory and type PlanAhead.
- 1-1-2. In the Getting Started page, select Create a New Project.
- 1-1-3. Click Next to confirm the project creation and to display the Project Name page.
- **1-1-4.** Type the Project name, project\_pinout.
- **1-1-5.** Enter the Project location:

<Extract\_Dir>/PlanAhead\_Tutorial/Tutorial\_Created\_Data.

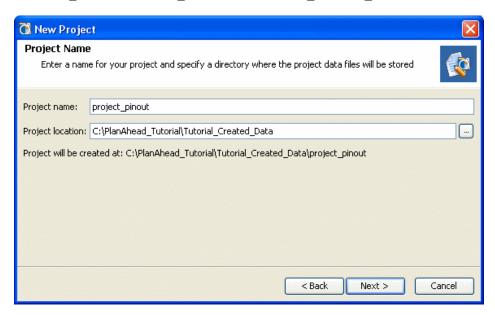


Figure 1: New Project Wizard

- **1-1-6.** Click **Next** to open the Design Source page.
- 1-1-7. Select Create an I/O Planning Project.

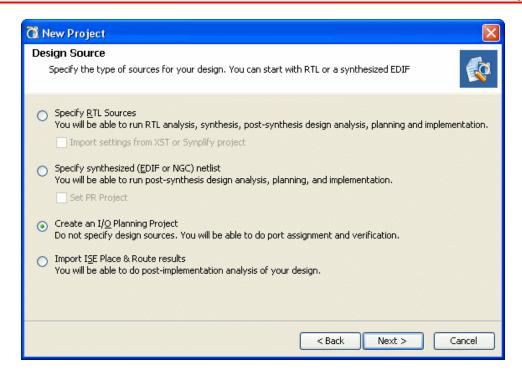


Figure 2: Design Source Page

- **1-1-8.** Click **Next** to open the Import Ports page.
- 1-1-9. Select Do not import I/O ports at this time.

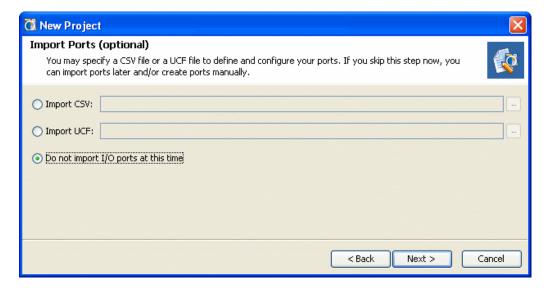


Figure 3: Import Ports Page

1-1-10. Click **Next** to open the Default Part Selector page.

XILINX.

www.xilinx.com

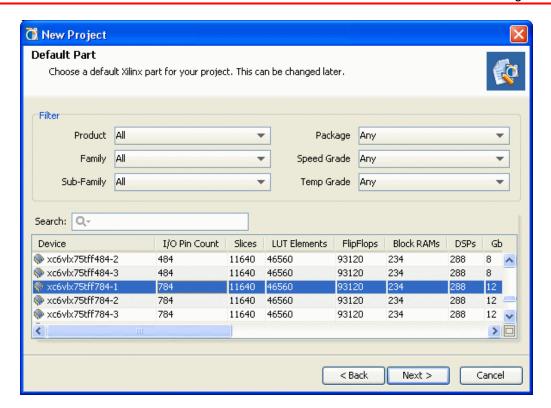


Figure 4: Default Part Selector Page

- **1-1-11.** Explore the Device filtering options.
- 1-1-12. Use the Default Part browser to select xc6vlx75tff784-1.
- 1-1-13. Click Next to open the New Project Summary page.
- **1-1-14.** Click **Finish** to create the project as shown in Figure 5.

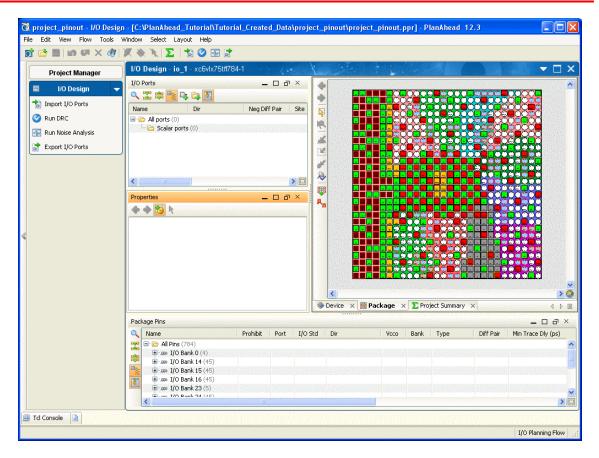


Figure 5: I/O Planner Environment

- **1-1-15.** Explore the various views in the I/O Planner. Many are empty as no I/O Ports have been defined yet.
- 1-1-16. To maximize the viewing area for the I/O Design, click the Maximize design view button.

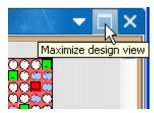


Figure 6: Maximizing the I/O Design Viewing Area

**1-1-17.** Click the Restore Design View button to restore the Flow Navigator and Messaging viewing areas. Use Maximize and Restore at your discretion throughout the tutorial.

## Step 2: Examining Device I/O Resources

Step 2

The PlanAhead software I/O pin planning environment lets you explore various device resources.

The different views graphically display and cross-select the location of various I/O, clock, and logic objects to help you determine I/O and device-related design decisions. The Package Pins or I/O Bank Properties view provides some I/O related information typically found in the device data sheets.

Next, you will learn how to select several I/O banks to show the package-to-die relationship, how to view I/O bank properties, and how to select and expand the I/O Bank 14 to view package pin specifications.

#### 2-1. Examine I/O Bank properties.

2-1-1. In the Package Pins view, select I/O Bank 14.

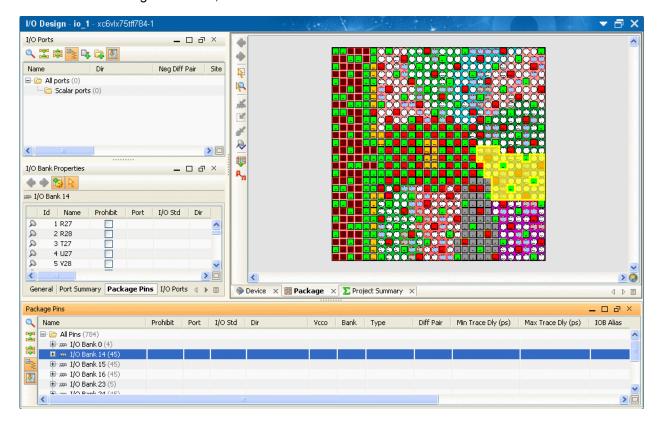


Figure 7: Cross Highlighting I/Os and I/O Banks

The I/O bank location is highlighted in the Package view.

**2-1-2.** Click the Device view tab in the Workspace to view the I/O bank location on the die.

Being able to visualize the I/O bank locations both internally and externally helps you plan for an optimal I/O port assignment.

- **2-1-3.** Click the Package view in the Workspace to bring it into view.
- **2-1-4.** Expand I/O Bank 14 in the Package Pins view to view the package pin information for each pin in the I/O Bank. The internal package trace min and max delays are also shown.

**2-1-5.** Scroll down and across the list of I/O Banks in the Package Pins view to expand and explore the I/O Banks.

The Package Pin view displays the Global Clocks (GC) and regional Clock Capable (CC) pins. As you assign I/O ports more information is provided in this table, such as assigned pin and bank numbers, voltages, and I/O standards.

- **2-1-6.** Select any one of the I/O Banks.
- **2-1-7.** In the I/O Bank Properties view, scroll to view the information displayed for each of the pins in the I/O Bank.
- **2-1-8.** Select the **General** tab in the I/O Bank Properties view.
- **2-1-9.** Review the I/O count and voltages. This information is populated as I/O Ports are assigned to the I/O bank. This allows you to search for compatible I/O banks to place the remaining I/O Ports.

#### 2-2. Examine the Package Pins View.

You can prohibit I/O package pins from having I/O Ports assigned to them. In the following sequence, you will sort the Package Pins view by Voltage to select all VREF I/O pins, then use the Set Prohibits pop-up command to prohibit placement on those pins.

**2-2-1.** Select the Package Pins tab and click Maximize ...

The Package Pins view is maximized.

- **2-2-2.** Unselect the Group by I/O Bank button in the Package Pins view to expand and flatten the list
- **2-2-3.** Click the **Voltage** column header twice and scroll to the top of the list to locate the VREF values.
- **2-2-4.** Use the Shift key to select all VREF Voltage pins.
- 2-2-5. Right-click and select Set Prohibit.
- **2-2-6.** In the Package Pins view header, click Restore ...

  The Package Pins view is restored. The Package view now displays prohibited pins.
- 2-2-7. In the main toolbar, click Unselect All
- **2-2-8.** Zoom in to an area of the Package view to view the Prohibited pins marked with red Xs as shown in Figure 8.

To zoom, draw a rectangle in the Package view starting at the upper left of the zoom area and drag to the lower right zoom area.

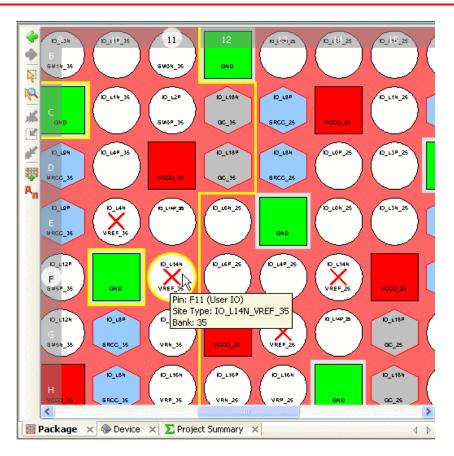


Figure 8: Examine Prohibited VREF Package Pins

- **2-2-9.** Zoom Fit the Package view. Click and drag the cursor from the lower right to the upper left in a diagonal motion.
- **2-2-11.** Click Collapse All **t** to return the tree table display to the default display structure.

The PlanAhead software has several tree table style views. There are search and filtering capabilities available in these views. See *Using Tree Table Style Views* in the *Using the Viewing Environment* chapter of the *PlanAhead User Guide* (UG632).

## Step 3: Defining Alternate Compatible Devices

Step 3

During the FPGA design process, you might want to change the target device when a design decision dictates a larger or different type. The PlanAhead software lets you define alternate compatible devices up-front so I/O assignments can work across the selected set of devices.


This capability is limited to Virtex<sup>®</sup>-5, Virtex-6 and Spartan<sup>®</sup>-6 devices that use a common package.

# 3-1. Define alternate devices and place Prohibits on package pins in the selected device.

This step ensures that the I/O pinouts work across the selected set of devices.

**3-1-1.** With the cursor in either the Device or Package view, right-click and select **Set Part Compatibility**.

The Set Part Compatibility view opens.

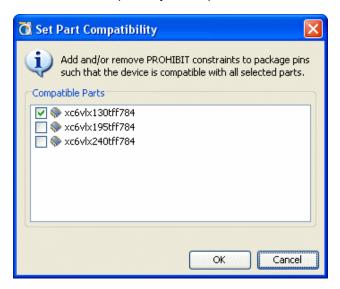

**Figure 9: Defining Compatible Parts** 

- 3-1-2. Select the xc6vlx130tff784 device.
- 3-1-3. Click OK.

The Prohibits are assigned based on the most restrictive parts. Since in this example, you are targeting the smallest device, no prohibits are placed.

**3-1-4.** In the confirmation dialog box, click **OK** to indicate that no Prohibits were placed.

# Step 4: Creating and Configuring I/O Ports

Step 4

I/O Ports can be created and/or configured interactively.

- 4-1. Create and configure a new I/O bus port called mybus.
- 4-1-1. In the I/O Ports view, right-click and select Create I/O Ports.

The Create I/O Ports dialog box opens.



Figure 10: Creating I/O Ports

The Configure I/O Ports command opens a similar dialog box that enables configuration of existing I/O Ports.

- **4-1-2.** Type mybus in the Name field.
- 4-1-3. Select Create Bus.
- **4-1-4.** Accept the default dialog box options.
- 4-1-5. Click OK.

The new I/O Ports display in the I/O Ports view.

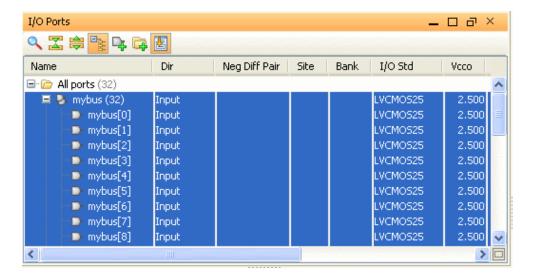


Figure 11: Display Newly Added I/O Ports

**4-1-6.** Select **Edit > Undo** to remove the recently added mybus I/O ports.

## Step 5: Importing an I/O Port List

Step 5

The PlanAhead software can import a variety of file formats to begin the I/O pin planning process. Before you have a synthesized netlist, you can import CSV, UCF, or RTL format files to do I/O pin exploration and assignment. You can also create I/O Ports interactively, which is covered in an upcoming step.

Use care with early input methods for I/O pin planning. Without a synthesized netlist, the I/O Ports placement and DRC routines do not take clocks, clock realtionships or GT logic into the calculation. When possible, perform I/O pin assignment after importing a synthesized netlist.

#### 5-1. Import and examine the CSV format I/O port list.

- **5-1-1.** In Windows Explorer, open the following I/O Ports list spreadsheet file: <Extract\_Dir>/PlanAhead\_Tutorial/Sources/IO\_Ports\_import.csv
- **5-1-2.** Examine the I/O ports spreadsheet format and content, then exit without saving.
- **5-1-3.** In the Flow Navigator on the left side of the PlanAhead software environment, select **I/O Design > Import I/O Ports**.

**Note:** You may need to click the arrow on the left side of the PlanAhead environment to open the Flow Navigator.

**5-1-4.** Select the CSV File browser, and then browse to select:

<Extract\_Dir>/PlanAhead\_Tutorial/ Sources/IO\_Ports\_import.csv

The Device and Package views display the assigned Ports and the I/O Ports view is now populated with the imported I/O Ports.

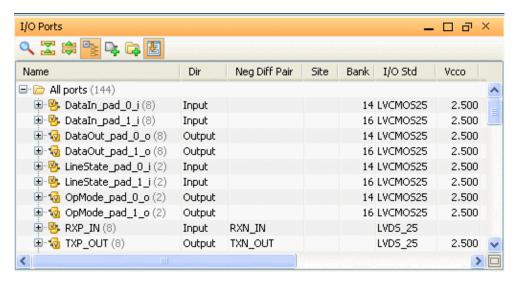


Figure 12: I/O Bus Ports are Grouped by Bus

The buses are grouped together and are expandable.

Most of the remaining steps for I/O pin assignment involve interaction with the I/O Ports view. Unless otherwise specified, all commands in this tutorial should be run with the cursor in the I/O Ports view.

20 www.xilinx.com 

E XILINX.

# Step 6: Exporting the Device and I/O Pin Assignments Step 6

The I/O Port assignments can be exported in UCF, CSV, VHDL or Verilog format. This is useful in HDL header and PCB schematic symbol generation.

The CSV format output file also contains package information for all pins and can be used as a seed to begin I/O Port assignment via the spreadsheet.

- 6-1. Export the I/O Ports list using the Export I/O Ports command.
- 6-1-1. In the Flow Navigator, select Export I/O Ports.
- **6-1-2.** Select **CSV** and **UCF** in the Specify Types to Generate.

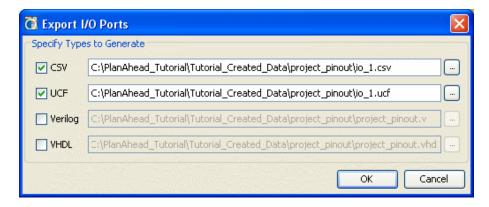


Figure 13: Exporting I/O Ports to a CSV Spreadsheet and UCF File

- **6-1-3.** Click **OK** to accept the default file name and location.
- 6-1-4. Open a Windows Explorer window and browse to find and open the exported CSV file in:

<Extract\_Dir>/PlanAhead\_Tutorial/Tutorial\_Created\_Data/project\_pinout/
io\_1.csv as shown below.

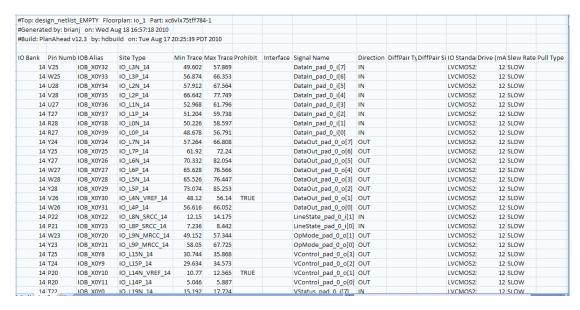


Figure 14: Examine Exported I/O Ports Spreadsheet

The Interface group names are included in the spreadsheet. Printed circuit board designers can use this spreadsheet to create Interface specific schematic symbols. Creation of I/O Port Interfaces is covered in an upcoming step.

- **6-1-5.** Close the io\_1.csv file.
- 6-2. Close the I/O Pin Planning Project.
- 6-2-1. Select File > Close Project.
- **6-2-2.** If prompted to save, select **I/O Design constr\_1**.
- 6-2-3. Click Save.
- **6-2-4.** Click **OK** in the Close Project dialog box.

# Step 7: Analyzing I/O Port Placement

Step 7

The I/O Planner feature provides several ways to place the I/O Ports onto either package pins or I/O die pads. The automatic placement command tries to place all or the selected group of I/O Ports, adhering to I/O bank rules while grouping buses and Interfaces together.

For more control over I/O Port placement, three semi-automatic placement modes allow interactive dragging of selected I/O Ports into the Package or Device views:

- Place I/O Ports in an I/O Bank
- Place I/O Ports in an Area
- Place I/O Ports Sequentially

I/O Planner also enables interactive DRCs to be toggled on and off during I/O placement.

#### 7-1. Open the Synthesized netlist based Project.

- **7-1-1.** Click the **Open Project** link in the Getting Started view or select **File > Open Project**.
- **7-1-2.** Browse to select the following project:

```
<Extract_Dir>/PlanAhead_Tutorial/Projects/project_cpu_netlist/
project_cpu_netlist.ppr
```

Alternately, select **Open Example Design > CPU (Synthesized)** in the Getting Started view.

- **7-1-3.** In the Sources view, ensure that the <code>constr\_1</code> <code>Constraint</code> folder is shown as (active). If not, select it, right-click, and select <code>Make Active</code>.
- **7-1-4.** In the Flow Navigator, select **Netlist Design** to open the synthesized design.
- **7-1-5.** Click **I/O Planner** in the Netlist Design view banner.

The I/O Planner view layout displays.

# 7-2. Split the Workspace to display the Package and Device view simultaneously.

The PlanAhead software graphical viewing area is called the Workspace. It can be split either horizontally or vertically to display multiple views simultaneously. This allows you to select I/O banks and Interfaces to see the physical package pin and internal die pad locations.

**7-2-1.** Click and drag the Package view tab to the right edge of the Workspace until the grey rectangle for the view appears as shown below.

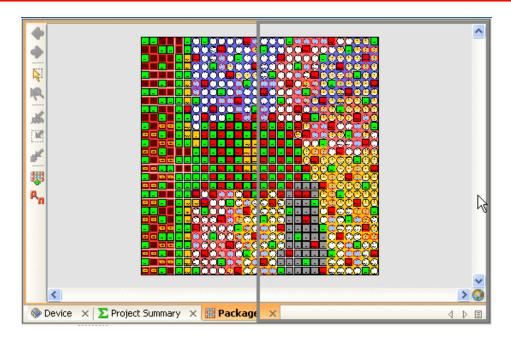


Figure 15: Workspace

- **7-2-2.** Drop the view in place.
- **7-2-3.** If necessary, click the Device view tab to bring it to the front.
- **7-2-4.** Zoom Fit the Package and Device views by clicking in the view and dragging the cursor up and to the left.
- **7-2-5.** Adjust the Workspace size if needed.

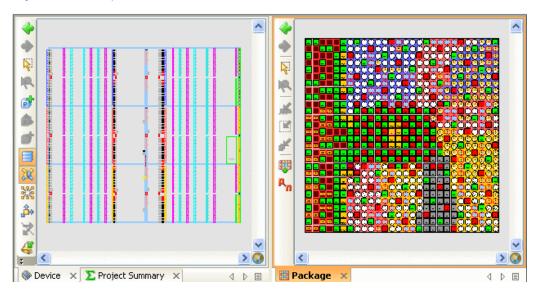


Figure 16: Displaying the Package and Device Views Simultaneously

- **7-2-6.** In the I/O Ports view banner, click Maximize View ...
- **7-2-7.** Click Expand All in the I/O Ports view.

24 www.xilinx.com 

E XILINX.

25

**7-2-8.** Scroll down the list of buses and signals.

The Neg Diff Pair fields are populated for some of the buses indicating they are differential pair buses.

**7-2-9.** In the I/O Ports view, click Group by Interface and Bus ...

The I/O Ports now display as a flat list rather than grouped by bus.

**7-2-10.** Scroll down the list to display the I/O Standards values applied.

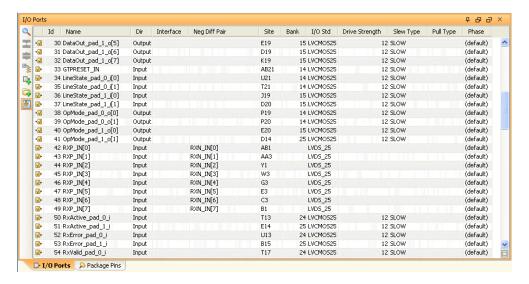


Figure 17: Examining I/O Standard and Diff Pair Requirements

The RXP\_IN, TXP\_OUT, and TILE\_REFCLK\_PAD\* buses are differential pairs and have unique I/O Standards applied.

## Step 8: Creating I/O Port Interfaces

Step 8

It is often beneficial to group the I/O Ports associated with various I/O interfaces. The I/O Planner feature enables the definition of groups of pins, buses or other interfaces to be grouped together as an "Interface." This ability helps with I/O Port management and with generating interface-specific PCB schematic symbols. It also forces the I/O Port automatic placement command to group the entire interface together on the device (where this is possible).

#### 8-1. Create Interfaces for the similar I/O Port groups.

The design used in this tutorial has two USB interfaces, each containing many I/O ports. The I/O port names are differentiated by \_0 and \_1 as shown in the figure above. You will create Interfaces for all signals in USB0 and USB1.

- **8-1-1.** Click Show Search .
- **8-1-2.** Type \_0 in the Search field.

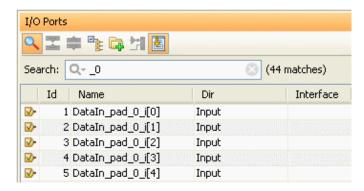


Figure 18: Selecting USB\_0 Related Buses

- **8-1-3.** Select one of the ports in the filtered list.
  - Press Ctrl+A to select all ports in the filtered list.
- **8-1-4.** Right-click and select **Create I/O Port Interface**.

The Create I/O Port Interface dialog box opens.

- **8-1-5.** Type **USB0** in the Name field.
- 8-1-6. Click OK.



Figure 19: Create I/O Port Interface

The USB0 folder now appears in the I/O Ports view.

- **8-1-7.** In the Search field, change \_0 to \_1 and follow the same steps to create a USB1 I/O Port Interface.
- **8-1-8.** Click Show Search to remove the Search filter.
- **8-1-9.** Click Group by Interface and Bus
- 8-1-10. Click Collapse All

The I/O ports list is condensed with all of the USB related ports in Interface groups.

8-1-11. Expand the Scalar ports folder to view the clocks resets and other items.

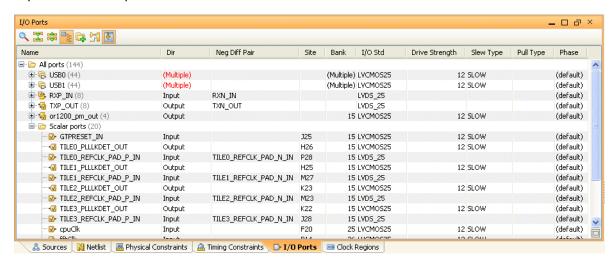


Figure 20: Viewing I/O Port Interface Groups and Scalar Ports

8-1-12. Click Restore View

The I/O Ports view is restored to the original location.

#### 8-2. Examine the I/O Placement.

8-2-1. In the I/O Ports view, select the USB0 Interface.

The I/O Port locations are highlighted in both Package and Device views. The Ports are grouped in the Package Pins view and enter the die in the lower left side of the Device.

8-2-2. In the I/O Ports view, select the USB1 Interface.

The Ports are grouped in the Package Pins view and enter the die in the upper left side of the Device.

8-2-3. Select the RXP\_IN or TXP\_OUT buses to observe the GT and GT I/O placement.

#### 8-3. Examine Clock Logic Placement.

- **8-3-1.** Click Find ...
- **8-3-2.** Set the Find object type to **Instances** if not set already.
- 8-3-3. For criteria, select Type, is, Gigabit IO.
- 8-3-4. Click OK.

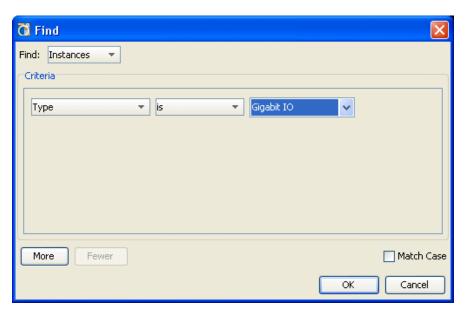


Figure 21: Searching for all Gigabit IO Logic in the Design

The Find Results view is displayed with all Gigabit IOs found in the design.

On the icons next to each clock logic object in the Find Results view, the blue stripe indicates that the logic object is placed and has a LOC constraint assigned.

28 www.xilinx.com 

E XILINX.

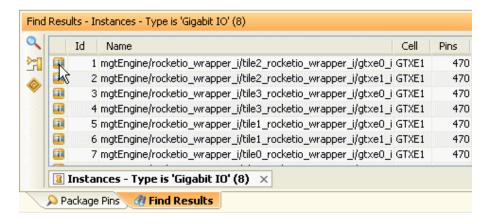


Figure 22: Blue-striped icon indicating Placed LOC

- **8-3-5.** Select one of the placed objects in the list. The object is highlighted in the Device view.
- **8-3-6.** In the Find Results view, press **Ctrl+A** to select all objects in the view. All of the Gigabit logic objects are highlighted in the Device view.

## Step 9: Clearing Imported I/O Placement Constraints

Step 9

The PlanAhead software has a robust set of options and filters for keeping or removing placement constraints. As I/Os are manually assigned, the placed I/O and clock logic receive "fixed" LOC placement constraints. The PlanAhead software differentiates between user-assigned "fixed" or ISE implementation assigned "unfixed" placement. It is useful to have control of which logic types the LOCs can remove or preserve. All fixed placement will receive LOC constraints in the UCF file exported for ISE implementation.

In order to walk through the steps involved to create the pin assignment, you will first need to clear the existing I/O LOC constraints in this Project.

# 9-1. Clear imported I/O constraints using the Clear Placement Constraints command.

- 9-1-1. Click Unselect All
- The
- 9-1-2. Select Tools > Clear Placement.

The Clear Placement Constraints wizard opens.

- 9-1-3. Select I/O port placement.
- 9-1-4. Click Next.

The Fixed Placement dialog box opens.

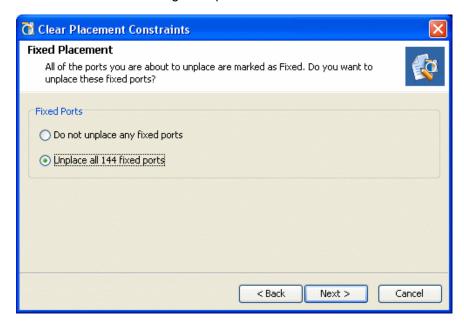


Figure 23: Selecting Fixed Filtering Options

- 9-1-5. Select Unplace all 144 fixed ports.
- 9-1-6. Click Next.
- **9-1-7.** Review the Summary dialog box.
- 9-1-8. Click Finish.

30

The placement constraints are now removed in the Package and I/O Ports views.

## Step 10: Placing I/O Ports

Step 10

The PlanAhead software provides several ways to place the I/O Ports onto either package pins or I/O die pads. The automatic placement command tries to place all or the selected group of I/O Ports, adhering to I/O bank rules while grouping buses and Interfaces together.

By default, the PlanAhead software uses interactive DRCs during I/O placement. This checking can be disabled by toggling the Automatically Enforce Legal I/O Placement button in the Device and Package views. It is also available to set in **Tools > Options > General**.

For more control over I/O Port placement, three semi-automatic placement modes allow interactive dragging of selected I/O Ports into the Package or Device views:

- Place I/O Ports in an I/O Bank
- Place I/O Ports in an Area
- Place I/O Ports Sequentially

# 10-1. Place the USB0 Port Interface using the Place I/O Ports in an I/O Bank placement mode.

- **10-1-1.** In the I/O Ports view, select the USB0 Interface.
- 10-1-2. In the Package view, click Place I/O Ports in an I/O Bank
- 10-1-3. Drag the cursor over the Package view.

As the cursor is dragged over the Package Pins, the assignment pattern displays and the number of pins to be placed is shown in the Tooltip.

The Information bar at the bottom of the PlanAhead software displays information about the objects being dragged over including I/O Banks and Package Pins.

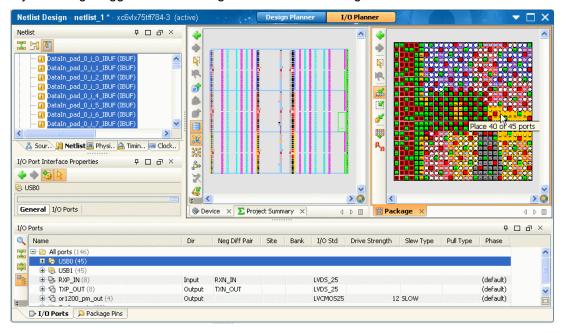


Figure 24: Place I/O Ports in an I/O Bank

10-1-4. Click on I/O Bank 14 on the right side of the Package to drop the I/O Ports, as shown above.

10-1-5. Select the below adjacent I/O Bank 24 to place the remaining I/O Ports.

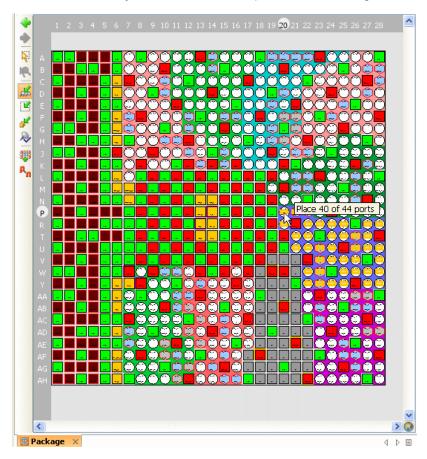


Figure 25: Continue to Place I/O Ports in I/O Banks

The I/O Ports are assigned in the order that they appear in the I/O Ports view. Assignment locations are vectored out from the initial pin selected.

10-1-6. In the I/O Ports view, click Collapse All

# 10-2. Place the USB1 I/O Port Interface using the Place I/O Ports in an Area placement mode.

- **10-2-1.** In the Device view, zoom in to the upper left quadrant of the device.
- **10-2-2.** In the I/O Ports view, select the **USB1 Interface**.
- **10-2-4.** Draw a rectangle starting above the upper left I/O bank and drag it down and to the right until all I/O Ports are placed in the rectangle within the top clock region.

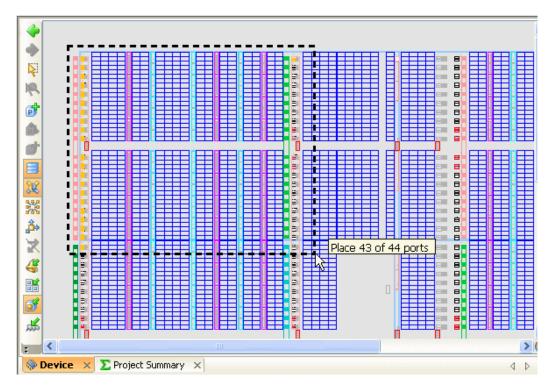


Figure 26: Place USB1 I/O Ports in an Area

There is still one unplaced I/O clock port dragging on the cursor. There is no global clock pad in this area of the device. Rather than trying to find a global clock pad, allow the automatic placement command to place it later.

**10-2-5.** Press **Esc** to exit the command.

# 10-3. Place the RXP\_IN differential pair bus using the Place I/O Ports Sequentially placement mode.

- 10-3-1. In the Package view, toggle Show Differential I/O pairs 4.
- **10-3-2.** Zoom in to an area in the bottom left of the Package view where you can see the square GT differential pair pins.
- 10-3-3. Zoom into the GT locations on the right side of the Device view (Figure 27).
- **10-3-4.** Select the RXP\_IN bus in the I/O Ports view.
- 10-3-5. In the Package view, click Place I/O Ports Sequentially
- **10-3-6.** Drag and click to place the first Diff pair I/O Port into one of the lower I/O Banks on a designated pin.



Figure 27: Place Diff Pair I/O Bus Ports Sequentially

Both diff pairs associated with the GTs were placed on legal sites. You might see a Tooltip indicating that the selected site is not legal and giving the reason why it is not legal.

You can manually enter a pin location in the Site field in the I/O Port Properties view.

- 10-3-7. Select another pin in the Package view to place the next Diff pair I/O bus port.
- **10-3-8.** In the Device view, select the top pin of one of the bottom GT I/O sites.

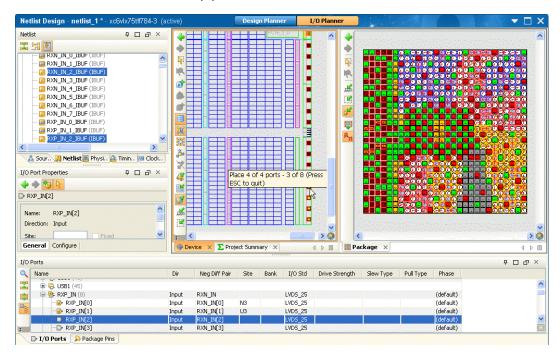


Figure 28: Place GT related I/Os Sequentially in the Device View

XILINX.

10-3-9. Press Esc to exit the command.

You will place the GTs and their related I/Os in the next step.

- 10-3-10. In the Package view, toggle Show Differential I/O pairs Annual I/O pairs
- **10-3-11.** Zoom Fit the Package and Device views.

#### 10-4. Automatically place the remaining I/O Ports.

- 10-4-1. If active, click Unselect All
- 10-4-2. Run Tools > Autoplace I/O Ports.
- **10-4-3.** In the Autoplace I/O Ports dialog box, click **Next**.

The Placed I/O Ports dialog box opens.

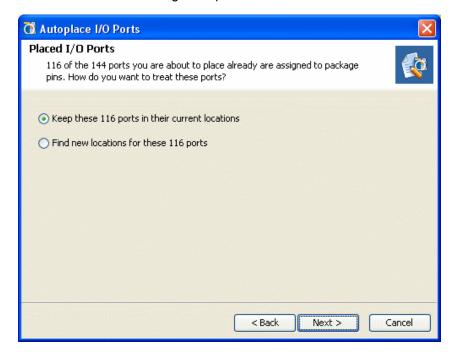


Figure 29: Autoplace I/O Ports Dialog Box

If any I/O Ports are selected when the command is run, they are seeded into the Autoplace I/O ports selection filter allowing selective auto placement.

- 10-4-4. Select Keep these # ports in their current locations.
- 10-4-5. Click Next.

The number of placed ports in your example design may vary from what is shown in the figure above.

10-4-6. In the Summary dialog box, click Finish.

The ports are placed.

10-4-7. In the I/O Ports view, click Collapse All.

**10-4-8.** In the I/O Ports view, select the various Interfaces and buses to observe how they are grouped during placement.

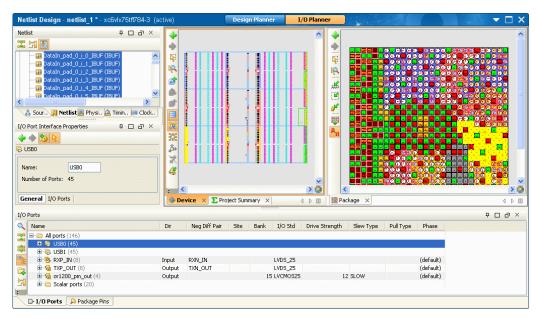


Figure 30: Examine Automatic Placement Results

## Step 11: Placing Gigabit Transceivers and Clock Logic Step 11

The PlanAhead software can be used to place critical clock or I/O related logic. After a synthesized netlist is imported, clocks and clock relationships can be explored and used to lock down these logic objects onto specific device sites. The PlanAhead software groups some logic, such as GTs and their associated I/O pin pairs automatically. This makes selection and placement of GTs and other related logic much less error prone.

#### 11-1. Remove the split Workspace view for the Device and Package view.

Now that the I/O Ports are all placed, the Package view is no longer needed to share the Workspace view. The split view can easily be removed.

- **11-1-1.** Select the Package view tab and drag it onto the Device view tab. The grey rectangle will encompass the entire Device view.
- 11-1-2. Drop the Package view onto the Device view tab.
- 11-1-3. Select the Device view to bring it to the front.
- **11-1-4.** Adjust the view size and Zoom fit the view, if needed.

#### 11-2. Maximize the Netlist Design viewing area.

The Planner viewing area can be maximized by hiding the Flow Navigator and Messaging areas.

11-2-1. Click Maximize design view.



Figure 31: Maximize the Netlist Design Viewing Area

#### 11-3. Search for the Gigabit I/O and Global Clock logic in the design.

#### **11-3-1.** Select **Edit > Find**.

The Find dialog box opens.

- **11-3-2.** Click **More** to add another Instance Type to include in the search.
- **11-3-3.** Set the Criteria option for the new filter line to **OR**.

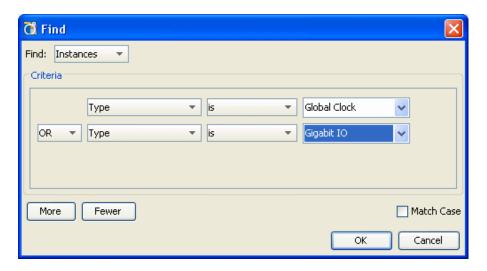


Figure 32: Searching for Global Clocks and Gigabit I/Os

- **11-3-4.** Adjust the selection filters to match Figure 32.
- 11-3-5. Click OK.

The Find Results view opens.

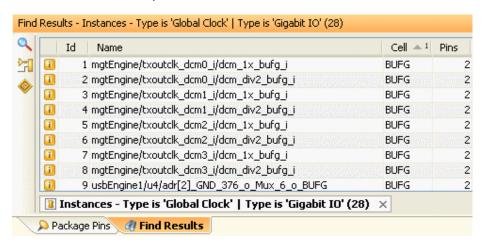


Figure 33: Sorting the Global Clock Object Types

- 11-3-6. Click the Cell column header to sort based on logic types. The results should match Figure 33.
- **11-3-7.** Scroll down the list of objects. Observe the BUFGs, BUFGPs, DCM\_ADVs, and GTXE1s. The objects that are already placed are displayed with a blue striped icon.

38 www.xilinx.com 
E XILINX...



Figure 34: Placed and Unplaced Icons

The logic names of the GTs and DCMs are numbers 0-3. Place these objects in proper relation to each other.

**11-3-8.** Select each of the GTXE1 objects and observe the seemingly random order of the placement with regard to the logic 0-3 numbers.

#### 11-4. Unplace the GTX interfaces and optimize their placement.

- 11-4-1. In the Find Results view, press **Shift** and select all of the GTXE1 objects.
- 11-4-2. Right-click and select Unplace.
- **11-4-3.** To sort the Find Results view, click the Name column header to more easily see the numerical order of the names.
- **11-4-4.** Zoom in to the upper right corner of the Device view.
- 11-4-5. In the Device view, select Create Site Constraint Mode.

XILINX.

www.xilinx.com

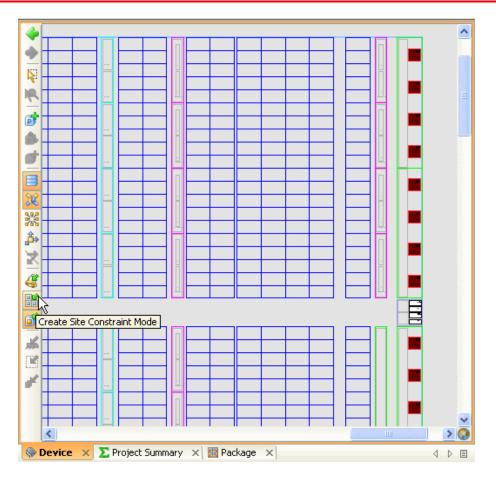


Figure 35: Setting Create Site Constraint Mode to Place LOC Constraints

**11-4-6.** In the Find Results view, select, drag, and place the first GTXE1 object onto the upper right GTX site.

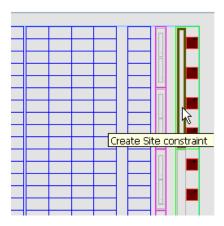


Figure 36: Placing the GTX LOC Constraint

The GT and the related I/Os are all placed together.

**11-4-7.** In the Find Results view, place the remainder of the GTXE1 objects in order down the right side of the device using the same method you just used.

Do not use the GTX sites directly adjacent to the PCI block if possible.

40 www.xilinx.com 

E XILINX.

#### 11-5. Search for DCM and BUFG device sites.

**11-5-1.** Select **Edit > Find**.

The Find dialog box opens.

- 11-5-2. Select Sites from the Find drop-down list.
- 11-5-3. Click More.
- 11-5-4. Set Criteria to OR.

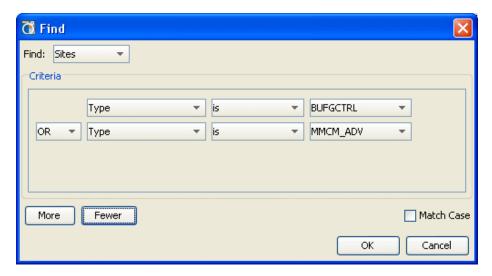


Figure 37: Locating GTP\_Dual Sites on Device

- 11-5-5. Set the filter options to match Figure 37.
- 11-5-6. Click OK.
- **11-5-7.** In the Find Results view, click on the various logic types to see where those logic objects exist on the device.

Device rules require related MMCMs and BUFGs to be placed on the same top or bottom half of the device.

- 11-5-8. In the Find Results view, press the Ctrl+A keys to select all of the sites shown.
- **11-5-9.** Zoom in to the upper right quadrant of the device.

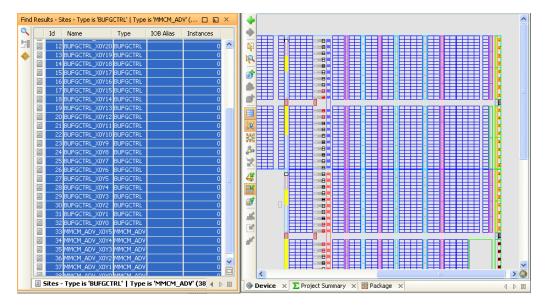


Figure 38: Locating GTP\_DUAL, DCM and BUFG Sites on Device

The MMCMs are at the top center and the BUFGs are along the middle I/O column of the device.

**11-5-10.** Select **Mark** from the right-click menu to place markers on these sites.

## 11-6. Use the Schematic to trace clock logic

You have now identified where to drag the various logic object types.

There were two searches performed with the Find command. Select the tabs at the bottom of the Find Results view to select which results to display.

- **11-6-1.** In the bottom of the Find Results view, select the Instances Type is Global Clock tab.
- 11-6-2. In the Find Result view, select the first DCM ADV Cell that appears in the list.

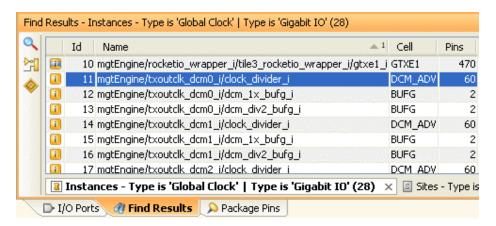


Figure 39: Selecting Clock Logic to Trace in the Schematic

11-6-3. In the Find Results view, click Schematic ...

Use the Schematic view and the Device view to observe net connectivity during clock logic placement.

11-6-4. In the Schematic view, select the Expand all logic outside selected the instance toolbar button X

Observe the logic connectivity of the two BUFGs.

- **11-6-5.** Double click the CLK\_IN port on the txoutclk\_dcm0\_1 module.
- **11-6-6.** Zoom in to observe the logic connection to the GTX instance (Figure 40).

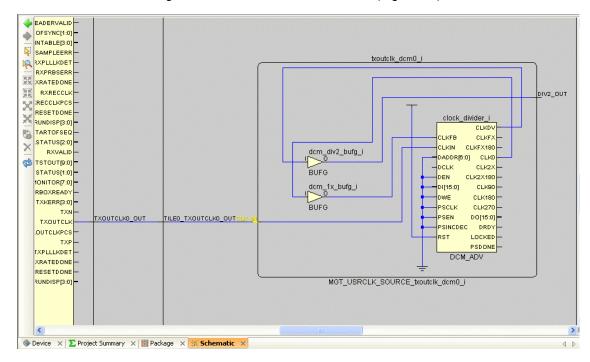


Figure 40: Exploring Clock Logic Connectivity

11-6-7. Click Close in the Schematic view tab.

The Schematic view closes.

## 11-7. Place the first set of DCM\_ADV and BUFGs.

11-7-1. In the Device view, toggle on the Show/Hide IO Nets button



- 11-7-2. In the Device view, click Create Site Constraint Mode
- 11-7-3. From the Find Results view, select and drag the top DCM\_ADV object onto the top MMCM site. As you drag the logic object, the cursor changes from a circle with slash to a "+" sign indicating that a legal site has been found.

XILINX. 43 www.xilinx.com

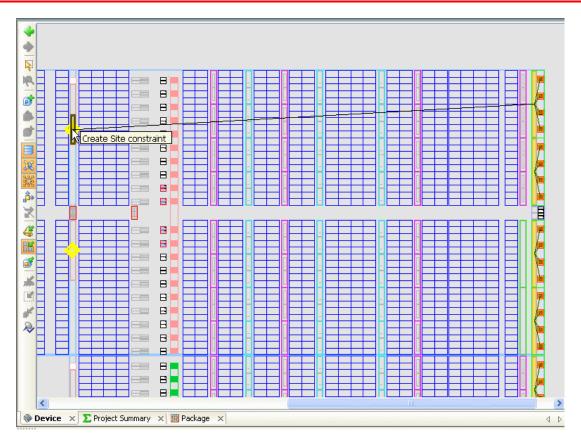


Figure 41: Placing the DCM\_ADV in Relation to the GTXE1

- **11-7-4.** In the Find Results view, select the BUFG directly under the DCM you just placed.
- **11-7-5.** Drag the BUFG onto a BUFG site on the top half of the device.



Figure 42: DCM on Top Half of Device

- **11-7-6.** Select and drag each of the DCM\_ADV objects from the Find Results view onto a DCM site. Use the Schematic view and the Device view to observe net connectivity during clock logic placement.
- **11-7-7.** In the Find Results view, go down the list of objects and place each of the four DCM\_ADVs and eight BUFGs as you just did for the first one.
- 11-7-8. In the main toolbar, click Unmark All or remove the markers on the Sites.
- 11-7-9. In the Find Results view, click Close.

**E** XILINX.

www.xilinx.com

45

## Step 12: View Multi-function pins/set Device Config Mode Step 12

## 12-1. View Multi-function pins.

**12-1-1.** Select the Package Pins view tab.

The Package Pins view tab is brought to the front.

12-1-2. Click Maximize

The Package Pins view is maximized.

12-1-3. Click Group by I/O Bank 🖺.

The list of Package pins is flattened.

- 12-1-4. Scroll over the columns in the list.
- 12-1-5. View the multi-function pins displayed under the Type field.

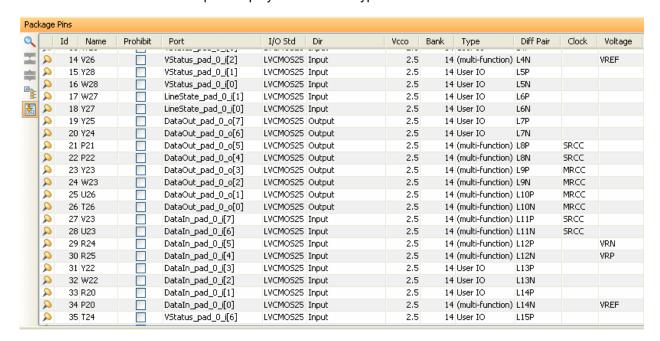


Figure 43: Viewing Multi-Function Pins

Examine the following columns:

- Device Configuration pins (Config)
- System Monitor
- Gigabit I/O

These logic objects can impact I/O assignment, since many of them rely on multi-function pins and have fixed I/O requirements. If the design used in this tutorial contained these logic objects, this table would be filled out allowing you to examine multi-function pins.

46 www.xilinx.com 

E XILINX.

## 12-2. Set Device Configuration Modes.

The PlanAhead software allows you to set one or more device configuration options. Some Configuration modes can also have an impact on multi-function I/O pins. The related pins are displayed in the Config column of the Package Pins view.

**12-2-1.** Select **Set Configuration Modes** from the right-click menu (Figure 44).

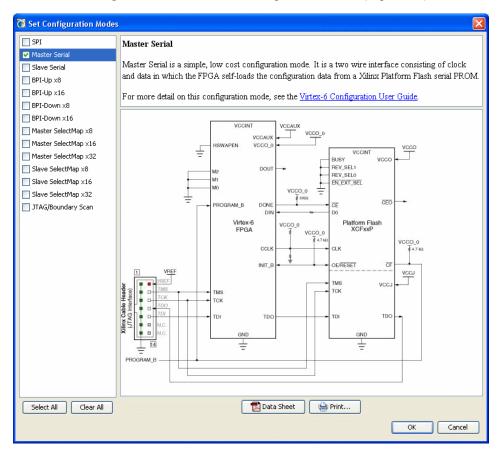


Figure 44: Selecting Device Configuration Modes

- **12-2-2.** Select several of the Modes and view the descriptions, schematics, and Data Sheets.
- 12-2-3. Click OK.
- **12-2-4.** Click **OK** in the Confirmation dialog box.

The pins associated with the selected Device Configuration Modes are now displayed in the Package Pins view allowing you to examine potential multi-function pin conflicts. As shown in the last step, there are no PCI, MCB, or other logic that could cause conflicts in this design.

- **12-2-5.** Click the Config column header twice to reverse sort the list.
- **12-2-6.** Scroll to the top to view the configuration pins.
- **12-2-7.** Click Restore

Package Pins view is minimized to the original location.

# 12-3. Restore the Netlist Design viewing area.

12-3-1. In the Netlist Design view banner, click the Restore design view button (Figure 45).



Figure 45: Restoring the View Layout back to the Original Size

# Step 13: Running DRC and SSN Analysis

Step 13

The PlanAhead software has an extensive set of I/O related DRC checks to be sure that I/O Ports were assigned accordingly. You can then explore and resolve those violations interactively.

Simultaneous Switching Noise (SSN) Analysis can also be performed to help identify potential signal integrity concerns.

## 13-1. Run the I/O related DRC checks.

- 13-1-1. In the Flow Navigator, click Run DRC.
- 13-1-2. Deselect the Floorplan, DSP48, RAMB16, and Netlist rule categories.

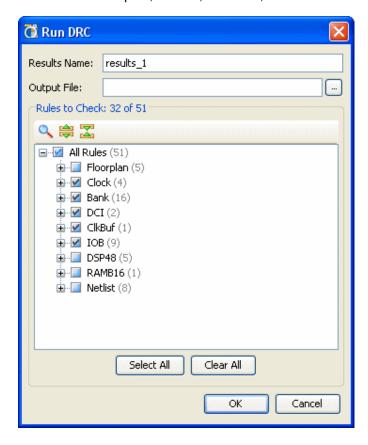


Figure 46: Run I/O Related DRCs

**13-1-3.** Expand the rules to examine the rule types.

#### 13-1-4. Click OK.

In this case, no violations were found. If your design reports violations, proceed regardless for purposes of this tutorial.

# 13-2. Run the Run Noise Analysis command to check for potential signal integrity.

- 13-2-1. In the Flow Navigator, click Run Noise Analysis.
- 13-2-2. Click OK in the Run SSN Analysis dialog box.

The SSN Results view opens.

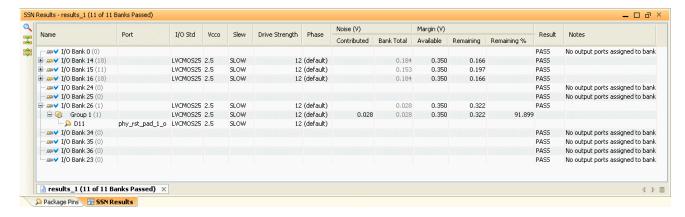


Figure 47: Examine SSN Results View

13-2-3. Maximize the SNN Results View by scrolling down and expanding the list of I/O Banks.

View the Noise information in the report, including Contributed Noise for each Group, Bank Total, Available and Remaining. The Status is PASS for all of the I/O Banks.

### 13-3. Exit PlanAhead.

- 13-3-1. Select File > Exit.
- 13-3-2. Click OK.

XILINX.

51

## Conclusion

In this tutorial, you:

- Used the I/O Planner I/O pin planning environment to explore device I/O resources and define alternate compatible devices for the design.
- Imported, created, and configured I/O Ports.
- Created Interfaces by grouping the related I/O Ports together.
- Used the semi-automatic placement modes to assign critical I/O Ports to package pins. Placement of the remaining I/O Ports was done using automatic placement.
- Exported and examined the I/O Ports list usable for HDL header or PCB schematic symbol generation.
- Opened a netlist-based project and placed GTs, DCMs, and BUFG objects using logic connectivity as a guide for correct placement.
- Ran DRCs and Noise Analysis to validate legal I/O placement.