


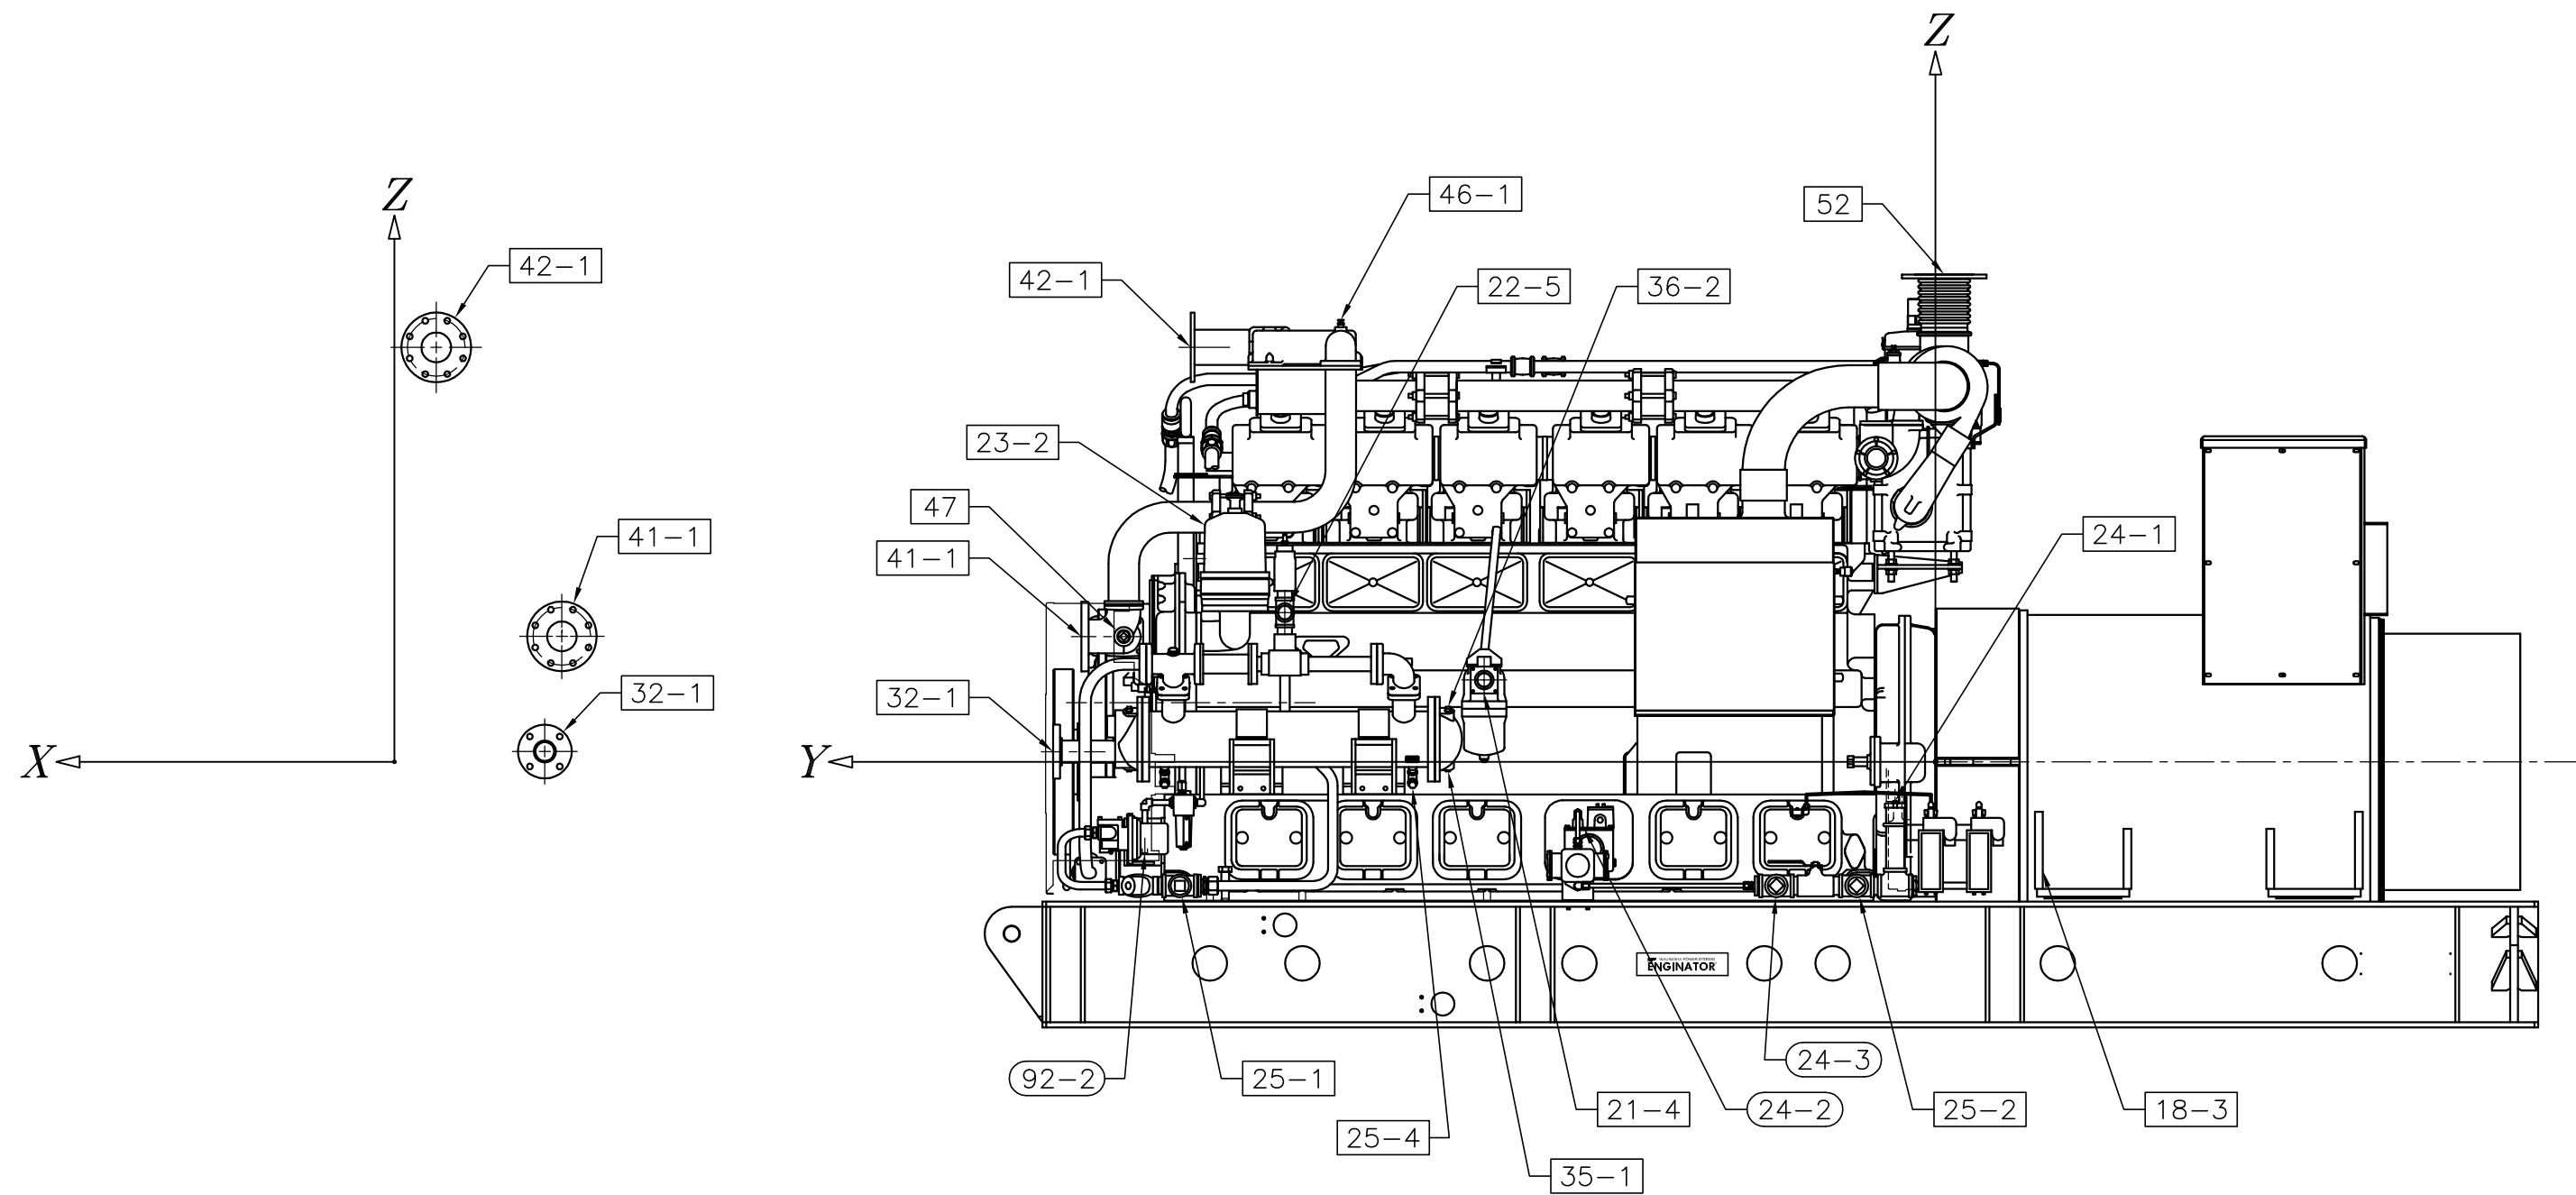

GENERATOR MODEL	ENGINATOR DRY WEIGHT KG [LBS]	GENERATOR WEIGHT KG [LBS]	A	B	C
LS661-01	13,450 [29,650]	4046 [8920]	477 [18.79]	844 [33.23]	14 [0.55]

CODE	CONNECTION	<i>X</i>	<i>Y</i>	<i>Z</i>	SIZE
13–2	E–STOP RIGHT BANK	437 [17.20]	1384 [54.49]	967 [38.07]	
18–1	ELECTRONIC CONTROL UNIT (ECU)	313 [12.31]	2178 [85.75]	444 [17.48]	SERVICE INTERFACE CONNECTION (RS232)
18–2	POWER DISTRIBUTION JUNCTION BOX (TB7)	607 [23.90]	2171 [85.47]	126 [4.96]	
18–3	UNIT GROUNDING CONNECTION (2)	SEE SHEET 1 & 2			M10 X 1.50
18–4	PRELUBE MOTOR STARTER JUNCTION BOX	317 [12.48]	2121 [83.50]	982 [38.66]	
18–5	GENERATOR LEAD CONNECTION	SEE SHEET 1 & 5			6X Ø14 [0.56] EACH
18–6	GENERATOR NEUTRAL CONNECTION	SEE SHEET 1 & 5			6X Ø14 [0.56]
18–8	CUSTOMER INTERFACE HARNESS CONNECTION	395 [15.54]	1245 [49.02]	142 [5.59]	
18–9	LOCAL CONTROL HARNESS CONNECTION	635 [25.00]	1948 [76.69]	111 [4.37]	
18–23	DC JUNCTION BOX (TB6)	753 [29.66]	1235 [48.62]	–344 [–13.54]	
18–24	GENERATOR ACCESSORY JUNCTION BOX (TB3)	–415 [–16.34]	–1453 [–57.20]	636 [25.04]	
21–4	LUBE OIL INLET FROM OIL FILTER	–629 [–24.76]	1489 [58.62]	270 [10.68]	[1.50”–11.5 NPT]
22–5	LUBE OIL OUTLET TO OIL FILTER	–713 [–28.07]	2147 [84.53]	493 [19.41]	[1.50”–11.5 NPT]
23–1	LUBE OIL DIPSTICK	393 [15.49]	1684 [66.30]	–205 [–8.07]	
23–2	MICROSPIN OIL CENTRIFUGE	–741 [–29.17]	2311 [90.98]	422 [16.61]	
24–1	LUBE OIL FILL	–730 [–28.74]	133 [5.24]	–152 [–5.98]	
25–1	LUBE OIL DRAIN (FRONT)	–607 [–23.88]	2493 [98.15]	–409 [–16.10]	[2.00”–11.5 NPT]
25–2	LUBE OIL DRAIN (REAR)	–787 [–30.98]	260 [10.24]	–409 [–16.10]	[2.00”–11.5 NPT]
25–4	LUBE OIL COOLER PIPING DRAIN	–470 [–18.49]	1726 [67.95]	–71 [–2.80]	[0.75”–14 NPT]
31–1	AUXILIARY WATER INLET	576 [22.68]	2387 [93.98]	–240 [–9.45]	[1.50”–11.5 NPT]
32–1	AUXILIARY WATER OUTLET	–496 [–19.53]	2911 [114.61]	34 [1.34]	[2.50” ANSI 150#] FF FLANGE
35–1	AUXILIARY WATER COOLER DRAIN	–467 [–18.38]	1608 [63.32]	–18 [–0.72]	[0.25” NPT]
36–1	AUXILIARY WATER AIR VENT AFTERCOOLER	103 [4.05]	–123 [–4.83]	1110 [43.72]	[0.375”–18 NPT]
36–2	AUXILIARY WATER AIR VENT OIL COOLER	–575 [–22.63]	1608 [63.32]	169 [6.64]	[0.25” NPT]
41–1	JACKET WATER INLET	–552 [–21.73]	2818 [110.94]	414 [16.30]	[4.00” ANSI 125#] FF FLANGE
42–1	JACKET WATER OUTLET	–138 [–5.43]	2457 [96.73]	1367 [53.82]	[4.00” ANSI 125#] FF FLANGE
45–2	JACKET WATER CRANKCASE DRAIN RIGHT BANK	175 [6.90]	338 [13.31]	414 [16.30]	[0.75”–14 NPT]
46–1	JACKET WATER AIR VENT	–506 [–19.92]	1962 [77.24]	1447 [56.97]	[0.375”–18 NPT]
47	JACKET WATER STATIC LINE CONNECTION	–619 [–24.36]	2678 [105.44]	413 [16.27]	[1.25”–11.5 NPT]
52	EXHAUST GAS OUTLET (SEE NOTE K)	0 [0.00]	–29 [–1.14]	1607 [63.27]	[6.00” ANSI 125#] FF FLANGE
61–1	AIR CLEANER	–744 [–30.49]	664 [26.15]	404 [15.91]	
71–1	MAIN FUEL INLET	762 [30.00]	1754 [69.05]	128 [5.04]	[2.00”–11.5 NPT]
83–4	ENGINATOR LIFTING	SEE SHEET 1, 2 & 3			Ø51 [Ø2.00]
83–8	UNIT MOUNTING (ISOLATOR)	SEE SHEET 3			[0.63–11 UNC–2B] SEE NOTE R
83–5	UNIT MOUNTING (SOLID BASE MOUNTING)	SEE SHEET 3			Ø29 [Ø1.13]
83–7	UNIT JACKING	SEE SHEET 3			[0.63–11 UNC–2B]

CODE	CONNECTION	<i>X</i>	<i>Y</i>	<i>Z</i>	SIZE
EV98	ELECTRIC STARTING MOTOR SOLENOID	544 [21.43]	336 [13.22]	104 [4.09]	[0.50–13 UNC] THREADED STUDS
EW18	IPM–D (IGNITION POWER MODULE – DIAGNOSTIC)	358 [14.08]	468 [18.43]	276 [10.87]	

ENGINATOR® NOTES

- A. REFERENCE DIMENSIONS: *X–Y* PLANE – CENTERLINE OF CRANKSHAFT
X–Z PLANE – REAR FACE OF CRANKCASE
Y–Z PLANE – ENGINE CENTERLINE
- B. SHIM UNIT TO OBTAIN LEVEL MOUNTING (SOLID MOUNTING).
ADJUST ISOLATORS TO OBTAIN LEVEL MOUNTING (ISOLATOR MOUNTING).
- C. ALL CONNECTIONS TO UNIT MUST BE FLEXIBLE. SEE PC2102C FOR
INSTALLATION INSTRUCTIONS.
- D. GROUND UNIT. SIZE PER LOCAL ELECTRICAL CODE.
- E. DUE TO SHIMMING ALL VERTICAL DIMENSIONS CAN VARY +6/–0 [+0.25”/–0]
- F. ALL GAS VENTED OR DISCHARGED FROM UNIT SHOULD BE PIPED TO A SAFE
AREA TO MEET APPLICABLE CODES.
- G. LUBE OIL CAPACITY – 273 LITERS [73 GAL].
- H. COOLANT CAPACITY – JACKET WATER 184 LITERS [49 GAL].
AUXILIARY WATER 30 LITERS [8 GAL].
- K. EXHAUST SYSTEM BEYOND THIS POINT MUST SUPPORT ITS OWN WEIGHT
AND THERMAL EXPANSION. † MAXIMUM DISTORTION DUE TO CUSTOMERS
PIPING. SEE S8242 EXHAUST SYSTEM INSTALLATION GUIDELINES.
- L.  INDICATES STANDARD EQUIPMENT/CONNECTION.
 INDICATES FACTORY OPTION EQUIPMENT/CONNECTION.
- M. CONNECTION 91–2 IS ONLY REQUIRED WHEN ELECTRIC STARTING IS ORDERED.
WHEN AIR STARTING IS ORDERED, THE PRELUBE AIR SUPPLY IS INTERNALLY
CONNECTED TO THE AIR STARTING INLET.
- N. OIL LEVEL REGULATOR INLET PRESSURE REQUIREMENTS:
4.83–59.98 KPA [0.7–8.7 PSI] – 5203 OR 5205 – REGULATOR WITHOUT FLOW METER
24.13–689.48 KPA [3.5–100 PSI] – 5204 OR 5204A – REGULATOR WITH FLOW METER
- P. DIMENSIONS ARE IN MILLIMETERS. DIMENSIONS IN [] ARE IN INCHES.
-  ESTIMATED UNIT DRY CENTER OF GRAVITY
- Q. EXPLOSION RELIEF VALVE PLACEMENT MAY VARY DUE TO OTHER ENGINE ACCESSORIES.
- R. INSTALL THE VIBRATION ISOLATOR LOCKING BOLT THROUGH THIS HOLE. THE THREADS
ON THIS HOLE WILL NOT BE USED FOR THIS APPLICATION.