



POTS (positions from the panel render)

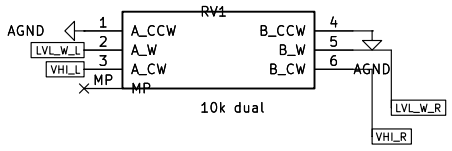

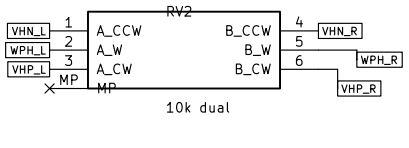


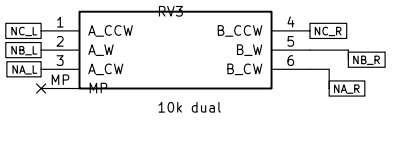

CABLE TO THE MAIN BOARD

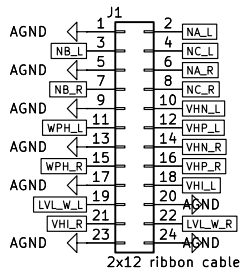

PWR_FLAG (for the ERC check only)



Generated by pcb/tools/leggibile.py from the same netlist as the PCB: do not edit by hand

Sheet: /
File: fx-send-comandi.kicad_sch

Title: maelcum FX-SEND control board — draft v0.2 — readable schematic

Size: User	Date:	**Rev: 0.2-draft**
KiCad E.D.A. 10.0.7		Id: 1/1