


POTS (positions from the panel render)

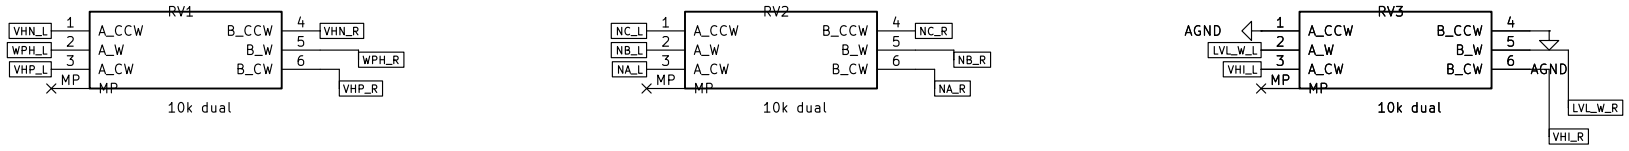

CABLE TO THE MAIN BOARD

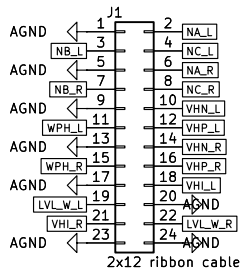

PWR_FLAG (for the ERC check only)



Generated by pcb/tools/leggibile.py from the same netlist as the PCB: do not edit by hand		
Sheet: / File: fx-send-comandi.kicad_sch		
Title: maelcum FX-SEND control board – draft v0.2 – readable schematic		
Size: User	Date:	**Rev: 0.2-draft**
KiCad E.D.A. 10.0.7		Id: 1/1