2 Complete Care programming

Spyke, Sherpa Slim and EDEN04-XP: settings from the app and programming from the Spyke display.

PRECONDITIONS


ⓘ **Additional Global Service app permissions (granted by STEM Technical Support)**

Spyke, Sherpa Slim and EDEN04-XP make up the integrated Complete Care system: stretcher support, assisted loading system and stretcher communicate with each other for synchronised loading and unloading operations.

SETTINGS FROM THE GLOBAL SERVICE APP


1

Download and open the STEM Global Service app (available on the App Store and Google Play Store).

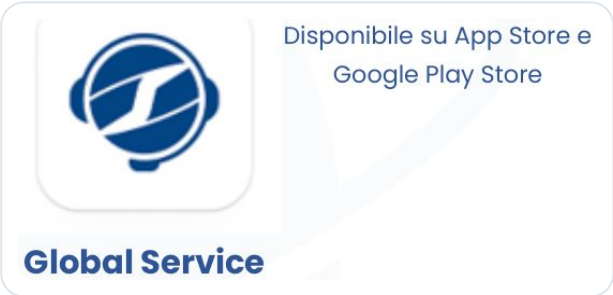

2

Access the Sherpa Slim device page (check the product serial number).

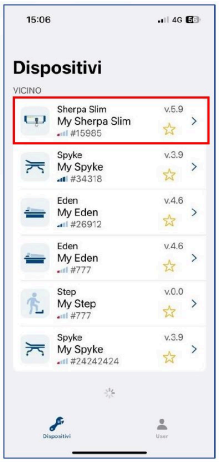

3

Select "SUPPORT" and choose "AUTOMATIC" for the EDEN04-XP stretcher support.





4

Select "STRETCHER" and choose "Spyke".

Note: this setting disables the Sherpa Slim buttons on the foot-side push-button panel of the support. It is mandatory, as loading and unloading with the Sherpa Slim must be controlled exclusively with the IN/OUT buttons on the Spyke display.





5


Access the Spyke device page (check the product serial number).



6

Select "SHERPA PAIRING" and choose the Sherpa Slim detected by the scan.



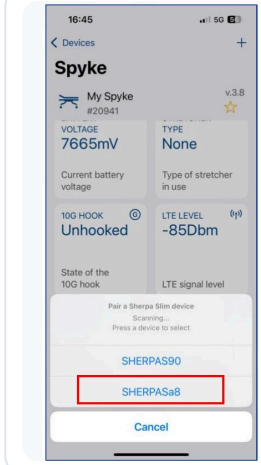

7

Check that the connection is correct: the word "Sherpa" on the Spyke display must be green.



ENABLING PROGRAMMING

ⓘ The additional Global Service app permissions are required; they are granted exclusively by STEM S.r.l. Technical Support.

8

Switch off the Sherpa Slim using the I/O switch.




9

Check that the Spyke stretcher display is on the main screen.



10


Open the Global Service app and access the Spyke device page.

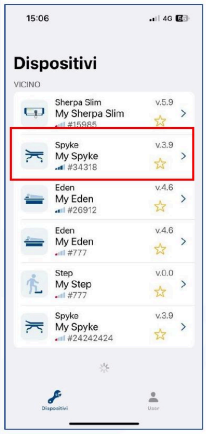

11


Select the + icon, then the Settings icon.

Note: these icons are not visible to the basic user: the additional permissions must be requested from STEM Technical Support.

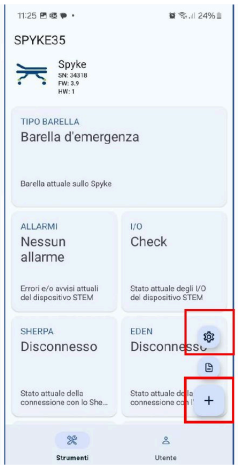


12

Select "Enable Sherpa Slim programming".

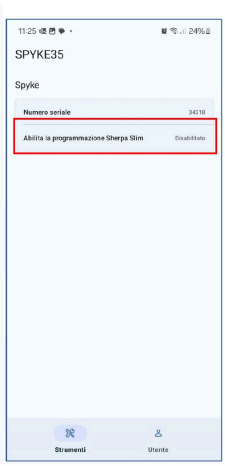

13


Switch the Sherpa Slim back on using the I/O switch.

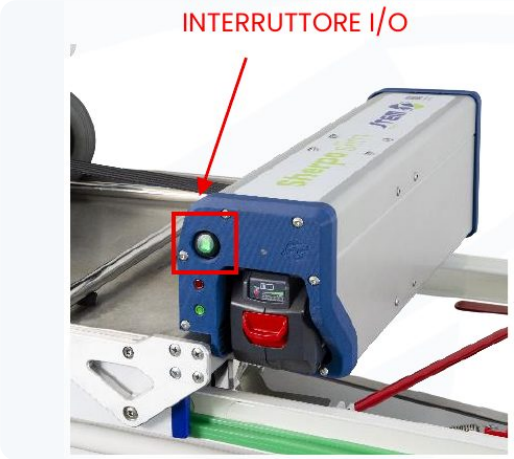

PROGRAMMING FROM THE SPYKE DISPLAY

14

Before starting, check that the Spyke and the EDEN04-XP extractable tray are in the loading position (tray extended and at the correct loading height) and that the Spyke is hooked to the Sherpa Slim belt.

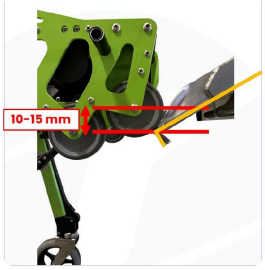



15

Access the "Sherpa" menu by selecting the icon on the display.




16

Access the "Cfg" (Configuration) menu to select the stretcher support.



17


Select "Eden XP" for the EDEN04-XP support and confirm with "Set".

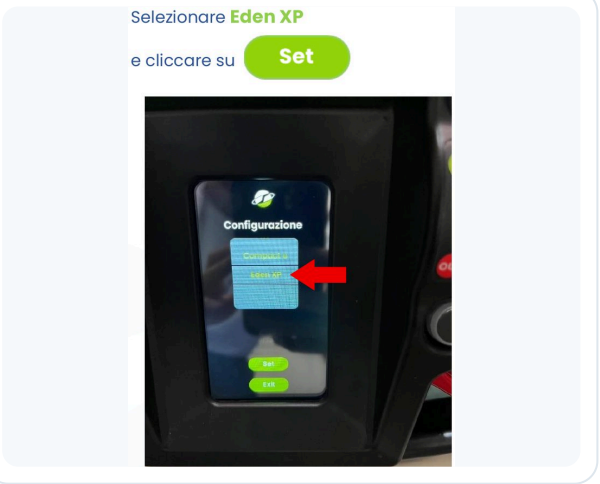

18 Exit with "Exit" and access the "Sherpa" menu again.


19

Access the "Prog" (Programming) menu.

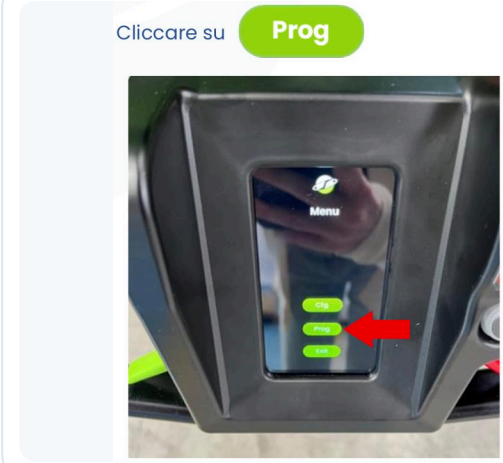

20

First point: Spyke hooked to the Sherpa Slim, in front of the EDEN04-XP, with the tray extended and at the correct loading height. Enable the Load, Unload and Stop options and select "Save".

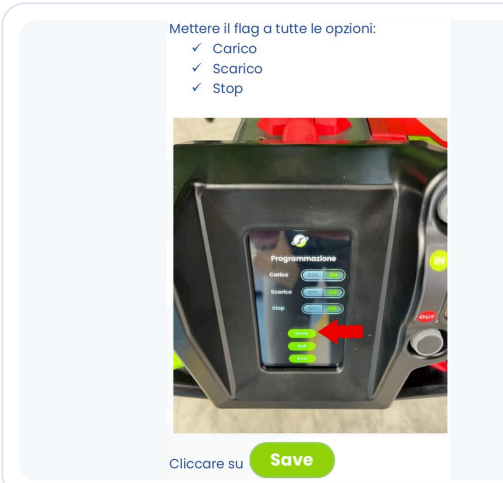


21

Load the Spyke onto the EDEN04-XP by pulling the green lever and pressing the IN button. Stop loading while the rear wheels are still outside the platform, in order to adjust them and prevent them from getting stuck.

22

Second point (rear wheels still outside the platform): enable the Load and Stop options and select "Save".

Note: with this point the Sherpa Slim stops automatically, allowing the swivel of the rear wheels to be locked before loading continues.

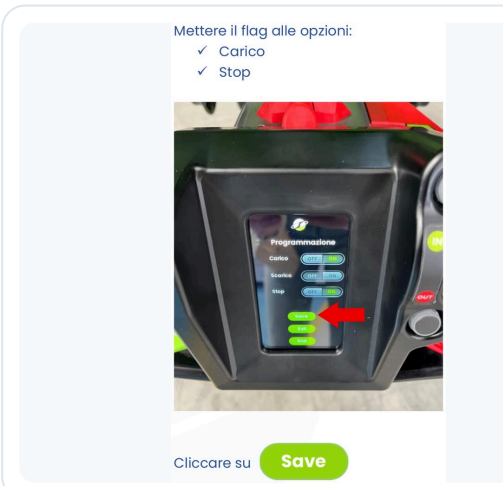

23 Continue loading the Spyke until it is fully inserted, pulling the green lever and pressing the IN button.

✓ **Stretcher correctly hooked: the green «10g» padlock appears on the display.**


24

Bring the EDEN04-XP extractable tray to the horizontal position using the UP arrow on the foot-side push-button panel of the support.



25

Third point, end of programming: with the Spyke fully loaded and the EDEN04-XP in the horizontal position, select "End".

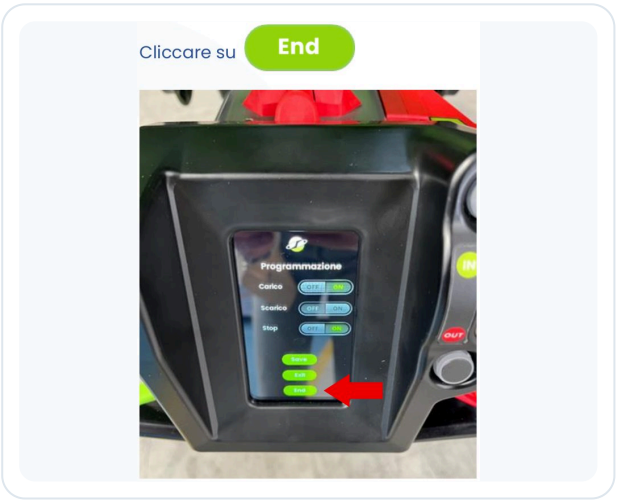

26 Programming completed: select "Exit" to return to the main screen of the display.