1 Device programming

Learning the loading positions with the STEM Global Service app.

PRECONDITIONS ⓘ **STEM Global Service app with Bluetooth and GPS enabled**

⚠ During programming, the safety belt locking systems are disabled: pay particular attention to any sudden movements of the stretcher.

ⓘ The device is designed for 3 types of stretchers: two-control leg release (one control per leg), single-control leg release (one control for both legs) and automatic leg release.

PREPARATION


1 Make sure that the support is adjusted to the correct stretcher loading height.
Note: refer to the support manual.

2 Place the stretcher on the ground, in front of the support.

3 Place the stretcher support in loading/unloading position.
Note: refer to the support manual.

4 Switch on the device using the ON/OFF button (A).


Audible signal: device switched on.

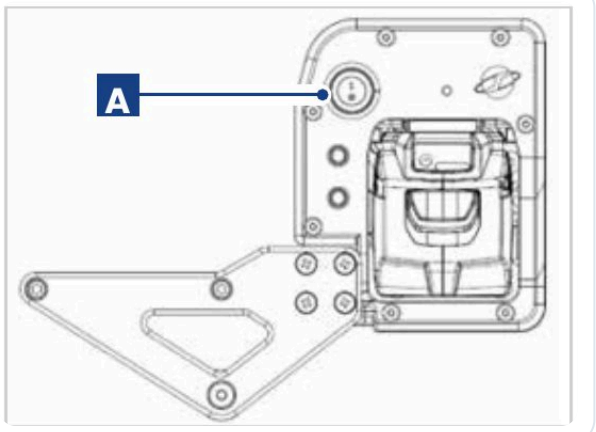

5

Press the "Down movement" button on the push-button panel on the side of the stretcher support and unwind the belt until it reaches the stretcher.

Note: during unwinding, the belt must be kept tensioned.

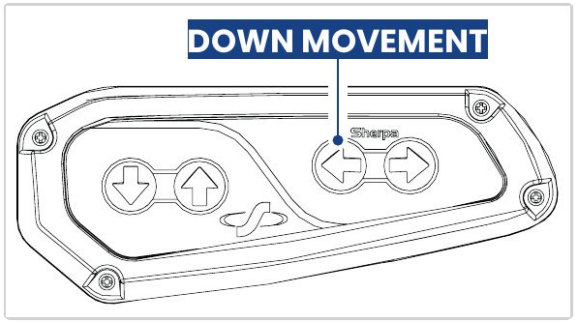


6

Connect the device belt to the stretcher.
Note: refer to the section "Connecting the stretcher to the device".

STARTING THE LEARNING


7

Open the STEM "Global Service" app and, once the scan for nearby devices is complete, select the Sherpa Slim to be programmed.

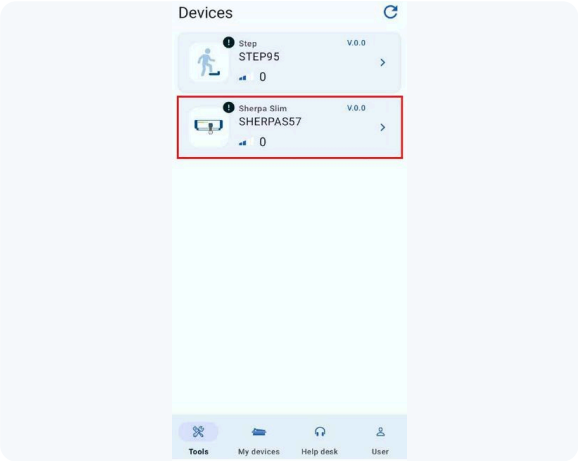

8


Select "Programming mode" and, from the "Disabled" status, choose "Enable".

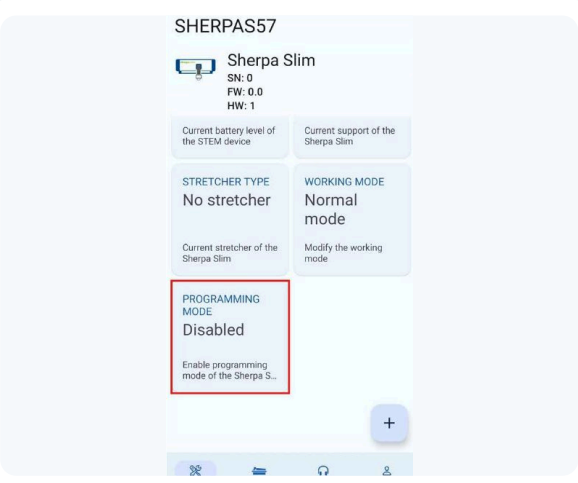

9

Select "Programming mode" again (now "Enabled") and choose "Start programming".

Audible signal: the device enters "Programming mode". The ON/OFF button LED turns off and the red and green LEDs start flashing.

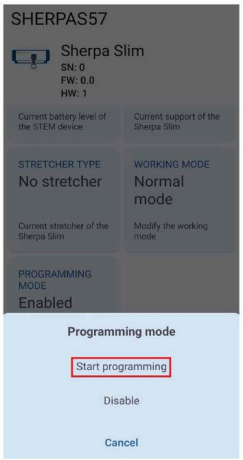


STORING THE POINTS

10

Move the stretcher to approximately 40 cm from the support.


Note: the stretcher support must be in the loading position.

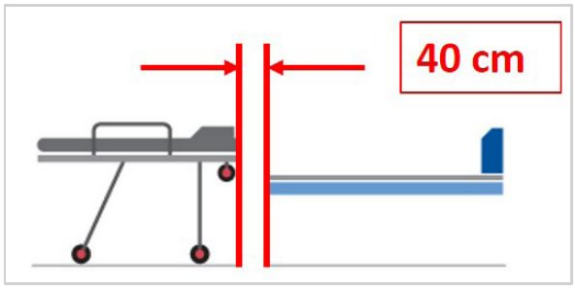

11


Select "Save point", enable the "Ascent", "Descent" and "Stop" options and confirm with "Ok".

Audible signal: point stored.

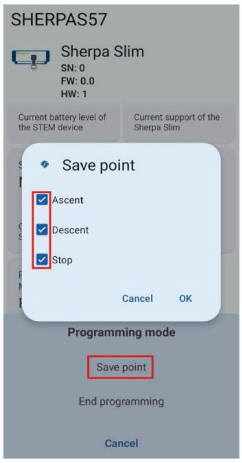

12

Using the device, lift the stretcher onto the support until the first leg is approximately 4 cm from the support edge.

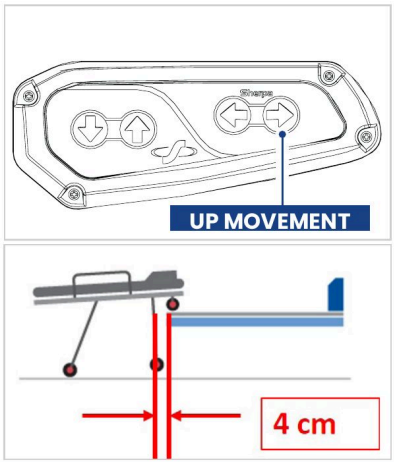


13

Select "Save point", set the "Ascent", "Descent" and "Stop" options and confirm with "Ok".


Note: select the options according to the desired result: stopping the movement or only slowing it down (in that case DO NOT select "Stop"), only during loading, only during unloading or in both phases.

Audible signal: point stored.

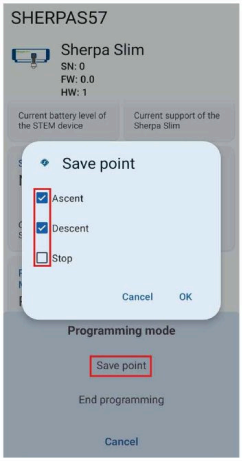

14


Continue lifting the stretcher until the second leg is approximately 4 cm from the support edge.

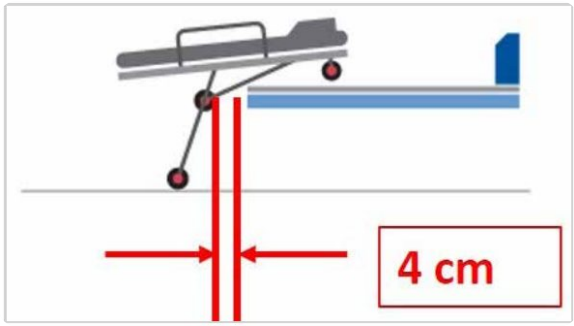

15 Select "Save point", set the "Ascent", "Descent" and "Stop" options and confirm with "Ok".


Note: using the same procedure, 9 more positions can be stored, for a total of 11 intermediate positions in addition to the start point (stretcher completely out, step 10) and the end point (stretcher fully loaded, step 16).

Audible signal: point stored.

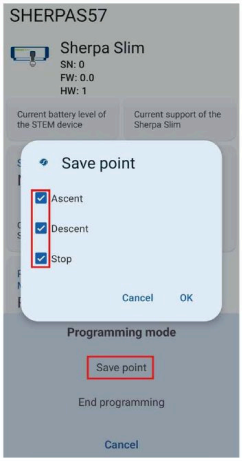

END OF LEARNING

16 Complete the lifting of the stretcher until it reaches the final locking position, then bring the stretcher support plane to the horizontal position.

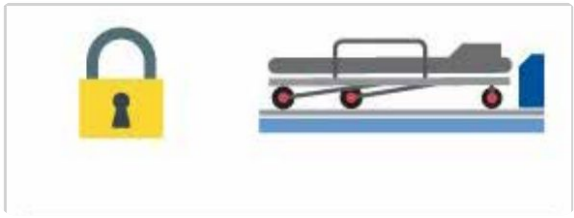

17 Select "End programming".

Note: the ON/OFF button LED indicates whether a programme is stored: on = learning completed and programme stored; off = no programme stored.

Double audible signal and the red and green LEDs on the side of the device stop flashing: programming completed successfully.

