1 Machine zeroing

Zero calibration of wheels, head area and legs area.

PRECONDITIONS ⓘ **Access PIN: 151010**

ACCESS TO CALIBRATION

1

Press both handles simultaneously and adjust the height using the UP/DOWN lever.



2

Lower the Spark platform completely.




3

Select the Settings icon on the display.




4

Enter the access PIN 151010 and select the confirm icon.

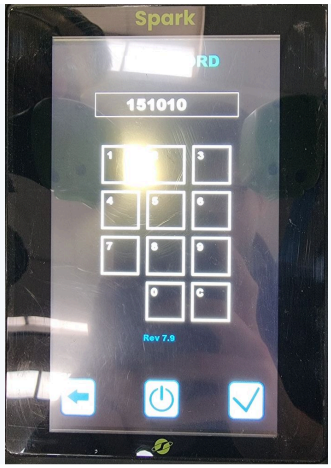


5

In the parameters screen, select the Home icon.

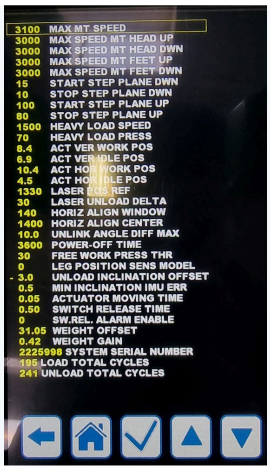


6

In the Home screen, select the Measure icon (compass).

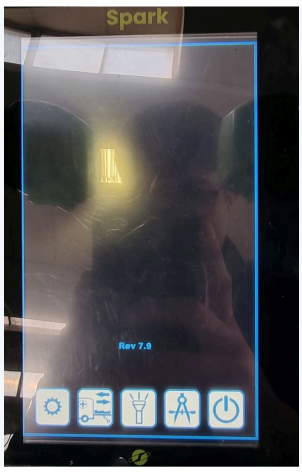

7

The calibration screen opens, from which each component of the Spark can be zeroed: the four wheels, the head area and the legs area.

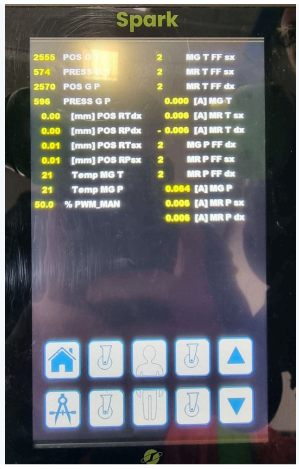


ZEROING THE COMPONENTS

ⓘ For each component: select the corresponding icon and hold down the Down arrow until the audible signal is emitted. Then release the arrow and deselect the icon.

8

Head-side legs: select the torso icon and hold down the Down arrow.


Audible signal: zeroing completed.
Release the arrow and deselect the torso icon.

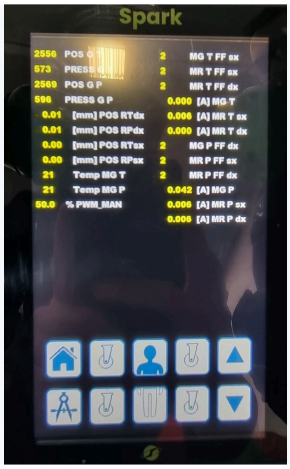

9

Foot-side legs: select the legs icon and hold down the Down arrow.


Audible signal: zeroing completed.
Release the arrow and deselect the legs icon.

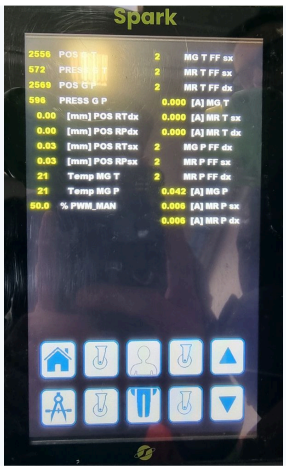

10

Right wheel, foot side: select the wheel icon and hold down the Down arrow.


Audible signal: zeroing completed.
Release the arrow and deselect the wheel icon.

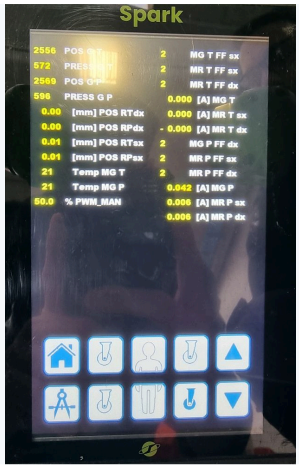

11

Left wheel, foot side: select the wheel icon and hold down the Down arrow.


Audible signal: zeroing completed.
Release the arrow and deselect the wheel icon.

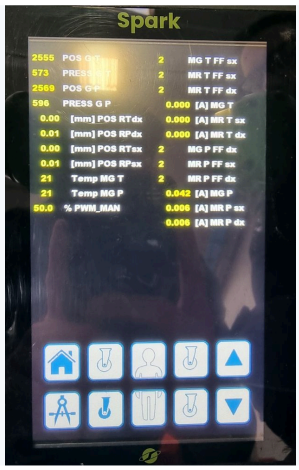

12

Left wheel, head side: select the wheel icon and hold down the Down arrow.


Audible signal: zeroing completed.
Release the arrow and deselect the wheel icon.

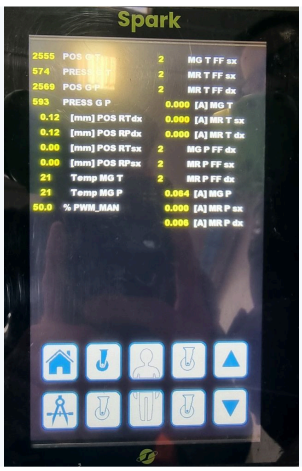

13

Right wheel, head side: select the wheel icon and hold down the Down arrow.


Audible signal: zeroing completed.
Release the arrow and deselect the wheel icon.

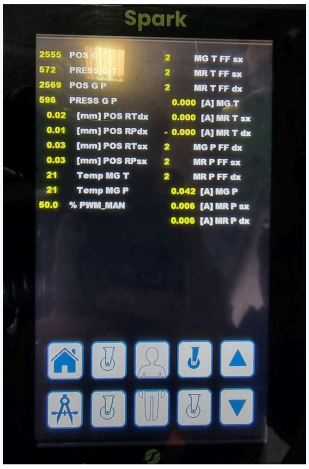

SAVING AND EXIT


14

Deselect all icons and hold down the Measure icon (caliper) to store the new parameters.

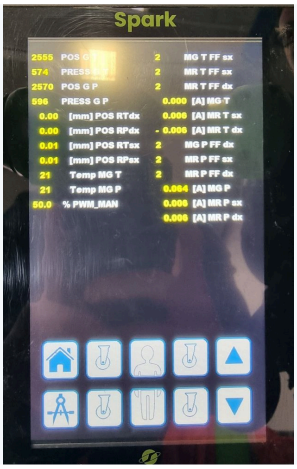


15

Select the Home icon to return to the main screen.

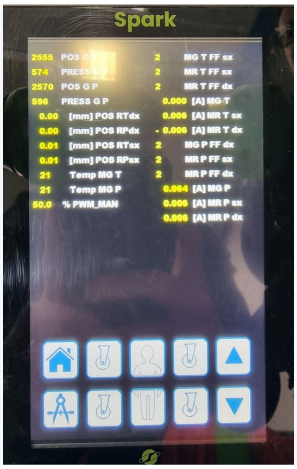


16

Select the Ambulance icon.

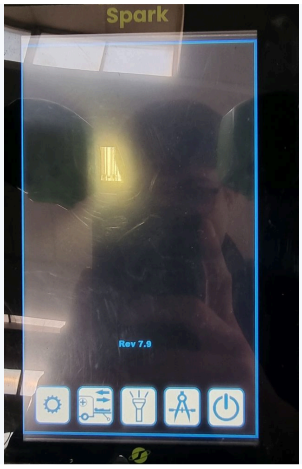

17

Select the Gear icon.

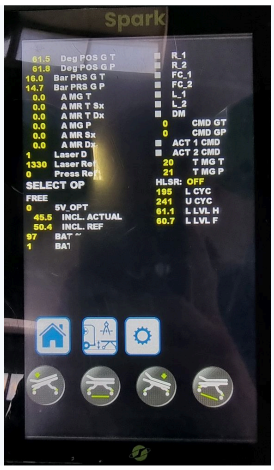

18

Select the Back arrow.

