2 Loading height

Adjusting and storing the loading height (IS000039).

PRECONDITIONS


Required dimension: 20 mm between the gyroscopic head sphere and the bottom of the receptacle

Access PIN: 151010

HEIGHT ADJUSTMENT

1

Fully pull out the receptacle and the intermediate slide assembly from the base slide assembly, checking that they are completely released.

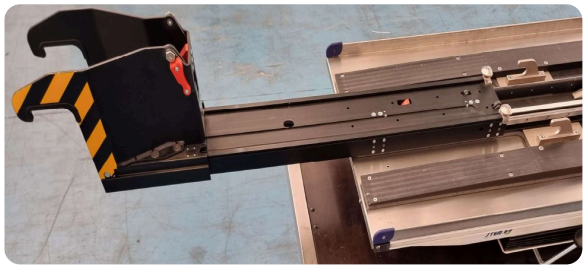

2

Press both handles simultaneously and adjust the height using the UP/DOWN thumbwheel.



3

Position the Spark at a height that gives 20 mm between the gyroscopic head sphere and the bottom of the receptacle.



SAVING


4

Select the Settings button to access the parameters menu.




5

Enter the access PIN 151010 and select the confirm button.

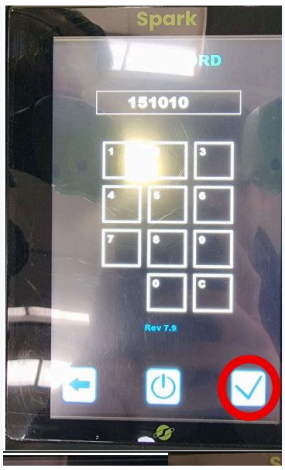

6


Select the Home button and then the Ambulance button.

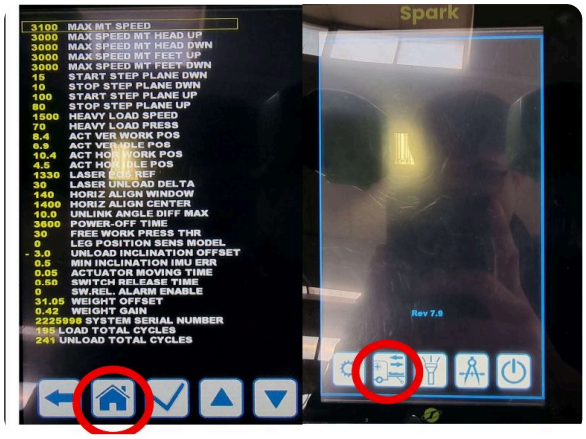

7

Hold down the Loading height button until the audible signal is emitted.


Audible signal: loading height stored.

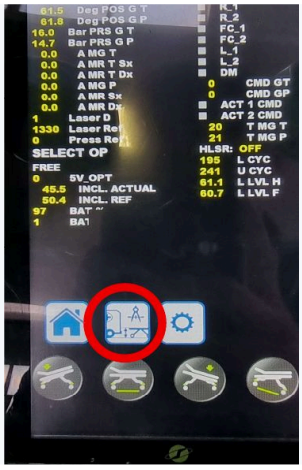

EXIT

8

Select the Gear button to return to the start page.

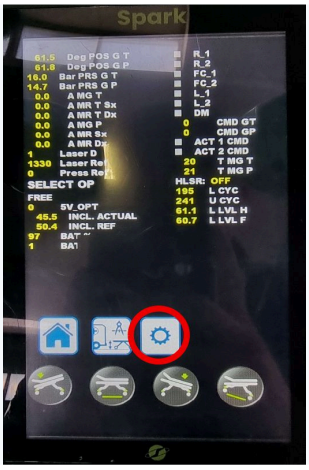

9

Select the Back arrow.

