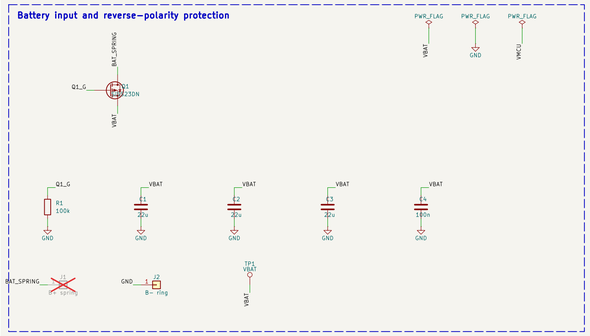
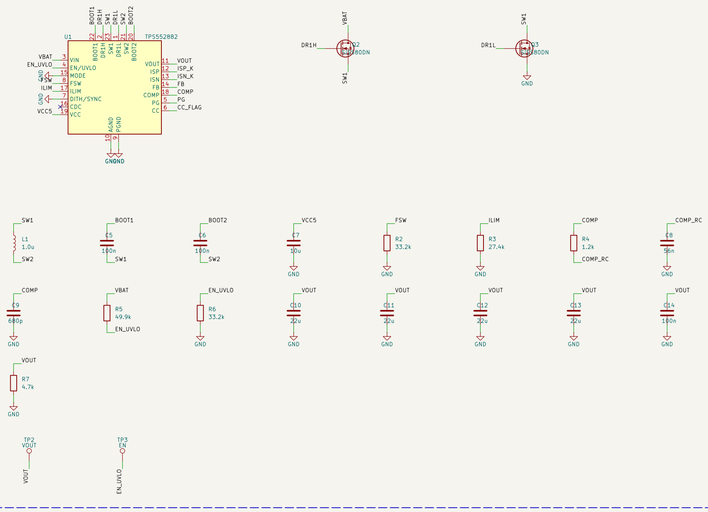
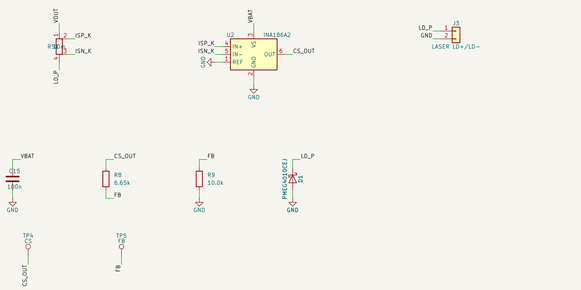
## Battery input and reverse-polarity protection



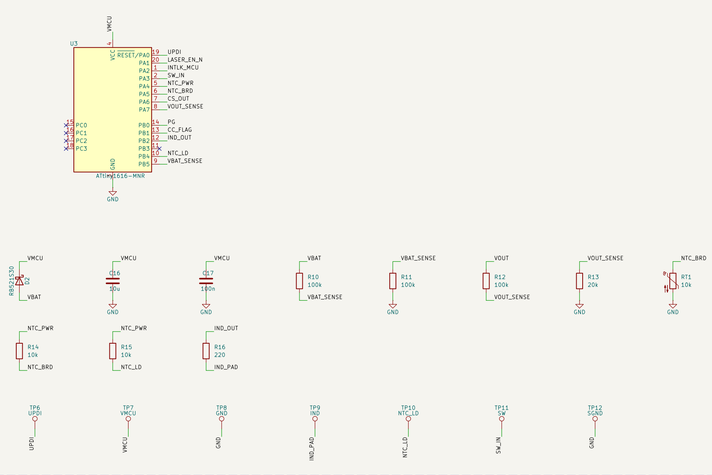

## TPS552882 4-switch buck-boost power stage



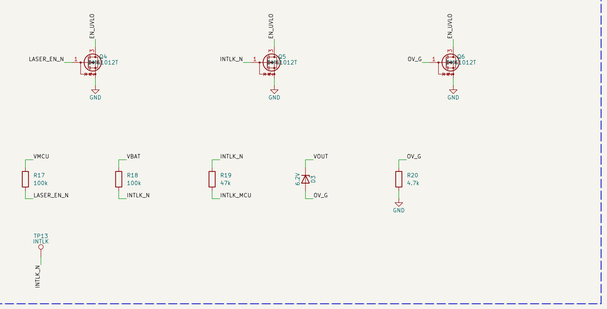

## Laser current sensing, regulation feedback and output




## ATtiny1616 control, monitoring and user interface




## Hardware enable chain: default-off, interlock, over-voltage backstop





Class 4 laser product: see documentation/testing for safety requirements
Battery polarity: centre spring = B+, ring = B- (REQ-BAT-04/DD-12: marked on the silkscreen)
Generated from engineering/design/connectivity.yaml — do not edit by hand


**NUBM44 driver project**

Sheet: /
File: nubm44_driver.kicad_sch

***Title: NUBM44 driver — Variant B (evaluation board)***

| Size: A1 | Date: 2026-10-24 | **Rev: A** |
|---|---|---|
| KiCad E.D.A. 10.0.6 | | Id: 1/1 |