
SmartMTR-ESP32 Quick Start

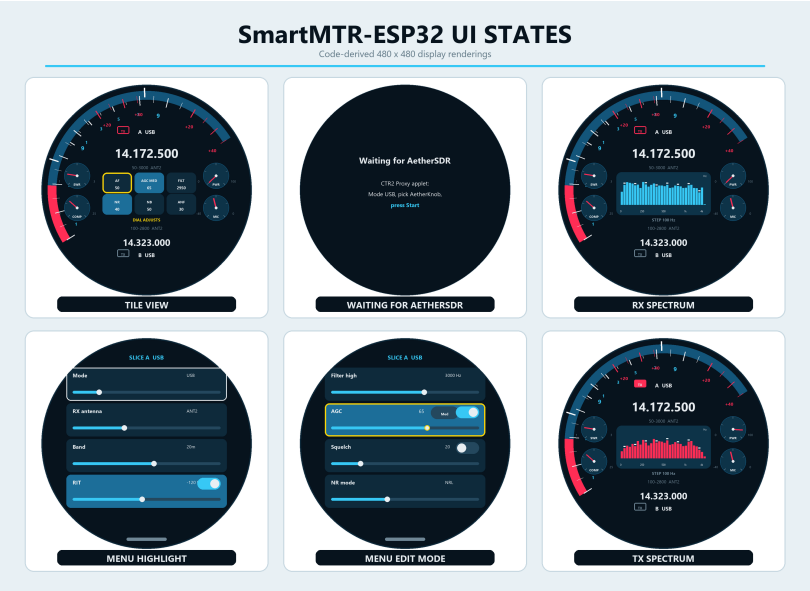

Controls and displays are derived from the current source. Display bring-up, touch orientation, encoder counts, and the meter path have not yet been fully verified on hardware.

First connection

1. Connect SmartMTR-ESP32 to the AetherSDR PC through USB-5V-IN.
2. Start AetherSDR and connect it to the FlexRadio.
3. Open the CTR2 Proxy applet in AetherSDR.
4. Select USB as the mode.
5. Select AetherKnob (**AETHER_KNOB**) as the device.
6. Press Start.
7. Expect Waiting for AetherSDR first; the main display appears after the station binding succeeds.
8. Activate the required slice in AetherSDR. Its frequency and meter data appear on the controller.
9. Turn the rotary dial and verify that the active slice tunes by the displayed step.
10. If required, tap a slice's TX area to select it as the TX slice. This does not key the transmitter.

Compact control reference

Action	Result
Turn rotary dial	Tune active slice; adjust value in parameter/menu edit mode
Short dial click	Next tuning step; leave parameter edit mode
Hold dial for 0.6 s	Toggle tune lock; go back/close while in the menu
Tap a tile	Select parameter for the dial; yellow outline
Hold AF/AGC	Step through AGC mode
Hold FILT	Select next tuning step
Hold NR/NB/ANF	Toggle the function
Swipe down	Open menu when the radio link is bound
Swipe sideways	Switch between tiles and spectrum
Tap a TX area	Select TX slice; does not key transmitter

If the spectrum is absent, the tiles remain available. If Waiting for AetherSDR remains on screen, stop CTR2 Proxy, check the USB device and mode, then start it again. Safe restart: stop the proxy, briefly press RESET, wait for **AETHER_KNOB**, and restart the proxy.