
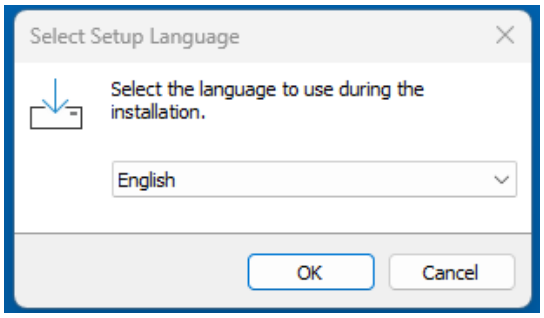
# Instructions for install Management Software & Deploying Redirection

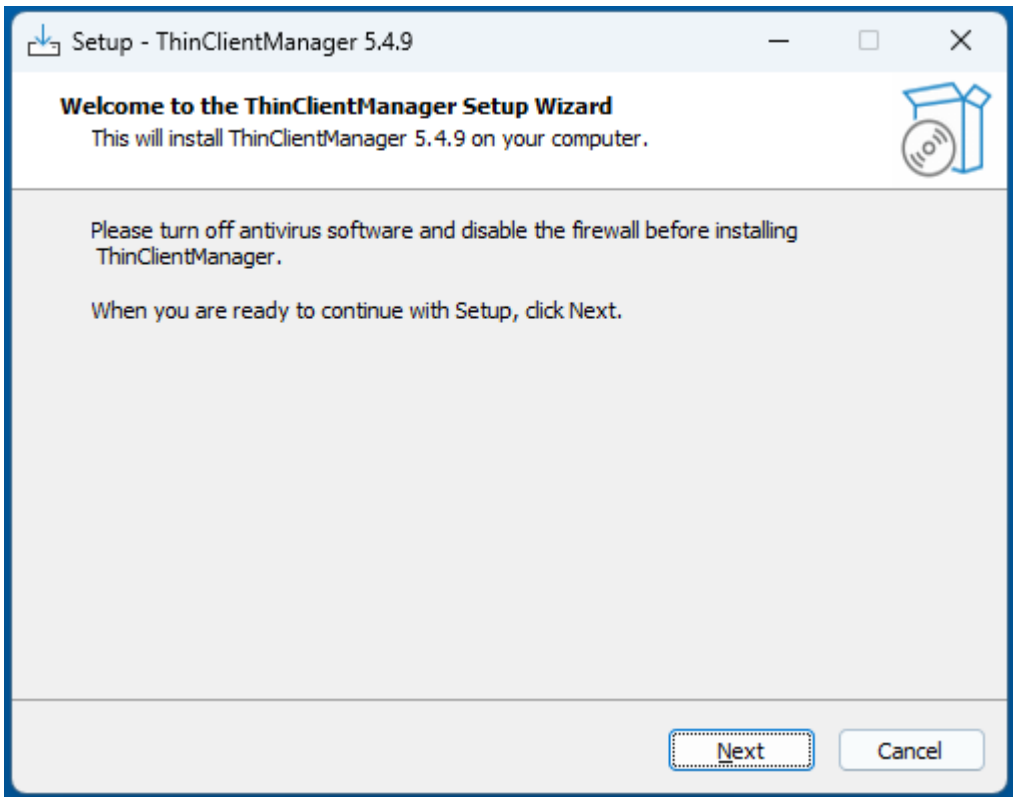
## 1. Server-side

1.1 Install ThinClientManagerInstaller 5.4.9 on the server

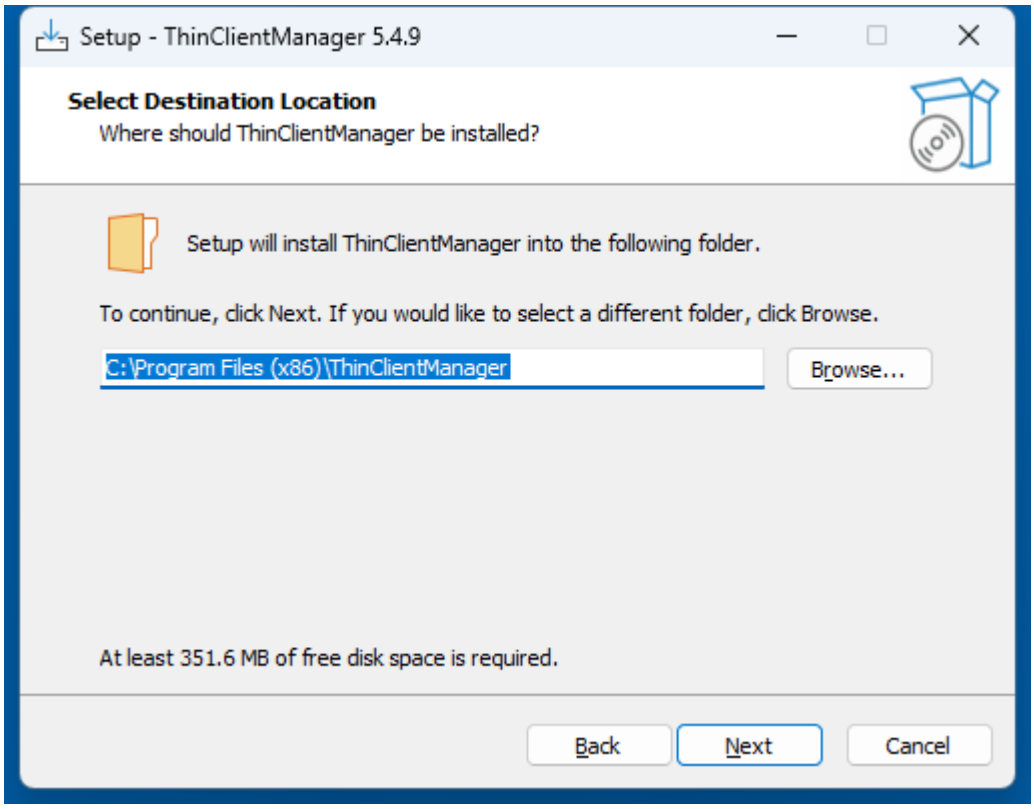



Double-click Install, select the language, and click Next

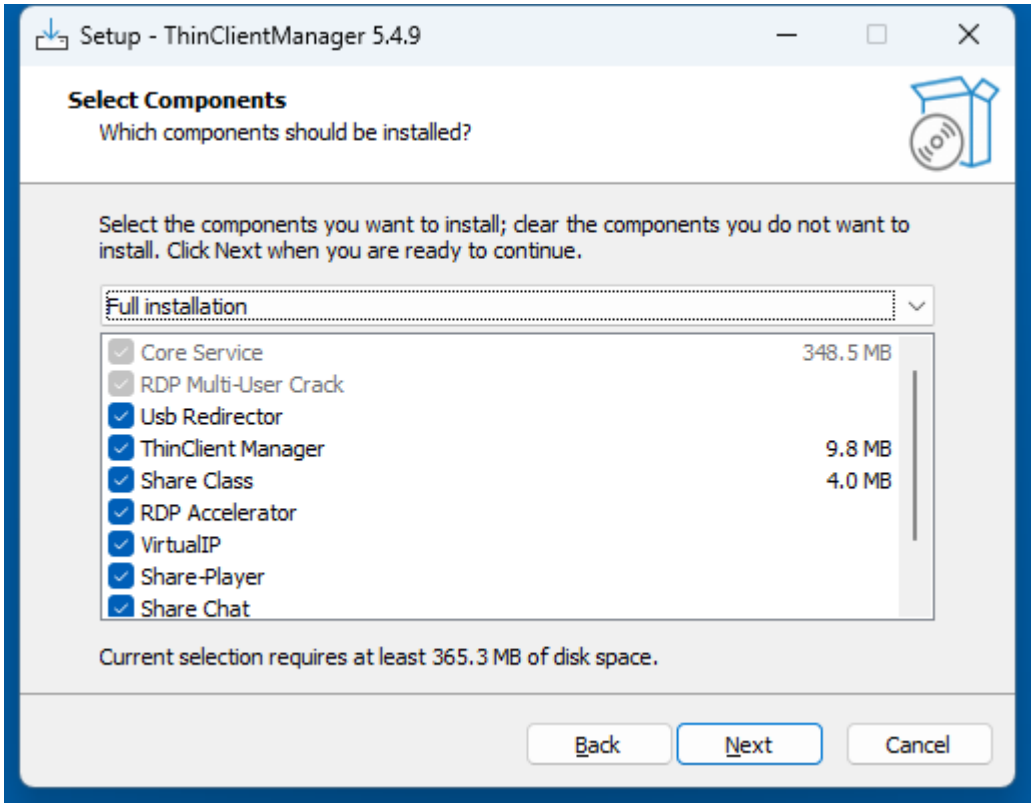


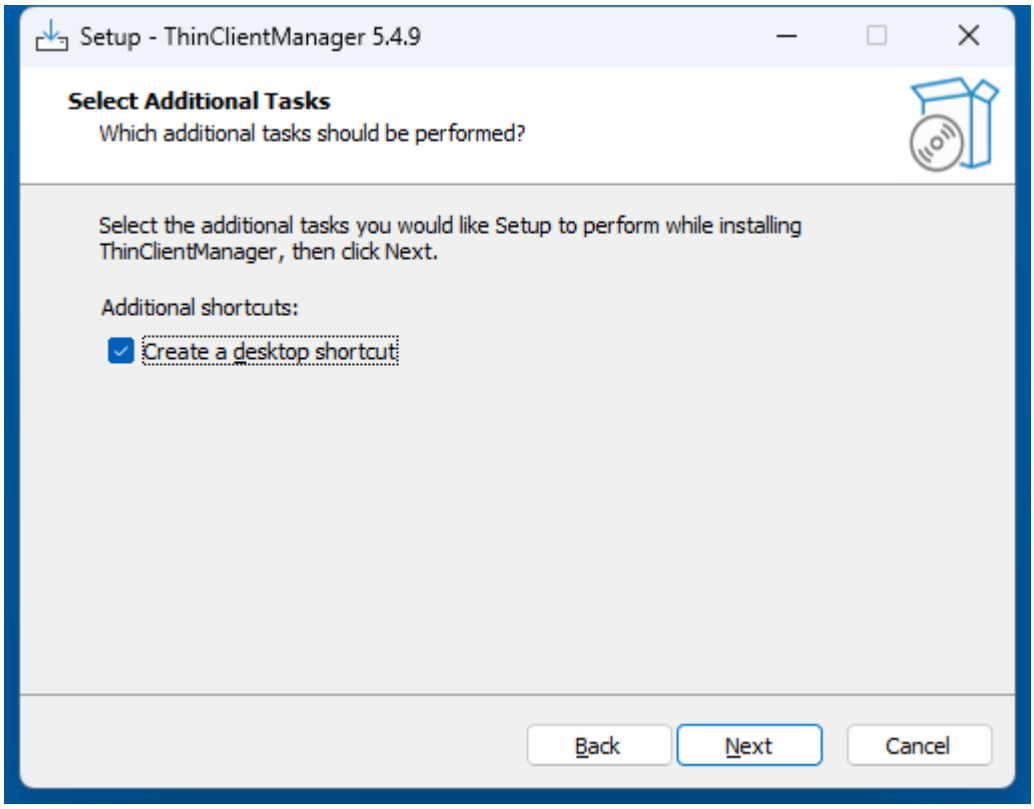

Click Next



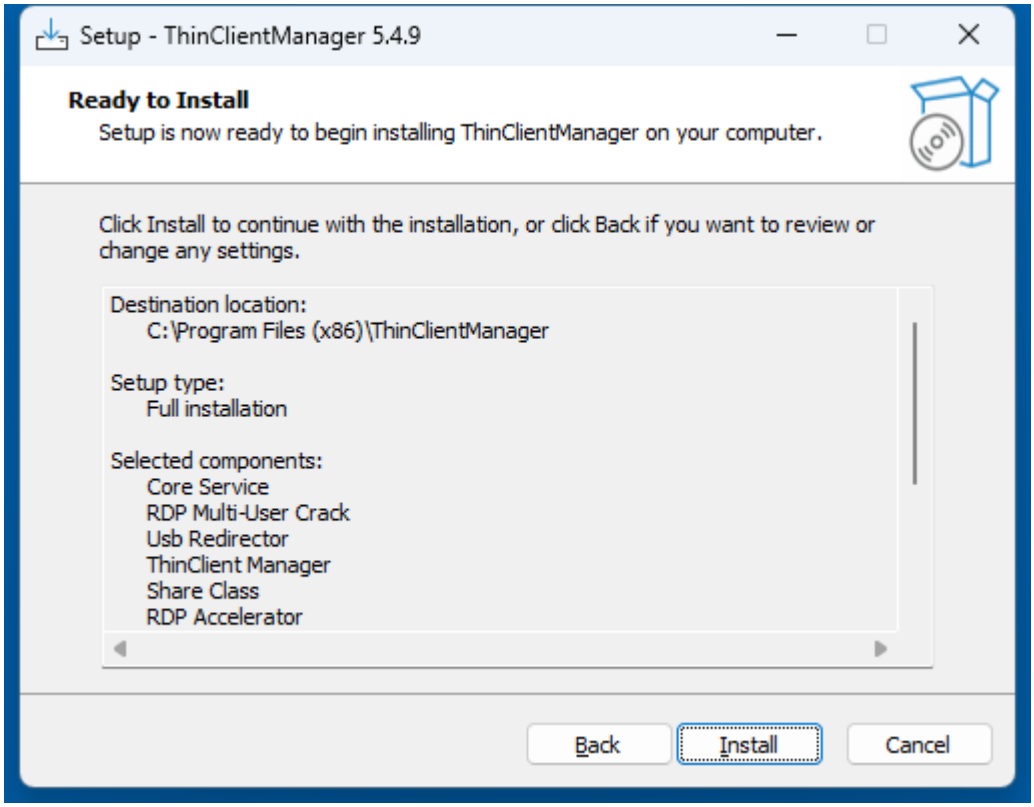

Click Next



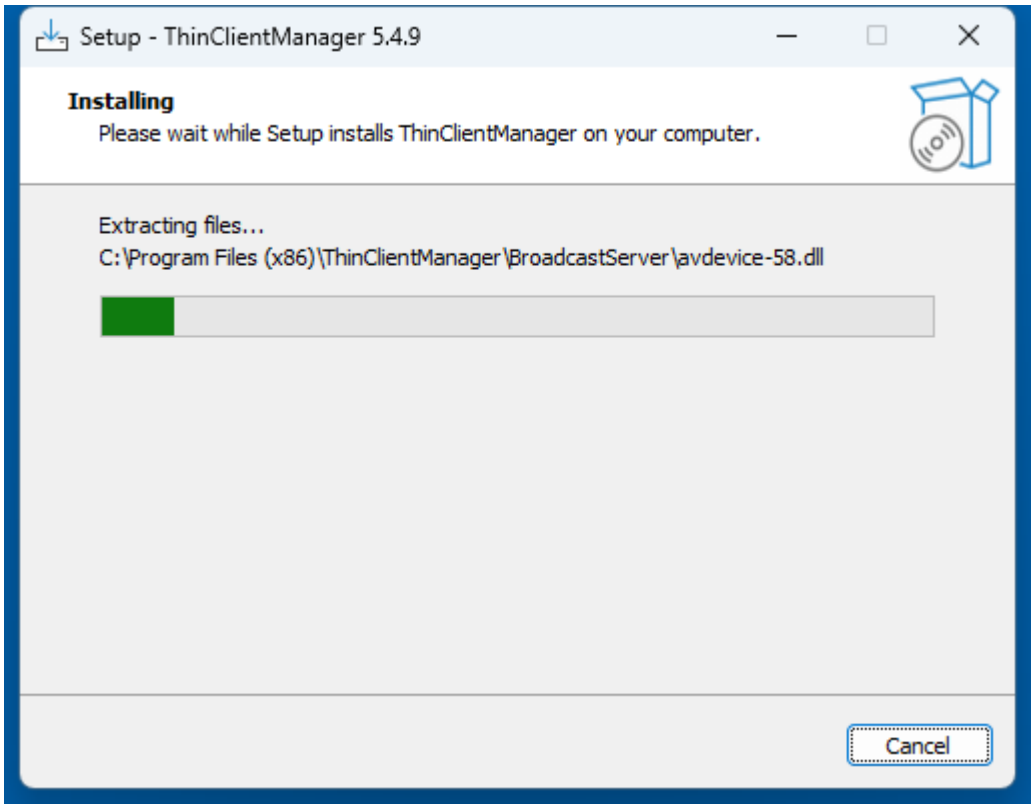

Click Next



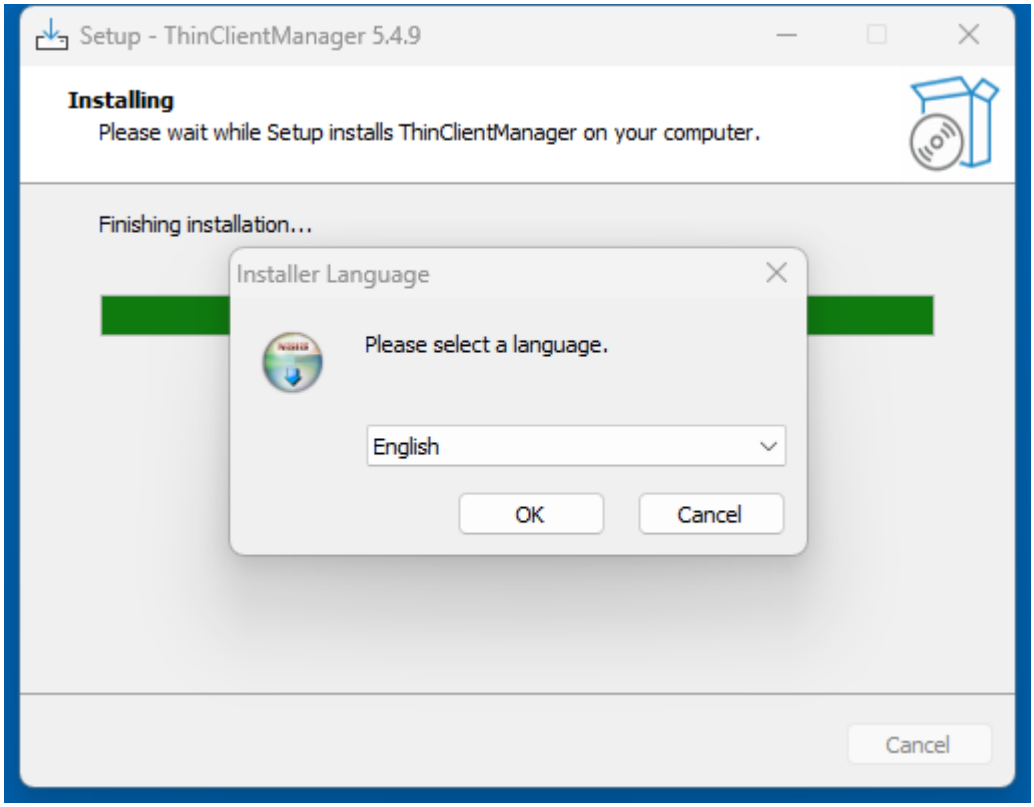

Click Next



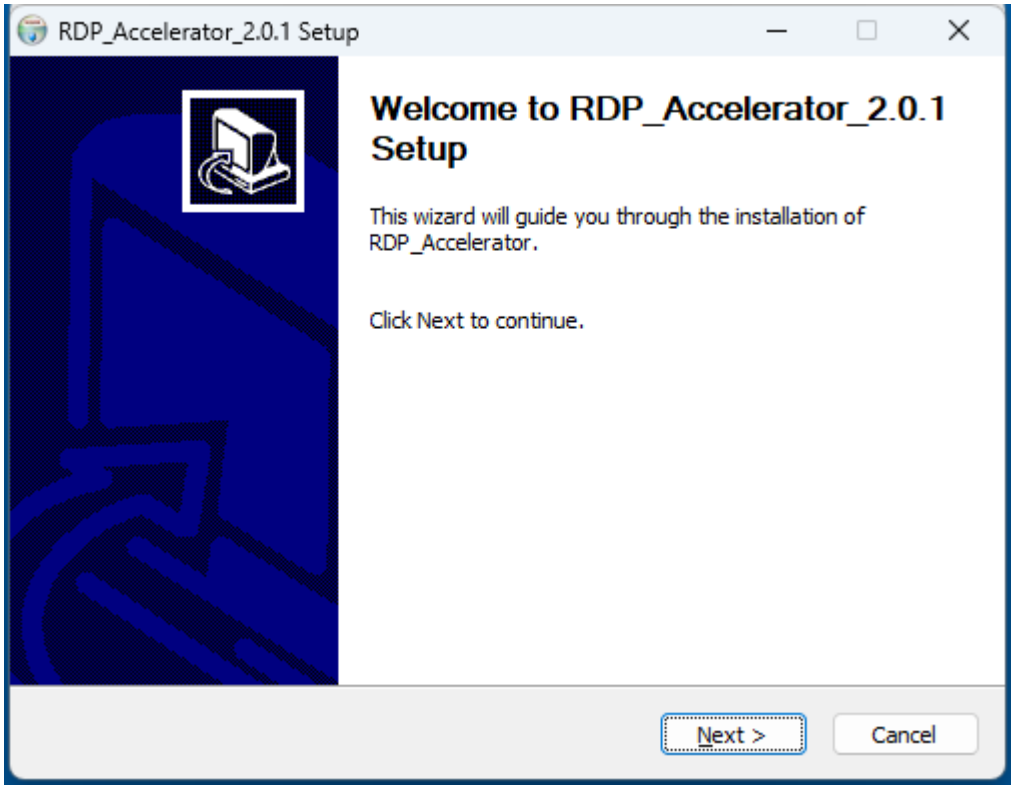

Click Install:



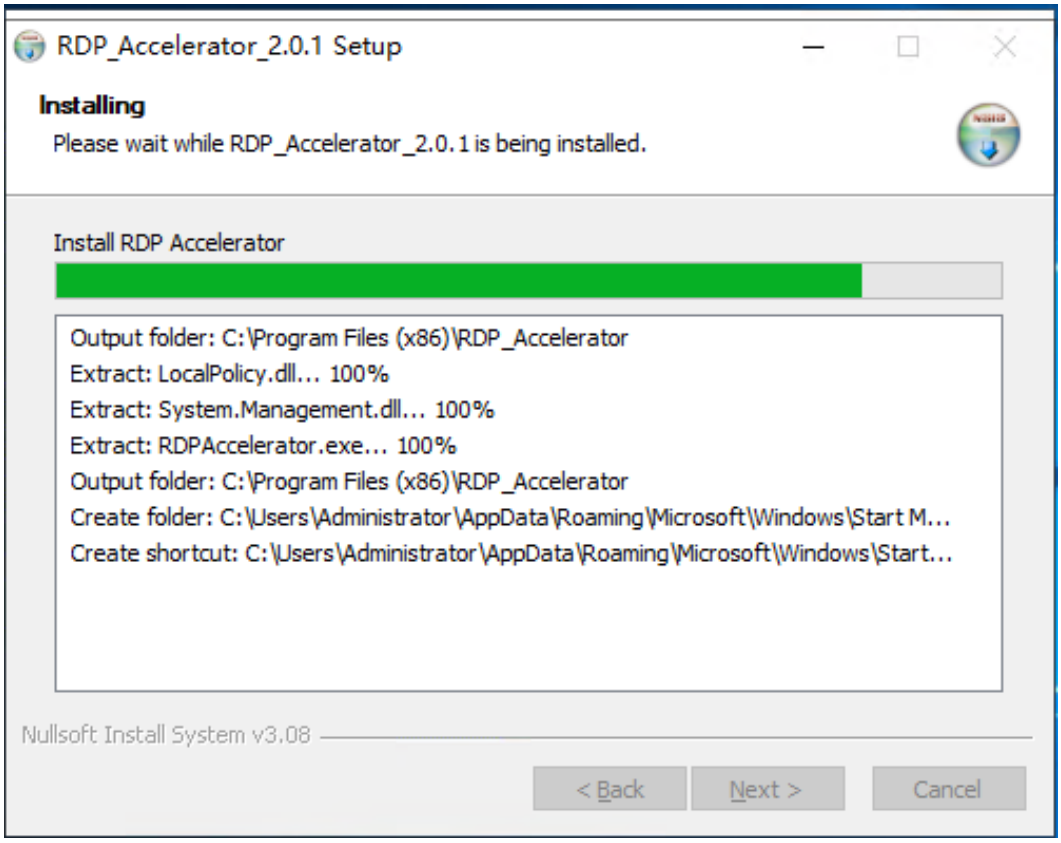

Installing....



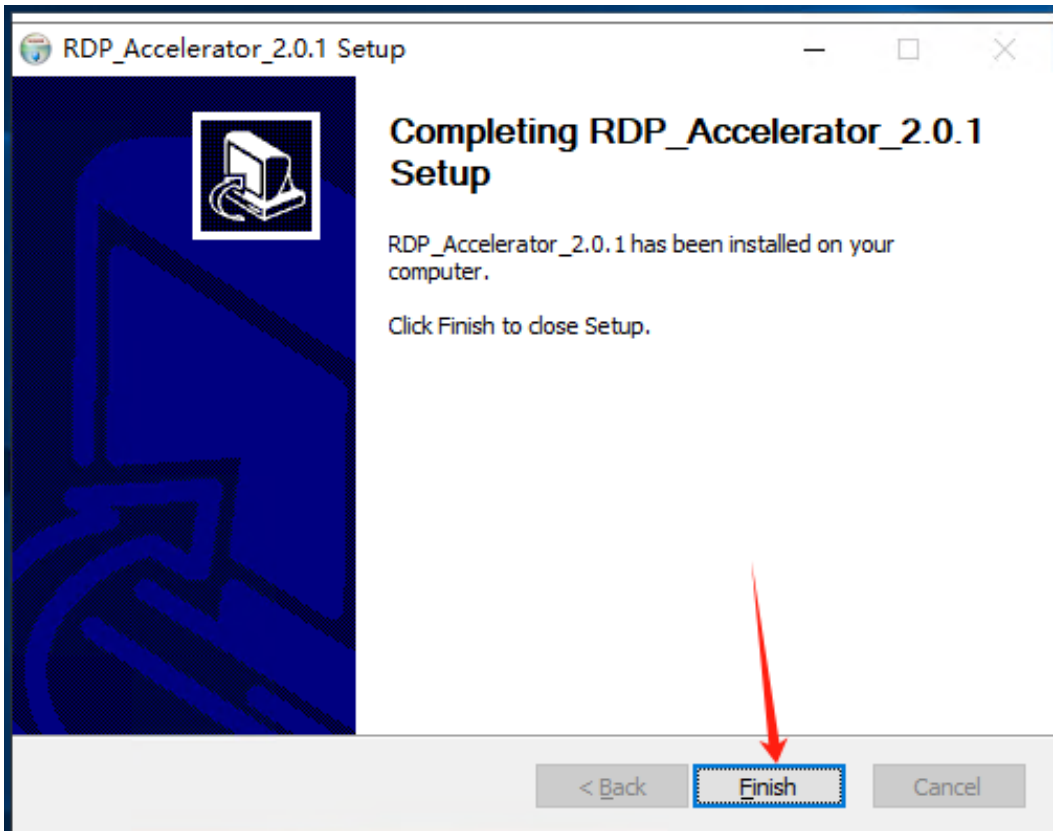

Click OK



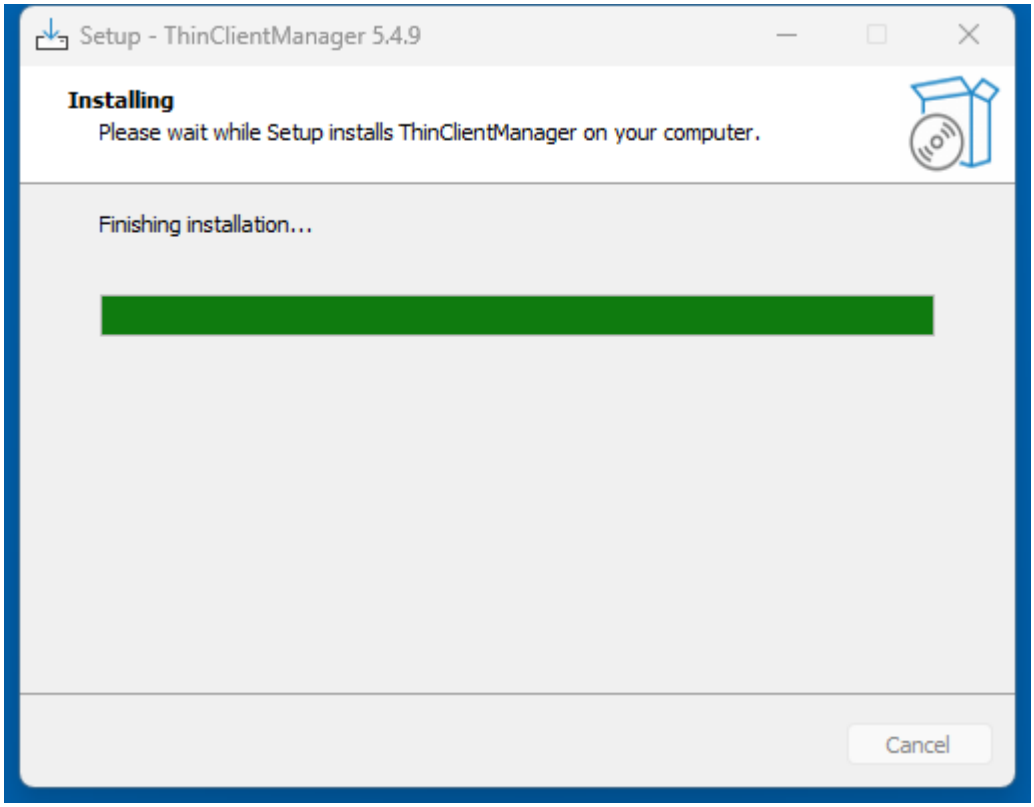

Click Next



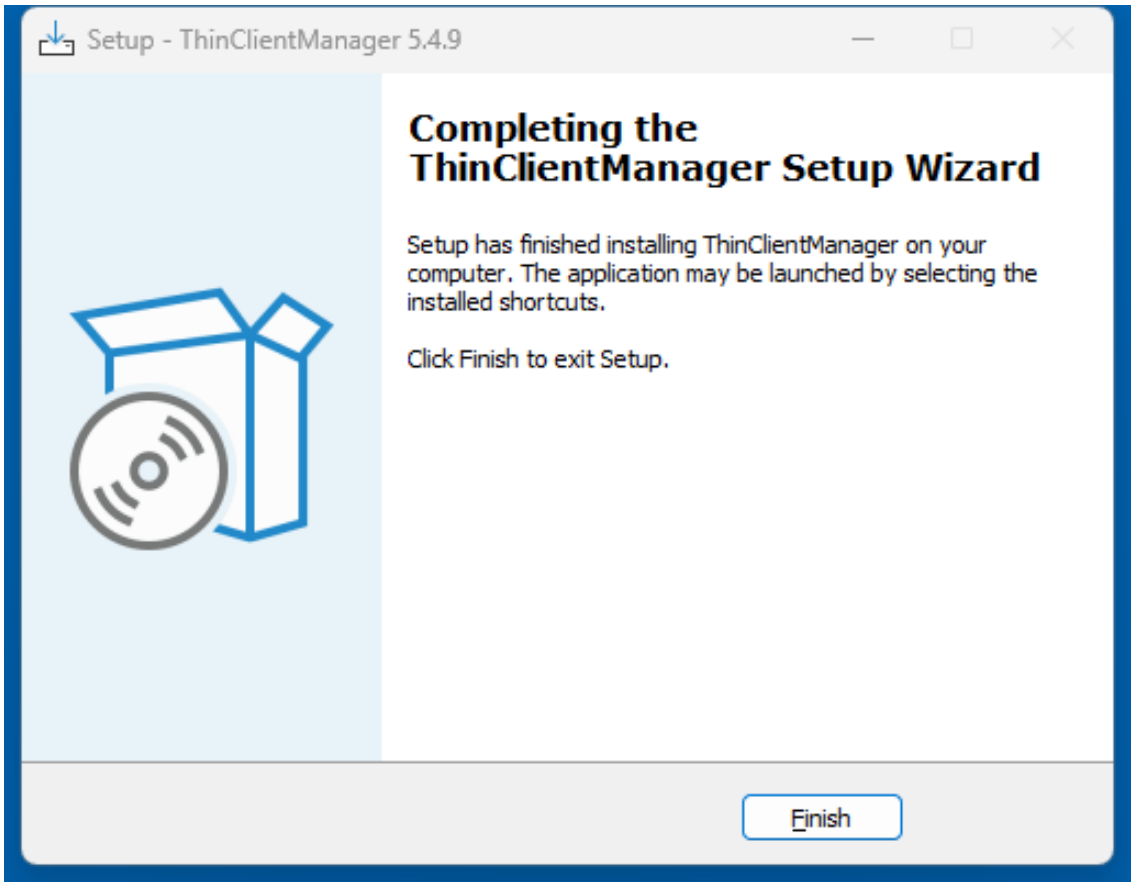

Click Finish




End of Installation... (This process needs to wait for 2~3 minutes).





Click End, ThinClientManagerInstaller5.4.9, Complete the installation





## 1.2 RDP Multi User Crack

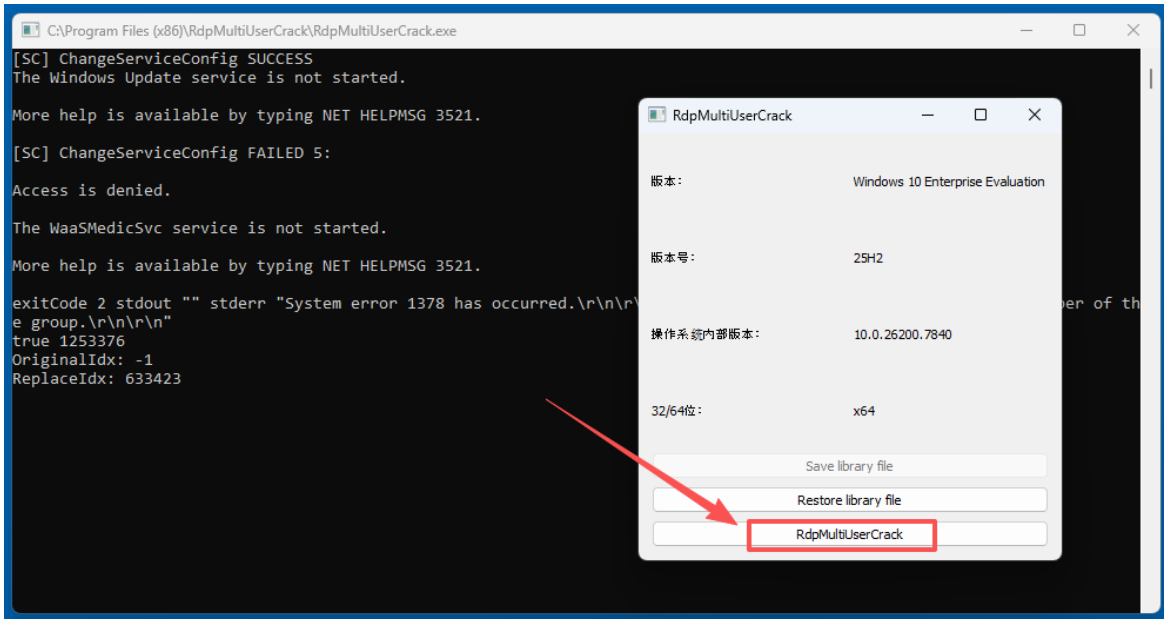
Enter the “RdpMultiUserCrack” folder



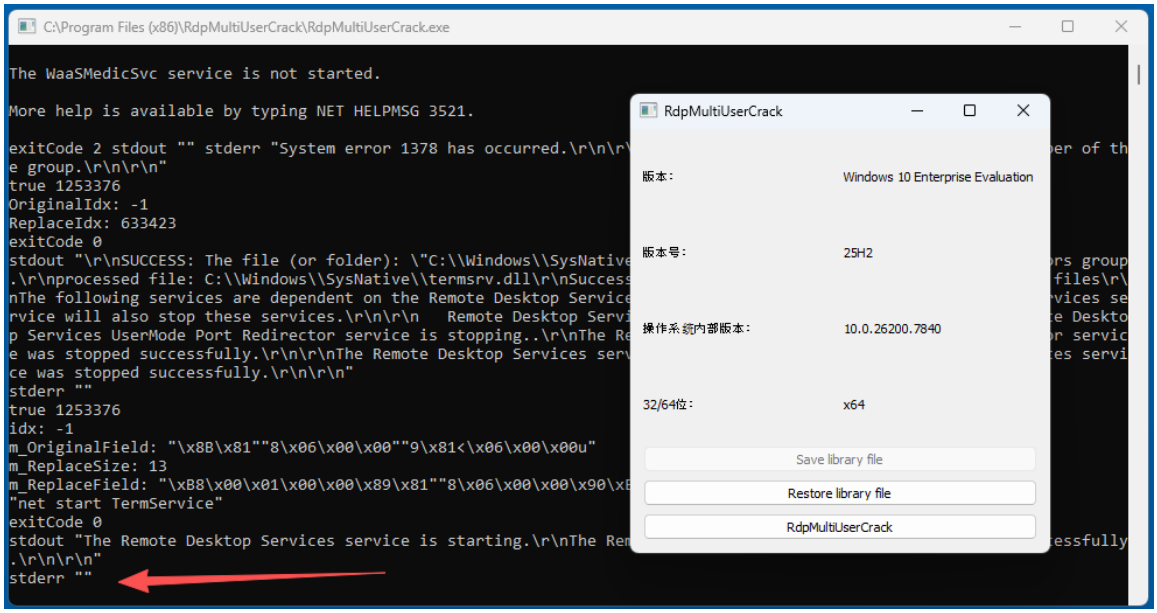

Run the “RdpMultiUserCrack.exe” program




Click “RdpMultiUserCrack” button




The program has completed cracking at this point

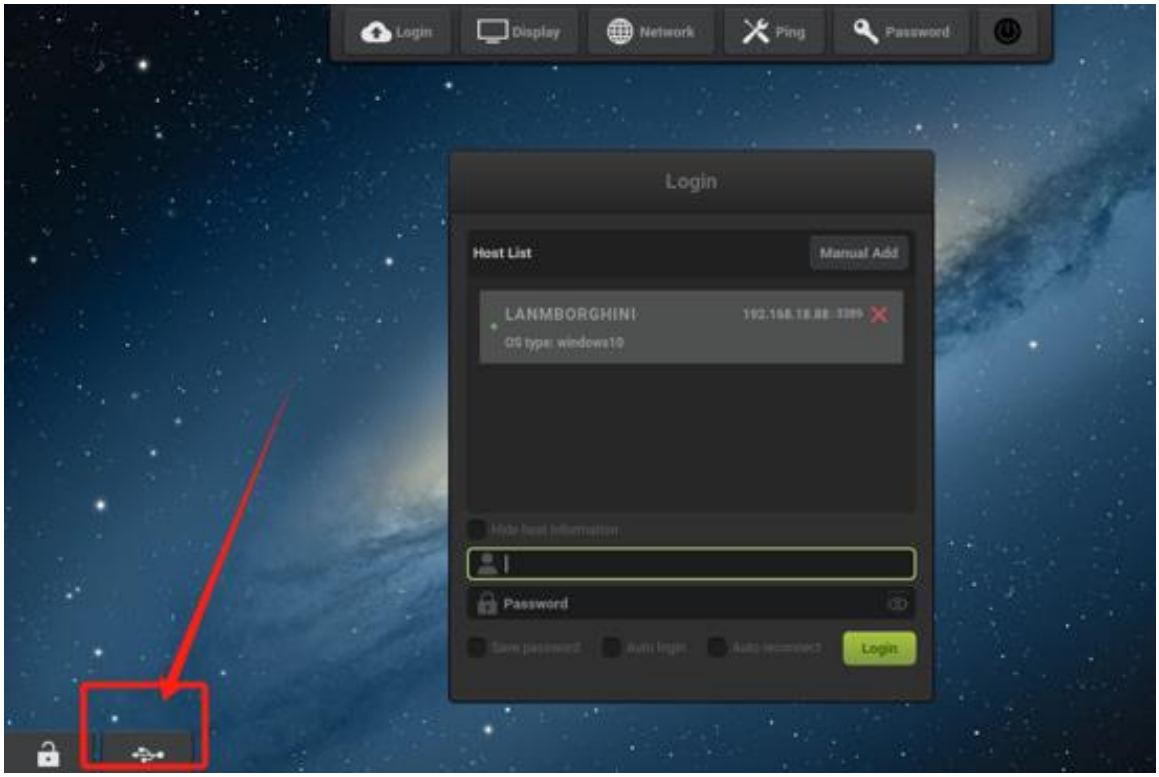



Close the program.

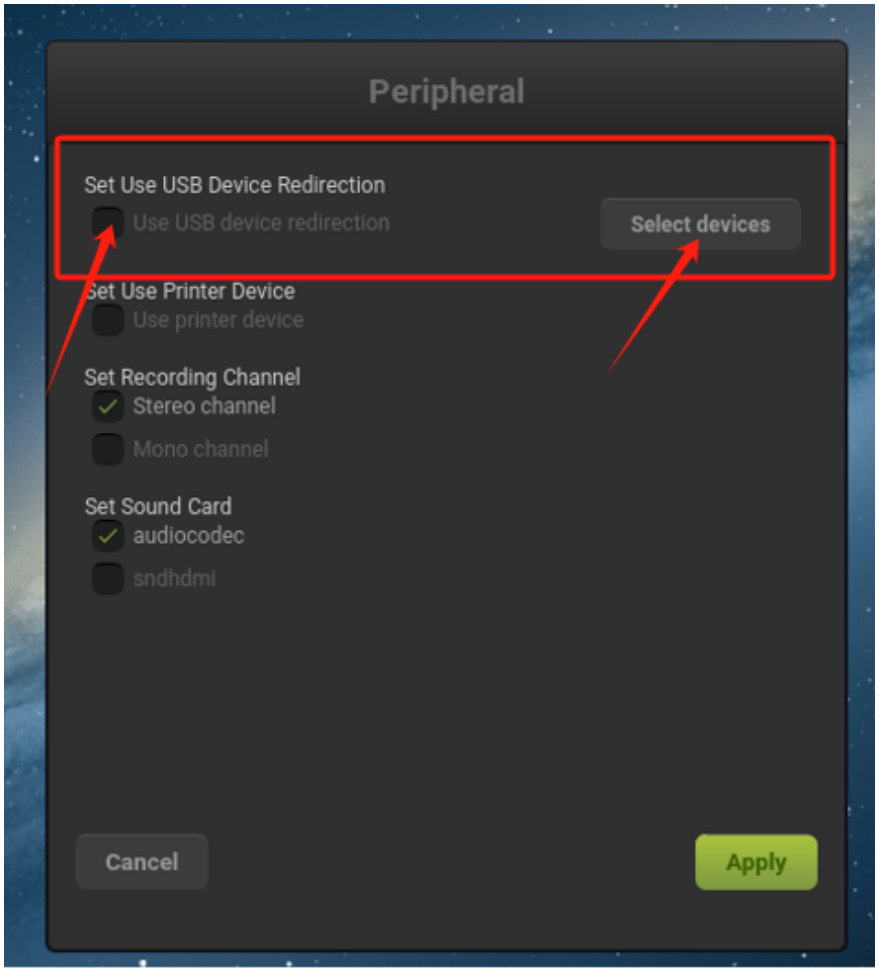
## 2. Thin Client USB redirection Operations

### 2.1 E-FL200 and E-FL300, The settings are as follows:

After the thin client is turned on, click the icon as shown in the lower left corner to enter the redirection setting interface.




Check Use USB redirection and click Select Device:



Select the USB flash drive device that needs to be redirected from the left, click the right arrow key and drag it to the right to complete the device redirection, and finally click Apply to complete the setting




Click and drag the USB device on the left to the right, and finally click Save to complete the redirection settings on the terminal.

(Note: USB devices can only be connected directly to the terminal, not through USB hubs etc., otherwise USB device redirection cannot be realized)