

Diagram Description	Signal connections For HC/MC/L18 SC
Reference page for diagram connection	1

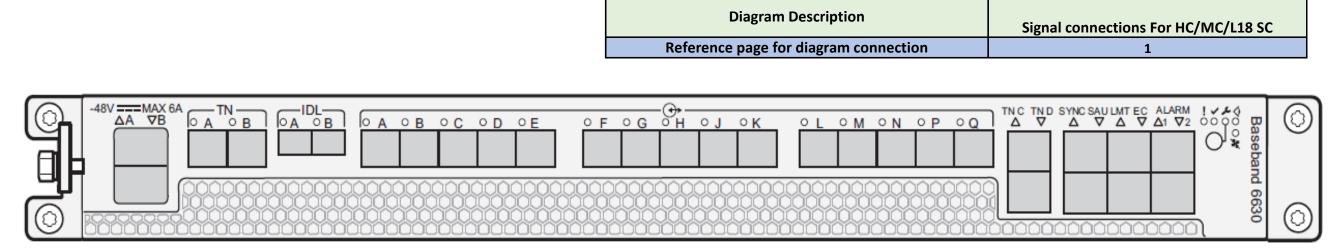


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	M	N	Р	Q
Tef	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3	RUS B3 Data 1 Radio 1 Sector 1	RUS B3 Data 1 Radio 1 Sector 2	RUS B3 Data 1 Radio 1 Sector 3				Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3
VF	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3							Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3

Diagram Description	Signal connections For HC/MC/L18 SC L18 MIMO4x4
Reference page for diagram connection	2

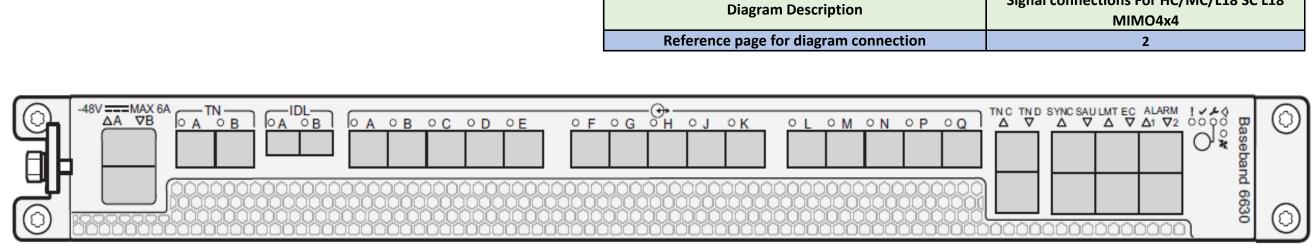


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	M	N	Р	Q
Tef	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3	4415 B3 Data 1 Radio 1 Sector 1	4415 B3 Data 1 Radio 1 Sector 2	4415 B3 Data 1 Radio 1 Sector 3				Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3
VF	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Data 1	4415 B3 Data 2 Radio 1 Sector 1	4415 B3 Data 2 Radio 1 Sector 2	4415 B3 Data 2 Radio 1 Sector 3				Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3

Diagram Description	Signal connections For HC/MC/L18 SC
Reference page for diagram connection	3

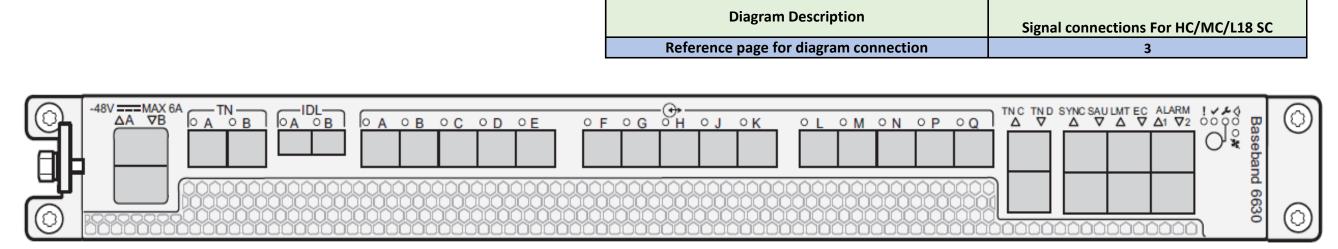


CPRI Port	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
	4415 B1	4415 B1	4415 B1	2217	2217	2217	Radio	Radio	Radio						
(L+N)Tef	Data 2	Data 2	Data 2	B28B	B28B	B28B	2238	2238	2238						
(LTIV)TEI	Radio 1	Radio 1	Radio 1	Data1	Data1	Data1	Data 1	Data 1	Data 1						
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3						
	4415 B1	4415 B1	4415 B1	Radio	Radio	Radio	Radio	Radio	Radio						
/L + NI\\\/E	Data 1	Data 1	Data 1	4415 B7A	4415 B7A	4415 B7A	2238	2238	2238						
(L+N)VF	Radio 1	Radio 1	Radio 1	Data 1	Data 1	Data 1	Data 2	Data 2	Data 2						
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3						
	RUS B3	RUS B3	RUS B3	Radio	Radio	Radio									
				8808	8808	8808									
(TDD+L18)Tef	Data 1	Data 1	Data 1	B40Y	B40Y	B40Y									
	Radio 1	Radio 1	Radio 1	Data 1	Data 1	Data 1									
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3									

Diagram Description	Signal connections For HC/MC/L18 SC
Reference page for diagram connection	4

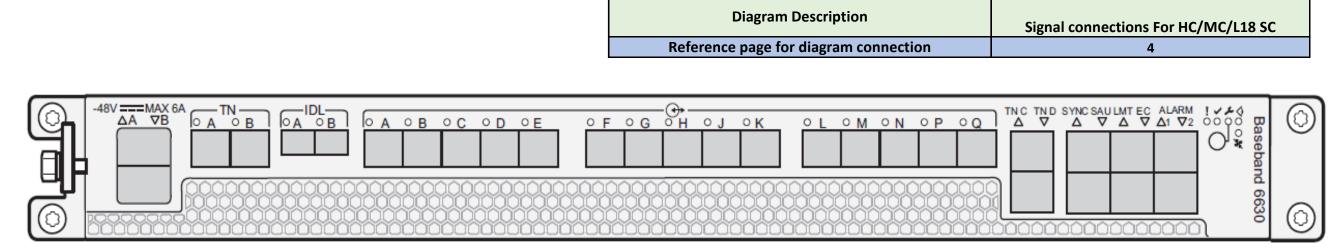


CPRI Port	Α	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
	4415 B1	4415 B1	4415 B1	2217	2217	2217	Radio	Radio	Radio						
(L+N)Tef	Data 2	Data 2	Data 2	B28B	B28B	B28B	2238	2238	2238						
(L+N)Tel	Radio 1	Radio 1	Radio 1	Data1	Data1	Data1	Data 1	Data 1	Data 1						
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3						
	4415 B1	4415 B1	4415 B1	Radio	Radio	Radio	Radio	Radio	Radio						
(L+N)VF	Data 1	Data 1	Data 1	4415 B7A	4415 B7A	4415 B7A	2238	2238	2238						
(L+IN)VF	Radio 1	Radio 1	Radio 1	Data 1	Data 1	Data 1	Data 2	Data 2	Data 2						
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3						
(TDD+L18)Tef	4415 B3 Data 1 Radio 1 Sector 1	4415 B3 Data 1 Radio 1 Sector 2	4415 B3 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1	Radio 8808 B40Y Data 1	Radio 8808 B40Y Data 1									
	Jector 1	JCCIOI Z	3000013	Sector 1	Sector 2	Sector 3									

Diagram Description	Signal connections For HC/MC/L18 SC
Reference page for diagram connection	5

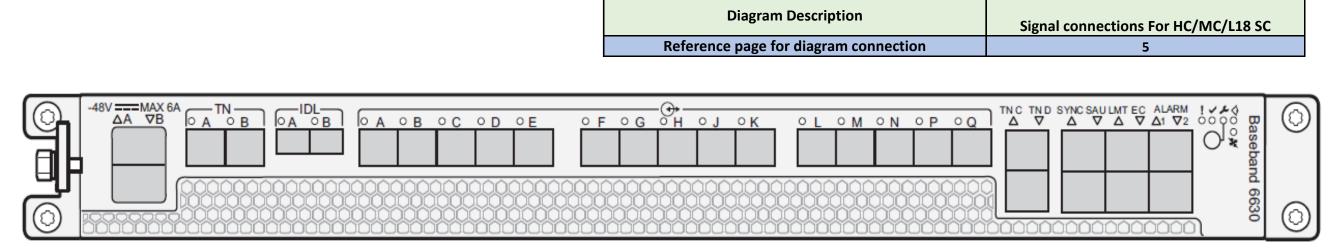


CPRI Port	Α	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
	4415 B1	4415 B1	4415 B1	2217	2217	2217	Radio	Radio	Radio						
/L LNI\Tof	Data 2	Data 2	Data 2	B28B	B28B	B28B	2238	2238	2238						
(L+N)Tef	Radio 1	Radio 1	Radio 1	Data1	Data1	Data1	Data 1	Data 1	Data 1						
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3						
	VF R503	VF R503	VF R503												
(L+N)VF	Port 1	Port 2	Port 3												
	Sector 1	Sector 2	Sector 3												
	חווכ חים	חווכ חם	DLICDS	Radio	Radio	Radio									
	RUS B3	RUS B3	RUS B3	8808	8808	8808									
(TDD+L18)Tef	Data 1	Data 1	Data 1	B40Y	B40Y	B40Y									
	Radio 1	Radio 1	Radio 1	Data 1	Data 1	Data 1									
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2										




CPRI Port	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
	4415 B1	4415 B1	4415 B1	2217	Radio	Radio	Radio	2217		Radio	Radio	Radio	2217	VF 6630	VF 6630	VF 6630
VF	Data 1	Data 1	Data 1	B28B	2238	2238	2238	B28B		4415 B7A	4415 B7A	4415 B7A	B28B	Port C	Port B	Port A
VI	Radio 1	Radio 1	Radio 1	Data 2		Data 1	Data 1	Data 1	Data 2	Sector 3	Sector 2					
	Sector 2	Sector 2	Sector 1	Sector 3	Sector 3	Sector 2	Sector 1	Sector 2		Sector 3	Sector 2	Sector 1	Sector 1	Jector 3	Jector 2	Sector 1

Diagram Description	Signal connections For HC/MC/L18 SC
Reference page for diagram connection	6

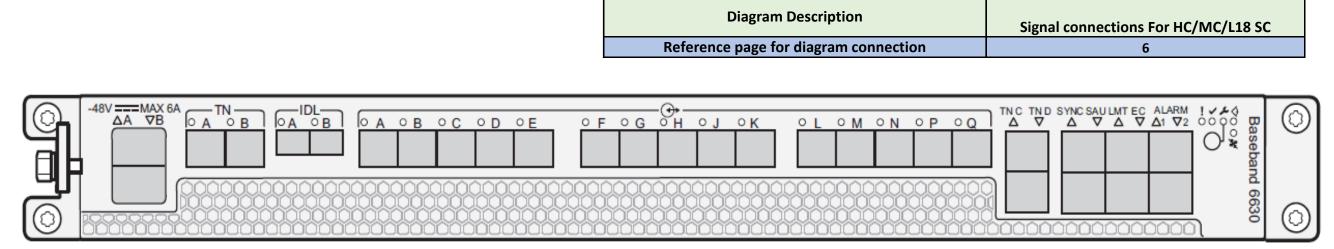


				1		1									
CPRI Port	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
	4415 B1	4415 B1	4415 B1	2217	2217	2217	Radio	Radio	Radio						
(L+N)Tef	Data 2	Data 2	Data 2	B28B	B28B	B28B	2238	2238	2238						
(LTIV)TEI	Radio 1	Radio 1	Radio 1	Data1	Data1	Data1	Data 1	Data 1	Data 1						
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3						
	VF R503	VF R503	VF R503												
(L+N)VF	Port 1	Port 2	Port 3												
	Sector 1	Sector 2	Sector 3												
	4415 B3	4415 B3	4415 B3	Radio	Radio	Radio									
				8808	8808	8808									
(TDD+L18)Tef	Data 1	Data 1	Data 1	B40Y	B40Y	B40Y									
	Radio 1	Radio 1	Radio 1	Data 1	Data 1	Data 1									
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2										




CPRI Port	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
	4415 B1	4415 B1	4415 B1	2217	Radio	Radio	Radio	2217		Radio	Radio	Radio	2217	VF 6630	VF 6630	VF 6630
VF	Data 1	Data 1	Data 1	B28B	2238	2238	2238	B28B		4415 B7A	4415 B7A	4415 B7A	B28B	Port C	Port B	Port A
VI	Radio 1	Radio 1	Radio 1	Data 2		Data 1	Data 1	Data 1	Data 2	Sector 3						
	Sector 2	Sector 2	Sector 1	Sector 3	Sector 3	Sector 2	Sector 1	Sector 2		Sector 3	Sector 2	Sector 1	Sector 1	Sector 5	Sector 2	Sector 1

Diagram Description	Signal connections For SC + L18(2x2)
Reference page for diagram connection	7

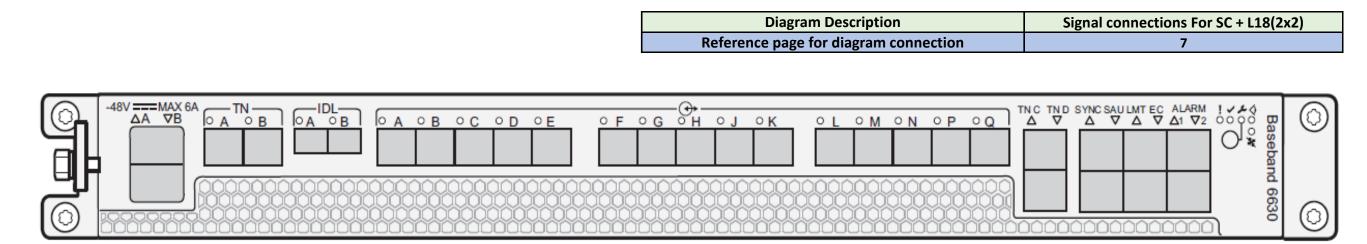


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
Tef	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3	4415 B3 Data 1 Sector 1/2		4415 B3 Data 1 Sector 3				Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3
VF	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Data 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3	4415 B3 Data 2 Sector 1/2		4415 B3 Data 2 Sector 3				Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3

Diagram Description	Signal connections For SC + L18(2x2)
Reference page for diagram connection	8

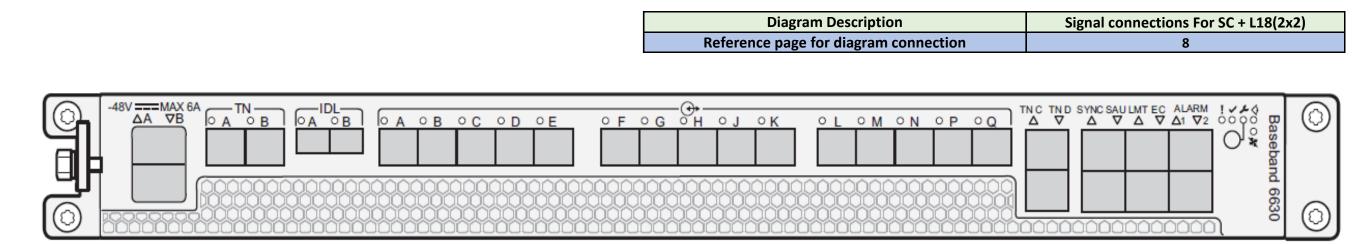


CPRI Port	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	4415 B1 Data 2	4415 B1 Data 2	4415 B1 Data 2	2217 B28B	2217 B28B	2217 B28B	Radio 2238	Radio 2238	Radio 2238						
	Radio 1 Sector 1	Radio 1 Sector 2	Radio 1 Sector 3	Data1 Sector 1	Data1 Sector 2	Data1 Sector 3	Data 1 Sector 1	Data 1 Sector 2	Data 1 Sector 3						
(L+N)VF	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Data 1	Data 1	Radio 4415 B7A Data 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
(TDD+L18)Tef	4415 B3 Data 1 Sector 1/2		4415 B3 Data 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3									

Diagram Description	Signal connections For SC + L18(2x2)
Reference page for diagram connection	9

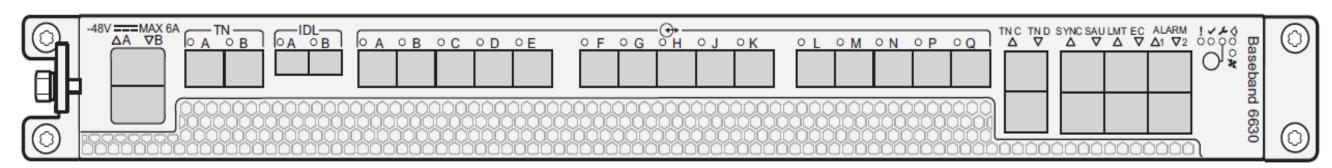


CPRI Port	Α	В	ſ	D	F	F	G	Н		K	М	N	Р	Q
(L+N)Tef	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	2217 B28B Data1 Sector 1	2217 B28B Data1 Sector 2	2217 B28B Data1 Sector 3	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3	×				
(L+N)VF	VF R503 Port 1 Sector 1	VF R503 Port 2 Sector 2	VF R503 Port 3 Sector 3											
(TDD+L18)Tef	4415 B3 Data 1 Radio 1 Sector 1/2		4415 B3 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3								

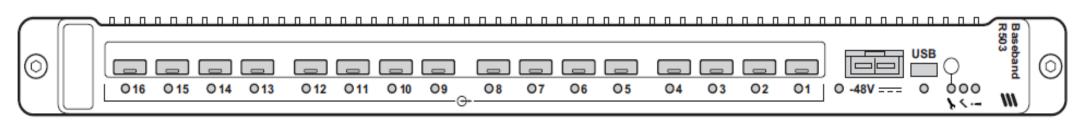


CPRI Port	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
	4415 B1	4415 B1	4415 B1	2217	Radio	Radio	Radio	2217		Radio	Radio	Radio	2217	VF 6630	VE 6620	VF 6630
VF	Data 1	Data 1	Data 1	B28B	2238	2238	2238	B28B		4415 B7A	4415 B7A	4415 B7A	B28B	Port C	Port B	Port A
VI	Radio 1	Radio 1	Radio 1	Data 2		Data 1	Data 1	Data 1	Data 2	Sector 3	Sector 2					
	Sector 2	Sector 2	Sector 1	Sector 3	Sector 3	Sector 2	Sector 1	Sector 2		Sector 3	Sector 2	Sector 1	Sector 1	Sector 5	Sector 2	Sector 1

Diagram Description	Signal connections For NR
Reference page for diagram connection	10

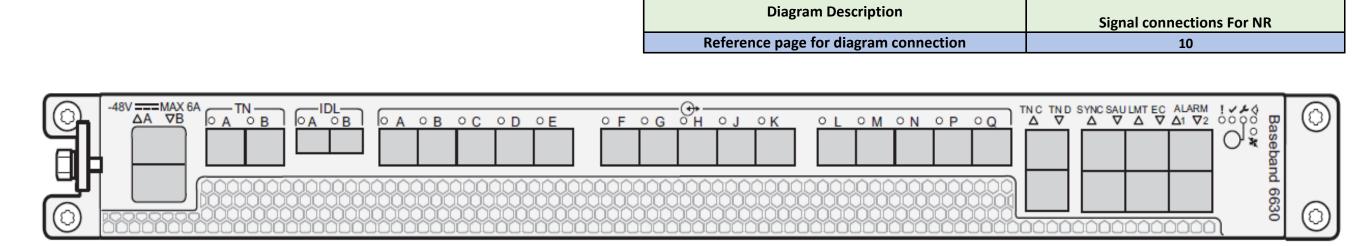


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
Tef	2217 B1 Data 2 Radio 1 Sector 2	2217 B1 Data 2 Radio 1 Sector 2	2217 B1 Data 2 Radio 1 Sector 2	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3	RUS B3 Data 1 Radio 1 Sector 1	RUS B3 Data 1 Radio 1 Sector 2	RUS B3 Data 1 Radio 1 Sector 3				2217 B20 Radio 1 Data 1 Sector 1	2217 B20 Radio 1 Data 1 Sector 2	2217 B20 Radio 1 Data 1 Sector 3
VF	2217 B1 Data 1 Radio 1 Sector 2	2217 B1 Data 1 Radio 1 Sector 2	2217 B1 Data 1 Radio 1 Sector 2	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Data 1							2217 B20 Radio 1 Data 2 Sector 1	2217 B20 Radio 1 Data 2 Sector 2	2217 B20 Radio 1 Data 2 Sector 3

Diagram Description	Signal connections For NR
Reference page for diagram connection	11

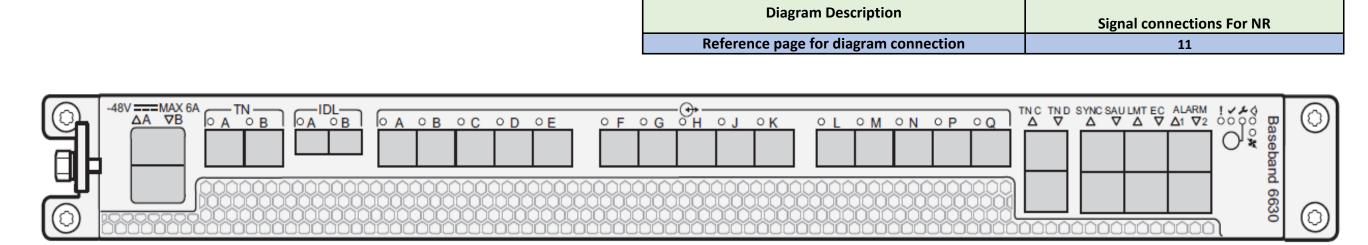


CPRI Port	Α	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	2217 B1 Data 2 Sector 1	2217 B1 Data 2 Sector 2	2217 B1 Data 2 Sector 3	2217 B28B Data 1 Sector 1	2217 B28B Data 1 Sector 2	2217 B28B Data 1 Sector 3	2217 B20 Radio 1 Data 1 Sector 1	2217 B20 Radio 1 Data 1 Sector 2	2217 B20 Radio 1 Data 1 Sector 3						
(L+N)VF	2217 B1 Data 1 Sector 1	2217 B1 Data 1 Sector 2	2217 B1 Data 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Data 1	2217 B20 Radio 1 Data 2 Sector 1	2217 B20 Radio 1 Data 2 Sector 2	2217 B20 Radio 1 Data 2 Sector 3						
(TDD+L18)Tef	RUS B3 Data 1 Radio 1 Sector 1	RUS B3 Data 1 Radio 1 Sector 2	RUS B3 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3									

Diagram Description	Signal connections For NR
Reference page for diagram connection	12

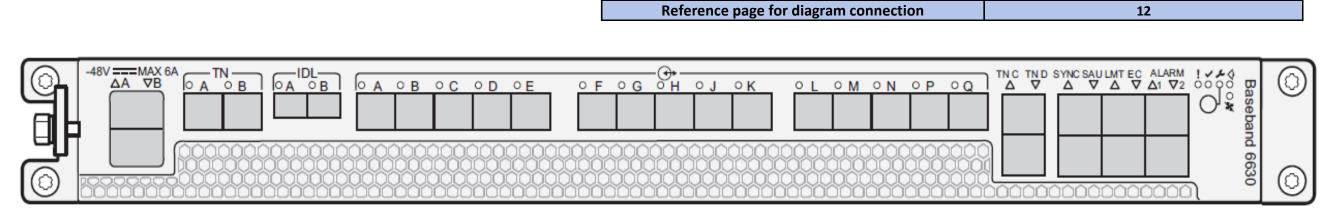


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	2217 B1 Data 2 Sector 1	2217 B1 Data 2 Sector 2	2217 B1 Data 2 Sector 3	2217 B28B Data 1 Sector 1	2217 B28B Data 1 Sector 2	2217 B28B Data 1 Sector 3	2217 B20 Radio 1 Data 1 Sector 1	2217 B20 Radio 1 Data 1 Sector 2	2217 B20 Radio 1 Data 1 Sector 3						
(L+N)VF	VF R503 Port 1 Sector 1	VF R503 Port 2 Sector 2	VF R503 Port 3 Sector 3												
(TDD+L18)Tef	RUS B3 Data 1 Radio 1 Sector 1	RUS B3 Data 1 Radio 1 Sector 2	RUS B3 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3									




2217 B1 2217 B1 2217 Radio R	2217				
	2211	Radio	VE CC30	VE CC30	VE CC30
Data 1 Data 1 Data 1 B28B 2238 2238 B28B 4415 B7A 4415 B7A 4415 B7A 4415 B7A	A B28B	15 B7A	VF 6630		VF 6630
VF Radio 1 Radio 1 Data 2 Data 2 Data 2 Data 2 Data 2 Data 2 Data 1 Data 1 Data 1	Data 2	ata 1	Port C	Port B	Port A
Sector 2 Sector 2 Sector 1 Sector 3 Sector 2 Sector 2 Sector 2 Sector 2 Sector 3 Sector 2 Sector 3 Sector 2 Sector 3 Sector 3	Sector 1	ctor 1	Sector 3	Sector 2	Sector 1

Diagram Description	Signal connections For SF Apollo/Ellara
Reference page for diagram connection	13

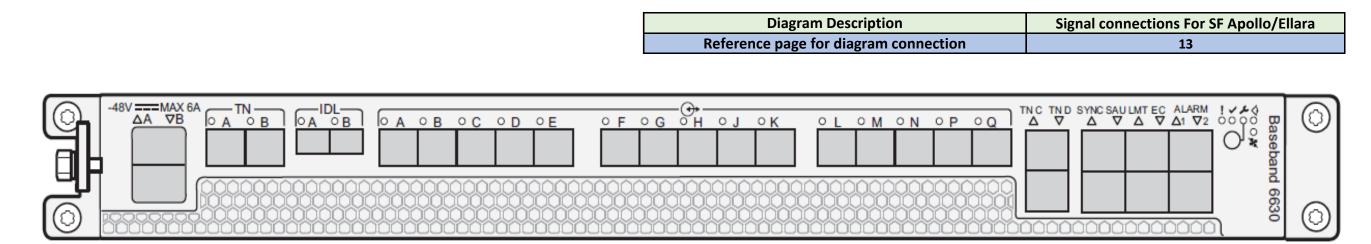


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
Tef	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1/2		Radio 8808 B40Y Data 1 Sector 3	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
VF	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									

Diagram Description	Signal connections For SF Apollo/Ellara
Reference page for diagram connection	14

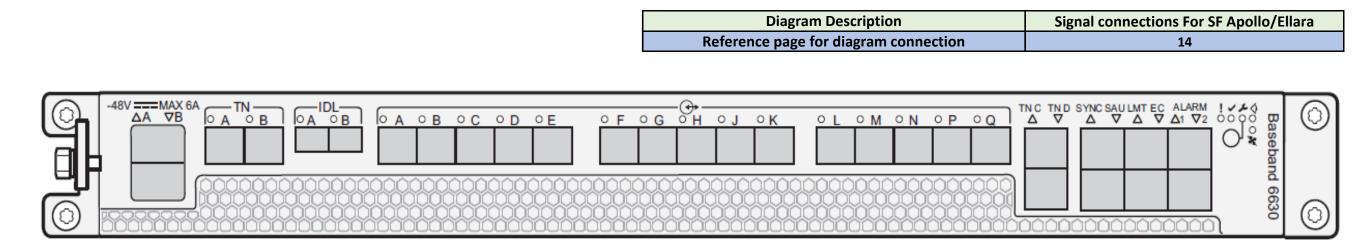


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3				Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
(L+N)VF	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Data 1	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
(3G)Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									
(TDD+L18)Tef				Radio 8808 B40Y Data 1 Sector 1/2	Radio 8808 B40Y Data 1 Sector 3										

Diagram Description	Signal connections For SF Orion Pole
Reference page for diagram connection	15

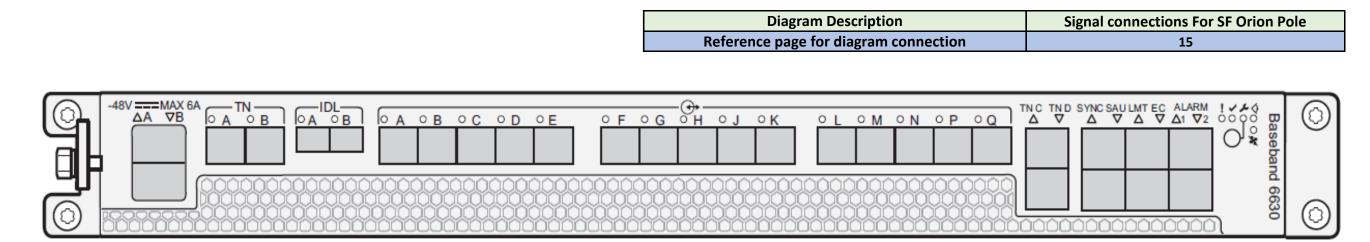


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
Tef	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
VF	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Data 1	Radio 4415 B7A Data 1 Sector 2	Data 1	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									

Diagram Description	Signal connections For SF Orion Pole
Reference page for diagram connection	16

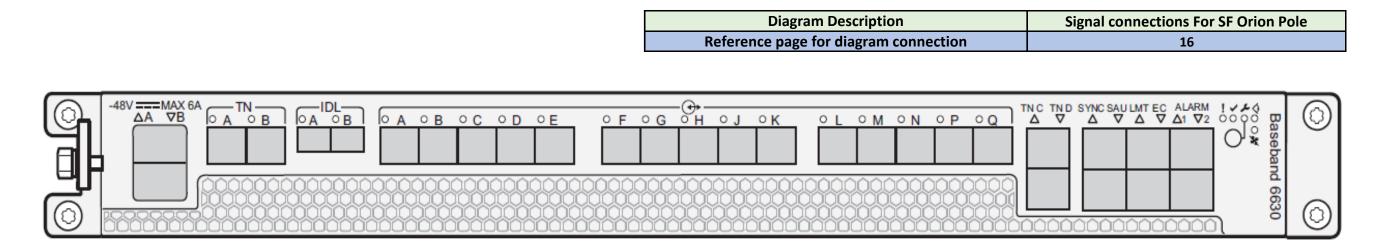


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3				Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
(L+N)VF	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
(3G)Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									
(TDD+L18)Tef				Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3									

Diagram Description	Signal connections For SF L18 Apollo/Ellara
Reference page for diagram connection	17

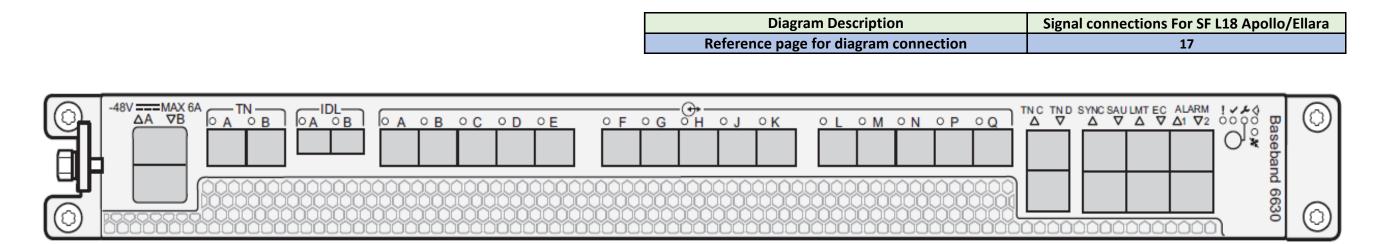


CPRI Port	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
Tef	4480 B1/B3 Data 1 Radio 1 Sector 1	4480 B1/B3 Data 1 Radio 1 Sector 2	4480 B1/B3 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1/2		Radio 8808 B40Y Data 1 Sector 3	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
VF	4480 B1/B3 Data 2 Radio 1 Sector 1	4480 B1/B3 Data 2 Radio 1 Sector 2	4480 B1/B3 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									

Diagram Description	Signal connections For SF L18 Apollo/Ellara
Reference page for diagram connection	18

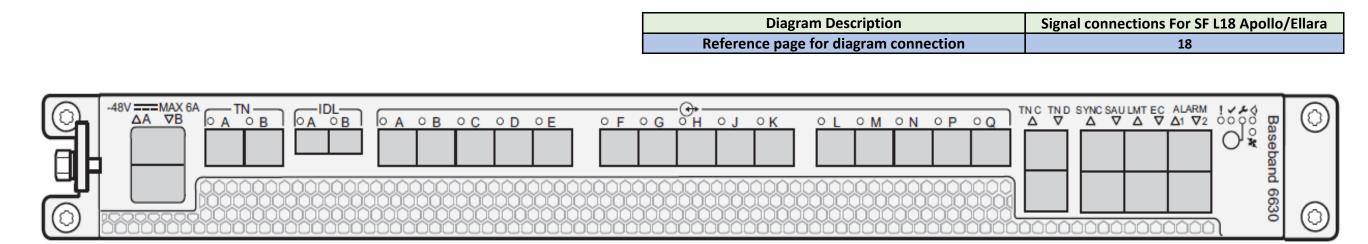


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	4480 B1/B3 Data 1 Radio 1 Sector 1	4480 B1/B3 Data 1 Radio 1 Sector 2	4480 B1/B3 Data 1 Radio 1 Sector 3				Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
(L+N)VF	4480 B1/B3 Data 2 Radio 1 Sector 1	4480 B1/B3 Data 2 Radio 1 Sector 2	4480 B1/B3 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
(3G)Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									
(TDD+L18)Tef				Radio 8808 B40Y Data 1 Sector 1/2	Radio 8808 B40Y Data 1 Sector 3										

Diagram Description	Signal connections For SF L18 Orion Pole
Reference page for diagram connection	19

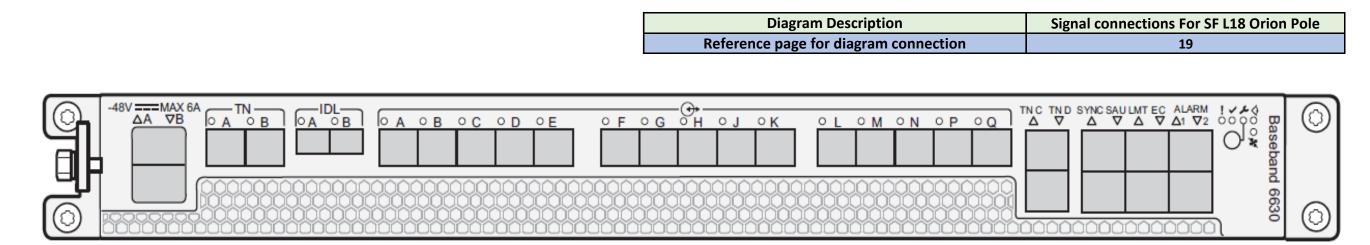


CPRI Port	Α	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
Tef	4480 B1/B3 Data 1 Radio 1 Sector 1	4480 B1/B3 Data 1 Radio 1 Sector 2	4480 B1/B3 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
VF	4480 B1/B3 Data 2 Radio 1 Sector 1	4480 B1/B3 Data 2 Radio 1 Sector 2	4480 B1/B3 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									

Diagram Description	Signal connections For SF L18 Orion Pole
Reference page for diagram connection	20

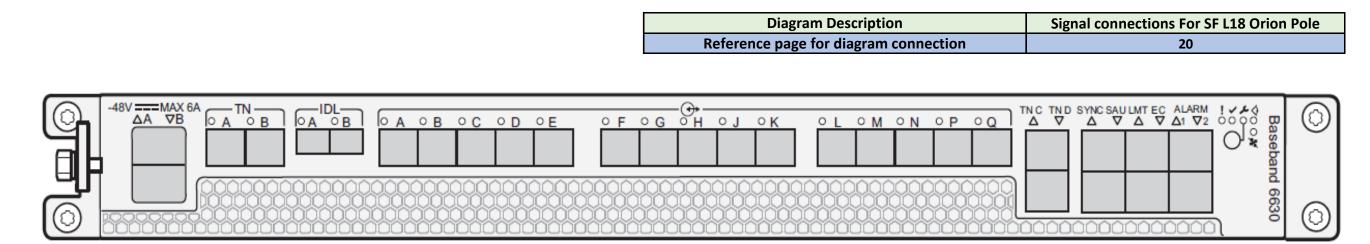


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	4480 B1/B3 Data 1 Radio 1 Sector 1	4480 B1/B3 Data 1 Radio 1 Sector 2	4480 B1/B3 Data 1 Radio 1 Sector 3				Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3						
(L+N)VF	4480 B1/B3 Data 2 Radio 1 Sector 1	4480 B1/B3 Data 2 Radio 1 Sector 2	4480 B1/B3 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
(3G)Tef/VF	RUS B8 Data1 Radio 1 Sector 1	RUS B8 Data1 Radio 1 Sector 2	RUS B8 Data1 Radio 1 Sector 3	RUS B8 Data1 Radio 2 Sector 1	RUS B8 Data1 Radio 2 Sector 2	RUS B8 Data1 Radio 2 Sector 3									
(TDD+L18)Tef				Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3									

Diagram Description	Signal connections For Stealth
Reference page for diagram connection	21

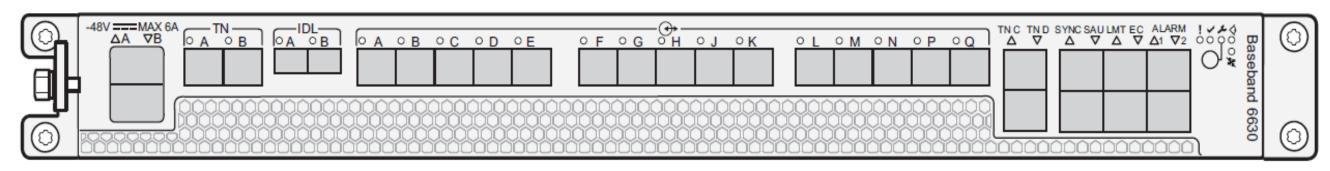


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
Tef	Tef R503 Port 1 Sector 1	Tef R503 Port 2 Sector 2	Tef R503 Port 3 Sector 3				2217 B1 Data 1 Radio 1 Sector 1		2217 B1 Data 1 Radio 1 Sector 2		2217 B1 Data 1 Radio 1 Sector 3				
VF	VF R503 Port 1 Sector 1	VF R503 Port 2 Sector 2	VF R503 Port 3 Sector 3				2217 B1 Data 2 Radio 1 Sector 1		2217 B1 Data 2 Radio 1 Sector 2		2217 B1 Data 2 Radio 1 Sector 3				

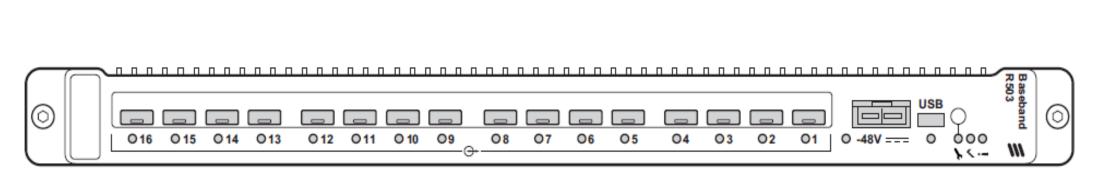


CPRI Port	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Tef	RUS B20 Data 1 Radio 1 Sector 1	RUS B20 Data 1 Radio 2 Sector 1	RUS B3 Data 1 Radio 1 Sector 1		RUS B20 Data 1 Radio 1 Sector 2	Data 1 Radio 2	RUS B3 Data 1 Radio 1 Sector 2			Data 1 Radio 1	RUS B20 Data 1 Radio 2 Sector 3	RUS B3 Data 1 Radio 1 Sector 3		Tef 6630 Port C Sector 3	Port B	Tef 6630 Port A Sector 1
VF	RUS B20 Data 2 Radio 1 Sector 1	RUS B20 Data 2 Radio 2 Sector 1			RUS B20 Data 2 Radio 1 Sector 2	RUS B20 Data 2 Radio 2 Sector 2				Data 2 Radio 1	RUS B20 Data 2 Radio 2 Sector 3			VF 6630 Port C Sector 3	VF 6630 Port B Sector 2	VF 6630 Port A Sector 1

Diagram Description	Signal connections For Stealth
Reference page for diagram connection	22

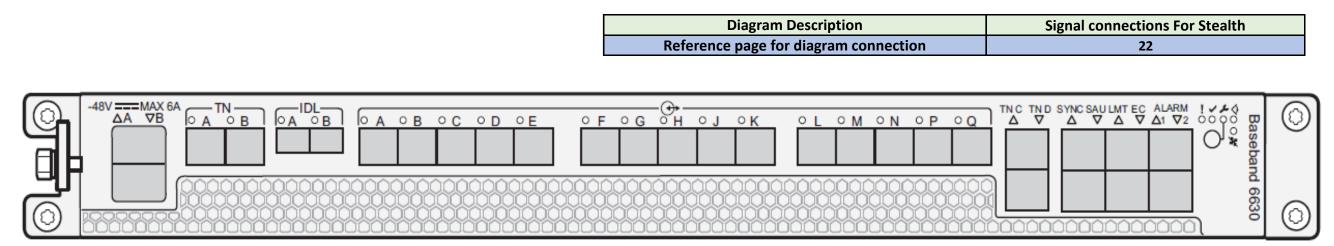


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	Tef R503 Port 1 Sector 1	Tef R503 Port 2 Sector 2	Tef R503 Port 3 Sector 3				2217 B1 Data 1 Radio 1 Sector 1	2217 B1 Data 1 Radio 1 Sector 2	2217 B1 Data 1 Radio 1 Sector 3						
(L+N)VF	VF R503 Port 1 Sector 1	VF R503 Port 2 Sector 2	VF R503 Port 3 Sector 3				2217 B1 Data 2 Radio 1 Sector 1	2217 B1 Data 2 Radio 1 Sector 2	2217 B1 Data 2 Radio 1 Sector 3						

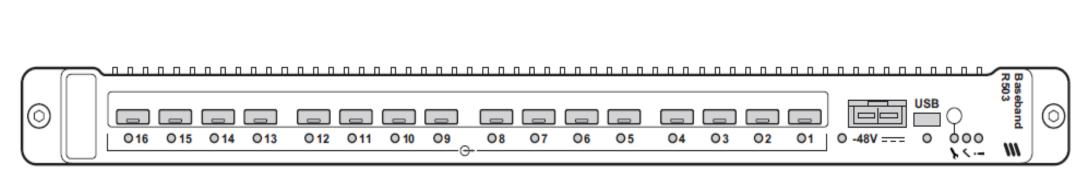


CPRI Port	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Tef	RUS B20 Data 1 Radio 1 Sector 1	RUS B20 Data 1 Radio 2 Sector 1	Data 1 Radio 1		RUS B20 Data 1 Radio 1 Sector 2	RUS B20 Data 1 Radio 2 Sector 2	RUS B3 Data 1 Radio 1 Sector 2			RUS B20 Data 1 Radio 1 Sector 3	RUS B20 Data 1 Radio 2 Sector 3	RUS B3 Data 1 Radio 1 Sector 3		Tef 6630 Port C Sector 3	Port B	Tef 6630 Port A Sector 1
VF	RUS B20 Data 2 Radio 1 Sector 1	RUS B20 Data 2 Radio 2 Sector 1			RUS B20 Data 2 Radio 1 Sector 2	RUS B20 Data 2 Radio 2 Sector 2				RUS B20 Data 2 Radio 1 Sector 3	RUS B20 Data 2 Radio 2 Sector 3			VF 6630 Port C Sector 3	Port B	VF 6630 Port A Sector 1

Diagram Description	Signal connections For Stealth No-L18
Reference page for diagram connection	23

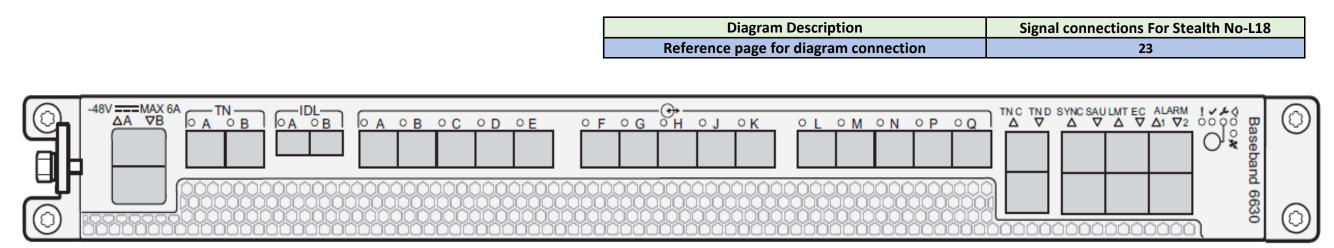


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	M	N	Р	Q
Tef	RUS B20 Data 1 Radio 1 Sector 1	RUS B20 Data 1 Radio 1 Sector 2	RUS B20 Data 1 Radio 1 Sector 3				2217 B1 Data 1 Radio 1 Sector 1		2217 B1 Data 1 Radio 1 Sector 2		2217 B1 Data 1 Radio 1 Sector 3		RUS B20 Data 1 Radio 2 Sector 1	RUS B20 Data 1 Radio 2 Sector 2	RUS B20 Data 1 Radio 2 Sector 3
VF	RUS B20 Data 2 Radio 1 Sector 1	RUS B20 Data 2 Radio 1 Sector 2	RUS B20 Data 2 Radio 1 Sector 3				2217 B1 Data 2 Radio 1 Sector 1		2217 B1 Data 2 Radio 1 Sector 2		2217 B1 Data 2 Radio 1 Sector 3		RUS B20 Data 2 Radio 2 Sector 1	RUS B20 Data 2 Radio 2 Sector 2	RUS B20 Data 2 Radio 2 Sector 3

Diagram Description	Signal connections For Stealth No-L18
Reference page for diagram connection	24

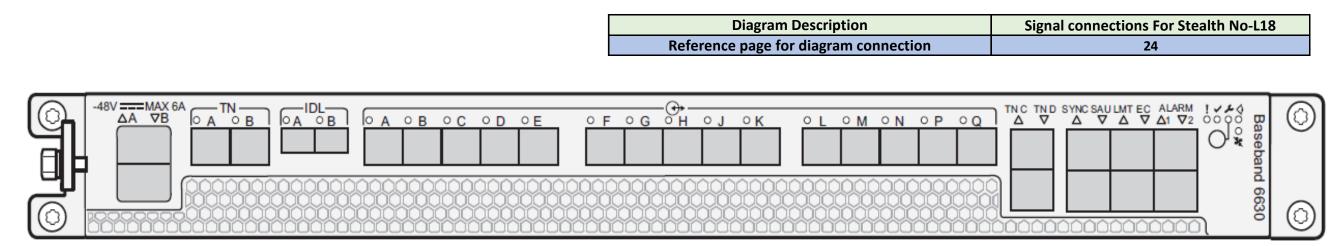


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	RUS B20 Data 1 Radio 1 Sector 1	RUS B20 Data 1 Radio 1 Sector 2	RUS B20 Data 1 Radio 1 Sector 3	RUS B20 Data 1 Radio 2 Sector 1	RUS B20 Data 1 Radio 2 Sector 2	Data 1 Radio 2	2217 B1 Data 1 Radio 1 Sector 1	2217 B1 Data 1 Radio 1 Sector 2	2217 B1 Data 1 Radio 1 Sector 3						
(L+N)VF	RUS B20 Data 2 Radio 1 Sector 1	RUS B20 Data 2 Radio 1 Sector 2	RUS B20 Data 2 Radio 1 Sector 3	RUS B20 Data 2 Radio 2 Sector 1	RUS B20 Data 2 Radio 2 Sector 2	Data 2 Radio 2	2217 B1 Data 2 Radio 1 Sector 1	2217 B1 Data 2 Radio 1 Sector 2	2217 B1 Data 2 Radio 1 Sector 3						

Diagram Description	Signal connections For Stealth Lancaster
Reference page for diagram connection	25

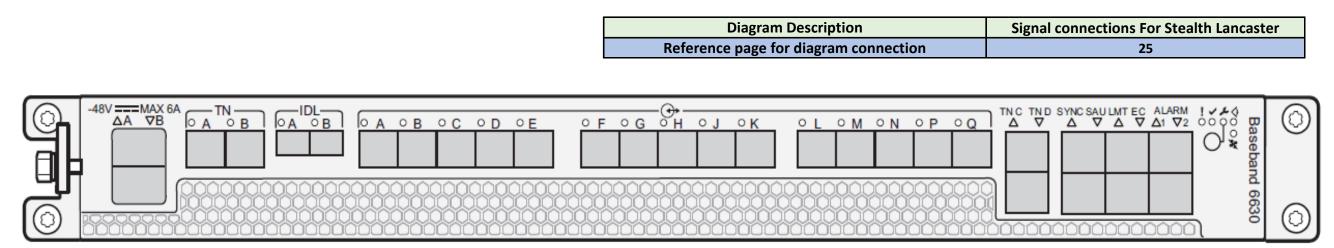


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
Tef	2217 B3 Data 1 Radio 1 Sector 1	2217 B3 Data 1 Radio 1 Sector 2	2217 B3 Data 1 Radio 1 Sector 3					2217 B1 Data 1 Radio 1 Sector 1		2217 B1 Data 1 Radio 1 Sector 2		2217 B1 Data 1 Radio 1 Sector 3	2217 B20 Data 1 Radio 1 Sector 1	2217 B20 Data 1 Radio 1 Sector 2	2217 B20 Data 1 Radio 1 Sector 3
VF	2217 B3 Data 2 Radio 1 Sector 1	2217 B3 Data 2 Radio 1 Sector 2	2217 B3 Data 2 Radio 1 Sector 3					2217 B1 Data 2 Radio 1 Sector 1		2217 B1 Data 2 Radio 1 Sector 2		Data 2 Radio 1	2217 B20 Data 2 Radio 1 Sector 1	2217 B20 Data 2 Radio 1 Sector 2	2217 B20 Data 2 Radio 1 Sector 3

Diagram Description	Signal connections For Stealth Lancaster
Reference page for diagram connection	26

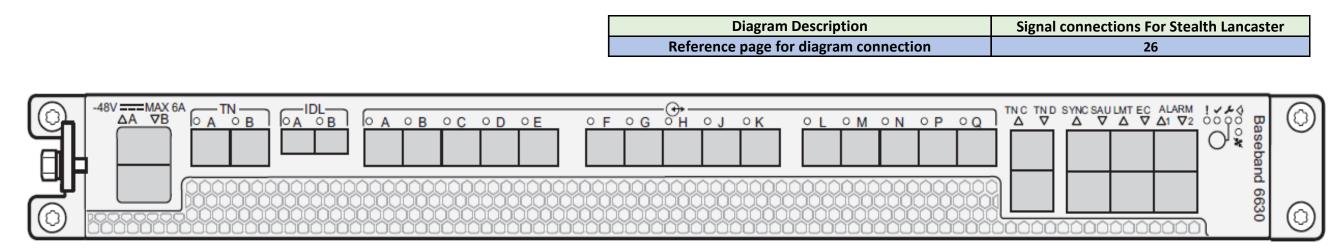


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
(L+N)Tef	2217 B3 Data 1 Radio 1 Sector 1	2217 B3 Data 1 Radio 1 Sector 2	2217 B3 Data 1 Radio 1 Sector 3	2217 B1 Data 1 Radio 1 Sector 1	2217 B1 Data 1 Radio 1 Sector 2	Data 1 Radio 1	2217 B20 Data 1 Radio 1 Sector 1	2217 B20 Data 1 Radio 1 Sector 2	2217 B20 Data 1 Radio 1 Sector 3						
(L+N)VF	2217 B3 Data 2 Radio 1 Sector 1	2217 B3 Data 2 Radio 1 Sector 2	2217 B3 Data 2 Radio 1 Sector 3	2217 B1 Data 2 Radio 1 Sector 1	2217 B1 Data 2 Radio 1 Sector 2	Data 2 Radio 1	2217 B20 Data 2 Radio 1 Sector 1	Data 2 Radio 1	2217 B20 Data 2 Radio 1 Sector 3						

Diagram Description	Signal connections For Low L18/UNLR
Reference page for diagram connection	27

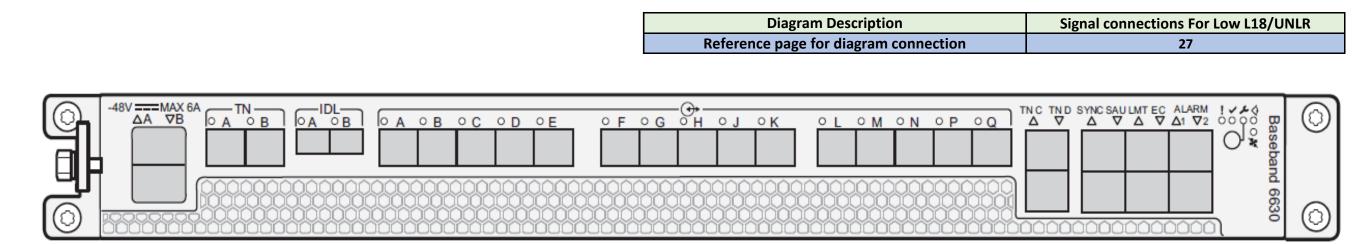


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
	Radio	Radio	Radio	RUS B3											
Tef	2238	2238	2238	Radio 1	Radio 1	Radio 1	Radio 2	Radio 2	Radio 2						
rei	Data 1														
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3						
	Radio	Radio	Radio												
VE	2238	2238	2238												
VF	Data 2	Data 2	Data 2												
	Sector 1	Sector 2	Sector 3												

Diagram Description	Signal connections For Low
Reference page for diagram connection	28

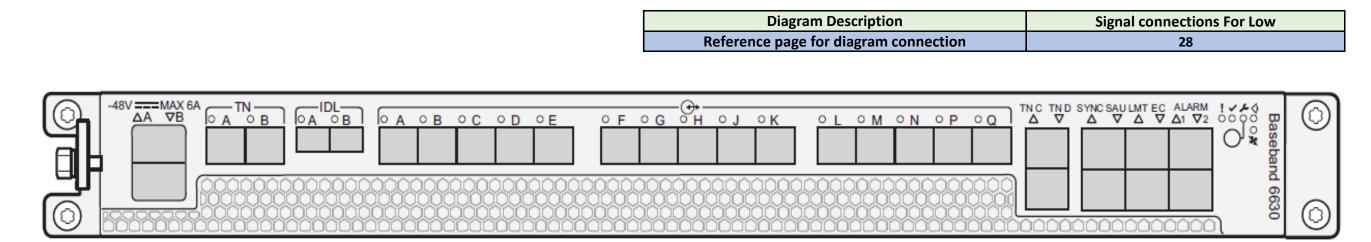


CPRI Port	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
Tef	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3												
VF	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3												

Diagram Description	Signal connections For Low Non-RRU
Reference page for diagram connection	29

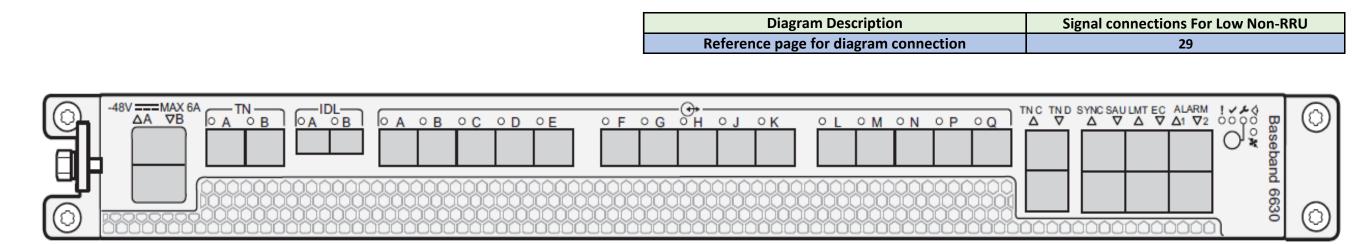


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
	RUS B20														
T-£	Radio 2	Radio 2	Radio 2	Radio 1	Radio 1	Radio 1									
Tef	Data 1														
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3									
	RUS B20														
VF	Radio 2	Radio 2	Radio 2	Radio 1	Radio 1	Radio 1									
VF	Data 2														
	Sector 1	Sector 2	Sector 3	Sector 1	Sector 2	Sector 3									

Diagram Description	Signal connections For L21 RUS UU21
Reference page for diagram connection	30

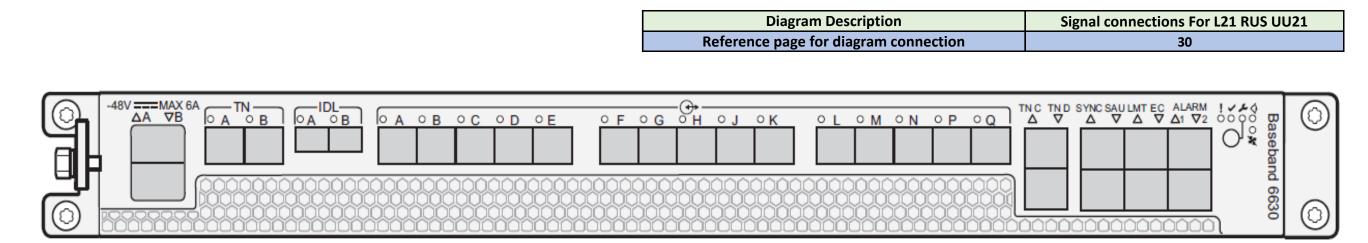


CPRI Port	Α	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
	RUS B1														
	Radio 1	Radio 2	Radio 1	Radio 2	Radio 1	Radio 2									
Tef	Data 1														
	Sector 1	Sector 1	Sector 2	Sector 2	Sector 3	Sector 3									
	RUS B1														
VF	Radio 1	Radio 2	Radio 1	Radio 2	Radio 1	Radio 2									
VF	Data 2														
	Sector 1	Sector 1	Sector 2	Sector 2	Sector 3	Sector 3									

Diagram Description	Signal connections For RBSERS Small SF
Reference page for diagram connection	31

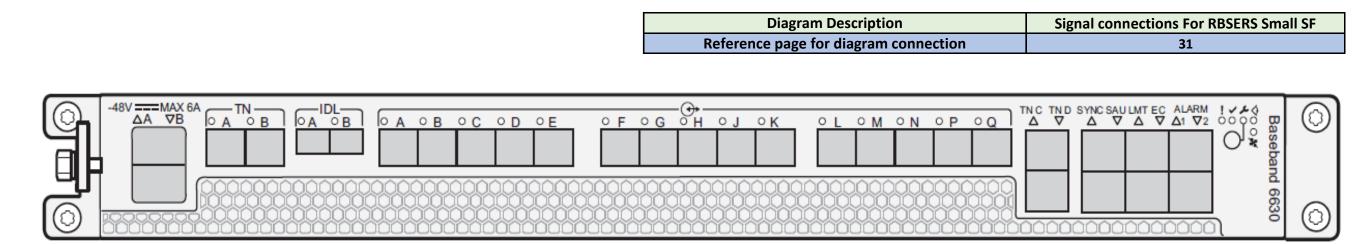


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
Tef	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3						
VF	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3						
Tef/VF	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3												

Diagram Description	Signal connections For RBSERS Small SF
Reference page for diagram connection	32

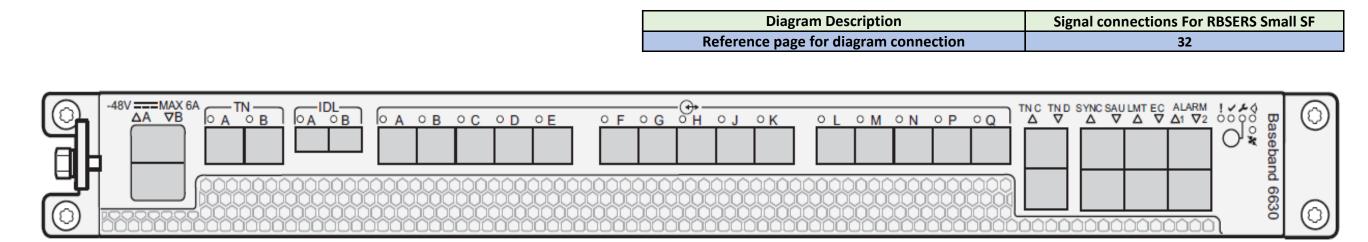


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	M	N	Р	Q
(L+N)Tef	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3	4415 B1 Data 1 Radio 1 Sector 1	4415 B1 Data 1 Radio 1 Sector 2	4415 B1 Data 1 Radio 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
(L+N)VF	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3	4415 B1 Data 2 Radio 1 Sector 1	4415 B1 Data 2 Radio 1 Sector 2	4415 B1 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3						
(3G)Tef/VF	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3												
(TDD+L18)Tef	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3												

Diagram Description	Signal connections For RBSERS L18 Small SF
Reference page for diagram connection	33

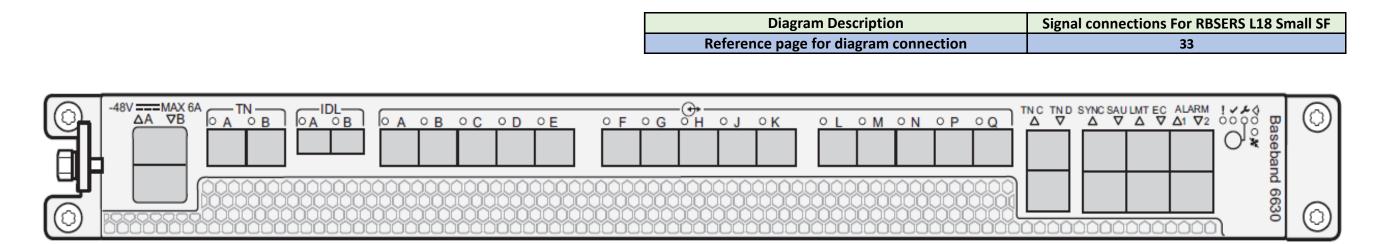


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	M	N	Р	Q
Tef	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3	4480 B1/B3 Data 1 Radio 1 Sector 1	4480 B1/B3 Data 1 Radio 1 Sector 2	4480 B1/B3 Data 1 Radio 1 Sector 3	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3						
VF	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3	4480 B1/B3 Data 2 Radio 1 Sector 1	4480 B1/B3 Data 2 Radio 1 Sector 2	4480 B1/B3 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3						
Tef/VF	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3												

Diagram Description	Signal connections For RBSERS L18 Small SF						
Reference page for diagram connection	34						

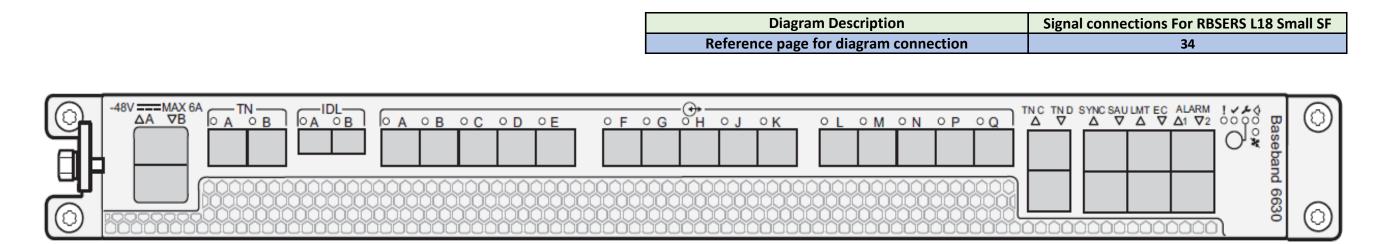


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	M	N	Р	Q
(L+N)Tef	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3	4480 B1/B3 Data 1 Radio 1 Sector 1	4480 B1/B3 Data 1 Radio 1 Sector 2	4480 B1/B3 Data 1 Radio 1 Sector 3	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3						
(L+N)VF	Radio 2238 Data 2 Sector 1	Radio 2238 Data 2 Sector 2	Radio 2238 Data 2 Sector 3	4480 B1/B3 Data 2 Radio 1 Sector 1	4480 B1/B3 Data 2 Radio 1 Sector 2	4480 B1/B3 Data 2 Radio 1 Sector 3	Radio 4415 B7A Data 1 Sector 1	Radio 4415 B7A Data 1 Sector 2	Radio 4415 B7A Data 1 Sector 3						
(3G)Tef/VF	Radio 2238 Data 1 Sector 1	Radio 2238 Data 1 Sector 2	Radio 2238 Data 1 Sector 3												
(TDD+L18)Tef	Radio 8808 B40Y Data 1 Sector 1	Radio 8808 B40Y Data 1 Sector 2	Radio 8808 B40Y Data 1 Sector 3												

Diagram Description	GU900 (3-sector)				
Reference page for diagram connection	35				




			CPRI _I	oorts							
	F	Е	D	С	В	Α					
				RUS B8	RUS B8	RUS B8					
				Data 2	Data 2	Data 2					
Tef				Sector 3	Sector 2	Sector 1					
				RUS B8	RUS B8	RUS B8					
				Data 2	Data 2	Data 2					
VF				Sector 3	Sector 2	Sector 1					




			CPRI p	oorts		
	F	Е	D	С	В	Α
	RUS B8					
	Data 1					
Tef/VF	Sector 3	Sector 2	Sector 1	Sector 3	Sector 2	Sector 1

Diagram Description	GU900 (2-sector)				
Reference page for diagram connection	36				




			CPRI _I	oorts		
	F	E	D	С	В	Α
					RUS B8	RUS B8
					Data 2	Data 2
Tef					Sector 2	Sector 1
					RUS B8	RUS B8
					Data 2	Data 2
VF					Sector 2	Sector 1

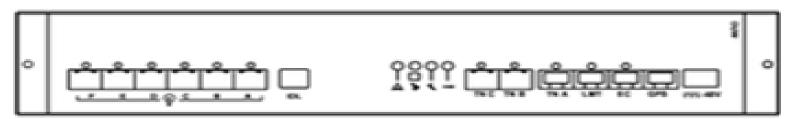


			CPRI p	orts			
	F	Е	D	С	В	Α	
		RUS B8	RUS B8		RUS B8	RUS B8	
		Data 1	Data 1		Data 1	Data 1	
Tef/VF		Sector 2	Sector 1		Sector 2	Sector 1	

Diagram Description	Signal connections For 5G Tef 8x8
Reference page for diagram connection	37

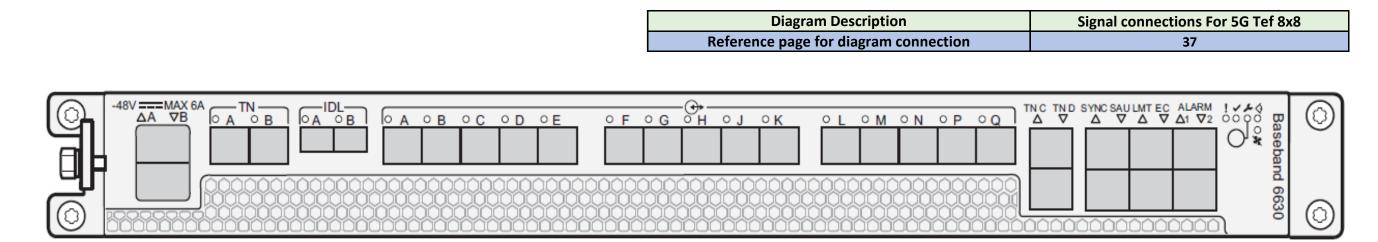


CPRI Port	А	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q
Tef	Radio 8823 B42G Data 1 Sector 1	Radio 8823 B42G Data 1 Sector 2	Radio 8823 B42G Data 1 Sector 3												

Diagram Description	Signal connections For 5G Tef M-MiMO						
Reference page for diagram connection	38						

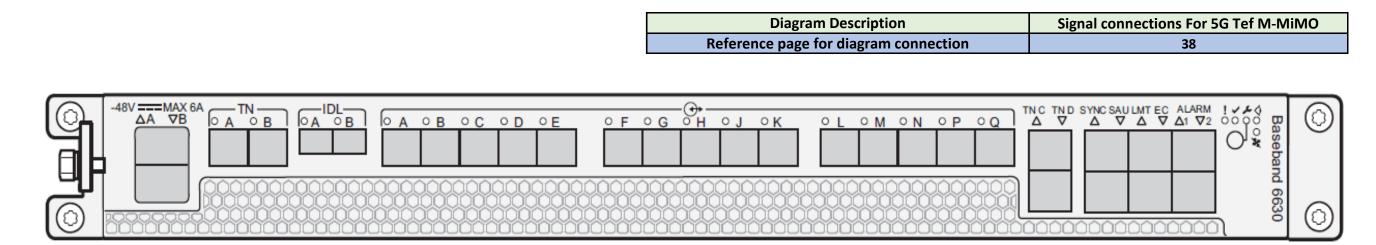


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
Tef	AIR 6488 B42F	AIR 6488 B42F	AIR 6488 B42F	AIR 6488 B42F	AIR 6488 B42F	AIR 6488 B42F									
	Data 1 Sector 1	Data 1 Sector 2	Data 1 Sector 3	Data 2 Sector 1	Data 2 Sector 2	Data 2 Sector 3									

Diagram Description	Signal connections For 5G MoRAN 8x8
Reference page for diagram connection	39

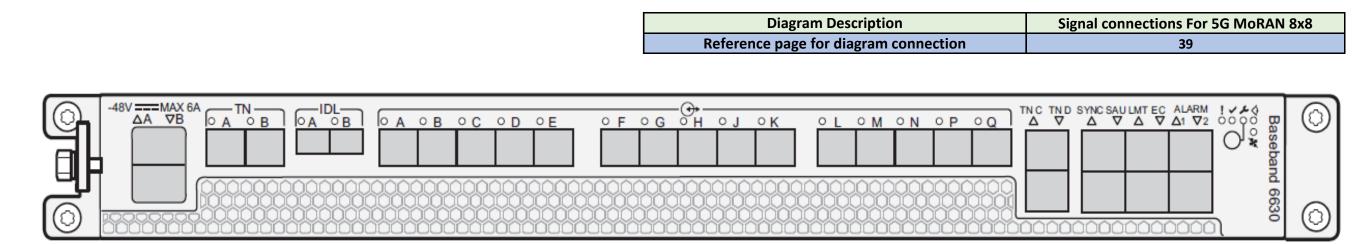


CPRI Port	Α	В	С	D	E	F	G	Н	J	K	L	M	N	Р	Q
	Radio	Radio	Radio												
	8823	8823	8823												
Tef	B42G	B42G	B42G												
	Data 1	Data 1	Data 1												
	Sector 1	Sector 2	Sector 3												
	Radio	Radio	Radio												
	8823	8823	8823												
VF	B42G	B42G	B42G												
	Data 2	Data 2	Data 2												
	Sector 1	Sector 2	Sector 3												

Diagram Description	Signal connections For 5G MoRAN M-MiMO
Reference page for diagram connection	40

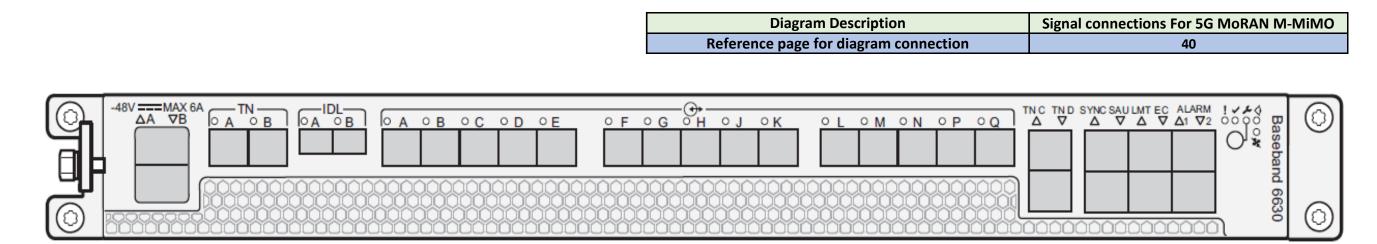


CPRI Port	А	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q
	AIR	AIR	AIR												
	6488	6488	6488												
Tef	B42F	B42F	B42F												
	Data 1	Data 1	Data 1												
	Sector 1	Sector 2	Sector 3												
	AIR	AIR	AIR												
	6488	6488	6488												
VF	B42F	B42F	B42F												
	Data 2	Data 2	Data 2												
	Sector 1	Sector 2	Sector 3												

Diagram Description	GU900 (3-sector)
Reference page for diagram connection	42



	CPRI ports										
	F	Е	D	С	В	Α					
		RUS B8	RUS B8		RUS B8	RUS B8					
		Data 2	Data 2		Data 2	Data 2					
Tef/VF		Sector 2	Sector 1		Sector 2	Sector 1					
			RUS B8			RUS B8					
			Data 2			Data 2					
Tef/VF			Sector 3			Sector 3					

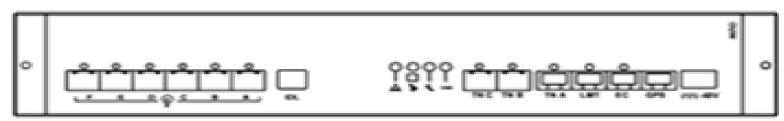

	CPRI ports										
	F	Е	D	С	В	Α					
	RUS B8	RUS B8	RUS B8	RUS B8	RUS B8	RUS B8					
	Data 1	Data 1	Data 1	Data 1	Data 1	Data 1					
Tef/VF	Sector 3	Sector 2	Sector 1	Sector 3	Sector 2	Sector 1					