


PT200, PT200EZ, PT1000, PT1000EZ, PT1200EZ, PTC5E & PTC6 PLUS POWER TRANSFER

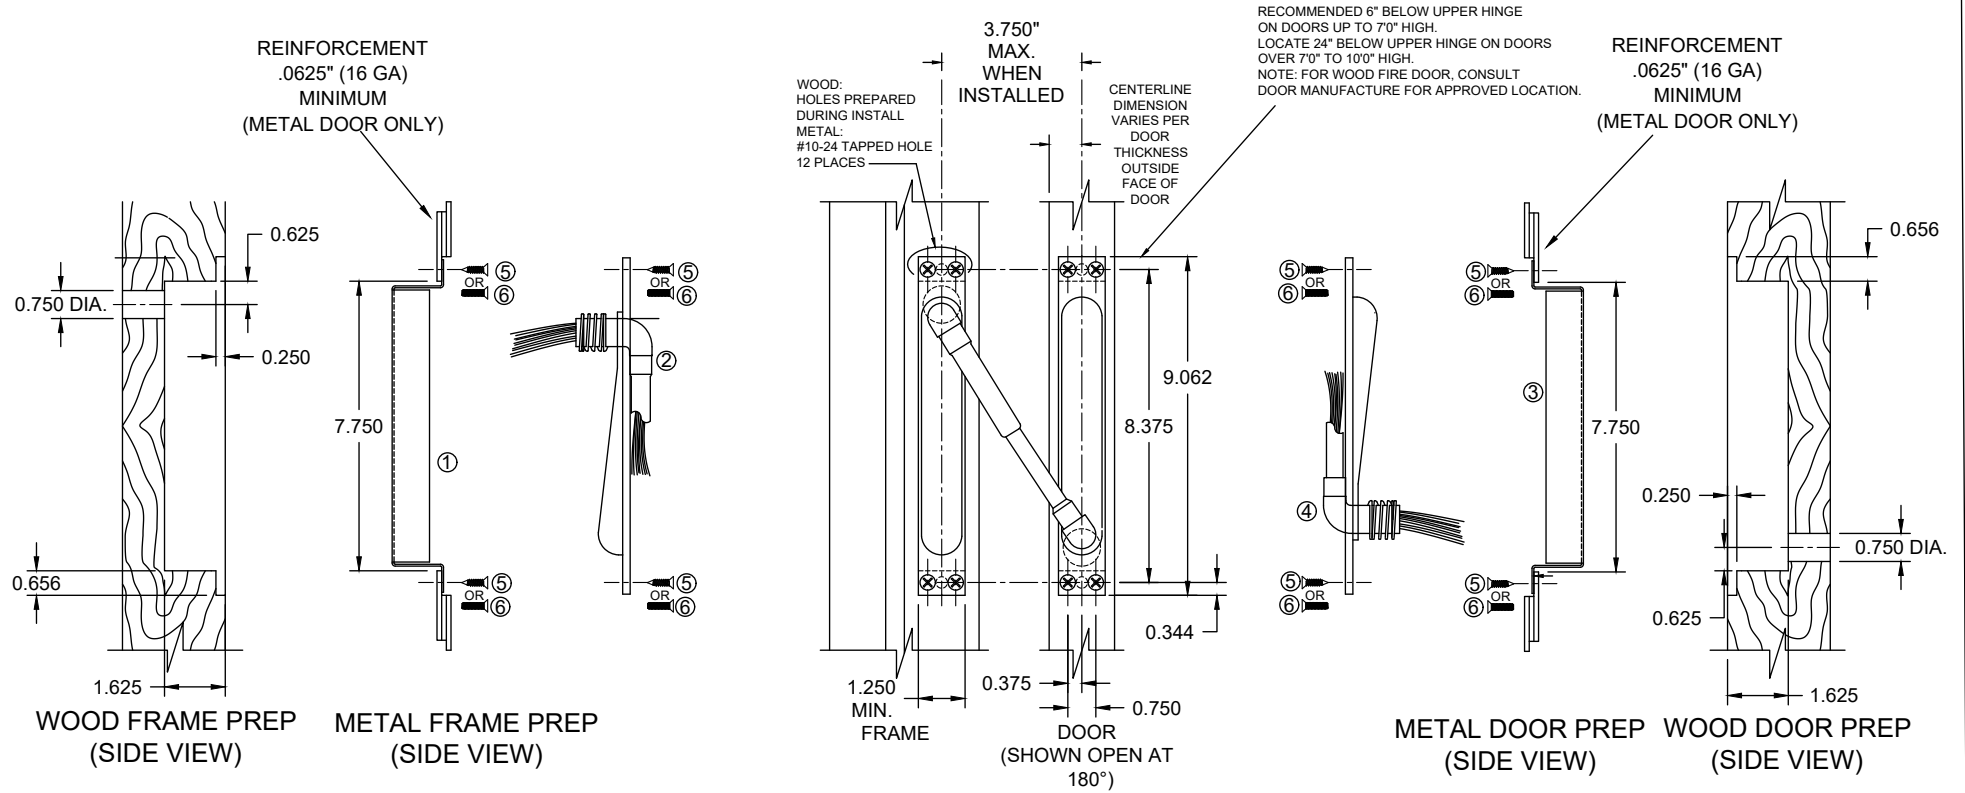

FOR USE WITH:

- DOOR THICKNESS 1-3/4" TO 2"
- MAX. 180° DOOR SWING-BUTT HINGES UP TO 5" WIDE
- MAX. 180° DOOR SWING-3/4" OFFSET PIVOTS/PIVOT SETS
- MAX. 180° DOOR SWING-CAM LIFT HINGES (UP TO 1/2" LIFT)
- MAX. 110° DOOR SWING-6" WIDE BUTT HINGES
- MAX. 90°- SWING CLEAR HINGES
- MAX. 90° DOOR SWING-INVISIBLE HINGES

NOT FOR USE WITH:

- 1-1/2" OFFSET PIVOTS
- BUTT HINGES LARGER THAN 6" WIDE
- POCKET PIVOTS
- CENTER HUNG PIVOTS/PIVOT SETS
- BALANCED DOOR

• SWING CLEAR PIVOTS & HINGES MORE THAN 90°	
PT200	(1) 24 AWG WIRES-MAX. RATING 24VDC, 5A OR 120VAC NEC CLASS 3
PT200EZ* with Molex® Micro-Fit 3.0 Connectors	(2) 18 AWG WIRES-MAX. RATING 24VDC, 5A OR 120VAC NEC CLASS 3
PT1000	(10) 24 AWG WIRES-MAX. RATING 24VDC, 1A
PT1000EZ* with Molex® Micro-Fit 3.0 Connectors	(12) 24 AWG WIRES-MAX. RATING 24VDC, 1A
PT1200EZ* with Molex® Mini-Fit Jr. Connectors	(10) 24 AWG WIRES-MAX. RATING 24VDC, 1A, (2) 18 AWG WIRES-MAX. RATING 24VDC, 5A OR 120VAC NEC CLASS 3
PTC5E	CAT-5E STANDARD ETHERNET CABLE, (MAX. 350 MHz), (1) 22 AWG WIRE; MAX. RATING: 24 VDC, 1A
PTC6PLUS	CAT 6 STANDARD ETHERNET CABLE (MAX. 550 MHz) (1) 22 AWG WIRE; MAX. RATING: 24 VDC, 1A

*EZ INDICATES MODEL WITH ABH EZ CONNECT WIRE CONNECTORS

© BRAND NAMES ARE TRADEMARKS OR REGISTERED TRADEMARKS OF THEIR RESPECTIVE COMPANIES

ITEM	QTY	PART DESCRIPTION
1	1	FRAME SIDE STEEL BACK BOX
2	1	FRAME SIDE ABH POWER TRANSFER ASSEMBLY
3	1	DOOR SIDE STEEL BACK BOX
4	1	DOOR SIDE ABH POWER TRANSFER ASSEMBLY
5	12	#10 X 3/4" PHILLIPS FLAT HEAD WOOD SCREW, ZINC PLATE
6	12	10-32 X 3/4" PHILLIPS FLAT HEAD MACHINE SCREW, ZINC PLATE

PT200 & PT1000-11.DWG

ABH ARCHITECTURAL
BUILDERS
HARDWARE
Our Parts Are Made of MORE

www.abhmfg.com
E-mail: abhinfo@abhmfg.com
740 HILLTOP DR., ITASCA, IL 60143
630.875.9900

PT200, PT200EZ, PT1000, PT1000EZ
PT1200EZ, PTC5E & PTC6PLUS

© 2025 ABH Mfg., Inc.
printed in USA

PAGE 1 OF 2
REVISED 04-08-26

PT200, PT200EZ, PT1000, PT1000EZ, PT1200EZ, PTC5E & PTC6 PLUS POWER TRANSFER

Note:The Installation Instructions below are presumed that the door and frame had already been properly prepped to accept the ABH power transfer unit.

Verify prep per dimensions for the door and frame found on page 1.

Frame Side

1. Mount Frame Back box(Item 1) to frame by pushing into prep and using (1) 10-24 machine(Item 6) or #10 wood (Item 5) screw provided.

Note:Type of screws used are dependent on frame material

2. Pull a length of field wire through the top(metal doors) or back(wood doors) knockout of the box (typically 5-6" is best).

Door Side

3. Mount Door Back box(Item 3) to frame by pushing into prep and using (1) 10-24 machine(Item 6) or #10 wood (Item 5) screw provided.

Note:Type of screws used are dependent on door material

4. Pull a length of field wire through the top(metal doors) or back(wood doors) knockout of the box (typically 5-6" is best).

Connect Wires

5. Connect Frame Side Wires to field wires pulled through in previous steps.
6. Connect Door Side wires to field wires pulled through in previous steps.

Note:All wire connections must follow local codes and/or ABH Manufacturing's Minimum Requirements** to ensure proper and lasting connections

****ABH requires the use of wire nuts and electrical tape or Crimp Connectors
when connecting wires to their source or supplied EZ Connectors**

Mount PT Assembly

Frame Side

7. Gently fold connected wires into back box, avoiding pinching, and push the PT housing (Item 2) into the prep. Use the (4) 10-24 Machine(Item 6) or #10 Wood Screws(Item 5) to fasten frame side to the frame.

Door Side

8. Gently fold connected wires into back box, avoiding pinching, and push the PT housing (Item 2) into the prep. Use the (4) 10-24 machine(Item 6) or #10 wood Screws(Item 5) to fasten frame side to the door.

Note:Type of screws used are dependent on door materials

Test that the door opens and closes properly without binding or obstruction.

ABH Power Transfer Units MUST be installed per the provided instructions and wired by a qualified electrician. ABH is not liable for failure or performance of the product due to improper installation methods and/or use. Improper use and/or installation of this product will void the standard warranty.

PT200 & PT1000-11.DWG



Our Parts Are Made of MORE

www.abhmfg.com
E-mail: abhinfo@abhmfg.com
740 HILLTOP DR., ITASCA, IL 60143
630.875.9900

PT200, PT200EZ, PT1000, PT1000EZ
PT1200EZ, PTC5E & PTC6PLUS

© 2025 ABH Mfg., Inc.
printed in USA

PAGE 2 OF 2
REVISED 08-26-25