


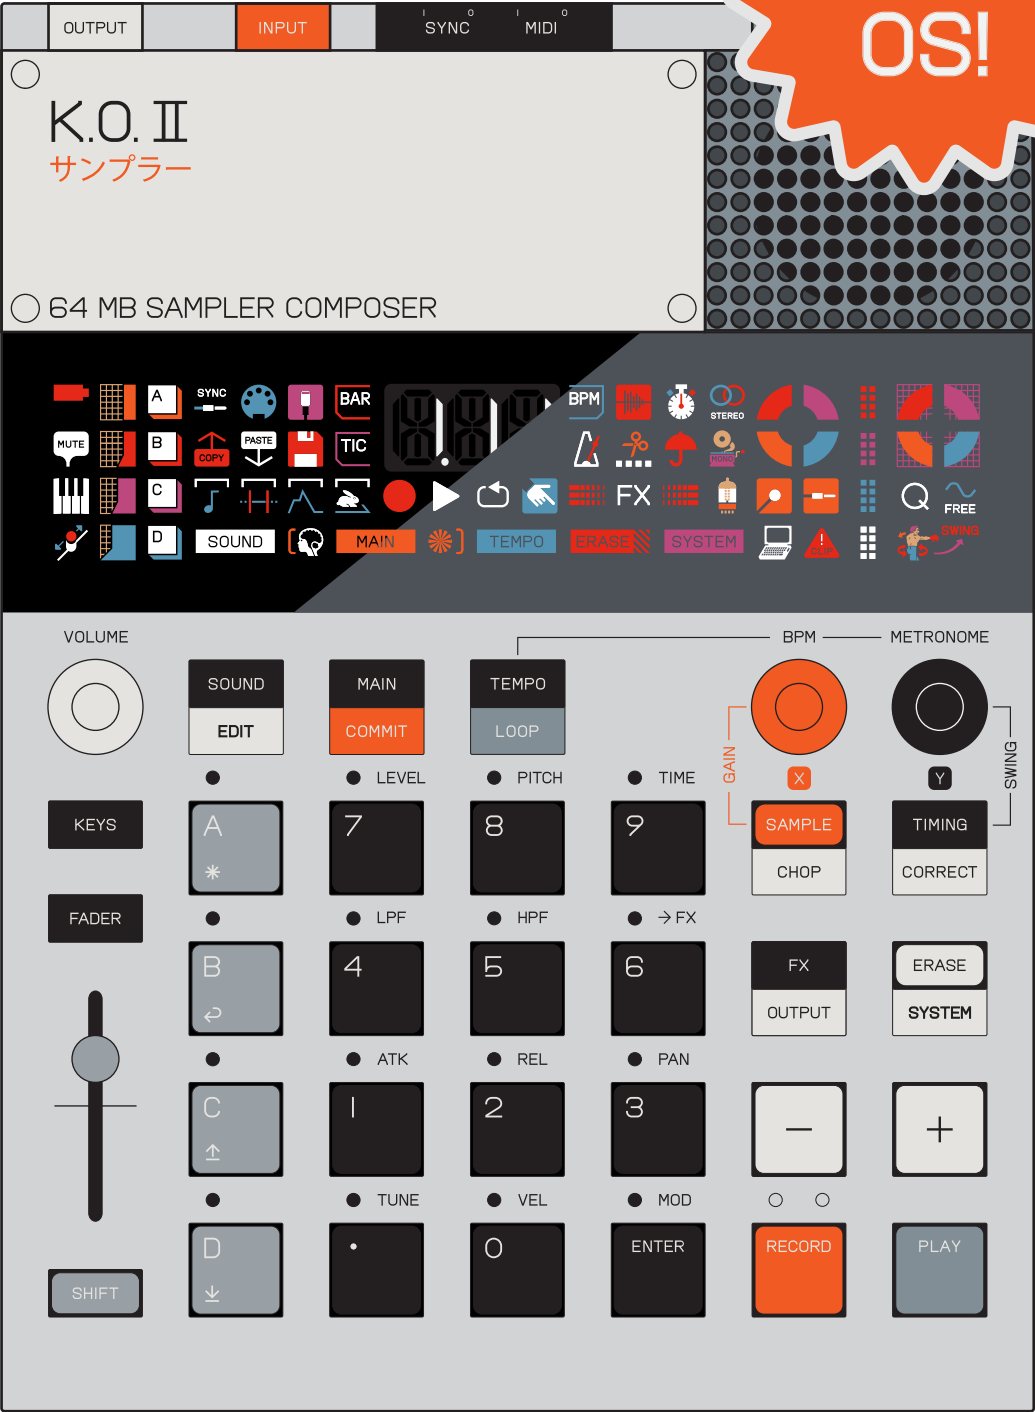

EP-133 K.O. II IS A 64 MB SAMPLER AND COMPOSER. JUST LIKE ITS POCKET-SIZED PREDECESSOR PO-33 K.O!, THIS SAMPLER IS A MIGHTY CONTENDER ON THE STAGE, IN THE STUDIO AND IN THE RING. SAMPLE DIRECTLY FROM YOUR FAVORITE SOURCE USING THE BUILT IN MIC OR 3.5 MM INPUT JACK,

SYNC AND SEQUENCE YOUR ENTIRE SETUP USING SYNC AND MIDI IN/OUT. POWER IT ALL WITH JUST 4X AAA BATTERIES. MAKE YOUR NEXT HIT WITH PUNCH-IN EFFECTS 2.0™ THEN SMASH YOUR BEAT WITH THE BUILT IN DISTORTION AND FX.

WHAT'S NEW

OS 2.0

APRIL 2025

- RESAMPLING
- SONG MODE
- HANDS FREE SAMPLING
- MIDI SIDECHAIN

- INCREASED POLYPHONY
- LARGER NOTE INTERVALS
- MIDI THRU
- + MORE

UPDATE NOW OR CLICK ON THE BULLET POINTS TO LEARN MORE.

NOTICE. READ THIS FIRST.

BATTERY INFORMATION:

1. INSTALL ONLY NEW BATTERIES OF THE SAME TYPE.
2. MAKE SURE TO ONLY INSERT BATTERIES IN THE CORRECT POLARITY, AS INDICATED IN THE BATTERY COMPARTMENT.
3. DO NOT MIX OLD AND NEW BATTERIES.
4. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINK) OR RECHARGEABLE (NICKEL CADMIUM) OR (NICKEL METAL HYBRIDE) BATTERIES.
5. DO NOT DISPOSE OF BATTERIES IN FIRE.
6. BATTERIES SHOULD BE RECYCLED OR DISPOSED OF AS PER STATE AND LOCAL GUIDELINES.

FCC STATEMENT:

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION;

IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES;

- REORIENT OR RELOCATE THE RECEIVING ANTENNA
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING CONDITIONS;

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ICES STATEMENT

CAN ICES-003 (B) / NMB-3 (B)

TEENAGE ENGINEERING WARRANTS THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIAL OR WORKMANSHIP FOR A PERIOD OF 12 MONTHS FROM THE DATE OF TEENAGE ENGINEERING'S SHIPMENT OF THE PRODUCT TO YOU, THE CUSTOMER. IN THE EVENT OF A DEFECT COVERED BY THIS LIMITED WARRANTY, TEENAGE ENGINEERING WILL, AT ITS OPTION AND FREE OF CHARGE TO CUSTOMER, REPAIR, REPLACE OR REFUND THE PURCHASE PRICE PAID.

TEENAGE ENGINEERING MAKES NO OTHER EXPRESS WARRANTIES EXCEPT AS PROVIDED HEREIN, AND ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL ONLY BE IN EFFECT DURING THE 12 MONTH WARRANTY PERIOD PROVIDED HEREUNDER. TEENAGE ENGINEERING'S LIABILITY ON ANY WARRANTY CLAIM SHALL BE LIMITED TO THE ACTUAL PURCHASE PRICE PAID. TEENAGE ENGINEERING SHALL NOT BE RESPONSIBLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, LOSS OF DATA, REVENUES, SALES, BUSINESS, GOODWILL OR USE.

WHAT DOES THIS LIMITED WARRANTY NOT COVER?

TEENAGE ENGINEERING HAS NO OBLIGATION TO REPAIR, REPLACE, OR PROVIDE REFUNDS IN THE FOLLOWING INSTANCES:

- IF THE ALLEGED DEFECT ARISES BECAUSE CUSTOMER HAS ALTERED OR REPAIRED THE PRODUCT WITHOUT THE PRIOR WRITTEN CONSENT OR AUTHORIZATION OF TEENAGE ENGINEERING;
- TACTILE FEEDBACK MAY VARY BETWEEN KEYS AND IS NOT CONSIDERED A DEFECT OF THE UNIT.
- IF CUSTOMER DID NOT FOLLOW ANY APPLICABLE INSTRUCTIONS FOR PROPER STORAGE, USAGE, OR MAINTENANCE OF THIS PRODUCT;
- IF CUSTOMER HAS FAILED TO NOTIFY TEENAGE ENGINEERING OF ANY DEFECT WHERE THE DEFECT SHOULD HAVE BEEN REASONABLY APPARENT ON INSPECTION; OR
- IF CUSTOMER FAILS TO NOTIFY TEENAGE ENGINEERING OF THE DEFECT WITHIN 12 MONTHS OF TEENAGE ENGINEERING'S SHIPMENT OF THIS PRODUCT TO CUSTOMER. THIS LIMITED WARRANTY DOES NOT COVER THE COST OF SHIPPING THE DEFECTIVE PRODUCT TO TEENAGE ENGINEERING FOR REPAIR, OR THE COST OF SHIPPING THE REPAIRED OR REPLACEMENT PRODUCT TO YOU. HOW DO CUSTOMERS RECEIVE WARRANTY SERVICE? PLEASE CALL YOUR TEENAGE ENGINEERING CUSTOMER SERVICE REPRESENTATIVE FOR DETAILS ON HOW TO RAISE AN ISSUE IN RELATION TO YOUR PRODUCT.

INTELLECTUAL PROPERTY RIGHTS

THIS PRODUCT CONTAINS INTELLECTUAL PROPERTY RIGHT MATERIAL (THE "MATERIAL") OWNED BY TEENAGE ENGINEERING.

PROTECTED MATERIAL

THE MATERIAL WITHIN THIS PRODUCT INCLUDES, BUT IS NOT LIMITED TO, SAMPLES, SOUND FILES, STYLE DATA, ACCOMPANIMENT PATTERNS, PHRASE DATA, AUDIO LOOPS, AND IMAGE DATA.

PERMITTED USAGE

YOU ARE PERMITTED TO USE THE MATERIAL IN THE CREATION, PERFORMANCE, RECORDING, AND DISTRIBUTION OF YOUR OWN ORIGINAL CREATION.

PROHIBITED USAGE

YOU ARE PROHIBITED FROM REDISTRIBUTING, RESELLING, LEASING, SHARING, REPRODUCING, OR PUBLICLY DISPLAYING THE MATERIAL IN ITS ORIGINAL OR MODIFIED FORM, INCLUDING THROUGH ONLINE PLATFORMS, PUBLIC PERFORMANCES, BROADCASTS, OR AS PART OF DERIVATIVE WORKS, UNLESS IT IS SUBSTANTIALLY TRANSFORMED INTO AN ORIGINAL CREATION.

RESPECT FOR THIRD-PARTY COPYRIGHTS


YOU ARE RESPONSIBLE FOR ENSURING THAT YOUR USE OF THE PRODUCT DOES NOT INFRINGE ON ANY THIRD-PARTY COPYRIGHTS. TEENAGE ENGINEERING ASSUMES NO LIABILITY FOR ANY COPYRIGHT INFRINGEMENTS THAT RESULT FROM THE USE OF THIS PRODUCT.

PROTECTED TRADEMARKS

TEENAGE ENGINEERING HOLDS ALL RIGHTS TO ITS REGISTERED TRADEMARKS.


WHAT'S IN THE BOX

CHECK THAT THE FOLLOWING ITEMS
ARE INCLUDED WHEN YOU OPEN THE BOX

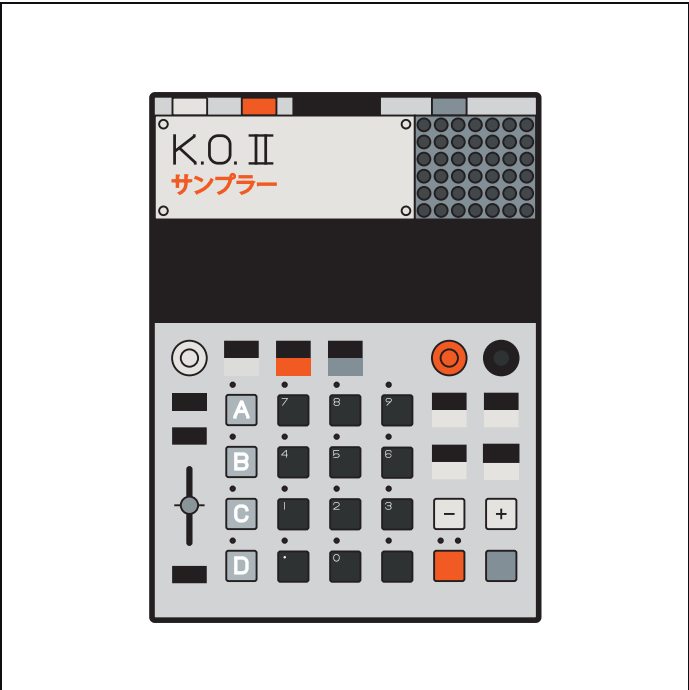

EP-133 UNIT

QUICK START GUIDE

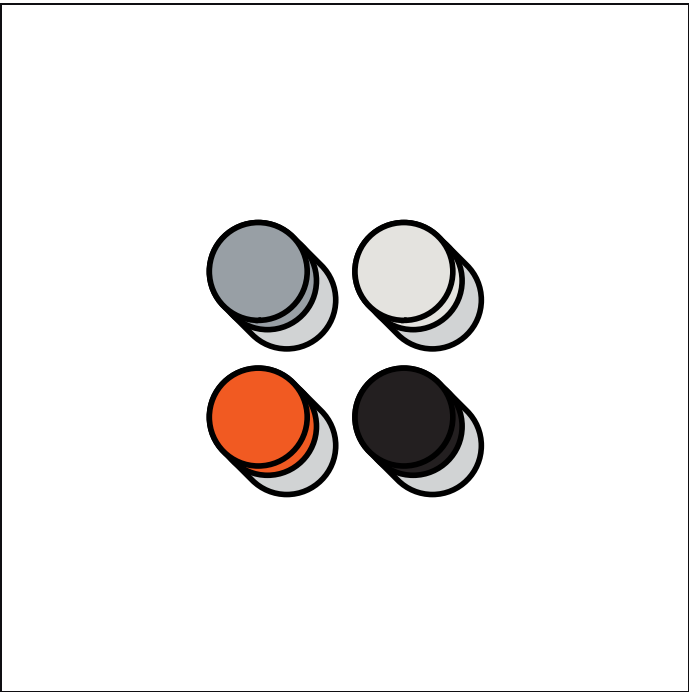

4X KNOBS

10" BOX AND PAPER FOAM TRAY

INDEX

CLICK ON THE SECTION YOU
WANT TO READ MORE ABOUT

①	HARDWARE OVERVIEW
1.1	INPUTS/OUTPUTS
1.2	SYNC CONNECTIONS
②	POWER ON
③	SCREEN
3.1	ICON MAP
④	BUTTONS AND COMBOS
4.1	GROUPS
4.2	PADS
4.3	– AND +
4.4	SHIFT
4.5	FADER
4.6	X AND Y KNOBS
4.7	TIMING
4.8	SAMPLE
⑤	GUIDE CONVENTIONS
⑥	WORKFLOW
6.1	COMMIT
6.2	SONG MODE

⑦	GET STARTED
7.1	MAKE A BEAT FROM SCRATCH!
7.2	SEQUENCE A BEAT FROM SCRATCH!
⑧	MODES
8.1	SOUND
8.2	SOUND EDIT
8.2.1	SOUND MODE
8.2.2	TRIM
8.2.3	ENVELOPE
8.2.4	TIME
8.2.5	MIDI
8.2.6	MUTE GROUP
8.3	MAIN
8.3.1	SONG MODE
8.4	TEMPO
8.4.1	TIME SIGNATURE
8.4.2	TEMPO MATCH

⑨	PLAY AND RECORD
9.1	LIVE RECORD
9.2	STEP SEQUENCE
9.3	KEYS MODE
9.4	FADER
9.5	COPY / PASTE
9.6	ERASE AND UNDO
9.7	OFFSET NOTES
⑩	FUNCTIONS
10.1	SAMPLE
10.2	SAMPLE TOOL
10.3	CHOP
10.4	TIMING
10.4.1	NOTE REPEAT
10.4.2	TIMING CORRECT
10.5	LOOP

II

EFFECTS [FX]

- II.1 DELAY
- II.2 REVERB
- II.3 DISTORTION
- II.4 CHORUS
- II.5 FILTER
- II.6 COMPRESSOR
- II.7 PUNCH-IN FX 2.0™
- II.8 LIVE INPUT FX
- II.9 OUTPUT

- II.9.1 SIDECCHAIN

I2

HOW TO


- I2.1 ENABLE VELOCITY SENSITIVITY
- I2.2 CHANGE THE SCALE IN KEYS MODE
- I2.3 TURN ON THE METRONOME WHILE PLAYING
- I2.4 SYNC TWO K.O. II UNITS
- I2.5 SYNC A POCKET OPERATOR TO K.O. II
- I2.6 SYNC K.O. II TO A POCKET OPERATOR
- I2.7 SYNC K.O. II TO A VINTAGE DRUM MACHINE
- I2.8 CONTROL K.O. II WITH A MIDI KEYBOARD
- I2.9 SEQUENCE EXTERNAL MIDI WITH K.O. II

INDEX

CLICK ON THE SECTION YOU
WANT TO READ MORE ABOUT

12.10	RESAMPLE A CHORD
⑭	SYSTEM
14.1	MIDI REFERENCE
14.2	MIDI NOTE MAP
14.3	LOCK MODE
14.4	ERROR CODES
⑮	ERASE DRIVE
⑯	TECHNICAL SPECIFICATIONS
⑰	CREDITS
⑱	WARNINGS, WARRANTY AND FCC
	WHAT'S NEW?

HARDWARE OVERVIEW

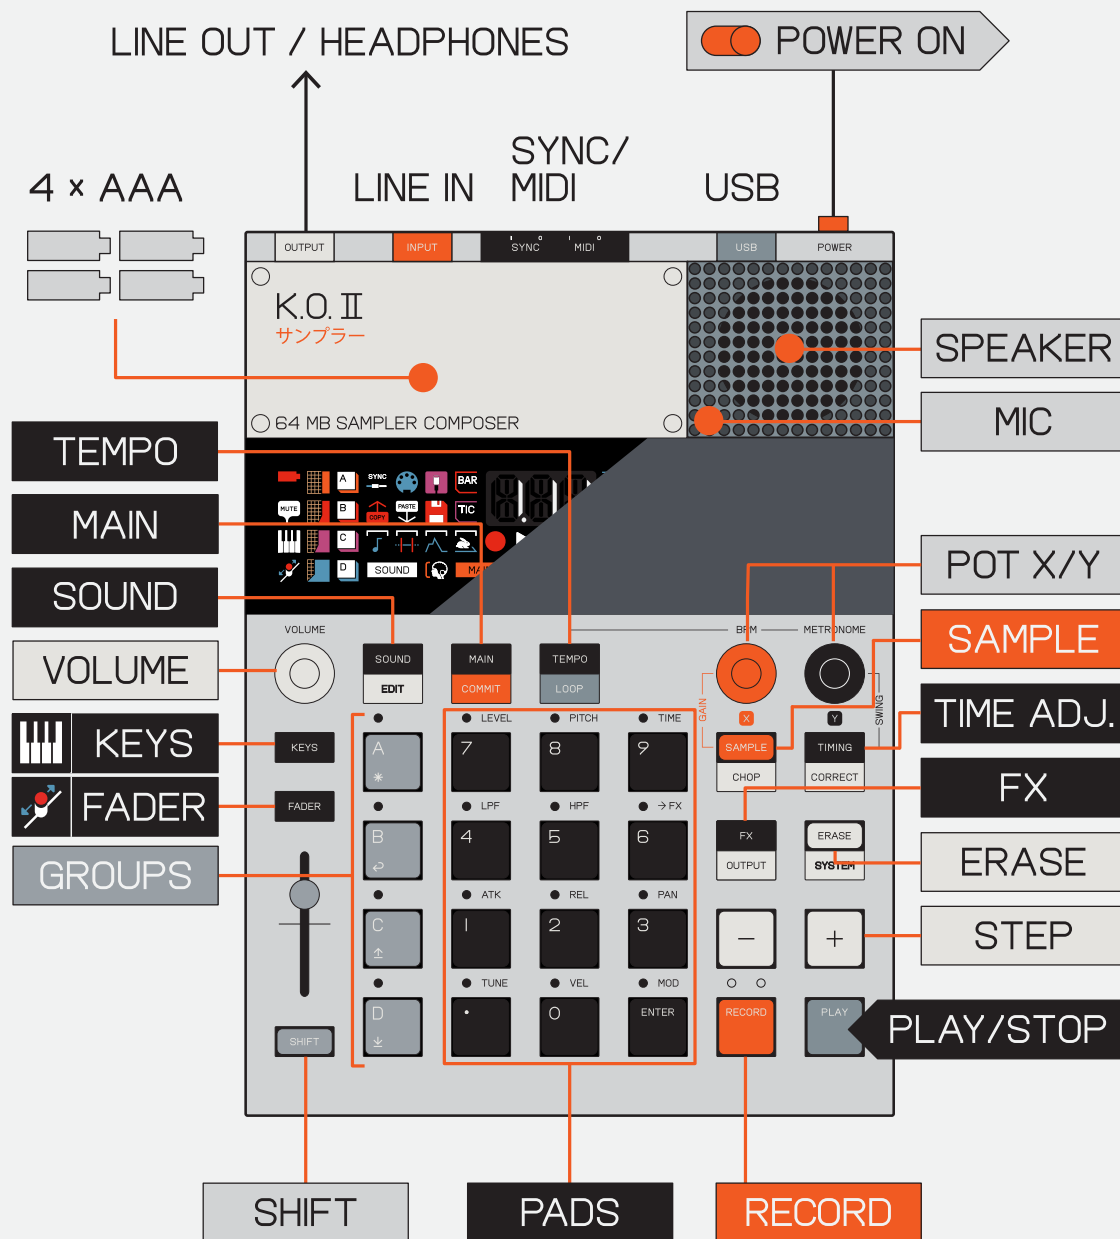

K.O. II HIGHLIGHTS!

- POWERFUL SAMPLER AND COMPOSER
- 999 SAMPLE SLOTS
- 12 SAMPLE PADS AND 4 GROUP PADS
- LINE IN AND OUT
- SYNC IN AND OUT
- MIDI IN AND OUT
- USB MIDI AND POWER
- HIGH RESOLUTION SEQUENCER
- 6 BUILT-IN FX
- PUNCH-IN FX 2.0™

EP-133 K.O. II IS A 64 MB SAMPLER AND COMPOSER. JUST LIKE IT'S POCKET-SIZED PREDECESSOR PO-33 K.O.I, THIS SAMPLER IS A MIGHTY CONTENDER ON THE STAGE, IN THE STUDIO AND IN THE RING. SAMPLE DIRECTLY FROM YOUR FAVORITE SOURCE USING THE BUILT IN MIC OR 3.5 MM INPUT JACK.


FRONT




BACK



LEFT


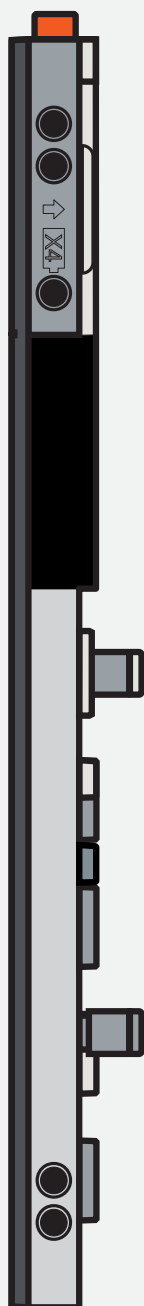


RIGHT

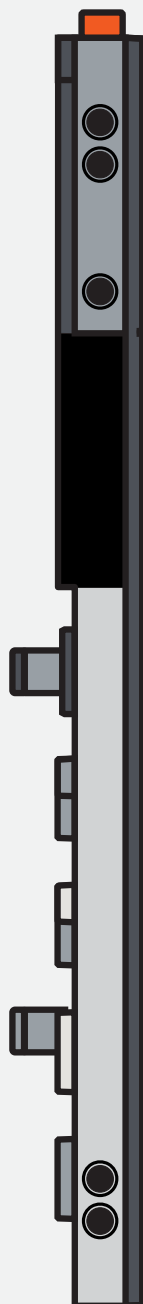

I.I INPUTS/OUTPUTS


TOP SIDE

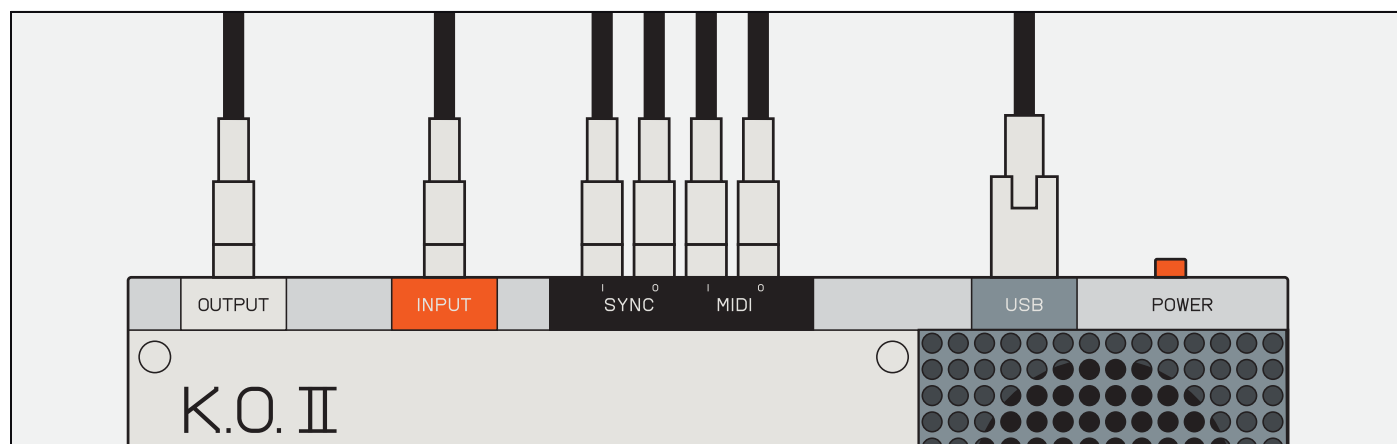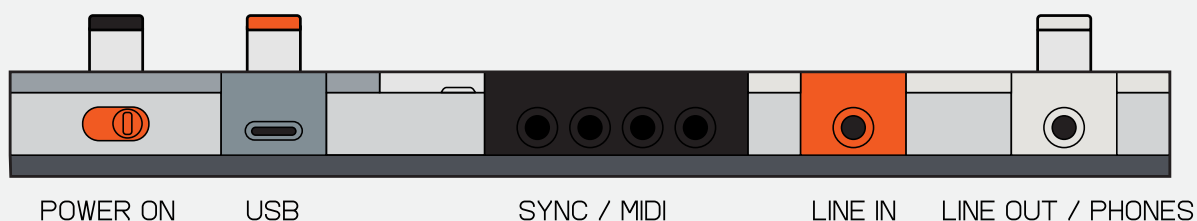

ON THE TOP SIDE OF THE UNIT, YOU WILL FIND ALL THE INPUTS AND OUTPUTS.


USE THE 3.5 MM STEREO INPUT TO CONNECT EXTERNAL INSTRUMENTS, TAPE RECORDERS OR AUDIO FROM YOUR PHONE. USE THE OUTPUT TO CONNECT A STEREO 3.5 MM CABLE TO YOUR SOUND SYSTEM, MIXER/SOUNDCARD OR HEADPHONES.

INPUT

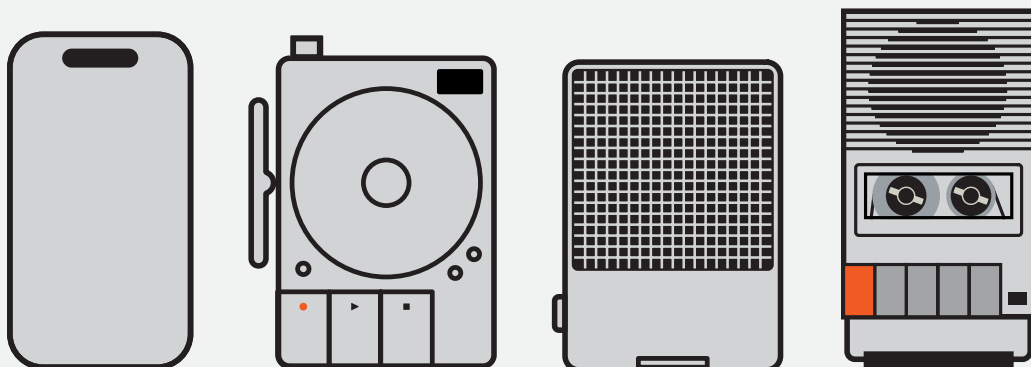


USE THE 3.5 MM STEREO INPUT TO CONNECT EXTERNAL INSTRUMENTS, VINYL PLAYERS, TAPE RECORDERS OR AUDIO FROM YOUR PHONE.

OUTPUT

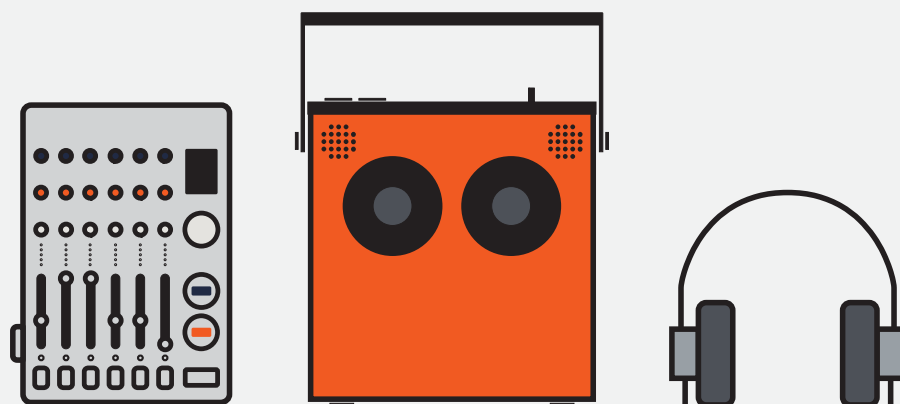


USE THE OUTPUT TO CONNECT A STEREO 3.5 MM CABLE TO YOUR SOUND SYSTEM, MIXER/SOUNDCARD OR HEADPHONES.

INPUT EXAMPLE

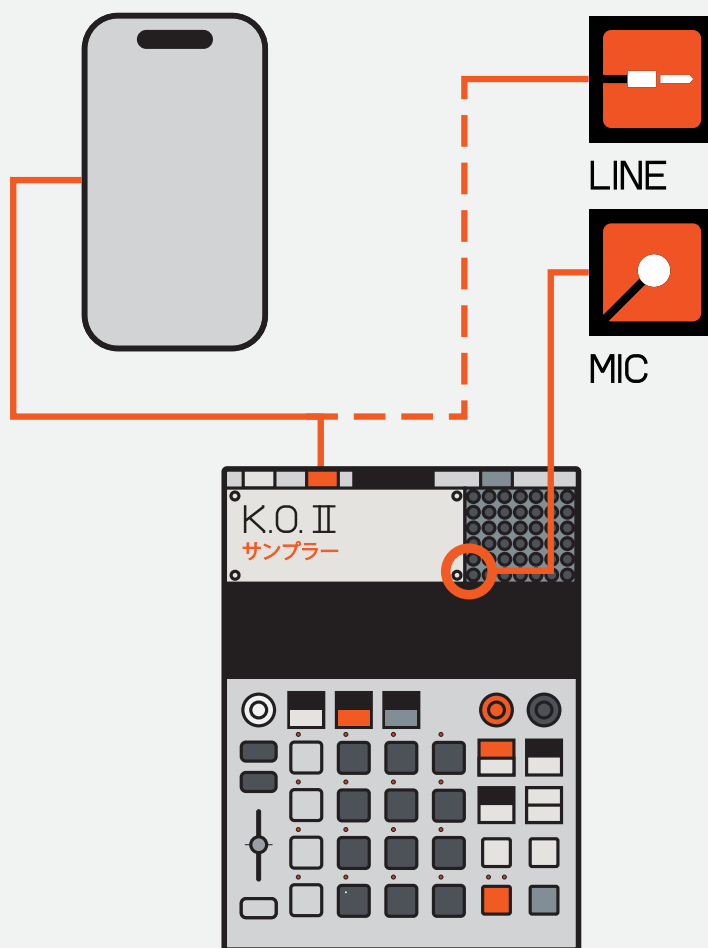

SAMPLE FROM YOUR PHONE BY CONNECTING IT USING A 3.5 MM CABLE INTO THE 3.5 MM INPUT.

INPUT EXAMPLE

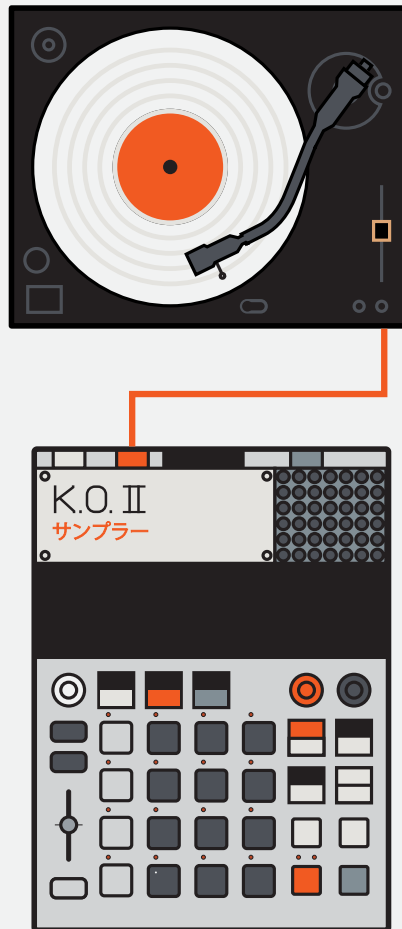


CONNECT A TURNTABLE AND SAMPLE YOUR FAVORITE RECORD. MAKE SURE TO USE AN RIAA AMPLIFIER OR A TURNTABLE THAT FEATURES A BUILT-IN AMP.

OUTPUT EXAMPLE



CONNECT HEADPHONES DIRECTLY INTO THE OUTPUT TO MONITOR YOUR BEATS.

OUTPUT EXAMPLE

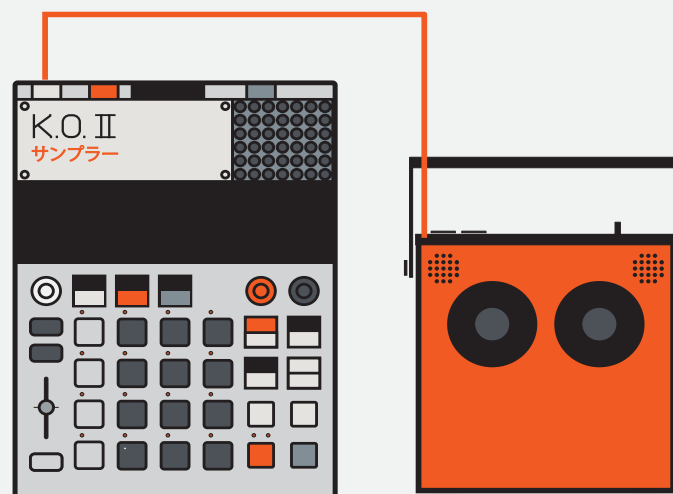


CONNECT A SPEAKER DIRECTLY INTO THE OUTPUT TO KNOCK OUT A CROWD WITH YOUR BEATS.

I.2 SYNC CONNECTIONS


SYNC IN AND OUT OFFERS GREAT FLEXIBILITY TO PLAY WITH EXTERNAL GEAR.

DUAL 8TH NOTE

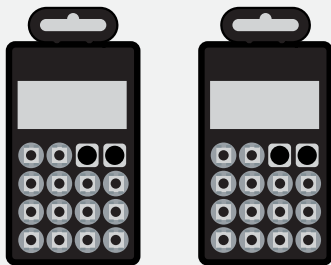

USE DUAL 8TH NOTE OUTPUT TO SYNC TWO POCKET OPERATORS USING A SPLITTER CABLE. CLOCK IS SENT ON BOTH TIP (LEFT CHANNEL) AND RING (RIGHT CHANNEL).

I6TH NOTE

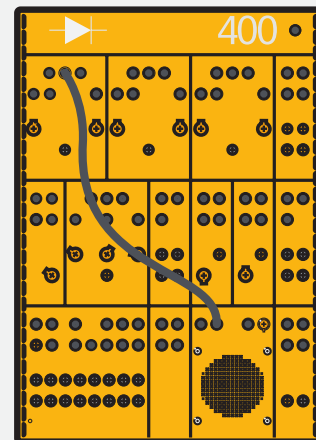

USE I6TH NOTE 'EURORACK STYLE' SYNC WITH START/RESET ON THE RING (RIGHT CHANNEL). YOU CAN ALSO USE IT TO ADD ANOTHER EP-133 IN PERFECT SYNC.


SYNC 24



USE SYNC24 TO LINK UP YOUR VINTAGE DRUM MACHINES.


PRO-TIP: THIS REQUIRES A 3.5MM TO DIN SYNC CABLE. A MIDI CABLE WILL NOT WORK.

MIDI

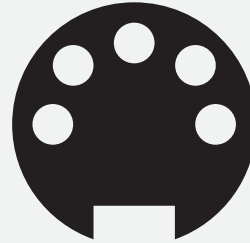


USE MIDI-IN AND OUT TO CONNECT EP-I33 TO ANY MIDI CONTROLLABLE DEVICES, AS WELL AS RECEIVE MIDI FROM ANY MIDI CONTROLLERS, LIKE A PIANO OR DRUM PAD.

USB-C




THE USB-C PORT ALLOWS K.O. II TO WORK AS A MIDI DEVICE WITH CLOCK AND TRANSPORT.

FIRMWARE

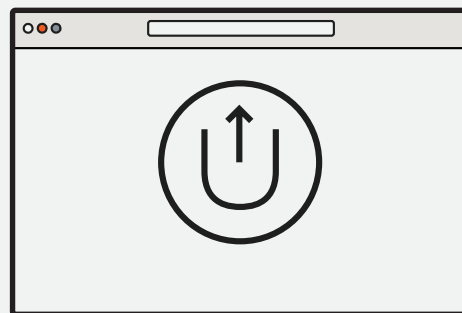

THE USB IS ALSO USED TO TRANSFER SAMPLES TO AND FROM YOUR EP AND UPDATE FIRMWARE.

FILE TRANSFER

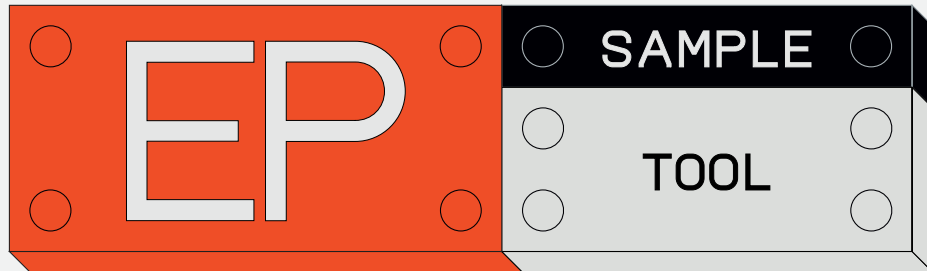


USE THE EP SAMPLE TOOL TO CAREFULLY AND AUTOMATICALLY CONVERT ANY SAMPLE/BITRATE COMBO USING A HIGH-QUALITY RESAMPLER THEN DOWNLOAD THEM STRAIGHT ONTO THE DEVICE.

②

POWER ON

① OPEN LID


← LIFT

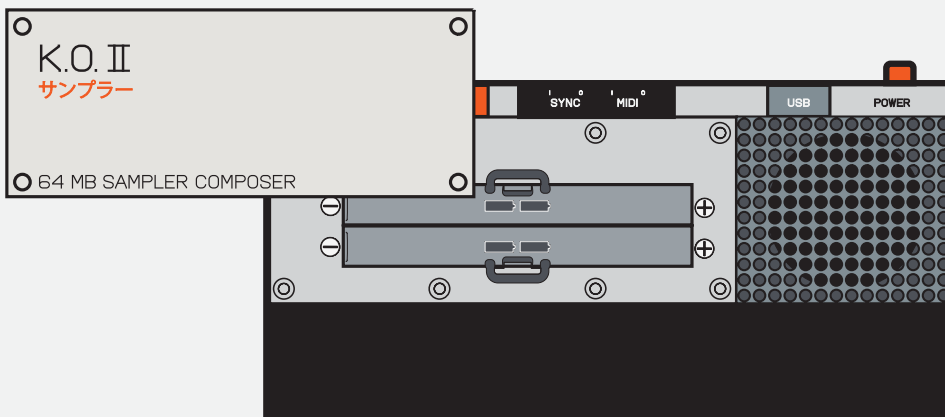

LIFT OFF THE TOP LID TO REVEAL THE BATTERY COMPARTMENT


② INSERT BATTERIES

4 x AAA

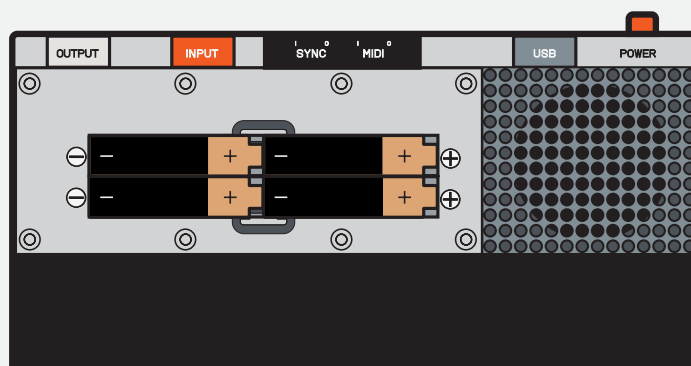

INSERT 4X FRESH AAA BATTERIES.

③ SWITCH ON

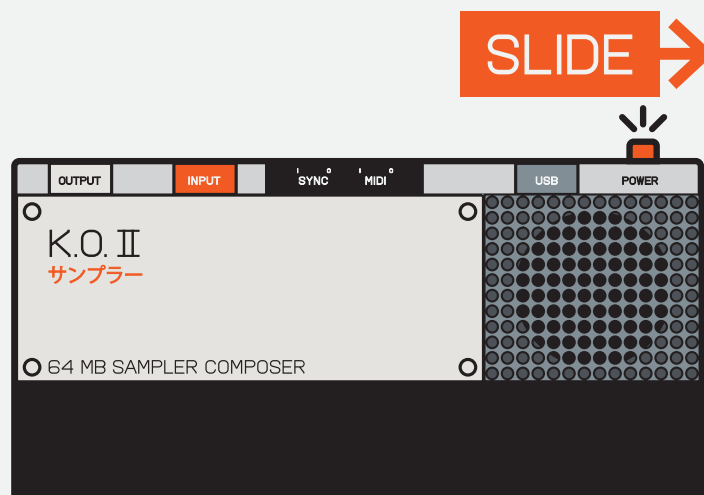


SLIDE THE ORANGE POWER-SWITCH ON THE TOP RIGHT TO POWER ON THE UNIT.

④ ON




WHEN SWITCHED ON, THE LED SCREEN WILL LIGHT UP IMMEDIATELY.

USB

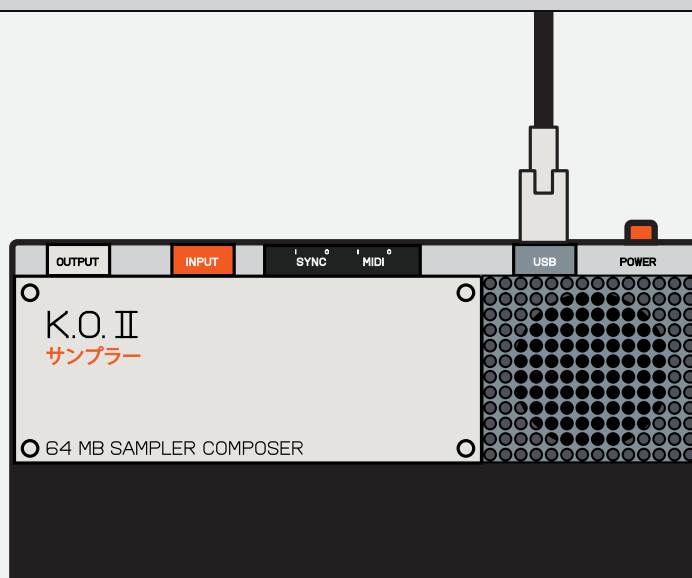


YOU CAN ALSO POWER THE UNIT VIA A STANDARD USB-C CABLE (5V / MIN 1A). WE RECOMMEND USING A QUALITY "USB-IF" COMPLIANT CHARGER.

UPDATE

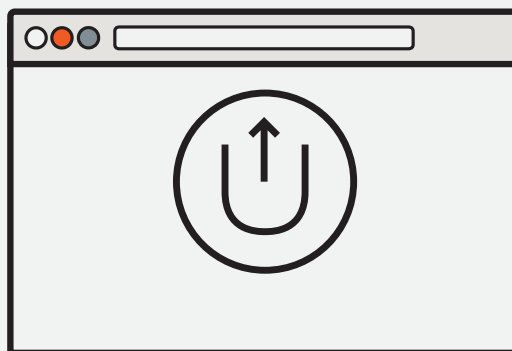

KEEP YOUR K.O. II UP-TO-DATE WITH THE LATEST FIRMWARE BY GOING TO THE UPDATE UTILITY.

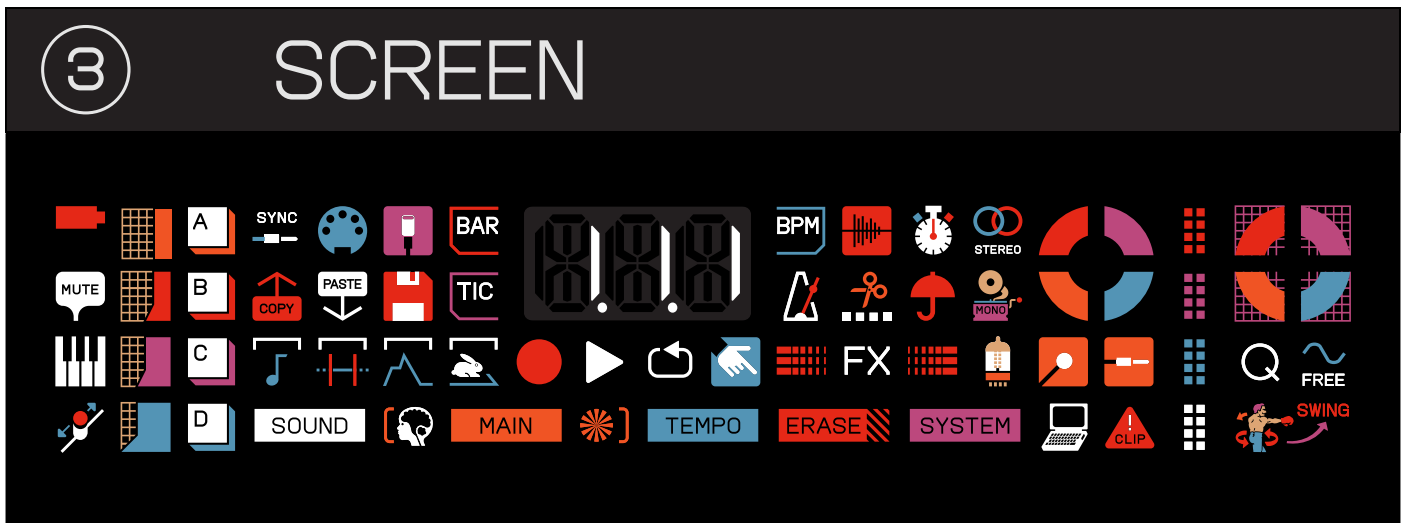

K.O. II HAS A CUSTOM DISPLAY THAT FEATURES 66 UNIQUE ICONS. EACH ICON REPRESENTS A DIFFERENT FEATURE WITHIN THE DEVICE AND HELPS YOU BETTER NAVIGATE THE USER INTERFACE.

THE TABLE BELOW LISTS EVERY ICON ALONG WITH WHAT IT REPRESENTS.

ICON MAP

								
BATTERY LIT WHEN USING BATTERY POWER AND BLINKS ON LOW BATTERY	FADER VALUE HIGHEST	GROUP A GROUP A ACTIVE	SYNC SYNC BEING RECEIVED	MIDI ACTIVITY MIDI BEING SENT OR RECEIVED	USB MIDI LIT WHEN USB IS CONNECTED, BLINKING WHEN THERE IS ACTIVITY	BAR MODE LIT WHEN MOVING IN THE QUANTISED GRID	LOOP LIT WHEN LOOPING	NUMPAD ACTIVE LIT WHEN YOU CAN TYPE A VALUE ON THE NUMPAD
								
MUTE INDICATES WHEN TWO OR MORE PADS ARE IN A 'MUTE GROUP' OR IF A GROUP IS MUTED	FADER VALUE HIGH	GROUP B GROUP B ACTIVE	COPY BAR/PATTERN/SOUND COPIED	PASTE BAR/PATTERN/SOUND PASTED	FLOPPY! LIT WHEN DATA IS BEING SAVED, AFTER ERASING A SOUND, THE FLOPPY ICON WILL BLINK	TIC MODE LIT WHEN MOVING IN FREE TIME [TICS]	TEMPO LIT WHEN CHANGING TEMPO	
								
KEYS MODE ALL 12 PADS IN 'CHROMATIC' MODE	FADER VALUE LOW	GROUP C GROUP C ACTIVE	SOUND SAMPLE SOUND MODE	TRIM SAMPLE TRIM	ENVELOPE SAMPLE ENVELOPE	TIME SAMPLE TIME STRETCH	RECORD BLINKS WHEN ARMED TO RECORD AND LIT WHEN RECORDING	PLAY LIT WHEN PLAYING
								
FADER FADER AUTOMATION	FADER VALUE LOWEST	GROUP D GROUP D ACTIVE	SOUND LIT WHEN IN SOUND MODE	AUTO-SAVE LIT WHEN AUTO-SAVING	MAIN LIT WHEN IN MAIN MODE	NEW PATTERN LIT WHEN FINDING AN EMPTY PATTERN		
								
BPM DISPLAY BPM	SAMPLE MODE LIT WHEN SAMPLING	TIME INDICATES IF ACTIVE SOUND HAS TIME STRETCH ENABLED	STEREO LIT WHEN A SAMPLE IS STEREO	X LEVEL LIGHTS UP TO SHOW THE CURRENT LEVEL OF THE X PARAMETER	HIGH LEVEL VU METER TO SHOW THE VOLUME OF THE CURRENT TRACK	Y LEVEL LIGHTS UP TO SHOW THE CURRENT LEVEL OF THE Y PARAMETER		
								
METRONOME BLINKS IN TIME WITH THE METRONOME	CHOP LIT WHEN CHOPPING	UMBRELLA UNDO IS POSSIBLE	MONO LIT WHEN A SAMPLE IS MONO		HIGH MID LEVEL VU METER TO SHOW THE VOLUME OF THE CURRENT TRACK			
								
FX SHOWS FX IS ACTIVE	FX FX MODE	FX SHOWS FX IS ACTIVE	COMPRESSOR OUTPUT COMPRESSOR ENGAGED	MIC LIT WHEN THE MICROPHONE IS IN USE	LINE-IN LIT WHEN A LINE INPUT IS USED	LOW MID LEVEL VU METER TO SHOW THE VOLUME OF THE CURRENT TRACK	QUANTIZE LIT WHEN IN QUANTIZE MODE	FREE LIT WHEN IN FREE TIME MODE
								
ERASE LIT WHEN SOMETHING IS BEING ERASED	SYSTEM LIT WHEN IN SYSTEM SETTINGS	COMPUTER LIT WHEN THE DEVICE IS CONNECTED AND TRANSFERRING TO AND FROM A COMPUTER	CLIP LIT WHEN THE INPUT CLIPS	LOW LEVEL VU METER TO SHOW THE VOLUME OF THE CURRENT TRACK	SWING LIT WHEN SWING HAS BEEN ENABLED			

4. BUTTONS AND COMBOS

4.1 GROUPS



BUTTONS **A** – **D** SELECT BETWEEN 4 GROUPS
EACH CONTAINING 99 PATTERNS AND 12
SOUNDS.

4.2 PADS



THE 12 PADS CAN BE POPULATED WITH SOUNDS,
AND ALSO FUNCTIONS AS A NUMBER PAD.

4.3 – AND +



[-] AND [+] ARE CENTRAL CONTROLS OF K.O. II ALLOWING YOU TO SWITCH BETWEEN SCENES AND PATTERNS, ADJUST PATTERN LENGTH, NAVIGATE TO THE NEXT OR PREVIOUS STEP, MOVE TO THE NEXT BAR, BROWSE EFFECTS, NUDGE NOTES, ADJUST TEMPO, CHOOSE SOUNDS AND MORE.

4.4 SHIFT



SHIFT IS THE GATEWAY TO OTHER FUNCTIONS OR MENUS.

FOR EXAMPLE, IF YOU PRESS THE SOUND BUTTON, YOU ENTER SOUND MODE, BUT IF YOU PRESS **SHIFT** + **SOUND** YOU ENTER SOUND EDIT MODE! **SHIFT** WORKS WITH ALMOST EVERY BUTTON ON K.O. II.

4.5 FADER



THE FADER ON K.O. II IS A GREAT WAY TO QUICKLY ADJUST VARIOUS PARAMETERS IN A GIVEN GROUP.

BY DEFAULT THE FADER WILL CONTROL GROUP VOLUME (LEVEL).

TO SELECT THE FUNCTION OF THE FADER, HOLD DOWN **FADER** AND CHOOSE FROM THE OPTIONS ABOVE THE PADS.

4.6 X AND Y KNOBS



X AND **Y** ALLOW YOU TO CONTROL THE VARIOUS PARAMETERS WITHIN K.O. II RANGING FROM FX LEVELS THROUGH TO TEMPO, SWING AND COMPRESSOR SPEED.

PRO-TIP! HOLDING **SHIFT** WHILE TURNING **X** OR **Y** MAKES THEM REACT SLOWER ALLOWING YOU TO MAKE PRECISE ADJUSTMENTS!

4.7 TIMING

K.O.II SUPPORTS 1/1, 1/2, 1/4, 1/8, 1/8T, 1/16, 1/16T AND 1/32 TIMING MODES, EACH TIMING MODE CHANGES THE NOTE INTERVAL OF THE STEP SEQUENCER.

THE T' IN THE TIMING MODES DESCRIBES A TRIPLET NOTE INTERVAL.



1/1



1/2



1/4




1/8



1/8T



1/16

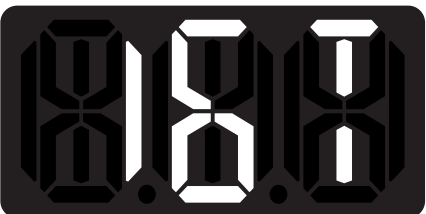


1/16T




1/32

4.8 SAMPLE

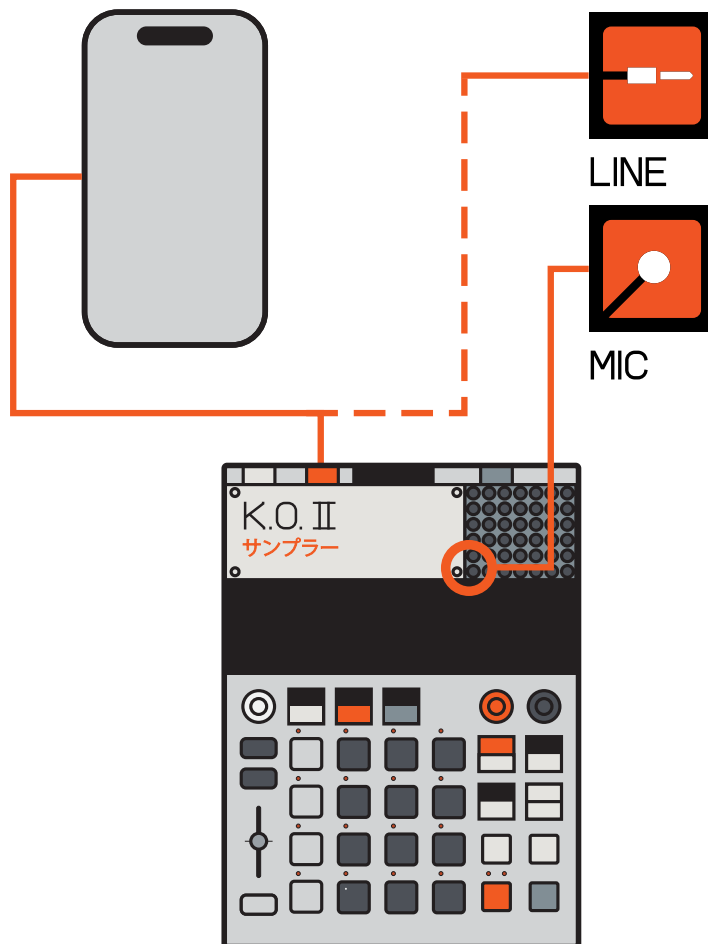

K.O. II HAS 999 SAMPLE SLOTS AND A TOTAL OF 64 MB BUILT-IN MEMORY.

YOU CAN RECORD SOUNDS USING THE INTERNAL MICROPHONE, OR USE THE STEREO LINE-IN TO CAPTURE YOUR FAVORITE SYNTH AND SAMPLE.

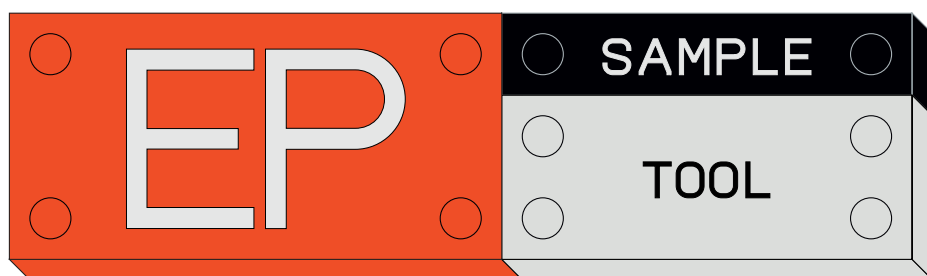

SAMPLES CAN ALSO BE TRANSFERRED TO AND FROM A COMPUTER VIA USB WITH OUR SAMPLE TOOL.


⑤

GUIDE CONVENTIONS

SOMETIMES YOU WILL NEED TO PRESS BUTTONS IN SEQUENCE, SOMETIMES IN COMBINATION. THESE ILLUSTRATIONS AND TEXTS WILL HELP YOU TO FOLLOW ALONG IN THE GUIDE.


TO PRESS A BUTTON, TAP IT AND THEN RELEASE. TO HOLD A BUTTON, PRESS IT AND KEEP IT PRESSED DOWN. MANY OF THE KNOBS AND BUTTONS HAVE DIFFERENT FUNCTIONALITY DEPENDING ON THE CONTEXT.

SINGLE PRESS

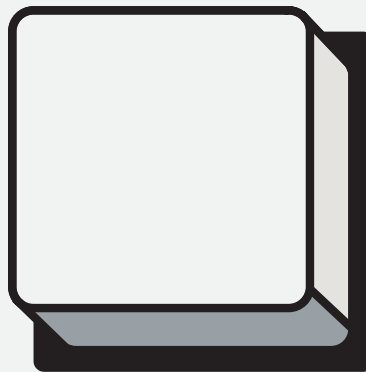


A SINGLE BUTTON IN A CELL IS FOR A SINGLE PRESS.

COMBINATION PRESS

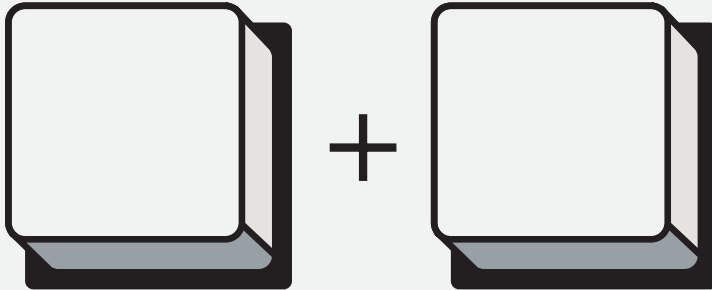


MULTIPLE BUTTONS IN A CELL
DIVIDED BY A PLUS IS FOR A
COMBINATION PRESS.

SEQUENCE PRESS

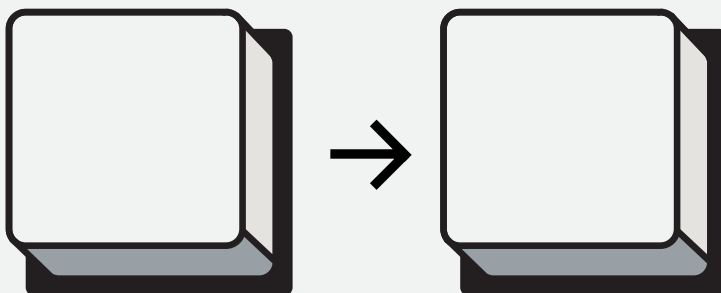


MULTIPLE BUTTONS IN A CELL
DIVIDED BY AN ARROW IS FOR A
SEQUENCE PRESS.

SINGLE HOLD

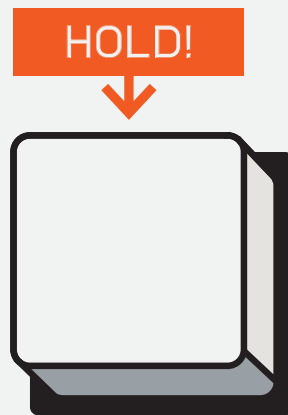


THE HOLD ICON ABOVE A SINGLE
BUTTON MEANS YOU'RE SUPPOSED
TO LONG HOLD.

COMBINATION HOLD

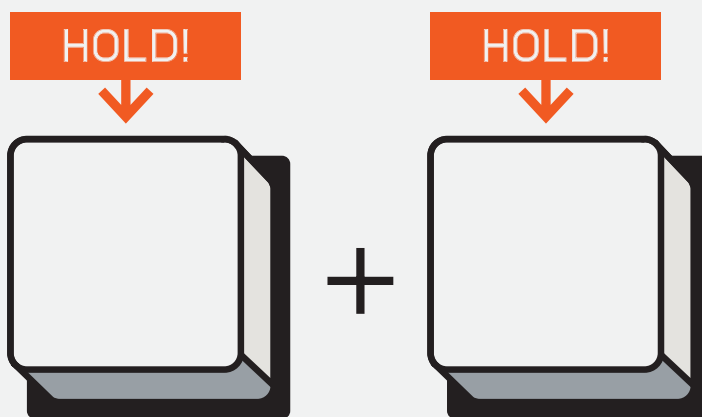


MULTIPLE BUTTONS DIVIDED BY A
PLUS IS FOR A COMBINATION HOLD.

SEQUENCE HOLD

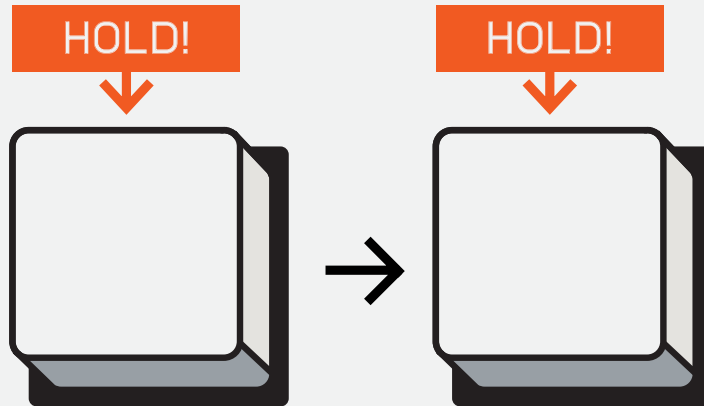


HOLD THE FIRST BUTTON, THEN
RELEASE AND HOLD THE SECOND
BUTTON.

SINGLE TAP

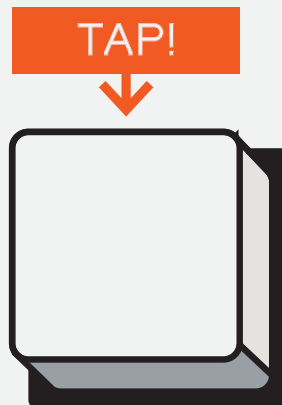


THE TAP ICON ABOVE A SINGLE
BUTTON MEANS YOU'RE SUPPOSED
TO PRESS THE BUTTON AND
RELEASE IT.

TAP AND HOLD

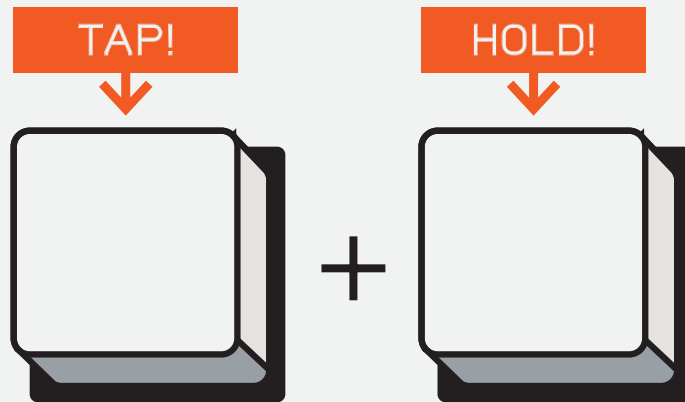

MULTIPLE BUTTONS DIVIDED BY A PLUS IS FOR A COMBINATION TAP AND HOLD.

TAP, THEN HOLD

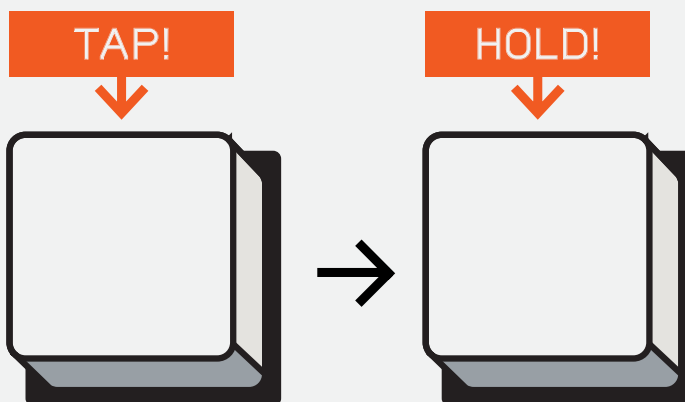

MULTIPLE BUTTONS IN A CELL DIVIDED BY AN ARROW IS FOR A SEQUENCE HOLD.

PADS



THE PADS WILL SHOW WHEN ANY
PAD CAN BE PRESSED OR A VALUE
TYPED USING THEM.

PADS BLINKING




WHEN THE PAD LEDS ARE BLINKING,
IT'S DISPLAYED WITH SMALL RED
DOTS ABOVE THE PADS.

PRESS PADS




WHEN PADS SHOULD BE PRESSED
TO START AN ACTION ON THE
DEVICE A HAND WILL SHOW TO
DESCRIBE THIS.

X / Y PARAMETER

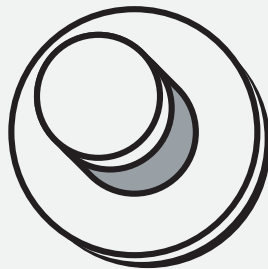

WHEN A KNOB IS SHOWN IN A CELL
THIS DESCRIBES TURNING THE KNOB.

FADER POSITIONS

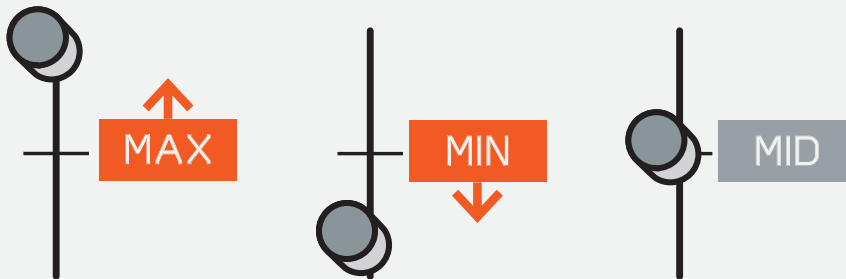

THE FADER ICON WILL SHOW EITHER ONE OF THE THREE SETTINGS: UPWARDS FOR MAXIMUM / DOWNWARDS FOR MINIMUM / MIDDLE FOR THE MID SETTING.

TIME CODE VIEW



WHEN THE TIME CODE VIEW IS SHOWN IN A CELL THE FUNCTION OF THAT VIEW IS DESCRIBED BELOW.


ICON VIEW

MAIN




ICONS THAT ARE LIT UP ON THE
DISPLAY IN SOME SCENARIOS WILL
SHOW IN THE BAR RUNNING ACROSS
THE TOP.

GROUP KEYS

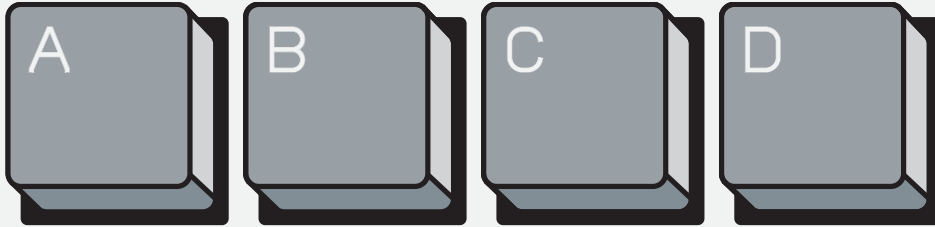

THE GROUP KEYS SHOWN WITHOUT THEIR RESPECTIVE ICONS WHEN THEY ARE USED TO ACCESS GROUPS.

GROUP KEY FUNCTIONS

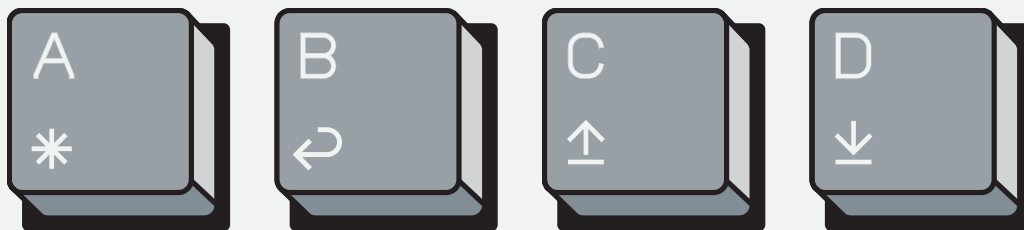


THE GROUP KEYS SHOWN WITH THEIR RESPECTIVE ICONS BENEATH THEM WHEN THE GROUP KEYS ARE USED FOR A COMBINATION HOLD OR PRESS.

6

WORKFLOW

K.O. II HAS 9 PROJECTS, EACH WITH 4 GROUPS, EACH GROUP HAS 99 PATTERNS WHICH CAN BE ARRANGED INTO A TOTAL OF 99 SCENES.

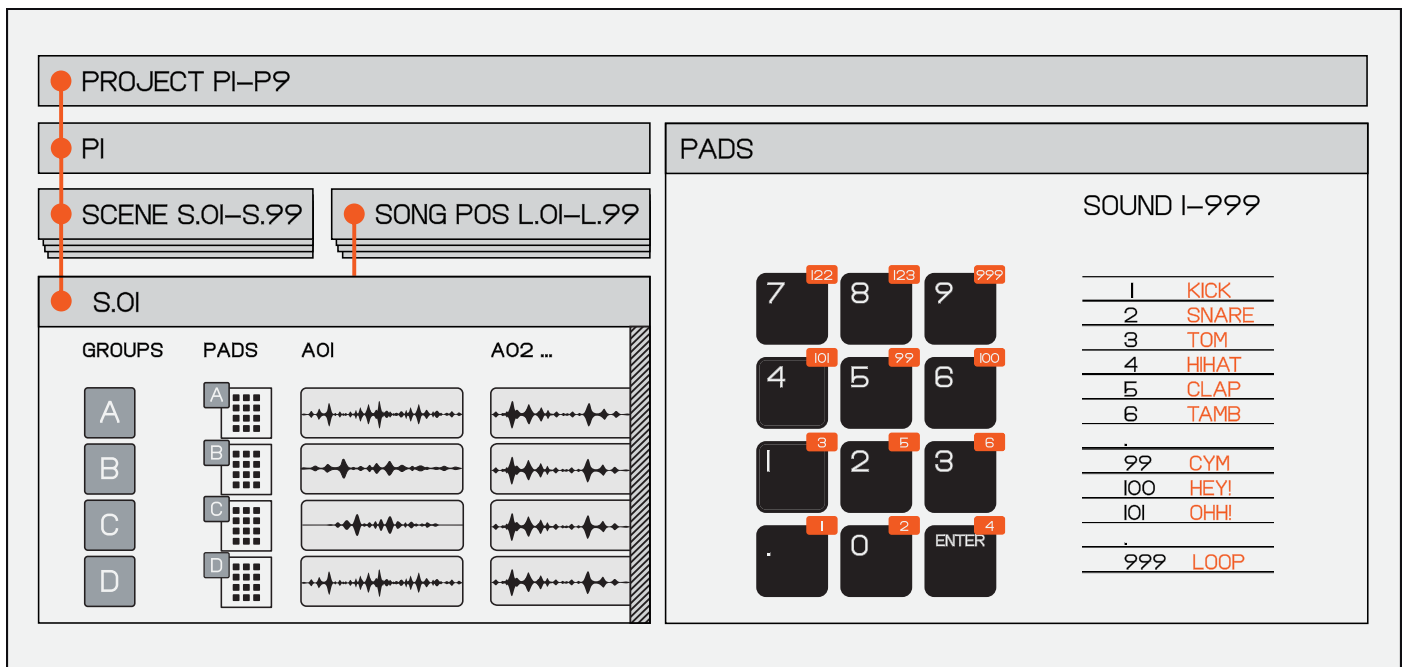

PROJECT

A PROJECT IS THE COMPOSITION YOU ARE WORKING ON, THINK OF IT AS A SONG.

K.O. II HAS SPACE FOR 9 DIFFERENT PROJECTS.

GROUP

A GROUP IS A COLLECTION OF SAMPLES. THESE ARE THE SOUNDS THAT YOU CREATE YOUR PATTERNS WITH. EACH GROUP HOLDS A COLLECTION OF 12 SAMPLES THAT CAN BE SEQUENCED IN A GROUP SPECIFIC PATTERN. EACH PROJECT HOLDS FOUR GROUPS WITH PAD SETTINGS SAVED PER PROJECT.

PATTERN

EACH GROUP CAN HOLD UP TO 99 PATTERNS PER PROJECT WITH WITH A MAXIMUM LENGTH PER PATTERN OF 99 BARS. YOU CAN ARRANGE THESE PATTERNS INTO 99 SCENES.


SCENE

A SCENE IS AN ARRANGEMENT OF PATTERNS, THEY'RE THE SECTIONS THAT MAKE UP A COMPOSITION. EACH PROJECT HOLDS UP TO 99 SCENES. USING SCENES ALLOWS YOU TO QUICKLY BUILD-UP THE STRUCTURE OF A SONG, USE THE INSTANT COMMIT FEATURE TO EXPERIMENT WITH VARIATIONS WITHOUT EVER HAVING TO STOP THE MUSIC.

SONG POSITION

THE SONG POSITION SITS INDEPENDENT FROM THE SCENES, PATTERNS AND GROUPS, ALLOWING YOU TO CHAIN SCENES TOGETHER TO CREATE A SONG. WHEN IN SONG MODE K.O. II WILL THEN INCREMENT THROUGH THE SONG POSITIONS PLAYING THE SCENES IN THE ORDER YOU HAVE DICTATED.

6.1 COMMIT

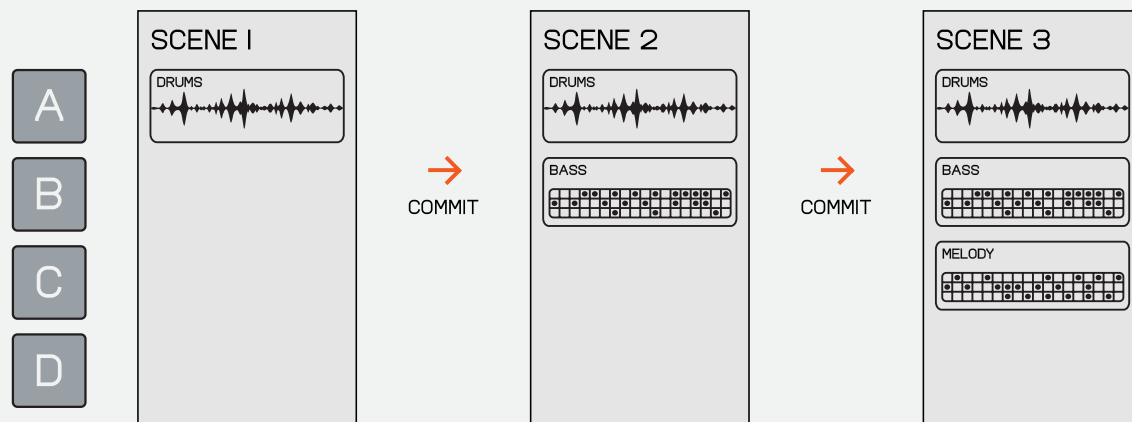


USE COMMIT TO CREATE AN ARRANGEMENT OF PATTERNS THEN 'COMMIT' THIS ARRANGEMENT AS A SCENE. START A NEW ONE WITH THE PREVIOUS SCENE AS A BASIS FOR THE NEW ONE.

COMMIT IS ALSO A GREAT WAY OF DUPLICATING THE CURRENT SCENE SO YOU CAN ADD VARIATIONS TO YOUR PATTERNS!

COMMIT ALLOWS YOU TO SAVE SOMETHING YOU LIKE BEFORE MOVING ON TO THE NEXT IDEA. COMMIT BEFORE PUNCHING IN NEW SOUNDS TO QUICKLY BUILD UP THE STRUCTURE OF YOUR SONG!

6.2 SONG MODE

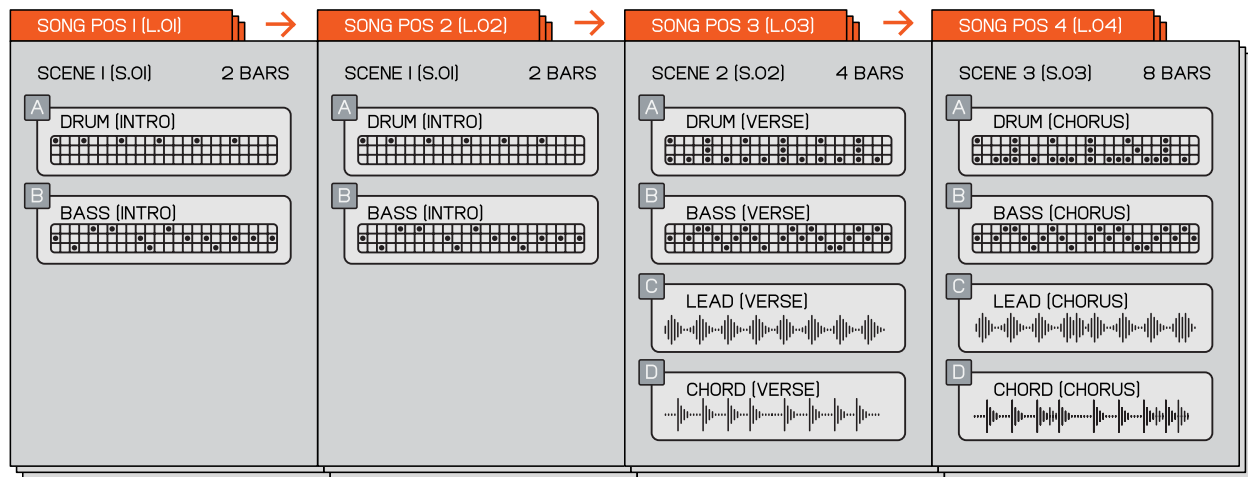

SONG MODE WILL PLAY THROUGH THE SONG POSITIONS FROM 1-99. EACH SONG POSITION CAN HOLD A SCENE.

THE LENGTH OF THE SONG POSITION IS THE SAME AS THE LONGEST PATTERN IN THE SCENE.

THE SONG LIST EDITOR IS USED TO ASSIGN SCENES TO SONG POSITIONS.


⑦

GET STARTED

7.1

MAKE A BEAT FROM SCRATCH!

① NEW PROJECT

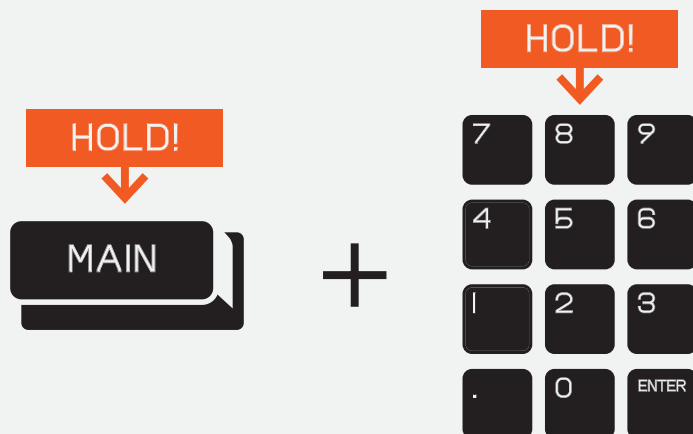


TO GET STARTED MAKING A BEAT,
FIRST LOAD UP A NEW PROJECT.

HOLD **MAIN** AND ONE OF THE PADS
(1-9) TO SELECT AN EMPTY
PROJECT.

WHEN FRESH OUT OF THE BOX,
YOUR K.O.II WILL COME WITH
PROJECTS 1-5 POPULATED WITH
SOUNDS AND PROJECTS 6-9
COMPLETELY EMPTY.

② LOAD SOME SOUNDS

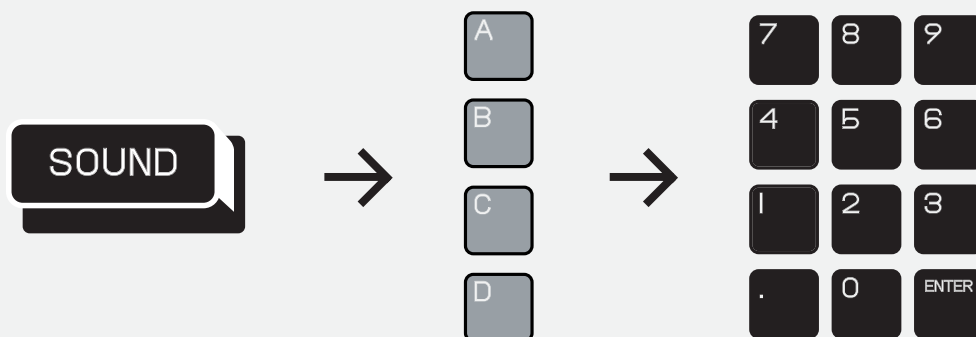

PRESS A FEW PADS IN AN EMPTY PROJECT AND YOU WILL NOTICE THAT THE PADS DO NOT HAVE ANY SOUNDS. LETS FILL THEM UP WITH SOME!

PRESS **SOUND** TO GO TO SOUND MODE, THEN SELECT GROUP **A** AND ONE OF THE PADS.

USE **-** AND **+** TO SCROLL THROUGH THE AVAILABLE SOUNDS. YOU WILL NOTICE THAT THE SCREEN SHOWS A NUMBER. THIS IS THE NUMBER OF THE SAMPLE FOR THE CORRESPONDING PAD.

FILL OUT THE REMAINING PADS USING WHICHEVER SOUNDS YOU LIKE THE MOST!

YOU CAN FIND OUT MORE ABOUT HOW SAMPLES ARE STORED ON K.O. II IN THE SOUNDS SECTION OF THE GUIDE.

③ GROUPS




AS K.O.II HAS 4 GROUPS, WE RECOMMEND KEEPING EACH GROUP AS A SELECTION OF INSTRUMENTS OR PARTS.

GROUP  FOR DRUMS.
GROUP  FOR BASS.
GROUP  FOR MELODIES.
GROUP  FOR LOOPS AND SAMPLES (KEEP THIS ONE EMPTY FOR LATER).

THIS LAYOUT IS OF COURSE OPTIONAL AND YOU CAN PUT WHATEVER SOUNDS YOU WANT INTO EACH GROUP.

TRY LOADING EACH GROUP UP WITH DIFFERENT SAMPLES!

④ MAIN

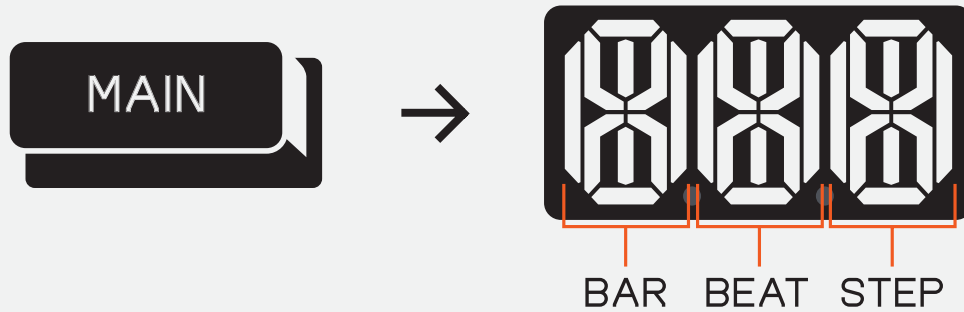

NOW THAT WE HAVE SOME SOUNDS,
LET'S TURN THEM INTO A BEAT!

PRESS **MAIN** TO GO TO THE MAIN
MODE. YOU WILL NOTICE THAT THE
SCREEN CHANGES TO SHOW THE
CURRENT STEP.

A STEP IS A DIVISION OF TIME AND
ALLOWS YOU TO SEE WHERE YOU
ARE IN YOUR BEAT.

⑤ RECORD A BEAT




TAP **RECORD** THEN **PLAY** TO START RECORDING!

YOU WILL HEAR A FOUR BEAT COUNT-IN THEN THE K.O. II WILL START RECORDING. HIT THE PADS AND PUNCH OUT A BEAT!

ONCE YOU ARE DONE PRESS **PLAY** TO STOP THE BEAT, ALTERNATIVELY YOU CAN PRESS **RECORD** TO KEEP THE BEAT GOING BUT STOP RECORDING.

ONCE YOU HAVE FINISHED RECORDING DRUMS PRESS **SHIFT** AND **MAIN** TO COMMIT IT! THIS WILL ALLOW YOU TO QUICKLY BUILD UP THE STRUCTURE OF A SONG!


⑥ PATTERN LENGTH

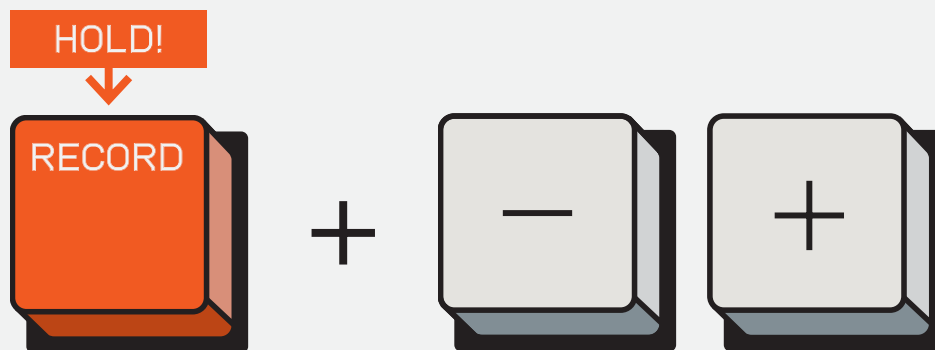

BY DEFAULT NEW PATTERNS ON
K.O. II WILL BE SET TO 1 BAR (LN.).

IF YOU WANT A LONGER PATTERN
JUST HOLD **RECORD** THEN PRESS **+**.

⑦ ADD A BASSLINE

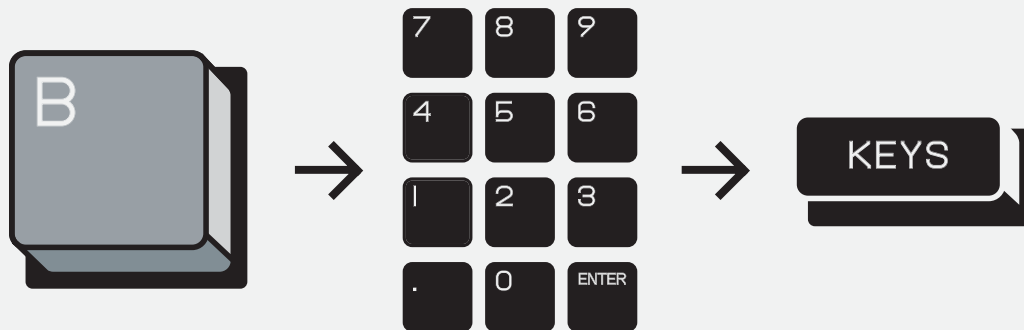

NEXT, LETS ADD A BASSLINE!

IF YOU FOLLOWED ALONG WITH THE RECOMMENDATION IN STEP 3, YOU SHOULD HAVE SOME BASS SOUNDS IN GROUP .

PRESS GROUP  TO PLAY SOME BASS SOUNDS.

SELECT ONE THAT YOU LIKE THEN PRESS  TO PLAY THAT SOUND ACROSS THE PADS LIKE A KEYBOARD!

IF YOU'D LIKE TO CHANGE THE SCALE OF THE PADS, THIS CAN BE DONE IN SYSTEM SETTINGS.

⑧ RECORD A BASSLINE




PRESS **PLAY** TO HEAR YOUR BEAT AND PRACTICE OVER IT WITH YOUR BASSLINE.

ONCE YOU HAVE SOMETHING YOU LIKE, PAUSE IT BY PRESSING **PLAY** AGAIN. NOW TAP **RECORD** AND **PLAY** TO GET ANOTHER FOUR BEAT COUNT IN AND RECORD IT IN!

IF YOUR BASSLINE IS LONGER THAN THE PATTERN AND YOU FIND YOURSELF PLAYING OVER IT, MAKE SURE TO INCREASE YOUR PATTERN LENGTH BY HOLDING **RECORD** AND PRESSING **+**.

ONCE YOU HAVE FINISHED RECORDING A BASSLINE PRESS **SHIFT** AND **MAIN** TO COMMIT IT! THIS WILL ALLOW YOU TO QUICKLY BUILD UP THE STRUCTURE OF A SONG!

⑨ ADD A MELODY

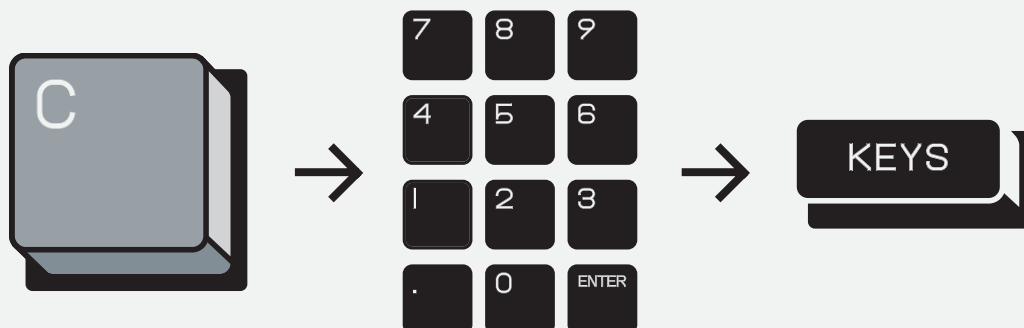

NEXT, LETS ADD A MELODY!

IF YOU FOLLOWED ALONG WITH THE RECOMMENDATION IN STEP 3, YOU SHOULD HAVE SOME MELODIC SOUNDS IN GROUP **C**.

PRESS GROUP **C** TO PLAY SOME MELODIC SOUNDS.

SELECT ONE THAT YOU LIKE THEN PRESS **KEYS** TO PLAY THAT SOUND ACROSS THE PADS LIKE A KEYBOARD!

IF YOU'D LIKE TO CHANGE THE SCALE OF THE PADS, THIS CAN BE DONE IN SYSTEM SETTINGS.

⑩ RECORD YOUR MELODY




PRESS **PLAY** TO HEAR YOUR BEAT AND PRACTICE OVER IT WITH YOUR MELODY.

ONCE YOU HAVE SOMETHING YOU LIKE, PAUSE IT BY PRESSING **PLAY** AGAIN THEN YOU CAN TAP **RECORD** AND **PLAY** TO GET ANOTHER FOUR BEAT COUNT IN AND RECORD IT IN!

IF YOUR MELODY IS LONGER THAN THE PATTERN AND YOU FIND YOURSELF PLAYING OVER IT MAKE SURE TO INCREASE YOUR PATTERN LENGTH BY HOLDING **RECORD** AND PRESSING **+**.

ONCE YOU HAVE FINISHED RECORDING A MELODY PRESS **SHIFT** AND **MAIN** TO COMMIT IT! THIS WILL ALLOW YOU TO QUICKLY BUILD UP THE STRUCTURE OF A SONG!

II LET'S SAMPLE!

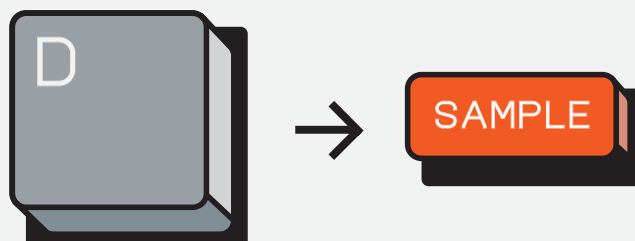

SAMPLING IS A GREAT WAY TO RECORD YOUR OWN SOUNDS INTO K.O. II!

PRESS GROUP  THEN HIT  TO ENTER SAMPLE MODE!

IF YOU FOLLOWED ALONG WITH THE RECOMMENDATION IN STEP 3, GROUP  SHOULD BE EMPTY.

⑫ RECORD SAMPLE



⑬ ADD IT TO BEAT



THE PADS WILL FLASH TO LET YOU KNOW THAT THEY CAN BE SAMPLED TO. PRESS ONE AND SING, SHOUT OR ROCK OUT INTO THE MIC OR LINE IN!

AS SOON AS YOU LET GO IT WILL STOP SAMPLING AND YOU CAN PRESS THE PAD AGAIN TO HEAR YOUR SAMPLE.

PRESS **MAIN** TO GO BACK TO MAIN MODE AND ADD THE SAMPLE INTO YOUR BEAT.

NOW YOU CAN USE THE SAME TECHNIQUES WE USED IN THE PREVIOUS SECTIONS TO PLAY YOUR SAMPLE(S) INTO YOUR BEAT!

⑭ ADD SOME FX




NOW THAT YOU HAVE A SICK BEAT
YOU CAN ADD SOME FX TO IT!

TURN THE FADER UP AND USE
AND TO SWITCH BETWEEN THE
AVAILABLE FX.

PRESS TO OPEN THE FX MENU.
HERE YOU CAN SEND EACH GROUP
TO ONE MASTER FX.

⑮ PUNCH-IN FX

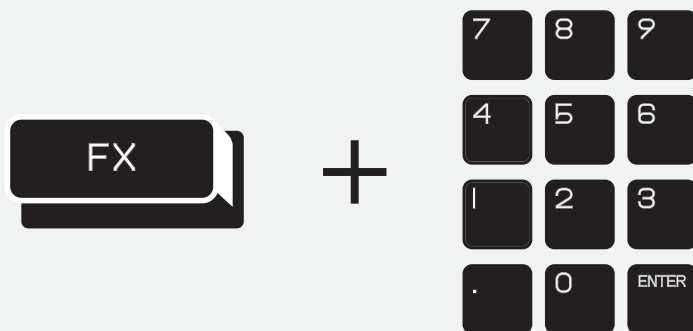

NOW PRESS , HOLD DOWN
AND PRESS THE PADS.

THIS WILL ADD PUNCH-IN FX WHICH
ALLOW YOU TO QUICKLY AND
EASILY PERFORM WITH YOUR BEAT!

⑩ COMMIT YOUR BEAT



PRESS **SHIFT** AND **MAIN** TO COMMIT YOUR BEAT.

THIS WILL SAVE THE CURRENT PATTERNS AS A SCENE AND CREATE A NEW SCENE!

COMMITTING YOUR BEAT IS A GREAT WAY TO QUICKLY BUILD THE LAYERS IN A SONG. OR EVEN STARTING SOMETHING FRESH!

WHEN YOU COMMIT IT WILL

DUPLICATE YOUR CURRENT SCENE ALLOWING YOU TO QUICKLY ADD VARIATIONS ON YOUR BEAT WITHOUT OVERWRITING THE PREVIOUS SECTION.


COMMIT AS MANY TIMES AS YOU LIKE WHILE YOU ARE MAKING A BEAT TO QUICKLY BUILD OUT THE STRUCTURE OF YOUR SONG!

THAT'S IT!



7.2 SEQUENCING A BEAT FROM SCRATCH!

① NEW PROJECT

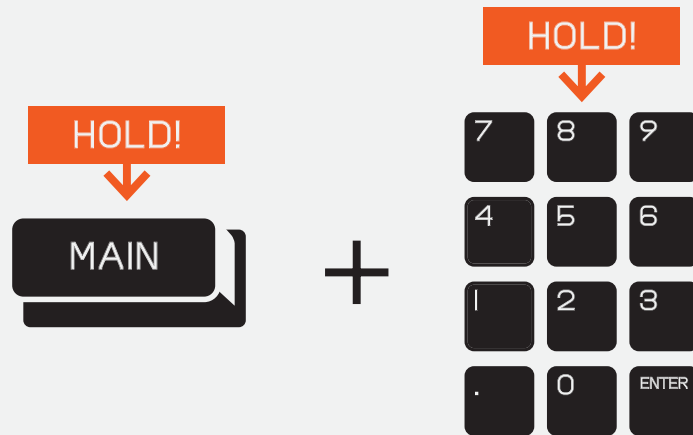


TO GET STARTED MAKING A BEAT, FIRST LOAD UP A NEW PROJECT, AND PRESS PLAY.

HOLD **MAIN** AND ONE OF THE PADS [1–9] TO SELECT AN EMPTY PROJECT.

WHEN FRESH OUT OF THE BOX, YOUR K.O.II WILL COME WITH PROJECTS 1–5 POPULATED WITH SOUNDS AND PROJECTS 6–9 COMPLETELY EMPTY.

② LOAD SOME SOUNDS

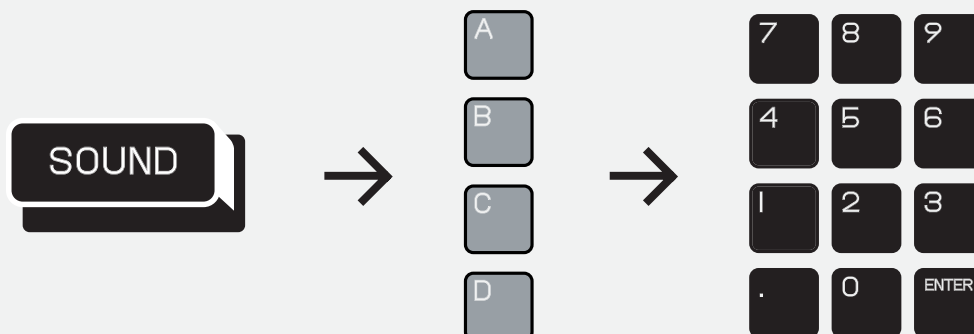

PRESS A FEW PADS IN AN EMPTY PROJECT AND YOU WILL NOTICE THAT THE PADS DO NOT HAVE ANY SOUNDS. LETS FILL THEM UP WITH SOME!

PRESS **SOUND** TO GO TO SOUND MODE, THEN SELECT GROUP **A** AND ONE OF THE PADS.

USE **[-]/[+]** TO SCROLL THROUGH THE AVAILABLE SOUNDS. YOU WILL NOTICE THAT THE SCREEN SHOWS A NUMBER, THIS IS THE NUMBER OF THE SAMPLE ON A PAD.

FILL OUT THE REMAINING PADS USING WHICHEVER SOUNDS YOU LIKE THE MOST!

YOU CAN FIND OUT MORE ABOUT HOW SAMPLES ARE STORED ON K.O. II IN THE SOUNDS SECTION OF THE GUIDE.

③ GROUPS




AS K.O.II HAS 4 GROUPS, WE RECOMMEND KEEPING EACH GROUP AS A SELECTION OF INSTRUMENTS OR PARTS.

GROUP  FOR DRUMS.
GROUP  FOR BASS.
GROUP  FOR MELODIES.
GROUP  FOR LOOPS AND SAMPLES (KEEP THIS ONE EMPTY FOR LATER).

THIS LAYOUT IS OF COURSE OPTIONAL AND YOU CAN PUT WHATEVER SOUNDS YOU WANT INTO EACH GROUP.

TRY LOADING EACH GROUP UP WITH DIFFERENT SAMPLES!

④ MAIN

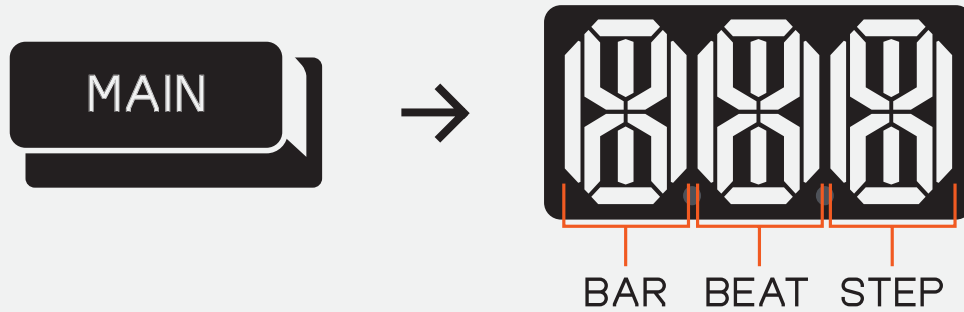


NOW THAT WE HAVE SOME SOUNDS,
LETS TURN THEM INTO A BEAT!

A STEP IS A DIVISION OF TIME AND
ALLOWS YOU TO SEE WHERE YOU
ARE IN YOUR BEAT.

PRESS **MAIN** TO GO TO THE MAIN
MODE. YOU WILL NOTICE THAT THE
SCREEN CHANGES TO SHOW THE
CURRENT STEP .


⑤ GO TO STEP ①

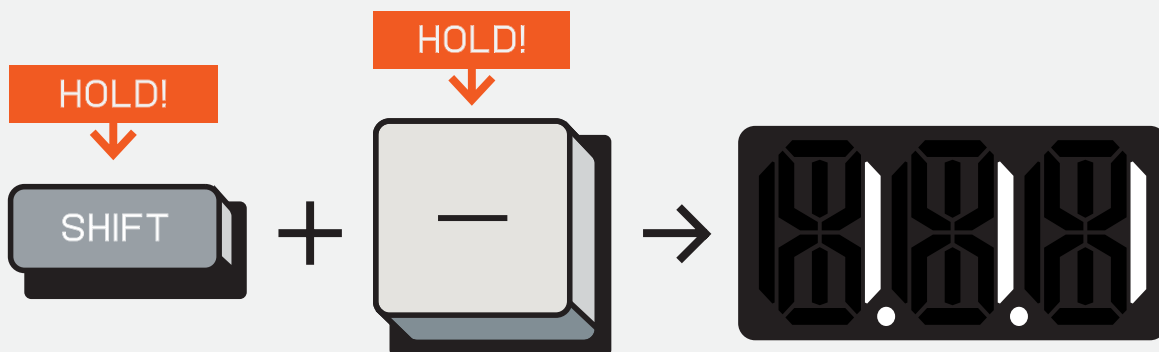

HOLD **SHIFT** AND **-** UNTIL THE DISPLAY SHOWS 1.1.1


THIS BRINGS YOU TO THE FIRST STEP IN THE PATTERN.

⑥ RECORD TO A STEP

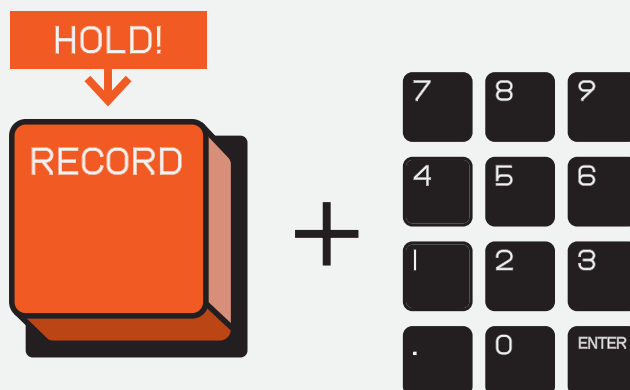


HOLD **RECORD** AND PRESS ON ONE OF THE PADS TO RECORD THAT PAD TO A STEP.

⑦ NAVIGATING THE SEQUENCER

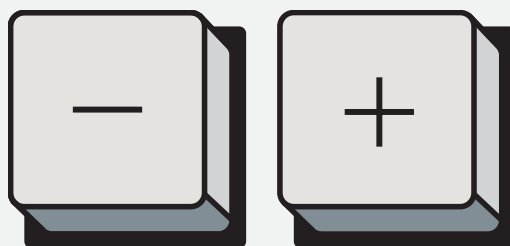

PRESS  AND  TO NAVIGATE FORWARDS AND BACKWARDS IN YOUR PATTERN.

⑧ ADD SOME DRUMS!

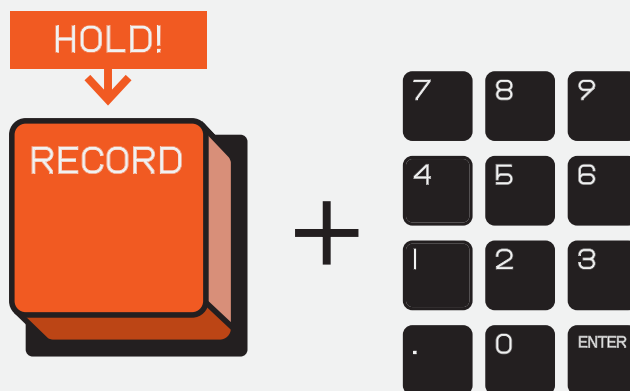

TRY PLACING A KICK ON 1.1.1 / 1.2.1 / 1.3.1 AND 1.4.1 – THIS IS CALLED A 'FOUR ON THE FLOOR'.

THEN A SNARE ON 1.2.1 AND 1.4.1 – THIS IS CALLED A 'BACK BEAT'.

⑨ CHANGE THE NOTE INTERVAL



TO CHANGE THE NOTE INTERVAL
(NUMBER OF STEPS PER BAR).
PRESS **TIMING** AND TURN **(KNOB)**.

BY DEFAULT K.O.II WILL BE SET TO
A NOTE INTERVAL OF 1/16, BUT NOTE
INTERVALS OF 1/8, 1/8T (TRIPLET),
1/16, 1/16T (TRIPLET) AND 1/32 ARE
AVAILABLE.

HAVING A HIGHER NOTE INTERVAL
ALLOWS YOU TO SEQUENCE IN MORE
DETAIL WHEREAS HAVING A LOW
NOTE INTERVAL IS GREAT FOR FAST
SEQUENCING.

⑩ CHANGE THE SWING



TO CHANGE THE SWING. PRESS
TIMING AND TURN **Y**.

USE SWING TO ADD GROOVINESS TO
YOUR BEAT!

NOTE INTERVAL AND SWING APPLY
BEFORE RECORDING AND NOT
AFTER, FOR MORE INFO SEE THE
TIMING SECTION.

⑪ NOTE REPEAT




HOLD **TIMING** AND PRESS A PAD TO
REPEAT THAT PAD WITH THE
CHOSEN NOTE INTERVAL.

USE IT ON A HI-HAT TO QUICKLY
RECORD HATS INTO YOUR BEAT!

TO RECORD WITH A FOUR BEAT
COUNT-IN, TAP **RECORD** THEN **PLAY**.


⑫ PATTERN LENGTH

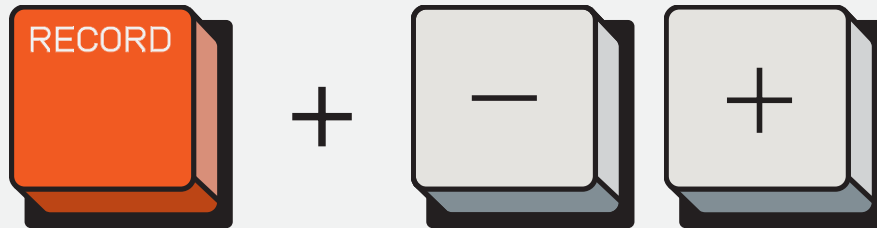

BY DEFAULT NEW PATTERNS ON K.O. II WILL BE SET TO 1 BAR (LEN:1).

IF YOU WANT A LONGER PATTERN JUST HOLD **RECORD** THEN PRESS **+**.

⑬ ADD A BASSLINE

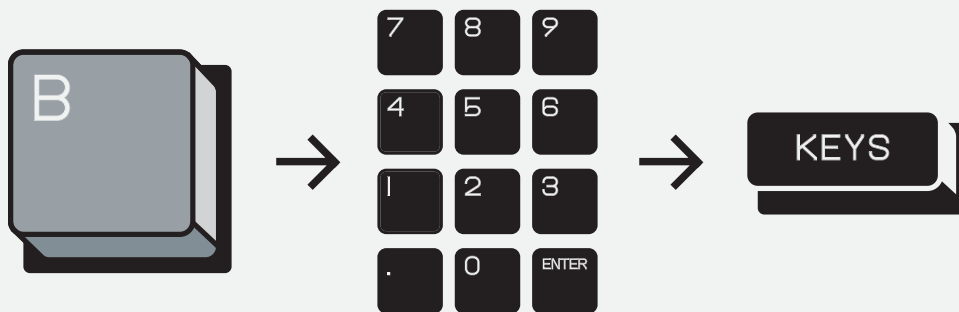

NEXT, LETS ADD A BASSLINE!

IF YOU FOLLOWED ALONG WITH THE RECOMMENDATION IN STEP 3, YOU SHOULD HAVE SOME BASS SOUNDS IN GROUP **B**.

PRESS GROUP **B** TO PLAY SOME BASS SOUNDS.

SELECT ONE THAT YOU LIKE THEN PRESS **KEYS** TO **PLAY** THAT SOUND ACROSS THE PADS LIKE A KEYBOARD!

IF YOU'D LIKE TO CHANGE THE SCALE OF THE PADS, THIS CAN BE DONE IN SYSTEM SETTINGS.

⑭ RECORD A BASSLINE



PRESS **PLAY** TO HEAR YOUR BEAT AND PRACTICE OVER IT WITH YOUR BASSLINE.


ONCE YOU HAVE SOMETHING YOU LIKE, PAUSE IT BY PRESSING **PLAY** AGAIN.

THEN, HOLD **RECORD** AND PRESS ON ONE OF THE PADS TO RECORD THAT PAD TO A STEP.

ALTERNATIVELY, YOU CAN TAP **RECORD** AND **PLAY** TO GET A FOUR BEAT COUNT IN AND RECORD IT IN!

IF YOUR BASSLINE IS LONGER THAN THE PATTERN AND YOU FIND YOURSELF PLAYING OVER IT MAKE SURE TO INCREASE YOUR PATTERN LENGTH BY HOLDING **RECORD** AND PRESSING **+**.

⑮ ADD A MELODY

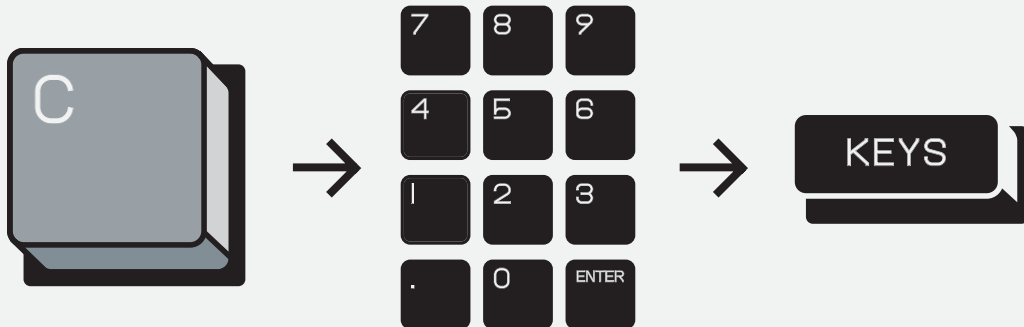

NEXT, LETS ADD A MELODY!

IF YOU FOLLOWED ALONG WITH THE RECOMMENDATION IN STEP 3, YOU SHOULD HAVE SOME MELODIC SOUNDS IN GROUP .

PRESS GROUP TO PLAY SOME MELODIC SOUNDS.

SELECT ONE THAT YOU LIKE THEN

PRESS TO PLAY THAT SOUND ACROSS THE PADS LIKE A KEYBOARD!

IF YOU'D LIKE TO CHANGE THE SCALE OF THE PADS, THIS CAN BE DONE IN SYSTEM SETTINGS.

⑩ RECORD YOUR MELODY



PRESS **PLAY** TO HEAR YOUR BEAT AND PRACTICE OVER IT WITH YOUR MELODY.


ONCE YOU HAVE SOMETHING YOU LIKE, PAUSE IT BY PRESSING **PLAY** AGAIN.

THEN, HOLD **RECORD** AND PRESS ON ONE OF THE PADS TO RECORD THAT PAD TO A STEP.

ALTERNATIVELY, YOU CAN TAP **RECORD** AND **PLAY** TO GET A FOUR BEAT COUNT IN AND RECORD IT IN!

IF YOUR MELODY IS LONGER THAN THE PATTERN AND YOU FIND YOURSELF PLAYING OVER IT MAKE SURE TO INCREASE YOUR PATTERN LENGTH BY HOLDING **RECORD** AND PRESSING **+**.

⑪ LET'S SAMPLE!

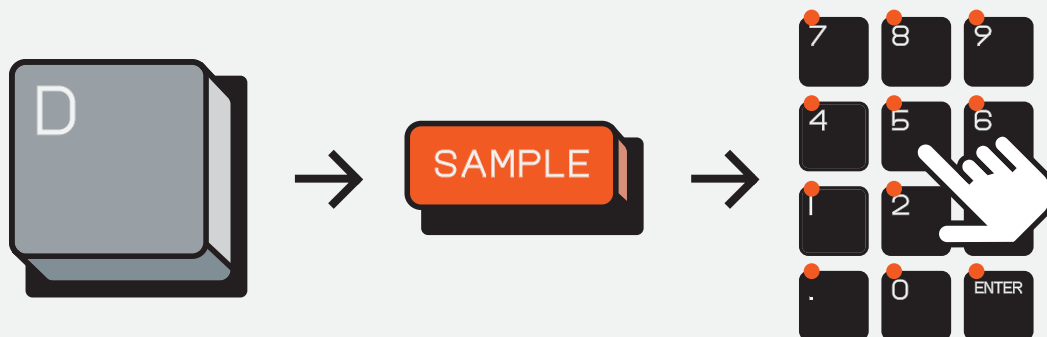

SAMPLING IS A GREAT WAY TO RECORD YOUR OWN SOUNDS INTO K.O. II!

IF YOU FOLLOWED ALONG WITH THE RECOMMENDATION IN STEP 3, GROUP **D** SHOULD BE EMPTY.

PRESS GROUP **D** THEN HIT **SAMPLE** TO ENTER SAMPLE MODE!

THE PADS WILL FLASH TO LET YOU KNOW THAT THEY CAN BE SAMPLED TO. PRESS ONE AND SING, SHOUT OR ROCK OUT INTO THE MIC OR LINE IN!

AS SOON AS YOU LET GO IT WILL STOP SAMPLING AND YOU CAN PRESS THE PAD AGAIN TO HEAR YOUR SAMPLE.


⑮ ADD IT TO YOUR BEAT



PRESS **MAIN** TO GO BACK TO MAIN MODE AND ADD THE SAMPLE INTO YOUR BEAT.

NOW YOU CAN USE THE SAME TECHNIQUES WE USED IN THE PREVIOUS SECTIONS TO PLAY YOUR SAMPLE(S) INTO YOUR BEAT!

⑯ ADD SOME FX

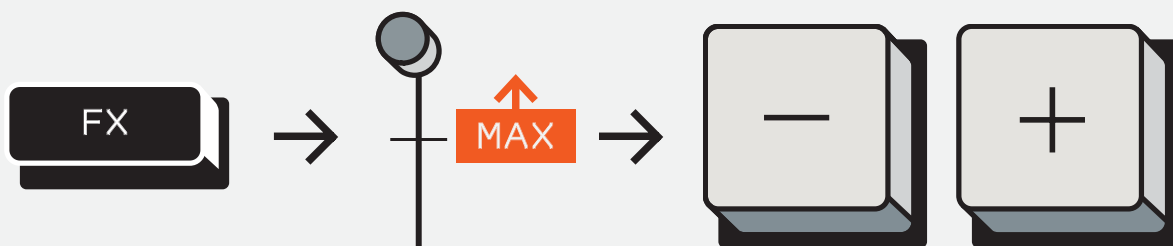

NOW THAT YOU HAVE A SICK BEAT YOU CAN ADD SOME FX TO IT!

TURN THE FADER UP AND USE **-/+** TO SWITCH BETWEEN THE AVAILABLE FX.

PRESS **FX** TO OPEN THE FX MENU, HERE YOU CAN SEND EACH GROUP TO ONE MASTER FX.

COMMIT YOUR BEAT!



PRESS **SHIFT** AND **MAIN** TO COMMIT YOUR BEAT.

THIS WILL SAVE THE CURRENT PATTERNS AS A SCENE AND CREATE A NEW SCENE!

COMMITTING YOUR BEAT IS A GREAT WAY TO QUICKLY BUILD THE LAYERS IN A SONG. OR EVEN STARTING SOMETHING FRESH!

WHEN YOU COMMIT IT WILL DUPLICATE YOUR CURRENT SCENE ALLOWING YOU TO QUICKLY ADD VARIATIONS ON YOUR BEAT WITHOUT OVERWRITING THE PREVIOUS SECTION.

COMMIT AS MANY TIMES AS YOU LIKE WHILE YOU ARE MAKING A BEAT TO QUICKLY BUILD OUT THE STRUCTURE OF YOUR SONG!

EXTRA! DON'T FORGET TO ADD PUNCH-IN-FX



NOW PRESS **PLAY**, HOLD DOWN **FX** AND PRESS THE PADS.

THIS WILL ADD PUNCH-IN FX WHICH ALLOW YOU TO QUICKLY AND EASILY PERFORM WITH YOUR BEAT!

THAT'S IT!



8

MODES

SOUND

MAIN


TEMPO

THE DEVICE OPERATES IN
THREE MAIN MODES: **SOUND**,
MAIN AND **TEMPO**.


8.1 SOUND

SOUND IS WHERE YOU DECIDE WHICH SAMPLE TO ASSIGN TO EACH PAD AND DELETE STUFF YOU DON'T NEED, AS WELL AS MODIFY BASIC PARAMETERS LIKE AMPLITUDE AND PITCH.


K.O.II CAN STORE UP TO 999 SAMPLES, OR 64 MB, WHICHEVER COMES FIRST.

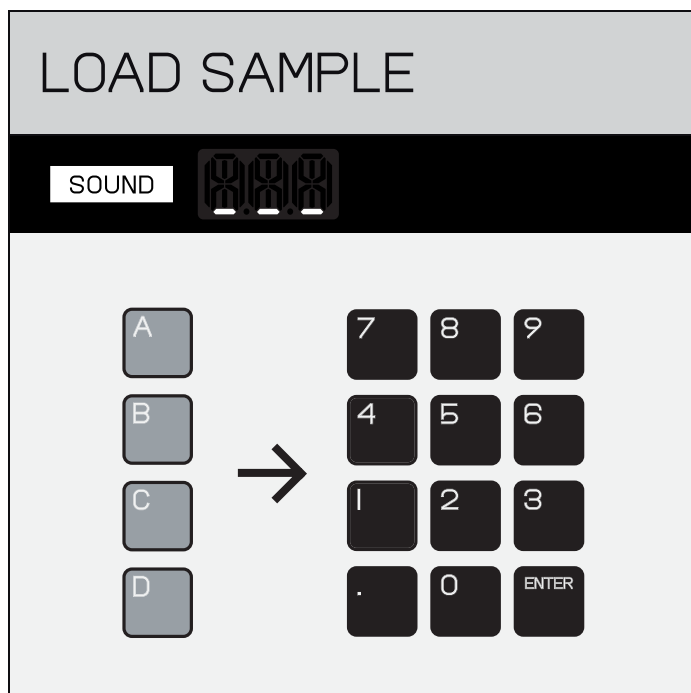

TO LOAD A SAMPLE ONTO A PAD, SELECT A GROUP **A** – **D** THEN A PAD.

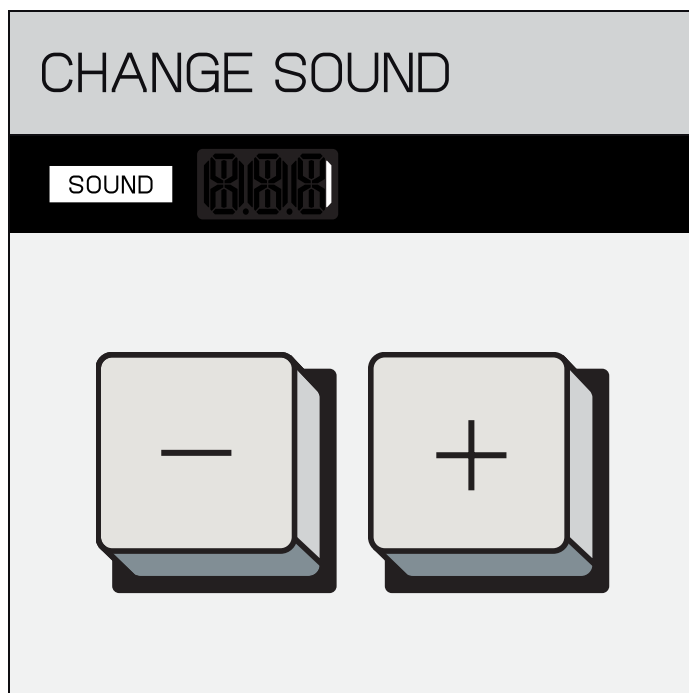


PRESS **-** OR **+** TO CHANGE THE SOUND ON THAT PAD.

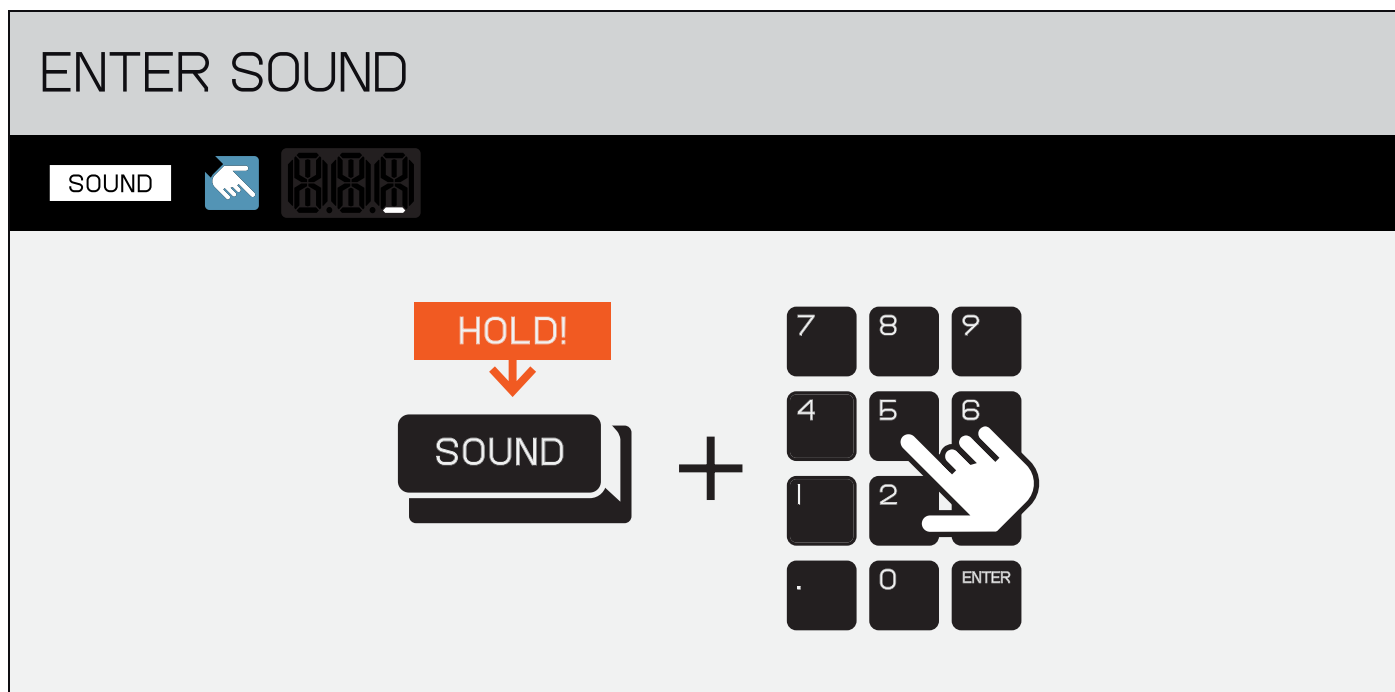

ALTERNATIVELY, HOLD **SOUND** AND ENTER THE NUMBER OF THE SOUND YOU WANT USING THE PADS.


PRO-TIP! YOU CAN PREVIEW THE NAME OF A SAMPLE BY HOLDING DOWN THE PAD WHILE IN SOUND MODE. A SAMPLE WILL ONLY HAVE A NAME IF IMPORTED OR RENAMED USING THE EP SAMPLE TOOL.

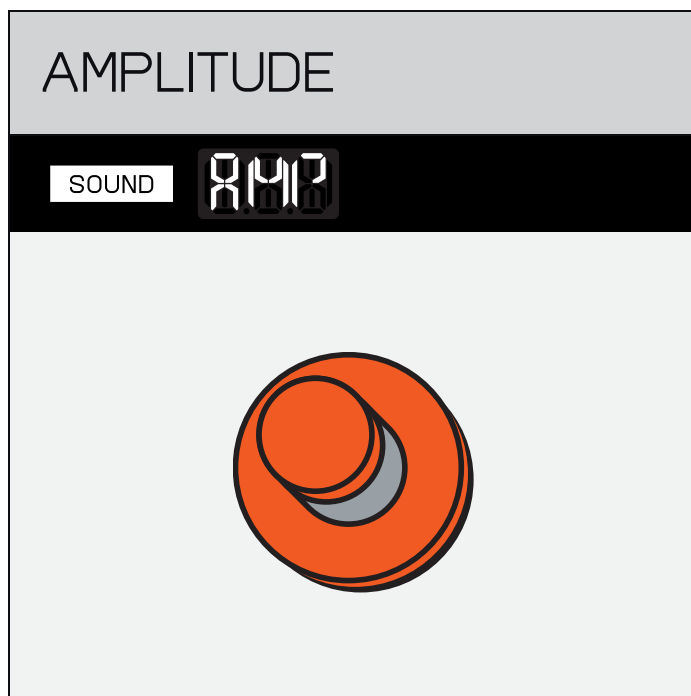


THE **X** KNOB CONTROLS AMPLITUDE/VOLUME (AMP).



THE **Y** KNOB CONTROLS PITCH (PTC).

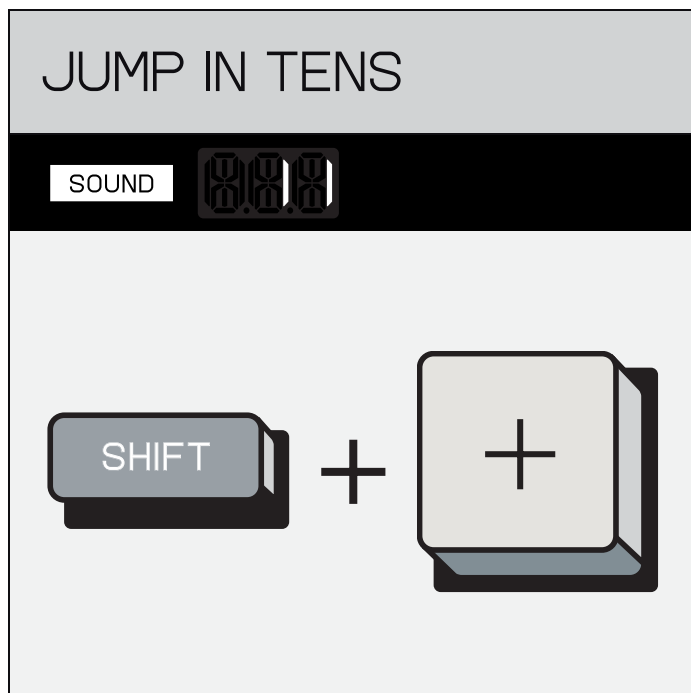

PRESSING **SHIFT** AND **[-]/[+]** WILL JUMP UP THE SAMPLE NUMBERS IN TENS RATHER THAN ONE BY ONE.

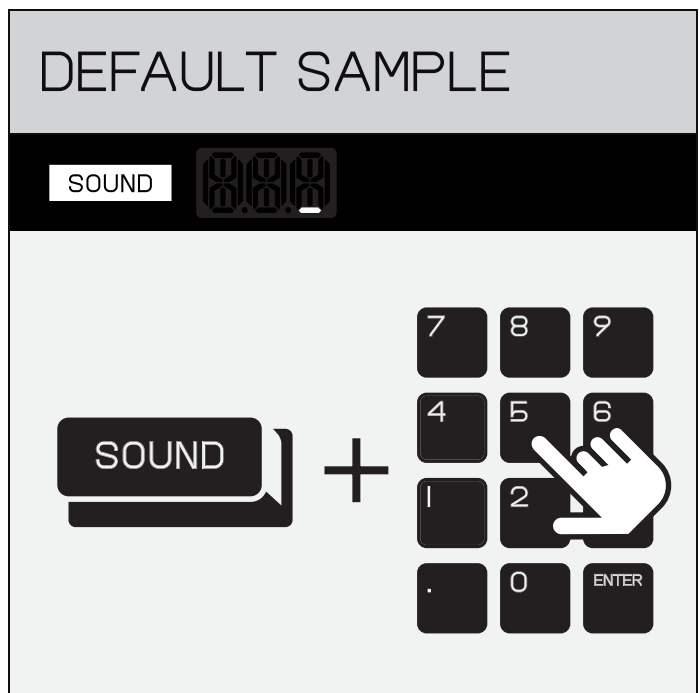

KICKS ARE STORED FROM 1–99.
 SNARES FROM 100–199.
 HI-HATS FROM 200–299.
 PERCUSSION FROM 300–399.
 BASS FROM 400–499.
 MELODIC SOUNDS FROM 500–599.


OUT OF THE BOX K.O. II
WILL COME LOADED WITH
OVER 300 SAMPLES BUT
YOU CAN OF COURSE
RECORD YOUR OWN OR
DOWNLOAD THEM TO THE
DEVICE BY USING THE EP
SAMPLE TOOL!

SOUND MODE ALSO
ALLOWS YOU TO EDIT THE
SOUNDS. THESE EDIT
MODES AFFECT THE
SOUND ONLY WITHIN THE
SELECTED PROJECT AND
DO NOT WRITE-BACK TO
THE SAMPLE ITSELF.

8.2 SOUND EDIT

SELECT THE SOUND YOU WISH TO EDIT, THEN PRESS **SHIFT** AND **SOUND**.
WITHIN THIS MENU YOU CAN THEN NAVIGATE THROUGH 5 EDIT MODES.

USE **[-]** AND **[+]** TO NAVIGATE THROUGH THE EDIT MODES.

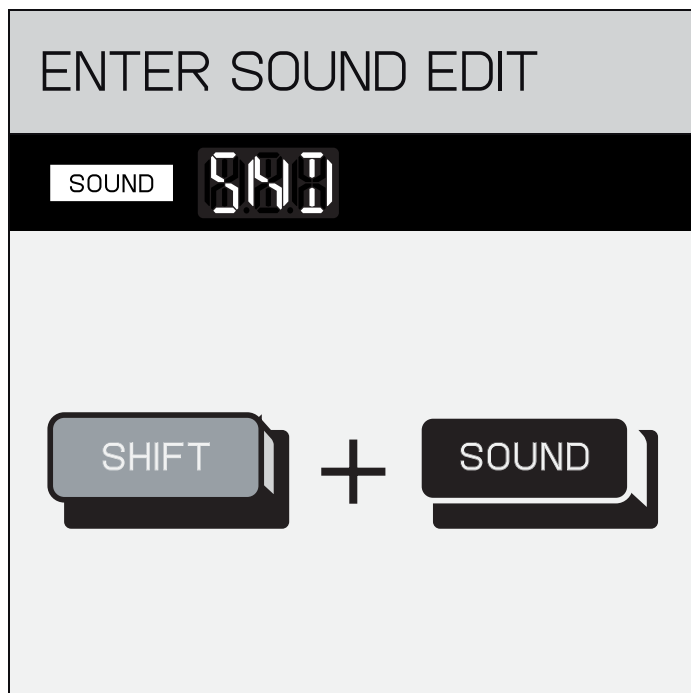


PRESS **SHIFT** AND **SOUND** TO ENTER SOUND EDIT.

CHANGE EDIT MODE

SOUND

540 000 242 004 400

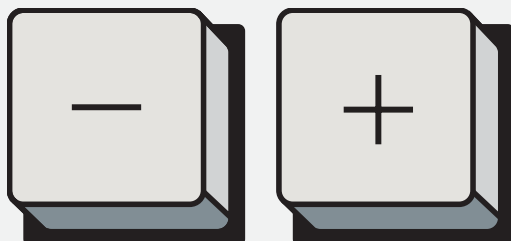

USE  AND  TO CHANGE THE SOUND EDIT MODE.

SAVE SOUND EDITS


SOUND

542




HOLD  AND  FOR TWO SECONDS TO SAVE ANY EDITS YOU HAVE MADE TO THE CURRENT SOUND.

8.2.1 SOUND MODE

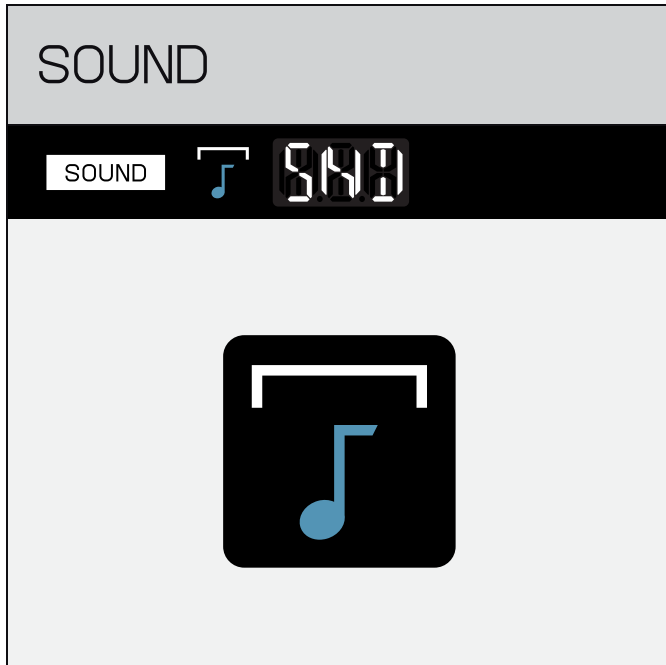

SOUND IS WHERE YOU CAN ADJUST THE WAY A SAMPLE IS PLAYED AND WHERE IT SHOULD SIT IN YOUR STEREO MIX.

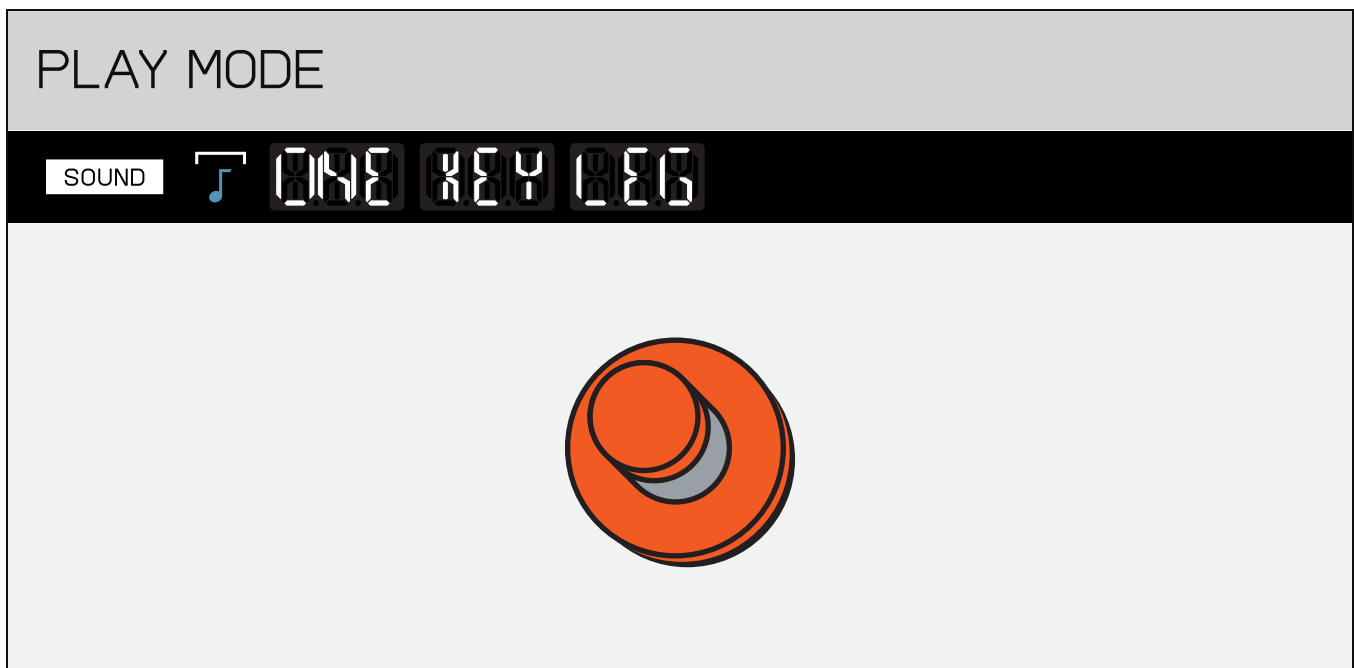


THE  KNOB CONTROLS THE PLAY MODE OF THE SAMPLE BETWEEN ONESHOT, KEY AND LEGATO.

ONESHOT

SOUND



0148

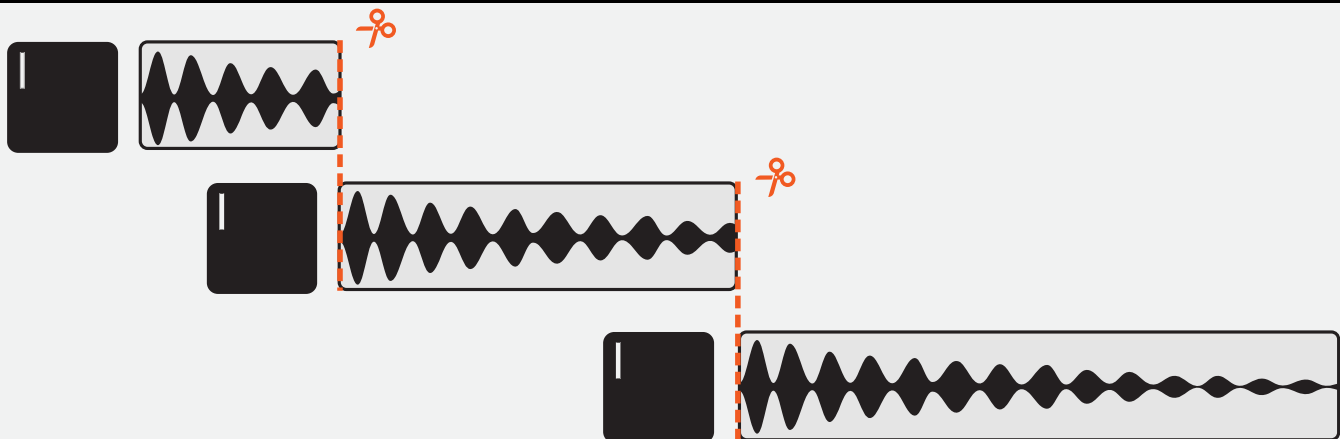


ONESHOT IS MONOPHONIC, AND
PLAYS THE WHOLE SAMPLE, ONE AT
A TIME.

KEY

SOUND




KEY

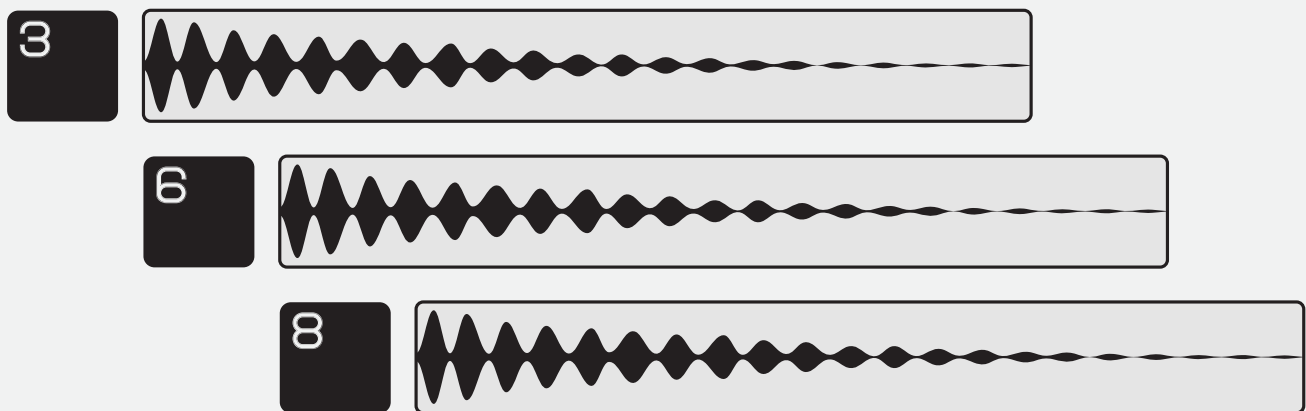


KEY IS POLYPHONIC, AND ALLOWS
YOU TO PLAY MULTIPLES OF THE
SAME SAMPLE AT ONCE.

PERFECT FOR PLAYING THE SAME
SAMPLE ACROSS A KEYBOARD!

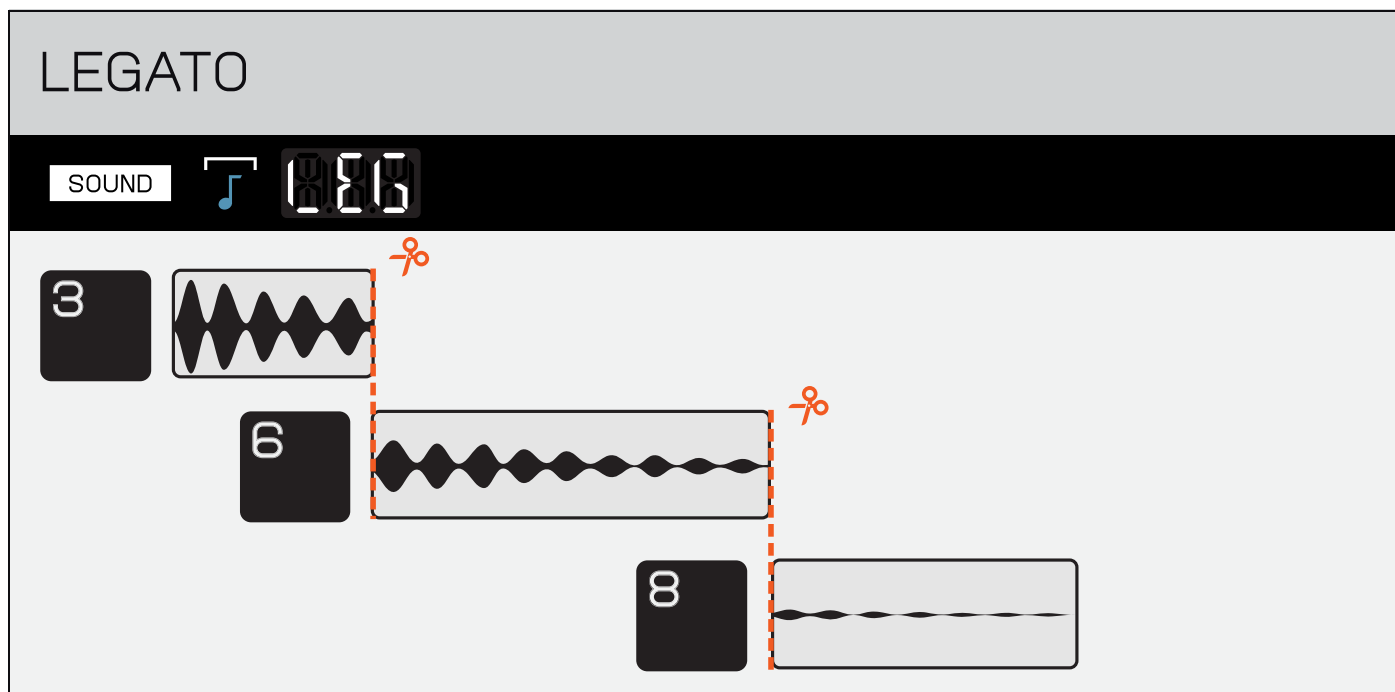


LEGATO IS MONOPHONIC, AND PLAYS A SAMPLE ONE AT A TIME. WHEN CHANGING THE NOTE WHILE BEING HELD, IT WILL CONTINUE PLAYING FROM THE SAME POINT AS IT WAS LEFT OFF.

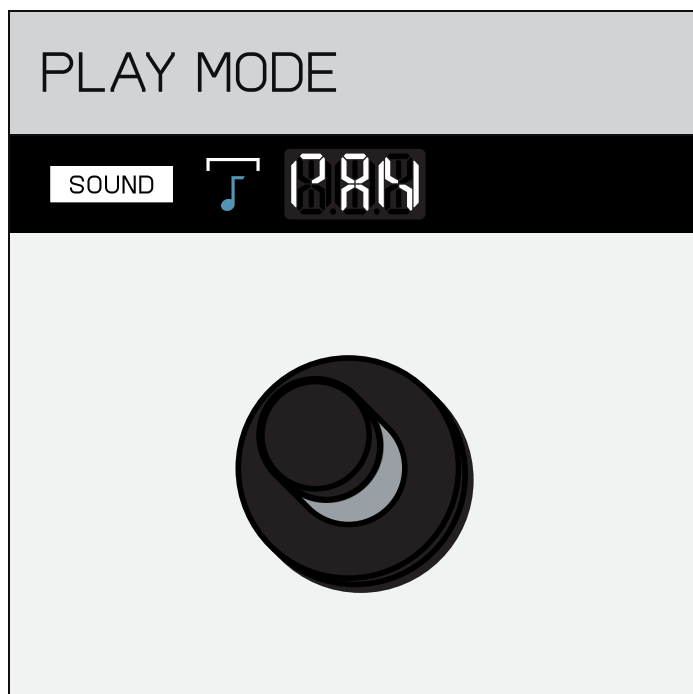


THE **Y** KNOB CONTROLS PAN. PAN GRADUALLY ADJUSTS WHETHER THE SAMPLE IS PLAYED ON THE LEFT, RIGHT OR CENTER AUDIO CHANNELS.

8.2.2 TRIM

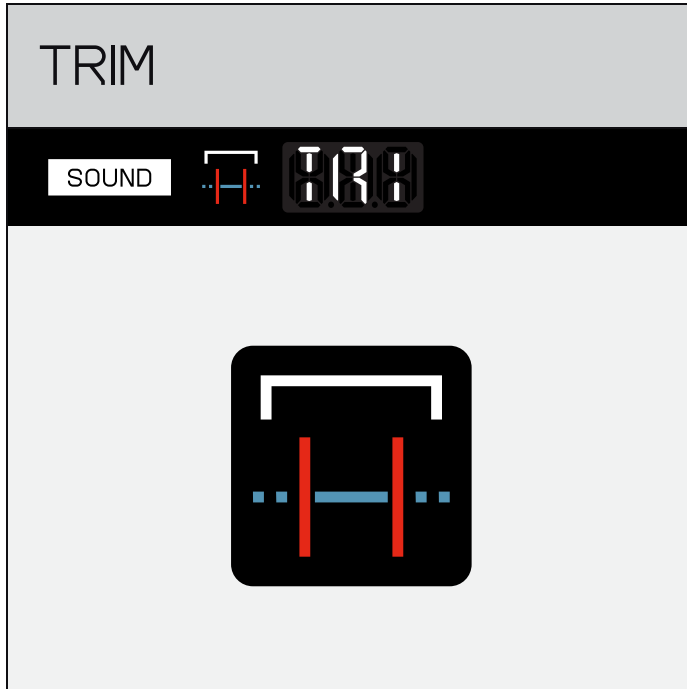

TRIM HELPS YOU TO FINE TUNE THE START AND END POINTS OF YOUR SAMPLE, SO THAT YOU CAN CUT STRAIGHT TO THE BIT YOU WANTED!

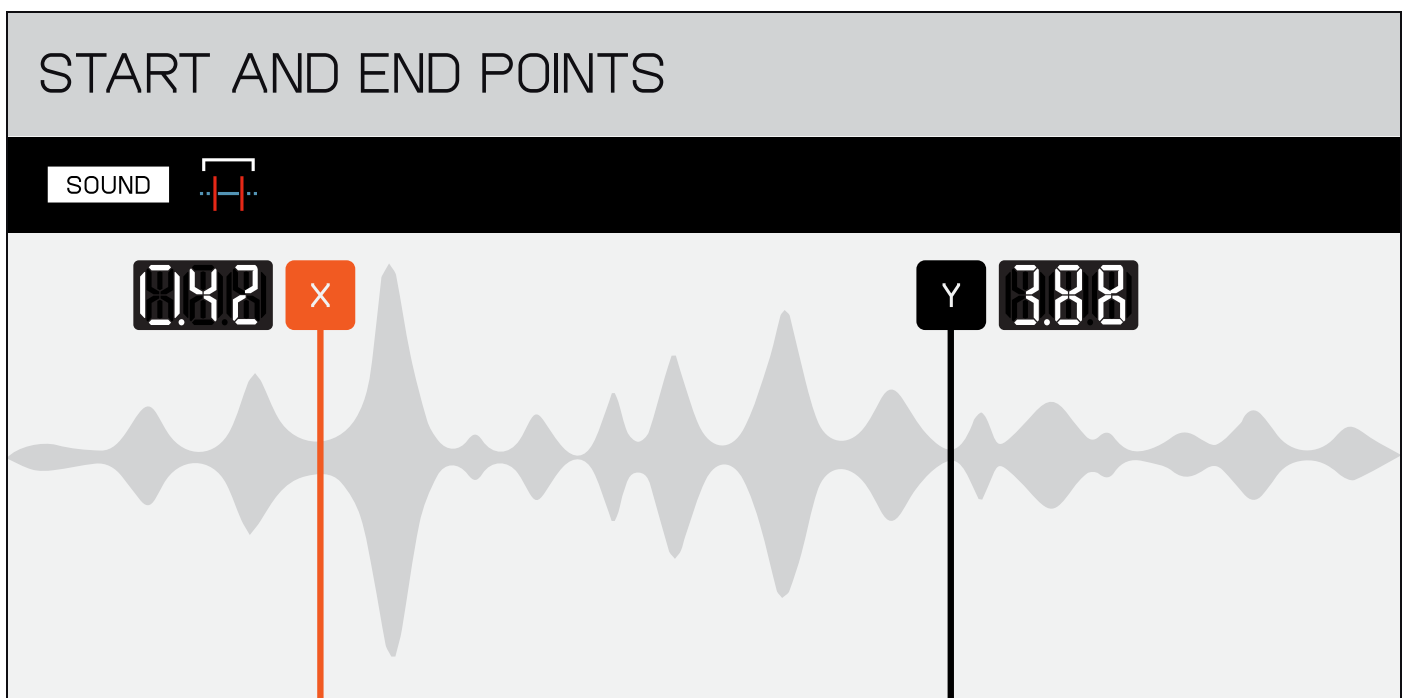

THE  KNOB CONTROLS THE STARTING POINT OF THE SAMPLE.

THE  KNOB CONTROLS THE LENGTH OF YOUR SAMPLE.

8.2.3 ENVELOPE

ENVELOPE



ENVELOPE HELPS ADJUST THE PLAYBACK OF YOUR SAMPLE, SO THAT IT FADES IN AND OUT EXACTLY AS YOU NEED IT TO. CREATING SOFT PADS OR SNAPPY SNARES!

ATTACK AND RELEASE



THE  KNOB CONTROLS ATTACK. ATTACK ALLOWS YOU TO FADE IN YOUR SAMPLE OR HAVE IT PLAY EXACTLY HOW IT WAS RECORDED.

THE  KNOB CONTROLS RELEASE. RELEASE WILL CONTINUE PLAYING THE SAMPLE AFTER YOU LET GO OF THE PAD OR WILL CUT IT OFF IMMEDIATELY.


8.2.4 TIME

TIME

SOUND



BPM

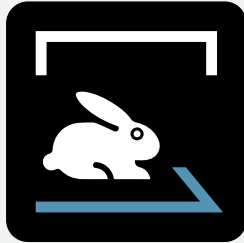

TIME STRETCH MODE

SOUND



BPM

BPM



TIME MODE IS A POWERFUL TOOL WHICH ALLOWS YOU TO MATCH THE BPM OF YOUR SAMPLE TO THAT OF YOUR PROJECT!

THE  KNOB SETS THE TIME STRETCH MODE (BPM OR BAR).

BPM

SOUND




← 175 BPM



← 100 BPM

BPM WILL STRETCH THE SAMPLE TO MATCH THE PROJECT TEMPO.

TO DO SO IT REQUIRES YOU TO SET THE SAMPLE BPM.

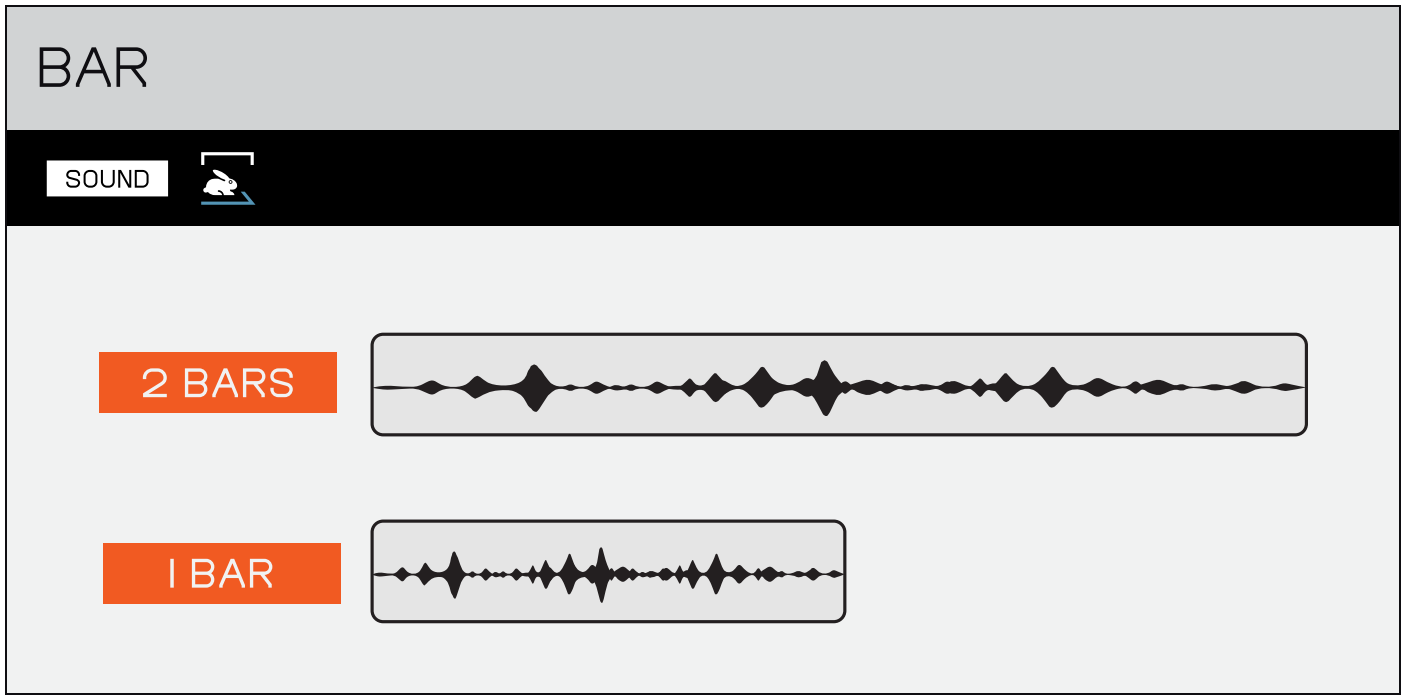


BAR WILL STRETCH THE SAMPLE, AUTOMATICALLY FITS IT TO THE CHOSEN TIME DIVISION OF THE PROJECT'S BPM.

IF YOU CHOOSE 1 BAR IT STRETCHES YOUR SAMPLE TO BE 1 BAR LONG. IF YOU CHOOSE 2 BARS IT STRETCHES YOUR SAMPLE TO BE 2 BARS LONG.




THE **Y** KNOB SETS THE SAMPLE TEMPO (BPM) OR SAMPLE LENGTH (BAR).

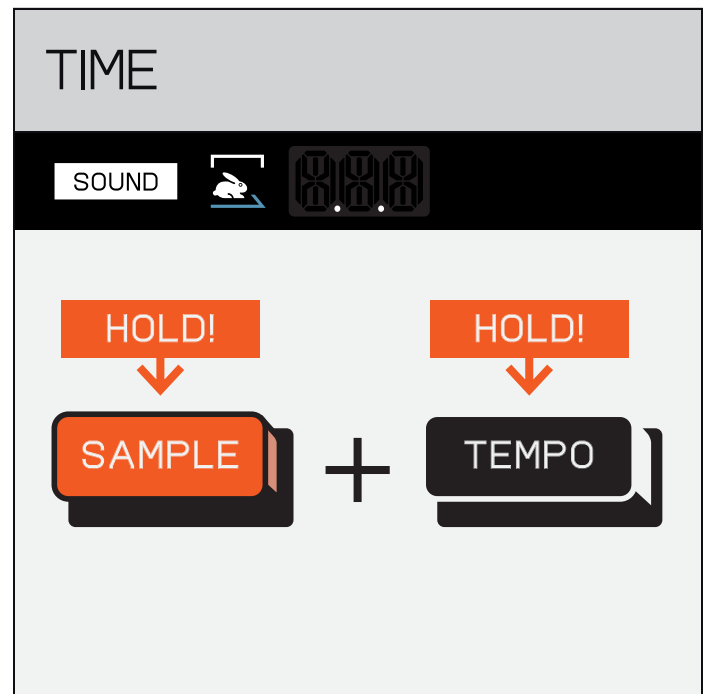

PRO-TIP! TO FIND THE TEMPO OF INCOMING AUDIO HOLD **SAMPLE** AND **TEMPO**.

8.2.5 MIDI

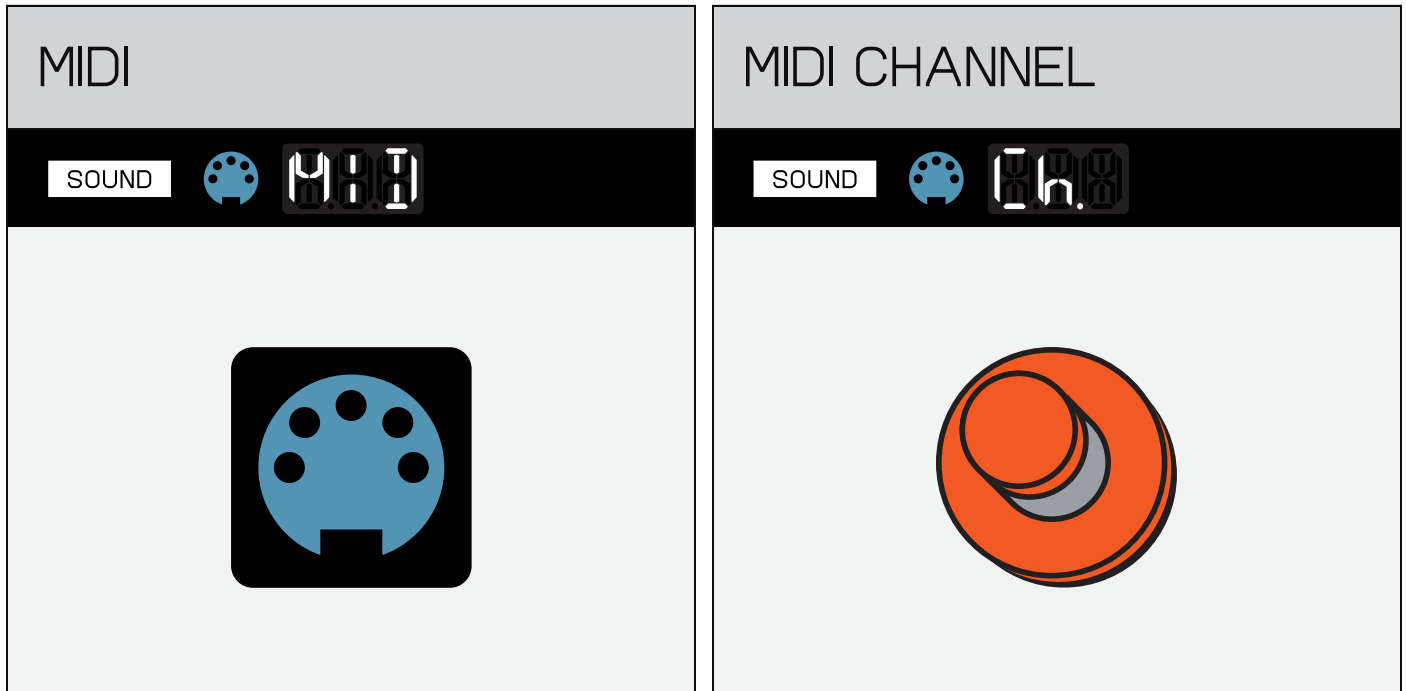


MIDI IS A PROTOCOL THAT ALLOWS YOU TO CONNECT YOUR K.O. II TO OTHER MUSICAL INSTRUMENTS, CONTROLLING YOUR K.O. II OR THE INSTRUMENT OR BOTH!

THE  KNOB CONTROLS THE MIDI CHANNEL THE PAD RECEIVES AND SENDS TO. THIS ALLOWS YOU TO CONNECT A SERIES OF EXTERNAL MUSIC DEVICES AND SEND NOTE DATA TO THEM ALL INDIVIDUALLY FROM DIFFERENT PADS!

ROOT NOTE


SOUND

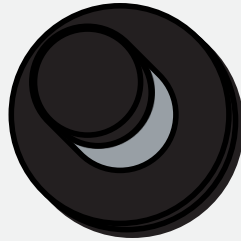

THE **Y** KNOB CONTROLS THE MIDI ROOT NOTE. THIS ALLOWS YOU TO SET THE MIDI ROOT NOTE OF YOUR SAMPLE AND ENSURE THAT THE ROOT NOTE ON THE DEVICE MATCHES WITH THE ROOT NOTE ON THE SAMPLE.

FOR MORE INFORMATION ON HOW TO CONFIGURE MIDI, AS WELL AS WHAT MIDI MESSAGES ARE SENT AND RECEIVED, PLEASE SEE THE [MIDI CHART](#).

8.2.6 MUTE GROUP

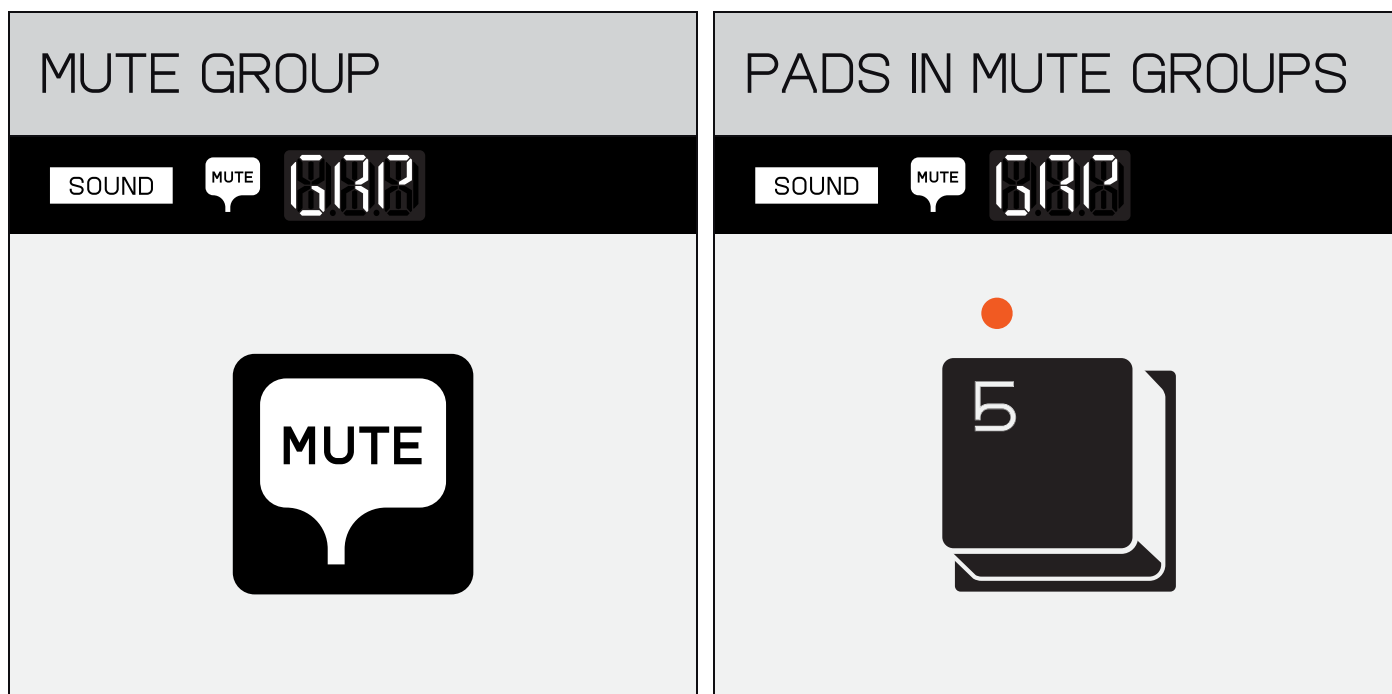


A MUTE GROUP ALLOWS YOU TO GROUP TOGETHER ALL THE SAMPLES YOU DO NOT WISH TO HAVE PLAYING AT THE SAME TIME. WHEN PLAYING THE SAMPLES IN A MUTE GROUP ONLY THE LAST PRESSED SOUND WILL PLAY, CUTTING OFF ANY OTHERS THAT CAME BEFORE IT.

HERE THE PADS WILL FLASH. PRESS A PAD TO ADD IT TO THE MUTE GROUP. IF A PAD IS IN A MUTE GROUP IT WILL LIGHT UP.

8.3 MAIN

THINK OF MAIN AS YOUR HOME SCREEN, THE PLACE YOU ALWAYS WANT TO RETURN TO. IT'S HERE THAT YOU CONTROL YOUR PROJECTS, SCENES, AND PATTERNS. THIS IS ALSO WHERE YOU ARRANGE YOUR SONGS, RECORD, AND PERFORM THEM LIVE.

K.O. II SEQUENCES PER-STEP. TO NAVIGATE THROUGH STEPS, PRESS  AND .

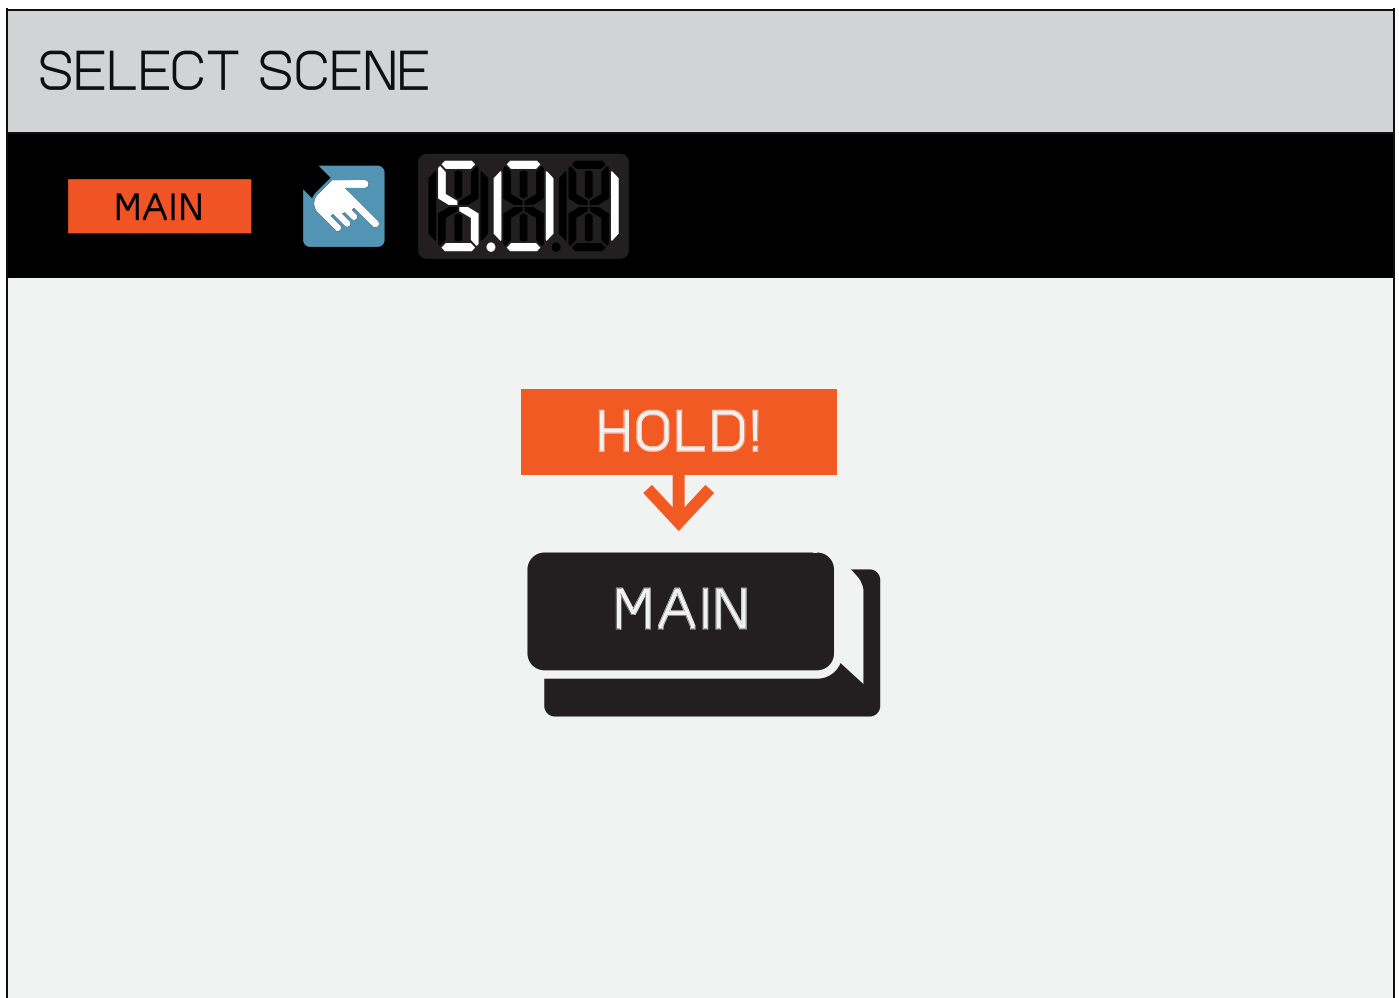


HOLD MAIN TO SELECT SCENE 01–99 WITH  AND .

PRO-TIP! YOU CAN ALSO SWITCH TO A SPECIFIC SCENE BY HOLDING  AND TYPING THE NUMBER ON THE NUMPAD.

SELECT PATTERN

MAIN

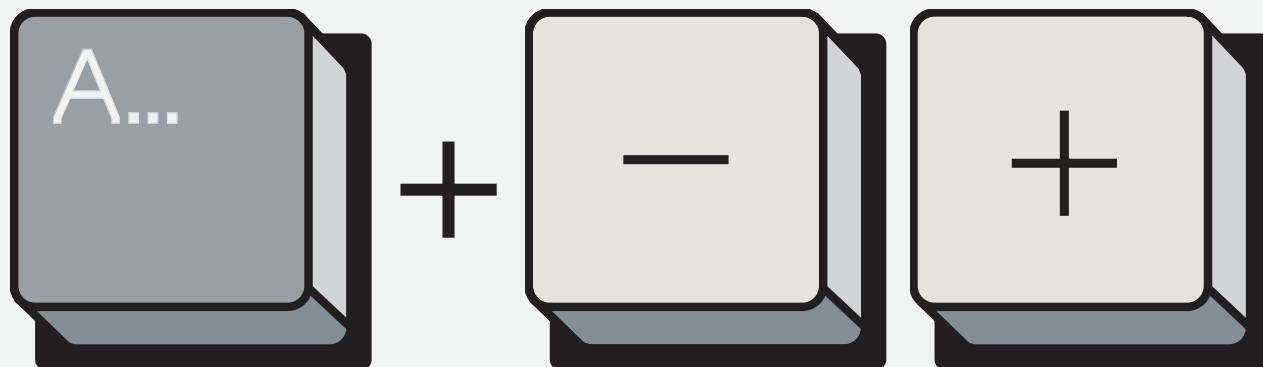

HOLD GROUP  –  AND PRESS 
AND  OR TYPE THE NUMBER IN
WITH THE PADS TO SELECT
PATTERN.

PRO-TIP! HOLD MULTIPLE GROUPS
TO ADJUST ALL THEIR PATTERNS
AT ONCE.

FADER

MAIN



184

HOLD!



FADER




BY DEFAULT THE FADER CONTROLS GROUP LEVEL BUT CAN BE REASSIGNED BY HOLDING **FADER** AND SELECTING ANY OF THE OPTIONS PRINTED ABOVE THE PADS.

NEW PATTERN

MAIN


8.02

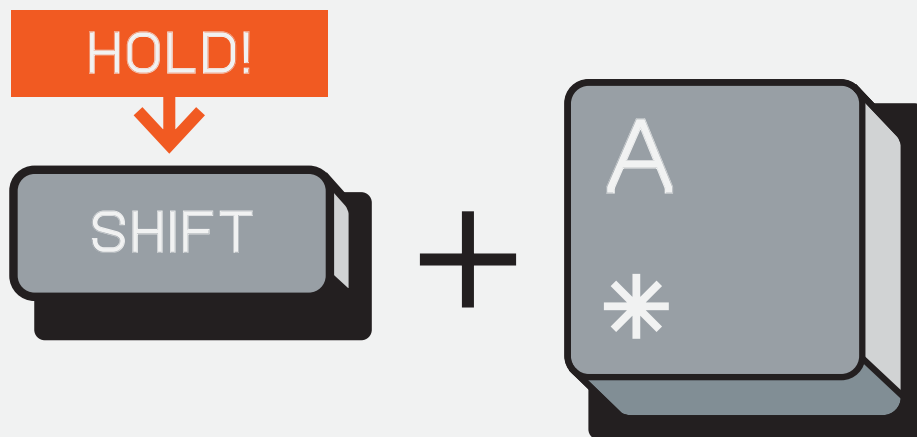

PRESS  AND  TO FIND THE NEXT AVAILABLE EMPTY PATTERN.

UNDO

MAIN

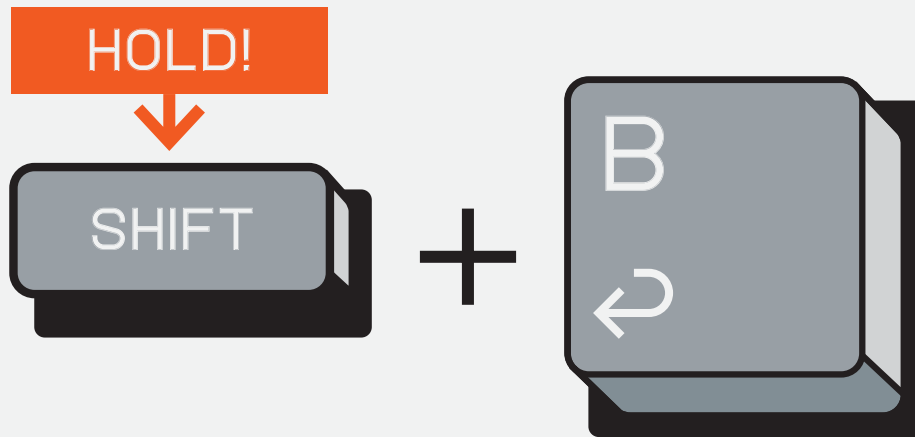

PRESS  AND  TO UNDO.

WHEN AN UNDO IS POSSIBLE THE UMBRELLA WILL LIGHT UP TO LET YOU KNOW.


COPY

MAIN



BAR

PAT

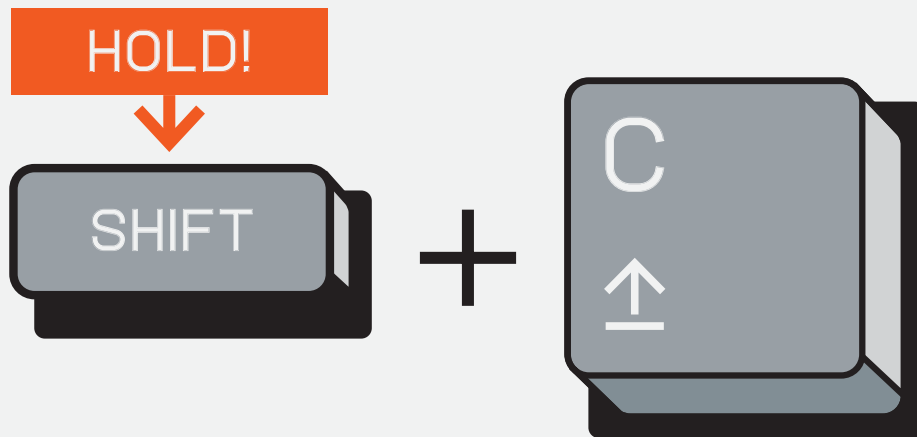

PRESS  AND  TO COPY.

PRESS ONCE FOR BAR AND TWICE FOR PATTERN.
THE CURRENT BAR WILL BE COPIED.

PRO-TIP! YOU CAN NAVIGATE THROUGH BARS USING
 AND  AND .

PASTE

MAIN

PASTE



0000

0000

HOLD!



SHIFT

+

D



PRESS  AND  TO PASTE.

COMMIT

MAIN

5.02

HOLD!



SHIFT

+

MAIN

PRESS **SHIFT** AND **MAIN** TO **COMMIT**.

THIS WILL DUPLICATE THE CURRENT SCENE AND ALLOW YOU TO SAVE YOUR IDEAS BEFORE MOVING ON TO THE NEXT ONE!

CHANGE PROJECT

MAIN



HOLD!



MAIN



HOLD **MAIN** AND SELECT PADS 1 – 9 TO
CHANGE PROJECT.

8.3.I SONG MODE

SOMETIMES YOU WANT TO SIT BACK AND HAVE A SONG PLAY ITSELF, THAT'S WHERE SONG MODE COMES IN!

SONGS CAN HAVE A MAXIMUM LENGTH OF 99 SCENES.

ENTER SONG LIST EDITOR

TEMPO

120

HOLD!

MAIN

+


ENTER

HOLD **MAIN** THEN PRESS THE [ENTER] PAD TO ENTER THE SONG LIST EDITOR.

NEXT SONG POSITION

TEMPO

48.8

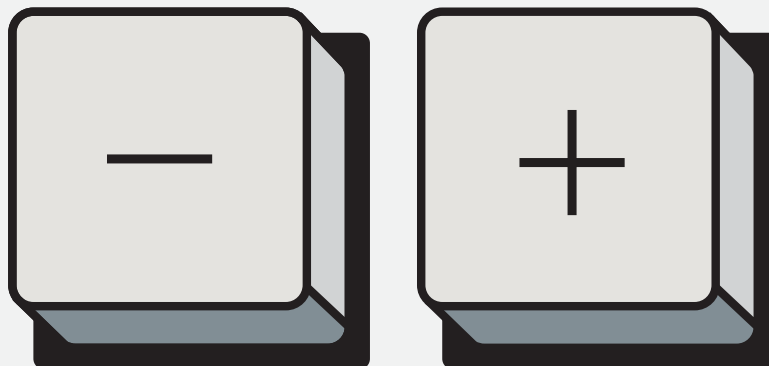

TO GO TO THE NEXT SONG POSITION
PRESS  AND TO GO TO THE
PREVIOUS SONG POSITION PRESS
.

CHANGE SCENE

TEMPO





120

HOLD!



SHIFT

+

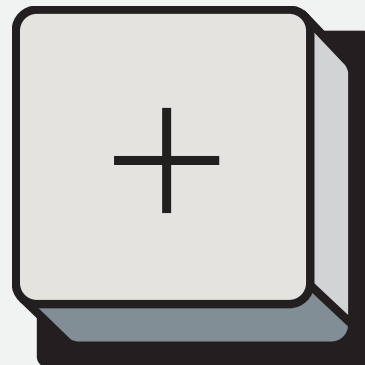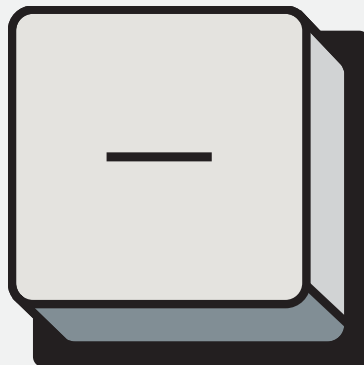


HOLD  AND PRESS  OR  TO
SWITCH THE SCENE THAT WILL PLAY
ON THE CURRENT SONG POSITION.

ADD TO SONG LIST

TEMPO

120

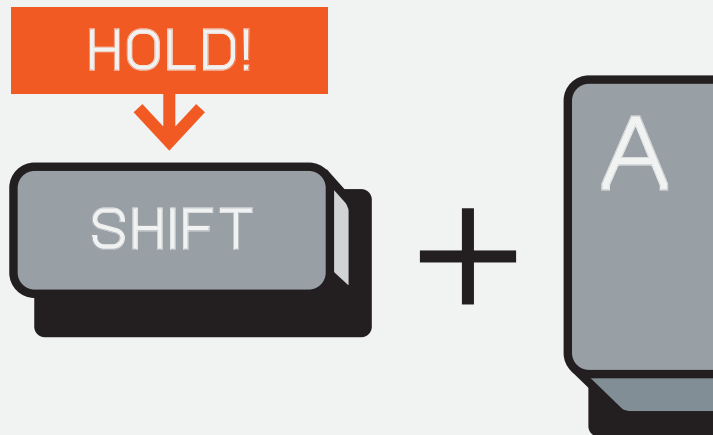


HOLD **SHIFT** AND PRESS **A** TO ADD
A NEW SCENE TO THE SONG LIST.
WHEN YOU FIRST MAKE A SONG
ARRANGEMENT THERE WILL ONLY
BE ONE SCENE IN THE SONG LIST.

COPY SCENE

TEMPO

0120

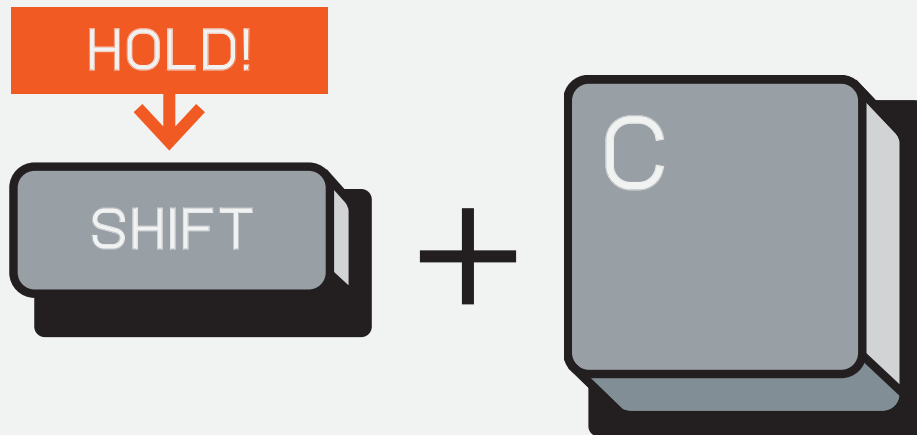


WHILE IN THE SONG LIST EDITOR
HOLD  AND PRESS [C] TO COPY
THE CURRENT SCENE TO THE
CLIPBOARD.

INSERT SCENE

TEMPO

48.8

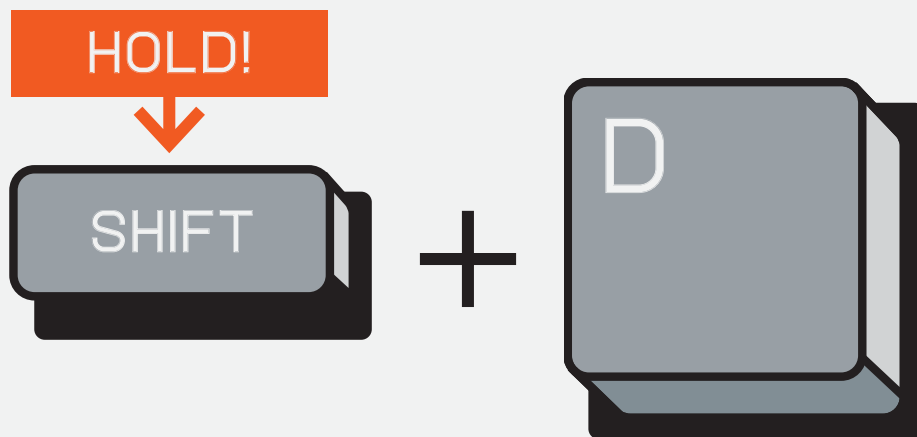

HOLD  AND PRESS (D) TO
INSERT A SCENE INTO THE
SELECTED SONG POSITION.

PLAY

TEMPO



0120




PRESS  TO PLAY THE SONG
FROM THE CURRENTLY SELECTED
SONG POSITION.

PLAY FROM START

TEMPO


120

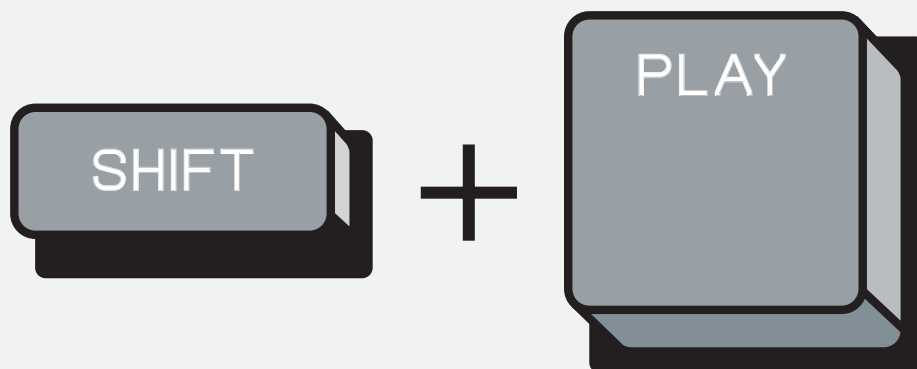

PRESS **SHIFT** AND **PLAY** TO PLAY
THE SONG FROM THE START.

8.4 TEMPO

BASEMENT JAXX SAID THAT IF YOU RAISE THE SONG THREE BPM FROM WHERE YOU THINK IT SHOULD BE, IT WILL BE A HIT. TRY IT OUT BY SETTING THE TEMPO OF YOUR SONG WITH THIS BUTTON.

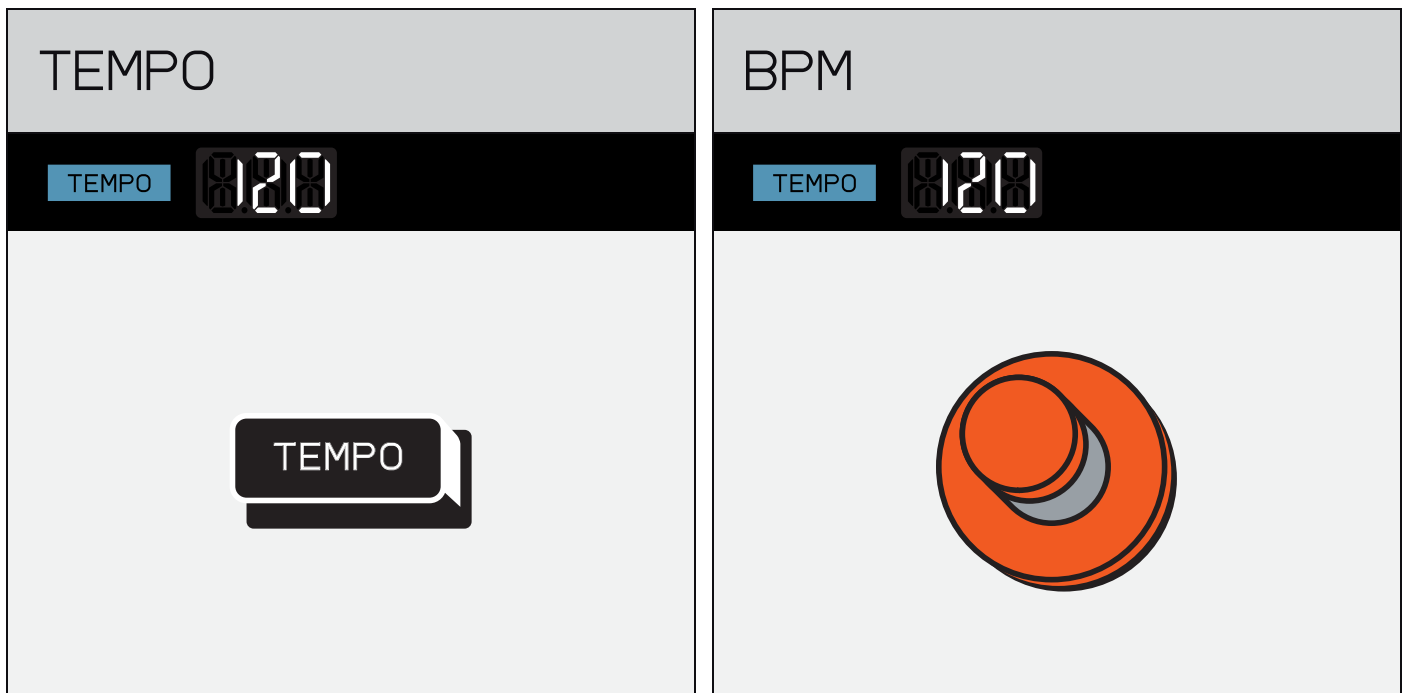


PRESS THE **TEMPO** BUTTON TO ENTER THE **x** KNOB CONTROLS BPM.

PRO TIP! TAP **TEMPO** TO TAP TEMPO


THE LOWEST TEMPO IS 40 BPM AND THE HIGHEST IS 399 BPM.

PRO-TIP! THE **x** KNOB HAS A RANGE OF 60 BPM TO 180 BPM, BUT IF YOU TYPE IN THE NUMBERS YOU CAN GO ALL THE WAY DOWN TO 40 BPM AND ALL THE WAY UP TO 399 BPM!

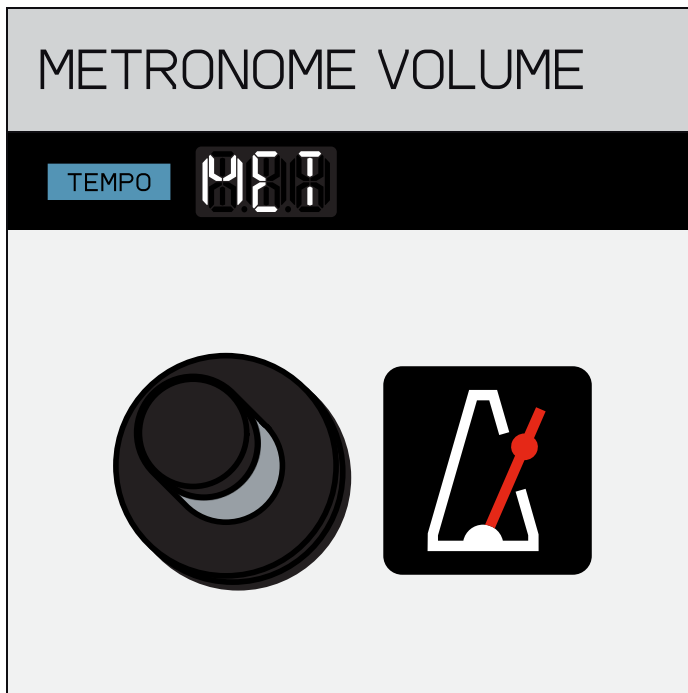

THE **Y** KNOB CONTROLS RECORD METRONOME VOLUME.

PRO-TIP! IF YOU'D LIKE TO TURN THE METRONOME ON WHILE PLAYING AS WELL YOU CAN DO SO IN SYSTEM SETTINGS.

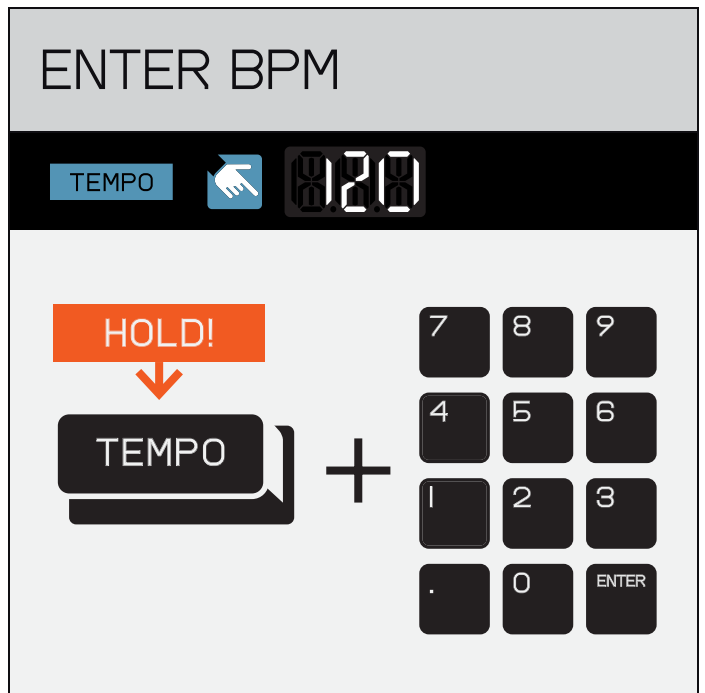


HOLD **TEMPO** AND TYPE THE DESIRED TEMPO VALUE WITH THE NUMBER PAD.

PRO-TIP! USE THE (.) TO ADD DECIMAL VALUES OF TEMPO, FOR EXAMPLE 120.51 BPM.

8.4.I TIME SIGNATURE

SET THE TIME SIGNATURE TO
SOMETHING AS SIMPLE AS 4/4, OR
SOMETHING REALLY WEIRD.

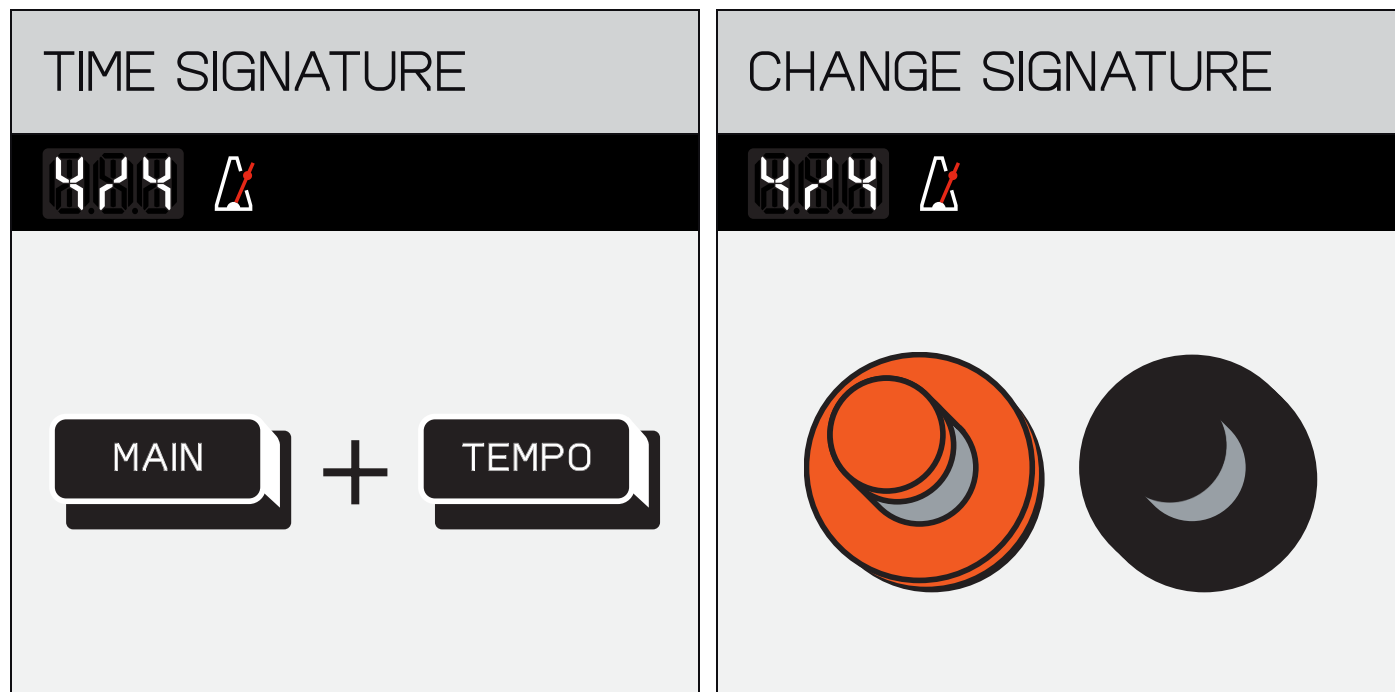


PRESS **MAIN** AND **TEMPO** TO CHANGE
THE TIME SIGNATURE FOR THE
CURRENT PATTERN

USE THE **X** AND **Y** KNOBS TO
ADJUST THE TIME SIGNATURE

8.4.2 TEMPO MATCH

IF YOU HEAR SOMETHING YOU LIKE
AND WANT TO MATCH THE TEMPO
OF YOUR SONG TO IT YOU CAN
DETECT THE TEMPO OF THE AUDIO
PLAYED THROUGH THE LINE-IN OR
BUILT-IN MIC!

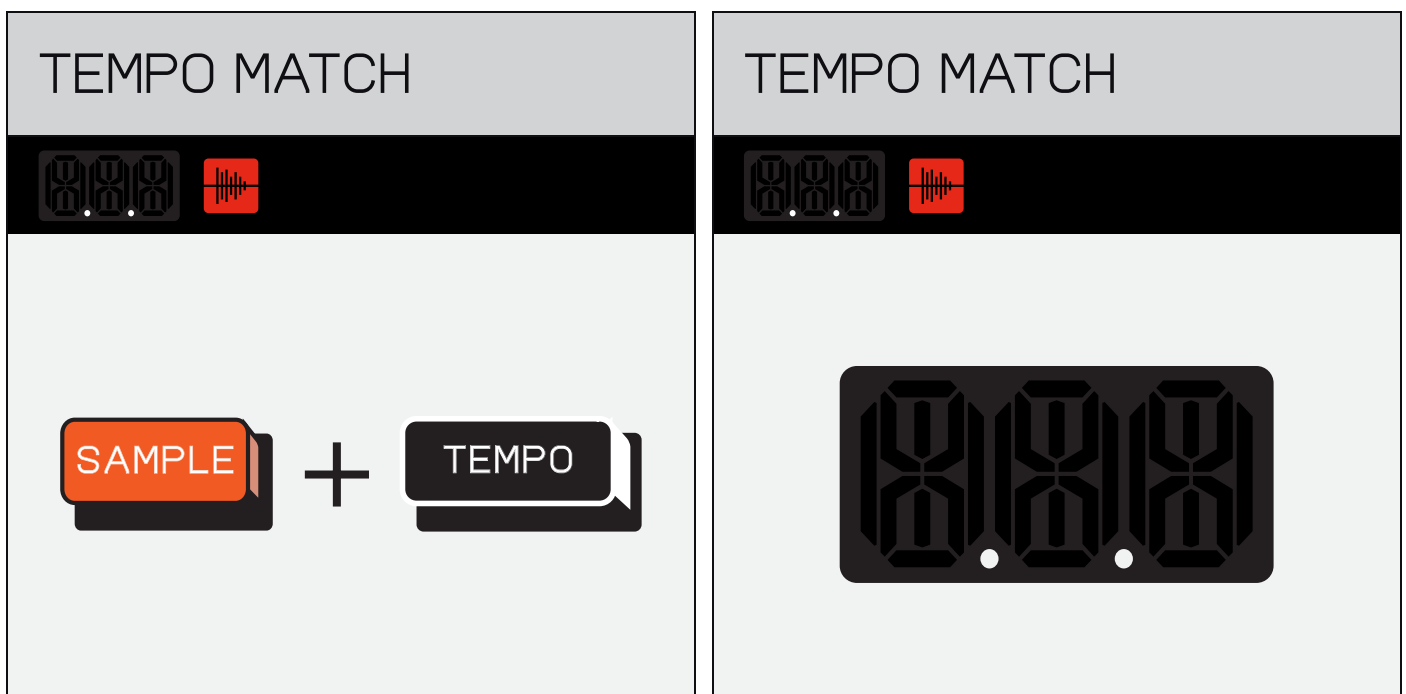

HOLD **SAMPLE** AND **TEMPO** TO START
LISTENING FOR THE INCOMING AUDIO,
THEN PLAY ANY AUDIO INTO THE
DEVICE THROUGH THE LINE-IN OR
INTO THE MIC. K.O. II WILL LISTEN,
FIND THE TEMPO, DISPLAY IT ON
SCREEN AND THEN SET THE
PROJECT TEMPO TO MATCH.

PROJECT.01

INTRO (S0.1) VERSE (S0.2) BREAK (S0.3) [...]

MIDI OUT CH 1

MIDI OUT CH 2

FADER

BASS

SAMPLE DRUMS

SAMPLE 1

SAMPLE 2

VOCALS

A

B

C


D

*THIS IS NOT AN APP

9.1 LIVE RECORD

K.O. II ALLOWS FOR FAST AND EASY LIVE RECORDING SO YOU CAN QUICKLY GET YOUR IDEAS DOWN.

RECORD WITH COUNT IN

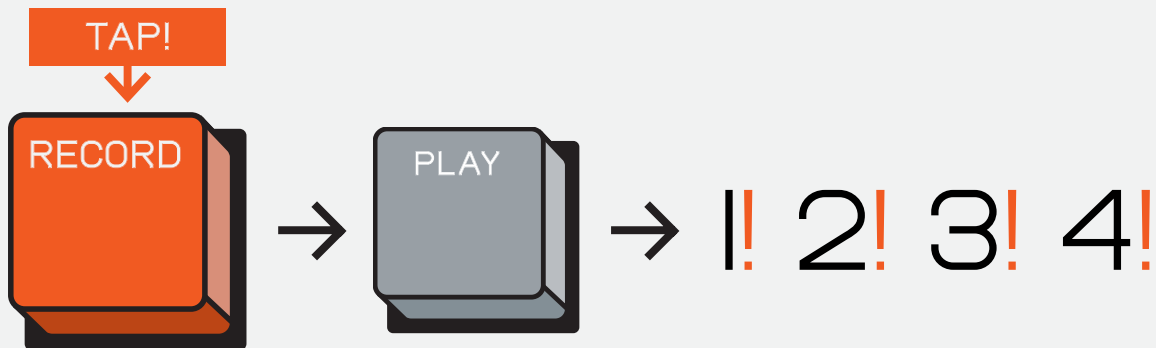

WHILE K.O. II IS NOT PLAYING PRESS AND RELEASE **RECORD** THEN PRESS **PLAY** TO HEAR A FOUR BEAT COUNT-IN AND START RECORDING.

HIT THE PADS TO RECORD YOUR BEAT!

STOP RECORDING

MAIN

0.14



STOP!



LISTEN

ONCE YOU ARE DONE RECORDING
PRESS  AGAIN TO STOP THE
RECORDING AND PAUSE YOUR
BEAT.

OTHERWISE, PRESS  TO KEEP
THE BEAT GOING BUT STOP
RECORDING.

RECORD WITHOUT COUNT IN

MAIN



0.00




+



IF YOU WANT TO START RECORDING
WITHOUT A COUNT-IN


YOU CAN PRESS  AND 
TOGETHER.

RECORD FROM PATTERN START

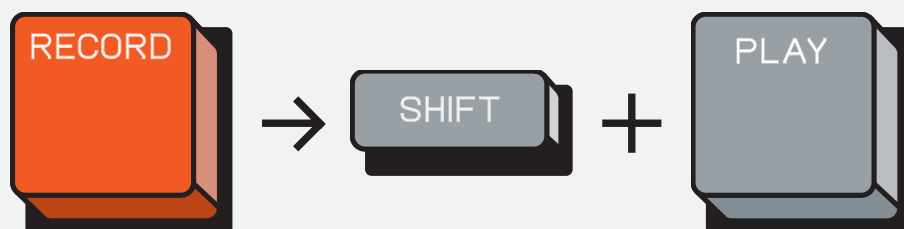

TO RECORD FROM THE START OF THE PATTERN, RATHER THAN THE CURRENT BAR PRESS **RECORD** TO ENTER RECORD ARM THEN **SHIFT** AND **PLAY**.

PATTERN LENGTH

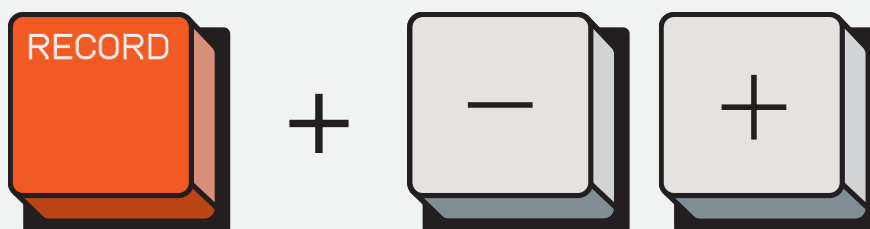


BY DEFAULT K.O. II WILL BE SET TO A 1 BAR PATTERN LENGTH.

K.O. II SUPPORTS PATTERN LENGTHS OF UP TO 99 BARS PER GROUP.

IF YOU WANT TO RECORD A LONGER PATTERN PRESS **RECORD** THEN **-** OR **+**.


DUPLICATE PATTERN LENGTH

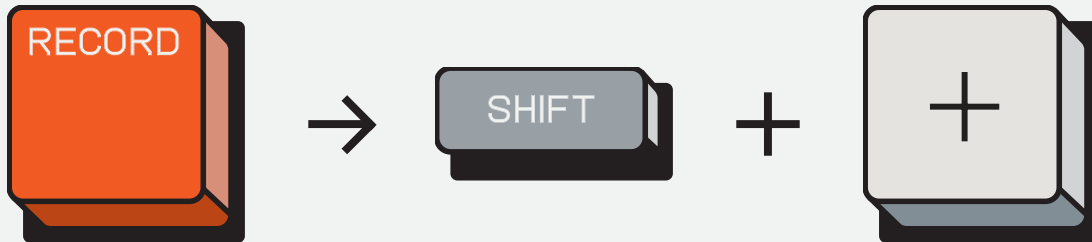

TO DUPLICATE THE LENGTH OF YOUR PATTERN PRESS **RECORD** TO ENTER RECORD ARM THEN HOLD SHIFT AND **+**.

THIS WILL DUPLICATE NOTES IN THE EXISTING PATTERN AND DOUBLE THE LENGTH.



CHANGE PATTERN LENGTH WHILE PLAYING

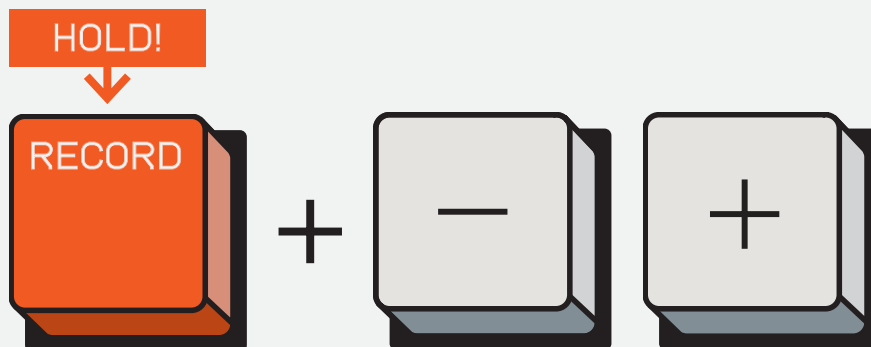

WHILE PLAYING YOU CAN CHANGE PATTERN LENGTH ON THE FLY BY HOLDING **RECORD** AND PRESSING **-** OR **+**.

OVERDUB

MAIN

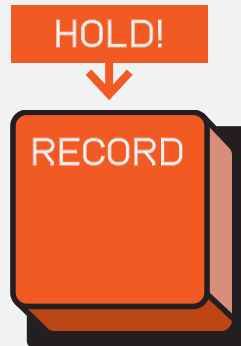
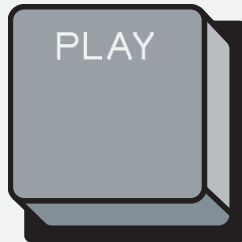


TO RECORD OVER AN EXISTING PATTERN, PRESS **PLAY** TO START THE PATTERN THEN HOLD **RECORD** AND HIT THE PADS TO RECORD NOTES INTO THE BEAT.

IN CASE YOU MAKE A MISTAKE YOU CAN EASILY ERASE IT! FIND OUT MORE IN THE NEXT SECTIONS.

OVERWRITE RECORD

MAIN

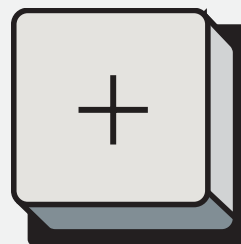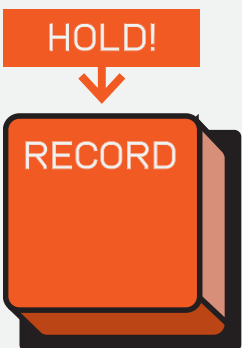


TO OVERWRITE AN EXISTING RECORDING PRESS **RECORD**, **ERASE** AND **+**.

THIS WILL DELETE THE EXISTING RECORDING AND OVERWRITE IT WITH THE NEW ONE.


9.2 STEP SEQUENCE

K.O. II SEQUENCES PER STEP. THIS ALLOWS YOU TO GET SUPER PRECISE SEQUENCES WHEN USING SMALLER NOTE INTERVALS, WHILE ALSO PUNCHING-IN BASIC SEQUENCES SUPER FAST, AT HIGHER NOTE INTERVALS.

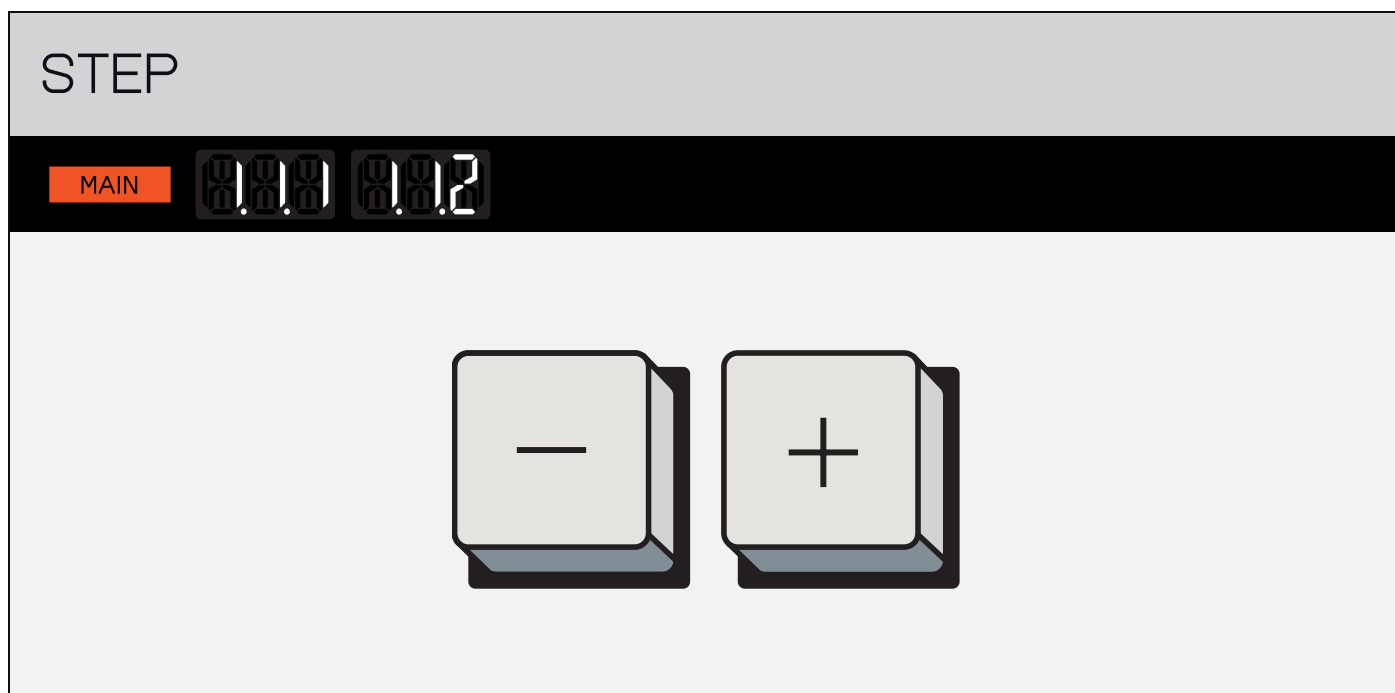

WHILE K.O. II IS NOT PLAYING, USE  AND  TO STEP THROUGH THE STEPS IN YOUR PATTERN.

RECORD TO A STEP

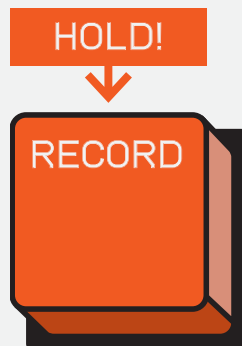

+



HOLD **RECORD** AND PRESS A PAD TO
RECORD THE CHOSEN PAD TO THAT
STEP.

WHEN A PAD IS RECORDED TO A
GIVEN STEP IT WILL LIGHT UP.

ERASE NOTE



+




YOU CAN REMOVE UNWANTED
SOUNDS AND NOTES BY HOLDING
ERASE THEN PRESSING THE PAD
CORRESPONDING TO THE UNWANTED
NOTE OR SOUND.

ERASE NOTE WHILE PLAYING



YOU CAN ALSO REMOVE UNWANTED SOUNDS AND NOTES BY HOLDING **ERASE** WHILE PLAYING THEN PRESSING THE PAD CORRESPONDING TO THE UNWANTED NOTE OR SOUND.


FREE NUDGE

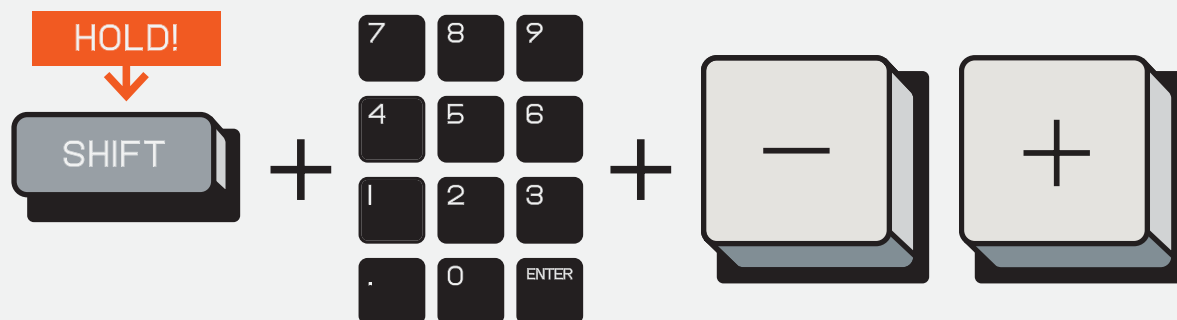

WHEN IN FREE TIME HOLD **SHIFT** AND THE DESIRED PAD THEN PRESS **-** OR **+** TO NUDGE THE RECORDED NOTE IN TICKS.


PRO-TIP! A TICK IS THE SMALLEST TIME INCREMENT THAT THE SEQUENCER IN K.O.II USES. IT OPERATES AT 96 PPQN (PARTS PER QUARTER NOTE), MEANING THERE ARE 96 TICKS PER BEAT. THIS MEANS THAT THE STEP RESOLUTION OF K.O.II IS 24 TICKS, SAME AS OP-Z.

QUANTISED NUDGE

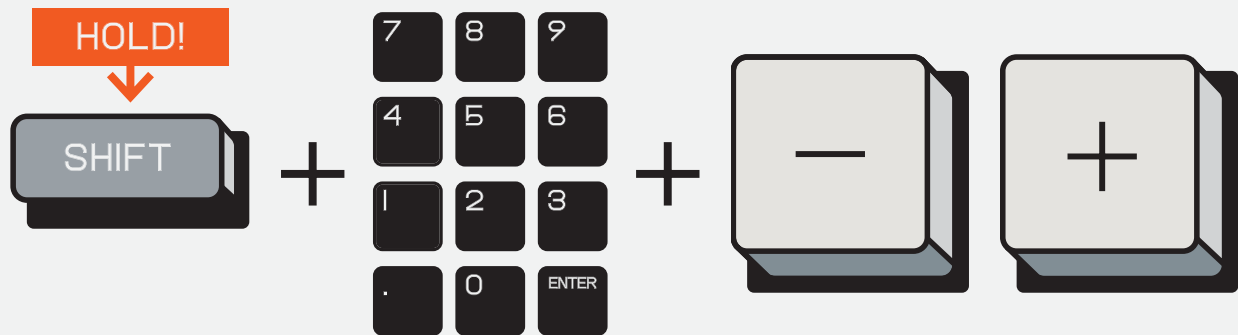

WHEN IN QUANTIZE MODE HOLD  THEN PRESS  OR  TO NUDGE THE RECORDED NOTE IN STEPS.

NOTE VELOCITY

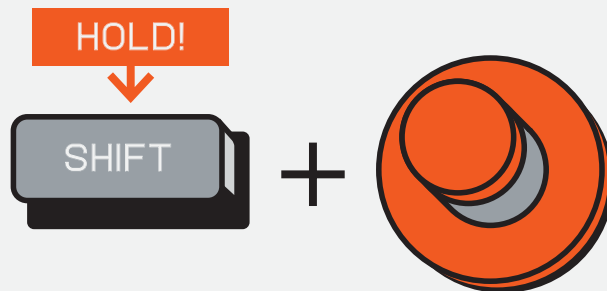


HOLD  AND TURN  TO CHANGE THE NOTE VELOCITY OF ALL NOTES IN A CHOSEN STEP.

NOTE DURATION

MAIN

BAR

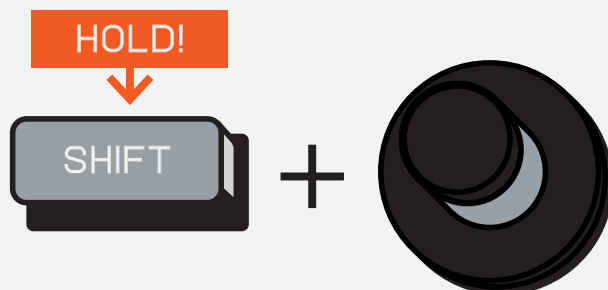


HOLD **SHIFT** AND TURN **Y** TO
CHANGE THE NOTE DURATION OF
ALL NOTES IN A CHOSEN STEP.

THE MAXIMUM NOTE DURATION IS
ONE BAR AND THE MINIMUM IS ONE
TICK.

9.3 KEYS

SOMETIMES YOU LOVE A SAMPLE SO MUCH YOU WANT TO PLAY IT ALL THE TIME. KEYS MODE LET'S YOU PLAY A SELECTED SAMPLE ACROSS A 12 NOTE KEYBOARD, EITHER ON YOUR K.O. II'S PADS OR A CONNECTED MIDI KEYBOARD.

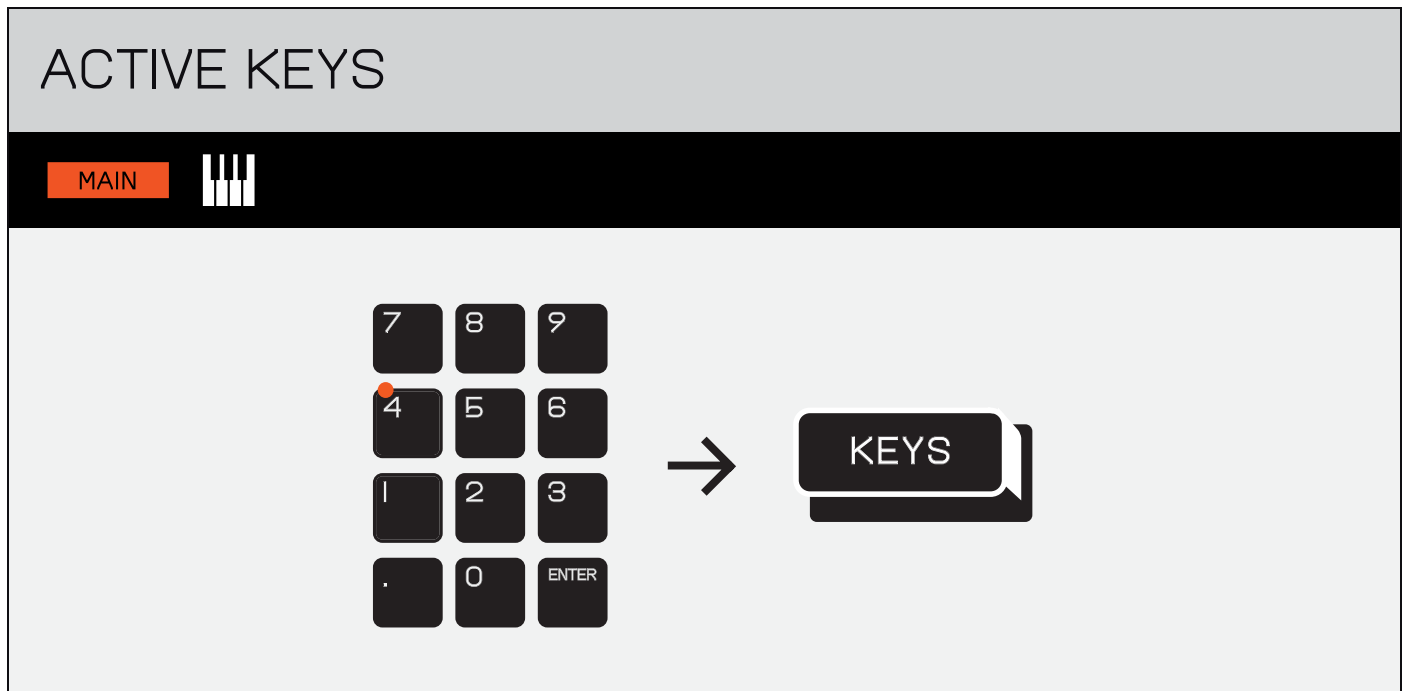


SELECT A PAD YOU WANT TO ACTIVATE THEN PRESS **KEYS** TO CHROMATICALLY TRANSPOSE THE SELECTED PAD ACROSS THE 12 PADS.

OCTAVE

MAIN



004

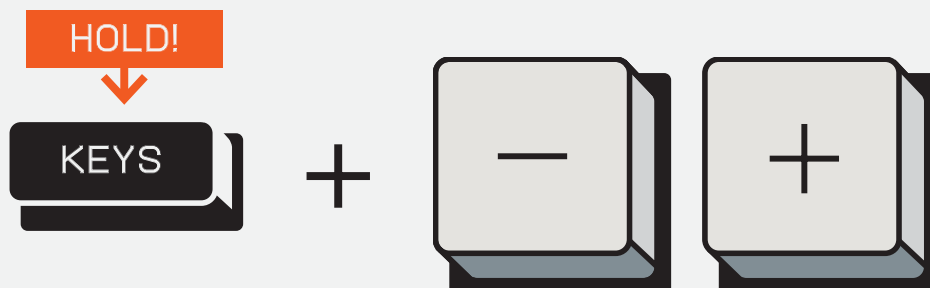

HOLD **KEYS** AND PRESS **-** OR **+** TO SELECT THE OCTAVE.

ROOT NOTE

MAIN




004



HOLDING **KEYS** AND SELECTING A PAD WILL TRANSPOSE THE SCALE.

RECORD NOTE

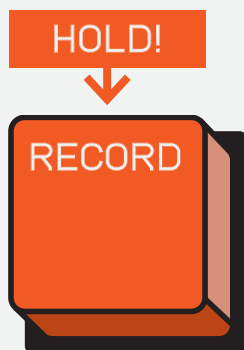

+



TO RECORD A NOTE TO A STEP,
HOLD DOWN **RECORD** AND PRESS THE
PAD THAT YOU WISH TO HAVE PLAY
ON THAT STEP.

ERASE NOTE



+



YOU CAN REMOVE UNWANTED
SOUNDS AND NOTES BY HOLDING
ERASE THEN PRESSING THE PAD
CORRESPONDING TO THE UNWANTED
NOTE OR SOUND.

LIVE RECORD NOTES

MAIN



TAP!



TO LIVE RECORD A NOTE START
RECORDING BY PRESSING **RECORD**
THEN **PLAY** AND PUNCH OUT SOME
NOTES INTO YOUR PATTERN.

9.4 FADER

THE FADER ALLOWS YOU TO CONTROL AND RECORD VARIOUS EFFECTS AND PARAMETERS IN YOUR PATTERN.

FADER PARAMETER

MAIN  

HOLD!

FADER

+

7	8	9
4	5	6
1	2	3
.	0	ENTER

HOLD **FADER** AND A PAD TO CHANGE THE FADER PARAMETER OF YOUR CHOSEN GROUP.

THE FADER ASSIGNMENTS CAN BE FOUND PRINTED ABOVE THE PADS.

PRO-TIP: HOLD **FADER** TO SEE THE CURRENT RECORDED FADER AUTOMATIONS. ASSIGNMENTS WITH AUTOMATIONS WILL BLINK.

REC FADER MOVEMENT

MAIN



HOLD!



+



FADER MOVEMENTS CAN ALSO BE RECORDED.

HOLDING **RECORD** AND MOVING THE FADER WILL RECORD THE FADER'S MOVEMENT INTO YOUR BEAT.

PRO-TIP: WHEN STEP SEQUENCING, HOLD **RECORD** AND MOVE THE FADER TO RECORD THE POSITION OF THE FADER TO THE CURRENT STEP. THIS IS LATCHING, NOT MOMENTARY.


RESET VIRTUAL FADER



PRESS **SHIFT** AND **FADER** TO RESET THE FADER'S VIRTUAL POSITION TO THE DEFAULT POSITION FOR ALL FADER ASSIGNMENTS IN THE CURRENT GROUP (RES SHOWS ON SCREEN).

PRESSING THIS COMBO AGAIN WILL UNDO THE RESET (SET SHOWS ON SCREEN).

ERASE FADER AUTOMATION

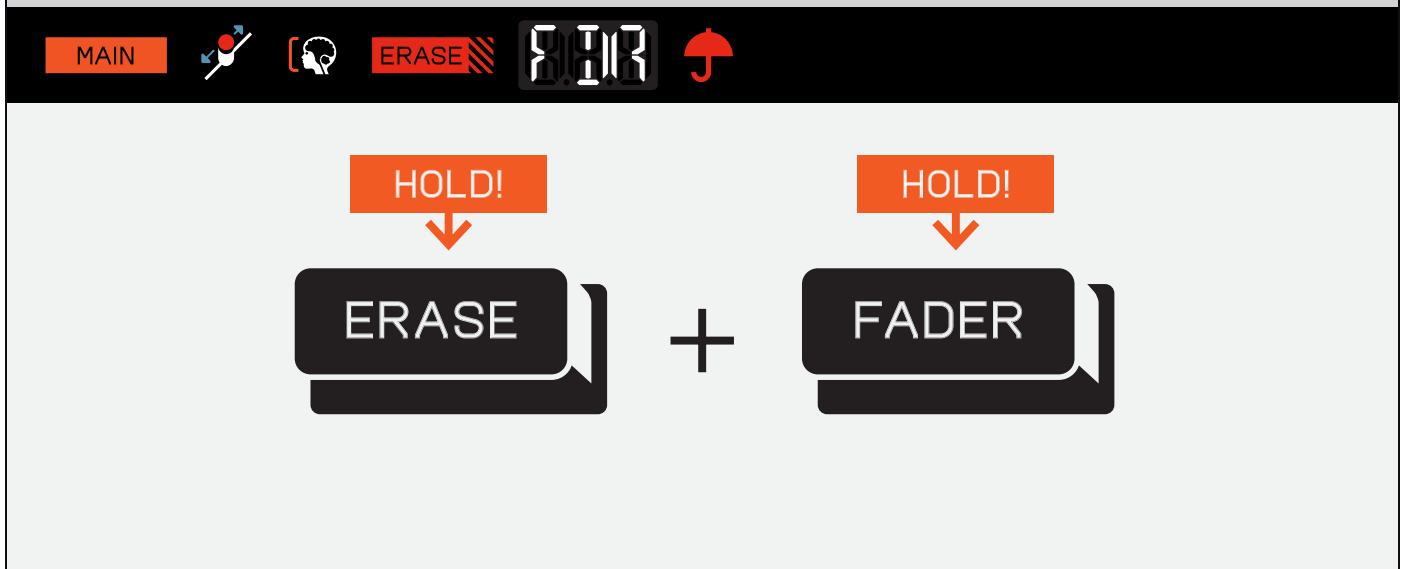


WHILE K.O. II IS NOT PLAYING,
HOLDING **ERASE** AND **FADER** FOR 2
SECONDS WILL RESET ALL FADER

LEVELS FOR THE SELECTED GROUP
AND PATTERN (FDR BLINKS ON
SCREEN FOLLOWED BY DEL).

PRECISE FADER ADJUSTMENTS

MAIN

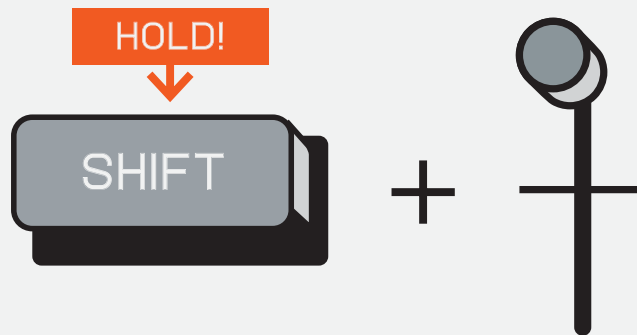


HOLDING **SHIFT** AND MOVING THE FADER WILL ADJUST THE VALUE OF THE FADER MORE PRECISELY,

ALLOWING YOU TO GET JUST THE RIGHT SOUND!

GROUP PROJECT VOLUME

MAIN

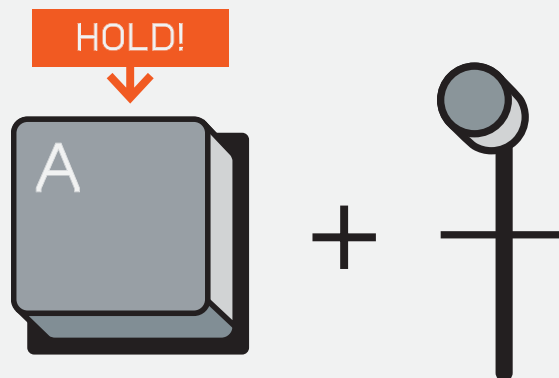


HOLDING A GROUP PAD AND MOVING THE FADER WILL CHANGE THE GROUP'S PROJECT VOLUME. THIS IS INDEPENDENT FROM THE FADER'S LEVEL ASSIGNMENT WHICH CONTROLS THE PATTERN'S VOLUME.

THE GROUP PROJECT VOLUME CAN NOT BE AUTOMATED, WHILE THE PATTERN LEVEL CAN BE. ANY CHANGES TO THE PROJECT LEVEL APPLY ACROSS ALL PATTERNS AND SCENES IN THE CURRENT PROJECT.

9.5 COPY / PASTE

COPYING IS A GREAT WAY OF TRANSFERRING A PATTERN OR BAR TO ANOTHER SECTION OR A SOUND FROM ONE PAD TO ANOTHER!

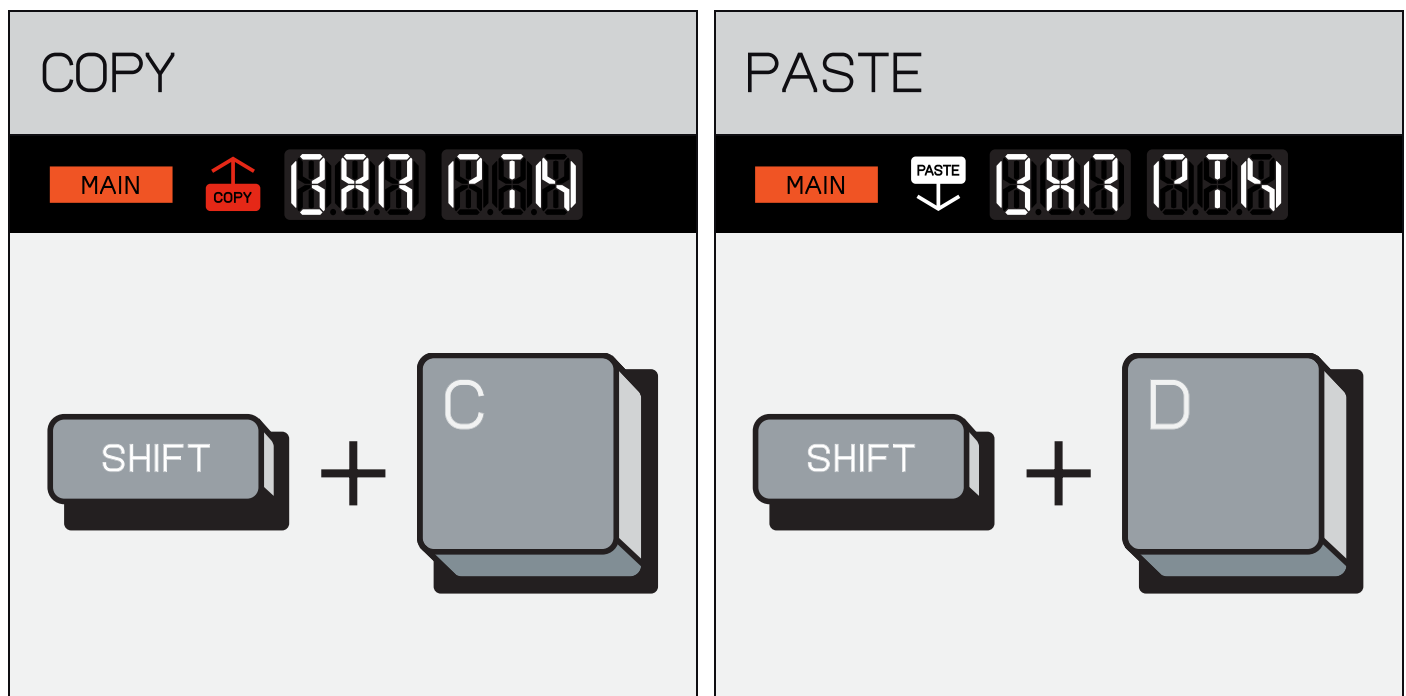


WHEN IN MAIN, PRESS **SHIFT** AND **C** TO COPY (PRESS ONCE FOR BAR AND TWICE FOR PATTERN. THE CURRENT BAR WILL BE COPIED.

PRESS **SHIFT** AND **[GROUPD]** TO PASTE.

PRO-TIP! YOU CAN NAVIGATE THROUGH BARS USING **SHIFT** AND **-/+**


COPY SOUNDS

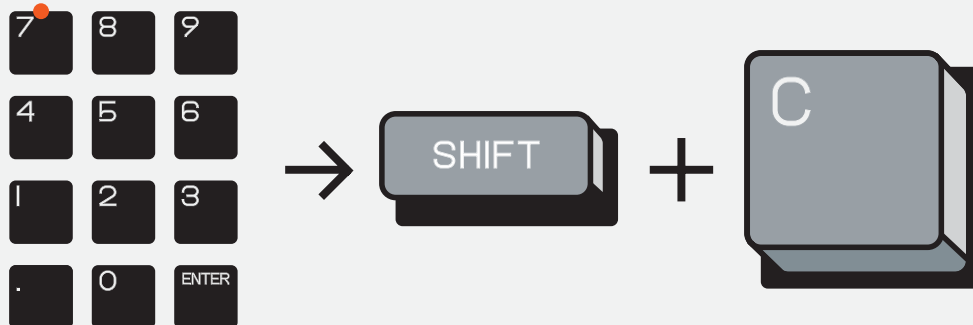

YOU CAN ALSO COPY SOUNDS!

WHEN IN SOUND MODE YOU CAN COPY A SOUND FROM ONE PAD TO ANOTHER BY PRESSING **SHIFT** AND **C** TO COPY FROM THE CURRENTLY SELECTED PAD, THEN SELECTING THE PAD YOU WISH TO PASTE TO AND PRESSING **SHIFT** AND **D** TO PASTE YOUR SOUND TO IT.

COPY SOUNDS

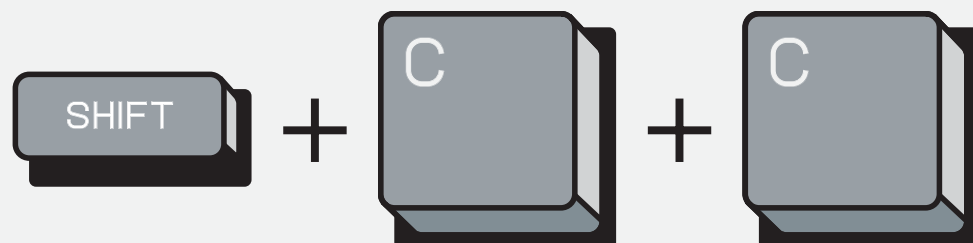

WHEN IN SOUND MODE YOU CAN COPY ALL SOUNDS IN A GROUP BY PRESSING **SHIFT** AND **C** TWICE.

YOU CAN THEN SELECT THE GROUP YOU WISH TO PASTE TO AND PRESS **SHIFT** AND **D** TO PASTE YOUR SOUNDS TO IT.

9.6 ERASE / UNDO

ERASE REMOVES RECORDED REGRETS, FADER FAILURES, WHOLE PROJECTS, SCENES, PATTERNS, SAMPLES, OR EVERYTHING YOU'VE EVER RECORDED.

PLAYBACK ERASE

The diagram shows a play button icon followed by a red 'ERASE' button with a diagonal line. Below this, an orange box says 'HOLD!' with an arrow pointing to a 'ERASE' button. To the right of the 'ERASE' button is a plus sign and a 12-pad grid. The grid has columns labeled 7, 8, 9, 4, 5, 6, 1, 2, 3, and rows labeled ., 0, and ENTER. The top-right pad (8, 9) has a small orange dot.


ERASE NOTE

The diagram shows a red 'ERASE' button with a diagonal line, followed by two digital displays showing 'TRK' and '000'. Below this, an orange box says 'HOLD!' with an arrow pointing to a 'ERASE' button. To the right of the 'ERASE' button is a plus sign and a 12-pad grid. The grid has columns labeled 7, 8, 9, 4, 5, 6, 1, 2, 3, and rows labeled ., 0, and ENTER. The top-right pad (8, 9) has a small orange dot.


DURING PLAYBACK, HOLD **ERASE** AND THE PAD YOU WISH TO CLEAR TO REMOVE NOTE(S) OR PAD(S) PLAYED AS THE PATTERN RUNS.

PRO-TIP! HOLD DOWN MULTIPLE PADS WHILE PRESSING ERASE TO ERASE THEM ALL AT ONCE – THIS CAN EVEN BE DONE WITH NOTES RECORDED IN KEYS MODE!

WHILE K.O. II IS NOT PLAYING, HOLD **ERASE** AND A PAD UNTIL TRK BLINKS ON THE SCREEN TO ERASE ALL THE NOTES RECORDED ON THAT PAD IN THE PATTERN.

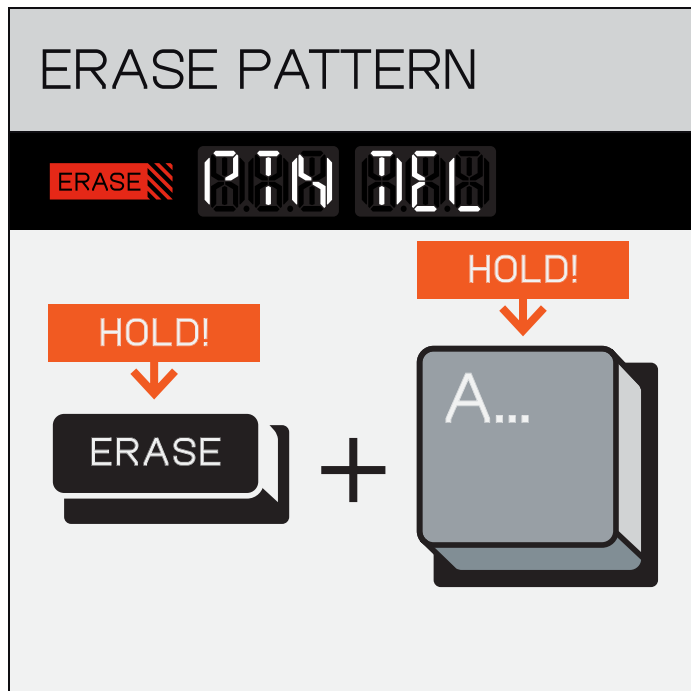

HOLD **ERASE** AND THE GROUP PADS **A** – **D** UNTIL PTN BLINKS ON THE SCREEN TO ERASE THE CURRENT PATTERNS.

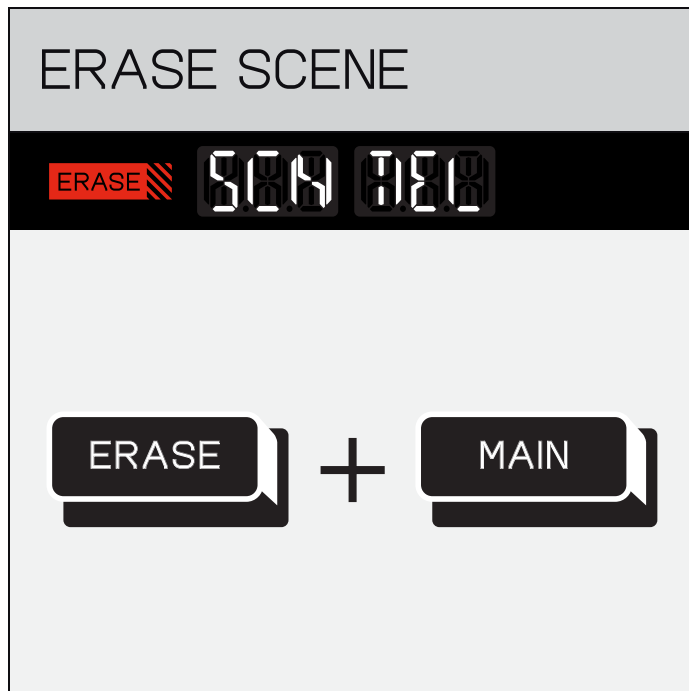

HOLD **ERASE** AND **MAIN** UNTIL SCN BLINKS ON THE SCREEN TO ERASE THE CURRENT SCENE.

THIS WILL ALSO ERASE THE UNUSED PATTERNS WITHIN THE ERASED SCENE.

ERASE PROJECT

MAIN




ERASE



PRG


000

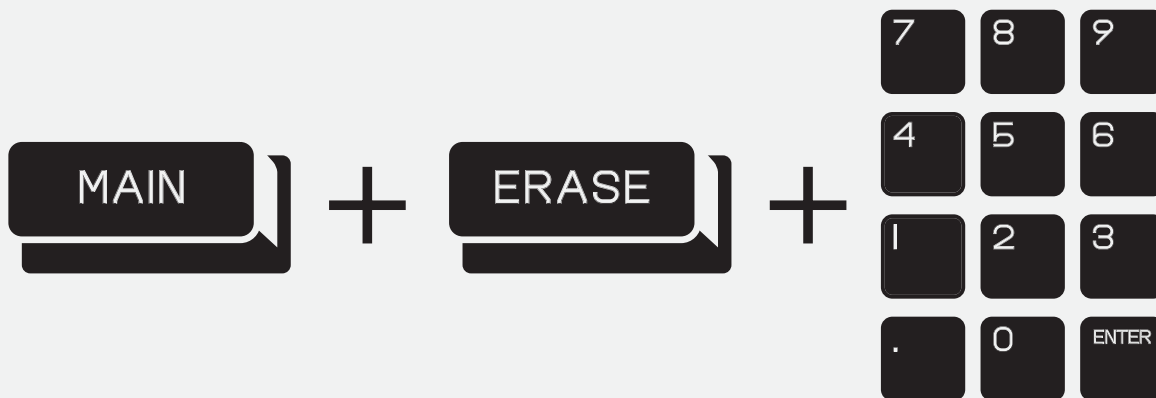

WHILE NOT PLAYING, HOLD **MAIN**,
ERASE AND THE PAD CONTAINING THE
PROJECT YOU WISH TO ERASE.




HOLD **ERASE** AND **SOUND** UNTIL SND BLINKS ON THE SCREEN TO PERMANENTLY REMOVE THE CURRENTLY SELECTED SAMPLE FROM DEVICE MEMORY.

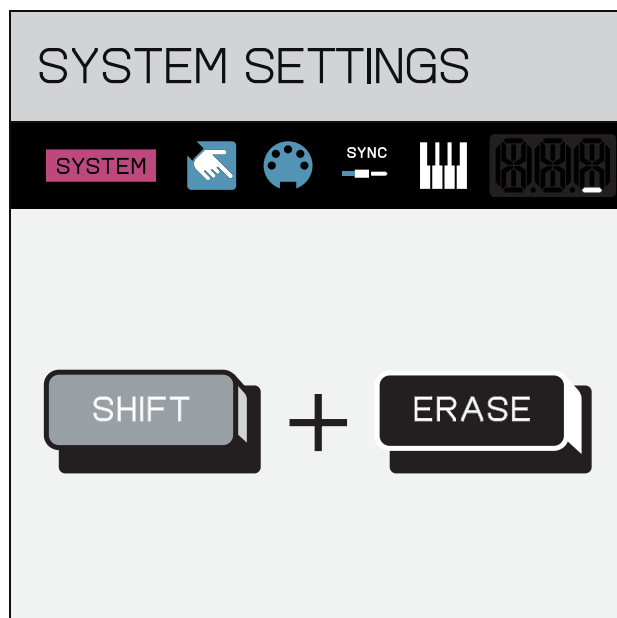

PRESSING **SHIFT** AND **ERASE** WILL OPEN THE SYSTEM SETTINGS. USE **[-]/[+]** AND ENTER TO NAVIGATE THE SETTINGS TREE THEN ENTER TO SET YOUR OPTION.

ALTERNATIVELY THE CODES CAN BE TYPED USING THE NUMPAD AND ENTER TO CONFIRM.

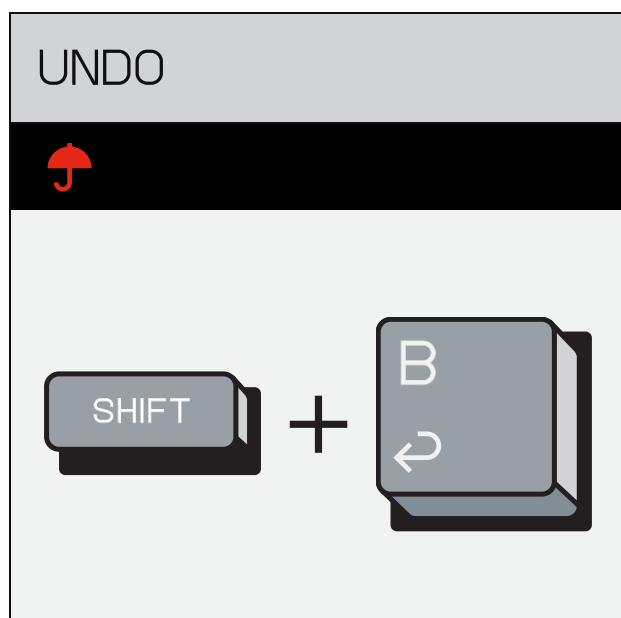

PRESSING **SHIFT** AND **B** WILL UNDO – WHEN AN UNDO IS POSSIBLE THE UMBRELLA WILL LIGHT UP TO LET YOU KNOW.

ERASE FADER AUTOMATION

MAIN



ERASE



HOLD!



ERASE

+

HOLD!



FADER


WHILE K.O. II IS NOT PLAYING, HOLDING **ERASE** AND **FADER** UNTIL FDR BLINKS ON SCREEN WILL ERASE FADER AUTOMATION FOR ALL ASSIGNMENTS AND SET THE FADER POSITION FOR ALL ASSIGNMENTS TO THEIR CURRENT POSITION (FDR BLINKS ON SCREEN FOLLOWED BY DEL). 

ERASE FADER MOVEMENTS LIVE

MAIN



ERASE

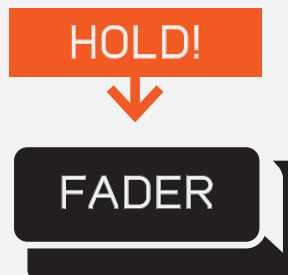


WHILE PLAYING, HOLDING **ERASE** AND **FADER** WILL DELETE FADER MOVEMENTS FOR ALL FADER ASSIGNMENTS. THIS WILL SET THE FADER POSITION FOR ALL ASSIGNMENTS TO THEIR POSITION WHEN **ERASE** AND **FADER** WERE FIRST PRESSED.

9.7 OFFSET NOTES

SOMETIMES YOU WANT TO ADD A LITTLE MORE FEELING OR EXPRESSION TO YOUR BEAT, OR EVEN JUST GET WEIRD. OFFSETTING NOTES ALLOWS YOU TO MOVE THEM AROUND TO JUST THE RIGHT POINT!

NOTE OFFSET

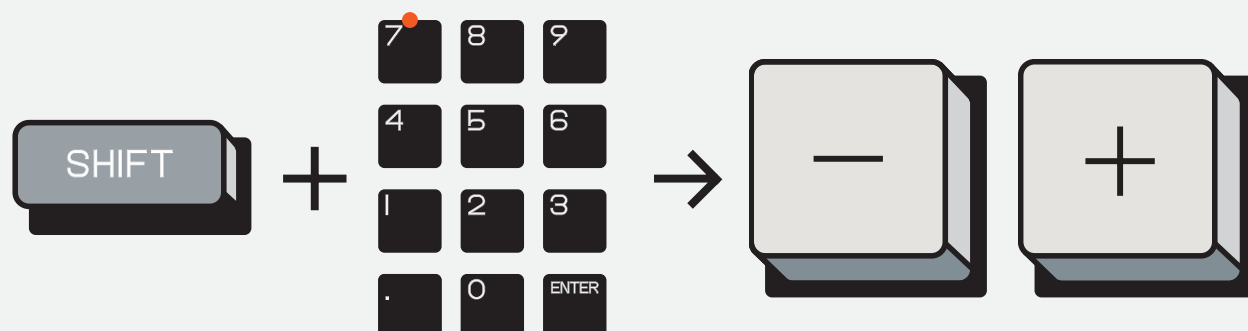

WHILE K.O. II IS NOT PLAYING, HOLD **SHIFT** AND THE DESIRED PAD THEN PRESS **-** OR **+** TO NUDGE THE NOTE.

WHEN IN QUANTIZE MODE THE NOTES WILL MOVE CORRESPONDING TO THE NOTE INTERVAL.

WHEN IN FREE TIME, THE NOTES WILL MOVE OUTSIDE OF THE GRID BETWEEN THE NOTE INTERVALS.




FUNCTIONS

10.1 SAMPLE


FOR THOSE OF YOU THAT ARE NEW TO THIS, A SAMPLE IS A SHORT AUDIO RECORDING THAT CAN BE USED IN A TRACK.

CAPTURE SOUNDS AROUND YOU WITH THE BUILT-IN MICROPHONE, OR USE THE STEREO LINE-INPUT TO SAMPLE YOUR FAVORITE SYNTHESIZER, CONNECT YOUR CM-15 MIC, EVEN YOUR PHONE!

SAMPLING IS A POWERFUL TOOL THAT CAN MAKE YOUR TRACK TRULY UNIQUE. SAMPLE SOMETHING THEN RECORD IT USING K.O. II'S POWERFUL BUILT IN SEQUENCER!

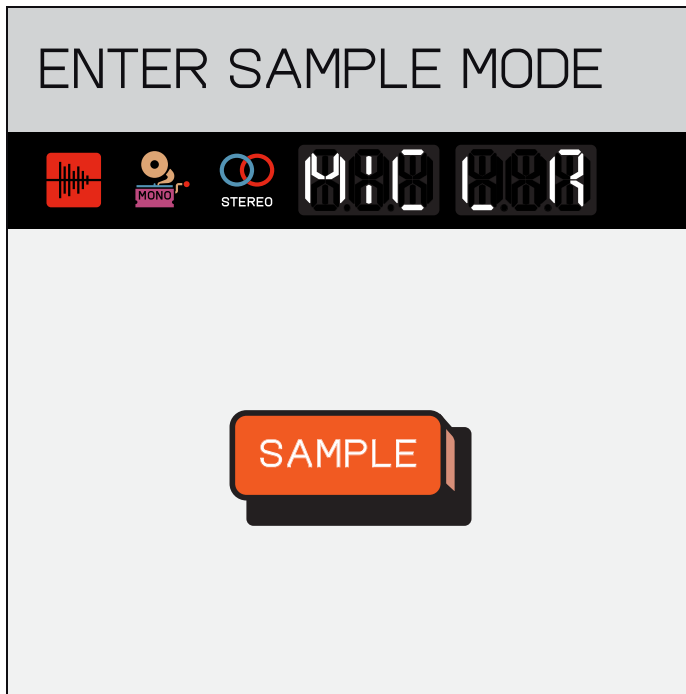


TO RECORD A SOUND, PRESS **SAMPLE** TO ENTER SAMPLE MODE. YOU WILL SEE ALL THE BUTTONS LIGHT UP. THE LEDS WILL BLINK TO LET YOU KNOW YOU ARE IN SAMPLE MODE.

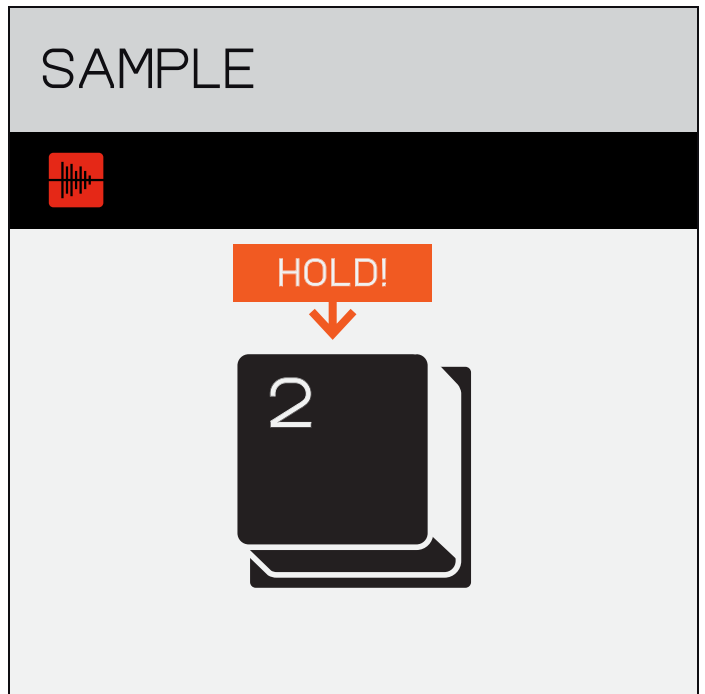


PRESS AND HOLD A PAD WHILE IN SAMPLE MODE TO START RECORDING YOUR SAMPLE. ONCE A SAMPLE HAS BEEN RECORDED TO A PAD IT WILL STOP BLINKING AND LIGHT UP TO LET YOU KNOW IT HAS BEEN RECORDED TO.

PRO-TIP! AFTER RECORDING, AUDITION A SAMPLE BY PUSHING THE PAD AGAIN.

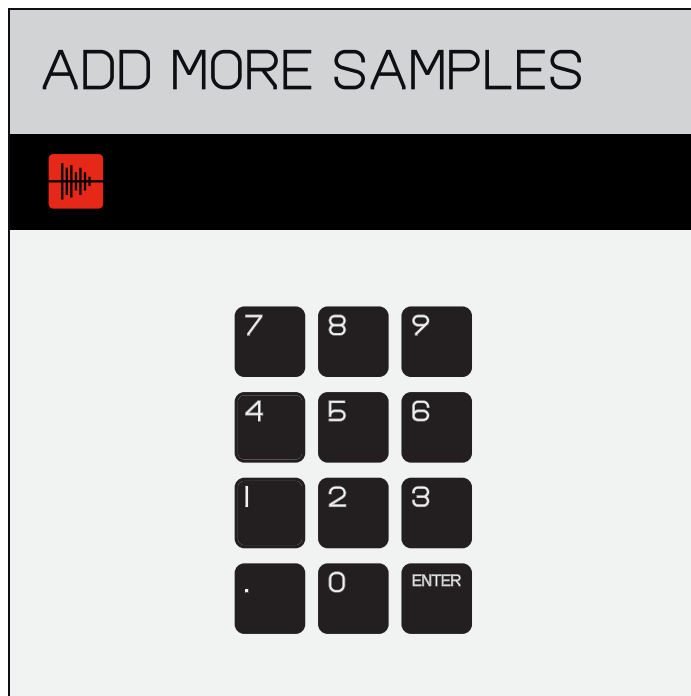

WHILE IN SAMPLE MODE, YOU CAN CONTINUE CAPTURING SAMPLES TO ADDITIONAL PADS.

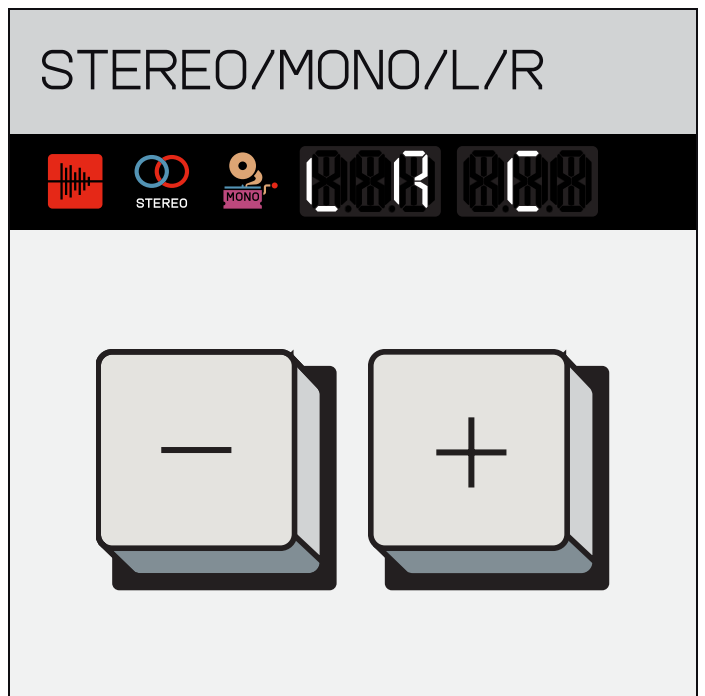

PRESSING  OR  WHEN SAMPLING ALLOWS YOU TO CHOOSE BETWEEN:

MIC

LINE IN MONO (IN)


LINE IN STEREO (IN)

RESAMPLE MONO (RSP)


RESAMPLE STEREO (RSP)

LINE IN LEFT MONO (L.IN)


LINE IN RIGHT MONO (R.IN)

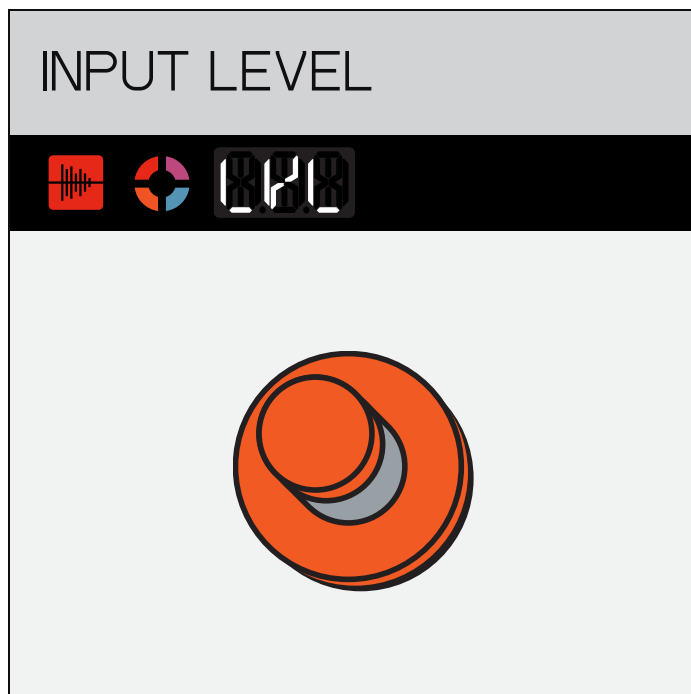

THE  KNOB CONTROLS INPUT LEVEL.

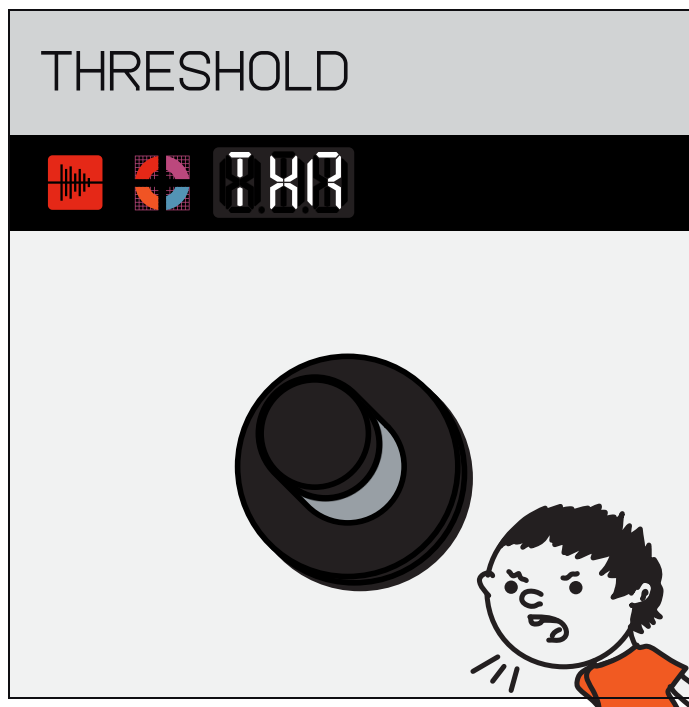

THE  KNOB ADJUSTS THE THRESHOLD ALLOWING YOU TO TRIGGER THE RECORDING TO START ONLY WHEN YOU MAKE JUST THE RIGHT AMOUNT OF NOISE.

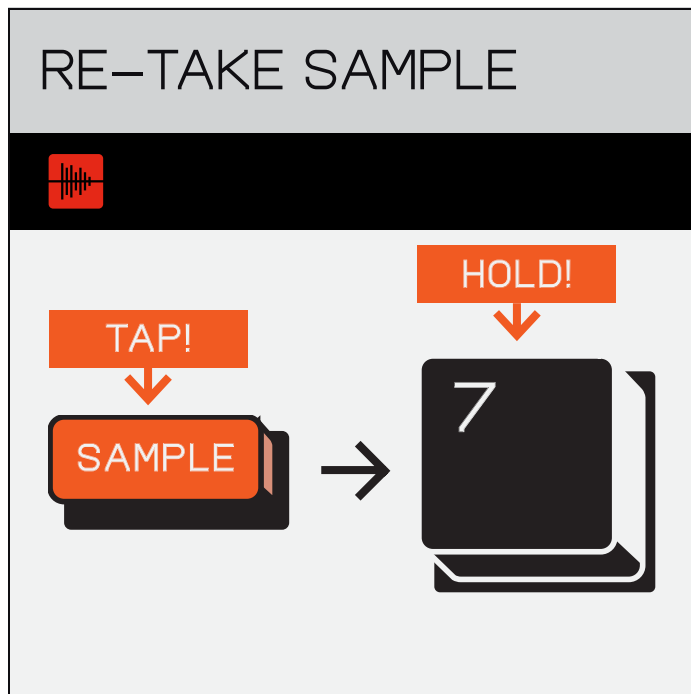

RECORD SOMETHING THAT'S NOT QUITE RIGHT? GET A SECOND CHANCE BY PRESSING SAMPLE AGAIN AND RETAKING IT!



RUN OUT OF HANDS? NOT A PROBLEM! PRESS **SHIFT** AND A PAD TO HAVE K.O. II HOLD THE PAD FOR YOU!

TRY COMBINING THIS WITH THE RESAMPLE SOURCE TO SAMPLE CHORDS AND INDIVIDUAL SOUNDS.

RESAMPLE PATTERN



WHILE IN SAMPLE MODE, ENGAGE
HANDS FREE SAMPLING BY HOLDING
 AND PRESSING A PAD THEN
PRESS .

K.O.II WILL THEN SAMPLE THE
LENGTH OF THE CURRENTLY
SELECTED PATTERN.

PRO-TIP! JUMP STRAIGHT INTO
SAMPLING WHILE YOUR PATTERN IS
PLAYING TO START SAMPLING IT
WITH THE RESAMPLE SOURCE!

RESAMPLE BARS




TO SAMPLE A SPECIFIC NUMBER OF
BARS JUST PRESS  OR  WHEN
HANDS FREE SAMPLING IS
ENGAGED.

THIS WILL THEN SAMPLE THE
NUMBER OF SELECTED BARS ONCE
 HAS BEEN PRESSED.



TO STOP THE HANDS FREE
SAMPLING, PRESS **SAMPLE** WHILE A
SAMPLE IS BEING RECORDED.

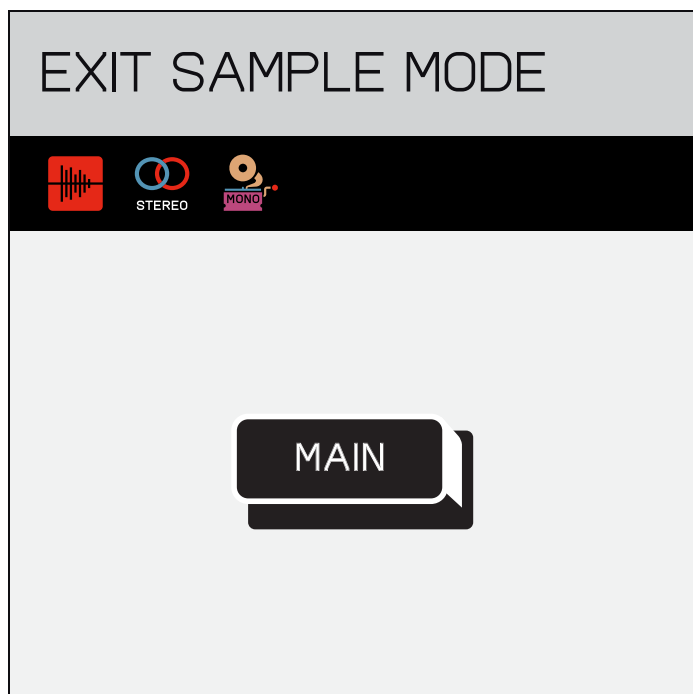

EXIT SAMPLE MODE BY HITTING

MAIN.

PERMANENTLY DELETE SAMPLE




SAMPLES ARE STORED
AUTOMATICALLY AND CAN ONLY BE
DELETED BY REMOVING THEM IN THE
SOUND MENU.


HOLDING **ERASE** + **SOUND** WILL DELETE
THE CURRENTLY SELECTED SAMPLE
FROM THE DEVICE.

RESAMPLE

RSP

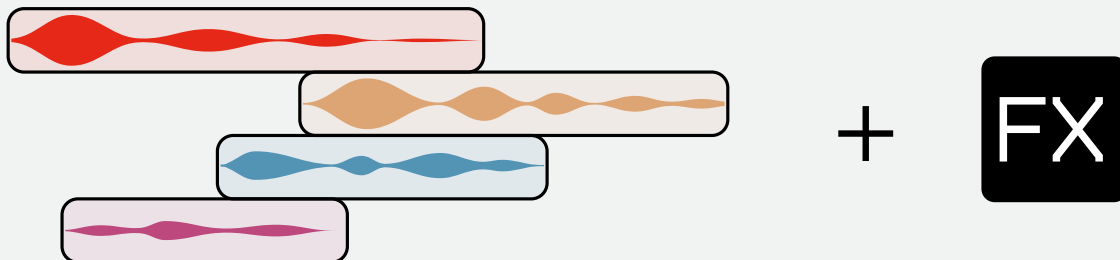

RESAMPLE

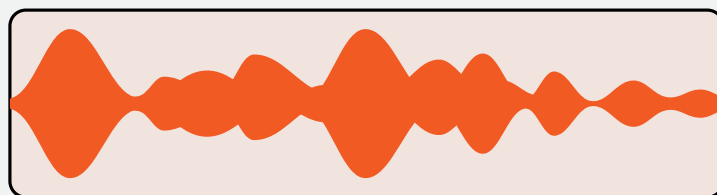

USE RESAMPLE TO TAKE MULTIPLE SAMPLES AND COMBINE THEM INTO ONE LONGER SAMPLE.

YOU CAN ALSO USE RESAMPLE TO STACK AND TIME STRETCH WHOLE SECTIONS OF YOUR BEAT.

SOUND LIBRARY

SAMPLE LIBRARY SFX			24.3 MB	000	↑	↓
●	500	BLUE				
●	501	PIANO S95X				
●	502	WURLI CLEAN				
●	503	MUTE STRATO				
●	504	CUTE EMU FLUTE				
●	505	ULTRA				
▶ ●	506	SQUICK	0.3 SEC	▲ 58 KB	✕	↓
●	507	CLAV 360 PHASER				
●	508	BABY CHORD				
●	509	BG VOCAL				
●	510	SKYLINE STRING				
●	511	OCTAVE STAB				
●	512	TRUMPET BREEZY				
●	513	SCARY VIBES				
●	514	SLY SYNTH CHOR				
●	515	ELPIANO 360				
●	516	ORGAN DX VERB				
●	517	PLUCK HI BASS				
●	518	PROPHET PIANO				
●	519	ELPIANO 360 BASS				
●	520	PLUCK HYBRID				
	521	HOUSEORGAN STRING				
	522	AWWW				
	523	HEY!				
	524	GET UP!				
●	525	STOP!				
●	526	CRASH				
●	527	DOOR SLAM				
●	528	TELEPHONE				

*THIS IS A WEB APP

EVERY TIME YOU SAMPLE SOMETHING, IT IS STORED INSIDE THE SOUND LIBRARY.


SAMPLES ARE STORED IN THE NEXT AVAILABLE SLOT AND AUTOMATICALLY ASSIGNED IN ORDER.

PRO-TIP! IF YOU WANT TO SAMPLE YOUR FAVORITE ACID SYNTH, YOU CAN EXPLICITLY CHOOSE A DESTINATION FOR IT BY HOLDING SOUND, TYPING A NUMBER ON THE PADS (LIKE 3..0..3..), PRESSING (ENTER), THEN HIT SAMPLE!

10.2 SAMPLE TOOL

TO TRANSFER AUDIO FILES TO
USE AS SAMPLES TO/FROM A
COMPUTER, USE THE FILE
TRANSFER TOOL.

SAMPLE TOOL

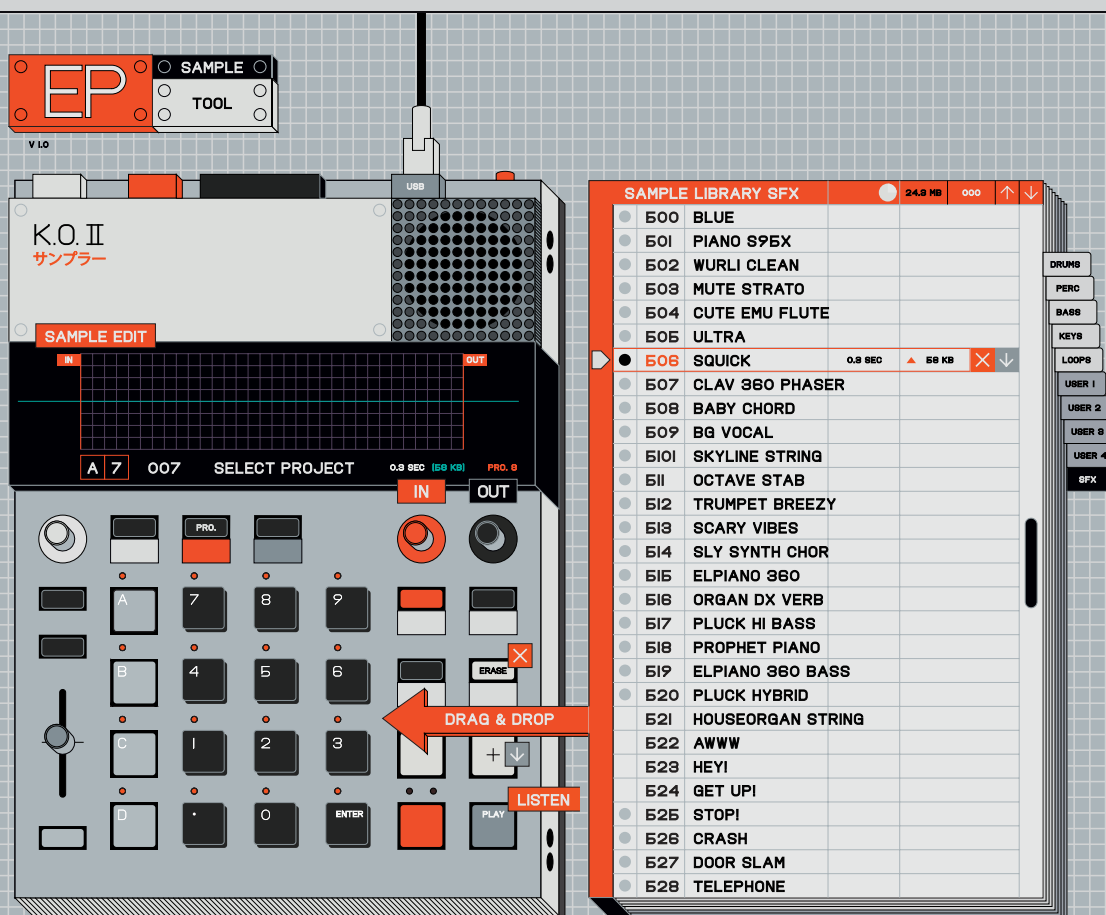

CONNECT K.O. II VIA USB-C AND GO TO:


TEENAGE.ENGINEERING/APPS/EP-SAMPLE-TOOL

HERE ARE INSTRUCTIONS ON HOW TO USE THE SAMPLE TOOL

PRO-TIP! K.O. II NOW SUPPORTS SAMPLES WITH LOWER THAN NATIVE SAMPLERATE. WHEN TRANSFERRING SAMPLES THROUGH THE SAMPLE-TOOL THE AUDIO FILE SAMPLE-RATE WILL BE PRESERVED IF LOWER THAN 46875. GOOD FOR SAVING SPACE ON YOUR K.O. II AND GETTING A LO-FI SOUND! THIS MEANS YOU CAN FIT APPROX 50 MINUTES OF 11.025 KHZ/16-BIT MONO INTO 64 MB!

10.3 CHOP


A GREAT TECHNIQUE WHEN MAKING BEATS IS TO EXPERIMENT WITH CHOPPING UP A DRUM RHYTHM OR A CHORD-PROGRESSION INTO SMALLER PIECES. PLAY THEM BACK IN RANDOM ORDER USING THE PADS UNTIL YOU FIND SOMETHING THAT HAS A GROOVE TO IT.

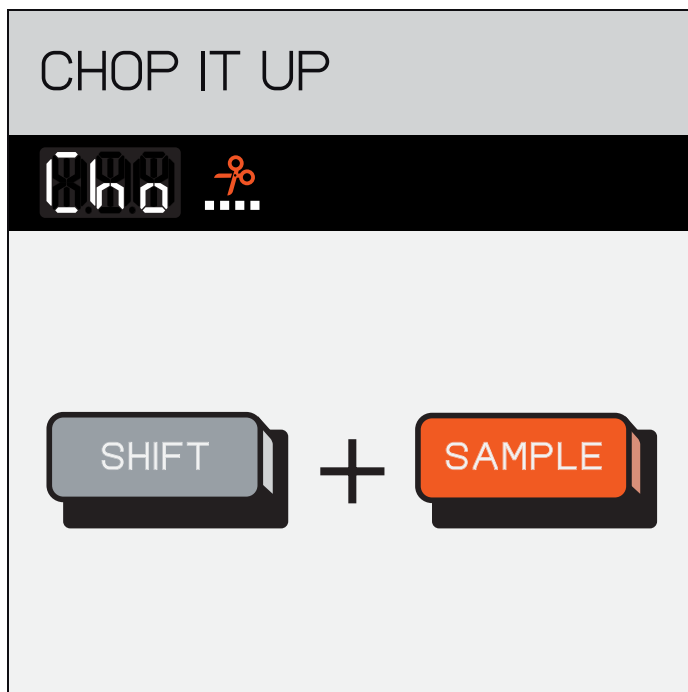

IF YOU WANT TO CHOP YOUR SAMPLE UP ACROSS DIFFERENT PADS, YOU CAN CHOOSE BETWEEN AUTO-CHOP, WHICH LETS K.O II DO IT FOR YOU, OR LIVE CHOP TO DO IT MANUALLY.

SHIFT + SAMPLE = CHOP

AUTO-CHOP

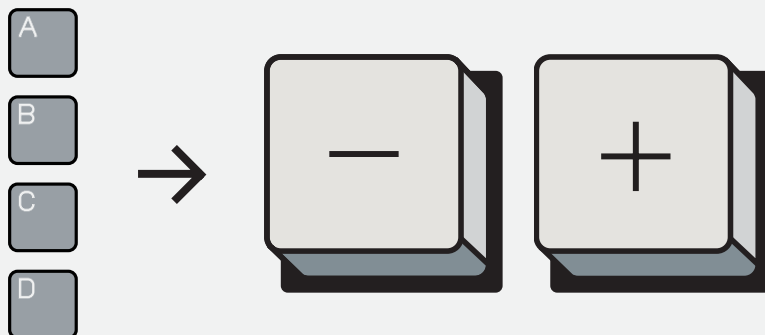


INTELLIGENTLY DIVIDE YOUR SAMPLE INTO INDIVIDUAL SLICES, THEY WILL BE ASSIGNED TO AS MANY PADS AS THE SAMPLE NEEDS.

THE SAMPLE CHOP POINT IS AUTO DETECTED USING BEAT TRACKING, POPULATING FROM BOTTOM LEFT TO TOP RIGHT. USE ☐/☐ TO DECIDE ON THE NUMBER OF SLICES.

PRESS ☐ ☐ TO SELECT THE GROUP YOU WISH TO AUTO-CHOP. THIS WILL RESET ANY PAD ASSIGNMENTS SO MAKE SURE YOU PICK AN EMPTY GROUP OR ONE YOU ARE HAPPY TO WRITE OVER.


LIVE CHOP

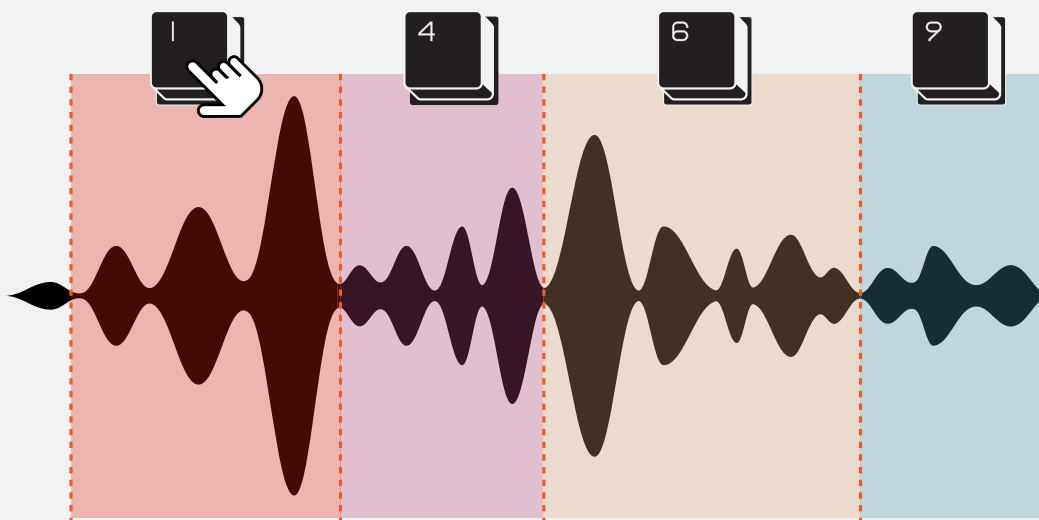

IF YOU KNOW WHERE YOU WANT TO SLICE, TRY LIVE CHOP. BY USING THIS HANDS-ON APPROACH, YOU HAVE DIRECT CONTROL OVER THE PLACEMENT OF YOUR SAMPLE'S CUTS.

WHEN IN CHOP MODE, PRESS A PAD TO CHOP. THE BREAK WILL BE ASSIGNED DEPENDING ON THE AMOUNT OF TIME BETWEEN PRESSING PADS. KEEP PRESSING PADS AS THE SAMPLE PLAYS TO CHOP IT UP ACROSS YOUR PADS.

IN AND OUTPUTS

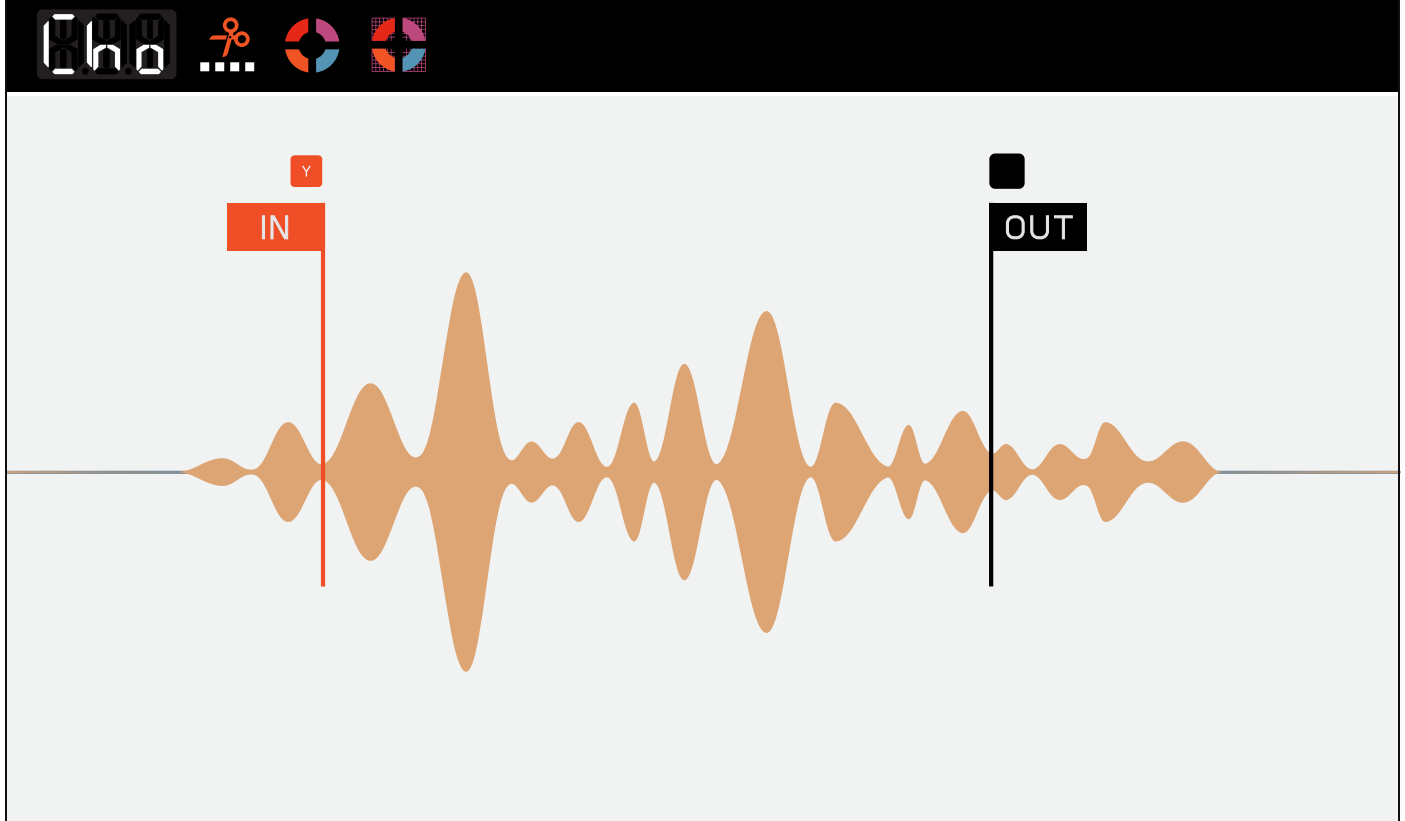

IF IT'S NOT SOUNDING QUITE RIGHT YOU CAN REFINE THE EXACT IN AND OUT POINTS OF EACH CHOP BY SELECTING THE PAD AND TURNING  AND  TO SET THE PRECISE START AND END POINTS.

PRO-TIP! HOLDING DOWN  WHILE TURNING THE  AND  KNOBS WILL ALLOW FOR FINER CONTROL SO YOU CAN FIND THE PERFECT START AND END POINTS.

10.4 TIMING

SENSE OF RHYTHM OR NOT,
QUANTIZATION TO THE RESCUE!
TIMING ALLOWS YOU MANUALLY
SELECT THE NOTE INTERVAL OF
THE STEP SEQUENCER, AS WELL
AS ENABLE OR DISABLE
QUANTIZED RECORDING.

SOUND NOTE INTERVAL ILLUSTRATION

BAR																																		
BEAT	1!								2!								3!								4!									
1/1																																		
1/2																																		
1/4																																		
1/8																																		
1/8T																																		
1/16																																		
1/16T																																		
1/32																																		

1 = 1 STEP PER BAR
2 = 2 STEPS PER BAR
16 = 16 STEPS PER BAR
32 = 32 STEPS PER BAR

4 = 4 STEPS PER BAR
8 = 8 STEPS PER BAR
THE 8T AND 16T ARE TRIPLET
VARIATIONS.

8T = 12 STEPS PER BAR
16T = 24 STEPS PER BAR


TIMING

MAIN




TIMING

TO CHANGE THE NOTE INTERVAL
PRESS TIMING.

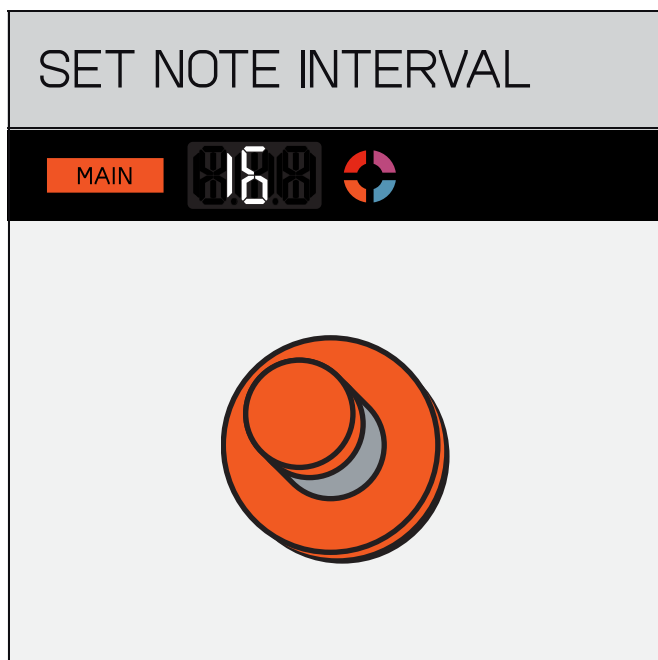

THE  KNOB CONTROLS THE NOTE INTERVAL.

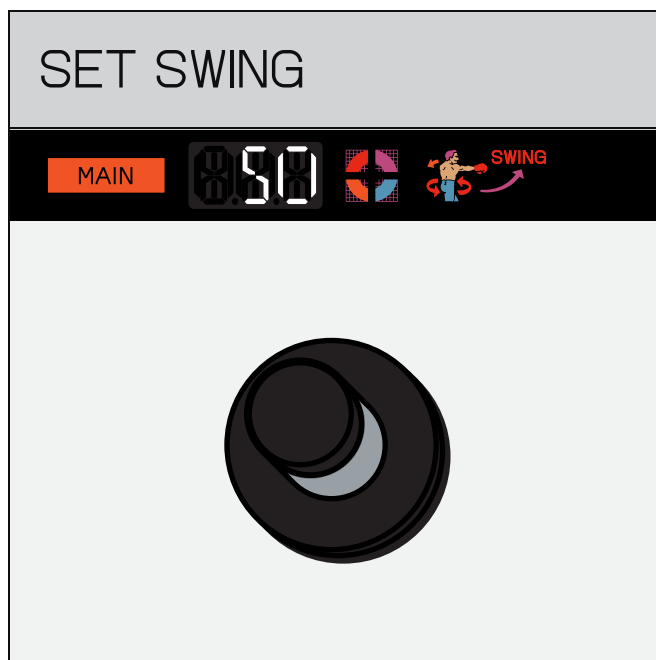

THE  KNOB CONTROLS SWING.

[ONLY APPLIES TO
1/8 AND 1/16 NOTE INTERVALS].




 AND  TOGGLE BETWEEN
QUANTIZE  AND FREE TIME .

QUANTISED RECORDING WILL
ALWAYS SNAP WHATEVER YOU
RECORD TO THE CHOSEN NOTE
INTERVAL.

FREE TIME WILL KEEP THINGS LOOSE
AND RECORD EXACTLY AS YOU
PLAYED IT.

10.4.1 NOTE REPEAT

IT SHOULD BE EASY TO RECORD A HI-HAT! IF YOU HOLD DOWN THE TIMING WHILE PRESSING A PAD, YOUR SAMPLE WILL PLAY BACK ACCORDING TO THE CHOSEN NOTE INTERVAL.

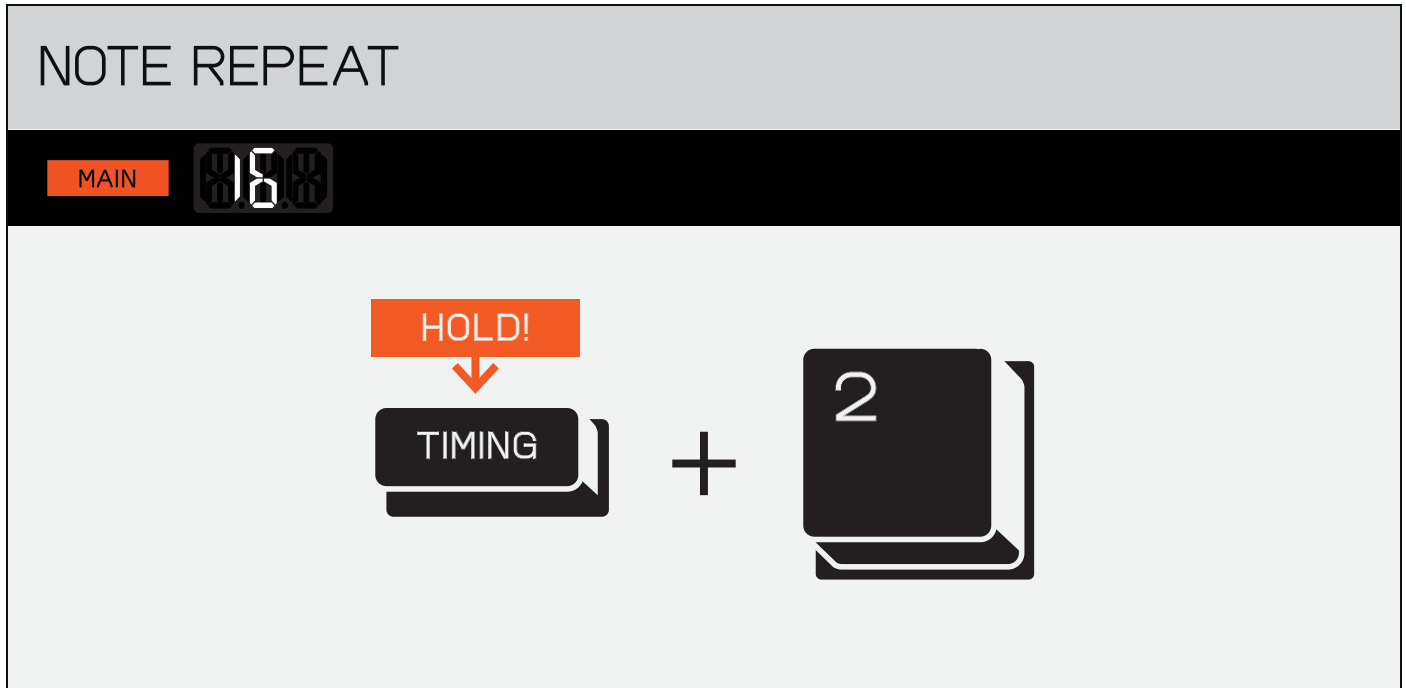


HOLD TIMING AND PRESS A PAD TO TRIGGER NOTE REPEAT FOR THAT PAD.

PRO-TIP! THIS IS PRESSURE SENSITIVE WHEN VELOCITY IS ENABLED!

HELD NOTE REPEAT

MAIN

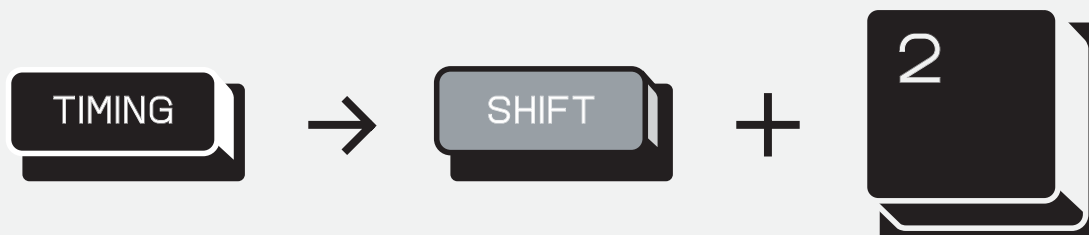

PRESS **TIMING**, THEN HOLD **SHIFT** AND PRESS A PAD TO HOLD THE NOTE REPEAT ON THAT PAD.


TO DISENGAGE THE HELD NOTE REPEAT, JUST FOLLOW THE SAME COMBINATION WITH THE SAME PAD.

PRO TIP! NOTE REPEAT I CAN BE USED TO PLAY BACK A SAMPLED LOOP.

10.4.2 TIMING CORRECT

MAYBE EVERYTHING WAS PERFECT EXCEPT FOR ONE HIT, BUT YOU DON'T WANT TO QUANTIZE EVERYTHING BECAUSE YOU LOVE THE BEAT?

USE THE **TIMING** **CORRECT** FUNCTION TO QUANTIZE INDIVIDUAL PADS OR EVEN INDIVIDUAL NOTES. THIS WAY, THINGS WILL FALL INTO PLACE WITHOUT RUINING ANY MAGIC.

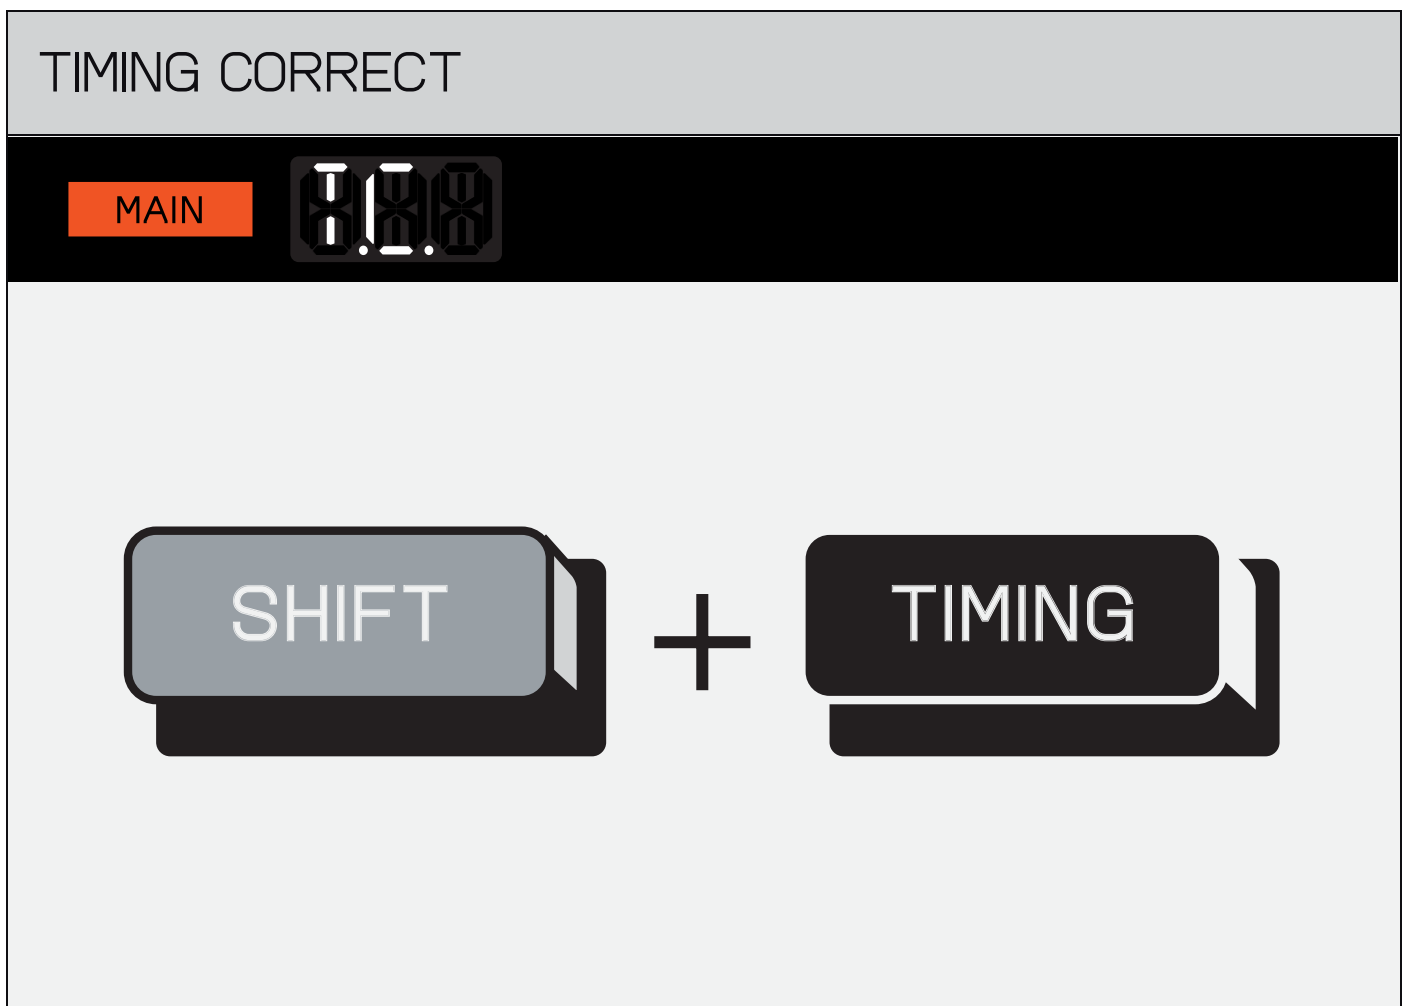

OPEN TIMING CORRECT BY PRESSING **SHIFT** AND **TIMING**.

QUANTIZE PAD

MAIN



WHEN STOPPED, PRESS A
PAD TO QUANTIZE ALL THE
STEPS RECORDED TO THAT
PAD.

LIVE QUANTIZE


MAIN




HOLD!



WHILE PLAYING, HOLD A PAD DURING
PLAYBACK TO QUANTIZE THE NOTES
PLAYED WHILE HELD (THE NUMBER OF
CORRECTED NOTES WILL SHOW ON
THE DISPLAY).

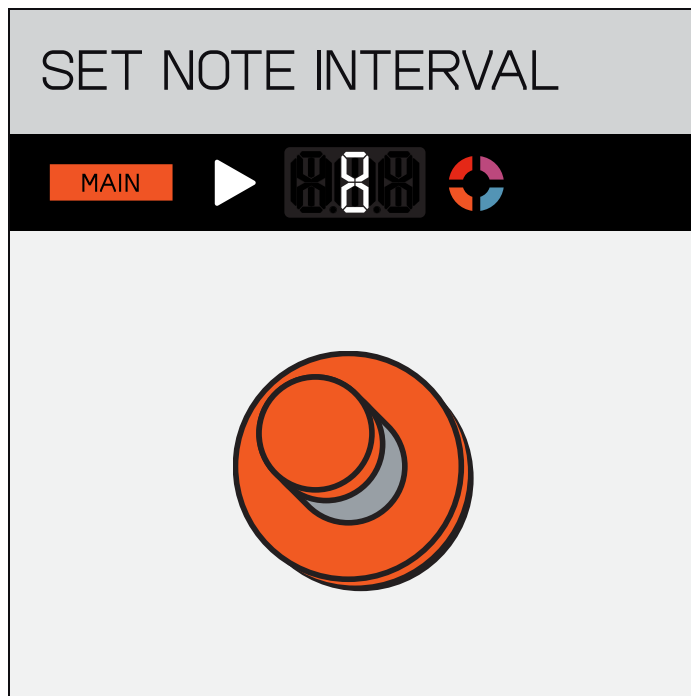

TURN **X** TO ADJUST THE NOTE INTERVAL YOU WISH TO CORRECT YOUR NOTES TO.

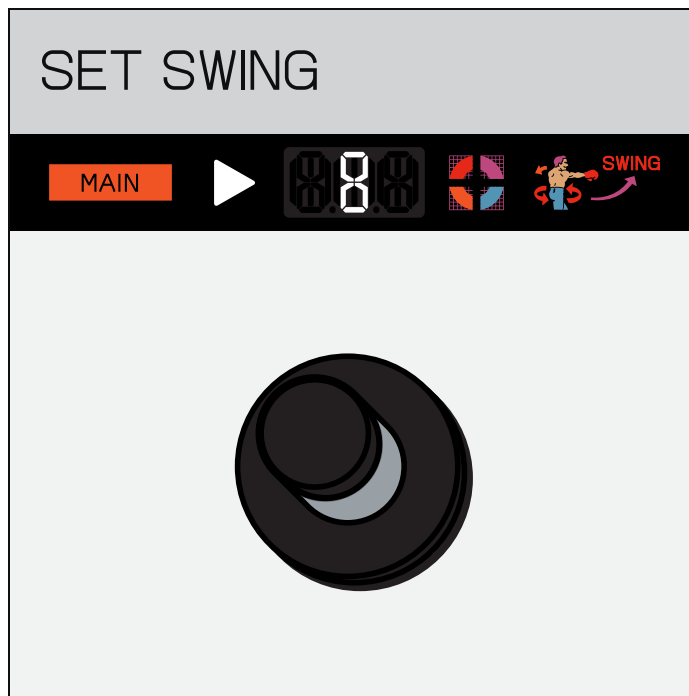

WHEN THE NOTE INTERVAL IS SET TO 8 OR 16, TURN **Y** TO ADJUST THE SWING.

10.5 LOOP


LOOPS CREATE A REPETITIVE PATTERN THAT CAN BE INCREDIBLY CATCHY, MEMORABLE OR ANNOYING.

THINK OF THEM AS A FOUNDATION TO LAYER ADDITIONAL INSTRUMENTS AND SOUNDS.

THEY CAN ALSO BE TWEAKED AND VARIED OVER TIME, AND GIVE A DEFINING CHARACTER TO YOUR SONG.


THE LOOP FUNCTION IS INSPIRED BY OUR BELOVED OB-4 MAGIC RADIO.

ENTER LOOP

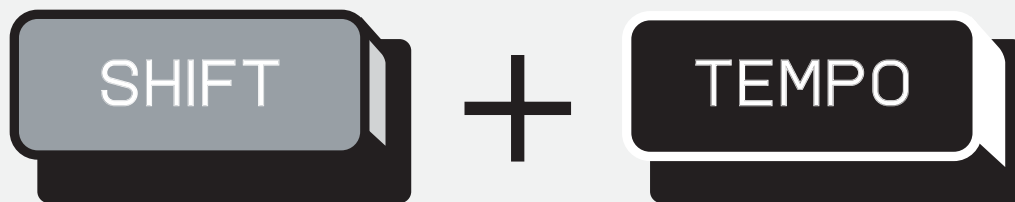


PRESS **SHIFT** AND **TEMPO** TO CREATE A LOOP.

PRO-TIP: HOLD **SHIFT** AND **TEMPO** TO SET THE LENGTH OF THE LOOP. THE LOOP STARTS WHEN YOU HOLD BOTH BUTTONS AND ENDS WHEN YOU RELEASE THEM.

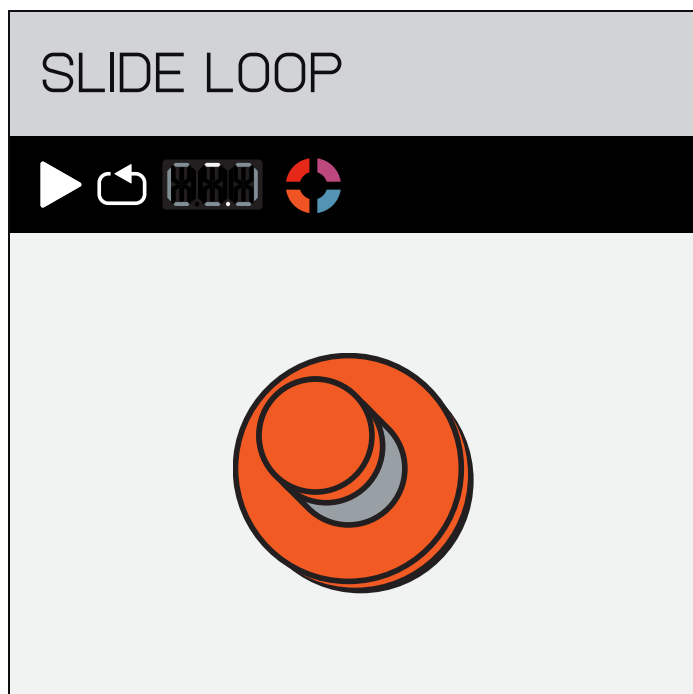

USE THE **X** KNOB TO SLIDE THE LOOP POSITION BACK AND FORTH. SLIDING IS TEMPO LOCKED.

THE DISPLAY WILL SHOW THE POSITION OF THE LOOP.

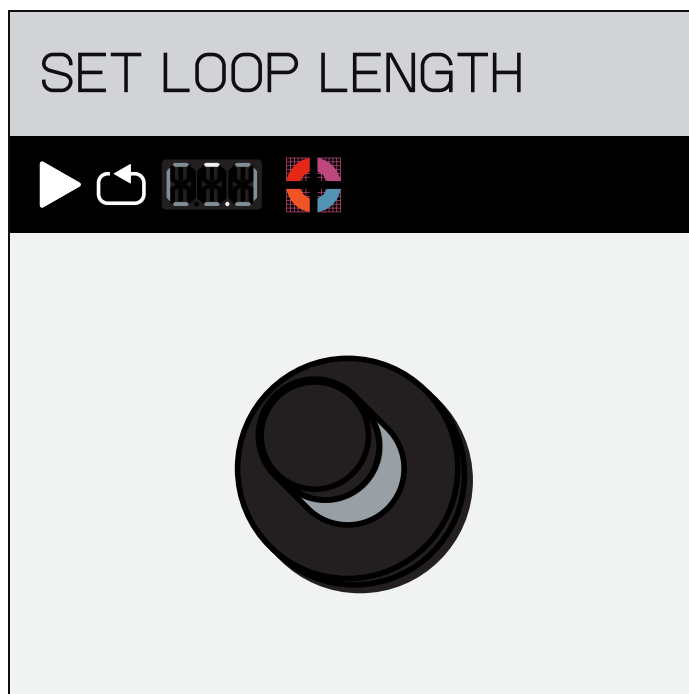


WHEN IN LOOP MODE USE THE **Y** KNOB TO SET YOUR LOOP LENGTH.



PRESS **TEMPO** TO EXIT THE LOOP DIRECTLY OR PRESS **MAIN** TO EXIT THE LOOP ON THE NEXT BAR.

LOOP

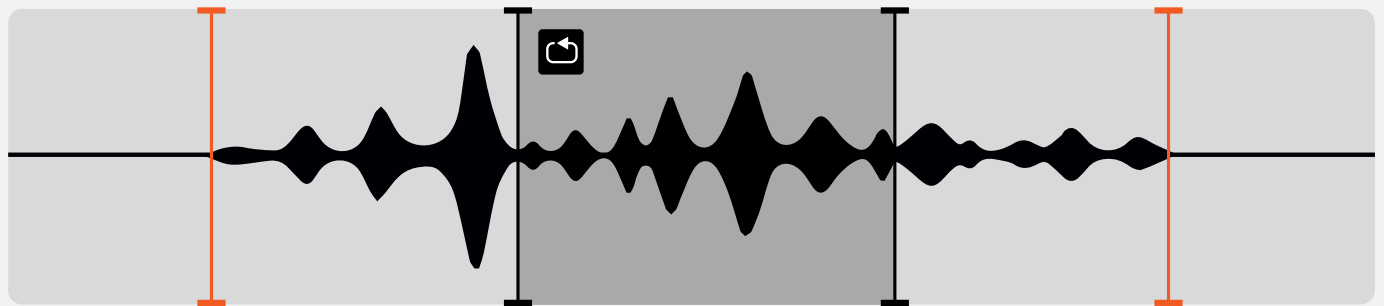

☒ LENGTH

☐ SLIDE




EFFECTS

FINALLY, THE FUN STARTS. LET'S GIVE YOUR TRACK SOME PERSONALITY!


THE **FX** BUTTON IS WHERE YOU'LL FIND DELAY, REVERB, DISTORTION, CHORUS, FILTER, AND COMPRESSOR.

EACH GROUP CAN SEND TO ONE MASTER FX AND THE SUM OF THE MIX IS SENT THROUGH A MASTER COMPRESSOR.


ADDITIONALLY, THE LIVE INPUT FROM THE LINE IN CAN SEND TO THE CHOSEN FX.

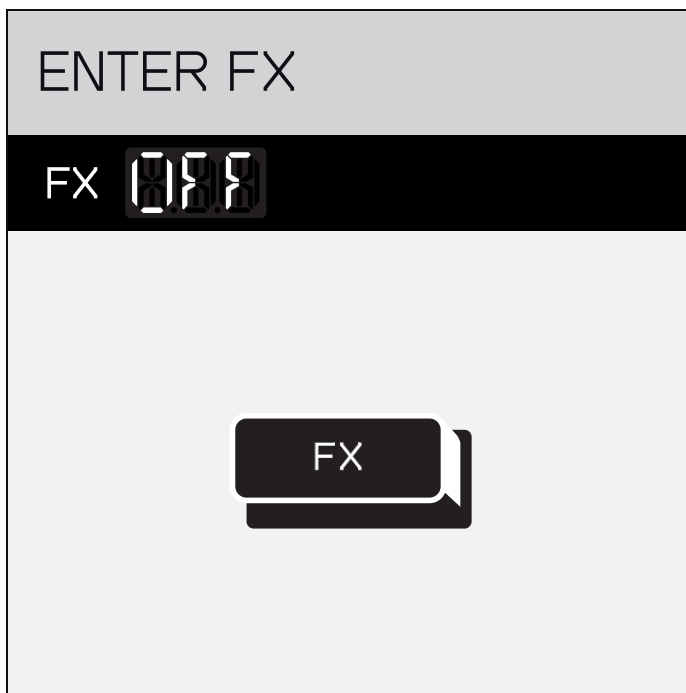

PRESS **FX** WHILE PLAYING.

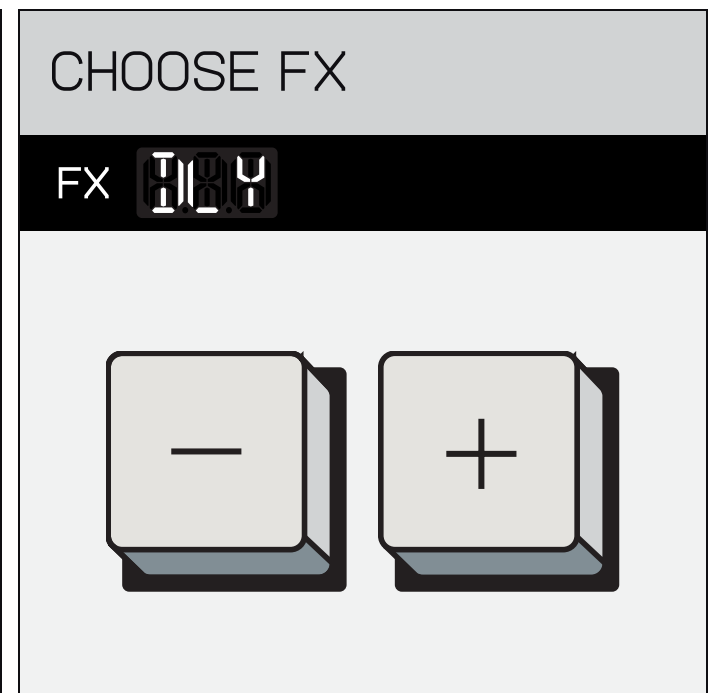


USE **-** AND **+** TO NAVIGATE THROUGH THE FX.

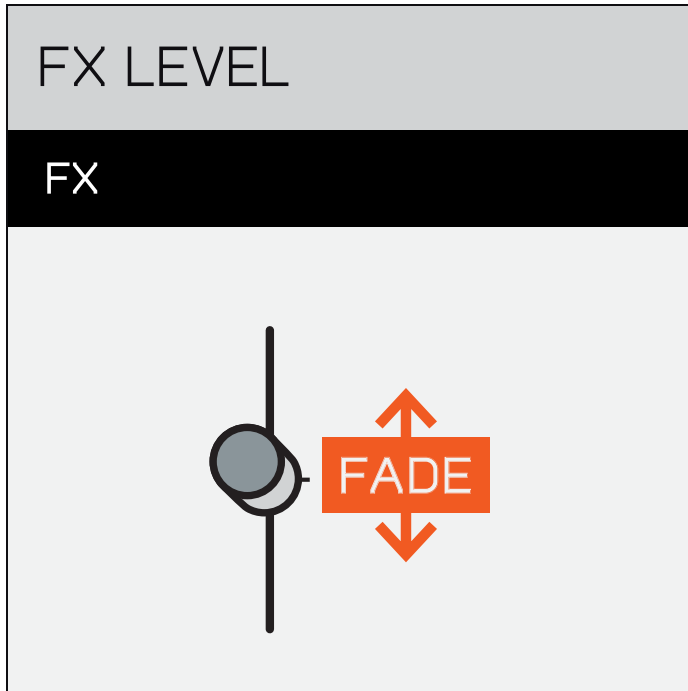

TO ADJUST YOUR FX USE THE FADER.

Merge the fader to adjust the amount of FX on the current group.

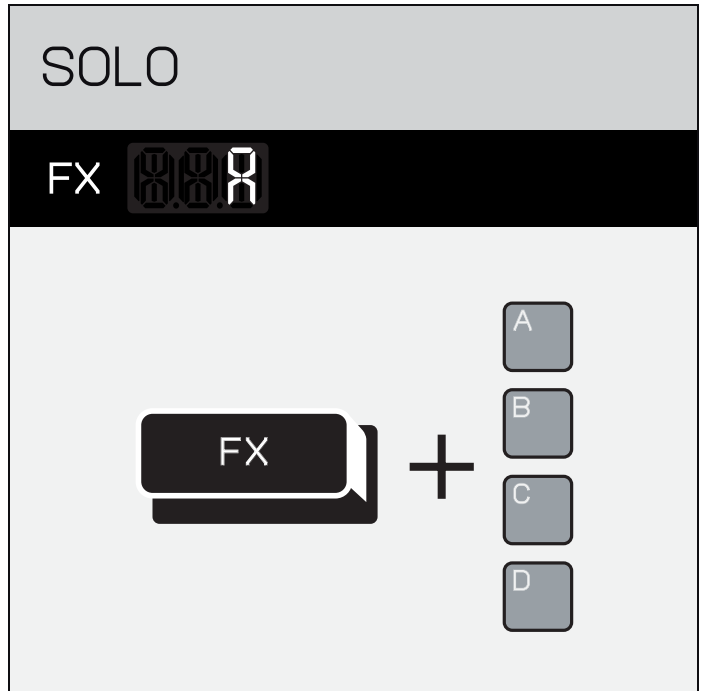

While playing, hold **FX** and press a group pad to solo that group.

Pro tip! Hold **FX** and multiple group pads to solo multiple groups at once.

II.I

DELAY

DELAY

FX 01.4





DELAY IS LIKE ECHO. IT REPEATS THE ORIGINAL SOUND MULTIPLE TIMES TO MAKE IT SOUND LIKE YOU ARE SOMEWHERE LIKE A VALLEY OR A FISH BOWL!

LENGTH

FX 1.24



TURN THE  KNOB TO ADJUST THE LENGTH OF YOUR DELAY. THIS WILL CHANGE THE TIME BETWEEN REPETITIONS.

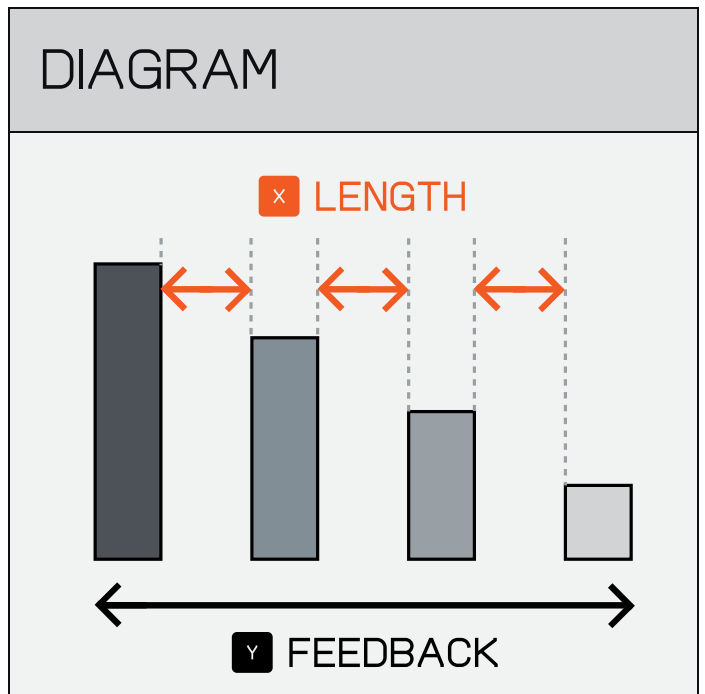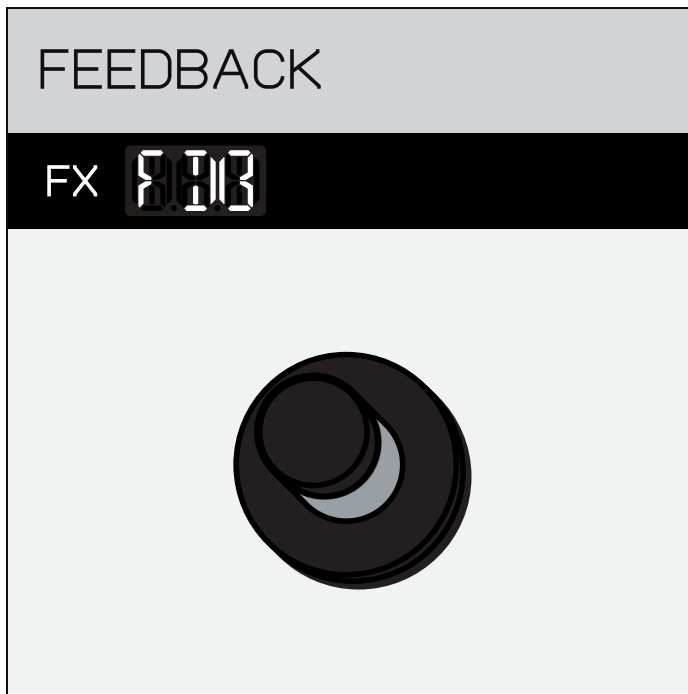


TO ADJUST YOUR FX USE THE FADER. TURN THE **y** KNOB TO ADJUST THE FEEDBACK OF YOUR DELAY. THIS WILL CHANGE HOW MANY TIMES IT REPEATS. MOVE THE FADER TO ADJUST THE AMOUNT OF FX ON THE CURRENT GROUP.

II.2 REVERB

REVERB

FX 1343

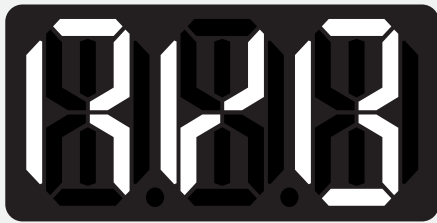


REVERB CAN MAKE IT SOUND LIKE YOU ARE IN A MASSIVE CHURCH OR A TINY ROOM. TURN IT UP AND HEAR YOUR SOUNDS WASH AWAY LIKE WAVES IN THE OCEAN!

LENGTH


FX 124



TURN THE  KNOB TO ADJUST THE LENGTH OF YOUR REVERB. THIS CHANGES THE SIZE OF THE ROOM.

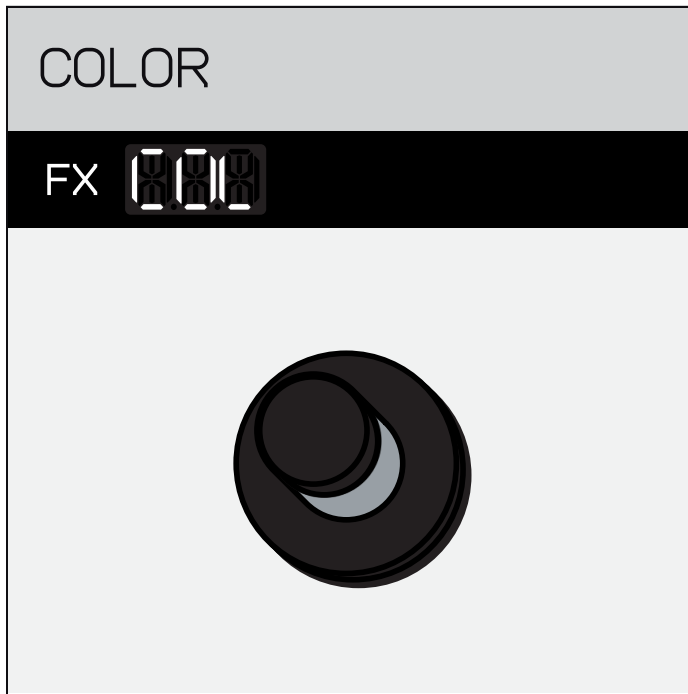

TURN THE **Y** KNOB TO ADJUST THE COLOR OF YOUR REVERB. THIS WILL FILTER OUT THE HIGH OR LOW FREQUENCIES TO MAKE THE REVERB 'DARKER' OR 'BRIGHTER'.

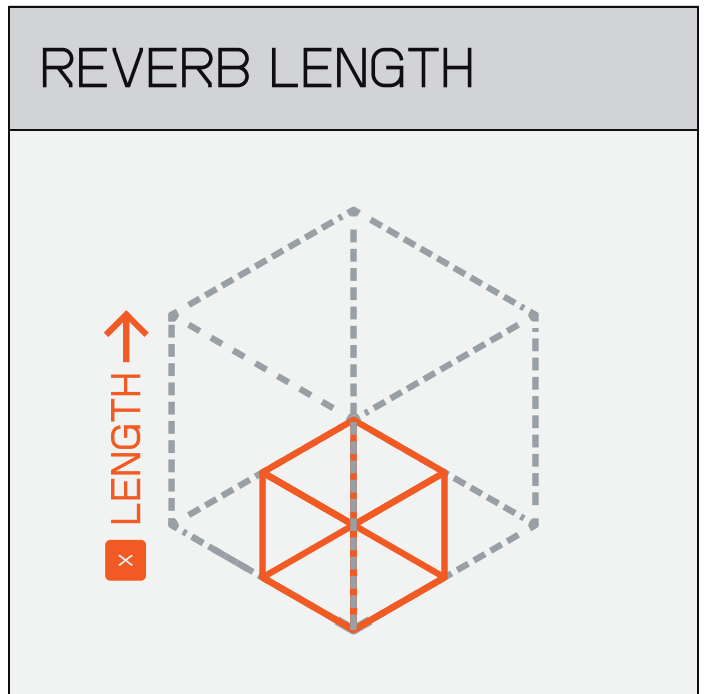

REVERB EMULATES THE SOUND OF A SPACE, FROM A SMALL ROOM TO A CATHEDRAL.

II.3 DISTORTION

DISTORTION

FX 



ROCK OUT WITH DISTORTION, BEAT UP YOUR BEAT AND PUNCH IT DOWN! PRESS  WHILE PLAYING.

DRIVE

FX 



TURN THE  KNOB TO ADJUST THE DRIVE OF YOUR DISTORTION, OVERDRIVING YOUR SOUNDS MORE OR LESS.

COLOR

FX 




TURN THE  KNOB TO ADJUST THE COLOR OF YOUR DISTORTION, THIS WILL FILTER OUT AND RESONATE THE HIGH OR LOW FREQUENCIES MAKING THE DISTORTION EVEN CRAZIER.

DISTORTION

NORMAL



DISTORTED

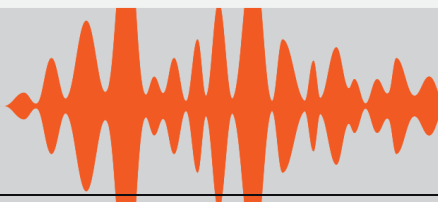


DISTORTION CLIPS THE LOUDEST PARTS OF A WAVEFORM CREATING A WARM, FUZZY SOUND.

II.4 CHORUS

CHORUS

FX 

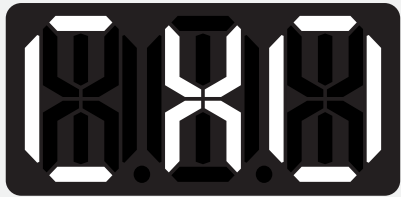

SPREAD THINGS OUT AND GET WAVY WITH CHORUS. TURN THIS UP TO THICKEN UP YOUR CHORDS AND GET FREAKY WITH YOUR DRUMS!

MODULATION


FX 



TURN THE  KNOB TO ADJUST THE MODULATION OF YOUR CHORUS. THIS IS THE RATE AT WHICH IT WILL MOVE THE SOUND AROUND.


FEEDBACK

FX 

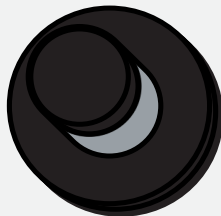

TURN THE  KNOB TO ADJUST THE FEEDBACK OF YOUR CHORUS. THIS WILL CONTROL HOW PROMINENT THE EFFECT IS BY FEEDING THE SIGNAL BACK INTO ITSELF. TURN IT UP AND HEAR IT RING!

CHORUS

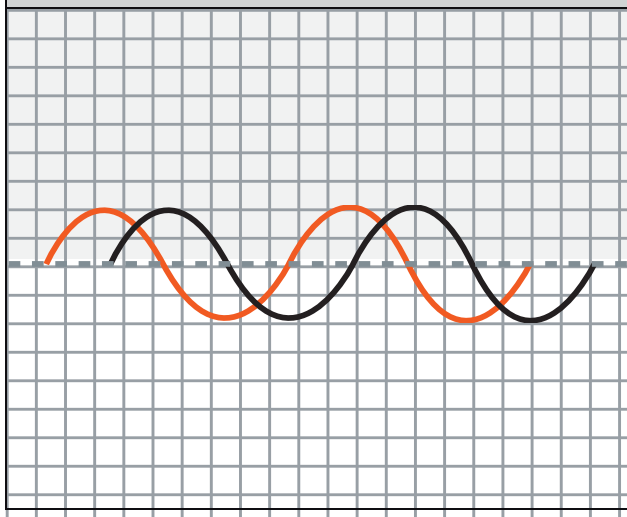


CHORUS MULTIPLIES YOUR AUDIO AND MAKES IT SOUND RICHER.

11.5 FILTER

FILTER


FX **F100**

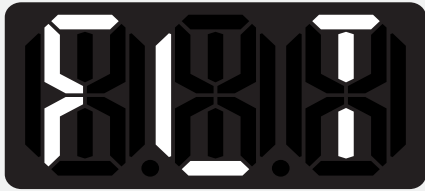

LOOKING FOR A MORE MELLOW SOUND? TRY THE FILTER! FILTERS ARE A GREAT WAY OF REMOVING HIGH OR LOW FREQUENCIES AND CHANGING THE CHARACTER OF A SOUND.

CUTOFF


FX **C100**

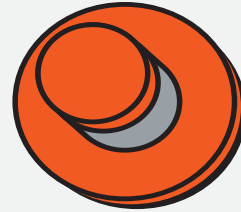

TURN THE **x** KNOB TO ADJUST THE CUTOFF. THIS WILL SET THE RANGE OF FREQUENCIES TO BE CUT. TURN LEFT TO CUT THE HIGHS AND RIGHT TO CUT THE LOWS.


RESONANCE

FX **RES**

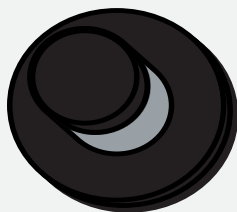


TURN THE **y** KNOB TO ADJUST THE RESONANCE. THIS EMPHASISES THE FILTER AND CAN CREATE AN AWESOME SWEEPING SOUND. TRY TURNING IT UP AND THEN MOVING THE CUTOFF USING THE **x** KNOB!

FILTER

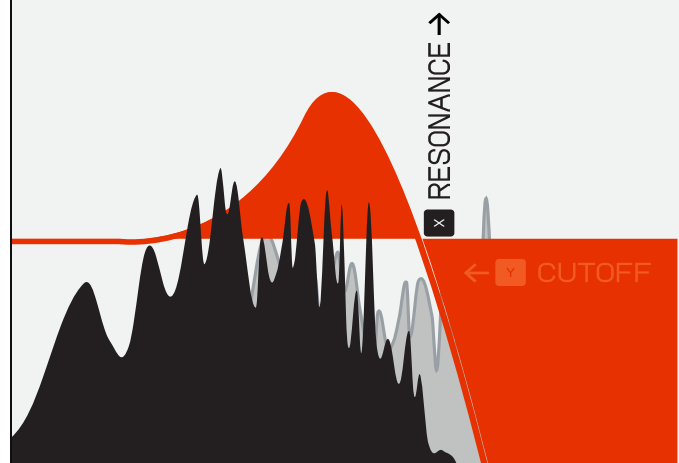


THE FILTER ALLOWS YOU TO SHAPE YOUR SOUND, BY CUTTING AND BOOSTING CERTAIN FREQUENCIES.


11.6 COMPRESSOR

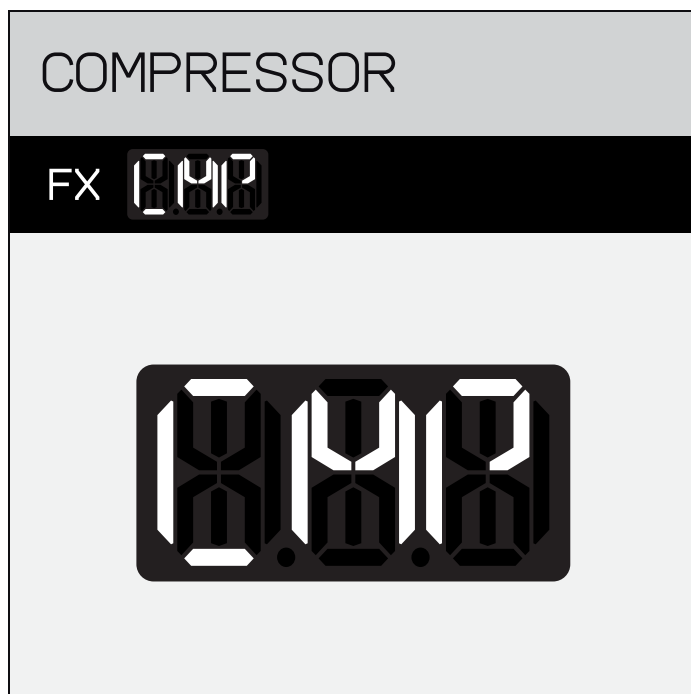


PUNCH DOWN DRUMS AND KEEP YOUR DYNAMICS IN CHECK WITH THE COMPRESSOR!

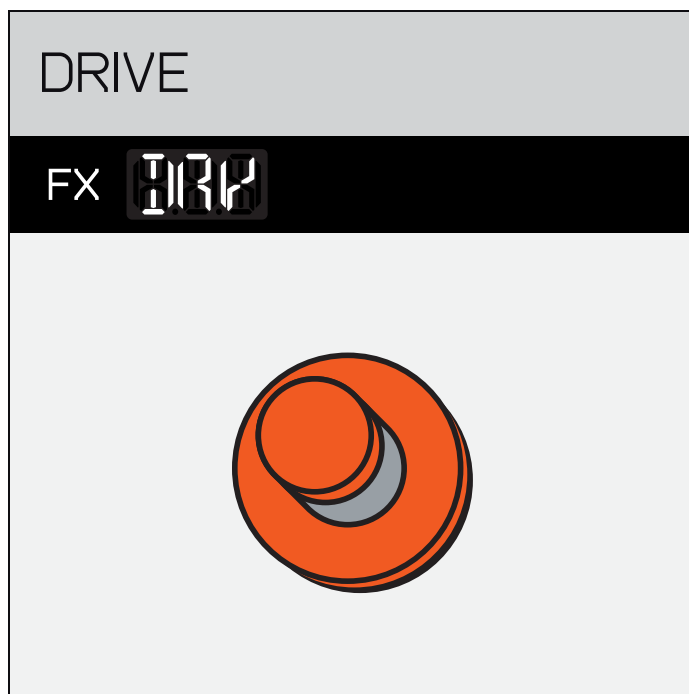

TURN THE  KNOB TO ADJUST THE DRIVE. THIS CONTROLS HOW LOUD THE AUDIO GOING INTO THE COMPRESSOR IS.

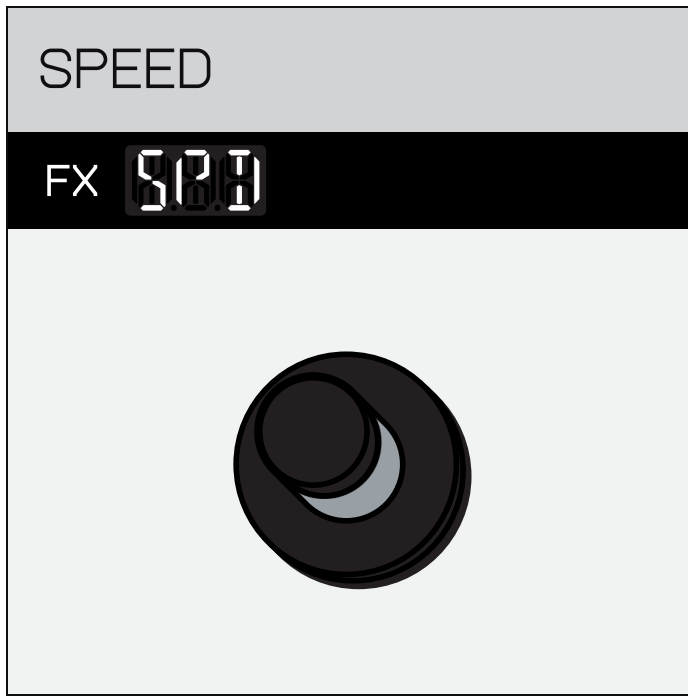

TURN THE **Y** KNOB TO ADJUST THE SPEED. THIS CHANGES HOW FAST THE COMPRESSOR IS ABLE TO SQUASH YOUR SOUNDS. TURN UP THE DRIVE AND SPEED TO HEAR YOUR SOUNDS GET PUNCHED IN THE FACE BY THE COMPRESSOR.

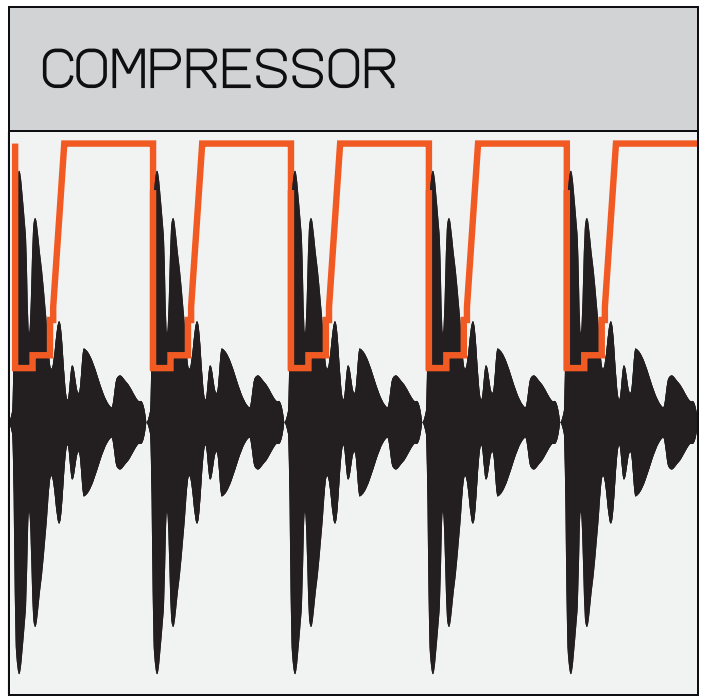


THE COMPRESSOR PUSHES DOWN ANY LOUD PORTIONS OF INCOMING AUDIO WHILE BRINGING UP THE OVERALL VOLUME, ALLOWING YOU TO REDUCE DYNAMICS AND ADD MORE PUNCH!

II.7

PUNCH-IN FX 2.0™


HOLDING DOWN FX TURNS THE PADS INTO PUNCH-IN FX. PUNCH-IN FX ARE A SUPER FAST WAY OF CREATING VARIATIONS ON YOUR BEAT, EACH ONE ADDS A UNIQUE CHARACTER AND ALLOWS YOU TO QUICKLY PERFORM WITH WHAT YOU HAVE CREATED.

PUNCH-IN FX

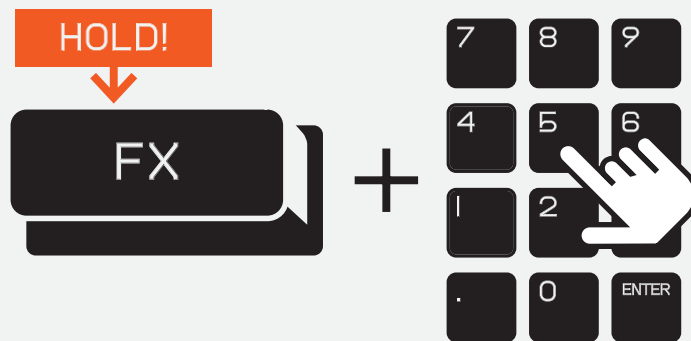

HOLD **FX** AND PRESS THE PADS TO TRIGGER PUNCH-IN FX.

PRESSURE SENSITIVE

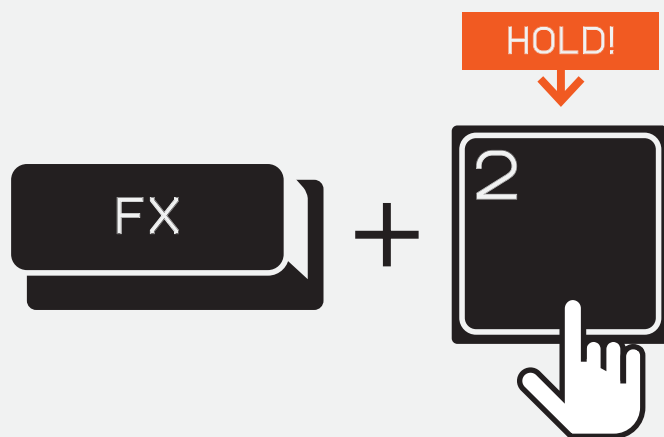

PUNCH-IN FX ARE PRESSURE SENSITIVE AND CAN BE COMBINED.

II.8 LIVE INPUT FX

PLUG SOMETHING INTO THE INPUT JACK AND TURN UP THE INTERNAL FX LEVEL TO PROCESS IT THROUGH THE BUILT IN FX!

MAIN




PRESS **MAIN** TO ENTER THE MAIN MODE.

INPUT GAIN



TURN THE **x** KNOB TO ADJUST THE INPUT VOLUME.


SEND LEVEL

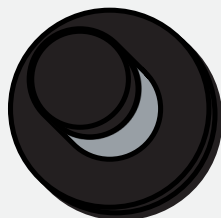


TURN THE **y** KNOB TO ADJUST THE INTERNAL FX SEND LEVEL.

11.9 OUTPUT

TIGHTEN UP YOUR SOUND WITH THE MASTER COMPRESSOR. ADJUST DRIVE FOR A MORE PRONOUNCED COMPRESSION EFFECT AND SPEED TO DECIDE HOW QUICKLY THE COMPRESSOR SHOULD RESPOND TO THE INPUT SIGNAL.

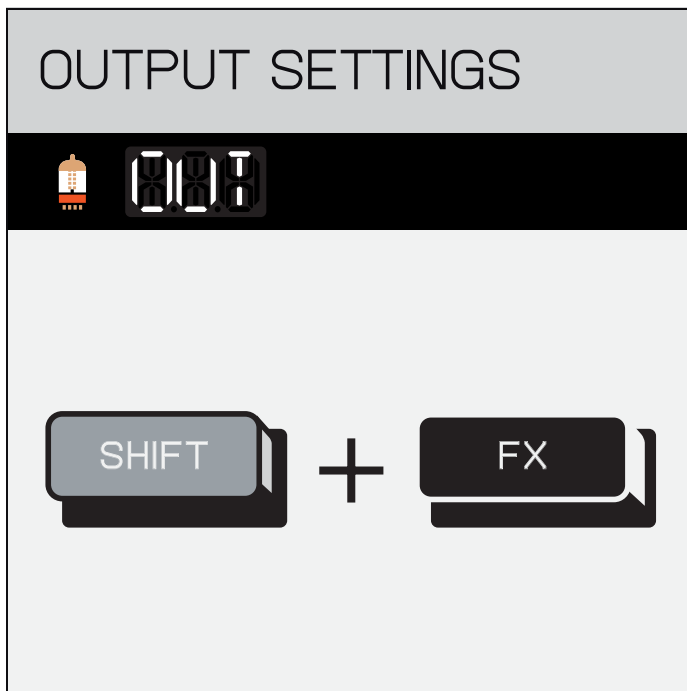


PRESS **SHIFT** AND **FX** TO ENTER THE OUTPUT SETTINGS (MASTER COMPRESSOR).

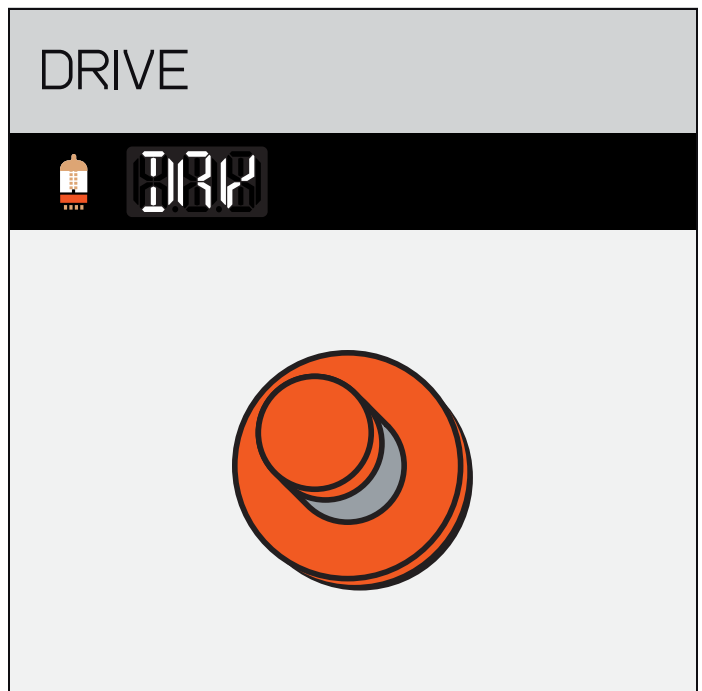

TURN THE **x** KNOB TO ADJUST THE DRIVE.

SPEED

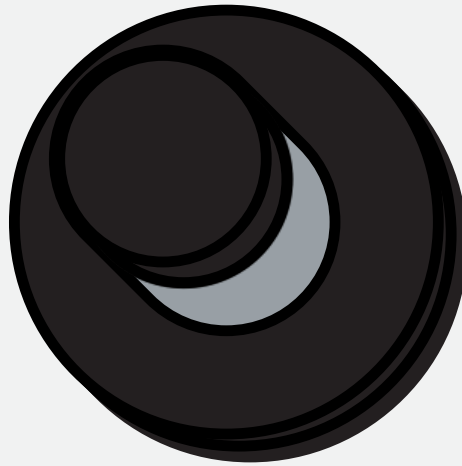


TURN THE **Y** KNOB TO ADJUST THE
SPEED – TRY CRANKING THIS AND
HEAR WHAT IT DOES TO YOUR BEAT.


11.9.1 SIDECCHAIN

SOMETIMES THINGS DON'T QUITE SIT RIGHT AND YOU NEED TO PUT CERTAIN SOUNDS IN THEIR PLACE. OTHER TIMES YOU WANT TO KICK THE BASS IN THE FACE WITH THE KICK. THAT'S WHERE SIDECCHAIN COMES IN!


SIDECCHAINING ON K.O. II USES NOTE TRIGGERS TO ENGAGE THE SIDECCHAIN COMPRESSOR, THIS MEANS YOU CAN TRIGGER THE SIDECCHAIN COMPRESSOR EVEN WITHOUT SOUND AND CHOOSE THE EXACT LENGTH AND SHAPE.

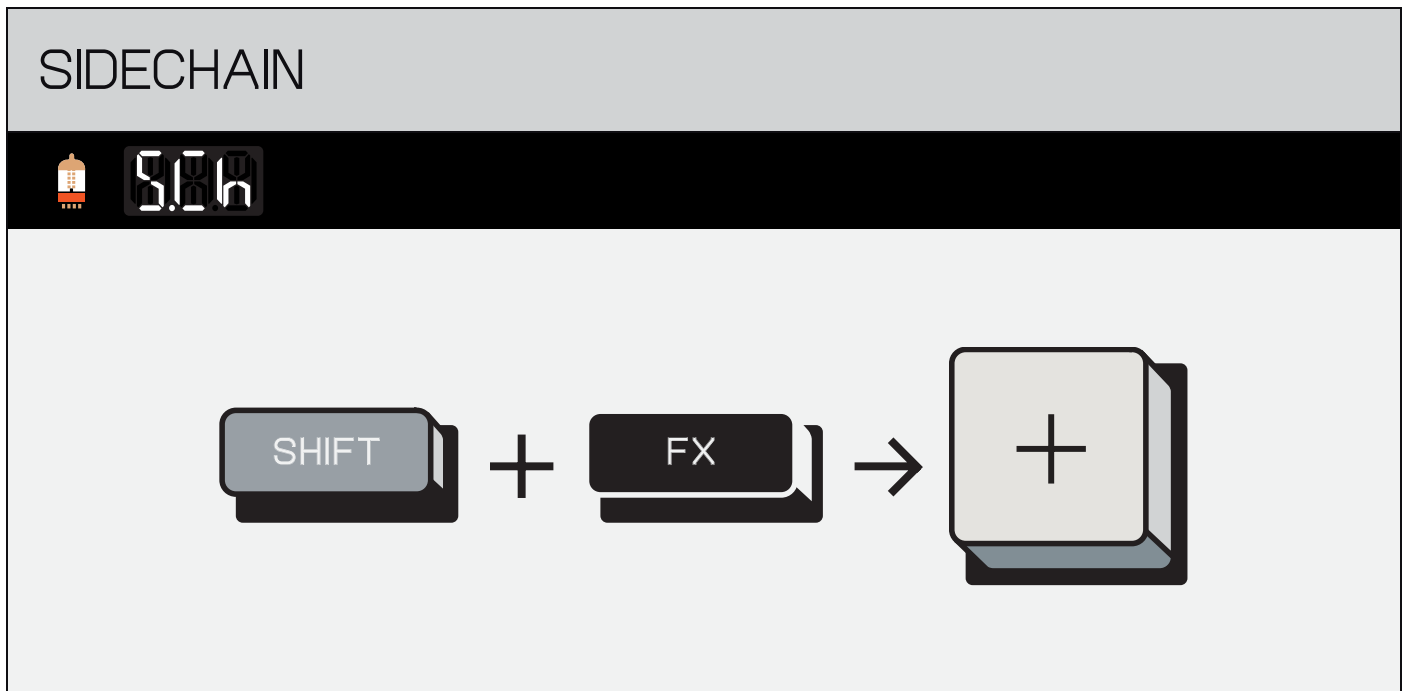


TO OPEN THE SIDECCHAIN SETTINGS PRESS **SHIFT** AND **FX** TO ENTER THE OUTPUT SETTINGS (MASTER COMPRESSOR) THEN **+**.

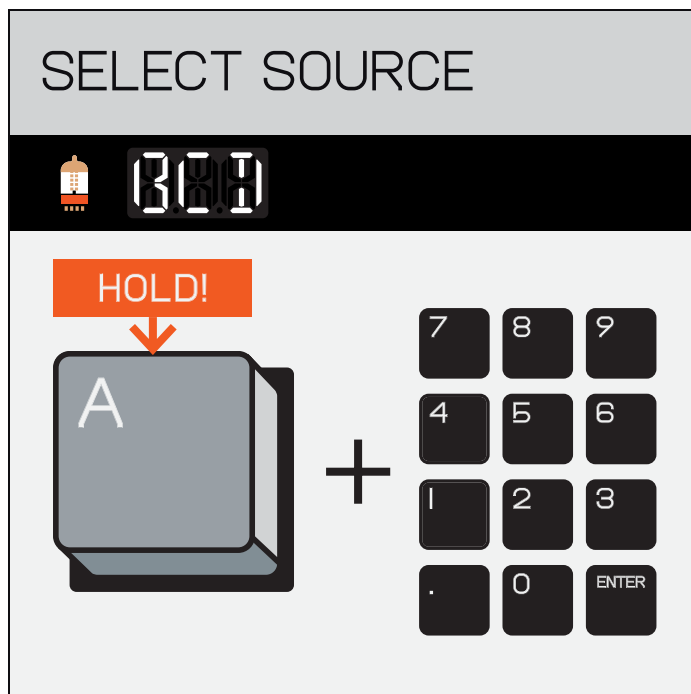


HOLD A GROUP PAD AND SELECT A SOUND TO ADD IT AS A SOURCE FOR THE SIDCHAIN.

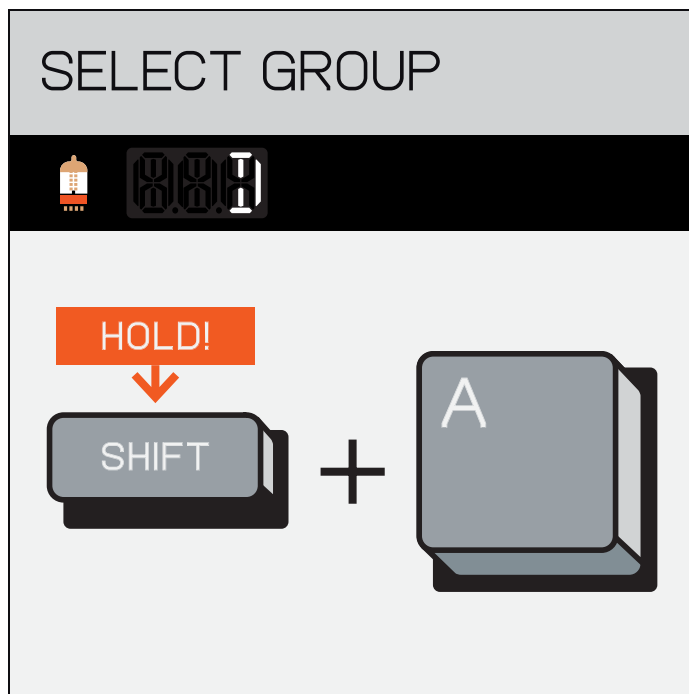

HOLD SHIFT AND PRESS A GROUP PAD TO ADD IT AS A DESTINATION FOR THE SIDCHAIN.

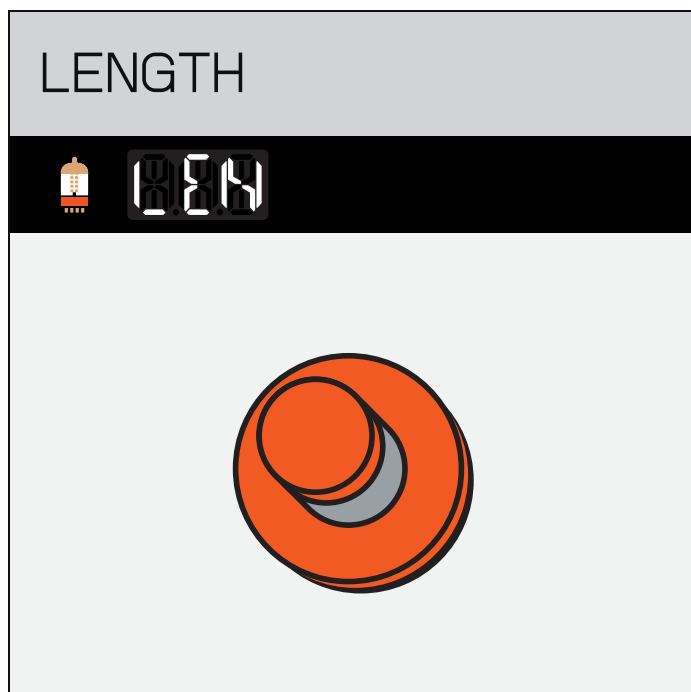


TURN THE **X** KNOB TO ADJUST LENGTH OF THE DUCK.

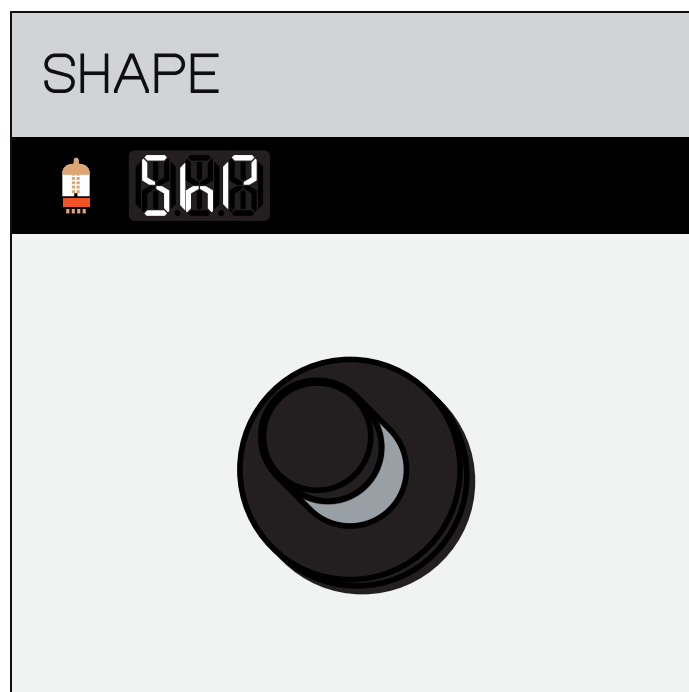

TURN THE **Y** KNOB TO ADJUST THE SHAPE OF THE DUCK.

SIDECHAIN

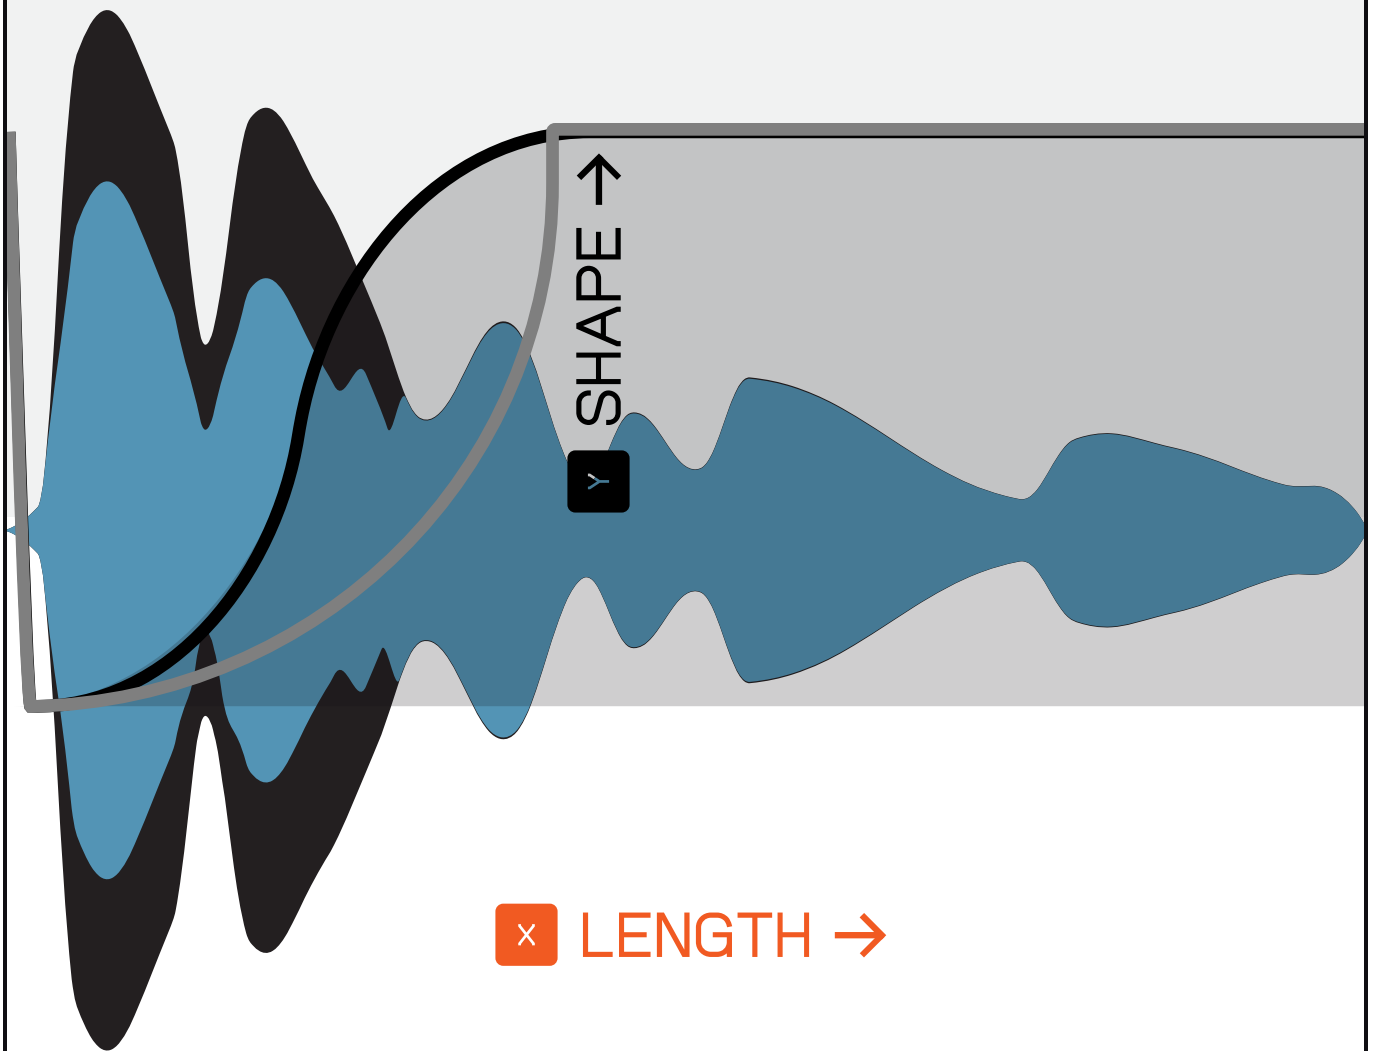

12

HOW TO

12.1


ENABLE VELOCITY SENSITIVITY

① OPEN SYSTEM SETTINGS




PRESS **SHIFT** AND **ERASE** TO ENTER THE SYSTEM SETTINGS.

② NAVIGATE TO PAD SETTINGS

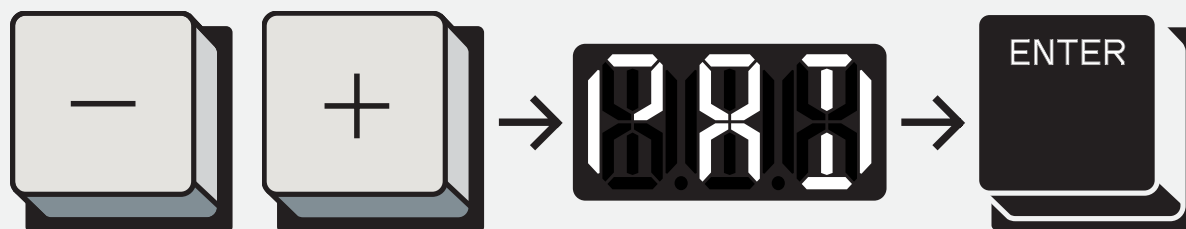


USE **-** AND **+** TO NAVIGATE TO THE PAD SETTINGS, THEN PRESS [ENTER] ON THE PADS.

③ NAVIGATE TO VELOCITY SETTINGS

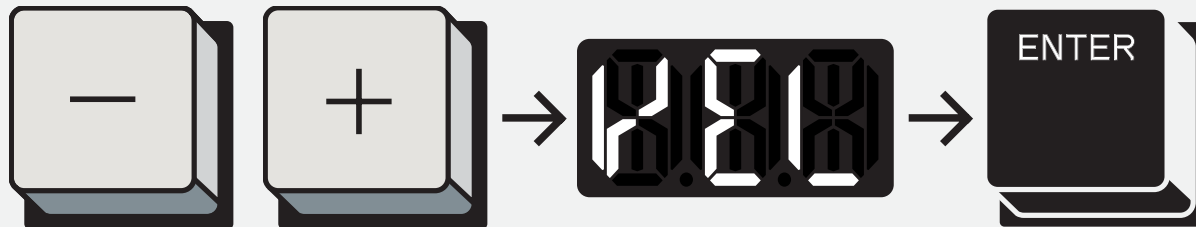

USE [-] AND [+] TO NAVIGATE TO
VEL', THEN HIT [ENTER].

④ SELECT VELOCITY MODE

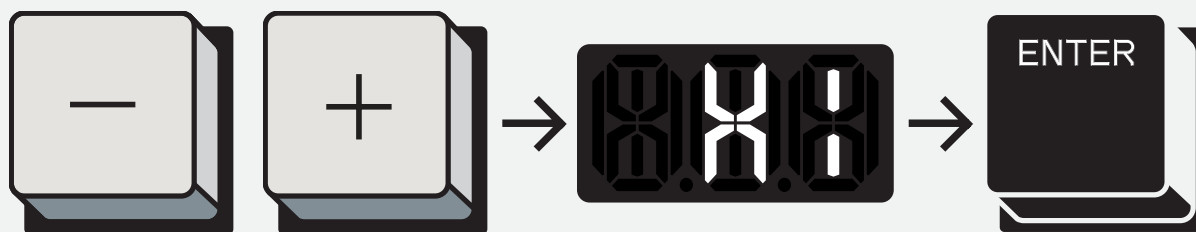

USE [-] AND [+] TO CHOOSE
BETWEEN:

THEN HIT [ENTER] TO CHOOSE YOUR
VELOCITY SETTING!

OFF (NO VELOCITY SENSITIVITY).
HI (FOR WHEN PLAYING WITH LESS
FORCE).
LOW (FOR WHEN PLAYING WITH MORE
FORCE).

⑤ RETURN TO MAIN



PRESS  TO RETURN TO MAIN
AND EXIT THE SYSTEM SETTINGS.

⑥ HIT THE PADS!



HIT THE PADS TO HEAR THE
VELOCITY SENSITIVITY!

12.2

CHANGE THE SCALE IN KEYS MODE

① MAIN



FIRST, MAKE SURE THAT YOU ARE IN THE MAIN MODE. PRESS  TO ENTER THE MAIN MODE FROM ANY PAGE IN THE DEVICE.

② CHOOSE A SAMPLE




CHOOSE A PAD THAT YOU WISH TO PLAY ACROSS A SCALE.

③ ENTER KEYS MODE




PRESS **KEYS** TO ENTER KEYS MODE. THE PADS WILL BECOME A KEYBOARD THAT HAVE THE CHOSEN SAMPLE TRANSPOSED ACROSS A SCALE.

④ CHANGE OCTAVE

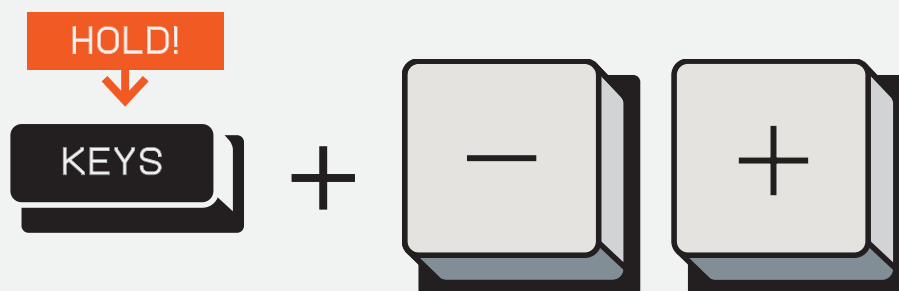

HOLD **KEYS** AND PRESS **-** OR **+** TO CHANGE THE OCTAVE.

⑤ TRANSPOSE

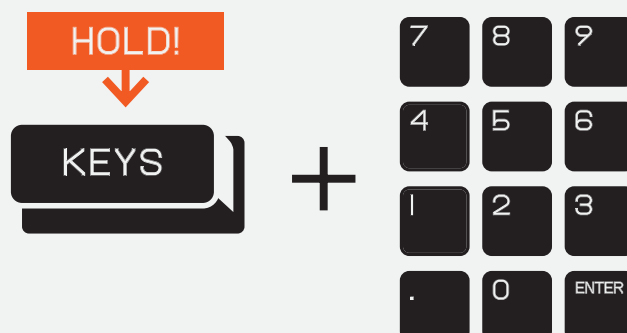


HOLD **KEYS** AND PRESS A PAD TO
TRANSPOSE THE SCALE.

⑥ SYSTEM SETTINGS




TO CHANGE THE SCALE, FIRST
ENTER INTO SYSTEM SETTINGS BY
PRESSING **SHIFT** AND **ERASE**.

⑦ PAD SETTINGS

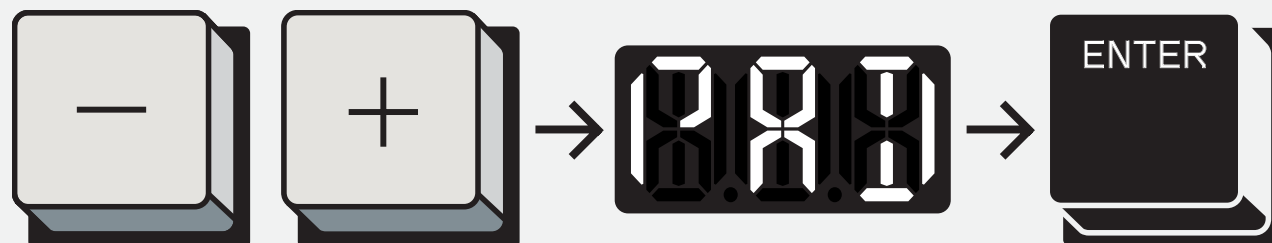


USE $\boxed{-}$ AND $\boxed{+}$ TO NAVIGATE TO THE PAD SETTINGS, THEN PRESS [ENTER] ON THE PADS.

⑧ SCALE SETTINGS

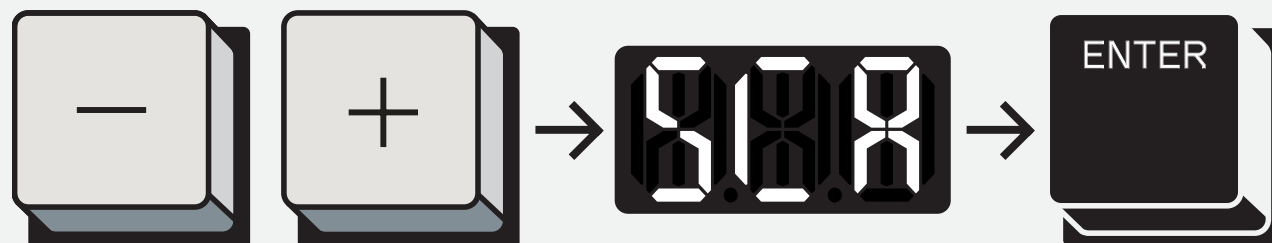

USE $\boxed{-}$ AND $\boxed{+}$ TO NAVIGATE TO 'SCA', THEN HIT [ENTER].

⑨ CHANGE SCALE

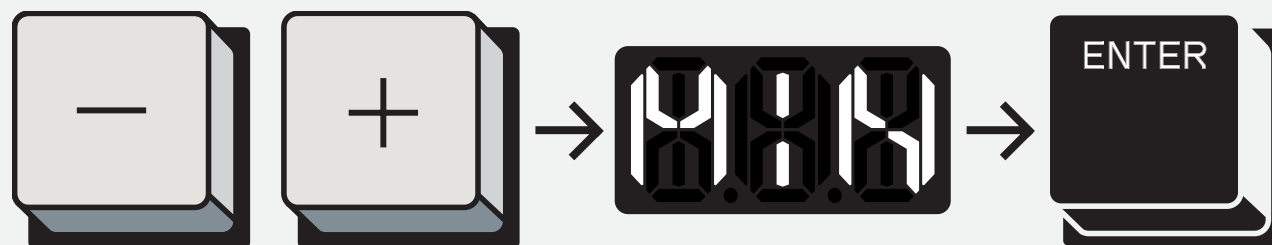

USE AND TO CHOOSE BETWEEN:

I2T – I2 TONE EQUAL
TEMPERAMENT (DEFAULT)
MAJ – MAJOR (IONIAN MODE)
MIN – MINOR (AEOLIAN MODE)
DOR – DORIAN MODE
PHR – PHRYGIAN MODE
LYD – LYDIAN MODE
MIX – MIXOLYDIAN MODE
LOC – LOCRIAN MODE
MA.P – MAJOR PENTATONIC
MI.P – MINOR PENTATONIC

THEN HIT [ENTER] TO CHOOSE YOUR
SCALE SETTING!

⑩ EXIT SYSTEM SETTINGS



MAIN

PRESS  TO RETURN TO MAIN
AND EXIT THE SYSTEM SETTINGS.

NOW, WHEN YOU ENTER KEYS MODE
THE PADS WILL BE TRANSPOSED TO
THE CHOSEN SCALE!

12.3


TURN ON THE METRONOME WHILE PLAYING

① OPEN SYSTEM SETTINGS




PRESS **SHIFT** AND **ERASE** TO ENTER THE SYSTEM SETTINGS.

② NAVIGATE TO SEQUENCER SETTINGS

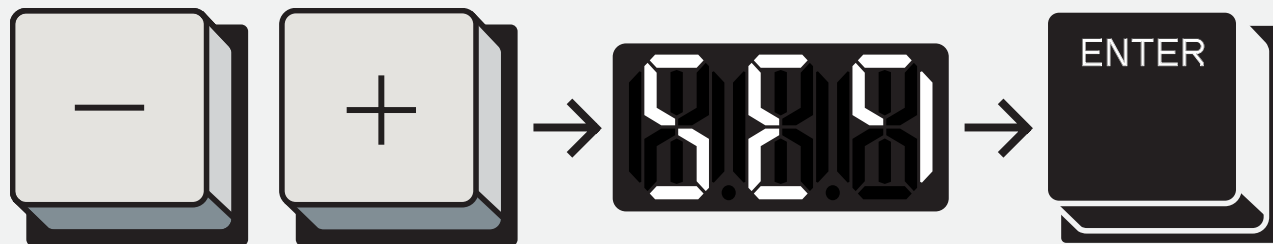


USE **-** AND **+** TO NAVIGATE TO THE SEQUENCER SETTINGS, THEN PRESS **[ENTER]** ON THE PADS.

③ NAVIGATE TO METRONOME SETTINGS

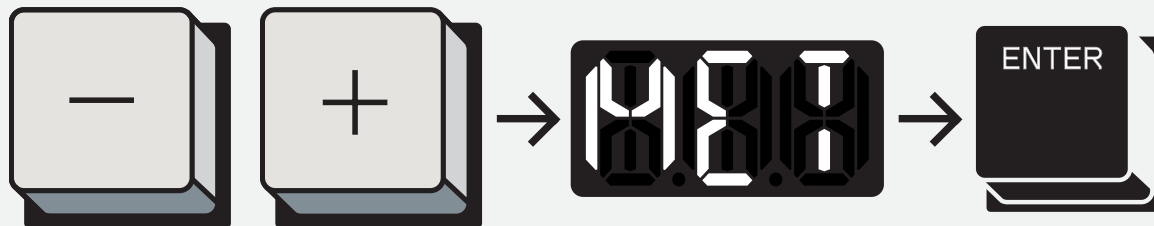

USE [-] AND [+] TO NAVIGATE TO
'MET', THEN HIT [ENTER].

④ SELECT METRONOME MODE

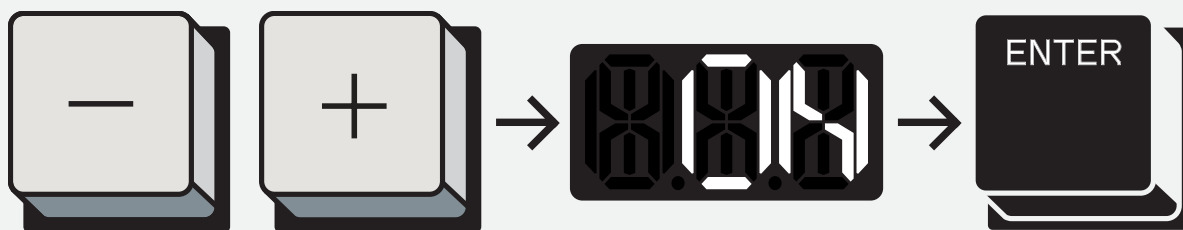

USE [-] AND [+] TO CHOOSE
BETWEEN:

THEN HIT [ENTER] TO CHOOSE YOUR
METRONOME SETTING!

ON – ENABLE METRONOME AT
RECORD+PLAY
REC – ENABLE METRONOME AT
RECORD ONLY (DEFAULT)
CNT – ENABLE METRONOME AT
COUNT-IN ONLY

⑤ RETURN TO MAIN




PRESS **MAIN** TO RETURN TO MAIN
AND EXIT THE SYSTEM SETTINGS.

⑥ TEMPO



PRESS **TEMPO** TO OPEN THE TEMPO
MODE.

⑦ TURN UP METRONOME VOLUME

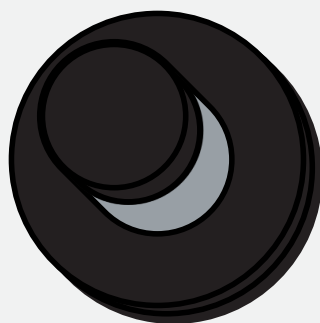

TURN THE **Y** TO TURN UP THE METRONOME.

⑧ PRESS PLAY




PRESS **PLAY** TO HEAR THE METRONOME!

12.4



SYNC TWO K.O. II UNITS

① GET STARTED

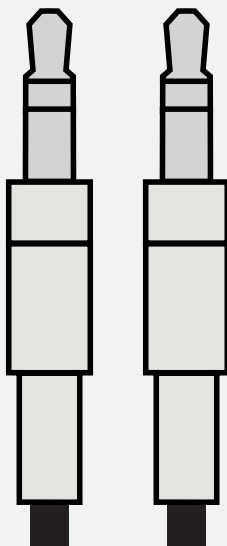

FOR THIS SETUP YOU WILL NEED
TWO K.O. II DEVICES AND A 3.5 MM
TO 3.5 MM CABLE.

② CONNECT VIA SYNC

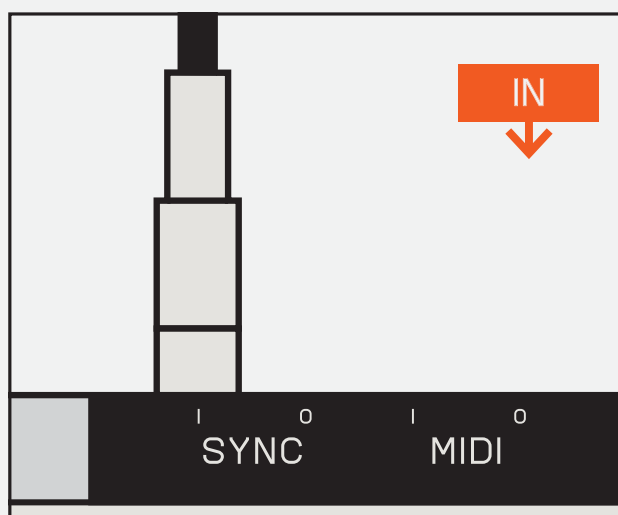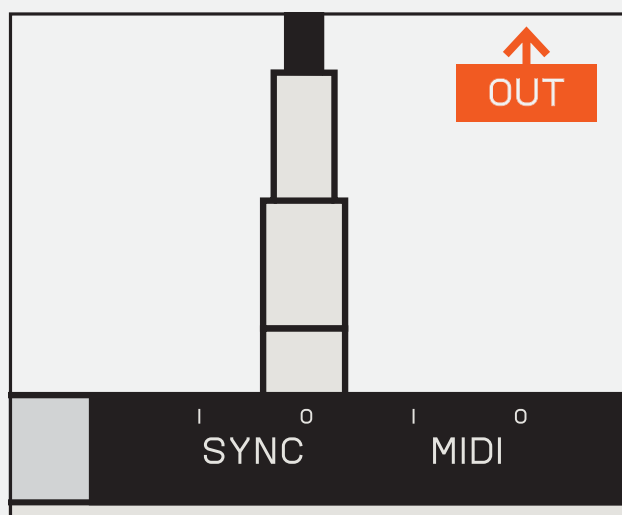


FIRSTLY, MAKE SURE THAT BOTH
K.O. II DEVICES ARE SET TO 1/16
SYNC BOTH IN AND OUT.

YOU CAN THEN PLUG THE CABLE
INTO THE SYNC OUT ON ONE K.O. II
AND THE SYNC IN ON THE OTHER.

12.5

SYNC A POCKET OPERATOR TO K.O. II

① CONNECT K.O. II TO THE POCKET OPERATOR

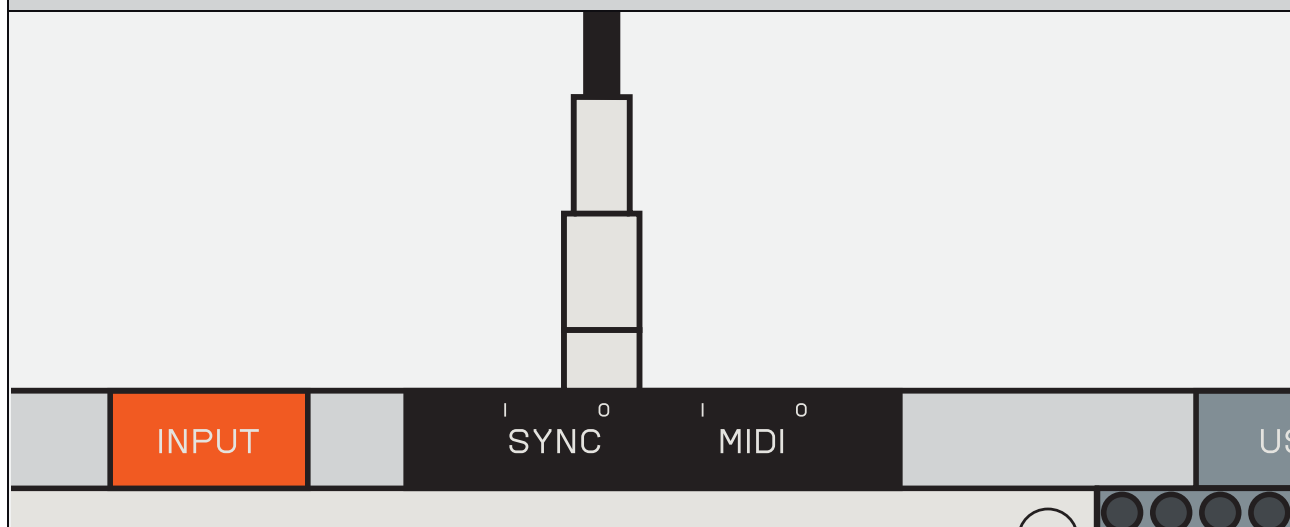

FIRST PLUG ONE END OF A 3.5 MM CABLE INTO THE SYNC OUTPUT ON YOUR K.O. II, THEN THE OTHER END INTO THE INPUT JACK ON THE LEFT SIDE OF YOUR POCKET OPERATOR.

② SET YOUR POCKET OPERATOR TO SYNC 2



PRESS THE FUNCTION BUTTON UNDER THE RIGHTMOST KNOB AND THE BPM BUTTON UNTIL THE SCREEN SHOWS SY2.


THIS WILL LISTEN FOR A SYNC PULSE ON THE INPUT JACK AND OUTPUT STEREO AUDIO FROM THE OUTPUT JACK.

③ ENTER SYSTEM SETTINGS




ENTER SYSTEM SETTINGS BY
PRESSING  AND .

④ NAVIGATE TO SYNC

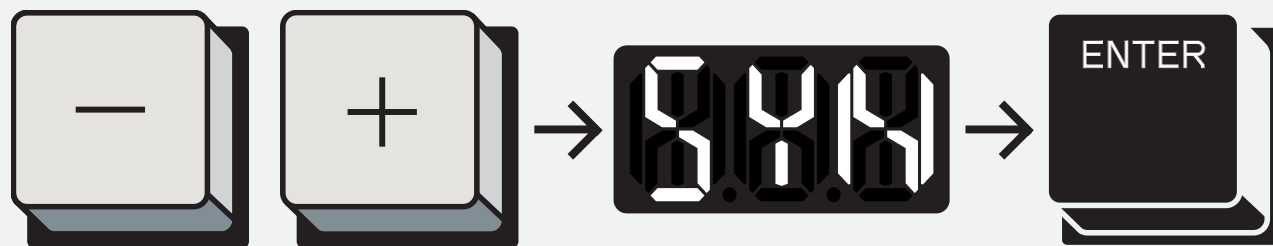


USE  AND  TO NAVIGATE TO
THE SYNC SETTINGS, THEN PRESS
[ENTER] ON THE PADS.

⑤ NAVIGATE TO SYNC > OUT

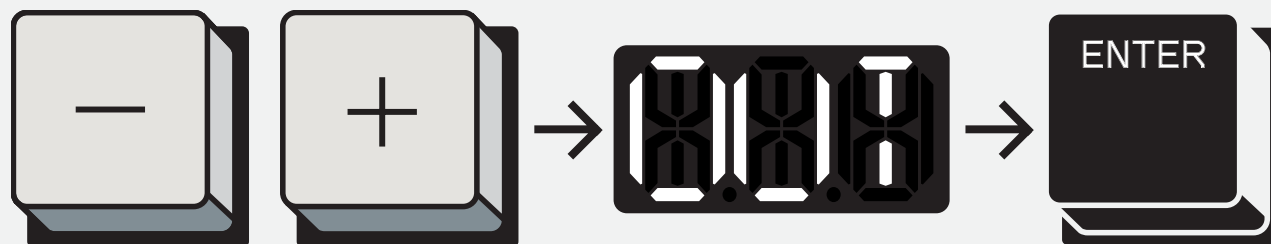


USE [-] AND [+] TO NAVIGATE TO
'OUT', THEN HIT [ENTER].

⑥ NAVIGATE TO SYNC > OUT > 8

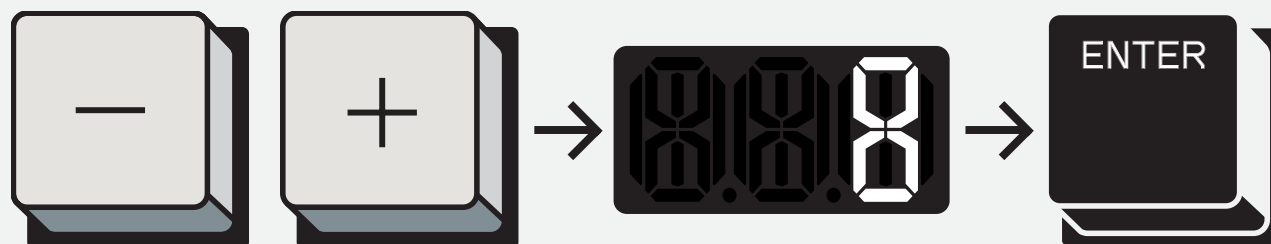

USE [-] AND [+] TO NAVIGATE TO '8',
THEN HIT [ENTER].

⑦ SYNC 8

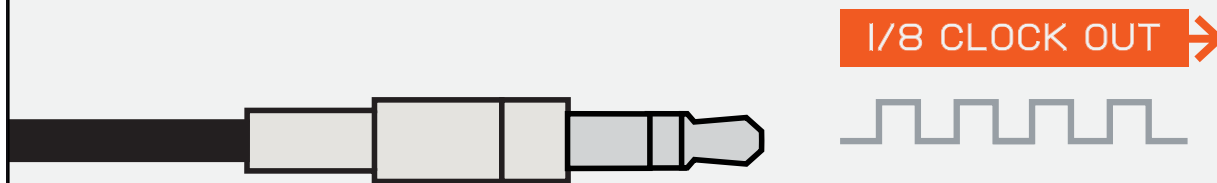

K.O. II WILL NOW SEND A 1/8 CLOCK PULSE ON IT'S SYNC-OUT JACK, MEANING THAT IT CAN SYNC WITH ANY DEVICE THAT RECEIVES 1/8 CLOCK.

⑧ PRESS PLAY




PRESS PLAY ON YOUR POCKET OPERATOR THEN  ON YOUR K.O. II AND THE TWO WILL SYNC TO THE SAME BPM!

12.6

SYNC K.O. II TO A POCKET OPERATOR


① CONNECT YOUR POCKET OPERATOR TO K.O. II

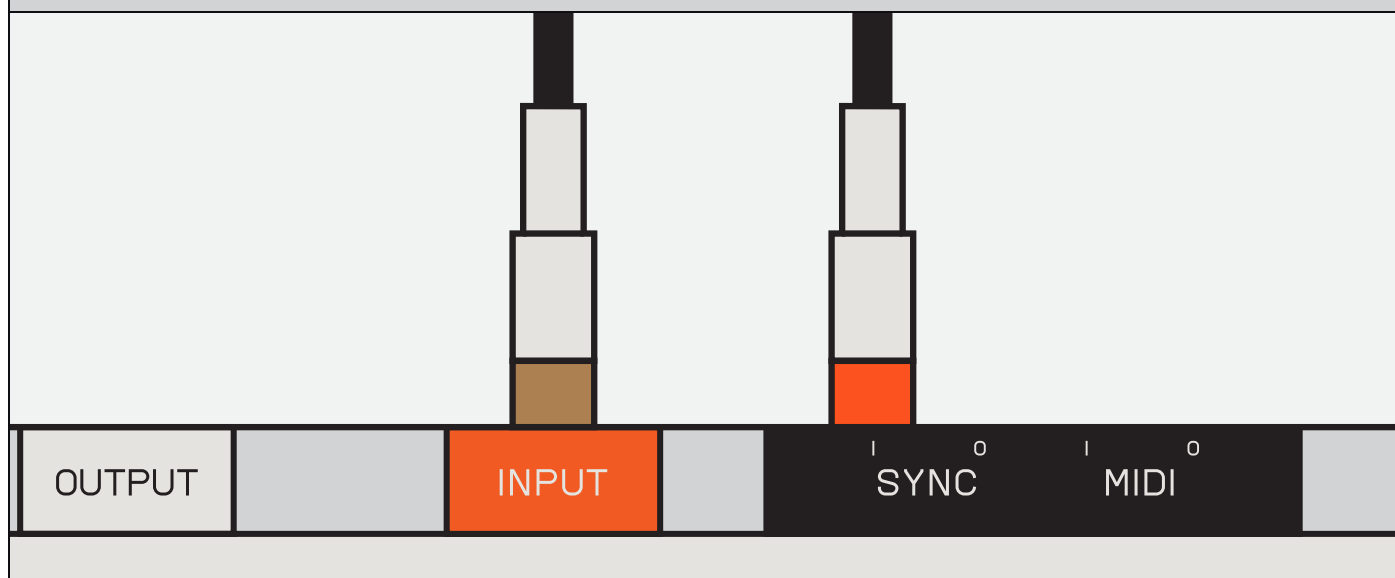

FOR THIS SETUP YOU WILL NEED A 3.5 MM STEREO (TRS) TO 2 X 3.5 MM MONO (TS) CABLE.

CONNECT THE STEREO END TO THE OUTPUT OF THE POCKET OPERATOR THEN PLUG THE RIGHT CHANNEL (RING – RED ON OUR CABLES) INTO THE INPUT JACK ON YOUR K.O. II AND THE LEFT CHANNEL (TIP – BROWN OR WHITE ON OUR CABLES) INTO THE SYNC INPUT JACK ON YOUR K.O. II.

② SET YOUR POCKET OPERATOR TO SYNC I

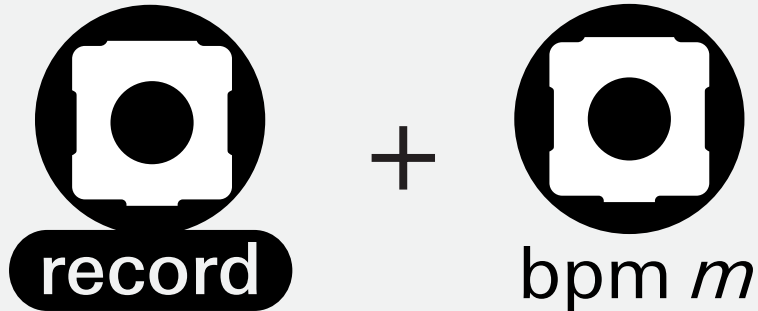

PRESS THE FUNCTION BUTTON UNDER THE RIGHTMOST KNOB AND THE BPM BUTTON UNTIL THE SCREEN SHOWS SYI.


THIS WILL SEND A SYNC PULSE ON THE LEFT CHANNEL (TIP) OF THE OUTPUT JACK.

③ ENTER SYSTEM SETTINGS




ENTER SYSTEM SETTINGS BY PRESSING **SHIFT** AND **ERASE**.

④ NAVIGATE TO SYNC

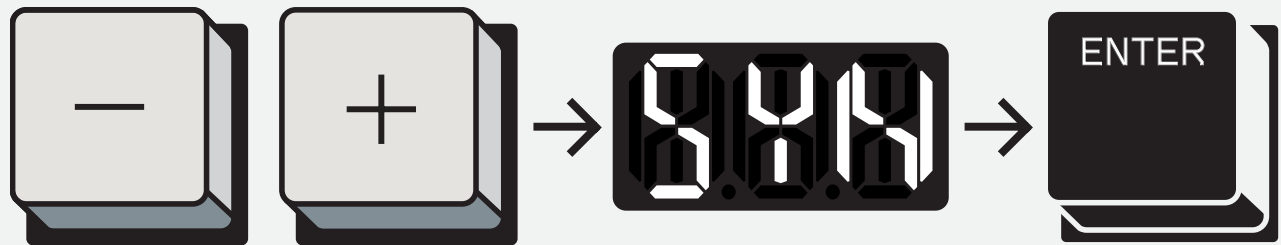


USE [-] AND [+] TO NAVIGATE TO THE SYNC SETTINGS, THEN PRESS [ENTER] ON THE PADS.

⑤ NAVIGATE TO SYNC > IN

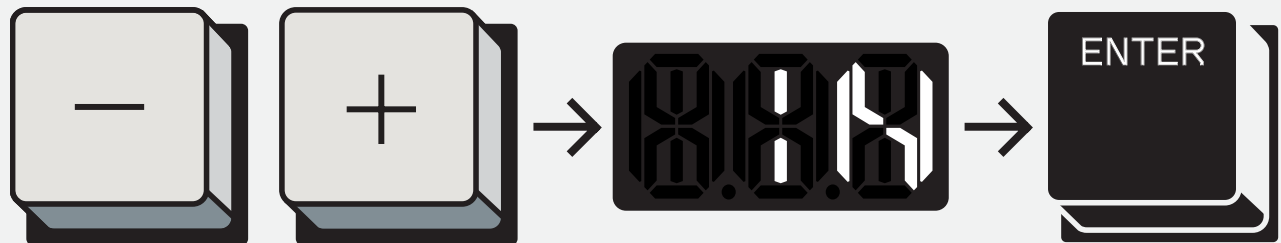


USE [-] AND [+] TO NAVIGATE TO IN', THEN HIT [ENTER].

⑥ NAVIGATE TO SYNC > IN > 8

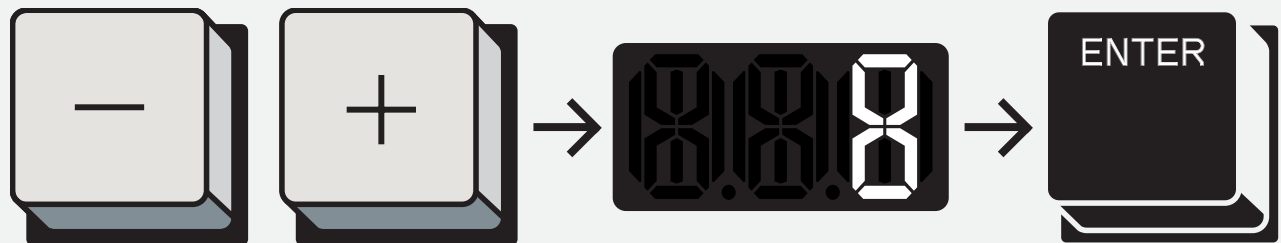

USE $\boxed{-}$ AND $\boxed{+}$ TO NAVIGATE TO 8',
THEN HIT [ENTER].

⑦ SYNC 8

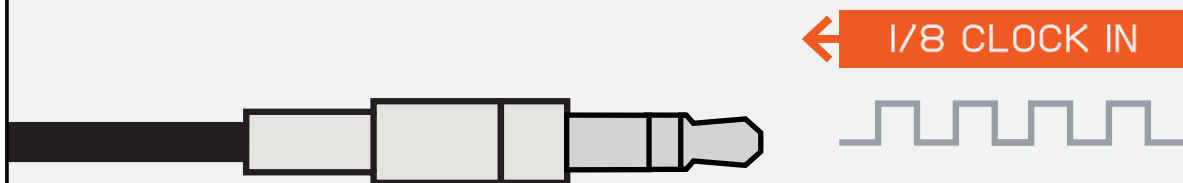

K.O. II WILL NOW LISTEN FOR A 1/8
CLOCK PULSE ON IT'S SYNC-IN
JACK, MEANING THAT IT CAN SYNC
WITH ANY DEVICE THAT SENDS 1/8
CLOCK.

⑧ PRESS PLAY




PRESS PLAY ON YOUR POCKET OPERATOR THEN **PLAY** ON YOUR K.O. II AND THE TWO WILL SYNC TO THE SAME BPM!

PRO-TIP! WITH THIS SETUP YOU CAN ADD THE K.O. II'S INTERNAL EFFECTS TO THE AUDIO COMING FROM THE POCKET OPERATOR!

12.7

CONNECT YOUR K.O. II TO THE DRUM MACHINE

① CONNECT YOUR K.O. II TO THE DRUM MACHINE

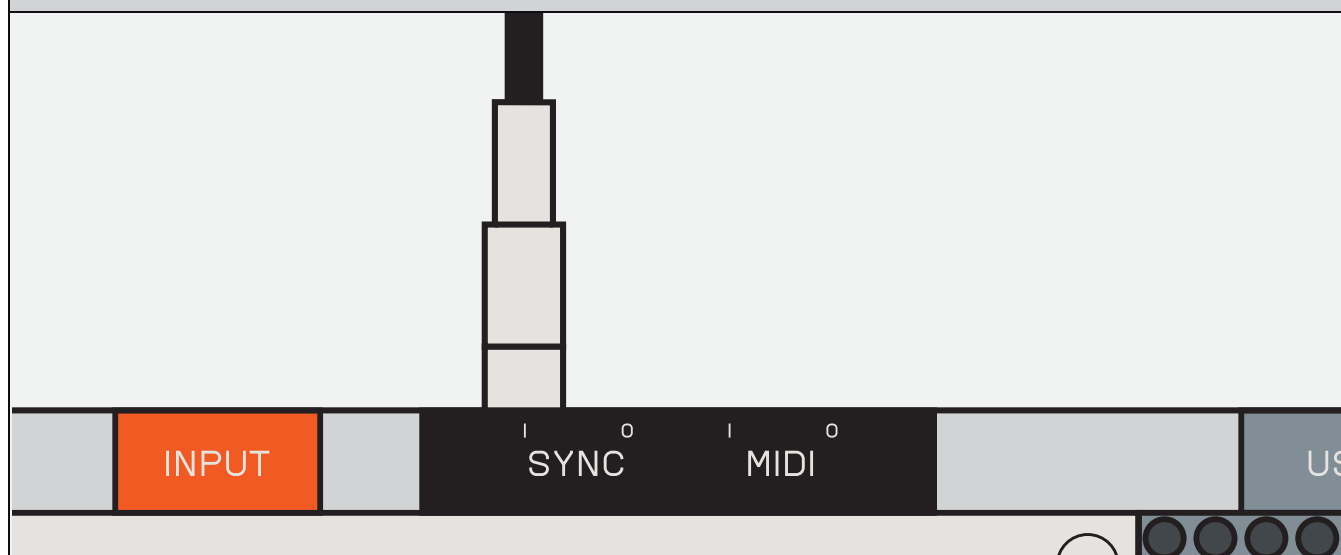

FIRST PLUG ONE END OF A 3.5 MM CABLE INTO THE SYNC OUT ON YOUR VINTAGE DRUM MACHINE, THEN THE OTHER END INTO THE SYNC INPUT ON YOUR K.O. II.


SOME VINTAGE DRUM MACHINES USE A STANDARD CALLED DIN-SYNC THAT REQUIRES AN ADAPTOR OR SPECIAL CABLE.

② ENTER SYSTEM SETTINGS




ENTER SYSTEM SETTINGS BY PRESSING **SHIFT** AND **ERASE**.

③ NAVIGATE TO SYNC

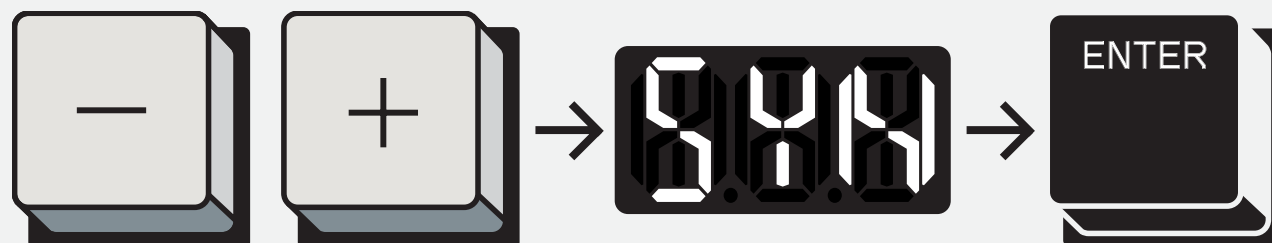


USE [-] AND [+] TO NAVIGATE TO THE SYNC SETTINGS, THEN PRESS [ENTER] ON THE PADS.

④ NAVIGATE TO SYNC > IN

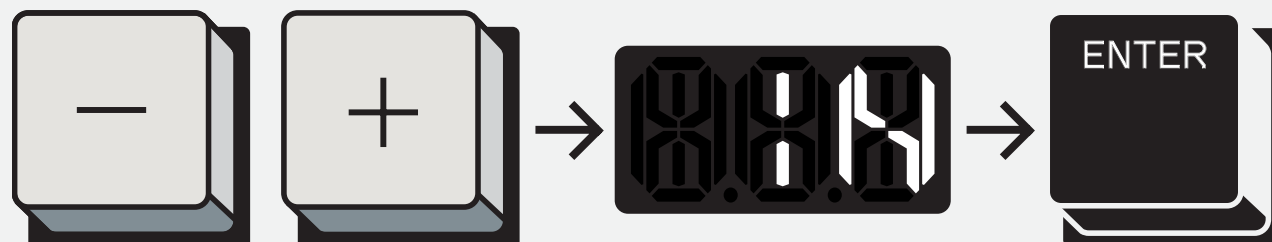


USE [-] AND [+] TO NAVIGATE TO IN', THEN HIT [ENTER].

⑤ NAVIGATE TO SYNC > IN > 24

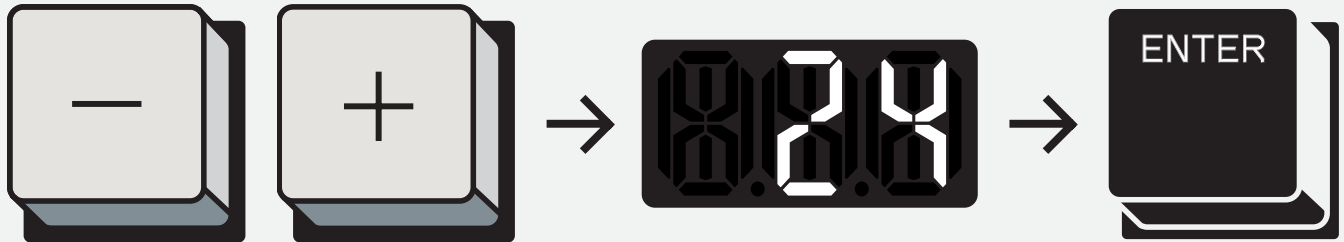

USE  AND  TO NAVIGATE TO '24', THEN HIT [ENTER]

⑥ SYNC 24

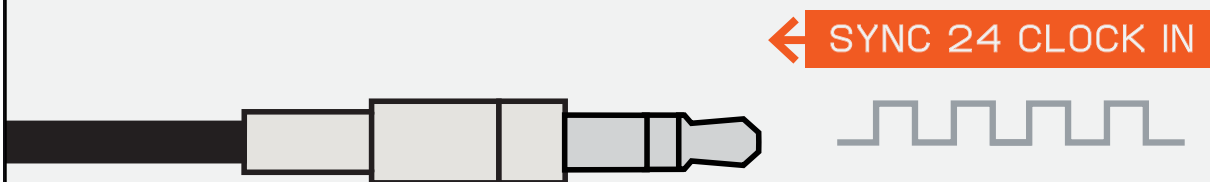


K.O. II WILL NOW LISTEN FOR A SYNC24 CLOCK PULSE ON IT'S SYNC-IN JACK, MEANING THAT IT CAN SYNC WITH ANY DEVICE THAT SENDS SYNC24 CLOCK.

⑦ PRESS PLAY!




PRESS PLAY ON YOUR DRUM MACHINE AND K.O. II  AT THE SAME TIME AND SYNC TO THE SAME BPM!

⑧ SYNC OUT TO THE DRUM MACHINE

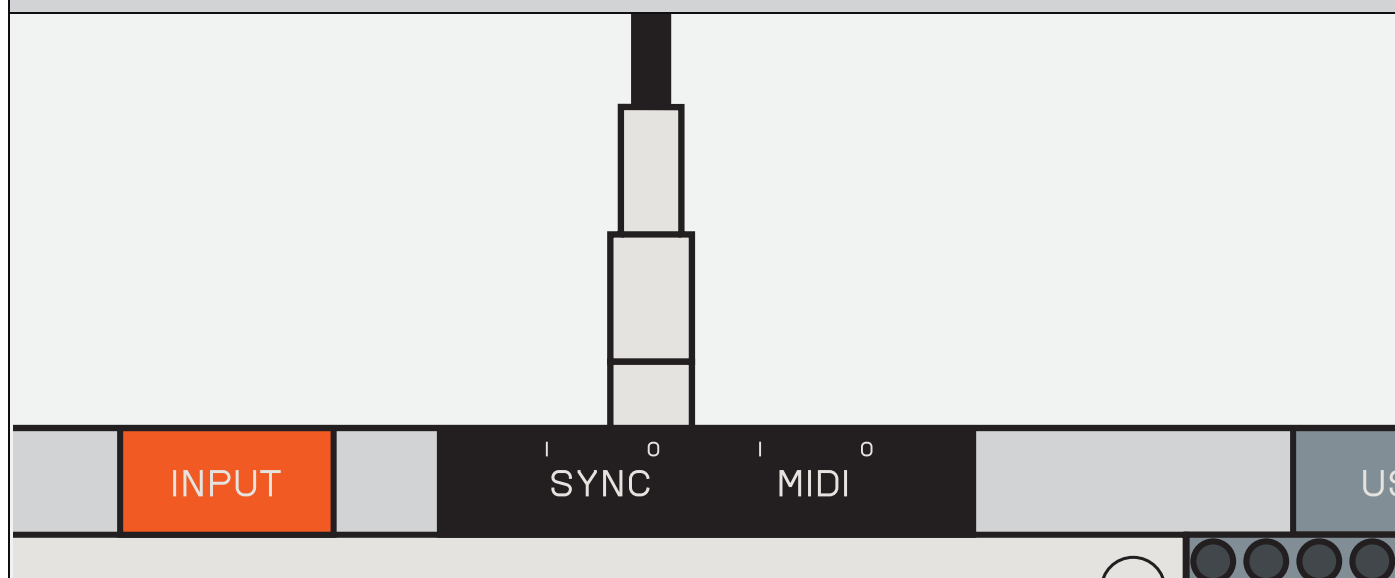

FOLLOW THE SAME STEPS AS BEFORE BUT INSTEAD CONNECT THE K.O. II'S SYNC OUT TO THE SYNC-IN OF YOUR DRUM MACHINE THEN NAVIGATE TO SYNC > OUT > 24.


① GET STARTED!

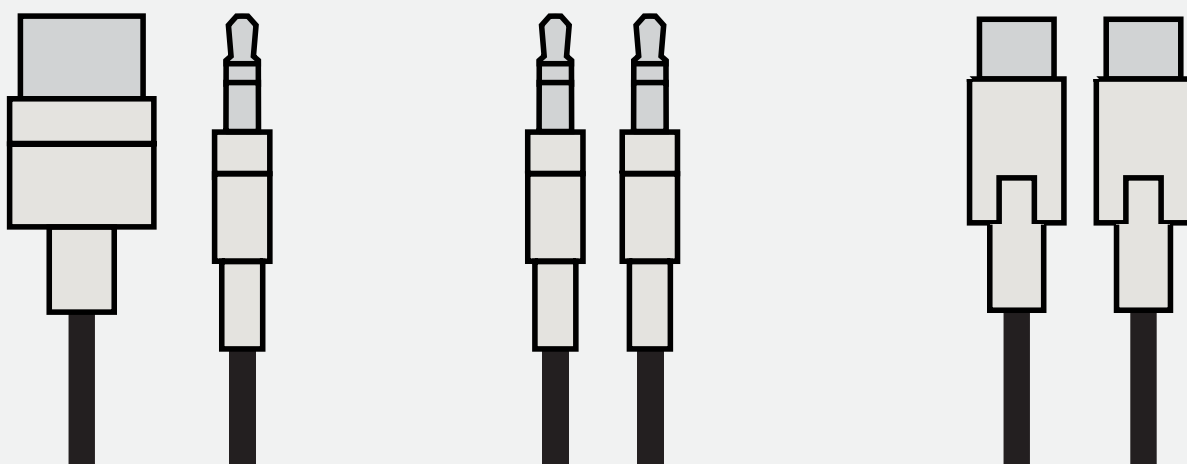

FOR THIS SETUP, DEPENDING ON YOUR MIDI KEYBOARD YOU MAY NEED A 3.5 MM STEREO (TRS) TO MIDI DIN CABLE. SOME MIDI KEYBOARDS HAVE TRS MIDI AND THUS A 3.5 MM TRS CABLE CAN BE USED BETWEEN THE KEYBOARD AND THE K.O. II.


FOR USB MIDI KEYBOARDS YOU WILL NEED A MIDI HOST (THIS IS TYPICALLY A COMPUTER CONNECTED OVER USB-C OR A DEDICATED MIDI HOST BOX) BETWEEN THE K.O. II AND THE MIDI KEYBOARD.

② CONNECT YOUR MIDI KEYBOARD

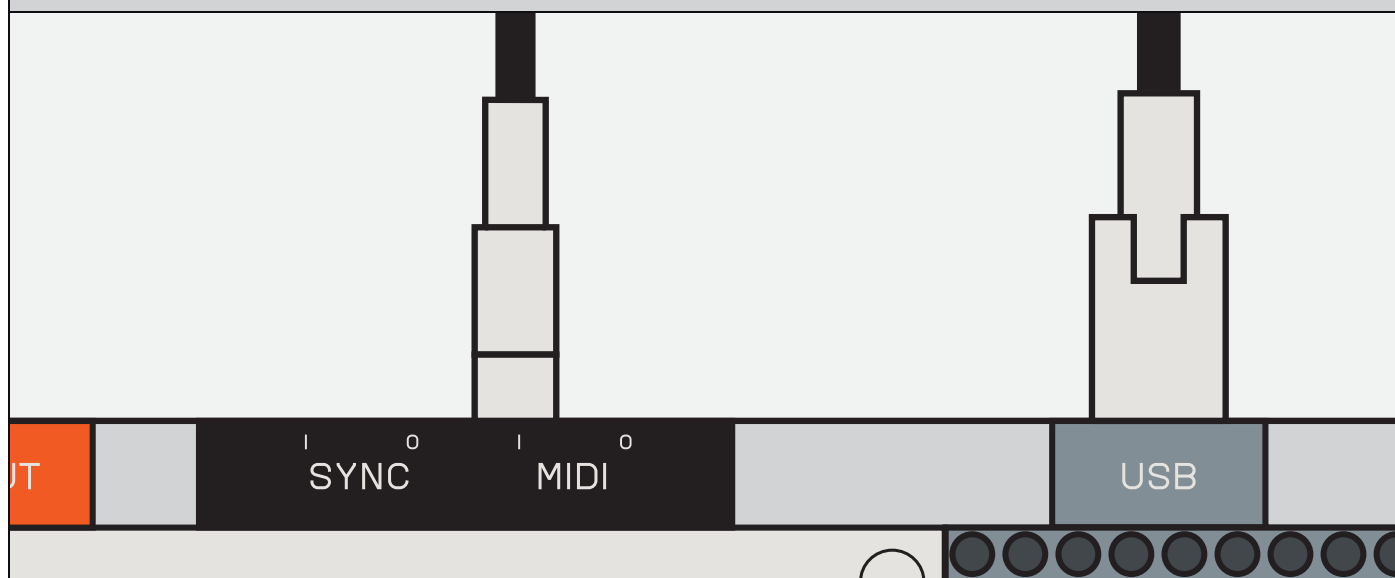

ONCE YOU HAVE YOUR MIDI KEYBOARD CONNECTED, K.O. II WILL DETECT ANY NOTES AND LIGHT UP THE MIDI OR USB ICON (DEPENDING ON WHAT INPUT IS USED) ON THE SCREEN.

③ PLAY THE PADS WITH THE KEYBOARD!

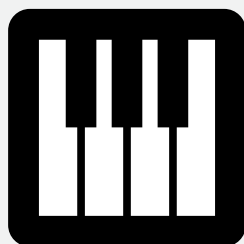

NOW, ANY NOTES YOU PLAY ON THE KEYBOARD WILL TRIGGER THE PADS ON K.O. II!

④ PLAY ONE PAD ACROSS THE KEYBOARD!




KEYS

IF YOU WANT TO PLAY ONE PAD
TRANSPosed ACROSS THE
KEYBOARD THEN JUST PRESS

KEYS !


① GET STARTED!

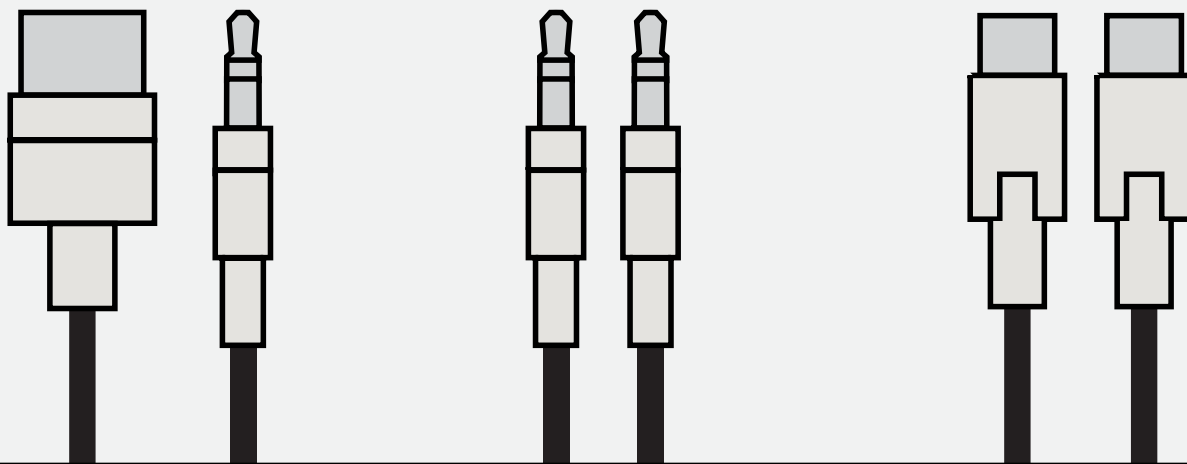

FOR THIS SETUP, DEPENDING ON YOUR MIDI DEVICE YOU MAY NEED A 3.5 MM STEREO (TRS) TO MIDI DIN CABLE.

SOME MIDI DEVICES HAVE TRS MIDI AND THUS A 3.5 MM TRS CABLE CAN BE USED. ALTERNATIVELY FOR USB MIDI DEVICES A USB-C CABLE CAN BE USED.

② CONNECT YOUR MIDI DEVICE

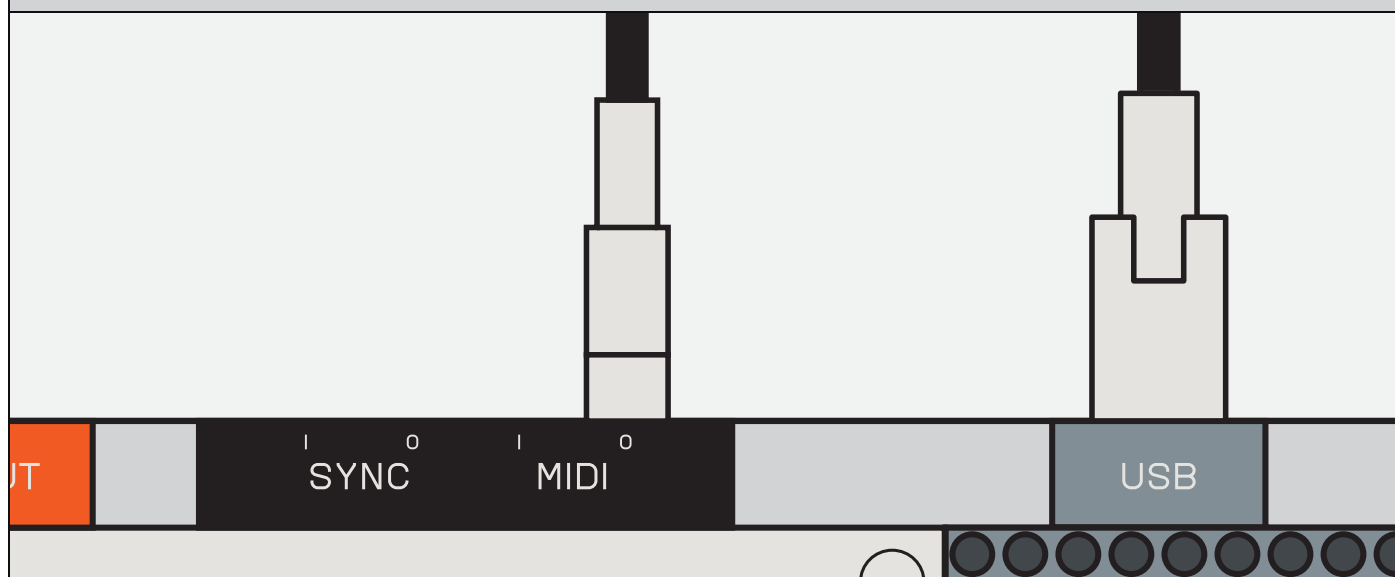


ONCE YOU HAVE YOUR MIDI DEVICE CONNECTED, K.O.II WILL BE ABLE TO SEND MIDI NOTES TO IT.

③ SET A PAD AS A MIDI CHANNEL



PRESS **SHIFT** AND **SOUND** TO ENTER SOUND EDIT MODE.

④ SET A PAD AS A MIDI CHANNEL

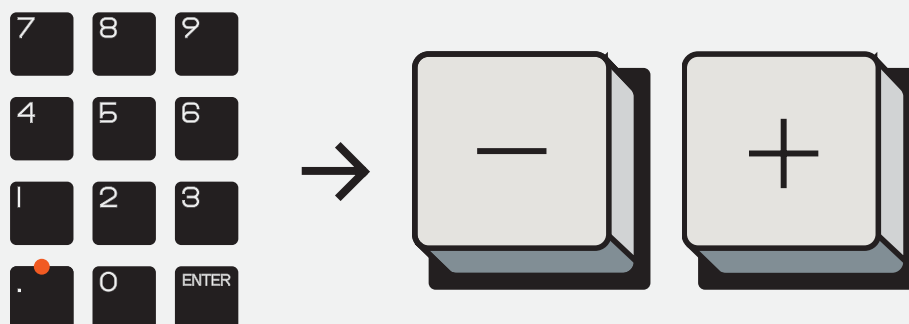

SELECT A PAD, THEN NAVIGATE TO THE PAD'S MIDI SETTINGS USING [-] AND [+].


PRO-TIP! SETTING THE VALUE OF A PAD WHEN HOLDING **SOUND** TO "000" WILL CREATE AN EMPTY PAD THAT CAN HOLD MIDI WITHOUT STEALING ANY VOICES.

⑤ CHANGE MIDI CHANNEL




USE THE **x** KNOB TO CHANGE THE MIDI CHANNEL THAT THE PAD WILL SEND TO.

⑥ CHANGE MIDI ROOT NOTE

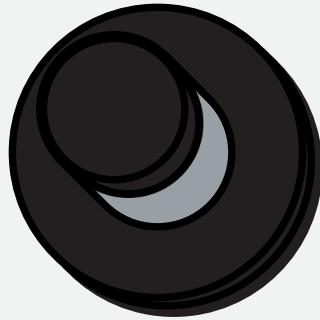


USE THE **Y** KNOB TO CHANGE THE ROOT NOTE OF THE MIDI NOTES, THIS ALLOWS YOU TO SYNC YOUR MIDI TO THE ROOT NOTE OF YOUR SAMPLE.

⑦ DONE!

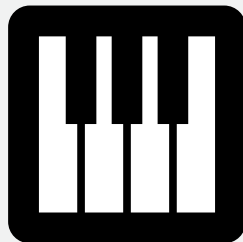

NOW, ANY NOTES YOU PLAY OR SEQUENCE ON THAT PAD WILL SEND MIDI TO THE CHOSEN CHANNEL!

⑧ BONUS: SEND OR RECEIVE MIDI CLOCK

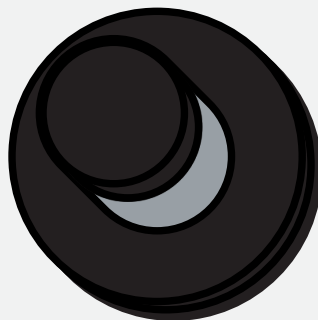

TO SEND OR RECEIVE CLOCK TO OR FROM THE CONNECTED DEVICES GO TO SYSTEM SETTINGS BY PRESSING **SHIFT** AND **ERASE** THEN NAVIGATE TO MIDI > CLOCK AND CHOOSE FROM OFF, ON OR OUT.

① SELECT A SOUND TO SAMPLE



A dark rectangular button with rounded corners and a white border. The word "SOUND" is written in white capital letters in the center. A white shadow is visible to the right of the button, giving it a 3D effect.

PRESS **SOUND** THEN PRESS A PAD
AND SELECT A SOUND FROM THE
SOUND LIBRARY.

② ENABLE KEYS MODE




A dark rectangular button with rounded corners and a white border. The word "MAIN" is written in white capital letters in the center. A white shadow is visible to the right of the button, giving it a 3D effect.



A dark rectangular button with rounded corners and a white border. The word "KEYS" is written in white capital letters in the center. A white shadow is visible to the right of the button, giving it a 3D effect.


PRESS **MAIN** TO RETURN TO THE
MAIN SCREEN. SELECT THE PAD
AND THEN PRESS **KEYS** TO
ACTIVATE KEYS MODE.

③ PRESS SAMPLE

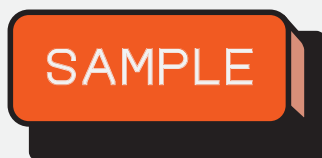

PRESS **SAMPLE** TO ENTER THE SAMPLER.

④ SELECT RESAMPLING

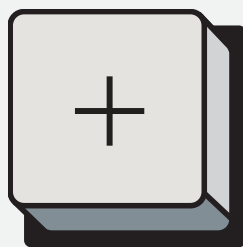


PRESS **+** TO SELECT RESAMPLING AS THE SOUND SOURCE FOR SAMPLING.

⑤ SELECT A GROUP




PRESS A GROUP PAD TO CHOOSE
WHICH GROUP TO SAMPLE TO.

⑥ START HANDS FREE SAMPLING

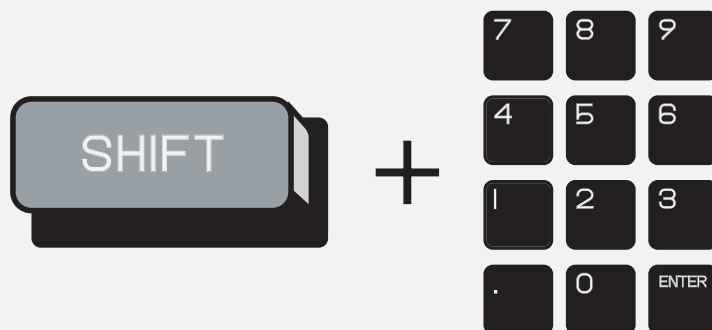

PRESS **SHIFT** AND A PAD TO START
HANDS FREE SAMPLING ON THAT
PAD.

⑦ REOPEN THE GROUP WITH THE SAMPLE

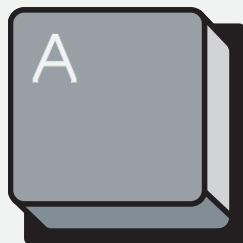

GO BACK TO THE GROUP WITH THE
SAMPLE YOU WISH TO RESAMPLE.

⑧ PLAY THE CHORD



PLAY THE CHORD YOU WISH TO
RECORD ON THE PADS.

⑨ STOP RECORDING

SAMPLE

PRESS **SAMPLE** TO STOP THE
RECORDING.

⑩ DONE!



YOU WILL NOW HAVE A CHORD THAT
HAS BEEN RESAMPLED TO
ANOTHER GROUP'S PAD!

SYSTEM LETS YOU CONFIGURE STUFF LIKE PAD-VELOCITY OR HOW YOUR MIDI AND SYNC PORTS BEHAVE. FOR QUICK ACCESS, YOU CAN LEARN THE NUMBERS, LIKE TYPING 30I AND ENTER TO TURN VELOCITY ON. NOW YOU'RE IN EXPERT MODE!

SYSTEM SETTINGS



SYSTEM



TO CUSTOMIZE THE BEHAVIOR OF
YOUR K.O. II PRESS  AND 
TO ACCESS SYSTEM SETTINGS.

NAVIGATE


SYSTEM

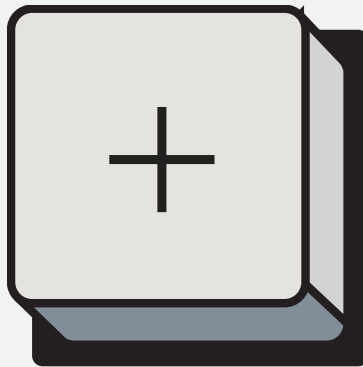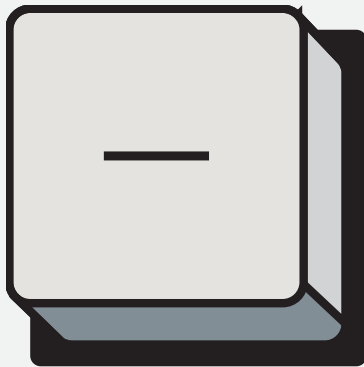

PRESS  OR  TO NAVIGATE
THROUGH THE SETTINGS, AND THEN
ENTER TO SELECT.

ENTER

SYSTEM

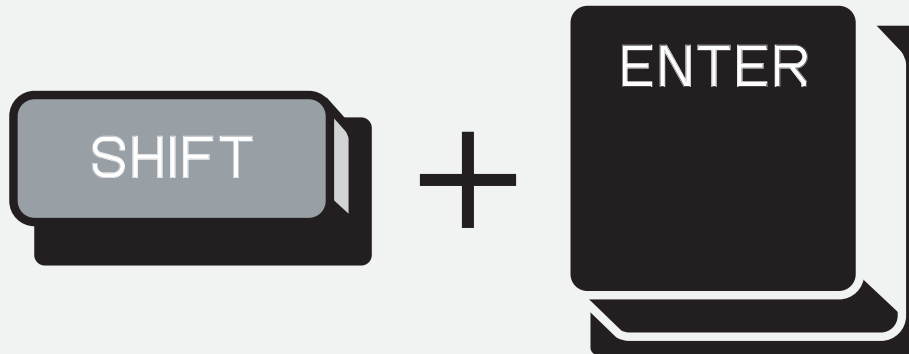

TO NAVIGATE BACK TO THE PREVIOUS PAGE YOU CAN PRESS  AND ENTER.

ALTERNATIVELY YOU CAN ALSO USE THE FOLLOWING CODES TO DIRECTLY ACCESS THE SETTING ONCE IN SYSTEM SETTINGS.

CODE	PATH	SETTING
I00	MID → CLK → OFF	MIDI CLOCK OFF (DEFAULT)
I01	MID → CLK → IN	MIDI CLOCK IN (RECEIVE ONLY)
I02	MID → CLK → OUT	MIDI CLOCK OUT (SEND ONLY)
I10	MID → CHN → ALL	RECEIVE ALL CHANNELS, SEND ON MIDI CHANNEL 1.
I11	MID → CHN → CH.1	RECEIVE AND SEND ON MIDI CHANNEL 1
I12	MID → CHN → CH.2	RECEIVE AND SEND ON MIDI CHANNEL 2
I13	MID → CHN → CH.3	RECEIVE AND SEND ON MIDI CHANNEL 3
I14	MID → CHN → CH.4	RECEIVE AND SEND ON MIDI CHANNEL 4
I15	MID → CHN → CH.5	RECEIVE AND SEND ON MIDI CHANNEL 5
I16	MID → CHN → CH.6	RECEIVE AND SEND ON MIDI CHANNEL 6
I17	MID → CHN → CH.7	RECEIVE AND SEND ON MIDI CHANNEL 7
I18	MID → CHN → CH.8	RECEIVE AND SEND ON MIDI CHANNEL 8
I19	MID → CHN → CH.9	RECEIVE AND SEND ON MIDI CHANNEL 9
I20	MID → CHN → CH.10	RECEIVE AND SEND ON MIDI CHANNEL 10
I21	MID → CHN → CH.11	RECEIVE AND SEND ON MIDI CHANNEL 11
I22	MID → CHN → CH.12	RECEIVE AND SEND ON MIDI CHANNEL 12
I23	MID → CHN → CH.13	RECEIVE AND SEND ON MIDI CHANNEL 13
I24	MID → CHN → CH.14	RECEIVE AND SEND ON MIDI CHANNEL 14
I25	MID → CHN → CH.15	RECEIVE AND SEND ON MIDI CHANNEL 15
I26	MID → CHN → CH.16	RECEIVE AND SEND ON MIDI CHANNEL 16
I30	MID → THR → OFF	DISABLE MIDI THRU
I31	MID → THR → ON	ENABLE MIDI THRU (FORWARDS MIDI SIGNALS, IN→ OUT)
I40	MID → P.CH → OFF	IGNORE MIDI PROGRAM CHANGE MESSAGES (DEFAULT)
I41	MID → P.CH → ON	MIDI PROGRAM CHANGE MESSAGES CHANGE SOUND

CODE	PATH	SETTING
200	SYN → IN → 8	SYNC IN RATE 1/8TH NOTE
201	SYN → IN → 16	SYNC IN RATE 1/16TH NOTE (DEFAULT)
202	SYN → IN → 24	SYNC IN RATE 24 PULSES PER QUARTER NOTE
210	SYN → OUT → 8	SYNC OUT RATE 1/8TH NOTE
211	SYN → OUT → 16	SYNC OUT RATE 1/16TH NOTE (DEFAULT)
212	SYN → OUT → 24	SYNC OUT RATE 24 PULSES PER QUARTER NOTE
300	PAD → VEL → OFF	PAD VELOCITY OFF (DEFAULT)
301	PAD → VEL → HI	PAD VELOCITY HIGH. PLAY WITH A SOFT TOUCH
302	PAD → VEL → LO	PAD VELOCITY LOW. FOR VIGOROUS PLAY STYLES
310	PAD → SCA → 12T	12 TONE EQUAL TEMPERAMENT (DEFAULT)
311	PAD → SCA → MAJ	MAJOR (IONIAN MODE)
312	PAD → SCA → MIN	MINOR (AEOLIAN MODE)
313	PAD → SCA → DOR	DORIAN MODE
314	PAD → SCA → PHR	PHR PHRYGIAN MODE
315	PAD → SCA → LYD	LYD LYDIAN MODE
316	PAD → SCA → MIX	MIX MIXOLYDIAN MODE
317	PAD → SCA → LOC	LOCRIAN MODE
318	PAD → SCA → MA.P	MAJOR PENTATONIC
319	PAD → SCA → MI.P	MINOR PENTATONIC
320	PAD → KEY → C	SCALE KEY C (DEFAULT)
321	PAD → KEY → C#	SCALE KEY C#
322	PAD → KEY → D	SCALE KEY D
323	PAD → KEY → D#	SCALE KEY D#
324	PAD → KEY → E	SCALE KEY E
325	PAD → KEY → F	SCALE KEY F
326	PAD → KEY → F#	SCALE KEY F#
327	PAD → KEY → G	SCALE KEY G

CODE	PATH	SETTING
328	PAD → KEY → G#	SCALE KEY G#
329	PAD → KEY → A	SCALE KEY A
330	PAD → KEY → A#	SCALE KEY A#
331	PAD → KEY → B	SCALE KEY B
340	PAD → AUD → ON	ENABLE SAMPLE AUDITIONING WHEN TWEAKING VALUES
341	PAD → AUD → OFF	DISABLE SAMPLE AUDITIONING WHEN TWEAKING VALUES
400	SEQ → MET → ON	ENABLE METRONOME AT RECORD+PLAY (DEFAULT)
401	SEQ → MET → REC	ENABLE METRONOME AT RECORD ONLY
402	SEQ → MET → CNT	ENABLE METRONOME AT COUNT-IN ONLY
410	SEQ → SCN → TIC	CHANGE SCENE IMMEDIATELY (DEFAULT)
411	SEQ → SCN → BAR	SYNC SCENE CHANGES WITH BAR END
412	SEQ → SCN → PTN	SYNC SCENE CHANGES WITH PATTERN END

14.1 MIDI IMPLEMENTATION CHART

FUNCTION		TRANSMITTED	RECOGNISED	NOTES
BASIC CHANNEL	DEFAULT	I	I	MEMORIZED
	CHANGED	I-16	I-16	
MODE	DEFAULT	MODE I	MODE I	
	MESSAGES	X	X	
	ALTERED	—	—	
MODE		36-47 (GROUP A) 48-59 (GROUP B) 60-71 (GROUP C) 72-83 (GROUP D) KEYS MODE: 0-127	36-47 (GROUP A) 48-59 (GROUP B) 60-71 (GROUP C) 72-83 (GROUP D) KEYS MODE: 0-127	
	TRUE VOICE	—	—	
VELOCITY	NOTE ON	✓	✓	
	NOTE OFF	X	X	
AFTERTOUCH	KEYS	X	X	
	CHANNELS	X	X	
PITCH BEND		X	✓	
CONTROL CHANGE	CC#0,32	✓	✓	BANK SELECT
	CC#I	X	✓	MOD WHEEL
PROGRAM CHANGE		✓ [0-127]	✓ [0-127]	USE BANK SELECT TO REACH ALL SOUNDS 1-999

14.1 MIDI IMPLEMENTATION CHART

FUNCTION		TRANSMITTED	RECOGNISED	NOTES
SYSTEM EXCLUSIVE		✓	✓	IDENTITY REQUEST+REPLY, PROPRIETARY MESSAGES
SYSTEM COMMON	SONG POSITION	✓	✓	
	SONG SELECT	X	X	
	TUNE REQUEST	X	X	
SYSTEM REALTIME	CLOCK	✓	✓	
	COMMANDS	✓	✓	
AUX MESSAGES	ALL SOUND OFF	✓	X	
	RESET ALL CONTROLLERS	X	X	
	LOCAL ON/OFF	X	X	
	ALL NOTES OFF	X	X	
	ACTIVE SENSING	✓	X	
	SYSTEM RESET	X	X	

MODE 1: OMNI ON, POLY
 MODE 2: OMNI ON, MONO
 MODE 3: OMNI OFF, POLY
 MODE 4: OMNI OFF, MONO

14.2 MIDI NOTE MAP


WHEN USING AN EXTERNAL MIDI DEVICE SUCH AS A KEYBOARD OR DRUM PAD, YOU CAN USE THE TABLE BELOW AS A MIDI NOTE REFERENCE FOR TRIGGERING SPECIFIC PADS ON EACH GROUP. IF YOU ARE IN KEYS MODE, THIS WILL CHANGE TO A CHROMATIC KEYBOARD. MAKE SURE THAT YOU ARE ADDRESSING THE CORRECT MIDI CHANNEL, THIS CAN BE SET IN SOUND EDIT'S MIDI PAGE AS WELL AS THE SYSTEM SETTINGS.

MIDI NOTE NUMBER	NOTE NAME	GROUP	PAD
36	C2	A	.
37	C#2	A	0
38	D2	A	ENTER
39	D#2	A	1
40	E2	A	2
41	F2	A	3
42	F#2	A	4
43	G2	A	5
44	G#2	A	6
45	A2	A	7
46	A#2	A	8
47	B2	A	9
48	C3	B	.
49	C#3	B	0
50	D3	B	ENTER
51	D#3	B	1
52	E3	B	2
53	F3	B	3

MIDI NOTE NUMBER	NOTE NAME	GROUP	PAD
54	F#3	B	4
55	G3	B	5
56	G#3	B	6
57	A3	B	7
58	A#3	B	8
59	B3	B	9
60	C4	C	.
61	C#4	C	0
62	D4	C	ENTER
63	D#4	C	1
64	E4	C	2
65	F4	C	3
66	F#4	C	4
67	G4	C	5
68	G#4	C	6
69	A4	C	7
70	A#4	C	8
71	B4	C	9
72	C5	D	.
73	C#5	D	0
74	D5	D	ENTER
75	D#5	D	1
76	E5	D	2
77	F5	D	3
78	F#5	D	4
79	G5	D	5
80	G#5	D	6
81	A5	D	7
82	A#5	D	8
83	B5	D	9

14.3 LOCK MODE

LOCK MODE

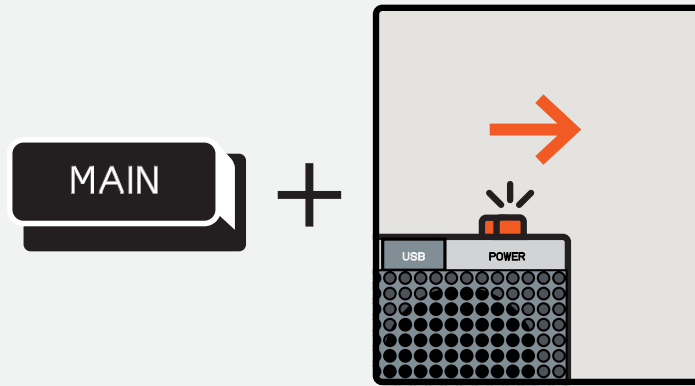

TO PREVENT ANY CHANGES TO PROJECTS, PATTERNS, SCENES, PADS AND SETTINGS YOU CAN USE LOCK MODE.

HOLD **MAIN** ON START UP TO LOCK THE DEVICE.

LOCK MODE



LOK WILL DISPLAY ON THE SCREEN FOR ABOUT 1 SECOND.

ANY CHANGES MADE ON THE DEVICE WILL RESET WHEN THE DEVICE IS RESTARTED.

14.4 ERROR CODES

ERROR CODE	MEANING	SOLUTION
E.01	SRAM ERROR	YOUR UNIT NEEDS TO BE REPAIRED
E.02	FLASH ERROR	YOUR UNIT NEEDS TO BE REPAIRED
E.03	CODEC ERROR	YOUR UNIT NEEDS TO BE REPAIRED
E.04	LFS MOUNT ERROR	FILE-SYSTEM ERROR, <u>FLASH NEEDS TO BE FORMATTED</u>
E.05	SAMPLE_FS ERROR	FILE-SYSTEM ERROR, <u>FLASH NEEDS TO BE FORMATTED</u>

IF YOUR SEGMENT DISPLAY SHOWS A FILE-SYSTEM ERROR CODE IT MEANS THE FILE-SYSTEM NEEDS TO BE FORMATTED.

TO DO THIS, POWER THE DEVICE OFF, THEN HOLD **SHIFT** + **ERASE** AND TURN IT ON.

THIS WILL FORMAT THE DRIVE ERASING ALL SOUNDS AND HELP YOUR DEVICE TO BOOT UP AGAIN BY REMOVING ANY FILES THAT WERE CAUSING ISSUES.

MAKE SURE TO UPDATE THE OS TO OUR LATEST RELEASE AS WE ARE CONSTANTLY FIXING BUGS THAT MAY CAUSE SUCH ISSUES.


15

ERASE DRIVE



WARNING! THIS WILL REMOVE ALL YOUR WORK AS WELL AS ALL FACTORY SOUNDS. ONCE REMOVED FACTORY SOUNDS CAN NOT BE RECOVERED!


ERASE DRIVE

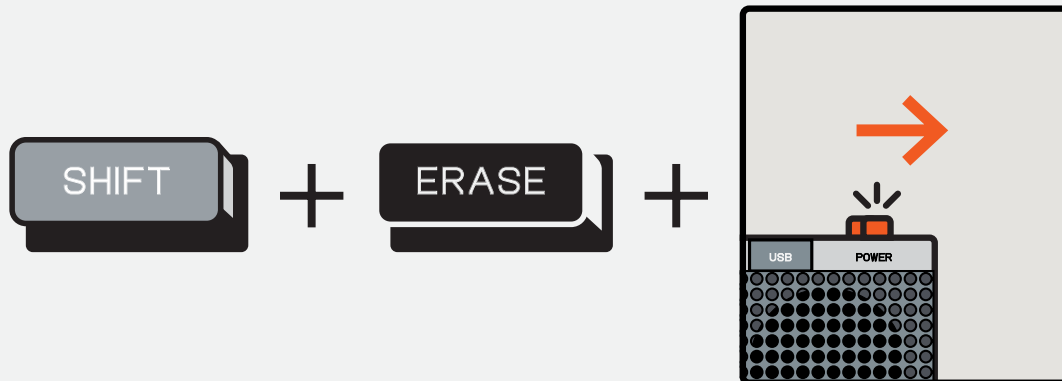

IF YOU WANT TO START FRESH AND REMOVE ALL SAMPLES AND PATTERNS FROM YOUR DEVICE

HOLD **SHIFT** + **ERASE** ON START UP TO FORMAT THE DEVICE.

ERASE DRIVE

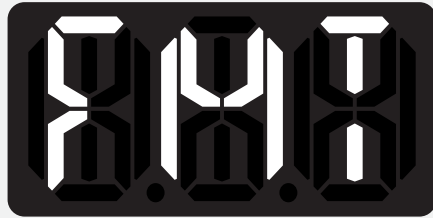

FMT WILL DISPLAY ON THE SCREEN
FOR ABOUT 10 SECONDS

THEN IT WILL START UP AS USUAL
WITH ALL CONTENT REMOVED.

STEREO LINE INPUT

24 BIT

SNR: 96 DBA

IMPEDANCE: 6.5 KOHM

ANALOG GAIN: 0 – 12 DB

MAX LEVEL: 8 DBU, 2.0

VRMS

STEREO HEADPHONE/LINE

OUTPUT:

24 BIT

SNR: 98 DBA

MAX LEVEL: 5 DBU, 1.4

VRMS

MIDI INPUT

MMA COMPLIANT PINOUT

(TYPE A)

OPTO-COUPLED

MIDI OUTPUT

MMA COMPLIANT PINOUT

(TYPE A)

VOLTAGE: 3.3 V

SYNC OUTPUT

TIP: SYNC 8TH, 16TH, 24

PPQN

RING: START/STOP

VOLTAGE: 3.3 V

SYNC INPUT

TIP: SYNC 8TH, 16TH, 24

PPQN

RING: START/STOP

VOLTAGE: 3.3 V

MAX LEVEL: 10 V

INTERNAL

CLOCK/SEQUENCER

RESOLUTION/STEP

RESOLUTION

96 TICKS (PPQN)

K.O. II

サンプラー 64 MB SAMPLER
COMPOSER

BETA TESTER

256K
ALVARO VILLALOBOS
BWEEB
CUCKOO
DEFENSE MECHANISM
DIM13
DJCUVCUV
DOM ADVERB
EMERGING PATTERNS
FLAH
JAVS
LKNRRR
LANE
MATT DONALD
MATTHEW WILLIAMS
MICHAEL HELLQVIST
NICK HOOK
NOISEROCK
SAMPLIK PROST
SEAN HELLFRITSCH
TT BEATS
VVMAN
YELLOW EYES

CONTENT

TEDDY STUART
JERKER EKLUND
VALTER KINBOM
ISAK HEDTJARN
TENGAN
BEN MINTO
BIL BRYANT
NOSAJ THING
THE KOUNT
BYRON THE AQUARIUS
AKEBONO UNLIMITED
MANMADE MASTERING

18. WARNINGS AND WARRANTY

WARNINGS. WARRANTY AND FCC.

TEENAGE ENGINEERING EP-133
MODEL NO: TE032AS001

FCC REGULATORY COMPLIANCE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

ICES STATEMENT

ICES-3 (B) / NMB-3 (B)

WARRANTY AND RETURN POLICY

WARRANTY, RETURNS POLICY AND TERMS AND CONDITIONS CAN BE FOUND [HERE](#)

RECYCLING

ELECTRICAL AND ELECTRONIC EQUIPMENT, PARTS AND BATTERIES MARKED WITH THIS CROSSED-OUT WHEELIE BIN SYMBOL MUST NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTAGE, IT MUST BE COLLECTED AND DISPOSED OF SEPARATELY TO PROTECT THE ENVIRONMENT.



WHAT'S NEW


OS 2.0

RESAMPLING

STACK EFFECTS, MAKE A BEAT FROM A BEAT OR COMBINE SAMPLES, ALL USING THE NEW RESAMPLER.

JUST HIT **SAMPLE** THEN PRESS **+** UNTIL RSP SHOWS ON SCREEN. YOU CAN THEN HOLD **SHIFT**, PRESS A PAD THEN PRESS **PLAY** TO SAMPLE THE LENGTH OF THE CURRENTLY SELECTED PATTERN. YOU CAN EVEN SWITCH GROUPS AFTER YOU'VE ENGAGED HANDS FREE SAMPLING TO SAMPLE SOUNDS FROM ANOTHER GROUP.

LEARN MORE ABOUT RESAMPLING [HERE](#)

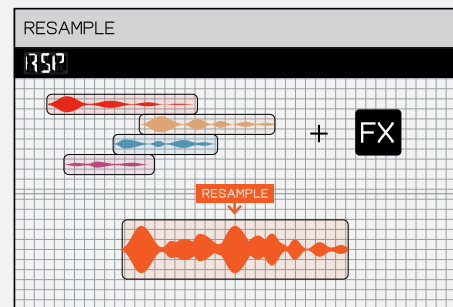


SONG MODE

USE SONG MODE TO CHAIN SCENES TOGETHER.

HOLD MAIN THEN PRESS [ENTER] TO OPEN THE SONG LIST EDITOR, YOU CAN THEN VIEW AND EDIT THE CURRENT SONG POSITION AS WELL AS ADD UP TO 99 DIFFERENT SONG POSITIONS. COMBINING THAT WITH A MAXIMUM PATTERN LENGTH OF 99 BARS THAT MEANS YOU CAN CREATE SONGS AS LONG AS 9,801 BARS! THIS FIGHT MIGHT JUST NEED SOME WRAPS...

LEARN MORE ABOUT SONG MODE [HERE](#)

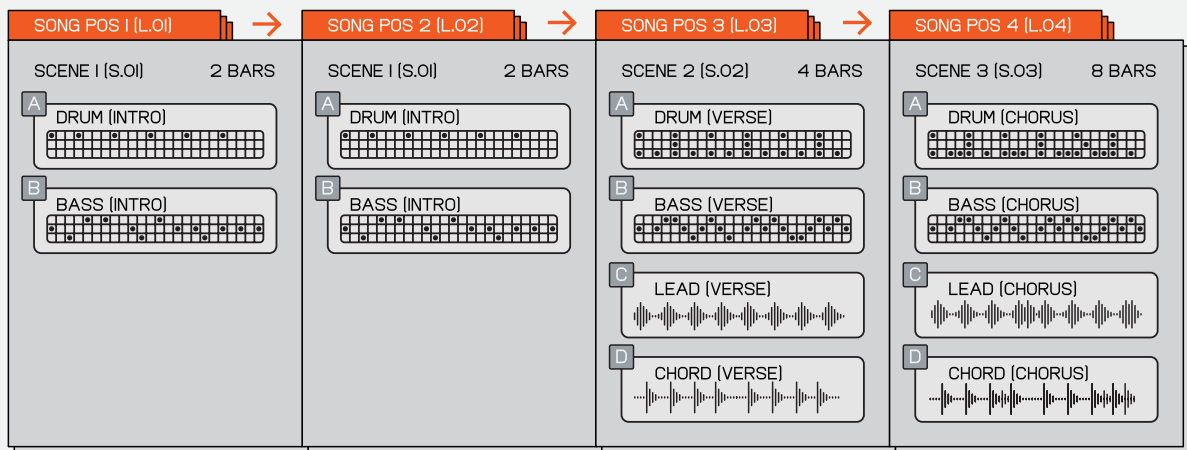

HANDS FREE SAMPLING

SOMETIMES YOU NEED BOTH HANDS TO PLAY AN INSTRUMENT, AND YOU WANT TO SAMPLE IT. USE HANDS FREE SAMPLING AND LET K.O.II HOLD THE BUTTONS FOR YOU.

WHEN SAMPLING HOLD **SHIFT** AND PRESS A PAD TO ENGAGE HANDS FREE SAMPLING. YOU CAN THEN SING, PLAY, SHOUT AND STRUM, K.O.II WILL TAKE CARE OF THE REST. ONCE YOU ARE DONE JUST PRESS SAMPLE AND K.O.II WILL STOP SAMPLING. REMEMBER TO ADJUST YOUR THRESHOLD AND GAIN AND COMBINE HANDS FREE SAMPLING WITH THE NEW RESAMPLING FEATURE SEND YOUR BEAT BACK INTO THE RING.


LEARN MORE ABOUT HANDS FREE SAMPLING [HERE](#)

MIDI SIDECHAIN

KICK AND BASS NOT GETTING ALONG? SIDECHAIN WILL DUCK THE VOLUME OF THE BASS WHEN THE KICK COMES IN.

PRESS **SHIFT** AND **FX** TO OPEN OUTPUT, THEN **+** TO SWITCH TO SIDECHAIN. SELECT THE SIDECHAIN SOURCE BY HOLDING A GROUP PAD AND SELECTING A SOUND ON THE PADS, THEN SELECT THE DESTINATION GROUPS BY HOLDING **SHIFT** AND PRESSING THE GROUP PADS. DIAL IN HOW HARD THEY PUNCH BY ADJUSTING THE LENGTH AND SHAPE WITH **X** AND **Y** RESPECTIVELY.

LEARN MORE ABOUT MIDI SIDECHAIN [HERE](#)

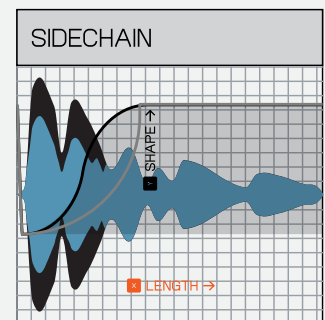

INCREASED POLYPHONY

WITH INCREASED POLYPHONY, K.O.II GOES FROM 12 MONO/6 STEREO SOUNDS TO UP TO 16 MONO AND 12 STEREO SOUNDS.

NO NEED TO PULL YOUR PUNCHES ANYMORE BUT WATCH OUT FOR TIME STRETCHED, STEREO AND HIGH PITCHED SAMPLES AS THEY MAY REDUCE THE POLYPHONY.

LARGER NOTE INTERVALS

STRUGGLING TO LAND YOUR KICKS ON TIME? WHAT ABOUT ADDING ONE BAR LOOPS? TRY OUT THE NEW LARGER NOTE INTERVALS, NOW YOU CAN HIT YOUR TARGET EVERY TIME AND RECORD PERFECT FOUR ON THE FLOORS.

K.O. II NOW SUPPORTS 1/1, 1/2 AND 1/4 TIMING INTERVALS!

BONUS! HOLD **SHIFT** WHILE IN TIMING TO LATCH THE NOTE REPEAT SO K.O. II CAN HIT THE HATS FOR YOU WHILE YOU FOCUS ON THE KICK AND SNARE.

LEARN MORE ABOUT LARGER NOTE INTERVALS [HERE](#)



1/1



1/2



1/4



1/8



1/8T



1/16



1/16T



1/32

MIDI THRU

K.O. II NOW SUPPORTS MIDI THRU SO IT CAN PASS NOTES ALONG TO OTHER MACHINES.

HOLD **SHIFT** AND PRESS **ERASE** TO OPEN THE SYSTEM SETTINGS THEN PRESS **[+]** TO GO TO MID, THEN **[ENTER]**, PRESS **[+]** TWICE TO GO TO THR, THEN **[ENTER]** AGAIN AND THEN SET IT TO ON WITH **[+]** AND **[ENTER]** ONCE MORE. BOOM! NOW ANY INCOMING MIDI MESSAGES WILL BE PASSED ALONG TO MIDI OUT AND USB.

K.O. II ALSO FEATURES A BUNCH OF MIDI IMPROVEMENTS SUCH AS:

A SYSTEM SETTING FOR MIDI IN AND OUT CHANNELS

SENDING AND RECEIVING PROGRAM CHANGE MESSAGES

A NEW MIDI NOTE MAP SO YOU CAN PLAY ANY SOUND ON ANY PAD WITH AN EXTERNAL CONTROLLER

INCOMING PITCH BEND AND MOD WHEEL MESSAGES NOW AFFECT SAMPLE PLAYBACK

PADS NOW BY DEFAULT SEND MIDI NOTES TO THE SYSTEM MIDI CHANNEL

THE SOUND EDIT MIDI CHANNEL NOW CHANGES THE MIDI IN CHANNEL FOR THAT PAD TOO

LEARN ABOUT ALL THE MIDI CHANGES [HERE](#)

EVERYTHING ELSE

AS WELL AS ALL THE HUGE FEATURES WE HAVE ADDED THERE ARE ALSO SMALLER ONES, HERE IS A COMPREHENSIVE LIST OF THE REST.

- **MAIN** + NUMPAD CAN NOW ALWAYS SWITCH TO ANY SCENE 1-99.
- HOLD **SHIFT** + **SOUND** TWO SECONDS TO SAVE SOUND EDITS.
- CHANGES ARE NOW SAVED TO DISK ALSO DURING SAMPLE PLAYBACK. THIS MEANS WE NO LONGER NEED THE BRAIN ICON TO SHOW UNSAVED CHANGES.
- IN MAIN MODE, **[-]** AND **[+]** NOW MOVES BY STEPS EVEN AFTER BAR 10. SINCE A POSITION LIKE 10.1.2 WILL NOT FIT ON THE DISPLAY, STEPS ARE SHOWN WITH THE TIC DISPLAY.
- SOUND PITCH SETTING IS NOW STEP-LESS.
- SNAP TO ZERO CROSSING WHEN CHANGING TRIM IN ON MONO SOUNDS.
- SYNC LIVE PROJECT SWITCH TO BAR END.
- MADE SWING A PROJECT SETTING INSTEAD OF A GLOBAL SETTING.
- SYSTEM SETTING 412: SEQ/SCN/PTN. SYNC SCENE CHANGES WITH PATTERN END.

UPDATE YOUR DEVICE [HERE](#)

