



OPTICAL MICROMETER

RF651 Series

User's manual

22, Logoisky tract, Minsk
220090, Republic of Belarus
tel/fax: +375 17 281 36 57
info@riftek.com
www.riftek.com

Contents

1.	Safety precautions.....	4
2.	CE compliance.....	4
3.	Laser safety.....	4
4.	General information.....	4
5.	Basic technical data.....	5
6.	Example of item designation when ordering.....	5
7.	Structure and operating principle.....	6
8.	Options for use of the device.....	7
8.1.	One-coordinate systems.....	7
8.2.	Multi-axis systems	7
9.	Dimensions and mounting.....	8
10.	Connection.....	9
10.1.	Micrometers without logical outputs	9
10.2.	Micrometers with logical outputs	9
10.3.	Micrometers with Ethernet interface.....	10
10.4.	Micrometers with cable gland and cables	11
10.5.	Ethernet cable.....	12
11.	Configuration parameters.....	12
11.1.	Parameter of synchronization.....	12
11.2.	Sampling period.....	12
11.3.	Method of results averaging.....	13
11.4.	Number of averaged values.....	13
11.5.	Measurement mode.....	13
11.6.	Borders and polarity.....	13
11.7.	Numbers of borders under control.....	14
11.8.	Nominal value and tolerances.....	14
11.9.	Logical outputs operation modes.....	14
11.10.	Factory parameters by default.....	14
12.	Description of RS232 and RS485 interfaces.....	15
12.1.	RS232 port.....	15
12.2.	RS485 port.....	15
12.3.	Modes of data transfer.....	15
12.4.	Configuration parameters.....	15
12.4.1.	Rate of data transfer through a serial port.....	15
12.4.2.	Net address	15
12.4.3.	Factory parameters table.....	15
12.5.	Interfacing protocol.....	16
12.5.1.	Serial data transmission format.....	16
12.5.2.	Communication sessions types.....	16
12.5.3.	Request	16
12.5.4.	Message, MSG.....	16
12.5.5.	Answer	16
12.5.6.	Data stream.....	17
12.5.7.	Request codes and list of parameters.....	17
13.	Analog outputs.....	17
13.1.	Modes of data transfer.....	17
13.2.	Current output 4...20 mA.....	17
13.3.	Voltage output 0...10 V.....	17
13.4.	Configuration parameters.....	18
13.4.1.	Range of the analog output.....	18
13.4.2.	Analog output operation mode.....	18
14.	Request codes and a list of parameters.....	18

14.1.	Request codes.....	18
14.2.	List of parameters.....	19
14.3.	Ethernet packet.....	21
14.4.	Notes.....	21
14.5.	Examples.....	22
15.	Parameterization program.....	23
15.1.	Function.....	23
15.2.	Obtaining connection to micrometer.....	23
15.3.	Setting and saving parameters of the micrometer.....	24
16.	Working with micrometer.....	26
17.	Examples of stream setting.....	27
17.1.	Data transfer by request.....	27
17.2.	Synchronous data transfer.....	27
18.	RF65X-SDK.....	28
19.	Warranty policy.....	28
20.	Distributors	29

1. Safety precautions

- Use supply voltage and interfaces indicated in the sensor specifications.
- In connection/disconnection of cables, the micrometer power must be switched off.
- Do not use micrometers in locations close to powerful light sources.
- To obtain stable results, wait about 20 minutes after micrometer activation to achieve uniform micrometer warm-up.

2. CE compliance

The micrometers have been developed for use in industry and meet the requirements of the following Directives:

- EU directive 2014/30/EU. Electromagnetic compatibility (EMC).
- EU directive 2011/65/EU, "RoHS" category 9.

4

3. Laser safety

The micrometers make use of LED or c.w. 660 nm wavelength semiconductor laser. Maximum laser output power is 0.2 mW. The micrometers belong to the 1 laser safety class. The following warning label is placed on the housing:



The following safety measures should be taken while operating the micrometer:

- Avoid staring into the laser beam during a prolonged time period.
- Do not disassemble the micrometer.

4. General information

The micrometers are intended for non-contact measuring and checking of diameters, gaps, displacement/position of the edges of technical objects.

The series includes 5 models with the measurement range from 10 to 98 mm.

5. Basic technical data

RF651-	25	50	75	100
Measurement range, mm	25	48	75	98
Minimum size of the object, mm	0.5	1	1.5	2
Accuracy*, um	±5	±10	±15	±20
Max measurement frequency, Hz	500	500	500	500
Light source	LED or laser			
Laser safety class	1 (IEC/EN 60825-1:2014)			
Output interface				
Digital	RS232 (max. 921,6 kbit/s) or RS485 (max. 921,6 kbit/s) or Ethernet & (RS32 or RS485)			
Analog	4...20 mA (load ≤ 500 Ohm) or 0...10 V			
Synchronization input, V	2,4 – 5 (CMOS, TTL)			
Logic output	three outputs, NPN: 100 mA max; 40 V max			
Power supply, V	24 (9 ... 36)			
Power consumption, W	1,5..2			
Environment resistance:				
Enclosure rating	IP67			
Vibration	20 g / 10...1000 Hz, 6 hours for each of XYZ axes			
Shock	30 g / 6 ms			
Operation temperature, °C	-10...+60			
Relative humidity, %	5-95 (no condensation)			
Housing material	aluminum			
Weight (without cable), gram	600	2000	2600	4000

* Typical data obtained when a knife edge was used to interrupt the beam and distance between transmitter and receiver is equal of two measurement range.

6. Example of item designation when ordering

RF651-X/L-SERIAL-ANALOG-LOUT-IN-CC-M-AK

Symbol	Description
X	Measurement range, mm
L	The distance between the transmitter and receiver housings, fixed on the beam, mm
SERIAL	The type of serial interface: RS232 - 232 or RS485 - 485 or (Ethernet and RS232) – 232-ET or (Ethernet and RS485) – 485-ET
ANALOG	Attribute showing the presence of 4...20 mA (I) or 0...10V (U)
LOUT	Attribute showing the presence of logical outputs
IN	Trigger input (input of synchronization) presence
CC	Cable gland - CG, or cable connector - CC
M	Cable length, m
AK	Micrometer with protect air knife for windows

Example: RF651-25/50-232-I-IN-CG-3 – measurement range – 25 mm, distance between transmitter and receiver – 50 mm, RS232 serial port, 4...20mA analog output, trigger input is available, cable connector, 3 m cable length.



Permitted modifications:

Model	Valid values for the parameters
RF651-25/L-SERIAL-ANALOG-LOUT-IN-CC-M-AK	L – 50mm - 100mm (large base under the order) SERIAL – 232, 485, 232-ET, 485-ET ANALOG – no, I, U LOUT – no, LOUT IN - IN CC – CG, CC M – 0,1m..10m AK – no, AK
RF651-50/L-SERIAL-ANALOG-LOUT-IN-CC-M-AK	L – 50mm - 150mm (large base under the order) SERIAL – 232, 485, 232-ET, 485-ET ANALOG – no, I, U LOUT – no, LOUT IN - IN CC – CG, CC M – 0,1m..10m AK – no, AK
RF651-75/L-SERIAL-ANALOG-LOUT-IN-CC-M-AK	L – 50mm - 225mm (large base under the order) SERIAL – 232, 485, 232-ET, 485-ET ANALOG – no, I, U LOUT – no, LOUT IN - IN CC – CG, CC M – 0,1m..10m AK – no, AK
RF651-100/L-SERIAL-ANALOG-LOUT-IN-CC-M-AK	L – 50mm - 300mm (large base under the order) SERIAL – 232, 485, 232-ET, 485-ET ANALOG – no, I, U LOUT – no, LOUT IN - IN CC – CG, CC M – 0,1m..10m AK – no, AK

7. Structure and operating principle

The micrometer operation is based on the so-called ‘shadow’ principle, Fig.1. The micrometer consists of two blocks – transmitter and receiver. Radiation of a semiconductor laser or LED 1 is collimated by a lens 2. With an object placed in the collimated beam region, shadow image formed is scanned with a CCD photo-detector array 3. A processor 4 calculates the position (size) of the object from the position of shadow border (borders).

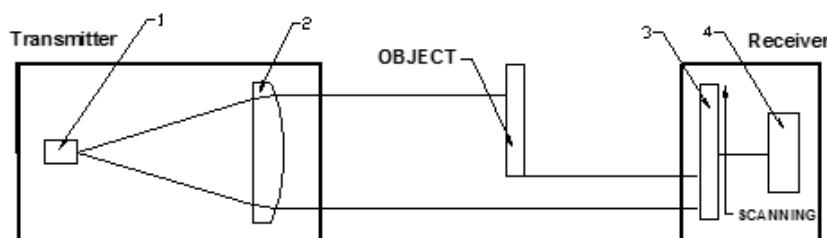


Figure 1

8. Options for use of the device

8.1. One-coordinate systems

Ways of using the micrometer for gauging of technological objects are shown in Figure 2. Figure 2.1 – measuring of the edge position; Figure 2.2. – measuring of size or position; Figure 2.3. – measuring of the gap value or position; Figure 2.4. – measuring of internal or external dimension; Figure 2.5. – measuring of the size or position of large-size objects.

7

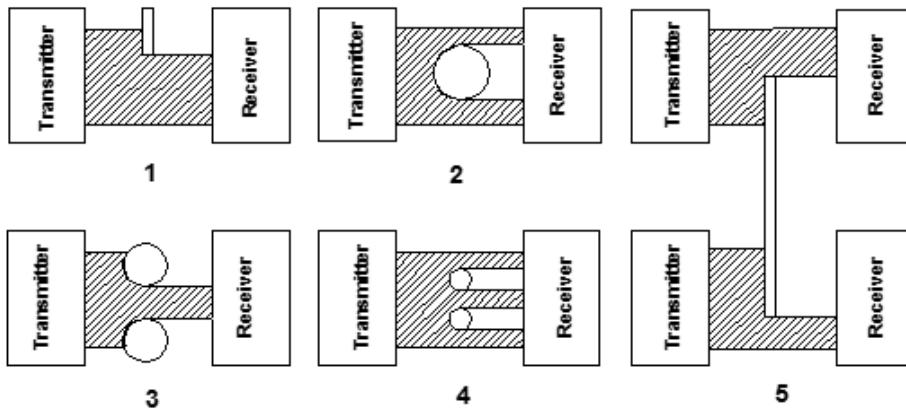


Figure 2

8.2. Multi-axis systems

Delivery of multi-axis measurement system (measured in several sections) is possible. Examples of the 2D and 3D coordinate systems are shown in Figures 3.1 and 3.2, respectively. An example of item designation when ordering 2D coordinate systems - RF651XY-X/L..., for systems with more axes - RF651.N-X/L..., where N is a number of coordinates in the system.

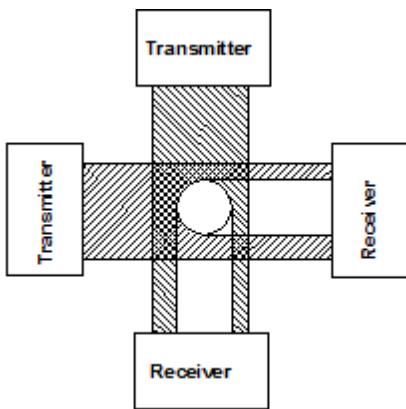


Figure 3.1.


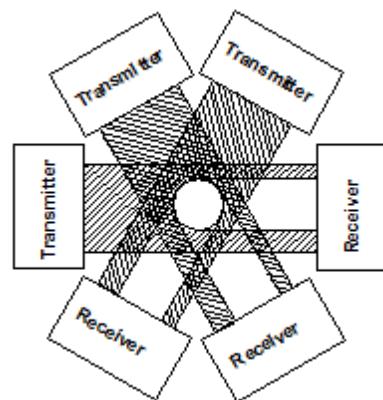


Figure 3.2.



9. Dimensions and mounting

Overall and mounting dimensions of micrometers are shown in Figure 4.

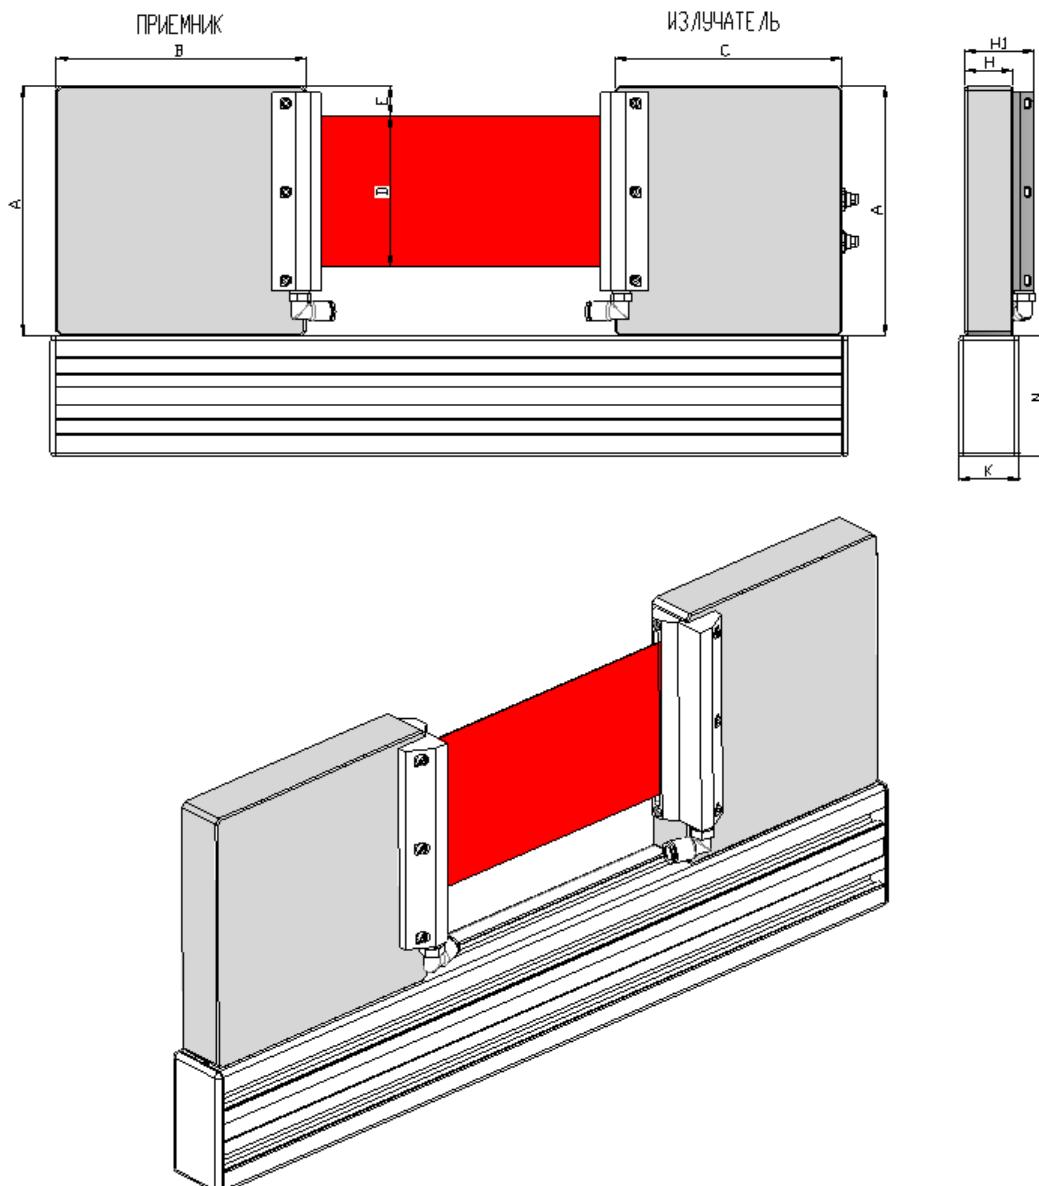

	A, mm	B, mm	C, mm	D, mm	E, mm	H, mm	H1, mm	K, mm	N, mm
RF651-25	51	139	62	25	13	28	42,5	30	30
RF651-50	91	120	134	50	20	31	45,5	40	80
RF651-75	128	132	132	75	15	31	45,5	40	80
RF651-100	165	165	150	98	20	31	45,5	40	80

Figure 4

10. Connection

Micrometers are equipped with cable glands (CG option), or connectors (CC option). Micrometers with an Ethernet interface contains two cable glands or two connectors.

10.1. Micrometers without logical outputs

Micrometer is equipped by Binder 702-8 connector. Pin numbers and location of the installation are shown in Figure 5.

9



Figure 5

Designation of contacts is given in the following table:

Model of Micrometer	Pin Number	Assignment
232 - U/I - IN-AL - CC	1 2 3 4 5 6 7 8	IN Gnd (power supply) TXD RXD Gnd (common for signals) AL U/I U+ (power supply)
485 - U/I - IN-AL - CC	1 2 3 4 5 6 7 8	IN Gnd (power supply) DATA+ DATA- Gnd (common for signals) AL U/I U+ (power supply)

10.2. Micrometers with logical outputs

Micrometer is equipped by Binder 423-14 connector. Pin numbers and location of the installation are shown in Figure 6.



Figure 6

Designation of contacts is given in the following table:

Model of Micrometer	Pin Number	Assignment
232 - U/I - IN-AL - TTL-OUT - CC	A C E G J M N O P R S T U	IN Gnd (power supply) TXD RXD Gnd (common for signals) U/I U+ (power supply) NormLimit UpLimit LowLimit N/C N/C N/C
485 - U/I - IN-AL - TTL-OUT - CC	A C E G J M N O P R S T U	IN Gnd (power supply) DATA+ DATA- Gnd (common for signals) U/I U+ (power supply) NormLimit UpLimit LowLimit N/C N/C N/C

10

10.3. Micrometers with Ethernet interface

Micrometers are equipped by additional connector Binder 712-4. Pin numbers and location of the installation are shown in Figure 7.



Figure 7

Designation of contacts is given in the following table:

Model of Micrometer	Pin Number	Assignment
ET	1 2 3 4	TX+ TX- RX+ RX-

10.4. Micrometers with cable gland and cables

The place of the cable entry is shown in Figure 8.

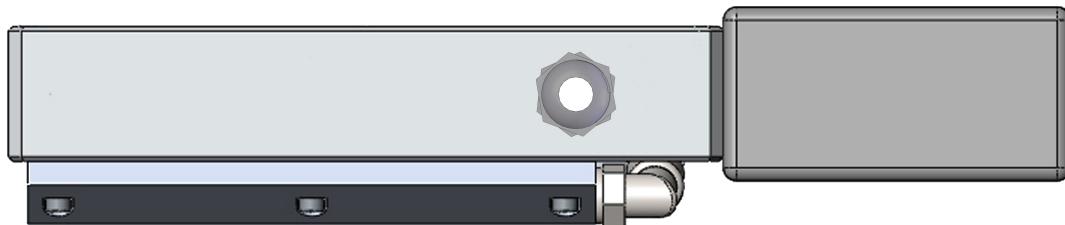


Figure 8

Designation of cable wires for micrometers with cable gland and cable of micrometers with cable connector is given in the following table:

Model of Micrometer	Pin Number		Assignment	Wire Color
232-U/I-IN - CG	free wire free wire DB9 DB9 DB9 free wire free wire	- - 2 3 5 - -	IN Gnd (power supply) TXD RXD Gnd (common for signals) U/I U+ (power supply)	White Brown Green Yellow Gray Blue Red
485-U/I-IN – CG	free wire free wire DB9 DB9 DB9 free wire free wire	- - 8 7 5 - -	IN Gnd (power supply) DATA+ DATA- Gnd (common for signals) U/I U+ (power supply)	White Brown Green Yellow Gray Blue Red
232-U/I-IN-AL-LOUT-CG	free wire free wire DB9 DB9 DB9 free wire free wire free wire free wire free wire	- - 2 3 5 - - - - -	IN Gnd (power supply) TXD RXD Gnd (common for signals) U/I U+ (power supply) NormLimit UpLimit LowLimit	White Brown Green Yellow Gray Blue Red White-Green Red-Blue Gray-Pink
485 - U/I - IN-AL - TTL-OUT - CG	free wire free wire DB9 DB9 DB9 free wire free wire free wire free wire free wire	- - 8 7 5 - - - - -	IN Gnd (power supply) DATA+ DATA- Gnd (common for signals) U/I U+ (power supply) NormLimit UpLimit LowLimit	White Brown Green Yellow Gray Blue Red White-Green Red-Blue Gray-Pink

10.5. Ethernet cable

The place of the cable entry is shown in Figure 9.

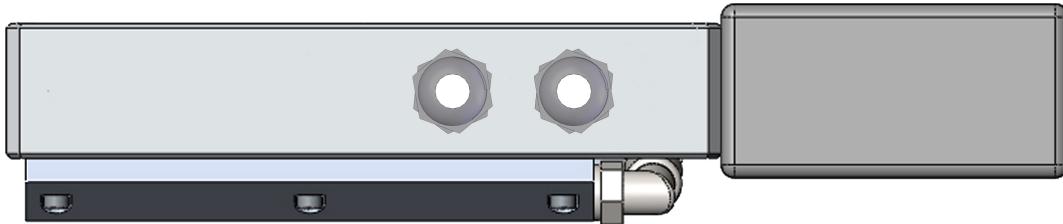


Figure 9

Designation of cable wires is given in the following table:

Model of Micrometer	Assignment	Wire Color
ET	TX+ TX- RX+ RX-	Orange White-Orange Green White-Green

12

11. Configuration parameters

The nature of operation of the micrometer depends on its configuration parameters (operation modes), which can be changed only by transmission of commands through serial port RS232 or RS485. The basic parameters are as follows:

11.1. Parameter of synchronization

This parameter specifies one of the three result sampling options in the case where the micrometer works in the data stream mode:

- Asynchronous Transmission
- Synchronous transmission, Time sampling;
- Synchronous transmission, Trigger sampling.

With Asynchronous Transmission selected, the micrometer automatically transmits the measurement result via serial interface as it is ready.

With Time Sampling selected, the micrometer automatically transmits the measurement result via serial interface in accordance with selected time interval (sampling period).

With Trigger sampling selected, the micrometer transmits the measurement result when external synchronization input (IN input of the micrometer) is switched and taking the division factor set into account.

Note: The mode of operation of each of the interfaces can be set independently.

11.2. Sampling period

If the Time Sampling mode is selected, the 'sampling period' parameter determines the time interval in which the micrometer will automatically transmit the measurement result. The time interval value is set in increments of 0.1 ms. For example, for the parameter value equal to 100, data are transmitted through bit-serial interface with a period of $0,1 \cdot 100 = 10$ ms.

If the Trigger Sampling mode is selected, the 'sampling period' parameter determines the division factor for the external synchronization input. For example, for the parameter value equal to 100, data are transmitted through bit-serial interface when each 100th synchronizing pulse arrives at IN input of the sensor.

Note 1. It should be noted that the ‘sampling mode’ and ‘sampling period’ parameters control only the transmission of data. The micrometer operation algorithm is so built that measurements are taken at a maximum possible rate determined by the integration time period, the measurement results is sent to buffer and stored therein until a new result arrives. The above-mentioned parameters determine the method of the readout of the result form the buffer.

Note 2. If the bit-serial interface is used to receive the result, the time required for data transmission at selected data transmission rate should be taken into account in the case where small sampling period intervals are used. If the transmission time exceeds the sampling period, it is this time that will determine the data transmission rate.

Note 3. It should be taken into account that micrometers differ in variation of parameters of the internal generator, and this affects the accuracy of time sampling period.

13

11.3. Method of results averaging

The averaging can operate in two modes:

- Off, no averaging
- Averaging over a number of results

When averaging over a number of results is selected, sliding average is calculated. The use of averaging makes it possible to reduce the output noise and increase the micrometer resolution.

11.4. Number of averaged values

This parameter specifies the number of source results to be averaged for deriving the output value.

Averaging over a number of results does not affect the data update in the micrometer output buffer.

Note. The maximum value is 127.

11.5. Measurement mode


The micrometer can operate in the following modes:

- Measuring the position of one border (knife).
- The distance between borders A and B (measuring the size of the object or hole).
Result = B - A.
- The position of the object (its center). Result = (B + A) / 2.

In addition, since it is possible to set the polarity and the border numbers, you can measure objects with a more complex shape.

11.6. Borders and polarity

The border means “light-shadow” transition or “shadow-light” transition which forms a shadow image of the object. Measurement is only conducted in the case where the number of borders detected by micrometer corresponds to a given parameter. The polarity is the “light-shadow” transition or “shadow-light” transition. Borders can be set with the same polarity and with the different polarity.

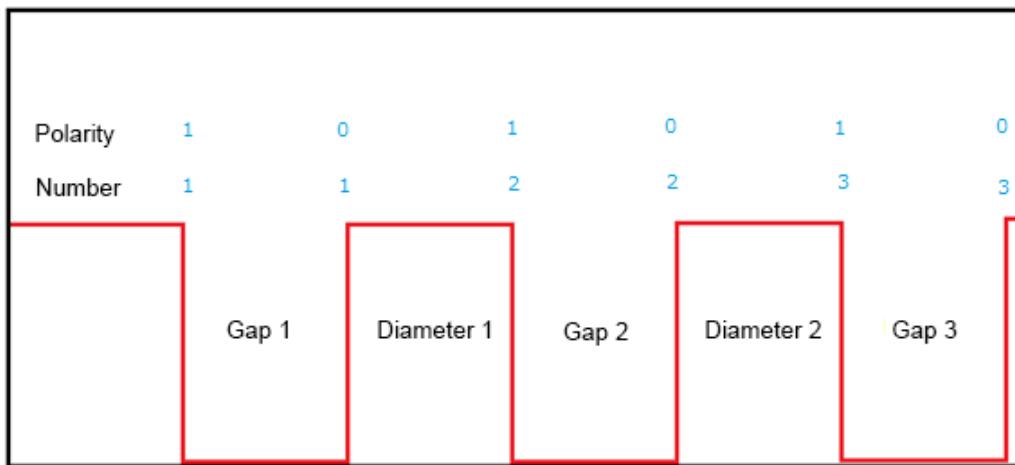

11.7. Numbers of borders under control


The measurement domain can include up to 128 borders, however, measurements can be made in relation to any two borders (hereinafter – borders A and B), whose numbers are specified by this parameter. Border numbers are counted in the direction of scanning. Direction of scanning is indicated on the body of receiver.

11.8. Nominal value and tolerances

The nominal value (dimension or position) can be transmitted as a parameter or preset by teaching. In the course of measurement, the micrometer controls sizes going beyond the permissible limits. Value of tolerances can be transmitted as parameters.

11.9. Logical outputs operation modes

Logical outputs of the micrometer are used to signal that the size under control is within or outside the tolerances selected. Logics of operation of the outputs can be changed, i.e. activate either low or high logical level. Wiring diagram of logical outputs is shown in the drawing:

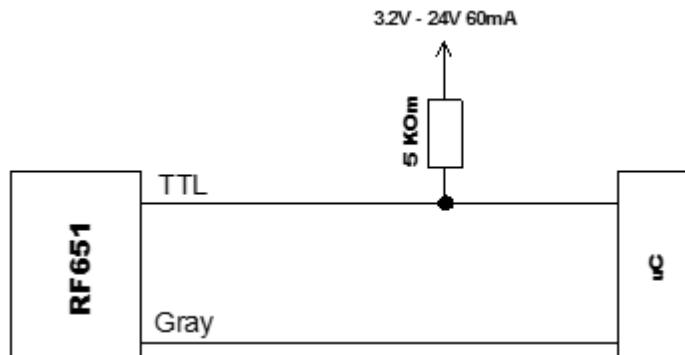

11.10. Factory parameters by default

The parameters are stored in nonvolatile memory of the micrometer. Correct changing of the parameters is carried out by using the parametrization program supplied with the micrometer, or by the user's program.

12. Description of RS232 and RS485 interfaces

12.1. RS232 port

The RS232 port ensures a “point-to-point” connection and allows the sensor to be connected directly to RS232 port of a computer or controller.

12.2. RS485 port

In accordance with the protocol accepted and hardware capability, the RS485 port makes it possible to connect micrometers to one data collection unit by a common bus circuit.

12.3. Modes of data transfer

Through these serial interfaces measurement data can be obtained by three methods:

- by single requests (inquiries);
- by automatic asynchronous data stream (results are transmitted as they become available);
- by automatic synchronous data stream (time sampling or trigger sampling).

12.4. Configuration parameters

12.4.1. Rate of data transfer through a serial port

This parameter defines the rate of data transmission via the bit-serial interface in increments of 2400 bit/s. For example, the parameter value equal to 4 gives the transmission rate of $2400 \times 4 = 9600$ bit/s.

Note. The maximum transmission rate for RS232/RS485 interfaces is 921,6 kbit/s.

12.4.2. Net address

This parameter defines the network address of the micrometer equipped with RS485 interface.

Note. Network data communications protocol assumes the presence of ‘master’ in the net, which can be a computer or other information-gathering device, and from 1 to 127 ‘slaves’ (RF65x Series micrometers) which support the protocol.

Each ‘slave’ is assigned a unique network identification code – a device address. The address is used to form requests or inquiries all over the net. Each slave receives inquiries containing its unique address as well as ‘0’ address which is broadcast-oriented and can be used for formation of generic commands, for example, for simultaneous latching of values of all sensors and for working with only one sensor (with both RS232 port and RS485 port).

12.4.3. Factory parameters table

Parameter	Value
Baud rate	115200
Net address	1
Mode of data transfer	request

12.5. Interfacing protocol

12.5.1. Serial data transmission format

Data message has the following format:

1 start-bit	8 data bits	1 even bit	1 stop-bit
-------------	-------------	------------	------------

12.5.2. Communication sessions types

The communication protocol is formed by communication sessions, which are only initiated by the 'master' (PC, controller). There are two kinds of sessions with the following structure:

- 1) "request", ["message"] — ["answer"], square brackets include optional elements
- 2) "request" — "data stream" — ["request"]

12.5.3. Request

'Request' (INC) is a two-byte message, which fully controls the communication session. The 'request' message is the only one of all messages in a session where most significant bit is set at 0, therefore, it serves to synchronize the beginning of the session. In addition, it contains the device address (ADR), code of request (COD) and, optionally, the message [MSG].

'Request' format:

Byte 0	Byte 1	[Bytes 2...N]
INC0(7:0)	INC1(7:0)	MSG
0 ADR(6:0)	1 0 0 0 COD(3:0)	

12.5.4. Message, MSG

'Message' is a data burst that can be transmitted by 'master' in the course of the session.

All messages with a 'message' burst contain 1 in the most significant digit. Data in a message are transferred in tetrads. When byte is transmitted, lower tetrad goes first, and then follows higher tetrad. When multi-byte values are transferred, the transmission begins with lower byte.

The format of two 'message' data bursts for transmission of byte DAT(7:0):

DAT(7:0)							
Byte 0				Byte 1			
1	0	0	0	DAT(3:0)	1	0	0 0 DAT(7:4)

12.5.5. Answer

'Answer' is data burst that can be transmitted by 'slave' in the course of the session.

All messages with a message burst contain 1 in the most significant digit. Data in a message are transferred in tetrads. When byte is transmitted, lower tetrad goes first, and then follows higher tetrad. When multi-byte values are transferred, the transmission begins with lower byte.

When 'answer' is transmitted, the message contains:

- SB-bit, characterizes the updating of the result. If SB is equal to '1', this means that the sensor has updated the measurement result in the buffer. If SB is equal to

'0', then non-updated result has been transmitted (see. Note 1, p.[11.2.](#)). When transmitting parameters, SB=0;

- two additional bits of cyclic binary batch counter (CNT). Bit values in the batch counter are identical for all sendings of one batch. The value of batch counter is incremented by the sending of each burst and is used for formation (assembly) of batches or bursts as well as for control of batch losses in receiving data streams.

The format of two 'answer' data bursts for transmission of byte DAT(7:0):

DAT(7:0)							
Byte 0				Byte 1			
1	SB	CNT(1:0)	DAT(3:0)	1	SB	CNT(1:0)	DAT(7:4)

17

12.5.6. Data stream

'Data stream' is an infinite sequence of data bursts or batches transmitted from 'slave' to 'master', which can be interrupted by a new request. In transmission of 'data stream', one of the 'slaves' fully holds the data transfer channel, therefore, when 'master' produces any new request sent to any address, data streaming process is stopped. In addition, there is a special request to stop data streaming.

12.5.7. Request codes and list of parameters

Request codes and list of parameters are presented in topic [14](#).

13. Analog outputs


13.1. Modes of data transfer

Analog outputs can be in one of the following modes:

- No transmission.
- Automatic asynchronous data stream (results are transmitted as they become available)
- Automatic synchronous data stream (time sampling or trigger sampling)


13.2. Current output 4...20 mA

The connection scheme is shown in the figure. The value of load resistor should not be greater than 500 Ohm. To reduce noise, it is recommended to install RC filter before the measuring instrument. The filter capacitor value is indicated for maximum sampling frequency of the micrometer (2 kHz) and this value increases in proportion to the frequency reduction.

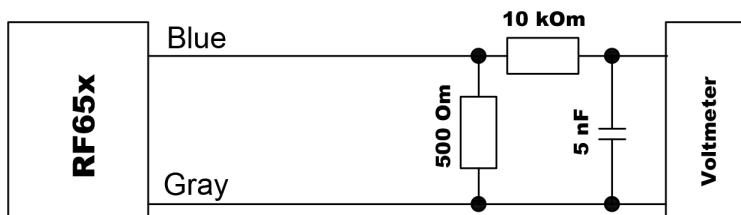

13.3. Voltage output 0...10 V

The connection scheme is shown in the figure. To reduce noise, it is recommended to install RC filter before the measuring instrument. The filter capacitor value is indicated for maximum sampling frequency of the micrometer (2 kHz) and this value increases in proportion to the frequency reduction.

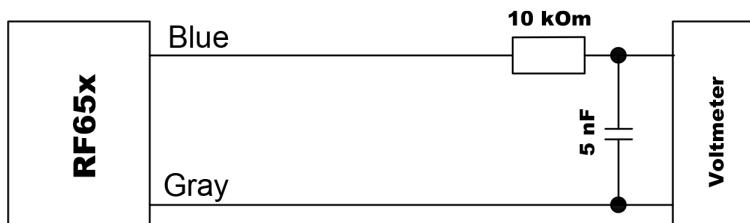

13.4. Configuration parameters

13.4.1. Range of the analog output

While working with the analog output, resolution can be increased by using the 'Window in the operating range' function which makes it possible to select a window of required size and position in the operating range of the sensor within which the whole range of analog output signal will be scaled.

If the beginning of the range of the analog signal is set at a higher value than the end value of the range, this will change the direction of rise of the analog signal.

Note. If the beginning of the range of the analog signal is set at a higher value than the end value of the range, this will change the direction of rise of the analog signal.

13.4.2. Analog output operation mode

Analog output can be:

- in the window mode or
- in the deviation mode.

"Window mode". The entire range of the analog output is scaled within the selected window. Under the window we mean the whole range of micrometer or any area in the measuring range specified by parameters 'Top of the range of the analog output' and 'End of the range of the analog output'. The analog output is "0" outside the window.,.

"Deviation mode". For 'deviation' result type, the window boundaries must be defined so that the value corresponding to zero deviation is located in the middle of the window. In this case, the middle part of the analog output range (12mA or 5V) will correspond to zero deviation.

14. Request codes and a list of parameters

14.1. Request codes

Request code	Description	Message (size in bytes)	Answer (size in bytes)
01h	Device identification	—	- device type (1) - firmware version (1) - serial number (2) - base distance (2) - range (2)
02h	Reading of parameter	- code of parameter (1)	- value of parameter (1)
03h	Writing of parameter	- code of parameter (1) - value of parameter (1)	—
04h	Storing current parameters to FLASH-memory	- constant AAh (1)	- constant AAh (1)
04h	Recovery of parameter default values in FLASH-memory	- constant 69h (1)	- constant 69h (1)
05h	Latching of current result	—	—
06h	Inquiring of result	—	- result (2)
07h	Inquiring of a stream of results	—	- stream of results (2)

Request code	Description	Message (size in bytes)	Answer (size in bytes)
08h	Stop data streaming	—	—

14.2. List of parameters

Code	Description	Values
00h	Switching ON/OFF the sensor	1 - laser ON, measuring (by default); 0 - laser OFF, the sensor is in the energy-saving mode.
01h	Switching ON/OFF the analog output	1 - ON; 0 - OFF.
02h	Control of averaging, sampling, AL-output modes	x,x,M,C,M1,M0,R,S – control byte (x bits - not used, M bit - the averaging mode, C bit - CAN interface, M0 and M1 bits - logical output, R bit - analog output, S bit - sampling mode). M bit: 0 - averaging the measured values by quantity (by default); 1 - averaging the measured values by time (5 ms); C bit: 0 - request (by default); 1 - synchronization by time, or by external input. M1:M0 bits: 00 - out-of-range indication mode (by default); 01 - mutual synchronization mode; 10 - mode of results reset. 11 - mode of switching ON/OFF a laser R bit: 0 - window mode (by default); 1 - full mode. S bit: 0 - time sampling mode (by default); 1 - trigger sampling mode.
03h	Network address	1...127 (by default, 1).
04h	Rate of data transfer through a serial port	1...192 (by default, 4). The rate of data transfer in increments of 2400 bit/s. For example, the parameter value equal to 4 gives the transmission rate of $2400 \times 4 = 9600$ bit/s.
05h	Reserved	
06h	Number of averaged values	1...128 (by default, 1).
07h	Reserved	
08h	Low byte of sampling period	1) 1...65535 (by default, 500).
09h	High byte of sampling period	Time interval in increments of 0.01 ms, that a sensor uses to transmit results automatically on the data stream request (sampling priority = 0); 2) 1...65535 (by default, 500). Division factor for synchronization input (sampling priority = 1).
0Ah	Low byte of the maximum accumulation time	2...65535 (by default, 3200). The maximum accumulation time in increments of 1 μ s.
0Bh	High byte of the maximum accumulation time	
0Ch	Low byte of the beginning of analog output range	In percents (by default, 0). The point within the range of the micrometer, at which the analog output takes the minimum value.
0Dh	High byte of the beginning of analog output range	
0Eh	Low byte of the end of analog output range	In percents (by default, 100). The point within the range of the micrometer, at which the



Code	Description	Values
0Fh	High byte of the end of analog output range	
10h	Delay time	0...255. The delay time in increments of 5 ms.
11h	Measurement type	1 (by default) – Measuring the position of one border (knife); 2 – Distance between borders A and B (measuring the size of the object). Result = B – A. (Numbers of borders A and B are set by parameters 0x12h and 0x14 h). 3 – Position of the object – (B+A)/2.
12h	Number of the border under control (A)	0-127 (by default, 0x01h). A – a serial number of border A.
13h	Polarity of the border under control (A)	0-1 (by default, 0x00h).
14h	Number of the border under control (B)	0-127 (by default, 0x01h). B – a serial number of border B.
15h	Polarity of the border under control (B)	0-1 (by default, 0x01h).
16h	Reserved	
17h	Low byte of a zero point	0...4000h (by default, 0).
18h	High byte of a zero point	
19...1Ch	Reserved	
20h	Rate of data transfer through the CAN interface	10...200 (by default, 25). Rate of data transfer in increments of 5000 baud. For example, value '50' sets the rate of 50*5000 = 250000 baud.
22h	Low byte of the standard identifier	0...7FFh (by default, 7FFh). The standard identifier of the CAN interface.
23h	High byte of the standard identifier	
24h	0th byte of the extended identifier	0...1FFFFFFh (by default, 1FFFFFFh). The extended identifier of the CAN interface.
25h	1st byte of the extended identifier	
26h	2nd byte of the extended identifier	
27h	3rd byte of the extended identifier	
28h	Identifier of the CAN interface	1 - extended identifier; 0 - standard identifier.
29h	CAN interface ON/OFF	1 - CAN interface enabled; 0 - CAN interface disabled.
0x39h	Analog output operation mode	0 (by default) - window mode; 1 - deviation mode.
6Ch	0th byte of the destination IP address	by default, FFFFFFFFh = 255.255.255.255
6Dh	1st byte of the destination IP address	
6Eh	2nd byte of the destination IP address	
6Fh	3rd byte of the destination IP address	
70h	0th byte of the gateway IP address	by default, C0A80001h = 192.168.0.1
71h	1st byte of the gateway IP address	

Code	Description	Values
72h	2nd byte of the gateway IP address	
73h	3rd byte of the gateway IP address	
74h	0th byte of the subnet mask	by default, FFFFFF00h = 255.255.255.0
75h	1st byte of the subnet mask	
76h	2nd byte of the subnet mask	
77h	3rd byte of the subnet mask	
78h	0th byte of the source IP address	by default, C0A80003h = 192.168.0.3
79h	1st byte of the source IP address	
7Ah	2nd byte of the source IP address	
7Bh	3rd byte of the source IP address	
88h	ETHERNET interface ON/OFF	0 - ETHERNET interface disabled; 1 - ETHERNET interface enabled in the UDP mode.

14.3. Ethernet packet

Address	Name	Length	Type	Example
0	Name	2	char	0x5246
2	Sensor type	1	word	651 (656)
4	Packet length	1	word	36
6	Data offset	1	byte	20
7	Number of measurements in the packet	1	byte	1
8	Packets counter	1	word	
10	Version	1	byte	
11	Serial number	1	word	2515
13	Measurement range	1	word	100
15	Scaling factor	1	word	50000
17	Data output format	1	byte	1, 2 or 3
18	Sign of the 1st border	1	byte	0
19	Number of borders	1	byte	1
20	Data	1	word	
22	State	1	byte	
23-36	Data, state or NULL			

14.4. Notes


- All values are given in binary form.
- The range is given in millimeters.
- The value of the result transmitted by micrometer is represented by 4 bytes and is given in micrometers
- On special request (05h), the current result can be latched in the output buffer where it will be stored unchanged up to the moment of arrival of request for data transfer. This request can be sent simultaneously to all micrometers in the net in the broadcast mode in order to synchronize data pickup from all micrometers.

- When working with the parameters, it should be borne in mind that when power is OFF the parameter values are stored in nonvolatile FLASH-memory of the sensor. When power is ON, the parameter values are read out to RAM of the sensor. In order to retain these changes for the next power-up state, a special command for saving current parameter values in the FLASH-memory (04h) must be run.
- Parameters with the size of more than one byte should be saved starting from the high-order byte and finishing with the low-order byte.

WARNING! It is forbidden to carry out the configuration of sensors included in the RS485 network.

14.5. Examples

- Measuring the position of one border (knife)

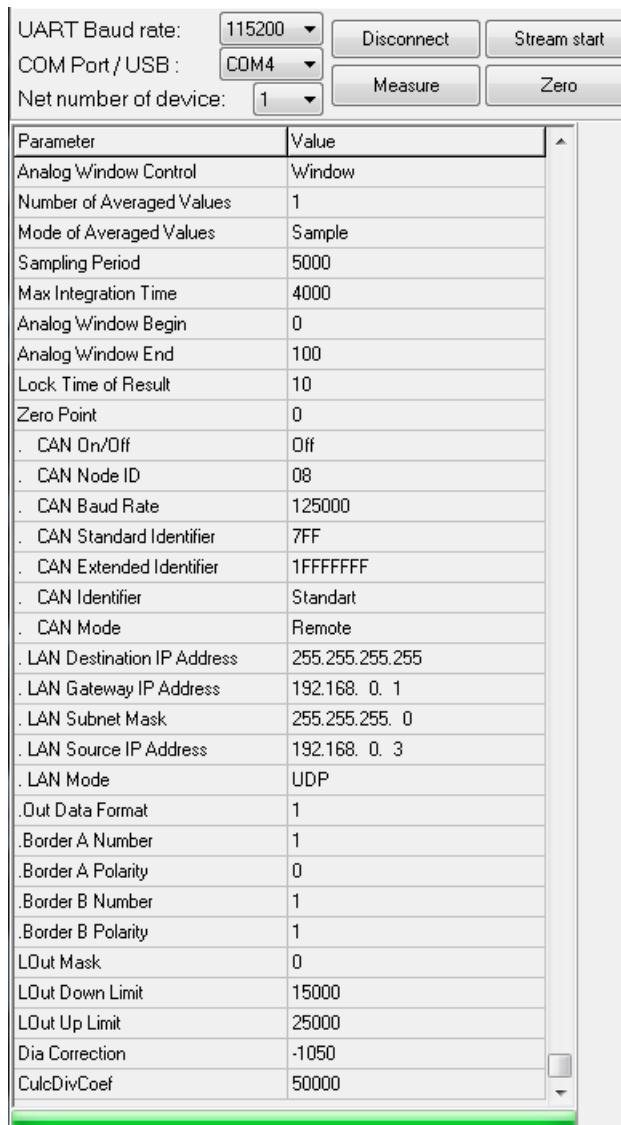

The screenshot shows the software interface for configuring the optical micrometer. At the top, there are connection settings: UART Baud rate (115200), COM Port / USB (COM4), and Net number of device (1). Below these are two buttons: Disconnect and Stream start. A large table lists various parameters and their values:

Parameter	Value
Analog Window Control	Window
Number of Averaged Values	1
Mode of Averaged Values	Sample
Sampling Period	5000
Max Integration Time	4000
Analog Window Begin	0
Analog Window End	100
Lock Time of Result	10
Zero Point	0
. CAN On/Off	Off
. CAN Node ID	08
. CAN Baud Rate	125000
. CAN Standard Identifier	7FF
. CAN Extended Identifier	1FFFFFFF
. CAN Identifier	Standart
. CAN Mode	Remote
. LAN Destination IP Address	255.255.255.255
. LAN Gateway IP Address	192.168. 0. 1
. LAN Subnet Mask	255.255.255. 0
. LAN Source IP Address	192.168. 0. 3
. LAN Mode	UDP
.Out Data Format	1
Border A Number	1
Border A Polarity	0
Border B Number	1
Border B Polarity	1
LOut Mask	0
LOut Down Limit	15000
LOut Up Limit	25000
Dia Correction	-1050
CulcDivCoef	50000

- The distance between borders A and B

The diameter of the object:

.Out Data Format	2
Border A Number	1
Border A Polarity	0
Border B Number	1
Border B Polarity	1

Gap dimensions:

.Out Data Format	2
.Border A Number	1
.Border A Polarity	1
.Border B Number	1
.Border B Polarity	0

- The object position (object center/gap)

.Out Data Format	3
.Border A Number	1
.Border A Polarity	0
.Border B Number	1
.Border B Polarity	1

Borders and polarity are described in topic [11.6](#).

An example of forming the packets with requests and answers:

Network address – 1.

Measurement range = 25 mm.

Scaling = 50000.

Request [2 bytes]: 0x01, 0x86. (0x01 – 1st byte – network address)

Answer [4 bytes]: InData[0], InData[1], InData[2], InData[3]

An example of forming a packet with measurement (4 bits from each received byte):
 $Y = \text{InData}[0] \& 0x0F) | (\text{InData}[1] \& 0x0F) << 4 | (\text{InData}[2] \& 0x0F) << 8 | (\text{InData}[3] \& 0x0F)$

<<12;

Measurement results will be in mm.

Result = $Y * \text{Measurement range} / \text{Scaling}$

Example: $Y = 0x1234$ (4660)

Result = $4660 * 25 / 50000 = 2,33$ mm

15. Parameterization program

15.1. Function

The RF65X-SP software is intended for:


- 1) Testing and demonstration of work of RF651 series micrometers;
- 2) Setting of the micrometer parameters;
- 3) Reception and gathering of the micrometer data signals.

The download link:

https://riftek.com/media/documents/rf65/RF65x_SP_Cortex_User.zip

15.2. Obtaining connection to micrometer


Once the program is started, the main window emerges:

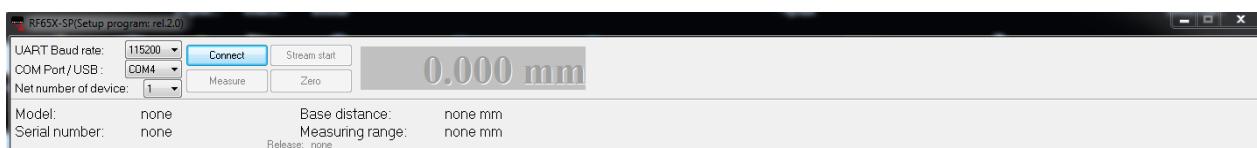

To obtain connection, it is necessary to follow these steps:

- select COM-port whereto the sensor is connected (logical port if the sensor is connected via USB-adapter)
- select transmission rate (Baud rate) at which the sensor will work (115200, by default)
- select the sensor network address (1, by default)
- press **Connect** button

If the selected parameters correspond to the parameters of the micrometer interface, the program will identify the micrometer, read and display its configuration parameters:

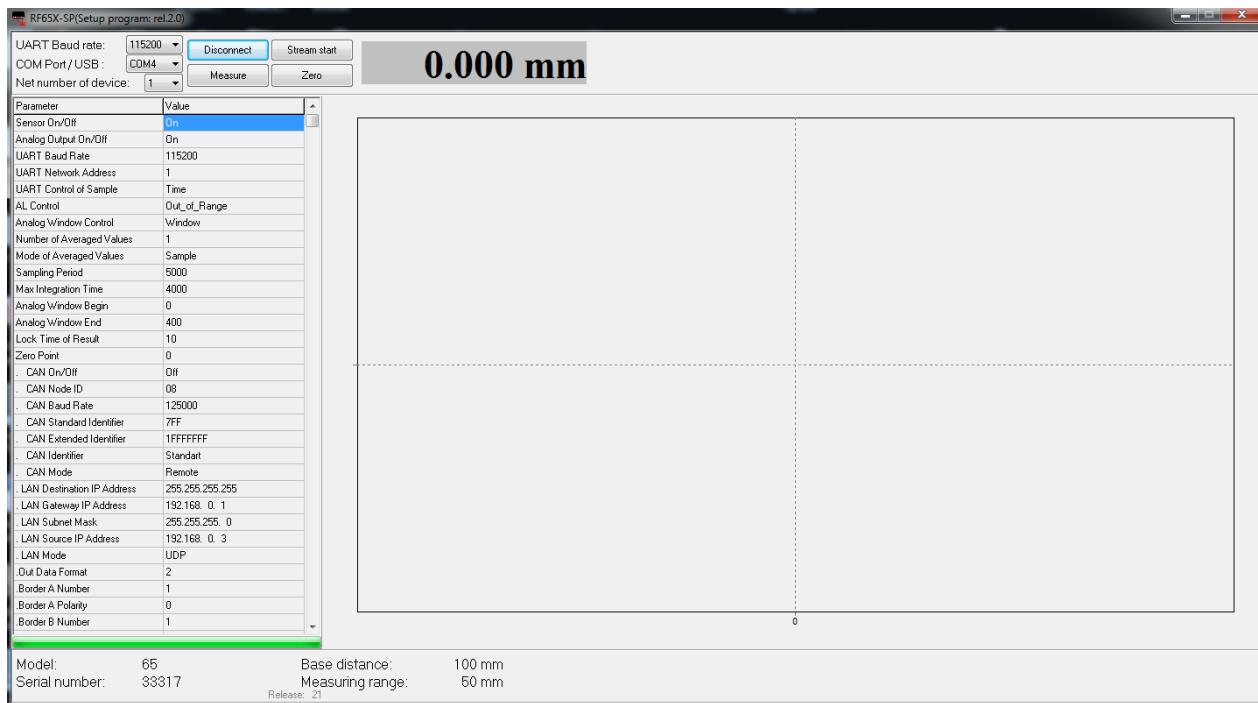


24


15.3. Setting and saving parameters of the micrometer

The part of RF65x application, which has become an active, allows to edit and to put in RAM and FLASH memory of micrometer the appropriate parameters.


Configuring the micrometer is done by selecting the appropriate item from the proposed drop-down menu, or by entering the absolute value of the desired parameter (all parameters are entered in decimal form, the user must follow the correct input of a specific parameter). After selecting the desired value from the drop-down menu or after entering the absolute value, it is necessary to write them to RAM. To do it, you need to press the right mouse key on the table of parameters. The pop-up window will appear. In this pop-up window, select **Load** (to save the selected item) or **Load All** (to save all settings).

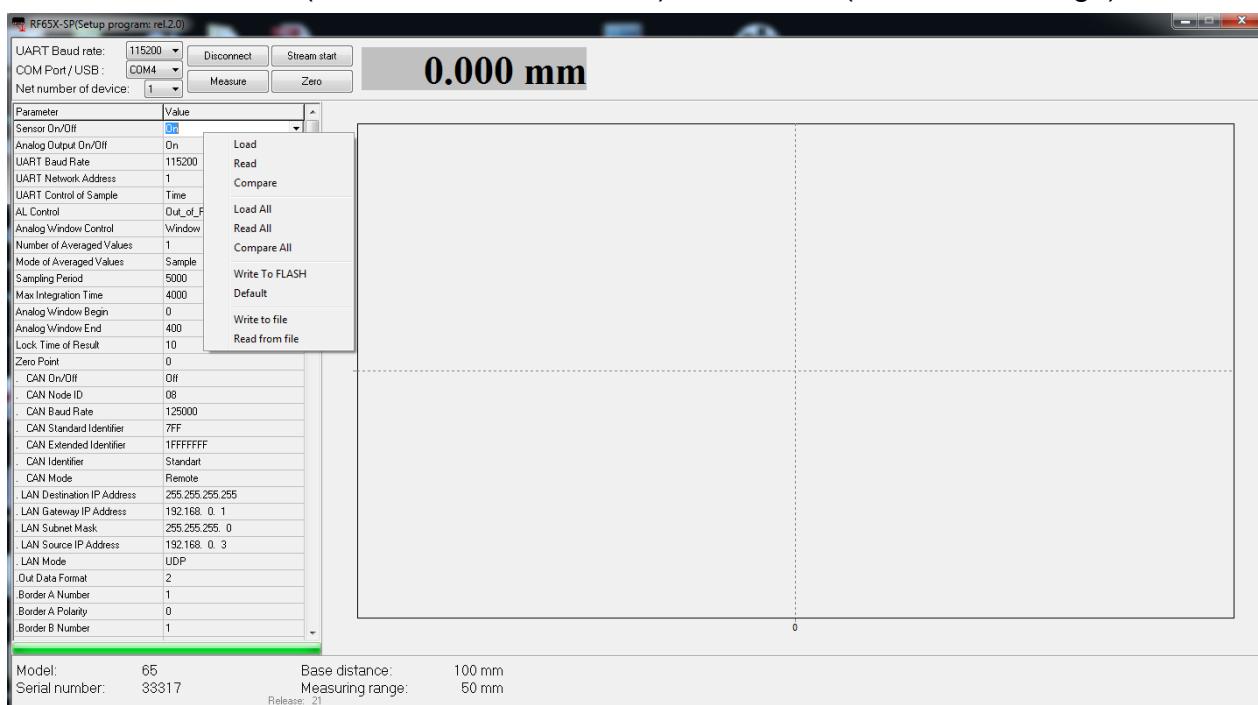

In the pop-up window there are two items: **Write To FLASH** and **Default**. The **Write To FLASH** item allows to save the current parameters from the RAM of micrometer to the non-volatile memory. The **Default** item allows to restore factory settings of the micrometer.

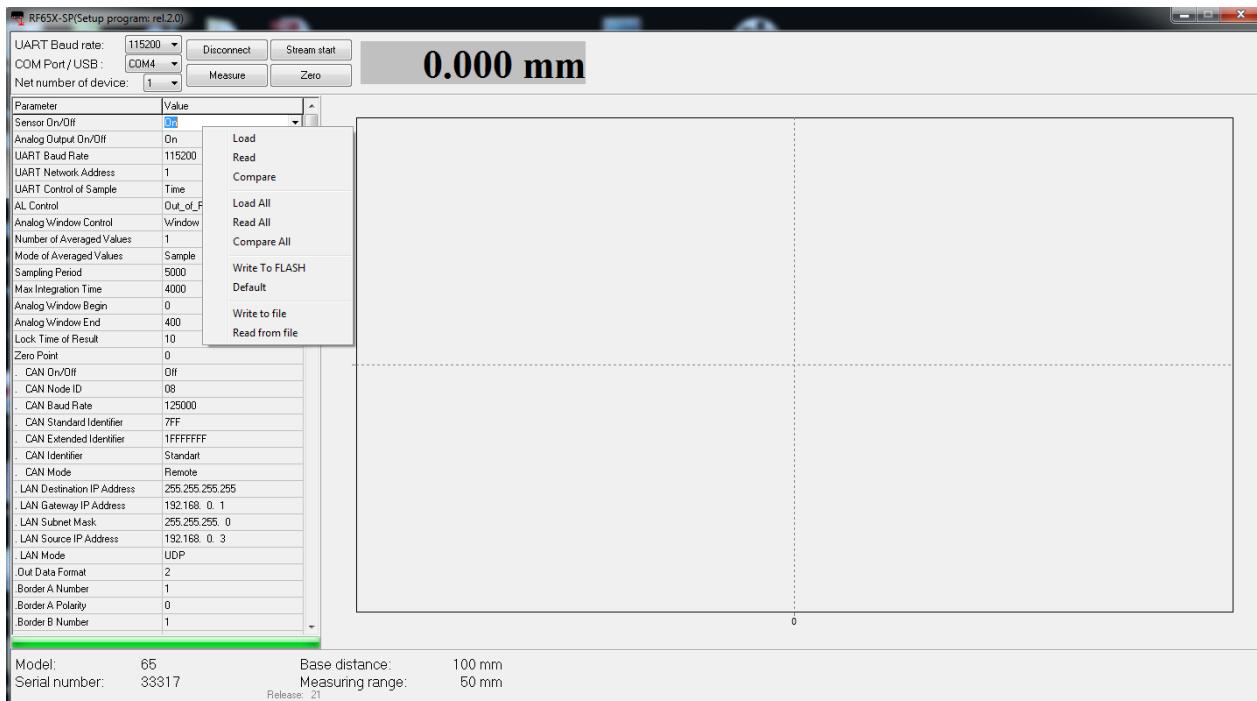


On success, the program will show the following message:

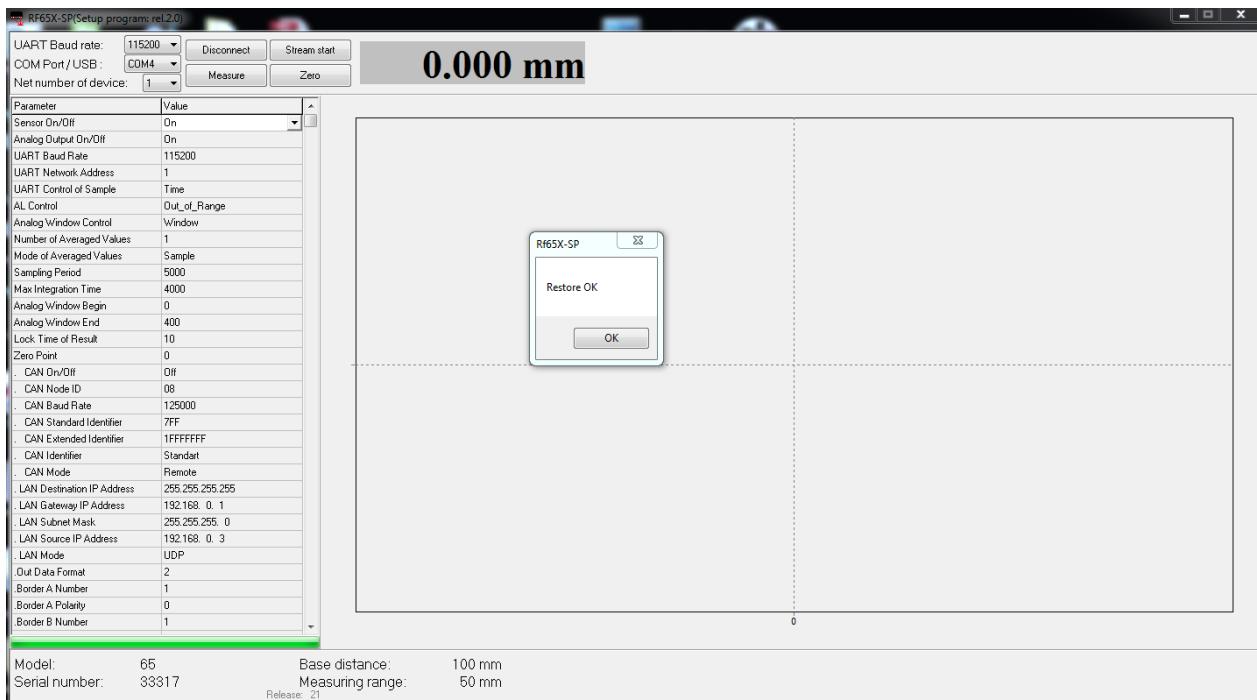

In order for the changes to take effect, you must end the connection session and reboot the micrometer by turning OFF/ON the power supply.


16. Working with micrometer

- Place an object into the working range of micrometer.
- To get single result, press the **Measure** button.
- To get continuous data stream, it is necessary to set the synchronization mode and to press the **Stream start** button. The measurement result will be shown on the display.
- To reset dimensions of the object, press the **Zero** button.

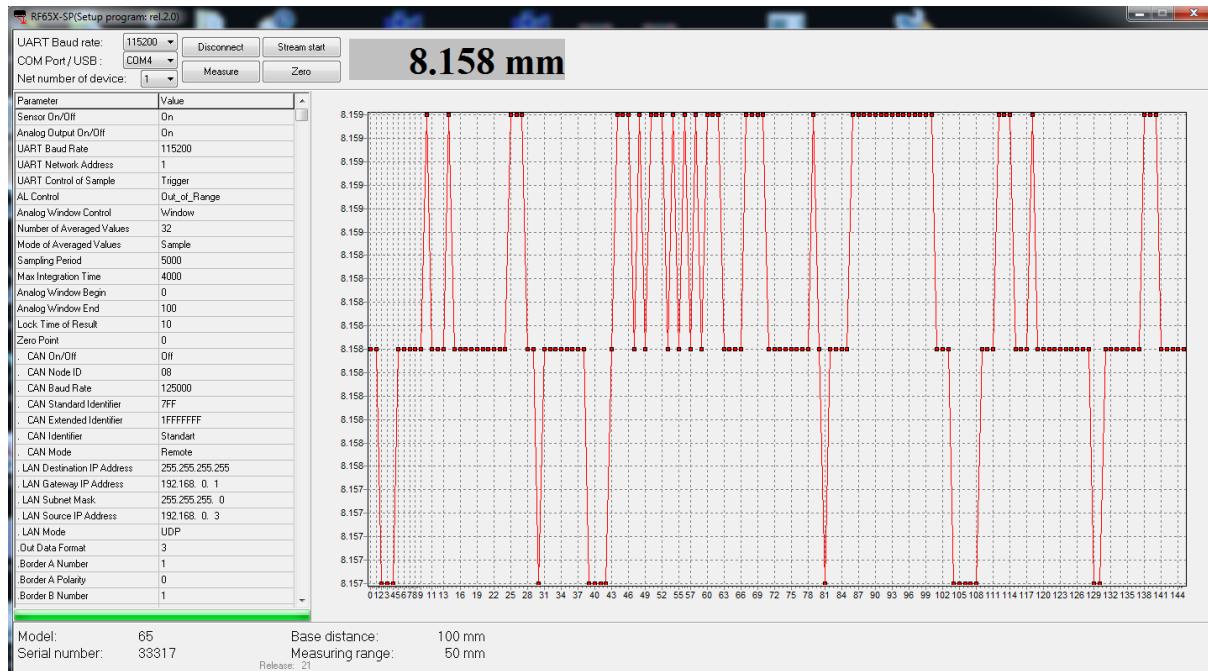

26


- To save all received data to a file, you need to press the right mouse key in the working area and select **Save data to file** in the pop-up window.
- It is possible to specify the position and zoom of the graph: selecting of the **Auto Scaling** option puts it into the active (passive) state that allows you to position and scale the graph automatically (manually).
- To clear the measurement field, it is necessary to select **Clear**.

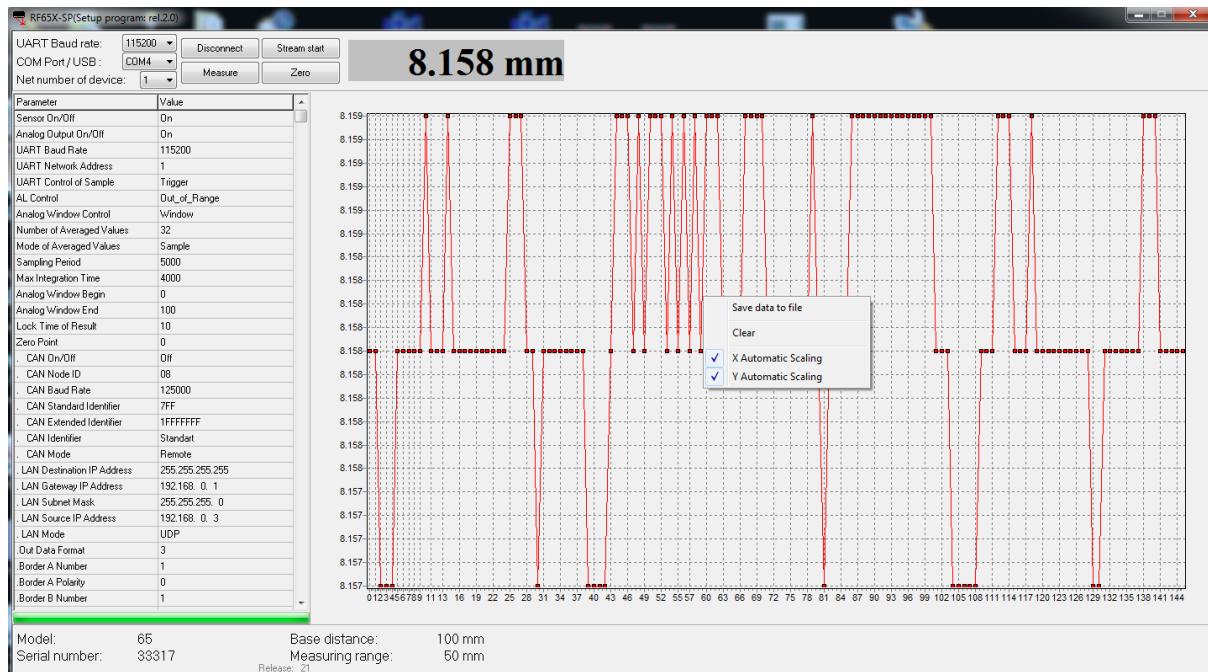

17. Examples of stream setting

17.1. Data transfer by request


Measurement data are transmitted on request from the PC:

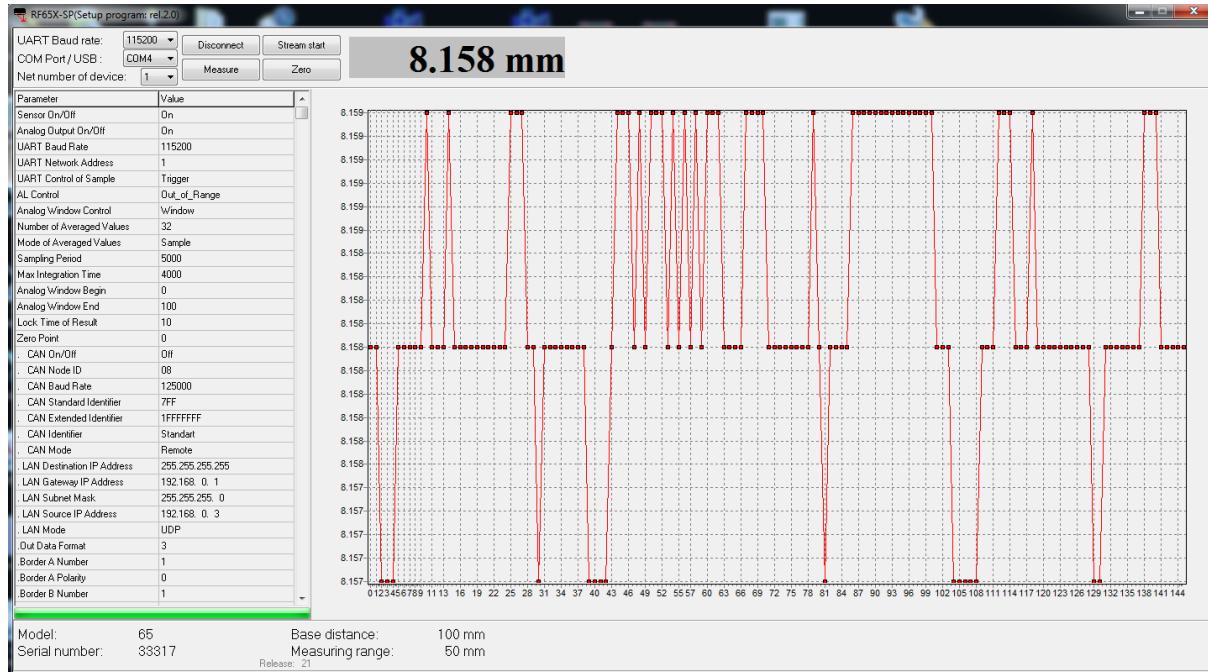

17.2. Synchronous data transfer


- Time Sampling

To work in this mode, you need to change 2 parameters: **UART Control of Sample** (to the **Time** mode) and **Sampling Period** (see topic [11.2](#)).

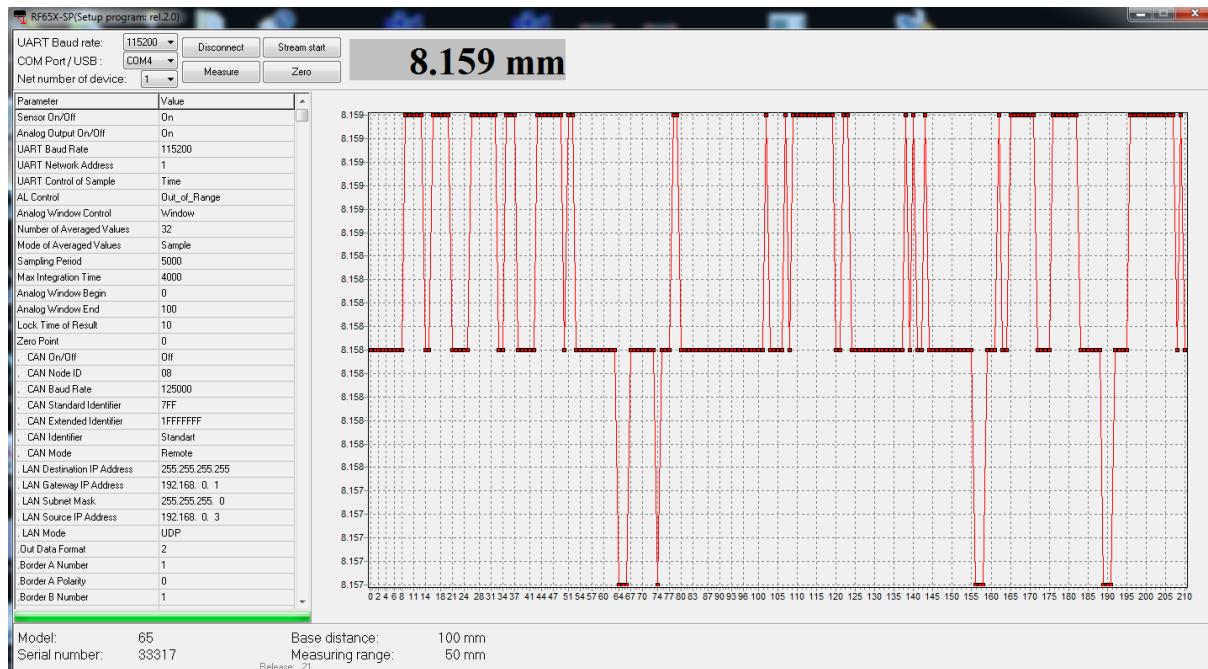


- Trigger Sampling

To work in this mode, you need to change 2 parameters: **UART Control of Sample** (to the **Trigger** mode) and **Sampling Period**.

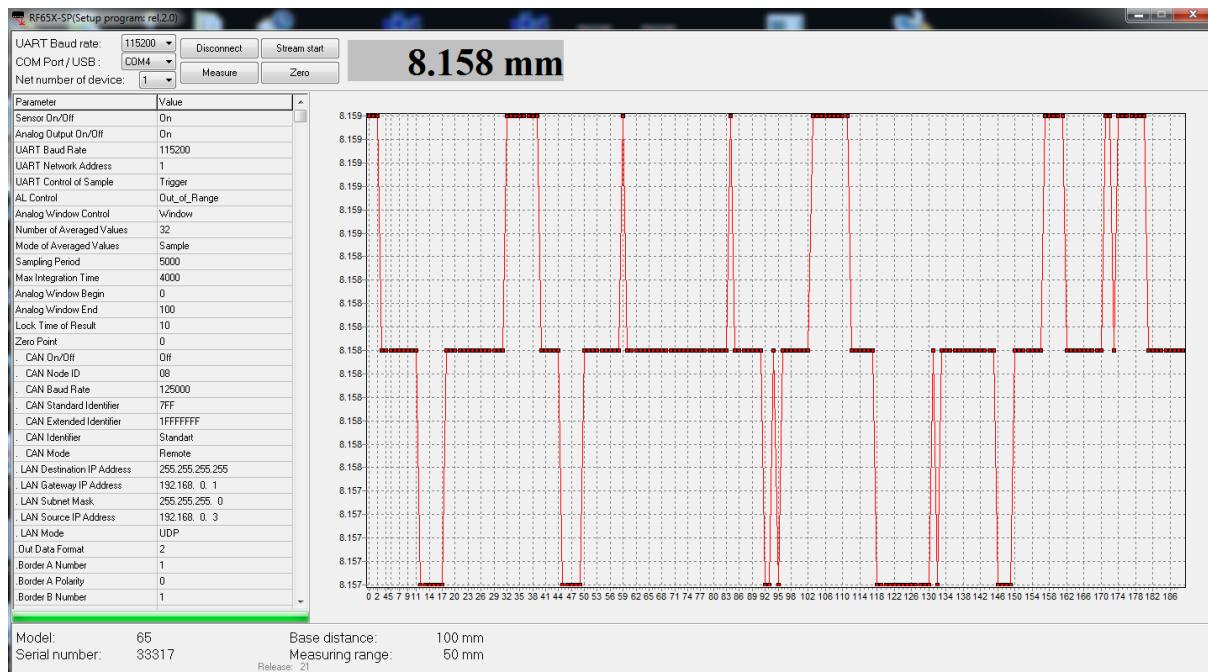

28

If you need to get results stream automatically after turn on the micrometer, make it's configuration and press **Write to FLASH** button.

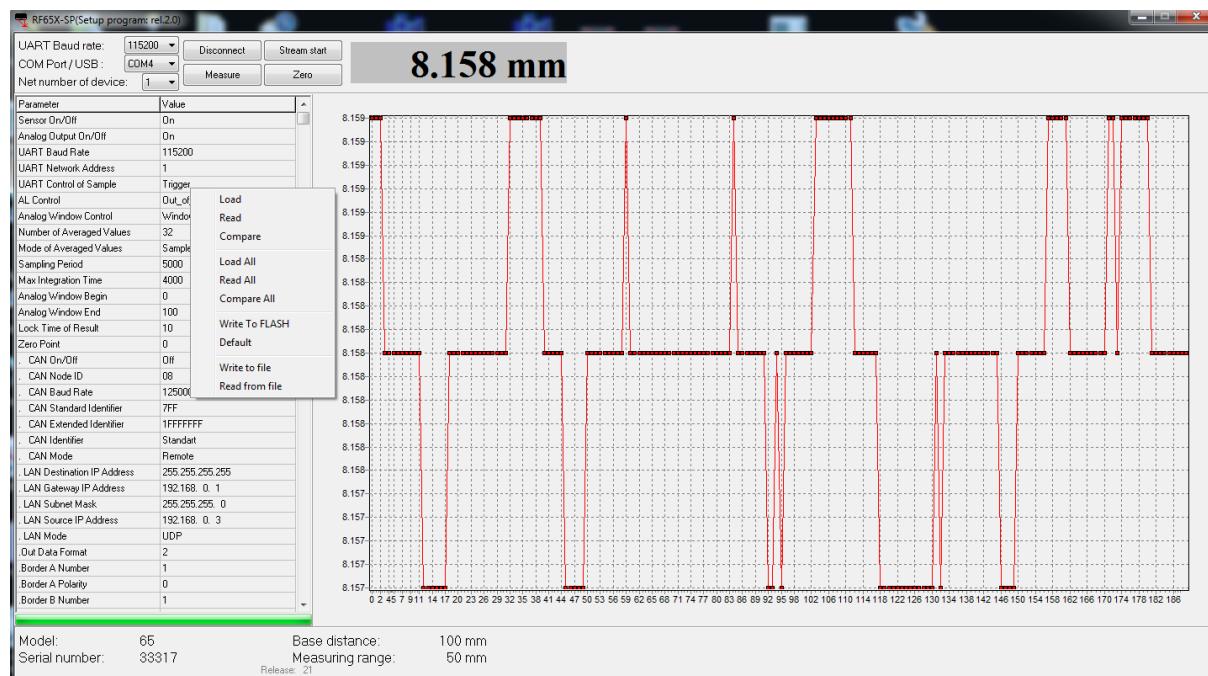

18. RF65X-SDK

Optical Micrometers are supplied together with SDK (https://riftek.com/media/documents/software/RFDevice_SDK.zip).

The SDK allows the user to develop his own software products without going into details of the micrometer communications protocol.

19. Warranty policy

Warranty assurance for Optical Micrometers RF651 Series - 24 months from the date of putting in operation; warranty shelf-life - 12 months.

20. Distributors

AUSTRALIA

Applied Measurement Australia Pty Ltd
RAILWAY INSTRUMENTS ONLY
 Thornton Plaza, Unit 5,
 27 Thornton Crescent, Mitcham
 VIC 3132, Australia
 Tel: +61 39874 5777
 Fax: +61 39874 5888
sales@appliedmeasurement.com.au
www.appliedmeasurement.com.au

BRAZIL

CAPI Controle e Automacao Ltda
 Rua Itororo, 121, CEP 13466-240
 Americana-SP, Brazil
 Tel: +55 19 36047068
 Fax: +55 19 34681791
capi@capicontrole.com.br
www.capicontrole.com.br

CHINA

Shanghai micron-metrology com., Ltd.
 Room 602 unit 4, lane 399,
 Mudan road, Pudong New district
 Shanghai, China
 Tel: +86-21-68416510
sales@micron-metrology.cn
www.micron-metrology.cn

FINLAND

TERASPYORA-STEELWHEEL OY
RAILWAY INSTRUMENTS ONLY
 Juvan teollisuuskatu 28
 FI-02920 ESPOO, Finland
 Tel: +358 400 422 900
 Fax: +358 9 2511 5510
steelwheel@steelwheel.fi
www.teraspyora.fi

BENELUX

Altheris B.V.
 Vlietweg 17a
 2266KA Leidschendam
 The Netherlands
 Tel: +31 70 3924421
 Fax: +31 70 3644249
sales@altheris.nl
www.altheris.com

BULGARIA, HUNGARY

RMT Ltd.
 R Zahradni 224
 739 21 Paskov, Czech Republic
 Tel: +420 558640211
 Fax: +420 558640218
rmt@rmt.cz
www.rmt.cz

CHILE

Verne SpA
 Apoquindo 2818, oficina 31,
 Las Condes, Santiago, Chile
 Tel: +56 2 228858633
info@verne.cl
jsaavedra@verne.cl
www.verne.cl

CHINA

Zhenshangyou Technologies Co.,Ltd.
 Rm 2205-2210, Zhongyou Hotel
 1110 Nanshan Road, Nanshan
 District 518054 Shenzhen, China
 Tel: +86 755-26528100/8011/8012
 Fax: +86 755-26528210/26435640
info@51sensors.com
www.51sensors.com

CHINA

JRKtech Co., Ltd.
 1F, Building 9, 100 Xianlie Rd.,
 Guangzhou, China
 Tel: +86 755 85267190/
 +86 15989362481
 Fax: +86 755 85267190
sheng_z_k@163.com
www.jrktech.com

CZECH REPUBLIC

RMT Ltd.
 Zahradni 224
 739 21 Paskov, Czech Republic
 Tel: +420 558640211
 Fax: +420 558640218
rmt@rmt.cz
www.rmt.cz

FRANCE

DB Innovation (ALTHERIS France)
 26, avenue de la Mediterranee
 34110 Frontignan France
 Tel: +33-467786166
 Fax: +33-467740134
dbi@altheris.fr
www.altheris.fr

GERMANY

Disynet GmbH
 Breyeller Str. 2
 41379, Brueggen
 Tel: +49 2157 8799-0
 Fax: +49 2157 8799-22
disynet@sensoren.de
www.sensoren.de

GERMANY

BIP-Industrietechnik GmbH
RAILWAY INSTRUMENTS ONLY
 Am Elisabethhof 22,
 D-14772 Brandenburg
 D-41379 Brueggen, Germany
 Tel: +49 (0) 33 81 75 90 0
 Fax: +49 (0) 33 81 75 90 11
info@bip-industrie.de
www.bip-industrietechnik.de

GERMANY

Finger GmbH & Co. KG
OPTICAL MICROMETERS ONLY
 Sapelloh 172,
 31606 Warmen, Germany
 Tel: +49 5767 96020
 Fax: +49 5767 93004
finger@finger-kg.de
www.finger-kg.de

GERMANY

Hylewicz CNC-Technik
SHTRIKH-2 ONLY
 Siemensstrasse 13-15,
 47608 Geldern, Germany
 Tel: +49 2831 91021-20
 Fax: +49 2831 91021-99
info@cnc-step.de
www.cnc-step.de

INDIA

Pragathi Solutions
 #698, 5th Main, 8th Cross,
 HAL 3rd Stage,
 New Tippasandra Road,
 Bangalore, 560075, India
 Tel: +91 80 32973388
 Tel/fax: +91 80 25293985
 Mobile: +91 9448030426/
 +919448492380
sales@pragathisolutions.in
arhyha@pragathisolutions.in
www.pragathisolutions.in

INDIA

BPI (India)
RAILWAY INSTRUMENTS ONLY
 63,Civil Lines, Near Bhagirathi
 Colony, Roorkee, 247667, India
 Tel: +91 1332274743
 Tel: +91 9319686784
sales@bpi-india.in
www.bpi-india.in

INDONESIA

PT. DHAYA BASWARA
SANIYASA
 Botanic Junction Blok H-9 NO. 7
 Mega Kebon Jeruk, Joglo
 Jakarta 11640, Indonesia
 Tel: + 62 21 29325859
management@ptdbs.co.id

30

IRAN

Novin Industrial
Development Grp.
 Tel: +98 21 44022093-6
 Fax: +98 21 43858794
 Mobile: +98 9123207518
info@novnid.com
www.novnid.com

ISRAEL

Nisso Dekalo Import
Export LTD
 1 David Hamelech Street
 Herzlia 46661 Israel
 Tel: +972-99577888
 Fax: +972-99568860
eli@fly-supply.net
www.fly-supply.net
www.aircraft-partsupply.com

ITALY

FAE s.r.l.
 Via Tertulliano, 41
 20137 Milano, Italy
 Tel: +39-02-55187133
 Fax: +39-02-55187399
fae@fae.it
www.fae.it

LATVIA, ESTONIA

SIA "SOLARTEX"
RAILWAY INSTRUMENTS ONLY
 Duntes 15a, 5th floor, office B7
 Riga, Latvia
 Tel.: +371 67 130 787
solartex@inbox.lv

MALAYSIA

OptoCom InstruVentures
 H-49-2, Jalan 5, Cosmoplex
 Industrial Park, Bandar Baru
 Salak Tinggi, Sepang, Malaysia
 Tel: 603 8706 6806
 Fax: 603 8706 6809
optocom@tm.net.my
www.optocom.com.my

NORWAY

Salitec AS
 PB 468,
 N-1327 Lysaker
 Tel.: +47 23 891015
 Fax: +47 92101005
mail@salitec.no
www.salitec.no

PERU

Verne Peru S.A.C.
 Las Codornices 104,
 Surquillo, Lima, Peru
 Tel/fax: +51 992436734
info@verne.cl
www.verne.cl

POLAND

MTL ASCO Sp. z o.o.
RAILWAY INSTRUMENTS ONLY
 ul. Wielowiejska 53 44-120
 PYSKOWICE (k/ GLIWIC),
 Poland
 Tel: + 48 32 230 45 70
 Fax: + 48 32 332 70 14
rail@ascorail.eu
www.ascorail.eu

PORTUGAL

UltraSens
 Qt. da Portela, Lt. 22.1, Ap. 152
 3030 - 502 Coimbra, Portugal
 Phone +351 239 796 277
 Fax: +351 239 918 267
info@ultrasens.com
www.ultrasens.com

RUSSIA**Sensorika-M LLC**

Dmitrovskoye shosse 64-4
127474, Moscow, Russia
Tel: +7 499 487 0363
Fax: +7 499 487 7460
info@sensorika.com
www.sensorika.com

RUSSIA**Diesel-test-Komplekt LLC**

620030, Karjernaya St, 16
Ekaterinburg, Russia
Tel/fax: +7 343 2227565
Tel/fax: +7 343 2227370
mail@d-test.ru
www.d-test.ru

SERBIA, SLOVAKIA**RMT Ltd.**

Zahradni 224
739 21 Paskov, Czech Republic
Tel: +420 558640211
Fax: +420 558640218
rmt@rmt.cz
www.rmt.cz

SOUTH AFRICA

Ratcom Enterprise Pty Ltd
CSIR BUILDING 35, Office 78
Meiring Naude Road, Brummeria
Pretoria, 0084 South Africa
Tel: + 27 12 841 2032
Fax: + 27 86 225 0650
info@ratcom.co.za
www.ratcom.co.za

SOUTH KOREA

PROSEN. CO., LTD
M-1001, Songdo techno park IT
center, 32, Songdogwahak-ro,
Yeon-su-gu, Incheon, 21984,
Republic of Korea
Tel: +82-32-811-3457
Fax: +82-32-232-7458
trade@prosen.co.kr
www.prosen.co.kr

SPAIN

Iberfluid Instruments S.A.
C/ Botanica, 122
08908 L'Hospitalet de Llobregat,
Barcelona
Tel: +34 93 447 10 65
Fax: +34 93 334 05 24
myct@iberfluid.com
www.iberfluid.com

SWITZERLAND

ID&T GmbH
Gewerbestrasse 12/a
8132 Egg (Zurich), Switzerland
Tel: + 41 44 994 92 32
Fax: + 41 44 994 92 34
info@idtlaser.com
www.idtlaser.com

SWEDEN, DENMARK

BLConsult
Ryssbalt 294,
95 291 KALIX, Sweden
Mobile: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

THAILAND

Advantech Solution Co.,Ltd.
20/170 Motorway Rd.,
Kwang Pravet, Khet Pravet,
Bangkok, Thailand 10250
Tel: +662-1848705
Fax: +662-1848708
sales@advantechsolution.com
www.advantechsolution.com

TURKEY

TEKMA Muhendislik A.S.
Cevizli Mh. M. Kemal Cd.,
Hukukcular Towers,
A-Blok, No: 66-A/39
Kartal – Istanbul
Tel: +90 216 970 1318
Tel: +90 850 840 2334
info@tekma.eu
www.tekma.eu

UKRAINE

KODA
Frunze st 22
61002, Harkov, Ukraine
Tel/fax: +38 057 714 26 54
mail@koda.com.ua
www.koda.com.ua

**UNITED KINGDOM,
IRELAND**

Ixthus Instrumentation Ltd
The Stables, Williams' Barns
Tiffield road, Towcester, Northents
Tel: +44 1327 353437
Fax: +44 1327 353564
info@ixthus.co.uk
www.ixthus.co.uk

USA, CANADA, MEXICO

**International Electronic
Machines Corporation**
RAILWAY INSTRUMENTS ONLY
850 River Street, Troy,
New York, USA
Tel: +1 518 268-1636
Fax: +1 518 268-1639
marketing@iem.net
wwwием.net

USA, CANADA, MEXICO

**Acuity Products of Schmitt
Industries, Inc.**
2765 NW Nicolai Street
Portland, OR, 97210, USA
Tel: +1 503 227 7908
Fax: +1 503 223 1258
sales@acuitylaser.com
www.acuitylaser.com