



Fuse/Relay Boxes

- Under-hood Fuse/Relay Box

Fuse-to-Components Index

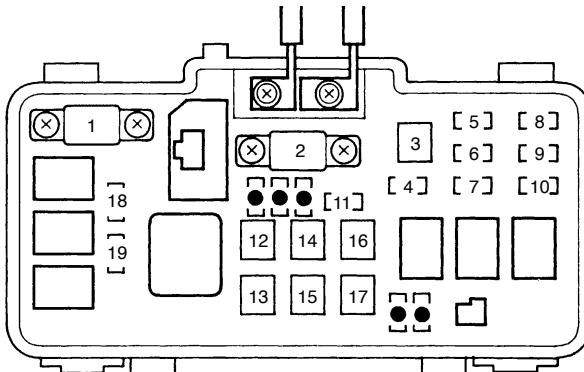


Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1	IG1 MAIN	50A	10-3	Ignition switch (BAT)
2	BATTERY	80A	10	Battery, DC-DC converter, Starter
3	ABS MOTOR	30A	10-2	ABS modulator-control unit
4	HAZARD	10A	10-2	Hazard warning switch
5	IMA	15A	10-2	High speed MPI module fan control relay, Low speed MPI module fan control relay
6	HORN, STOP	10A	10-2	Brake pedal position switch, Ignition key switch/key light (CVT), Horn Relay
7	FUEL PUMP	15A	10	PGM-FI main relay
8	L HEAD LIGHT	15A	110 or 110-2	DRL control unit (Canada), Gauge assembly, Left headlight
9	—	—	—	Not used
10	R HEAD LIGHT	15A	110 or 110-2	DRL relay (Canada), Right headlight
11	COOLING FAN	30A	10-1	Radiator fan relay
12	HEATER MOTOR	40A	10-1	Blower motor relay
13	RR DEFROSTER	30A	10	Rear window defogger relay
14	ABS F/S	20A	10	ABS modulator-control unit
15	POWER STEERING MOTOR	40A	10	EPS control unit
16	BACK UP, ACC	30A	10-1	No. 14, 18, 19, 20, 21, 22 and 23 fuses (in the under-dash fuse/relay box), Taillight relay
17	POWER WINDOW MOTOR	40A	10-1	No. 10 fuse (in the under-dash fuse/relay box), Power window relay
18	IMA ECU	7.5A	10	Ignition hold relay
19	(CONDENSER FAN)	(20A)	10-1	A/C compressor clutch relay, A/C condenser fan relay



Fuse/Relay Boxes

- Under-hood Fuse/Relay Box

Connector-to-Fuse/Relay Box Index

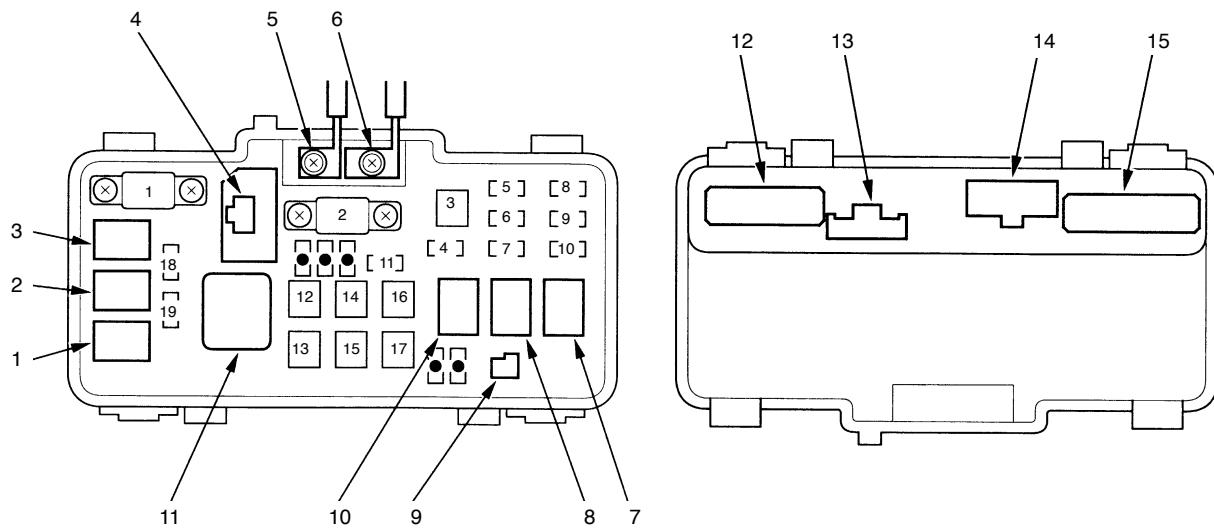


● : Spare fuse

Ref	Socket	Cavities	Connects to
1	A/C condenser fan relay	4	
2	Radiator fan relay	4	
3	A/C compressor clutch relay	4	
4	ELD Unit	3	Engine compartment wire harness (see page 203-8)
5	T101		DC-DC converter – driver's door wire harness (see page 203-28)
6	T1		Starter cable (see page 203)
7	Headlight relay 1	4	
8	Headlight relay 2	4	
9	Diode	2	
10	Horn relay	4	
11	Blower motor relay	4	
12	Connector D	16	Engine compartment wire harness (see page 203-8)
13	Connector C	3	Engine compartment wire harness (see page 203-8)
14	Connector B	7	Engine compartment wire harness (see page 203-8)
15	Connector A	18	Engine compartment wire harness (see page 203-8)


Fuse/Relay Boxes

- Under-dash Fuse/Relay Box

Fuse-to-Components Index

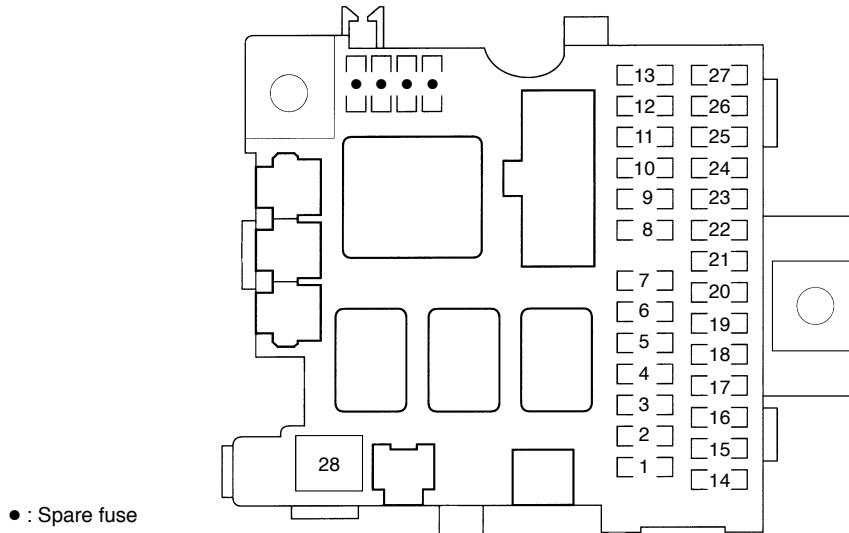


Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1	SRS	10A	10-4	SRS unit (VB)
2	FUEL PUMP SRS	15A	10-4	ECM ('05-'06), Fuel cut relay, PGM-FI main relay ('00-'04), SRS unit (VA)
3	FR WIPER	20A	10-4	Intermittent wiper relay, Windshield wiper motor, Wiper/washer switch
4	FI-ECU	7.5A	10-4	AF sensor relay (late production '01, '02-'06), DC-DC converter, ELD unit, EVAP bypass solenoid valve ('00-'05), EVAP canister vent shut valve, EVAP canister purge valve, Secondary HO2S, TCM (CVT), VSS
5	TURN LIGHT	7.5A	10-5	Hazard warning switch
6	METER	7.5A	10-5	EPS control unit, Gauge assembly, Hazard warning switch, Keyless door lock control unit, Power window master switch, Power window relay, Shift lock solenoid (CVT)
7	IG COIL	15A	10-5	Ignition coils
8	POWER WINDOW-AS	20A	120	Power window master switch
9	STARTER SIGNAL	7.5A	10-3	ECM, Starter cut relay
10	POWER WINDOW-DR	20A	10-6	Power window master switch
11	ACC RADIO	7.5A	10-6	Audio unit
12	ACC SOCKET	10A	10-6	Accessory power socket
13	—	—	—	Not used
14	(LAF HEATER)	(20A)	10-8	A/F sensor relay (late production '01, '02-'06)
15	SMALL LIGHT	10A	10-7	Audio unit, Climate control unit/Heater control panel, Front parking lights, Fuel consumption display select switch, Gauge assembly, Hazard warning switch, License plate light, Power window master switch, Taillights, Park pin switch (CVT), Front side marker light



Fuse/Relay Boxes

- Under-dash Fuse/Relay Box

Fuse-to-Components Index

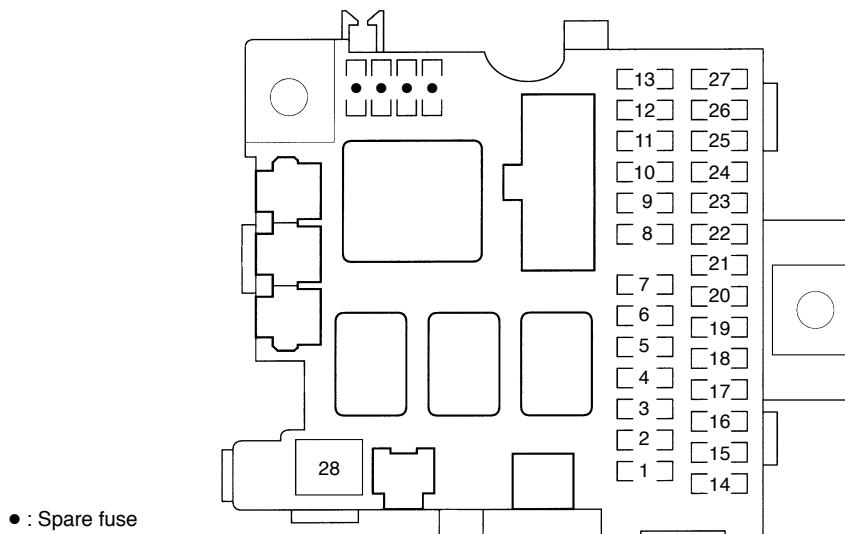


Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
16	A/C R/C MIRROR	7.5A	10-8	ABS modulator-control unit, A/C compressor clutch relay, A/C condenser fan relay, Blower motor relay, Blower motor high relay, Climate control unit/Heater control panel, Mode control motor, Power mirror switch, Radiator fan main relay, Radiator fan relay, Rear window defogger relay, Recirculation control motor
17	(DAY LIGHT)	(7.5A)	10-8	DRL control unit (Canada)
18	BACK UP	7.5A	10-8	BCM, Climate control unit/Heater control panel, DLC, ECM ('00-'04), Gauge assembly, MCM, TCM (CVT)
19	INTERIOR LIGHT	7.5A	10-8	Cargo area light, Ceiling light/Spotlights
20	RADIO	10A	10-8	Audio unit
21	(DAY LIGHT)	(10A)	10-9	DRL control unit (Canada)
22	DOOR LOCK	20A	10-9	Keyless door lock control unit
23	T/G LOCK	7.5A	10-9	Hatch opener relay, Hatch opener switch
24	IMA	7.5A	10-9	Battery module fan motor, High speed battery module fan control relay, IMA diode, Low speed battery module fan control relay, MCM
25	—	—	—	Not used
26	RR WIPER	10A	10-9	Rear window wiper motor, Wiper/washer switch
27	BACK LIGHT	7.5A	10-9	A/T reverse relay (CVT), Back-up light switch (M/T)
28	—	—	—	Not used

Fuse/Relay Boxes


- Under-dash Fuse/Relay Box

Connector-to-Fuse/Relay Box Index

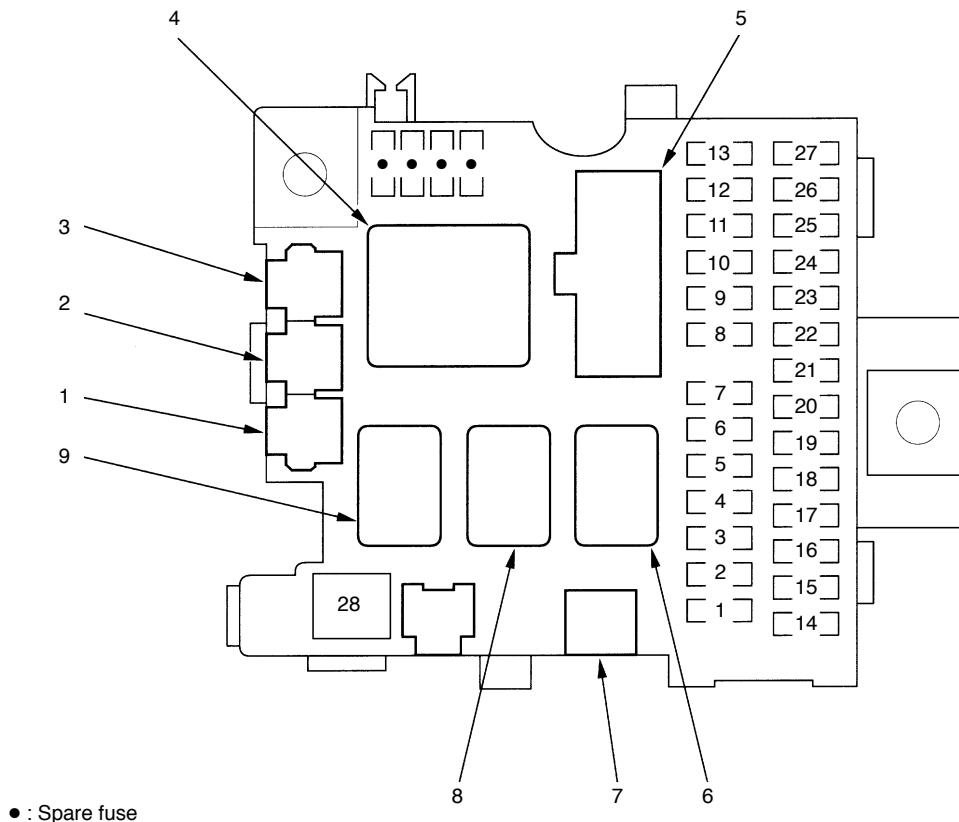

● : Spare fuse

Ref	Socket	Cavities	Connects to
1	Connector C	1	Optional connector (Ignition switch – ACC or ON output)
2	Connector D	1	Optional connector (Ignition switch – ON output: Fuse 16 – Under-hood)
3	Connector E	1	Optional connector (Ignition switch – ON output)
4	Turn signal/hazard relay	3	
5	Connector B	7	Ignition switch leads (see page 203-32)
6	Power window relay	5	
7	Connector A	2	Floor wire harness (see page 203-18)
8	Starter cut relay	5	
9	Taillights relay	5	



Ground-to-Components Index

NOTE: All ground wires are BLK unless otherwise noted.

Ground	Page	Component or Circuit Grounded
G1	14-7	Battery
G2	14-7	Engine block
G3	14-7	Transmission
G4	14-7	EPS motor
G101 and G102 ('02-'06)	14 and 14-1	BCM module (BRN/YEL), ECM (PG1 and PG2 are BLK; LG1 and LG2 are BRN/BLK), DLC (BRN/YEL), EGR valve and EGR valve position sensor, IAC valve, Ignition coils, Immobilizer receiver unit (BRN/YEL), MCM (BRN/YEL), Neutral position switch (M/T), PGM-FI main relay ('00-'04), Primary HO2S ('00, early production '01), Radiator fan switch, Rocker arm oil pressure switch (VTEC oil pressure switch), TCM (CVT), Transmission range switch (CVT), Voltage converter module (BRN/YEL), VSS Shielding between the ECM and these components have BRN/BLK wires: CKP sensor, CMA, CMB, and CMC motor sensors, Knock sensor, Motor current sensor, Primary HO2S, Secondary HO2S, TDC sensors.
G201	14-2	ABS modulator-control unit (2 wires), CAS solenoid valves A and B (CVT), Rear window washer motor, Right front parking light, Right front side marker light, Right front turn signal light, Windshield washer motor
G301	14-2	Blower motor relay, ELD unit, Intermittent wiper relay, Left front parking light, Left front side marker light, Left front turn signal light, Radiator fan main relay, Radiator fan motor
G401 and G402	14-3 and 14-4	Brake fluid level switch, Cable reel (CVT), Ceiling light/Spotlights, Clutch pedal position switch (M/T), Combination light switch, DLC, DRL control unit (Canada) (2 wires), Driver's door lock knob switch/lock actuator, Driver's door lock switch, EPS motor relay, Fuel consumption display select switch, Gauge assembly (2 wires), Idle stop switch (CVT), Ignition key switch/key light, Keyless door lock control unit, Power mirror switch, Power window master switch (2 wires), Power window relay, Turn signal/hazard relay, Windshield wiper motor, Wiper/washer switch
G403	14-4	Audio unit
G404	14-4	Accessory power socket, Blower motor high relay, Blower power transistor, Climate control unit/Heater control panel
G451	14-4	EPS control unit
G501	14-5	SRS unit (2 wires)
G502	14-5	BCM module (2 wires), Bypass contactor, Driver's seat belt switch, Fuel gauge sending unit, Fuel pump, High voltage contactor, Battery module fan resistor, High speed battery module fan control relay, High speed MPI module fan control relay, High voltage contactor relay, Ignition hold relay, Junction board (3 wires), Low speed battery module fan control relay, Low speed MPI module fan control resistor, MCM (2 wires), MES connector, Park pin switch (CVT)
G601	14-6	Hatch key cylinder switch, Hatch latch/unlock switch (2 wires), Hatch opener actuator, License plate light, Taillights
G651	14-7	DC-DC converter
G701	14-6	High mount brake light, Lower rear window defogger, Rear window defogger, Rear window wiper motor

Connector to Harness Index

Starter Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
4	T1 (see page 6-1)		Left front side of engine compartment	Under-hood fuse/relay box	
8	T2		Front top of transmission	Starter motor	
	(+)		Battery	Battery positive terminal	

Battery Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	G1		Middle rear of engine compartment	Battery ground via engine ground cable	
	(-)		Battery	Battery negative terminal	

Engine Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
3 5	T3 G2		Left side of engine compartment Left side of engine compartment	Transmission mount bracket Body ground via engine ground cable	

Transmission Ground Cable


Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
6	G3		Left side of engine compartment	Body ground via transmission ground cable	
7	T4		Left side of engine compartment	Transmission housing	

EPS Motor Ground Cable

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
2	G4		Left rear of engine compartment	Body ground via EPS motor ground cable	
9	T5		Left rear of engine compartment	EPS motor	



Connector to Harness Index

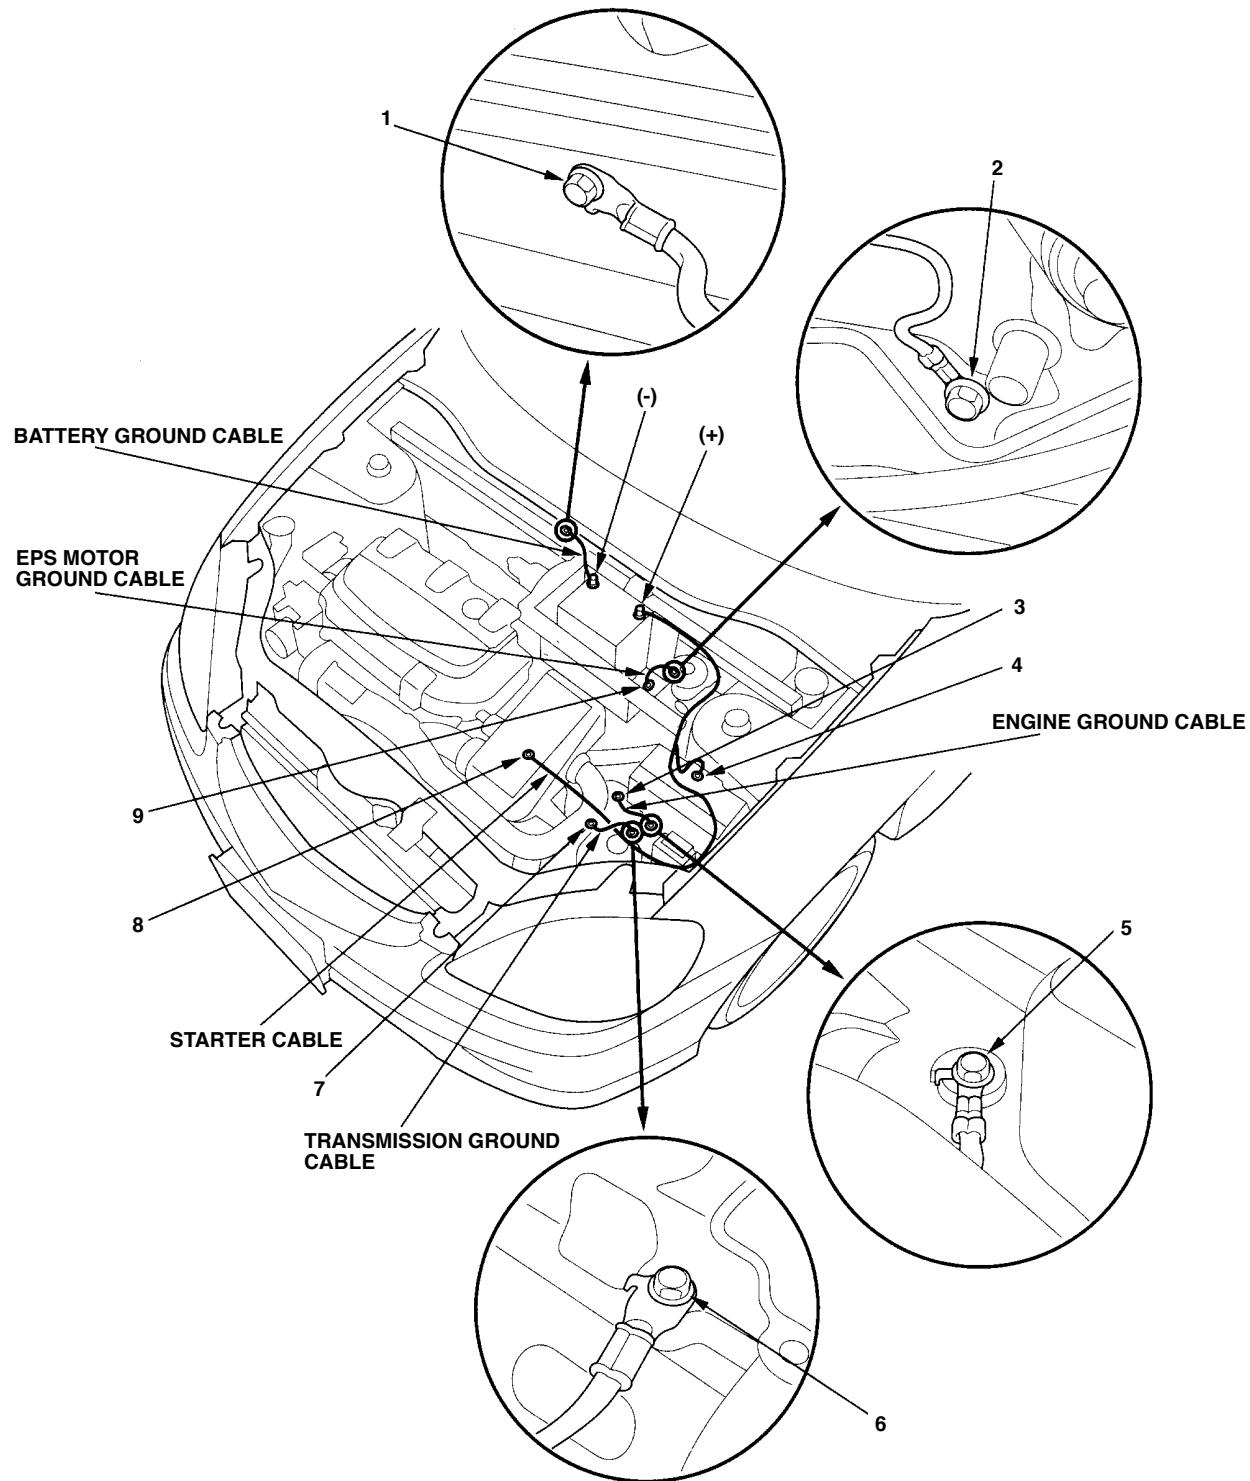


Connector to Harness Index


Engine Wire Harness (M/T)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	ECM connector D	16-GRY	Right side of floor		
2	ECM connector C	31-BLU	Right side of floor		
3	ECM connector B	25-GRY	Right side of floor		
4	Ignition coil No. 1	3-BLK	Rear of engine		
5	Ignition coil No. 2	3-BLK	Rear of engine		
6	C101	4-GRY	Under middle of dash	Engine compartment wire harness (see page 203-10)	'00-'04
6	C101	6-GRY	Under middle of dash	Engine compartment wire harness (see page 203-10)	'05-'06
7	C102	16-LT BLU	Under middle of dash	Dashboard wire harness B (left branch) (see page 203-12)	
8	C103	24-LT BLU	Under middle of dash	Floor wire harness (see page 203-18)	
9	Ignition coil No. 3	3-BLK	Rear of engine		
10	Primary HO2S	8-GRY	Rear of engine		
10	A/F sensor	4-GRY	Rear of engine		
11	ECT sensor	2-GRY	Rear of engine		
12	TDC sensor 2	2-BLK	Middle of engine		
13	VSS	3-GRY	Rear of transmission		
14	Neutral position switch	2-GRY	Rear of transmission		
15	Motor commutation sensor	10-GRY	Middle of rear engine		
16	Secondary HO2S	4-GRY	Below rear of engine		
17	Back-up lights switch	2-GRY	Top of transmission		
18	C104 (Junction Connector)	14-GRY/BRN	Middle of engine		
19	MAP sensor	3-GRY	Middle of engine		
20	Starter solenoid	1-BLK	Front top of transmission		
21	EVAP canister purge valve	2-BLK	Middle of engine		
22	TDC sensor 1	2-BLK	Middle of engine		
23	G101		Middle of engine	Body ground via engine wire harness	
24	IAT sensor	2-BLK	Middle of engine		
25	IAC valve	3-GRY	Front of engine		
26	TP sensor	3-GRY	Front of engine		
27	Oil pressure switch	1-GRY	Below front of engine		
28	Knock sensor	1-BLK	Front of engine		
29	Radiator fan switch	2-GRY	Front of engine		
30	Rocker arm oil control solenoid (VTEC solenoid valve)	1-GRY	Front of engine		
31	Rocker arm oil pressure switch (VTEC oil pressure switch)	2-GRY	Front of engine		
32	EGR valve and EGR Value position sensor	6-GRY	Middle of engine		
33	Injector No. 3	2-GRY	Front of engine		
34	Injector No. 2	2-GRY	Front of engine		
35	Injector No. 1	2-GRY	Front of engine		
36	CKP sensor	2-GRY	Below right side of engine		
37	T6 (Terminal Joint)		Middle of engine		
38	T7 (Terminal Joint)		Middle of engine		
39	G102		Middle of engine	Body ground via engine wire harness	'02-'06
40	C105 (Junction Connector)	22-WHT	Right side of floor		

*1 = '00 and Early Production '01




Connector to Harness Index

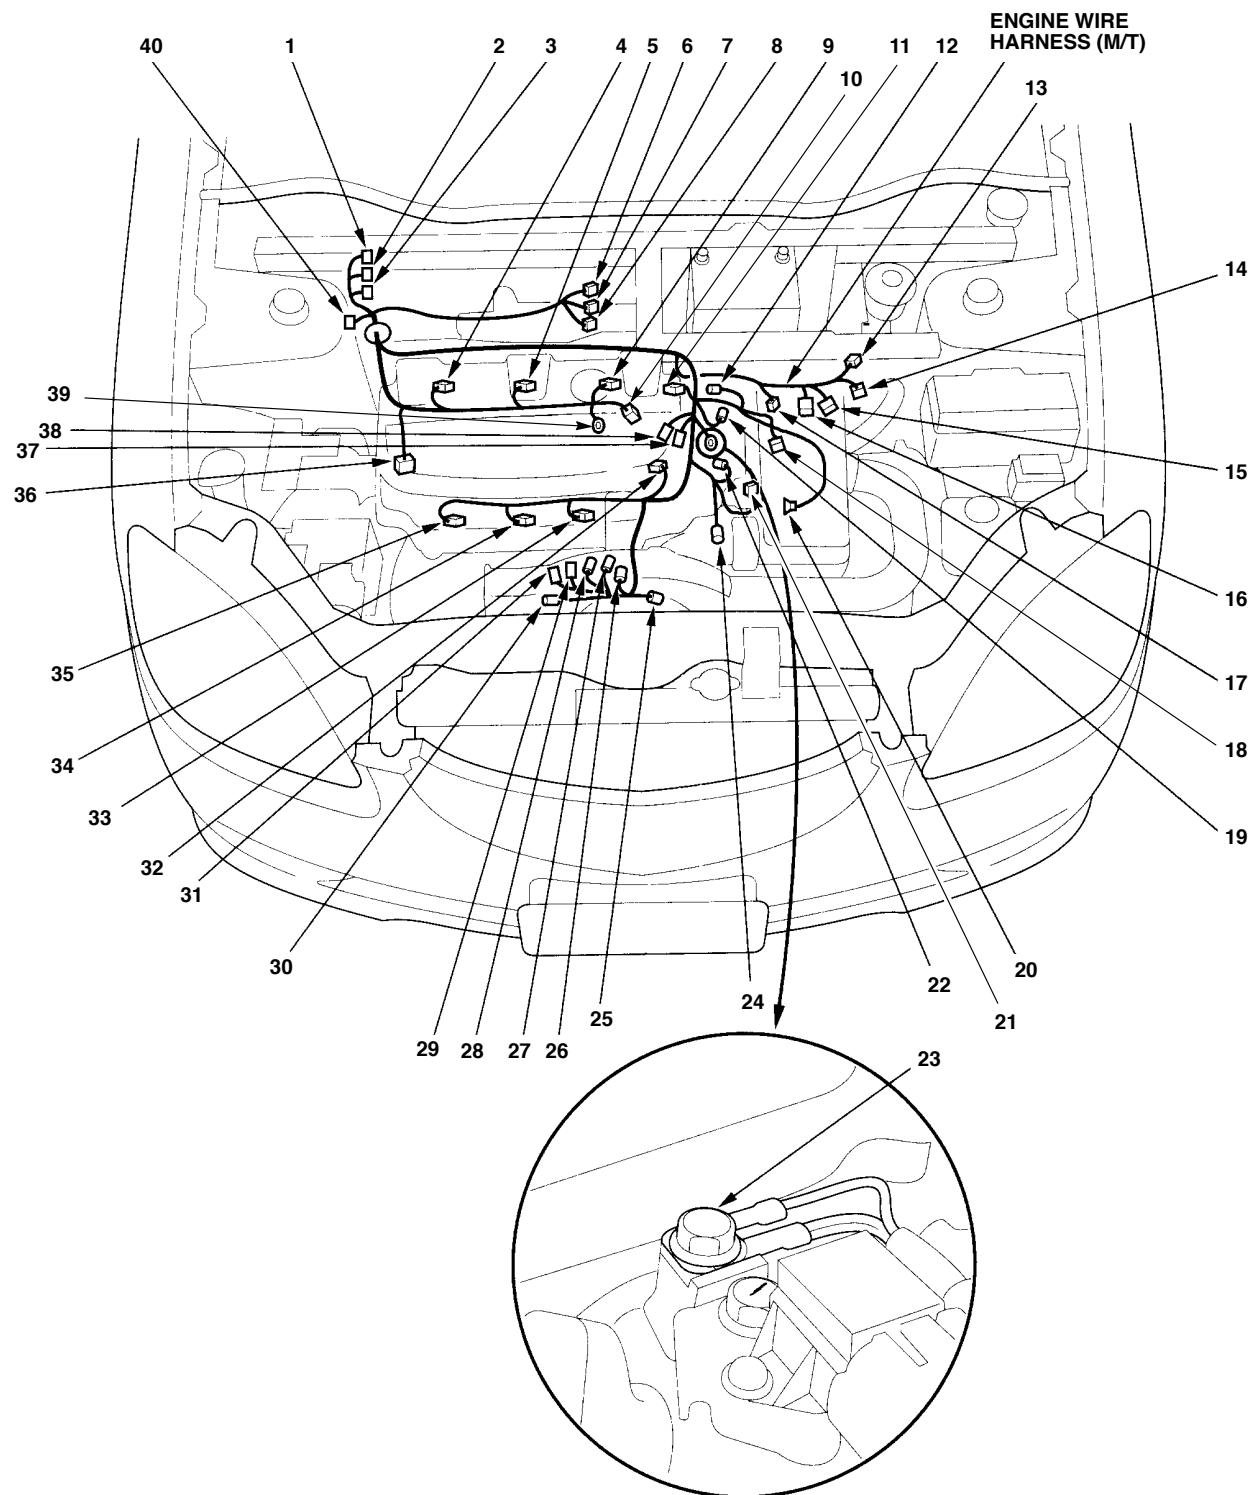


Connector to Harness Index

Engine Wire Harness (CVT)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	ECM connector B	25-GRY	Right side of floor		
2	ECM connector C	31-BLU	Right side of floor		
3	Transmission control module connector A	26-GRY	Right kick panel		
4	Transmission control module connector B	22-GRY	Right kick panel		
5	ECM connector D	16-GRY	Right side of floor		
6	C107 (Junction Connector)	22-WHT	Under middle of dash		
7	C108 (Junction Connector)	22-WHT	Under middle of dash		
8	C101	8-GRY	Under middle of dash		
9	C102	16-LT BLU	Under middle of dash	Engine compartment wire harness (see page 203-10)	
10	C106	6-LT BLU	Under middle of dash	Dashboard wire harness B (see page 203-12)	
11	C103	24-LT BLU	Under middle of dash	Dashboard wire harness B (see page 203-12)	
12	Ignition coil No. 3	3-BLK	Rear of engine	Floor wire harness (see page 203-18)	
13	A/F sensor	4-GRY	Left side of engine compartment		Late Production '01; '02-'06
14	TDC sensor 1	2-BLK	Middle of engine		
15	Motor commutation sensor	10-GRY/ GRN	Middle rear of engine		
16	Transmission range switch	6-GRY	Transmission housing		
17	VSS	3-BLK	Rear of transmission		
18	Secondary HO2S	4-GRY	Below rear of engine		
19	C104 (Junction Connector)	14- GRY/BRN	Middle of engine		
20	CVT driven pulley speed sensor	3-BLK	Middle of engine		
21	CVT speed sensor	3-BLK	Middle of engine		
22	Starter solenoid	1-BLK	Front top of transmission		
23	C109	8-GRY	Transmission housing	Solenoid wire harness (CVT) (see page 203-33)	
24	CVT drive pulley speed sensor	3-BLK	Middle of engine		
25	ECT Sensor	2-GRY	Middle of engine		
26	G101		Middle of engine	Body ground via engine wire harness	
27	IAT sensor	2-BLK	Middle of engine		
28	EVAP canister purge valve	2-BLK	Middle of engine		
29	TDC sensor 2	2-BLK	Middle of engine		
30	MAP sensor	3-GRY	Middle of engine		
31	TP sensor	3-GRY	Front of engine		
32	IAC valve	3-GRY	Front of engine		
33	Oil pressure switch	1-GRY	Below front of engine		
34	Knock sensor	1-BLK	Front engine		
35	Rocker arm oil pressure switch (VTEC oil pressure switch)	2-GRY	Front of engine		
36	Radiator fan switch	2-GRY	Front of engine		
37	Rocker arm oil control solenoid (VTEC solenoid valve)	1-GRY	Front of engine		
38	EGR valve and EGR valve position sensor	6-GRY	Middle of engine		
39	Injector No. 3	2-GRY	Front of engine		
40	Injector No. 2	2-GRY	Front of engine		
41	Injector No. 1	2-GRY	Front of engine		
42	T6 (Terminal Joint)		Middle of engine		
43	T7 (Terminal Joint)		Middle of engine		
44	CKP sensor	2-GRY	Right side of engine		
45	G102		Middle of engine	Body ground via engine wire harness	
46	Ignition coil No. 1	3-BLK	Rear of engine		
47	Ignition coil No. 2	3-BLK	Rear of engine		
48	C105 (Junction Connector)	22-WHT	Right side of floor		



ENGINE WIRE HARNESS (CVT)

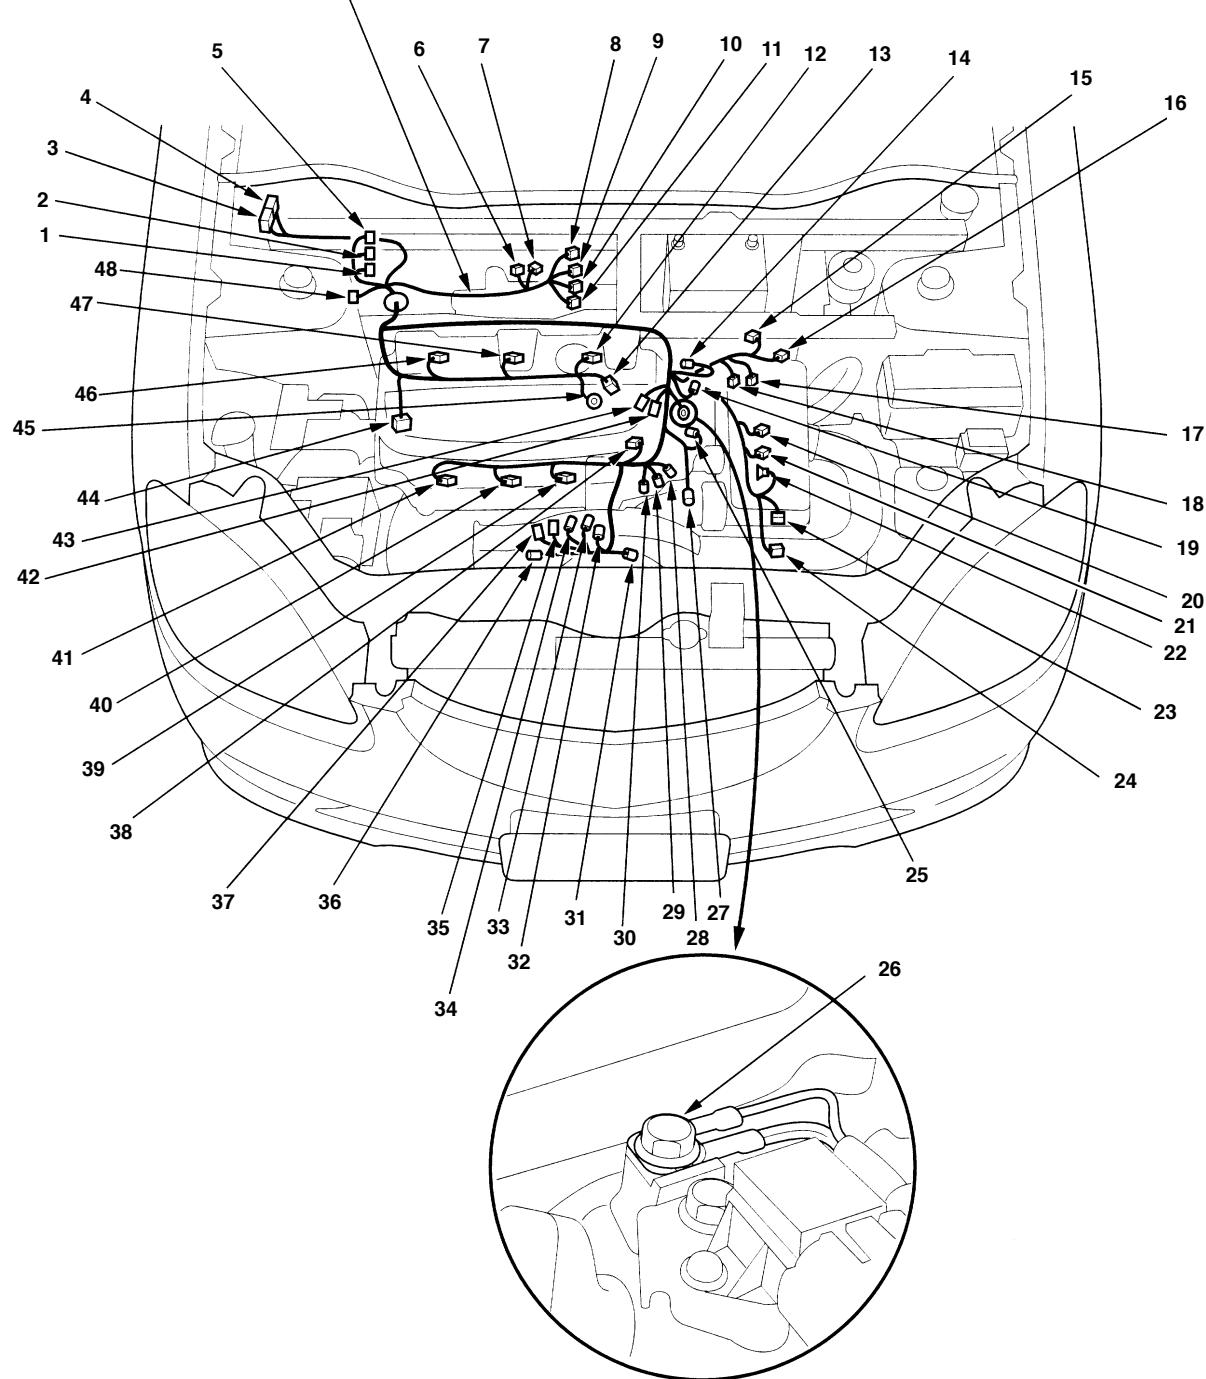


Connector to Harness Index

Engine Compartment Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	A/C compressor	1-GRY	Below right front of engine compartment		
1	A/C compressor	3-GRY	Below right front of engine compartment		Optional
2	A/C condenser fan assembly	2-GRY	Right front of engine compartment		
3	Horn	1-BLK	Behind right side of front bumper		
4	Right front parking light	2-BRN/NAT	Behind right headlight assembly		
5	Right headlight	3-BLK	Behind right headlight assembly		
6	Right front side marker light	2-BRN/NAT	Behind right headlight assembly		
7	Rear window washer motor	2-BRN/NAT	Behind right front wheel well		
8	Windshield washer motor	2-LT GRN/NAT	Behind right front wheel well		
9	Right front turn signal light	2-BRN/NAT	Behind right headlight assembly		
10	G201		Above right front wheel well	Body ground via engine compartment wire harness	
11	ABS modulator-control unit	25-BLK/ORN	Right front side of engine compartment		
12	CAS solenoid valves A and B	4-GRY	Right side of engine compartment		CVT
13	Right front wheel speed sensor	2-ORN	Right side of engine compartment		
14	A/C pressure switch	4-GRY	Right side of engine compartment		
15	Brake fluid pressure sensor A	3-BLU	Right side of engine compartment		'05-'06 M/T
16	Brake fluid pressure sensor B	3-GRY	Right side of engine compartment		'05-'06 M/T



Connector to Harness Index

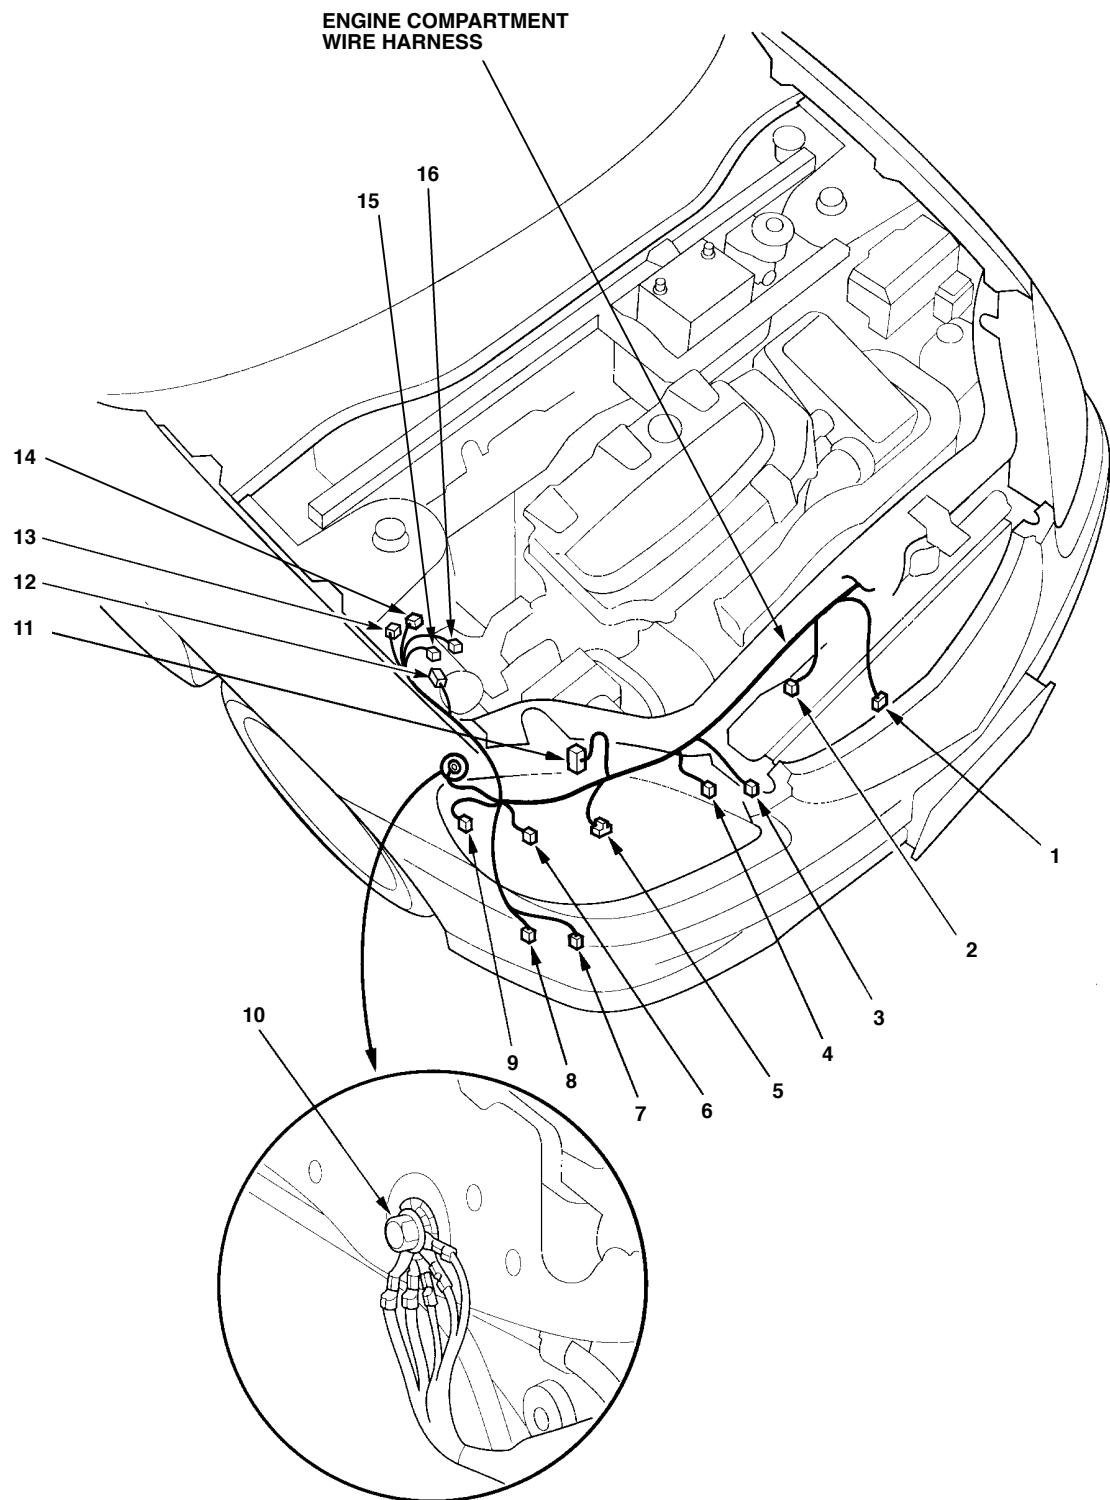


Connector to Harness Index

Engine Compartment Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Rear window defogger relay	4-GRY	Left front side of engine compartment		
2	Radiator fan main relay	5-GRY	Left front side of engine compartment		
3	Fuel cut relay	4-BLU	Left front side of engine compartment		
4	Intermittent wiper relay	5-BLU	Left front side of engine compartment		
5	Under-hood fuse/relay box connector A <i>(see page 6-1)</i>	18-LT GRN	Left front side of engine compartment		
6	Under-hood fuse/relay box connector B <i>(see page 6-1)</i>	7-BRN	Left front side of engine compartment		
7	Under-hood fuse/relay box connector C <i>(see page 6-1)</i>	3-BRN	Left front side of engine compartment		
8	Under-hood fuse/relay box connector D <i>(see page 6-1)</i>	16-LT GRN	Left front side of engine compartment		
9	ELD unit <i>(see page 6-1)</i>	3-GRY	In under-hood fuse/relay box		
10	Left front wheel speed sensor	2-ORN	Left side of engine compartment		
11	G301		Above left front wheel well		
12	Left front turn signal light	2-BRN/NAT	Behind left headlight assembly		
13	Left front side marker light	2-BRN/NAT	Behind left headlight assembly		
14	Left headlight	3-BLK	Behind left headlight assembly		
15	Left front parking light	2-BRN/NAT	Behind left headlight assembly		
16	Radiator fan motor	2-GRY	Left front of engine compartment		
17	Outside air temperature sensor	2-GRY	Behind middle of bumper		
				Body ground via engine compartment wire harness	
				Climate Control	




Connector to Harness Index

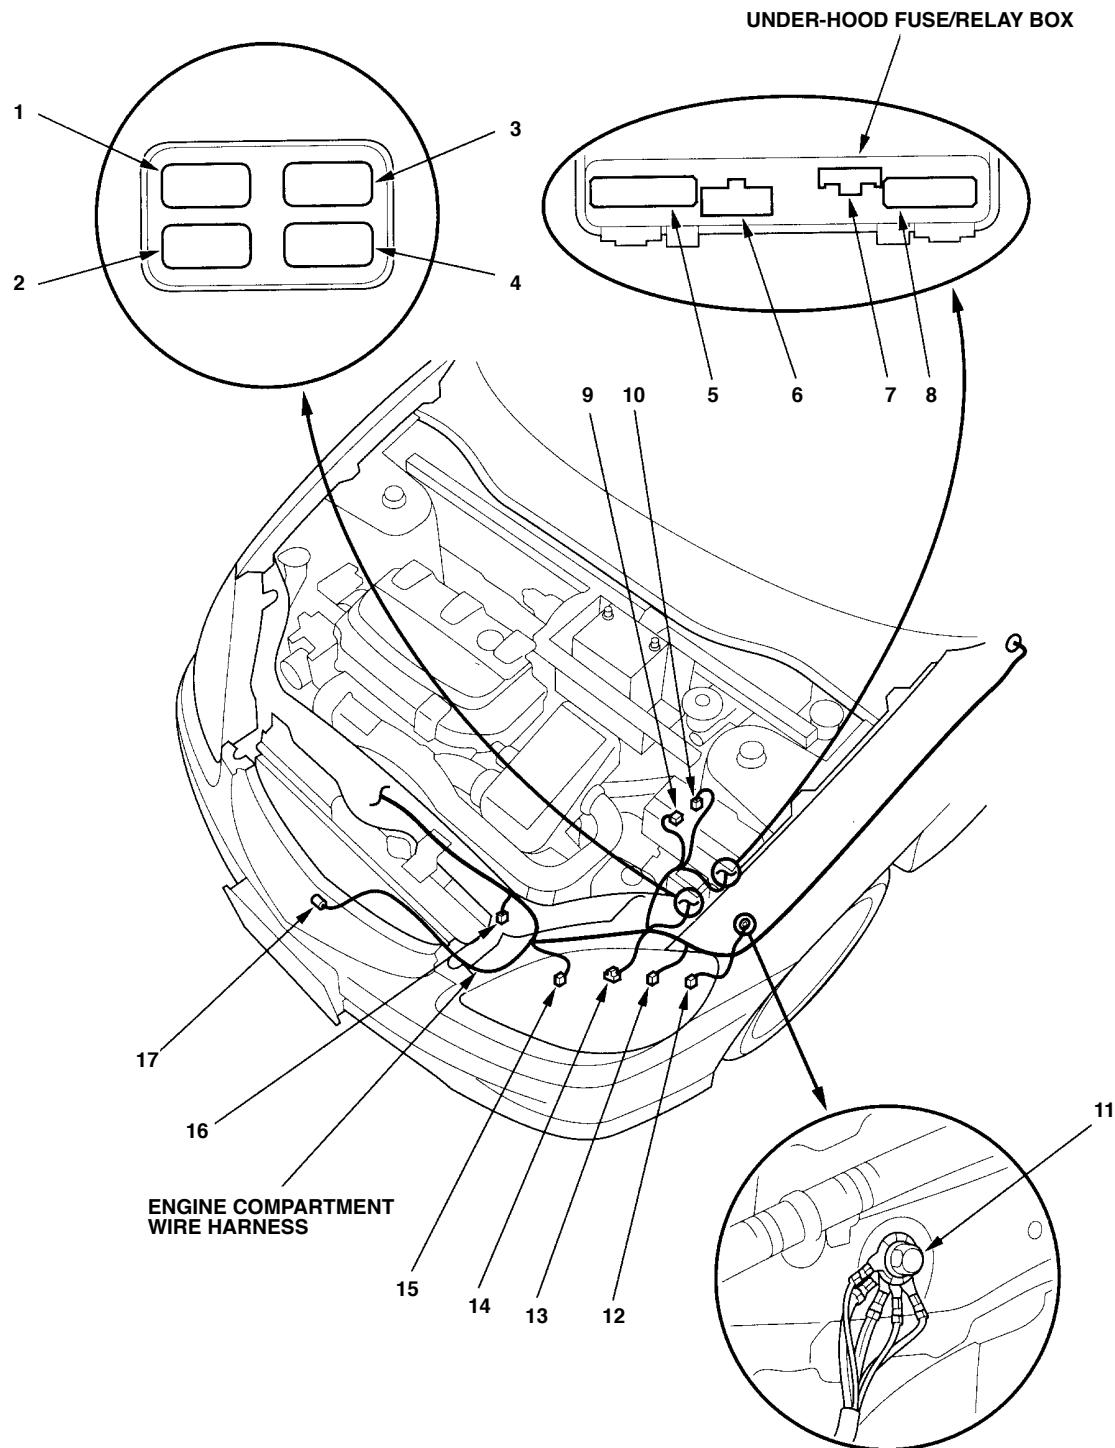


Connector to Harness Index

Engine Compartment Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	A/C diode	3-WHT/BLK	Under left side of dash		
2	C401	3-BRN	Under left side of dash	Dashboard wire harness B (left branch) (see page 203-12)	
3	A/T reverse relay	4-BLU	Under left side of dash		CVT
4	PGM-FI main relay	4-BLU	Under left side of dash		
5	ECM connector A	32-GRY	Right side of floor		
6	C101	4-GRY	Under middle of dash	Engine wire harness (see page 203-2)	'00-'04 M/T
6	C101	6-GRY	Under middle of dash	Engine wire harness (see page 203-2)	'05-'06 M/T
6	C101	8-GRY	Under middle of dash	Engine wire harness (see page 203-4)	CVT
7	C501	16-LT BLU	Under middle of dash	Floor wire harness (see page 203-18)	
8	C531	16-LT BLU	Under left side of dash	Dashboard wire harness A (see page 203-16)	
9	C402	14-GRY	Under left side of dash	Dashboard wire harness B (left branch) (see page 203-12)	'00, Early Production '01
9	C402	18-GRY	Under left side of dash	Dashboard wire harness B (left branch) (see page 203-12)	Late Production '01; '02-'06
10	C403	16-LT BLU	Under left side of dash	Dashboard wire harness B (left branch) (see page 203-12)	
11	C451	1-BRN	Under left side of dash	Wiper sub-harness (see page 203-11)	

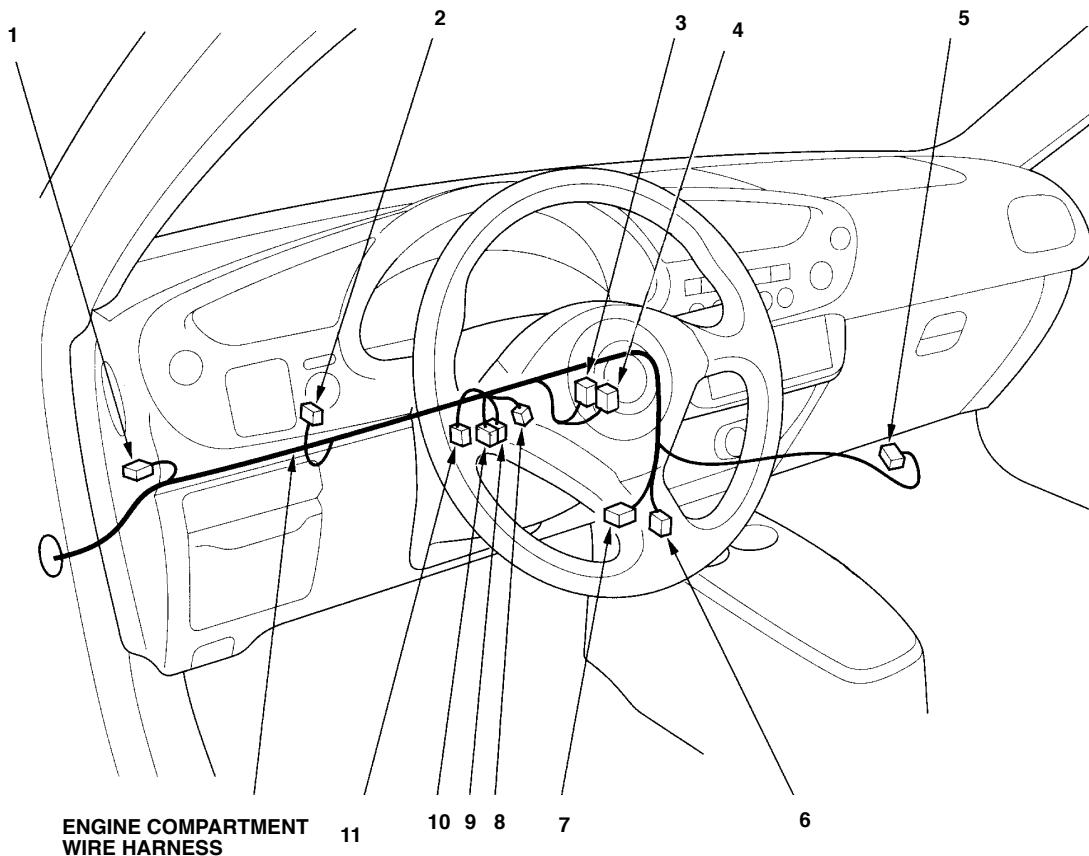




Connector to Harness Index

Wiper Sub-Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Brake fluid level switch	2-GRY	Left rear of engine compartment		
2	Brake booster vacuum sensor	3-GRY	Left rear of engine compartment		
3	Test tachometer connector	2-NAT	Left rear of engine compartment		
4	EPS motor	2-GRY	Left rear of engine compartment		
5	EPS torque sensor	7-BLK	Left rear of engine compartment		
6	C451	1-BRN	Under left side of dash		
7	C452	16-GRY	Under left side of dash	Engine compartment wire harness (see page 203-10) Dashboard wire harness B (left branch) (see page 203-12)	
8	Windshield wiper motor	5-GRY	Right rear of engine compartment		
9	EPS control unit connector A	4-NAT	Under right side of kick panel		
10	EPS control unit connector B	14-GRN	Under right side of kick panel		
11	EPS motor relay	4- BRN/NAT	Under right side of kick panel		
12	G451		Behind right kick panel area	Body ground via wiper sub-harness	

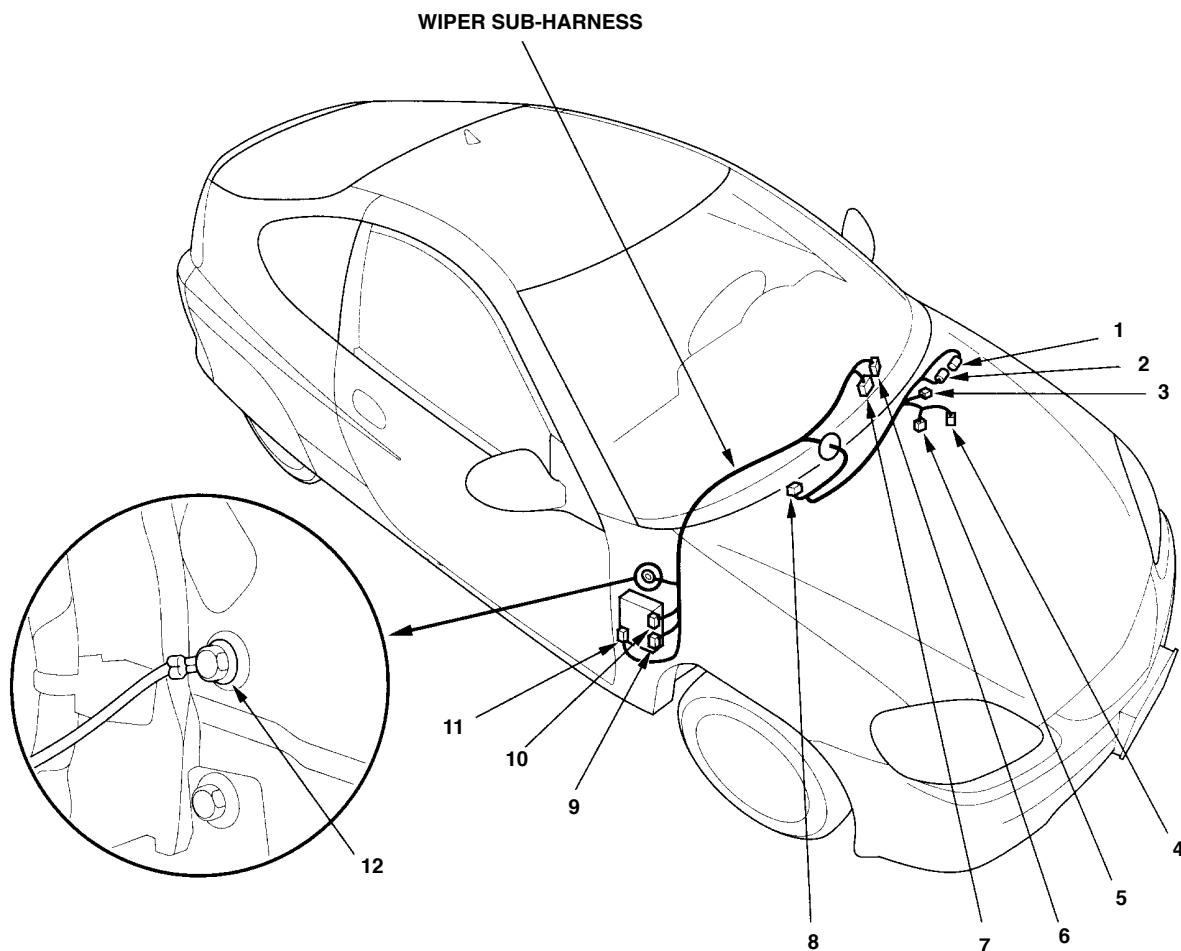


Connector to Harness Index

Dashboard Wire Harness B (left branch)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	G401		Upper left kick panel area	Body ground via dashboard wire harness B	
2	C404	24-LT BLU	Under left side of dash	Dashboard wire harness A (see page 203-16)	
3	C405	14-GRY	Under left side of dash	Dashboard wire harness A (see page 203-16)	
4	C452	16-GRY	Under left side of dash	Wiper sub-harness (see page 203-11)	
5	C402	14-GRY	Under left side of dash	Engine compartment wire harness (see page 203-10)	'00-'01
5	C402	18-GRY	Under left side of dash	Engine compartment wire harness (see page 203-10)	'02-'06
6	C403	16-LT BLU	Under left side of dash	Engine compartment wire harness (see page 203-10)	
7	G402		Left side of dash	Body ground via dashboard wire harness B	
8	G403		Middle of dash	Body ground via dashboard wire harness B	
9	Immobilizer receiver unit	5-GRN	Right side of steering column		
10	Wiper/washer switch	14-GRY	Right side of steering column		
11	Cable reel connector B	4-BLK	Lower side of steering column		
12	C106	6-LT BLU	Behind center lower cover	Engine wire harness (see page 203-4)	CVT
13	C502	24-LT BLU	Behind center lower cover	Floor wire harness (see page 203-18)	
14	C503	2-BLU	Behind center lower cover	Floor wire harness (see page 203-18)	
15A	DLC	16-GRY	Behind center lower cover		'00, Early Production
15B	DLC	16-GRY	Under middle of dash		'01 Late Production
16	C102	16-LT BLU	Under middle of dash	Engine wire harness (see page 203-2 or 203-4)	'01, '02-'06
17	Combination light switch	16-GRY	Left side of steering column		
18	Ignition key switch/key light	2-GRY	Left side of steering column		M/T
18	Ignition key switch/key light	5-GRY	Left side of steering column		CVT
19	Brake pedal position switch	2-NAT	Under left side of dash		CVT
20	Idle stop switch	2-NAT	Under left side of dash		
21	C401	3-BRN	Under left side of dash	Engine compartment wire harness (see page 203-10)	
22	Clutch pedal position switch	2-YEL	Under left side of dash		M/T
23	C406	4-GRY	Left side of dash	Roof wire harness (see page 203-31)	
24	Keyless door lock control unit	18-GRY/WHT	Under left side of dash		
25	Turn signal/hazard relay	3-BLK	Upper left kick panel area		
26	Power window relay	5-BLK	Upper left kick panel area		
27	Starter cut relay	5-BLK	Upper left kick panel area		
28	Taillight relay	5-BLK	Upper left kick panel area		
29	DRL control unit	14	Under left side of dash		Canada
30	Low beam cut relay	5	Under left side of dash		Canada
31	DRL relay	5	Under left side of dash		Canada
32	C407	16-GRY	Upper left kick panel area	DC-DC converter-driver's door wire harness (see page 203-28)	
33	A/F sensor relay	4-BLK	Upper left kick panel area		Late Production '01, '02-'06




Connector to Harness Index

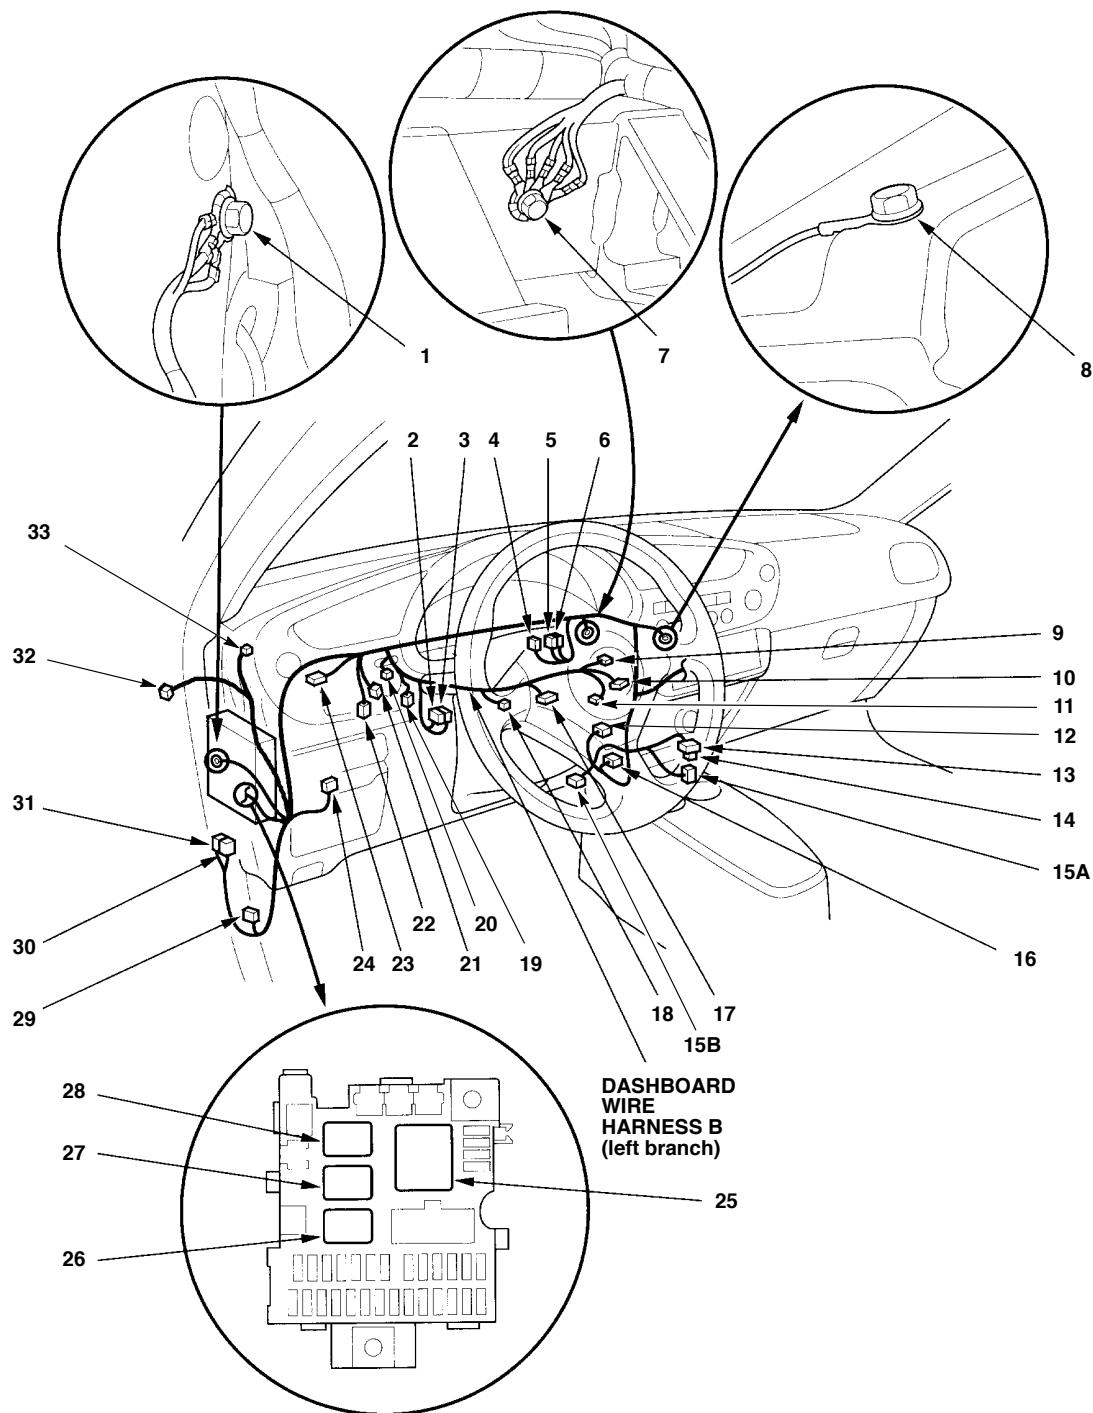


Connector to Harness Index

Dashboard Wire Harness B (right branch)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	G404		Right side of dash	Body ground via dashboard wire harness B	
2	Audio unit connector A	20-LT BLU	Middle of dash		
3	Evaporator temperature sensor	2-GRY	Behind glove box		
4	Blower power transistor	3-NAT	Behind glove box		
5	C409	12-GRY	Right side of dash	Passenger's door wire harness (see page 203-30)	
6	Blower motor	2-NAT	Under right side of dash		
7	Blower motor high relay	4-BRN/NAT	Under right side of dash		
8	Recirculation control motor	4-GRN	Behind glove box		
9	Air mix control motor	5-GRN	Under middle of dash		
10	Accessory power socket	2-BLK	Middle of dash		
11	C410	10-GRY	Behind center lower cover	Dashboard wire harness A (see page 203-16)	CVT
12	C408	16-LT BLU	Behind center lower cover	Dashboard wire harness A (see page 203-16)	




Connector to Harness Index

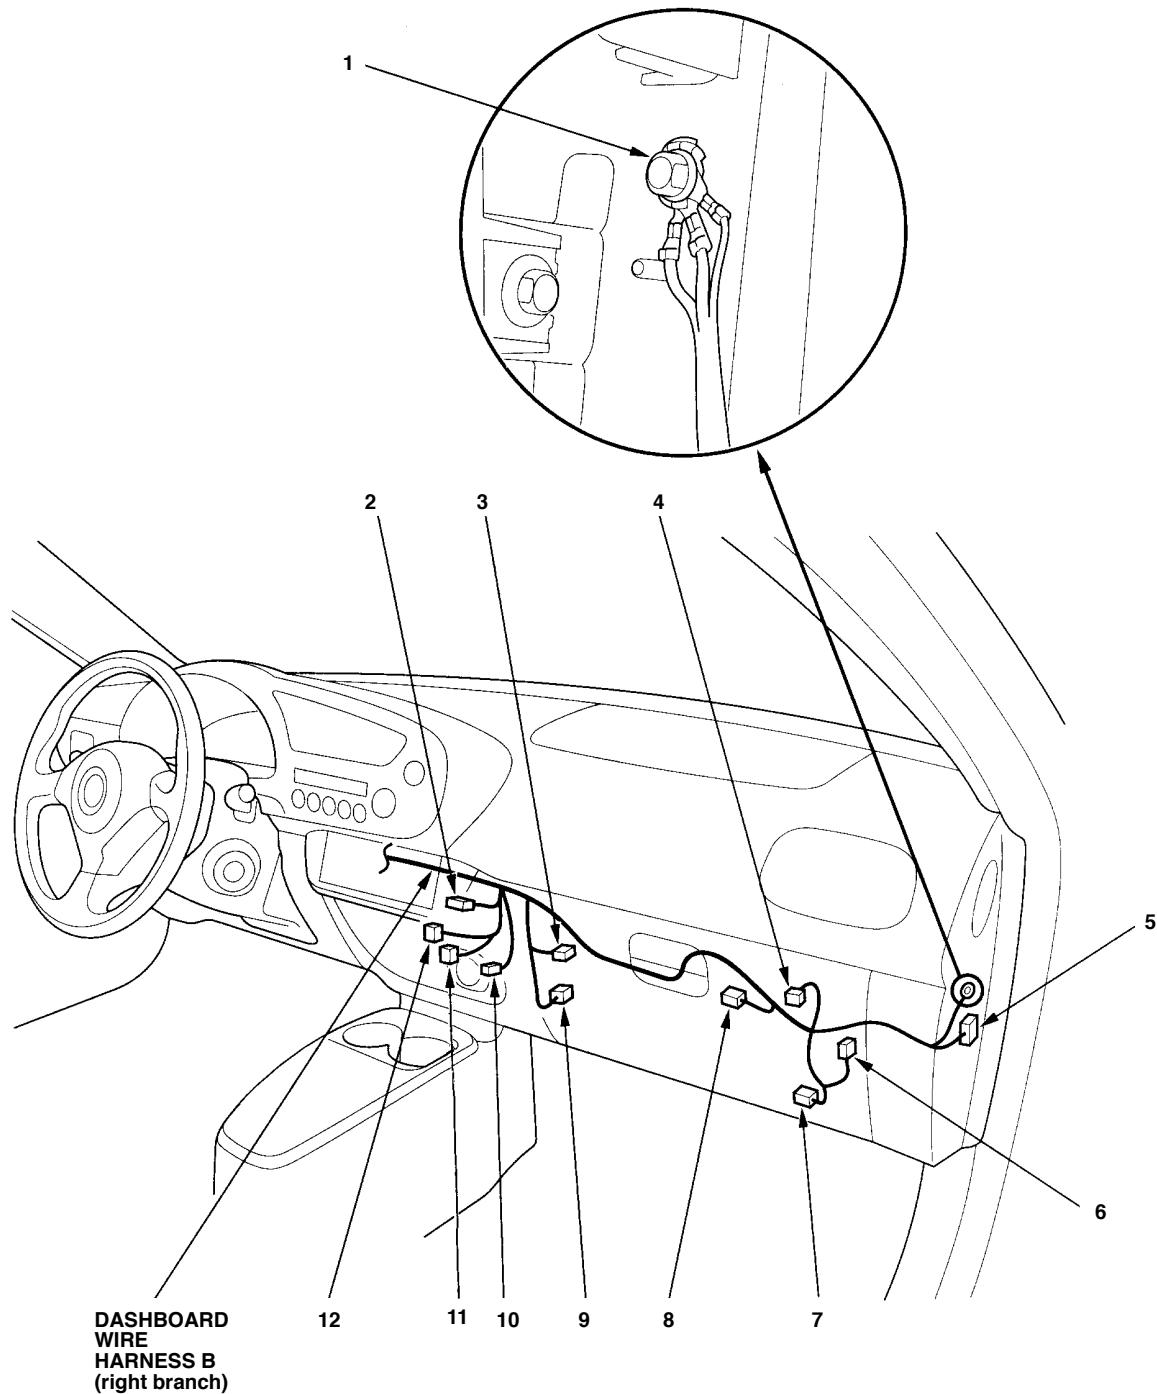


Connector to Harness Index

Dashboard Wire Harness A

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Fuel consumption display select switch	6-NAT	Left side of dash		
2	Power window master switch	14-GRY	Left side of dash		
3	Power mirror switch	10-GRN	Left side of dash		
4	C404	24- LT BLU	Under left side of dash		
5	C405	14-GRY	Under left side of dash	Dashboard wire harness B (left branch) (see page 203-12) Dashboard wire harness B (left branch) (see page 203-12)	
6	Gauge assembly connector A	30-GRN	Left side of dash		
7	Gauge assembly connector B	22-GRN	Left side of dash		
8	Gauge assembly connector C	10-GRN	Left side of dash		
9	Sunlight sensor	2-GRY	Top middle of dash		
10	Climate control unit/heater control panel connector A	12-GRY	Middle of dash		
11	Climate control unit/heater control panel connector B	22-GRN	Middle of dash		
12	Hazard warning switch	10-GRY	Middle of dash		
13	In-car temperature sensor	2-GRY	Right side of steering column		
14	C410	10-GRY	Behind center lower cover		CVT
15	C408	16- LT BLU	Behind center lower cover	Dashboard wire harness B (right branch) (see page 203-14) Dashboard wire harness B (right branch) (see page 203-14)	
16	Heater core temperature sensor	2-GRY	Behind center lower cover		
17	C504	16-BLU	Behind center lower cover		
18	Mode control motor	7-GRN	Under middle of dash		
19	C531	16- LT BLU	Under left side of dash		
20	C571 (Junction Connector)	20-BLU	Left side of dash	Engine compartment wire harness (see page 203-10)	



Connector to Harness Index

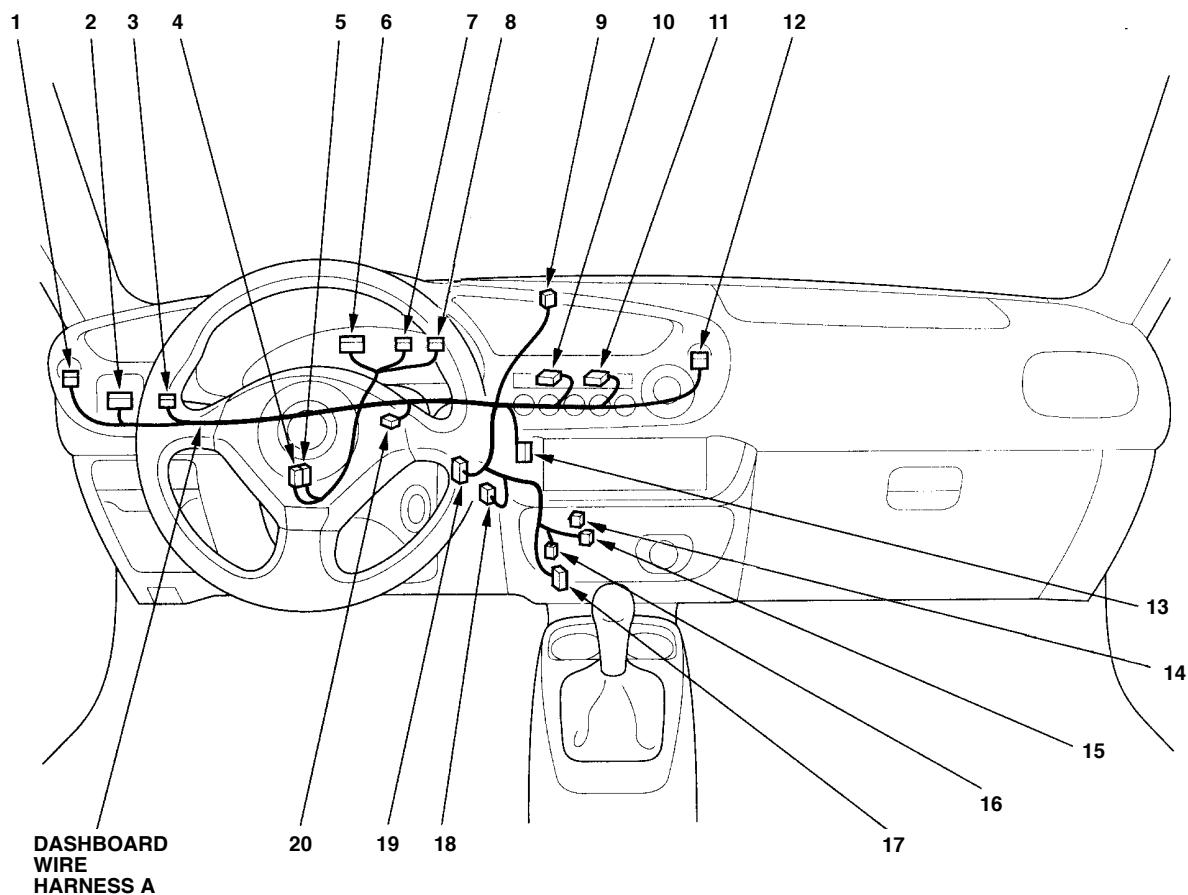


Connector to Harness Index

Floor Wire Harness


Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	MES connector	2-YEL	Upper left Kick panel area		
2	Under-dash fuse/relay box connector A <i>(see page 6-4)</i>	2-YEL	Upper left kick panel area		
3	Cable reel connector A	2-YEL	Lower side of steering column		
4	C103	24-LT BLU	Under middle of dash		
5	C501	16-LT BLU	Under middle of dash	Engine wire harness <i>(see page 203-2 or 203-4)</i>	
6	C502	24-LT BLU	Behind center lower cover	Engine compartment wire harness <i>(see page 203-10)</i>	
7	Passenger's airbag inflator	2-YEL	Middle of dash	Dashboard wire harness B (left branch) <i>(see page 203-12)</i>	
8	C504	16-BLU	Behind center lower cover	Dashboard wire harness A <i>(see page 203-16)</i>	
9	Driver's seat belt switch	2-GRY	Under driver's seat		
10	Parking brake switch	1-NAT	Middle of floor		
11	Left rear speaker	2-GRY	Behind driver's seat		
12	Right rear speaker	2-GRY	Behind passenger's seat		
13	Passenger's door switch	1-NAT	Right B-pillar		
14	C701	6-LT BLU	Right B-pillar	Hatch wire harness <i>(see page 203-22)</i>	
15	C702	1-BRN	Right B-pillar	Hatch wire harness <i>(see page 203-22)</i>	
16	Passenger's seat belt tensioner	2-YEL	Right B-pillar		
17	Noise condenser	2-GRY	Behind passenger's seat		
18	Right rear wheel speed sensor	2-ORN	Right rear underside of vehicle		'00-'05
19	EVAP canister vent shut valve	2-BRN	Right side of fuel tank		'00-'05
20	Fuel tank pressure sensor	3-GRY	Right side of fuel tank		'00-'05
21	EVAP bypass solenoid valve	2-BLK	Right side of fuel tank		'00-'05
22	C505	24-LT BLU	Behind seats, middle of floor	IPU compartment wire harness <i>(see page 203-24)</i>	
23	C506	12-GRY	Behind seats, middle of floor	IPU compartment wire harness <i>(see page 203-24)</i>	
24	G502		Behind seats, middle of floor	Body ground via floor wire harness	
25	Fuel tank unit	5-GRY	Left side of fuel tank		
26	Left rear wheel speed sensor	2-ORN	Left rear underside of vehicle		
27	C601	14-GRY	Left B-pillar	Rear wire harness <i>(see page 203-20)</i>	
28	Driver's seat belt tensioner	2-YEL	Left B-pillar		
29	Driver's door switch	1-NAT	Left B-pillar		
30	Third HO2S	4-GRY	Middle of floor		
31	Park pin switch	4-GRY	Middle of floor		
32	Shift lock solenoid	2-GRY	Middle of floor		
33	C503	2-BLU	Behind center lower cover	Dashboard wire harness B (left branch) <i>(see page 203-12)</i>	
34	SRS unit connector A	18-YEL	Under middle of dash		
35	SRS unit connector B	8-YEL	Under middle of dash		
36	G501		Under SRS unit	Body ground via floor wire harness	
37	C561	12-GRY	Under right rear side of vehicle	Canister sub-harness <i>(see this page)</i>	

Canister Sub-harness ('06)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
37	C561	12-GRY	Under right rear side of vehicle	Floor wire harness (see this page)	
38	Right rear wheel speed sensor	2-ORN	Under right rear side of vehicle		
39	EVAP canister vent shut valve	2-BLK	Under right rear side of vehicle		
40	Fuel tank pressure sensor	3-BLK	Under right rear side of vehicle		




Connector to Harness Index

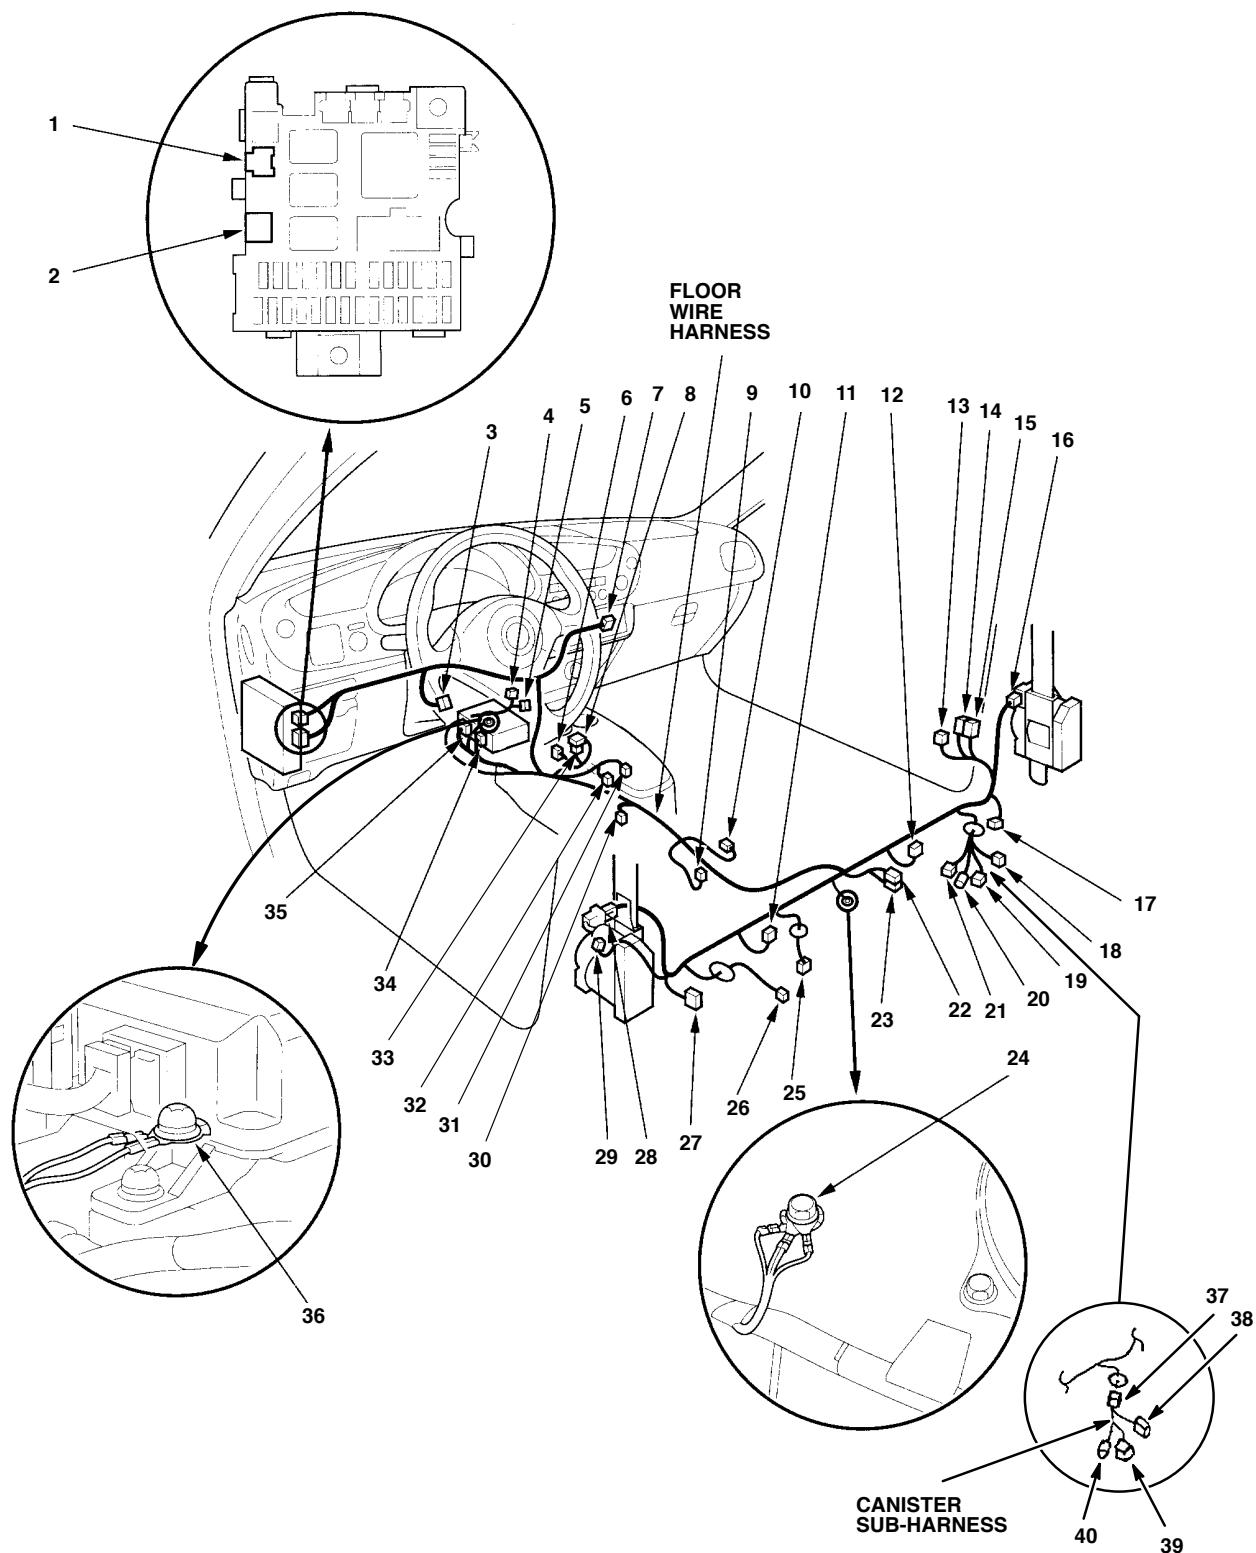


Connector to Harness Index

Rear Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	G601		Middle of cargo area	Body ground via rear wire harness	
2	Right taillight assembly	5-GRY	Right side of cargo area		
3	Hatch key cylinder switch	3-GRY	Right side of cargo area		
4	Hatch latch/unlock switch	6-GRY	Middle of cargo area		
5	C602	2-GRY	Middle of cargo area	Hatch opener actuator	
6	License plate light	2-GRY	Below left side of cargo area		
7	Left taillight assembly	5-GRY	Left side of cargo area		
8	Hatch opener relay	4-BRN/NAT	Below left side of cargo area		
9	Cargo area light	2-GRY	Left side of cargo area		
10	C601	14-GRY	Left B-pillar	Floor wire harness (see page 203-18)	




Connector to Harness Index

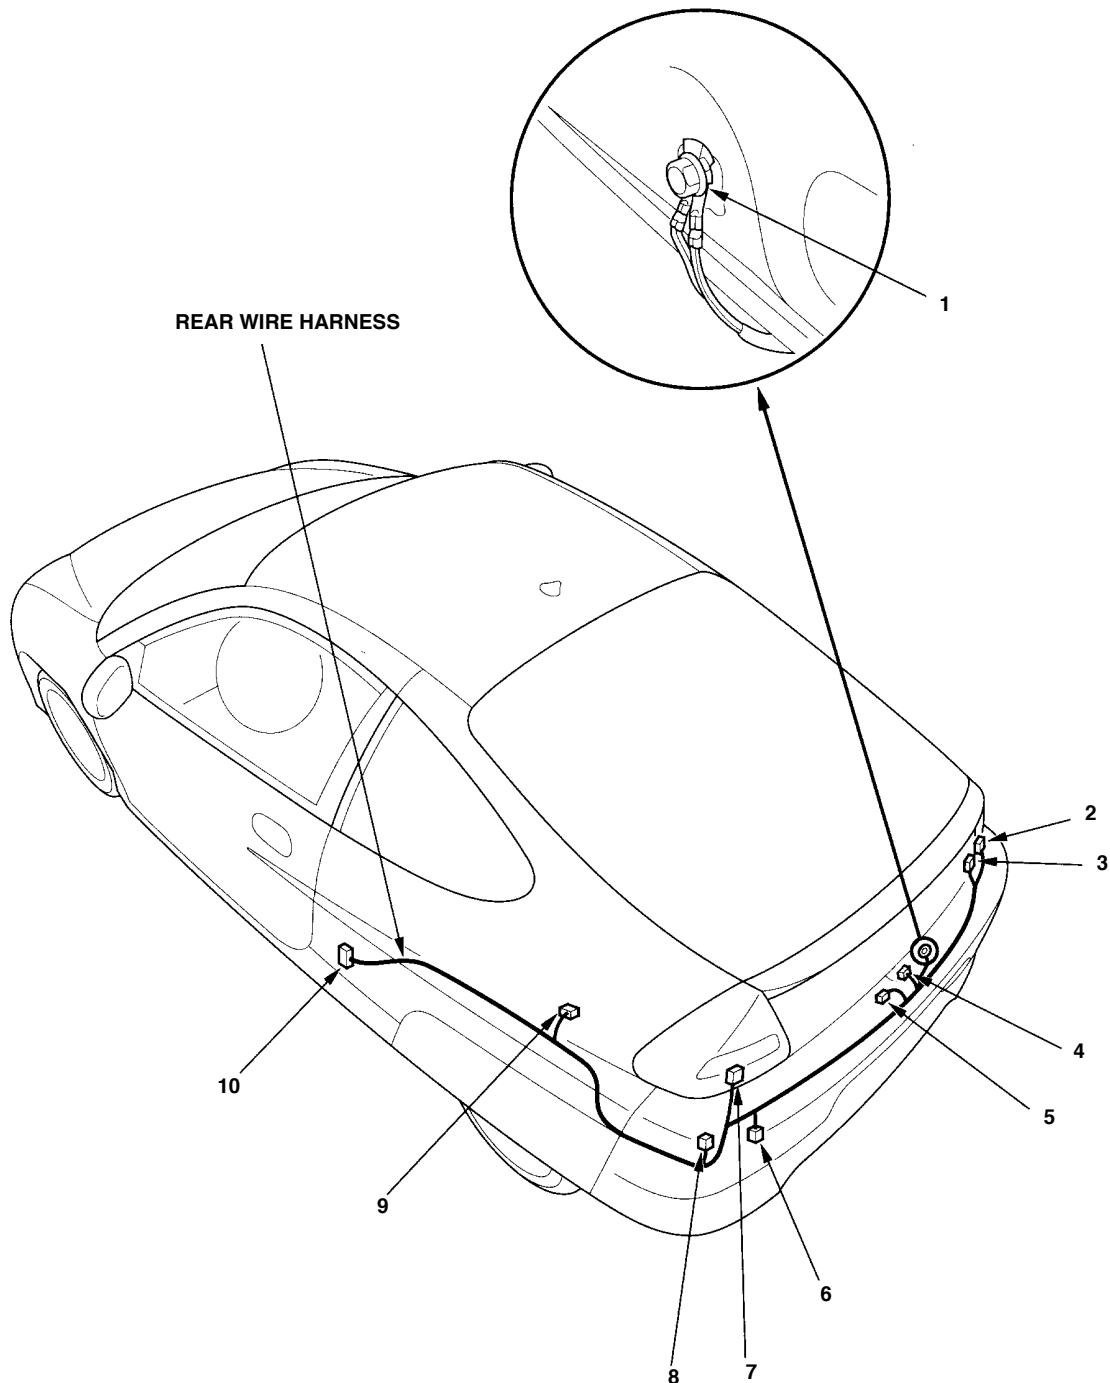


Connector to Harness Index

Hatch Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	G701		Middle rear of roof	Body ground via hatch wire	
2	C701	6-LT BLU	Right B-pillar	Floor wire harness (see page 203-18)	
3	C702	1-BRN	Right B-pillar	Floor wire harness (see page 203-18)	
4	Rear window defogger (+)	1-BLK	Right side of hatch		
5	Rear window wiper motor	4-NAT	Right side of hatch		
6	Lower rear window defogger (+)	1-BLK	Right side of hatch		
7	Hatch opener switch	2-GRY	Middle of hatch		
8	C703	2-WHT	Left side of hatch	High mount brake light	
9	Lower rear window defogger (-)	1-BLK	Left side of hatch		
10	Rear window defogger (-)	1-BLK	Left side of hatch		




Connector to Harness Index

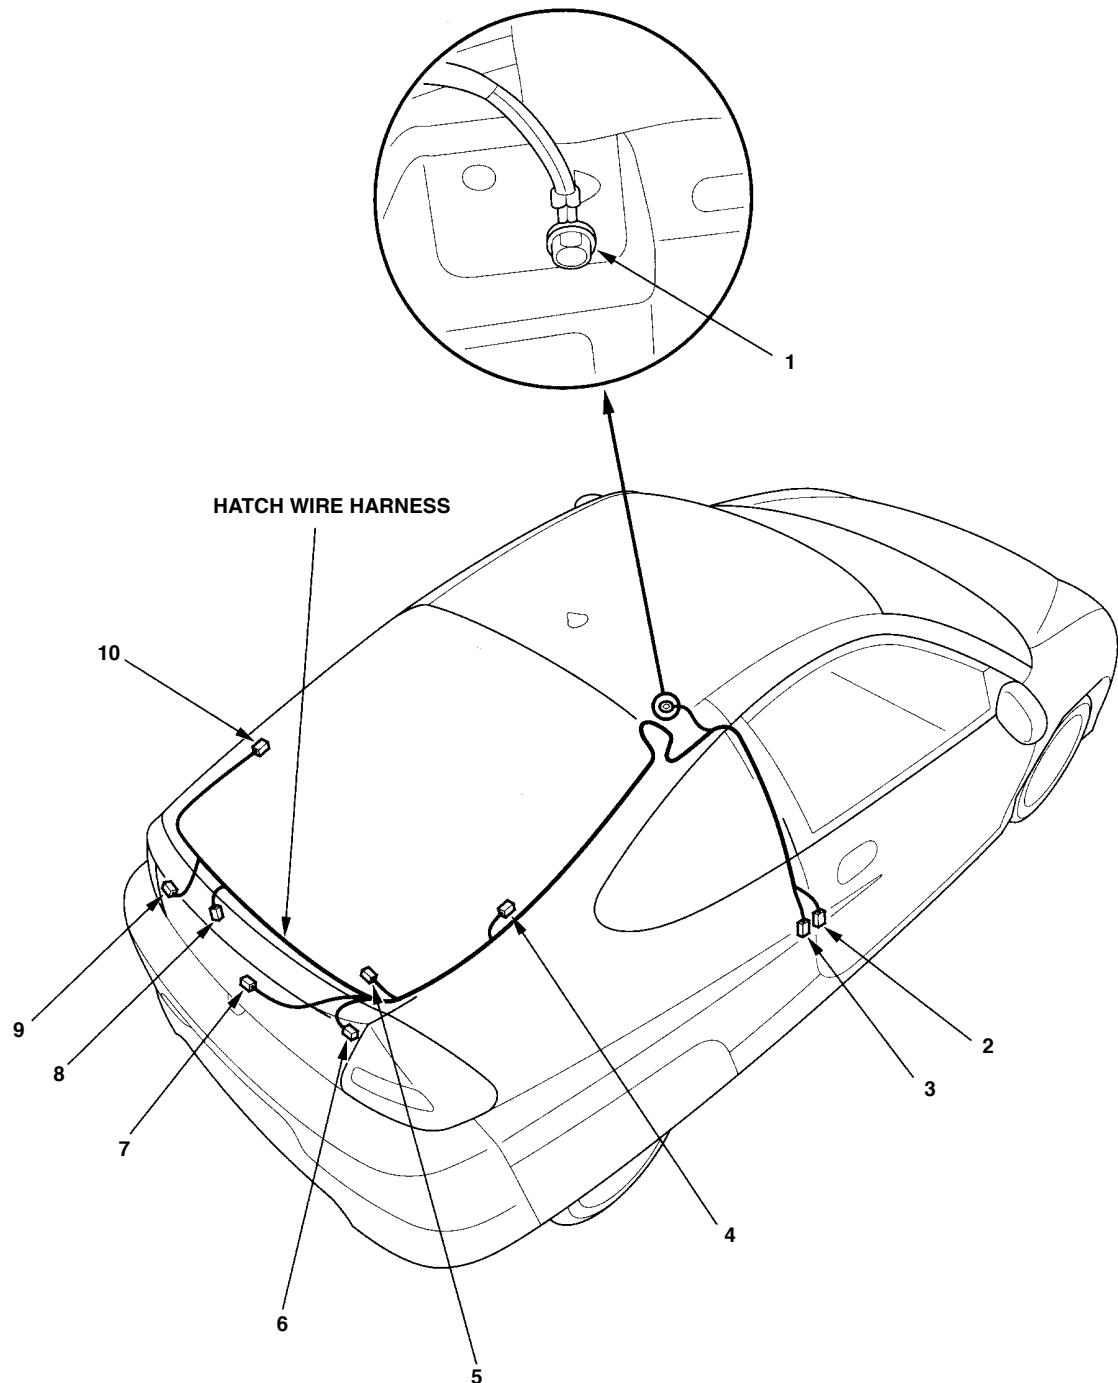


Connector to Harness Index

IPU Compartment Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Junction board	16-LT BLU	Left front side of battery module		
2	C507 (Junction Connector)	20-BLU	Behind seats, middle of floor	Floor wire harness (see page 203-18)	
3	C508 (Junction Connector)	20-PNK	Behind seats, middle of floor	Floor wire harness (see page 203-18)	
4	C506	12-GRY	Behind seats, middle of floor		
5	C505	24-LT BLU	Behind seats, middle of floor		
6	IMA diode	3-ORN/BLK	Top front of battery module		
7	Battery module fan motor	2-GRY	Top front of battery module		
8	MCM connector D	16-GRY	Top front of battery module		
9	MCM connector C	31-BLU	Top front of battery module		
10	MCM connector B	25-GRY	Top front of battery module		
11	MCM connector A	32-GRY	Top front of battery module		
12	BCM module connector A	26-GRY	Top front of battery module		
13	Battery current sensor	3-GRY	Left front side of battery module		
14	High voltage contactor	2-GRY	Left front side of battery module		
15	C551	10-GRY	Right front side of PCU	Power converter wire harness (see page 203-26)	
16	C552	24-LT BLU	Right front side of PCU	Power converter wire harness (see page 203-26)	
17	DC-DC converter	8-GRY	Right front side of PCU		



Connector to Harness Index

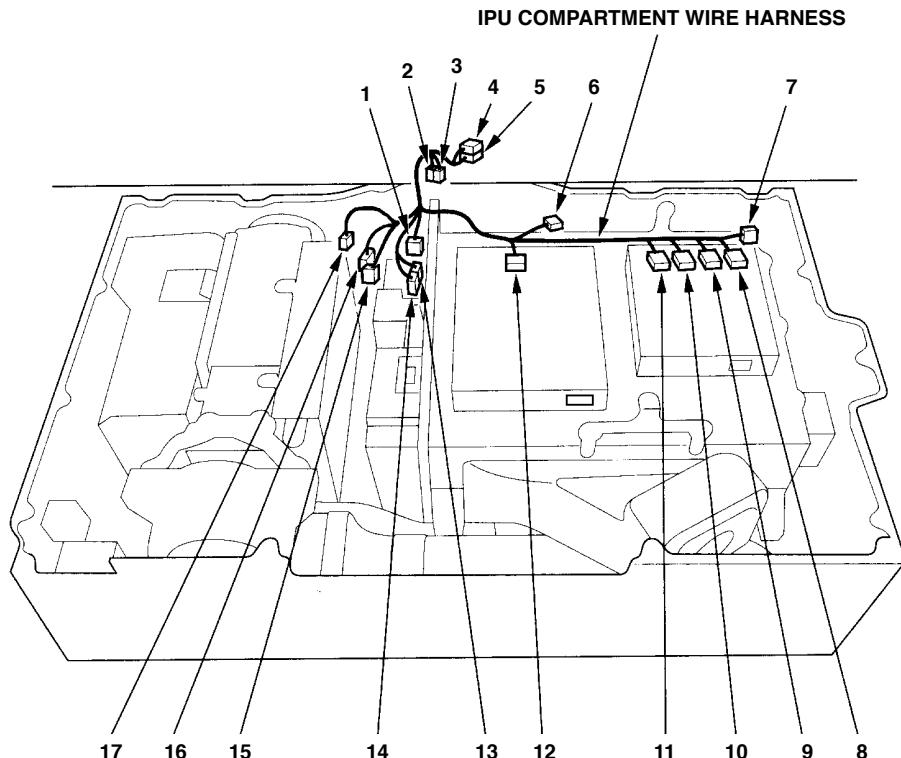

Connector to Harness Index

Power Converter Wire Harness


Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	High voltage contactor relay	5-BLK	Left rear side of PCU		
2	MPI module fan control relay, low speed	5-BLK	Left rear side of PCU		
3	MPI module fan control relay, high speed	5-BLK	Left rear side of PCU		
4	Ignition hold relay	5-BLK	Left rear side of PCU		
5	C551	10-GRY	Right front side of PCU		
6	C552	24-LT BLU 3-GRY 16-GRY 3-GRY 3-GRY 2-BRN/NAT	Right front side of PCU Left rear side of PCU	IPU compartment wire harness (see page 203-24) IPU compartment wire harness (see page 203-24)	
7	V phase motor current sensor				
8	Voltage converter module connector B				
9	U phase motor current sensor				
10	W phase motor current sensor				
11	MPI module fan				
12	MPI module fan control resistor, low speed, connector A	1-BLK	Left rear side of PCU		
13	MPI module fan control resistor, high speed, connector A	1-NAT	Left rear side of PCU		
16	MPI module fan control resistor, high speed, connector D	1-NAT	Left rear side of PCU		
17	MPI module fan control resistor, low speed, connector B	1-BLK	Left rear side of PCU		

MPI Module Fan Control Resistor Jumper, High Speed

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
14	MPI module fan control, high speed, resistor connector B	1-NAT	Left rear side of PCU		
15	MPI module fan control, high speed, resistor connector C	1-NAT	Left rear side of PCU		




Connector to Harness Index

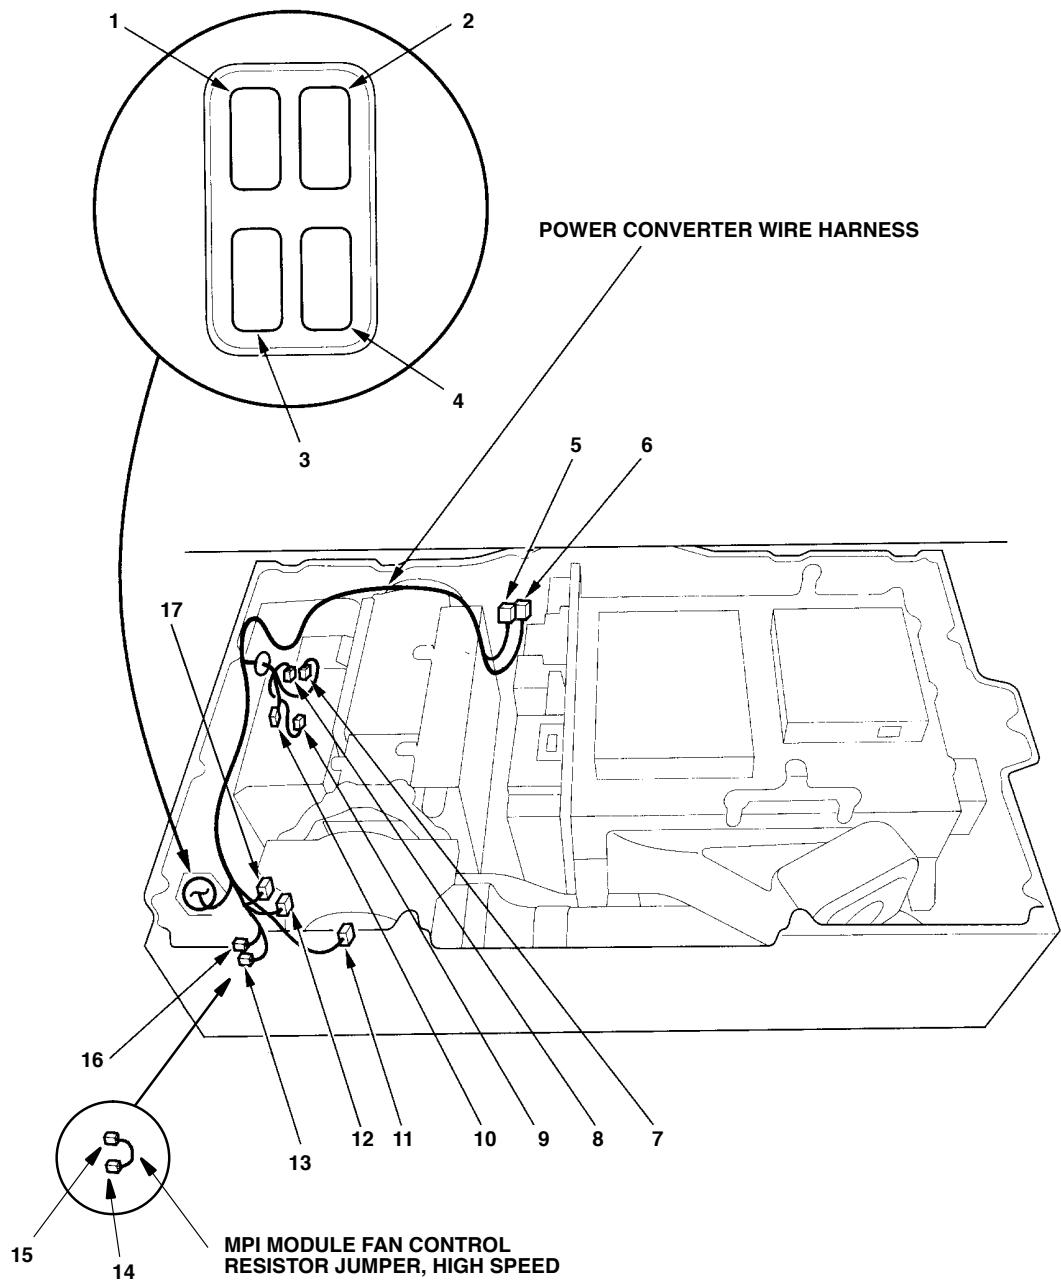


Connector to Harness Index

DC-DC Converter-Driver's Door Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Driver's power window motor	4-GRY	In front of driver's door		
2	Driver's door lock switch	3-GRY	In driver's door		
3	Left power mirror	3-GRY	In front of driver's door		
4	C407	16-GRY	Upper left kick panel area		
5	Driver's door speaker	2-GRY	In front of driver's door		
6	Driver's door lock knob switch	3-GRY	Rear of driver's door		
7	Driver's door lock actuator	2-GRY	Rear of driver's door		
8	T101 (see page 6-1)		Under-hood fuse/relay box		
9	DC-DC converter terminal (+)	ORN/RED	Left side of battery module		
10	DC-DC converter terminal (-)	ORN/BLK	Left side of battery module		
11	G651		Left rear side of floor	Body ground via DC-DC converter-driver's door wire harness	




Connector to Harness Index

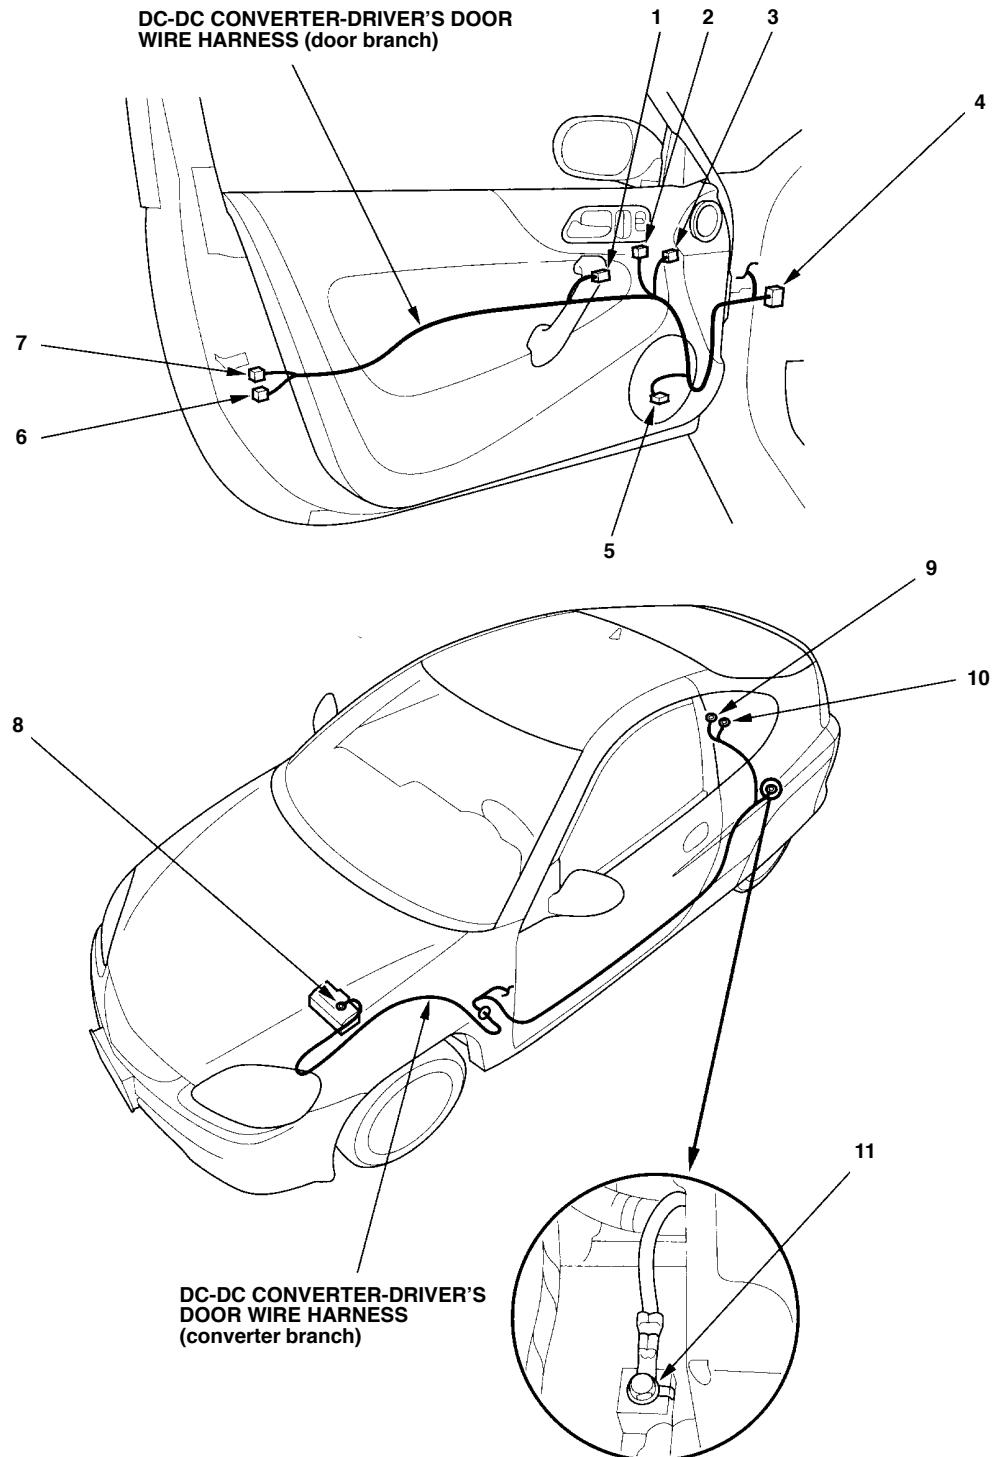


Connector to Harness Index

Passenger's Door Wire Harness

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Right power mirror	3-GRY	In front of passenger's door		
2	Passenger's power window switch	5-NAT	In passenger's door		
3	Passenger's power window motor	2-GRY	In front of passenger's door		
4	Passenger's door lock actuator	2-GRY	Rear of passenger's door		
5	Passenger's door speaker	2-GRY	In front of passenger's door		
6	C409	12-GRY	Right side of dash	Dashboard wire harness B (right branch) (see page 203-14)	

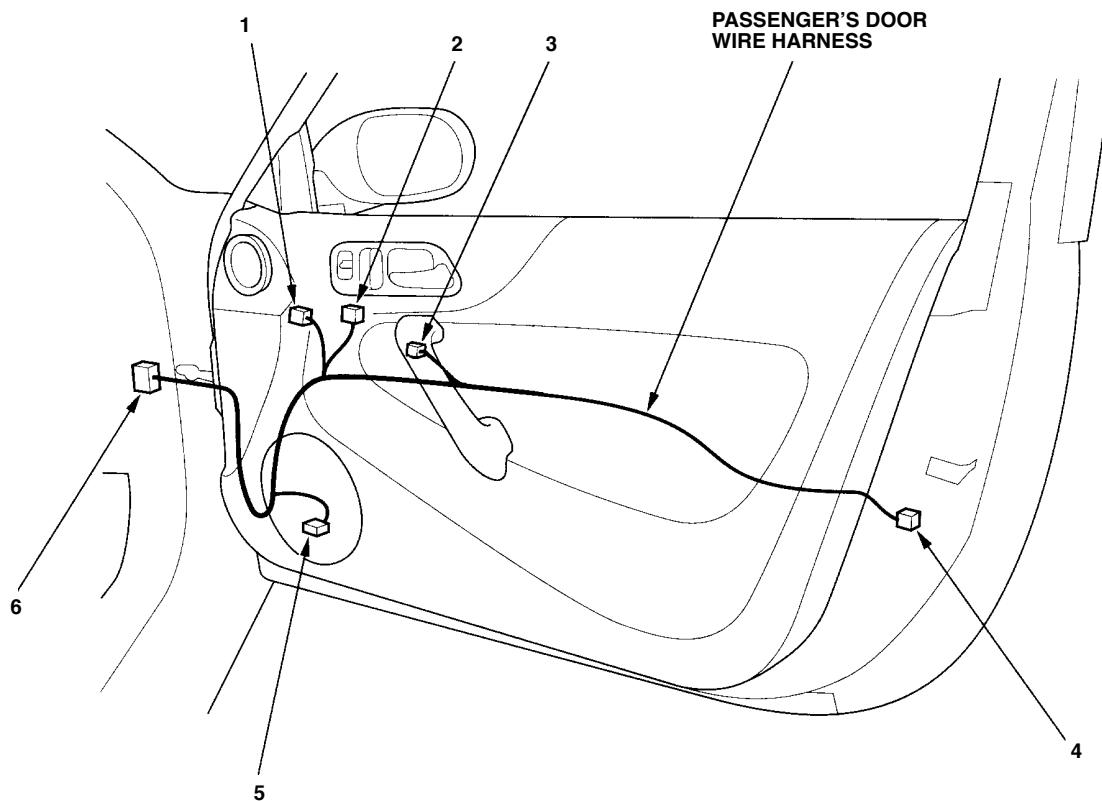




Connector to Harness Index

Roof Wire Harness


Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Ceiling light/Spotlights	4-GRY	Middle front of roof		
2	Audio unit antenna	1-NAT	Middle rear of roof		
3	C406	4-GRY	Left side of dash	Dashboard wire harness B (left branch) (see page 203-12)	

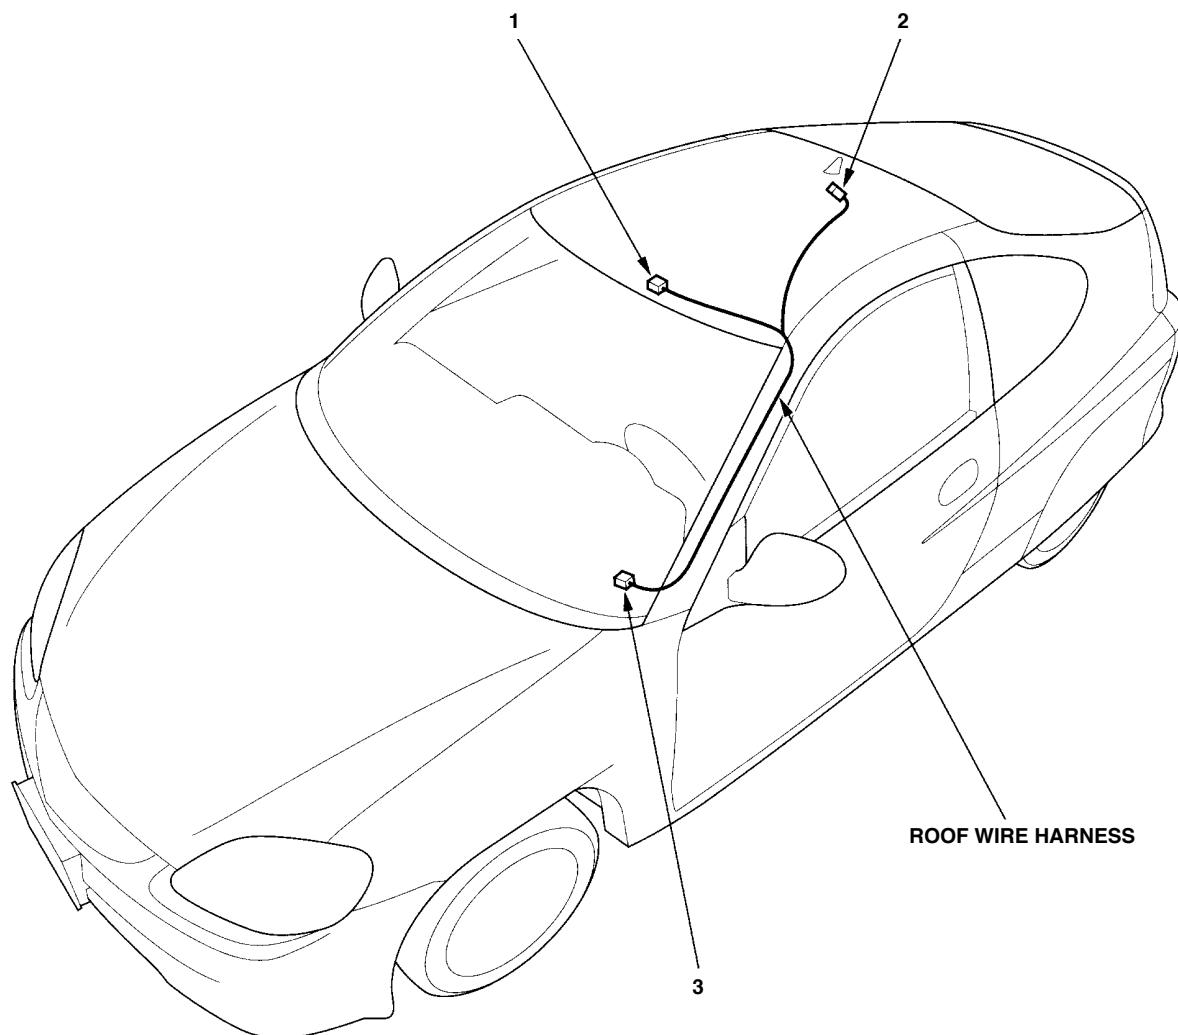


Connector to Harness Index

Ignition Switch Lead

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	Under-dash fuse/relay box connector B (see page 6-4)	7-BRN	Upper left kick panel area		

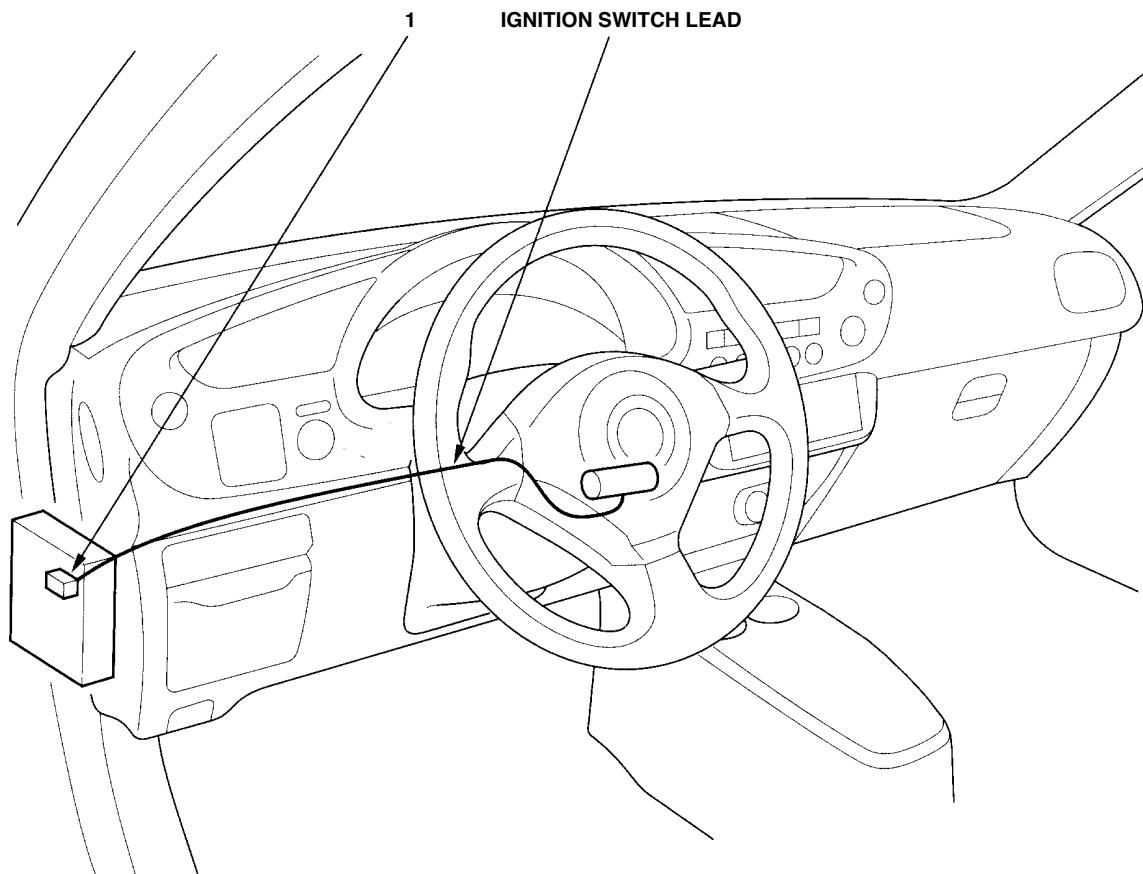





Connector to Harness Index

Solenoid Wire Harness (CVT)


Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	C109	8-GRY	Transmission housing		
2	CVT speed change control valve assembly	2-GRN/ GRY	Valve body		
3	CVT start clutch pressure control valve assembly	2-GRN/ GRY	Valve body		
4	CVT pulley pressure control valve assembly	2-GRN/ GRY	Valve body		
5	Inhibitor solenoid	2-GRN/ GRY	Valve body	Engine wire harness (see page 203-4)	

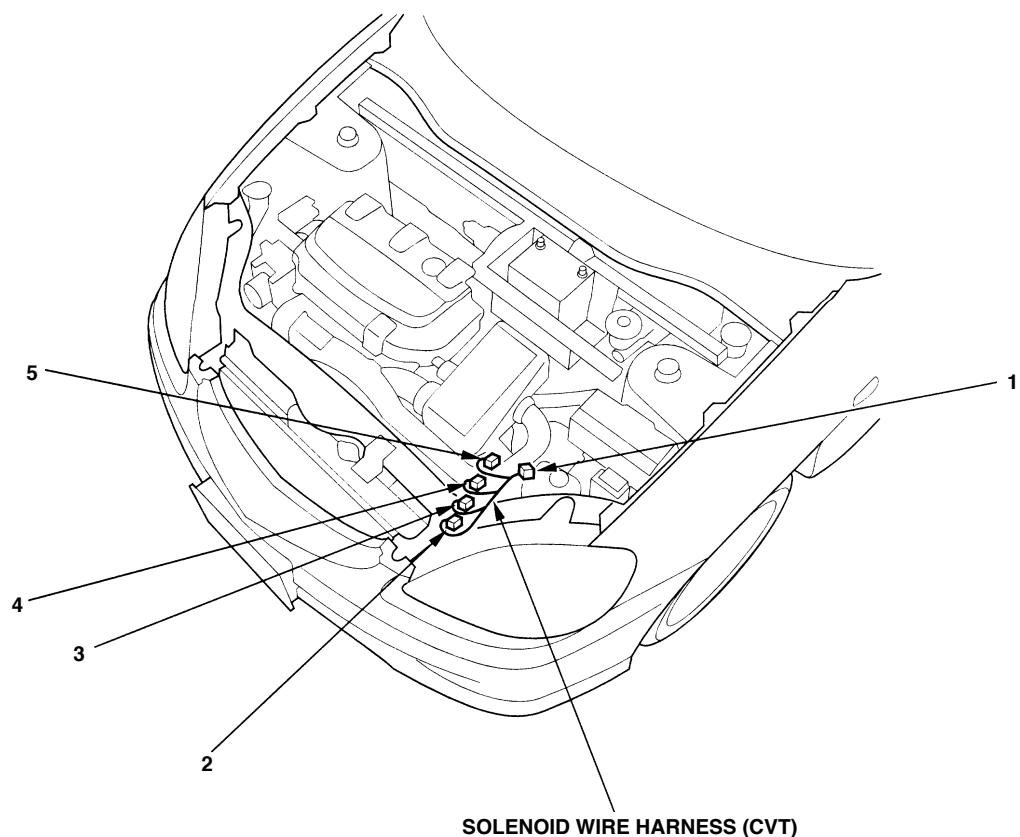


1. Right Side of Engine Compartment

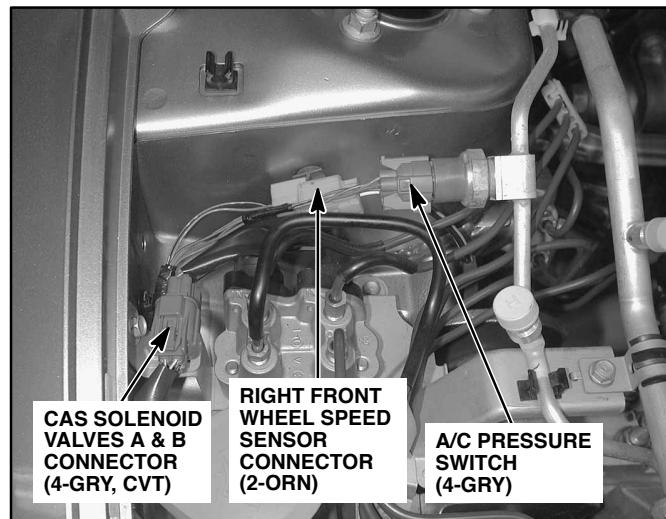


2. Right Front Side of Engine Compartment

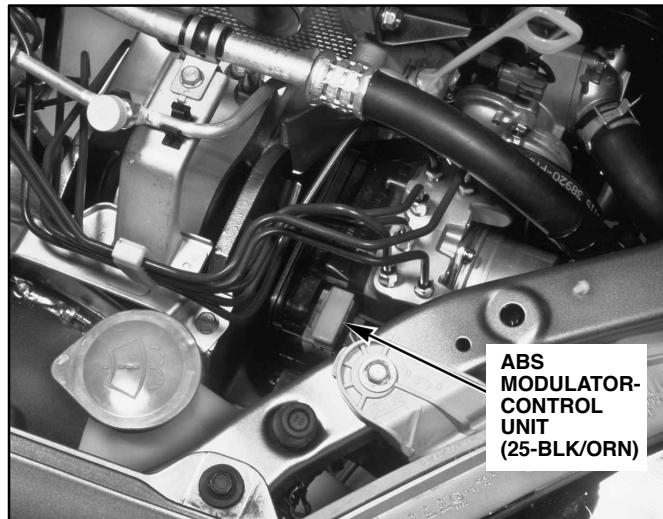


3. Right Front of Engine Compartment

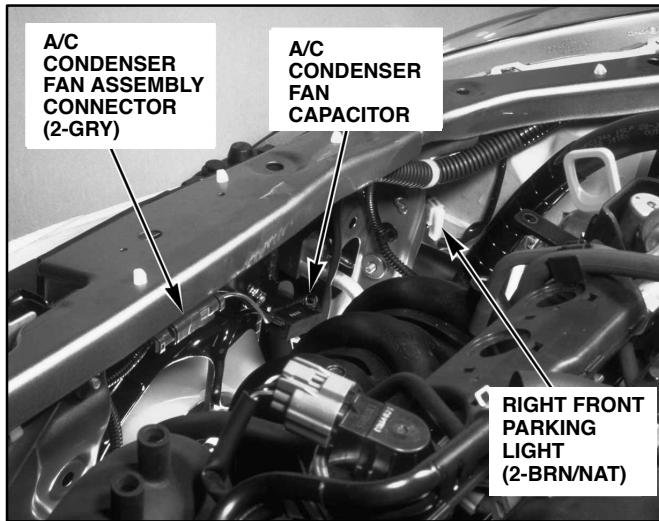


4. Behind Right Side of Front Bumper

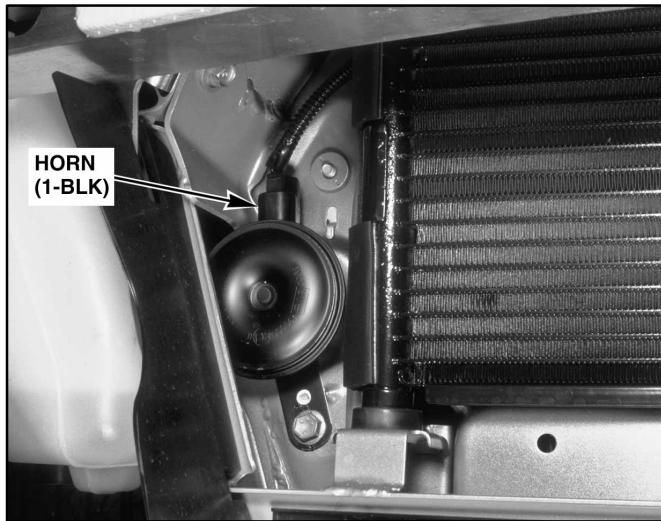


5. Behind Middle of Bumper

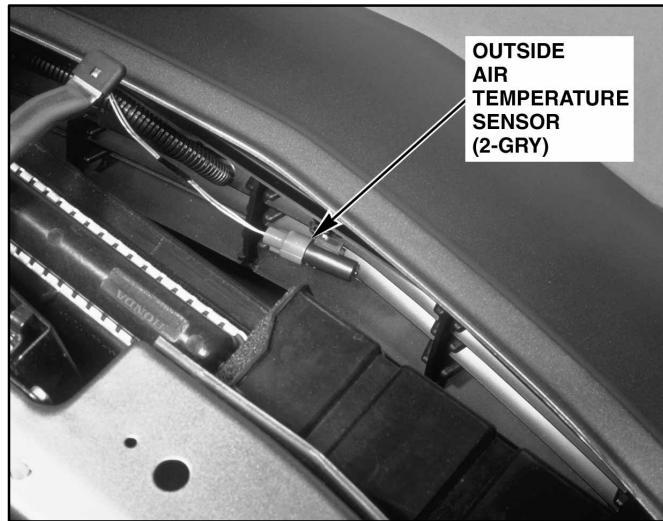


6. Front of Engine

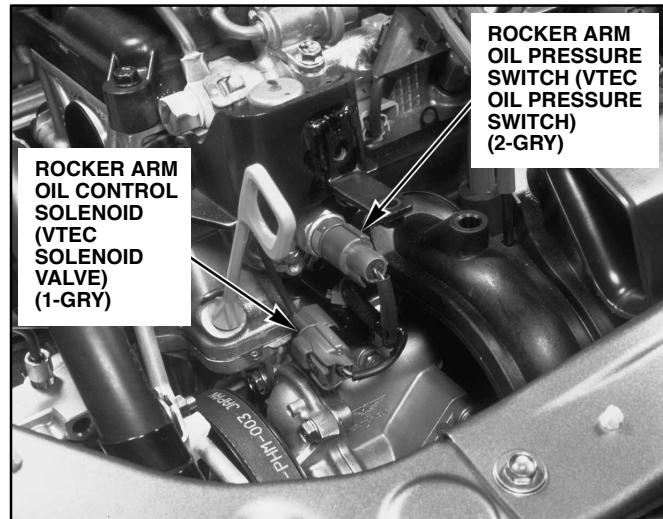


7. Front of Engine

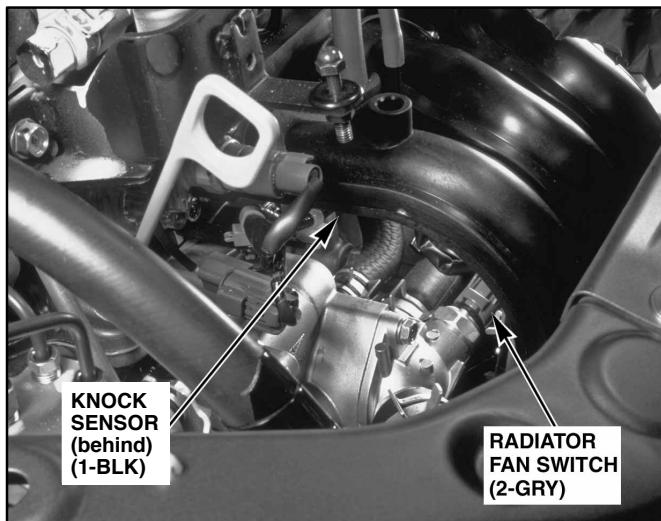


8. Front of Engine

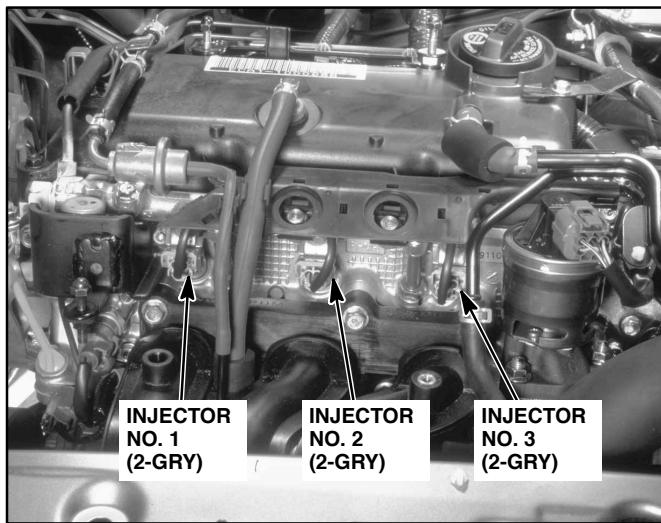


9. Front of Engine

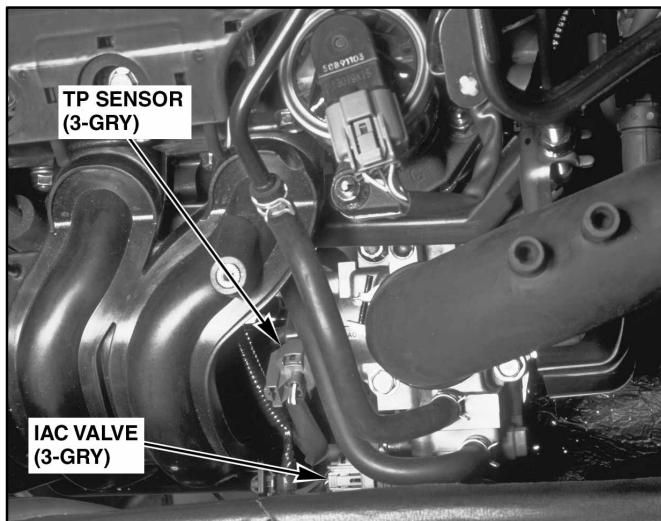


10. Middle of Engine

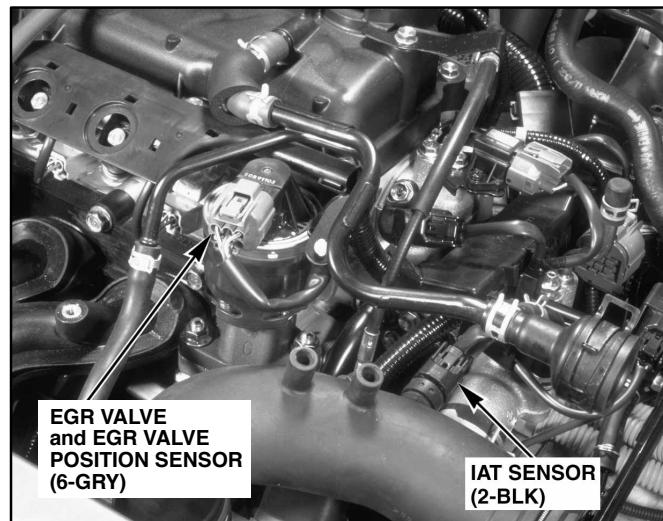


11. Middle of Engine

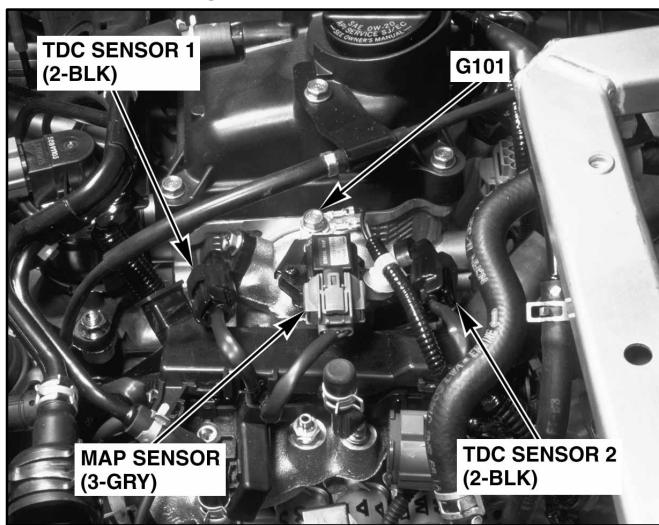


12. Middle of Engine

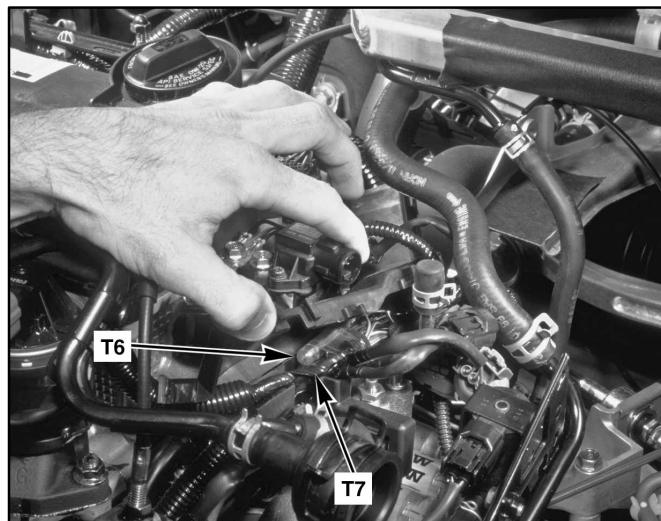


13. Middle of Engine

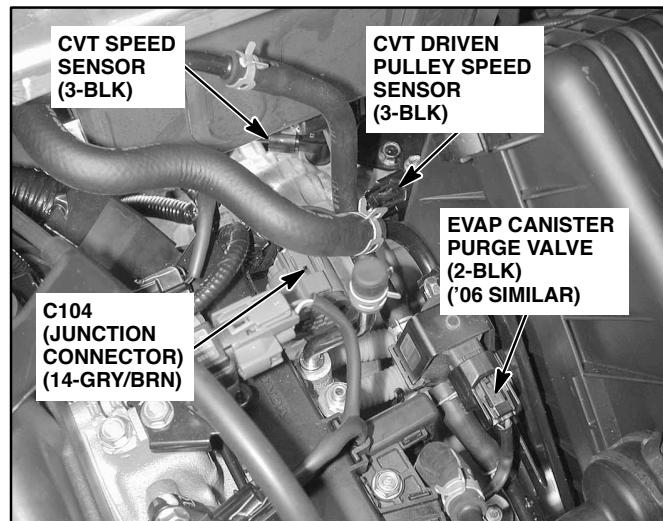


14. Top of Transmission

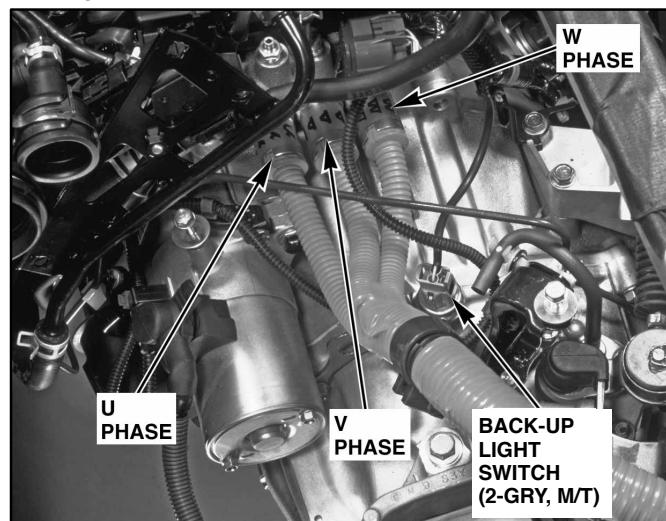


15. Front Top of Transmission

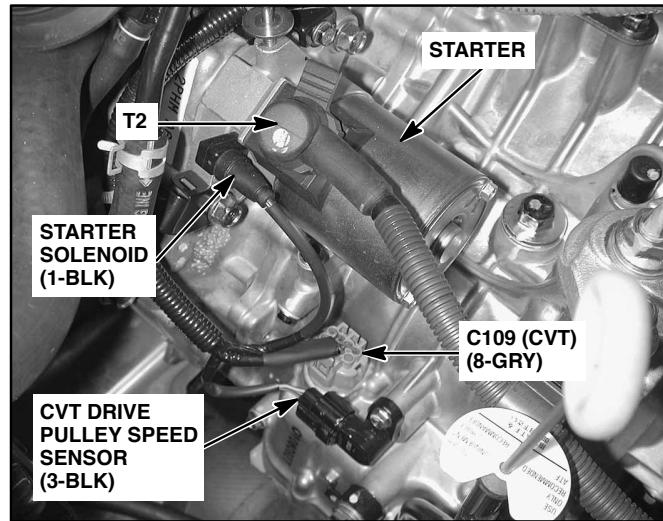


16. Rear of Engine

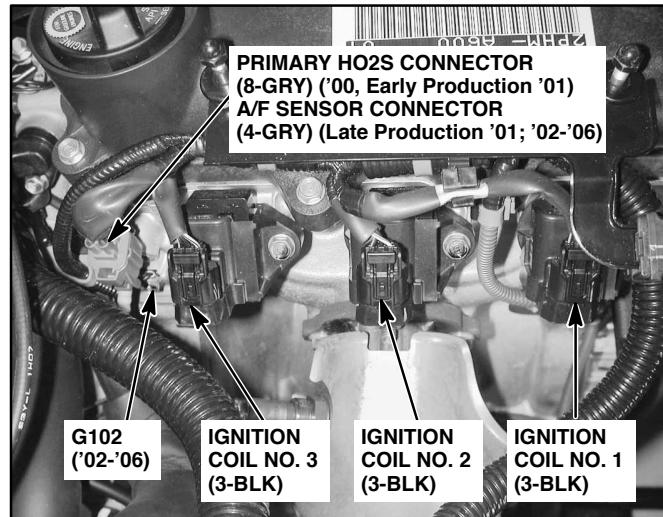


17. Rear of Engine

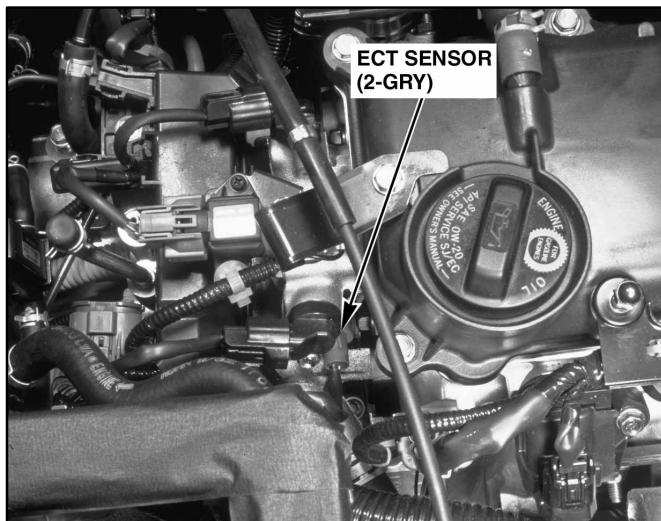


18. Middle Rear of Engine

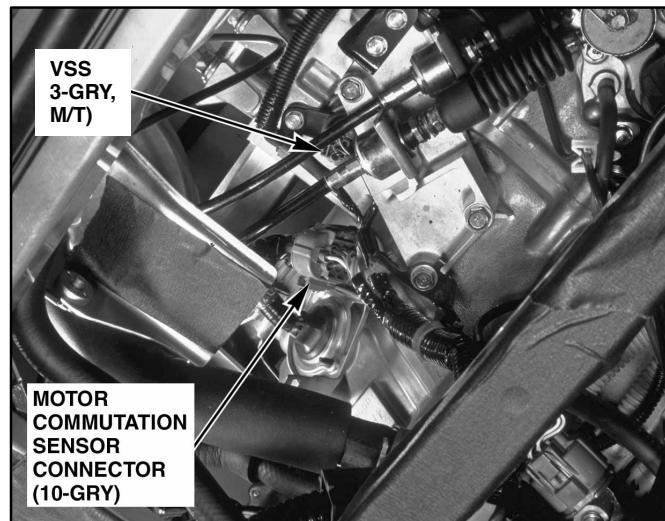

19. Rear of Transmission (M/T)

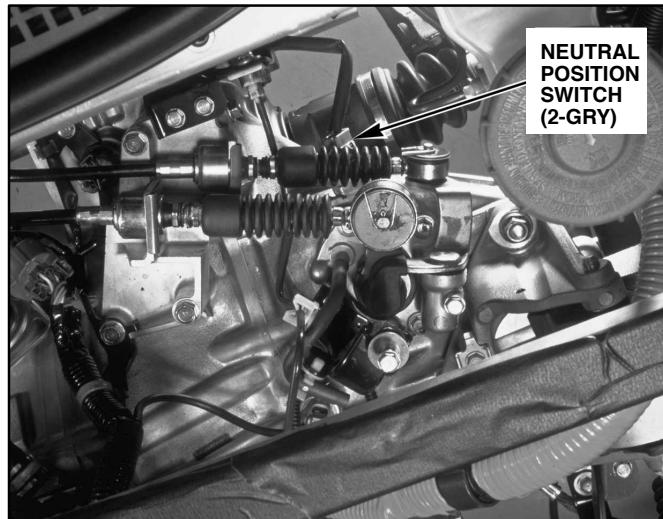


20. Right Rear of Engine Compartment

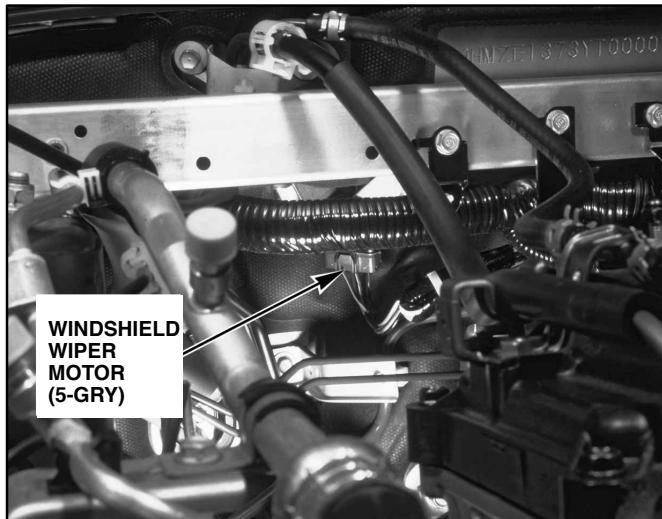


21. Middle Rear of Engine Compartment




22. Left Rear of Engine Compartment

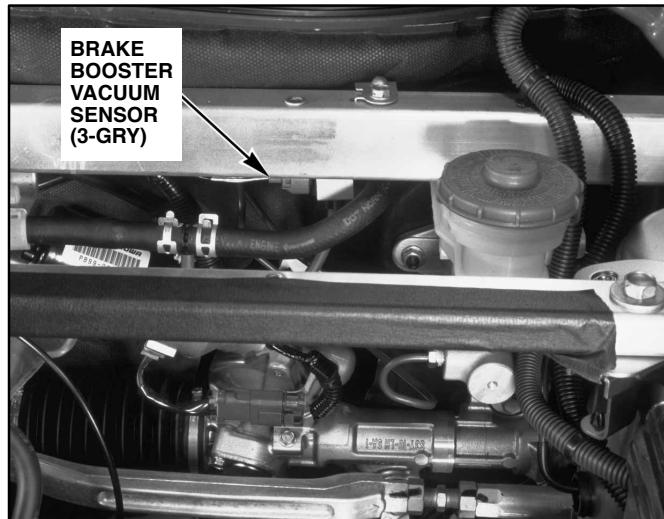


23. Left Rear of Engine Compartment

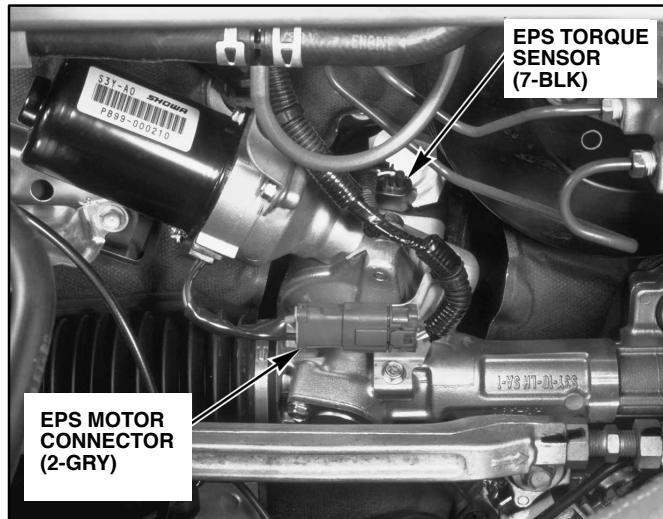


24. Left Rear of Engine Compartment

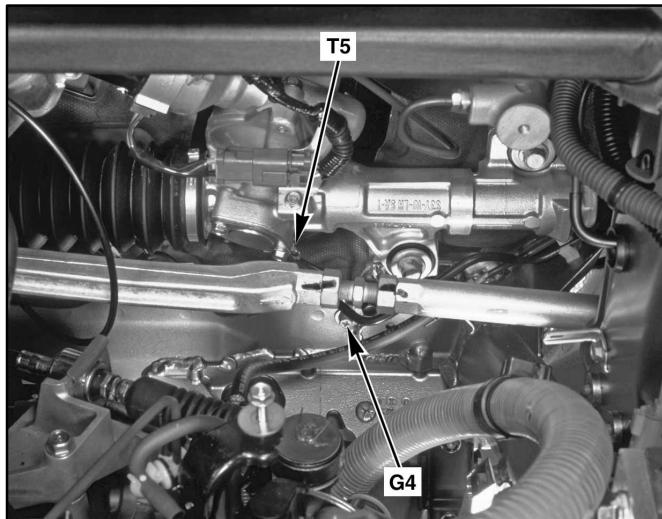


25. Left Front of Engine Compartment

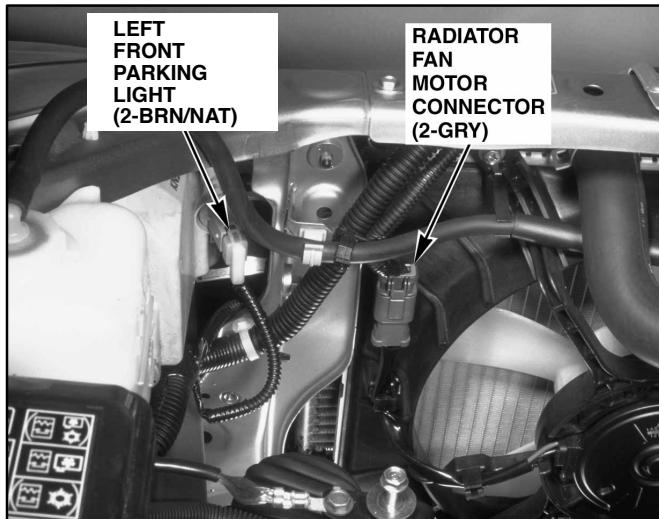

26. Behind Left Headlight Assembly (Right Similar)

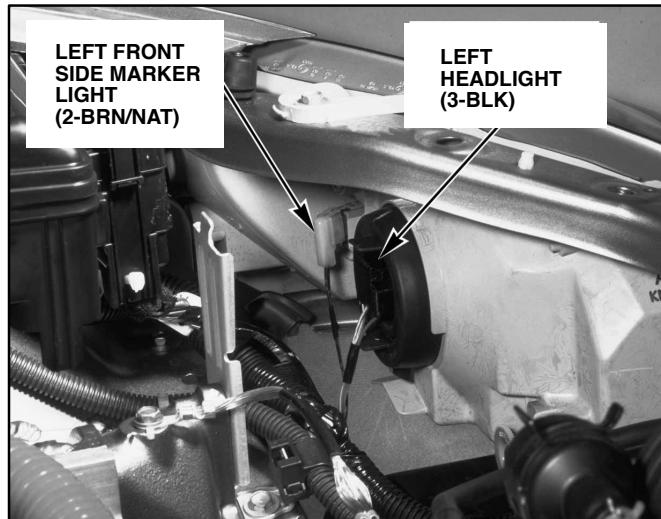


27. Left Side of Engine Compartment (M/T)

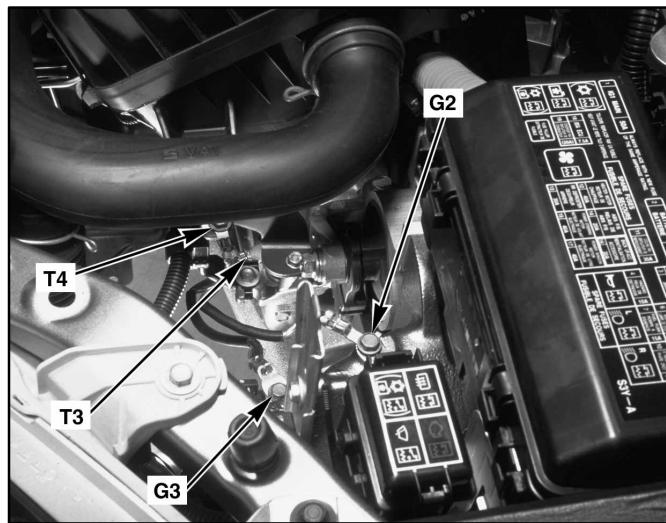


28. Left Front Side of Engine Compartment




29. Left Front Side of Engine Compartment

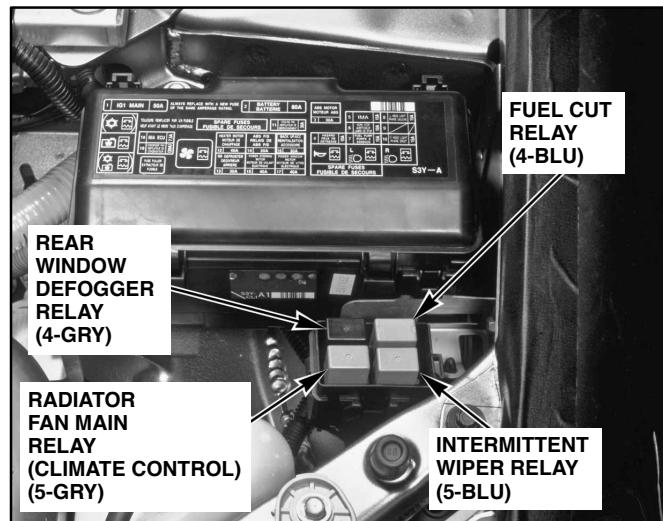


30. Left Front Side of Engine Compartment

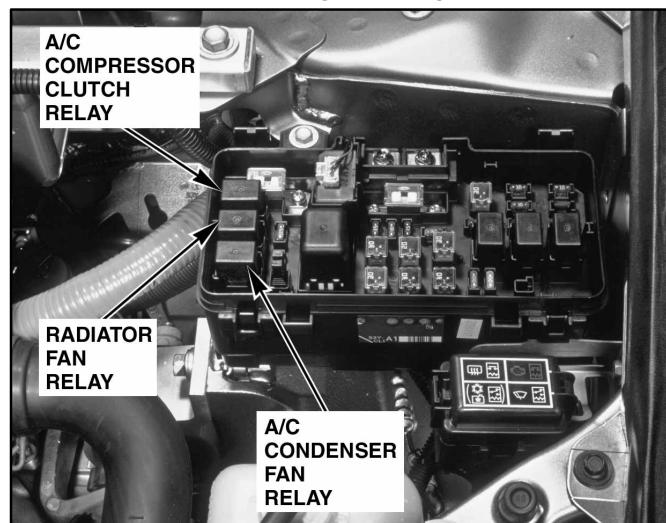


31. Left Front Side of Engine Compartment

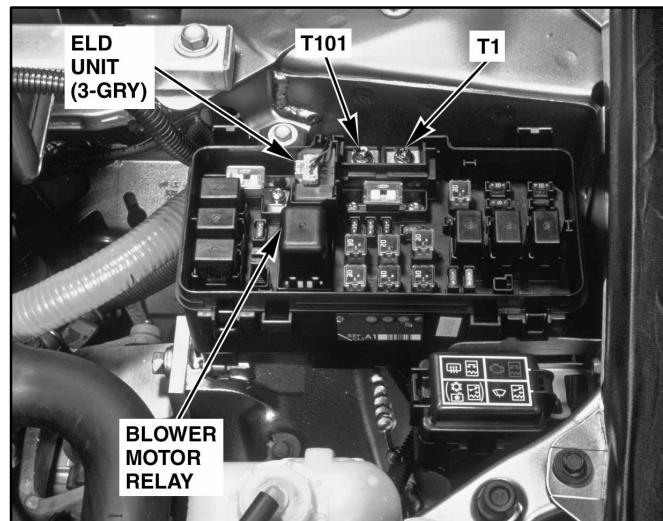


32. Left Front Side of Engine Compartment

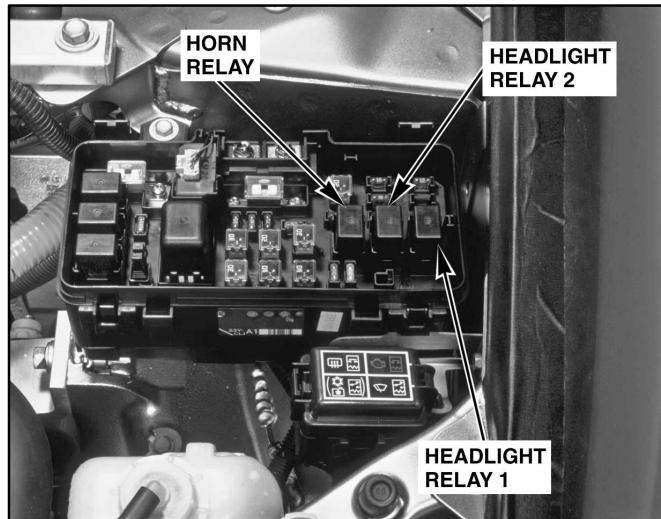


33. Underside of Under-hood Fuse/Relay Box

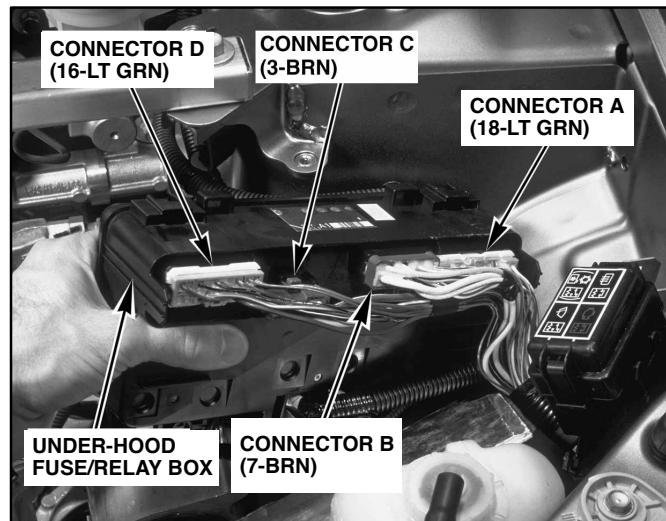


34. Left Side of Engine Compartment

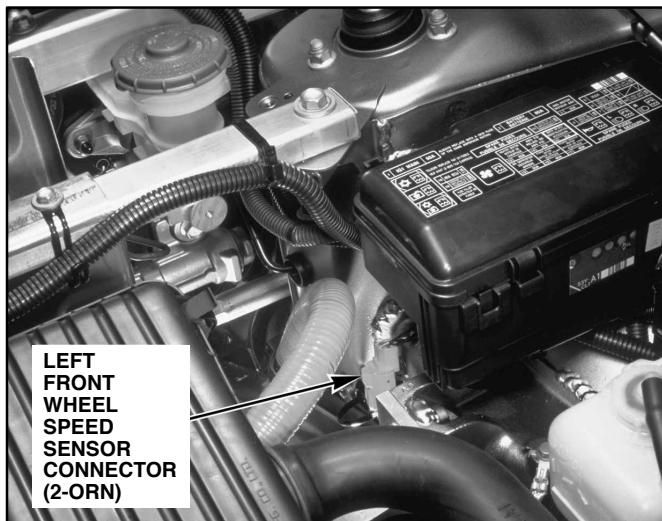


35. Left Rear of Engine Compartment

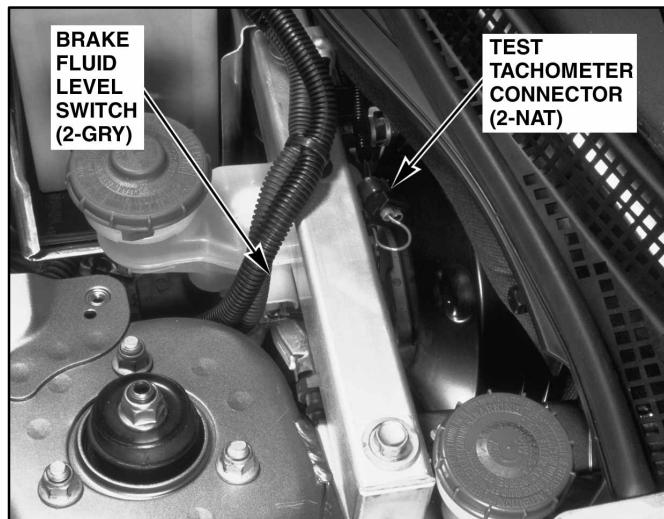

36. Left Side of Dash

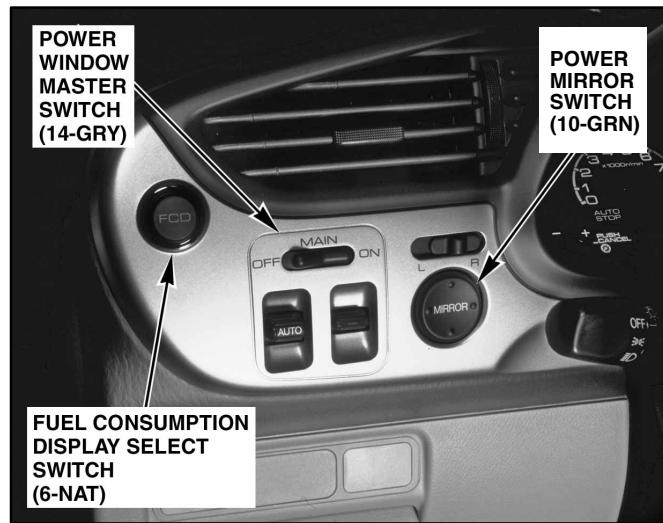


37. Left Side of Dash

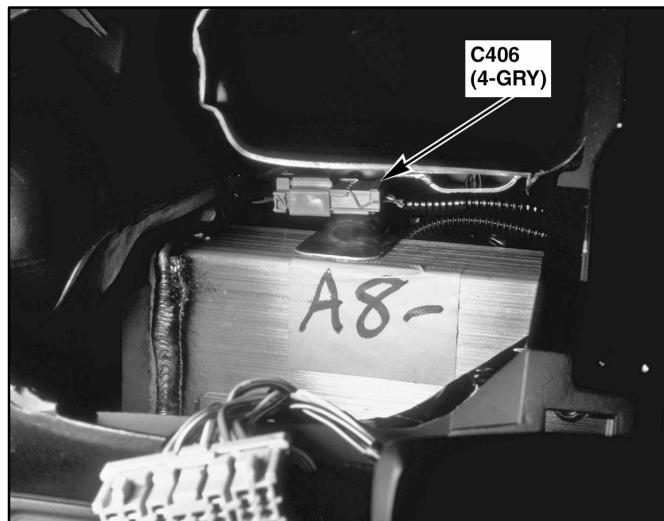


38. Under Left Side of Dash




39. Upper Left Kick Panel Area

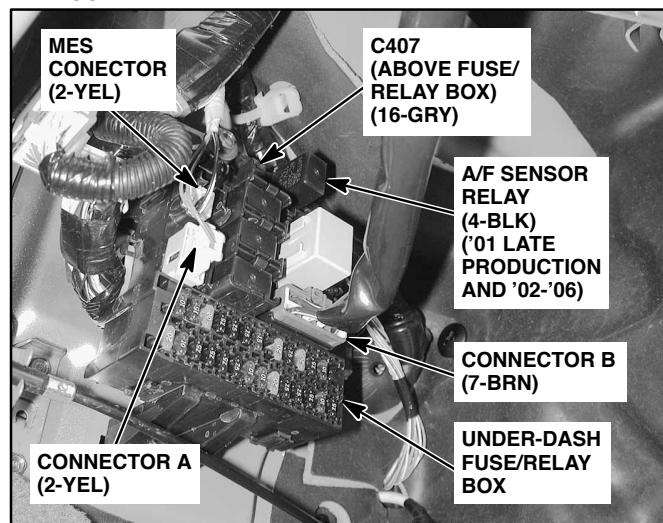


40. Upper Left Kick Panel Area

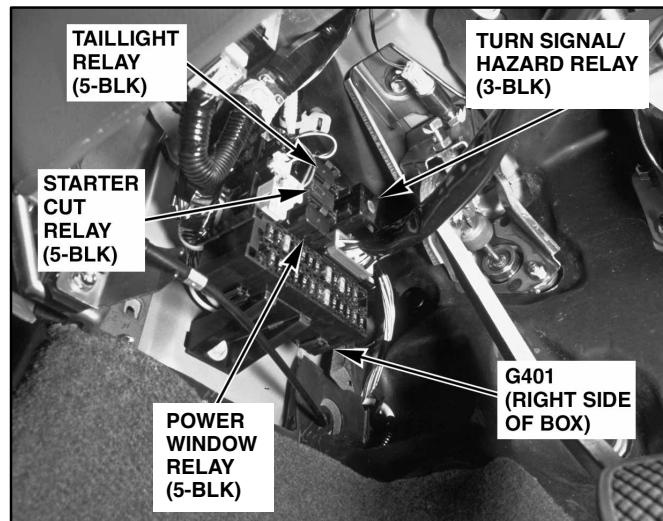


41. Under Left Side of Dash

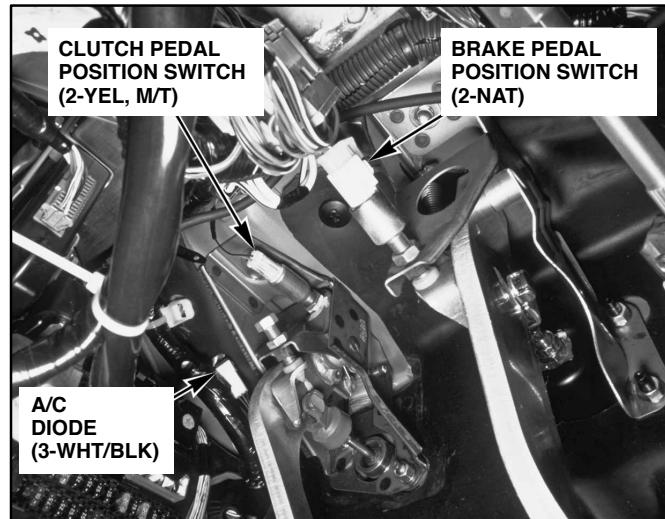


42. Under Left Side of Dash

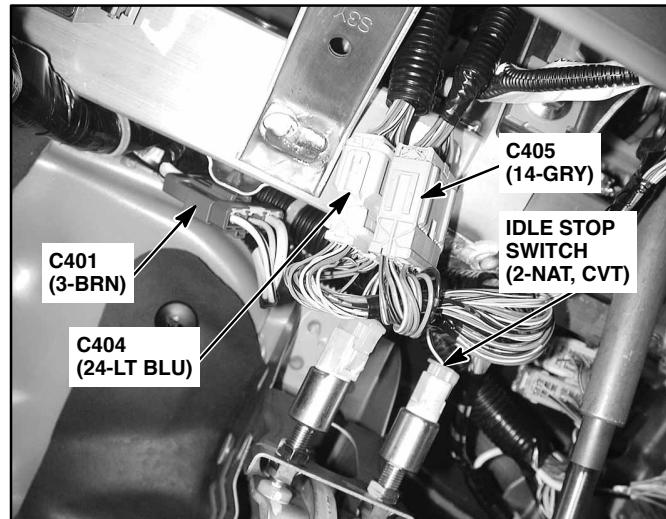


43. Under Left Side of Dash (Honda Accessory)

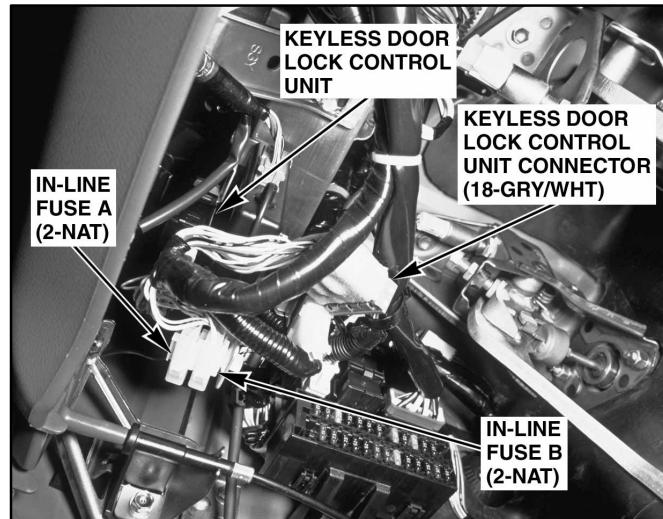


44. Under Left Side of Dash (Honda Accessory)

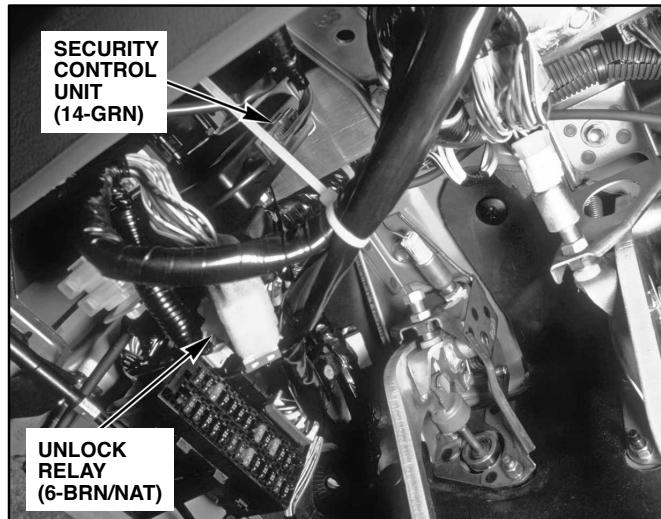


45. Left Side of Dash

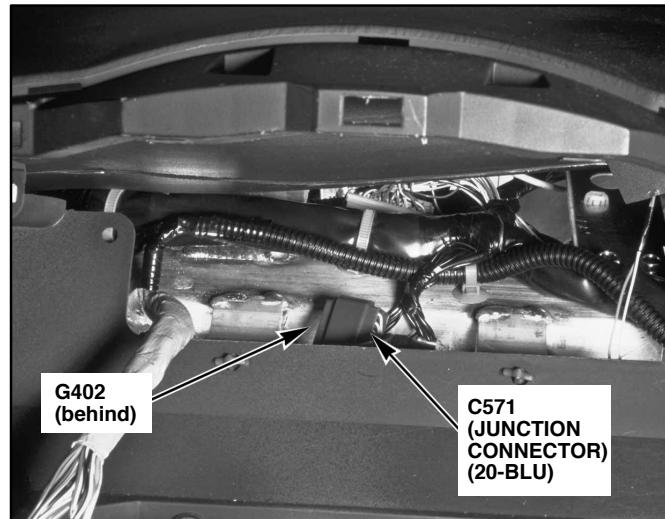


46. Gauge Assembly (Left Side of Dash)

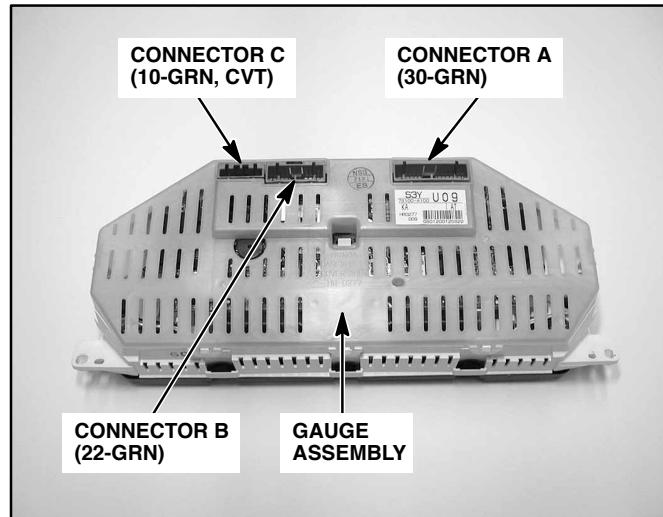


47. Steering Wheel (Airbag Removed)

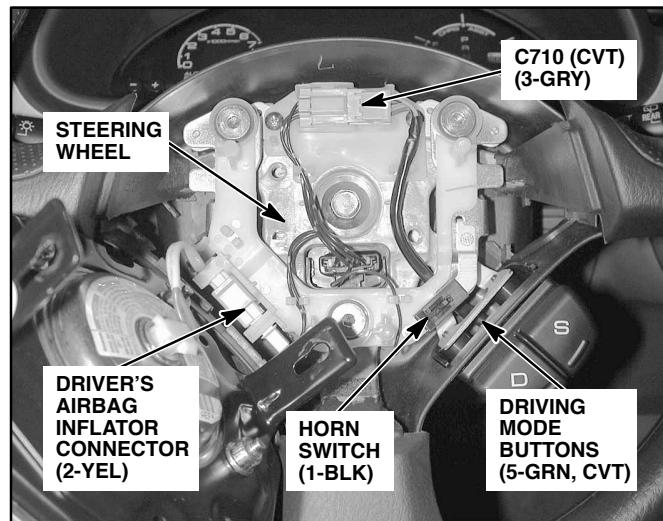


48. Left Side of Steering Column

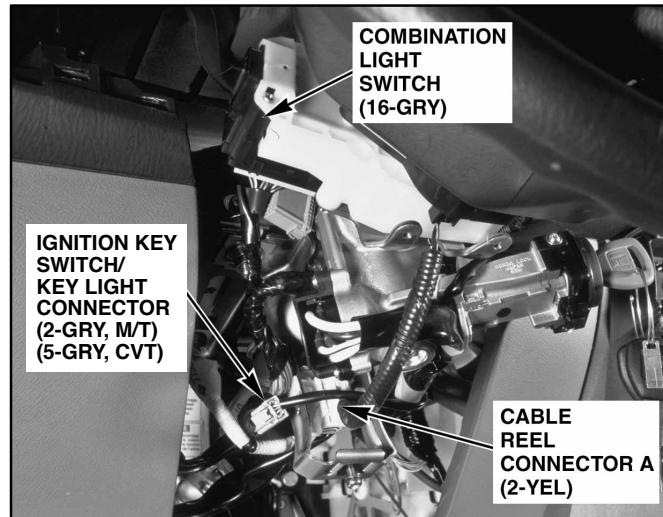


49. Under Left Side of Dash (Honda Accessory)

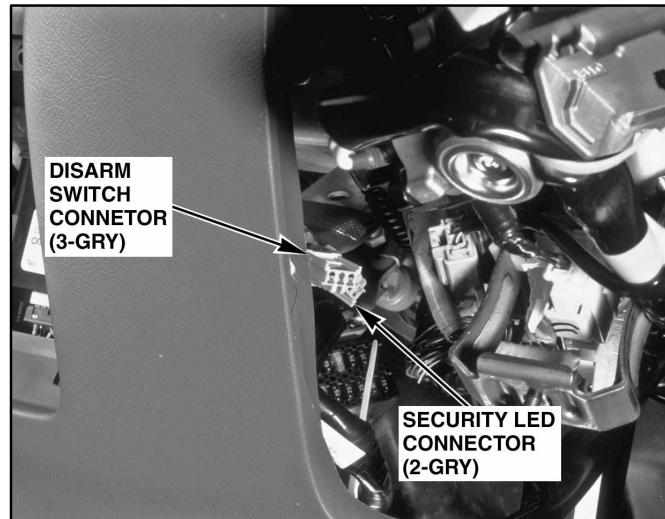


50. Right Side of Steering Column

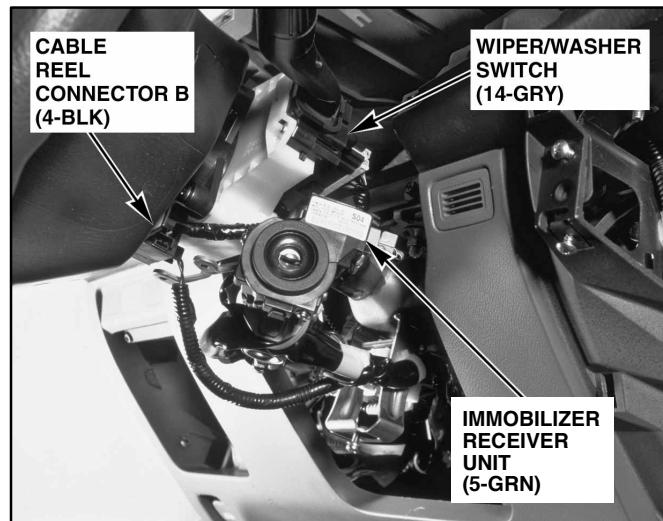

51. Under Left Side of Dash

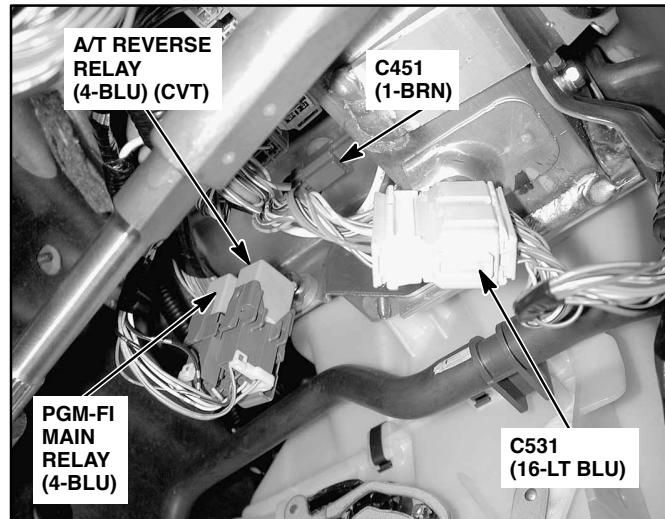


52. Under Left Side of Dash

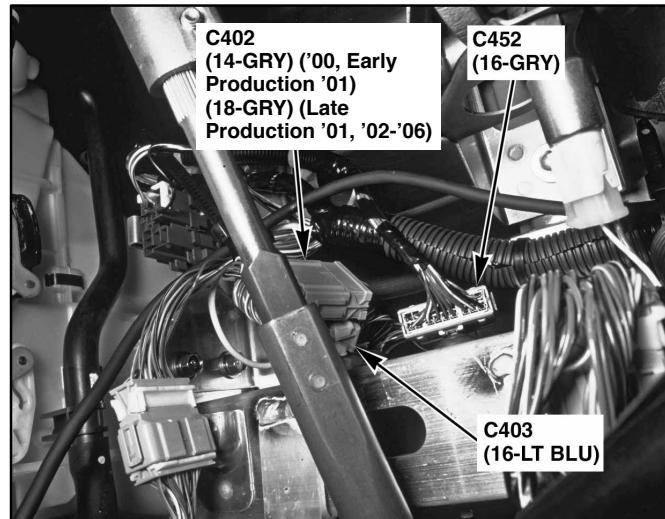


53. Right Side of Steering Column




54. Under Middle of Dash

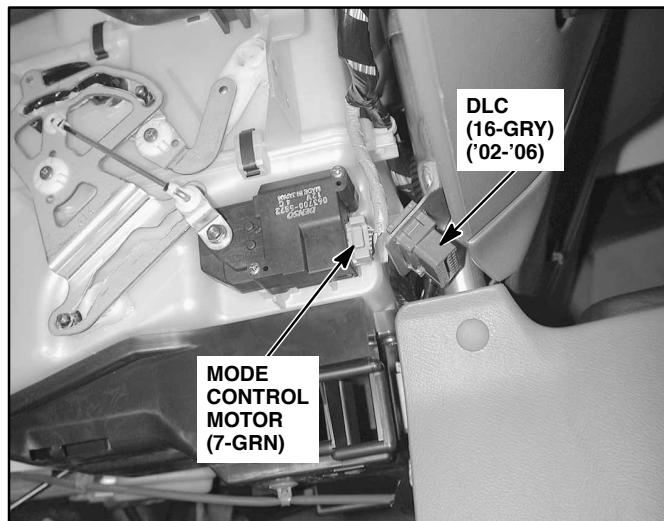


55. Under Middle of Dash

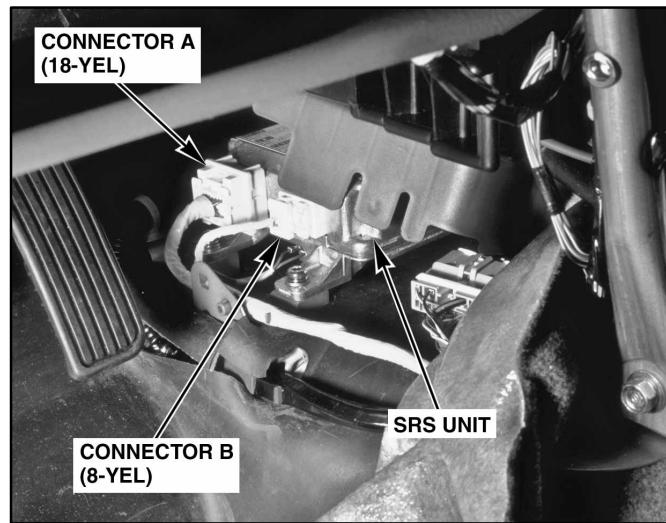


56. Under Middle of Dash

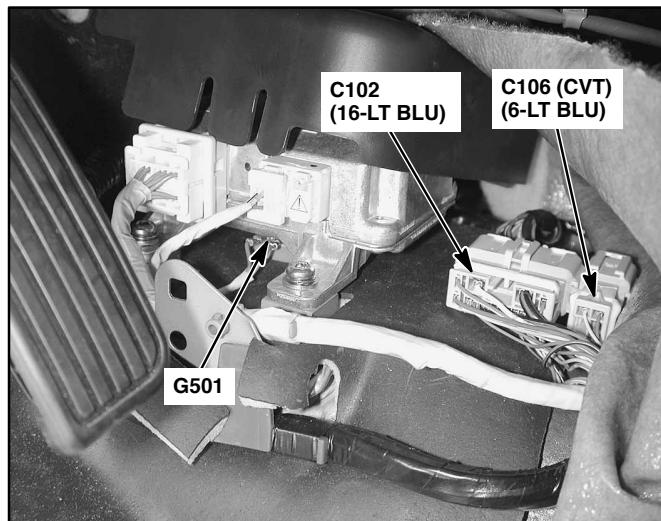


57. Top Middle of Dash

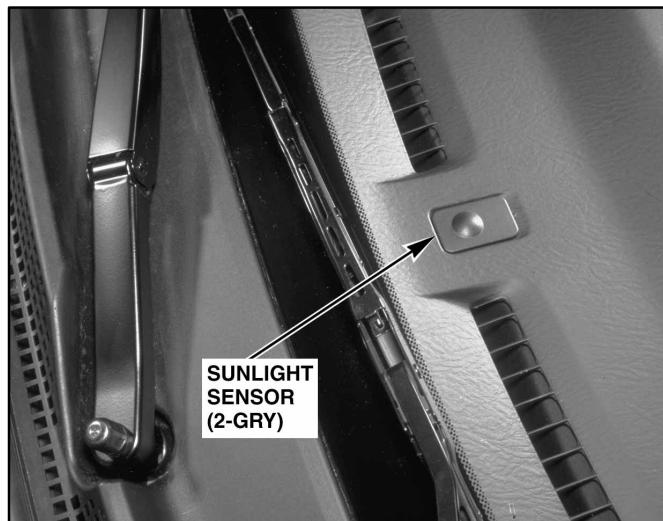

58. Middle of Dash

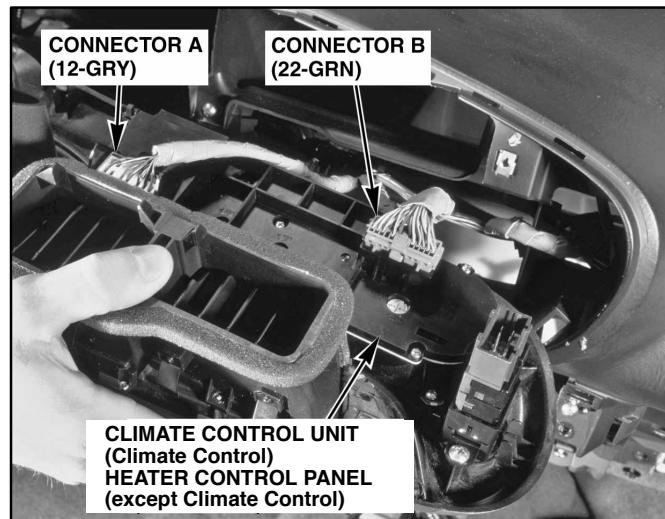


59. Middle of Dash

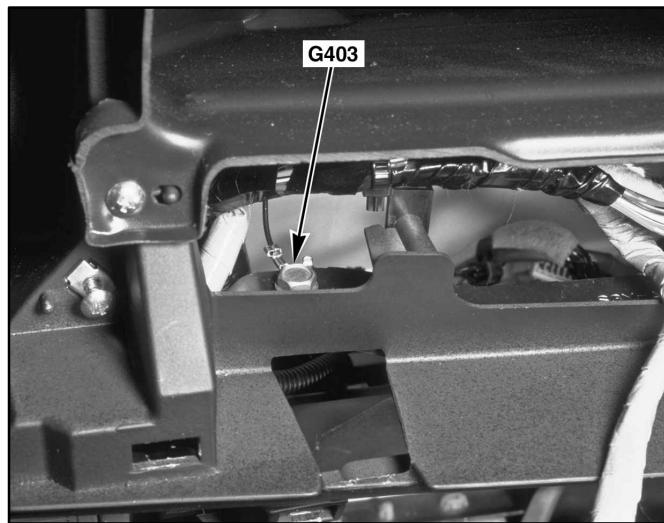

60. Middle of Dash




61. Middle of Dash

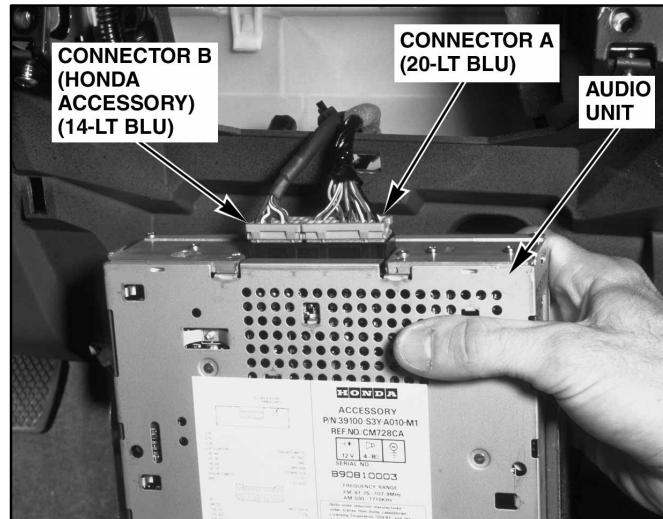


62. Middle of Dash




63. Behind Center Lower Cover

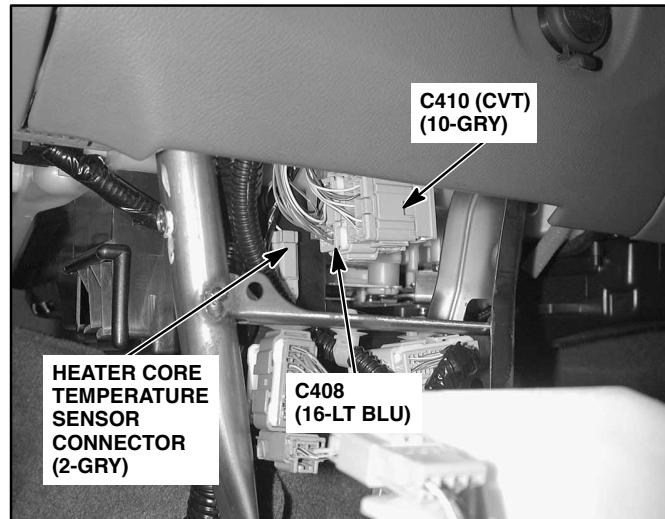


64. Behind Center Lower Cover

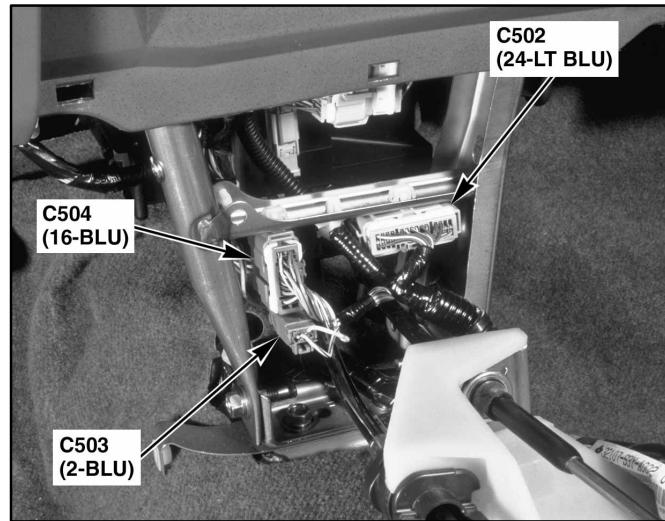


65. Behind Glove Box

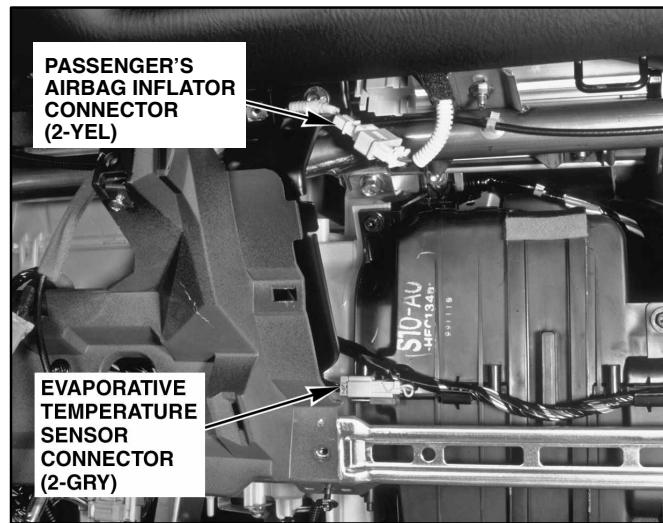


66. Behind Glove Box

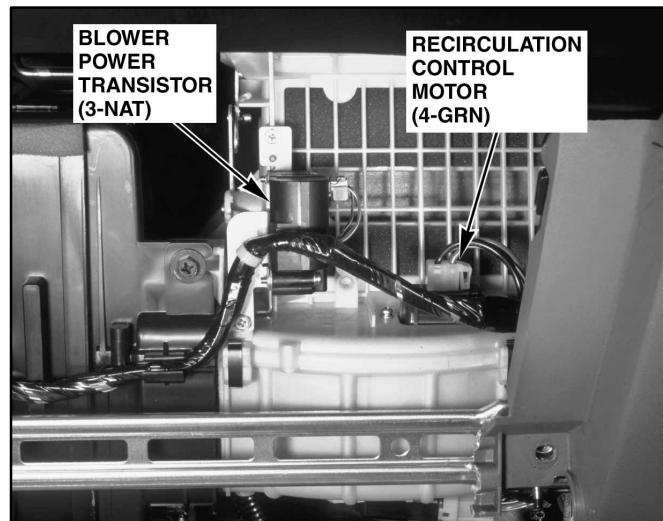


67. Right Side of Dash

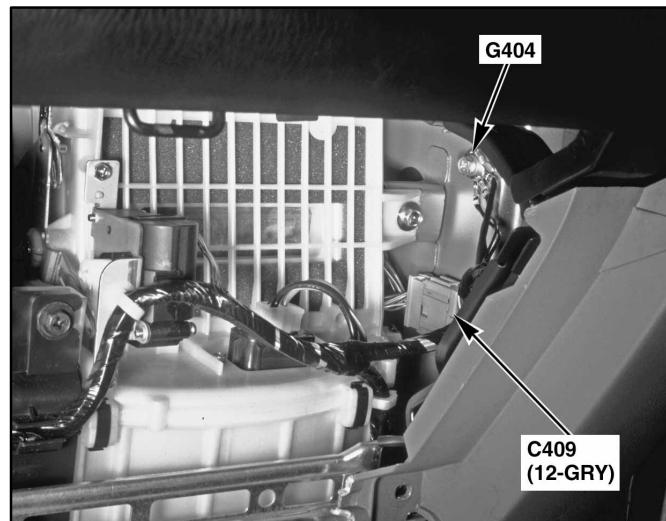


68. Behind Center Lower Cover ('00-'01 Models)

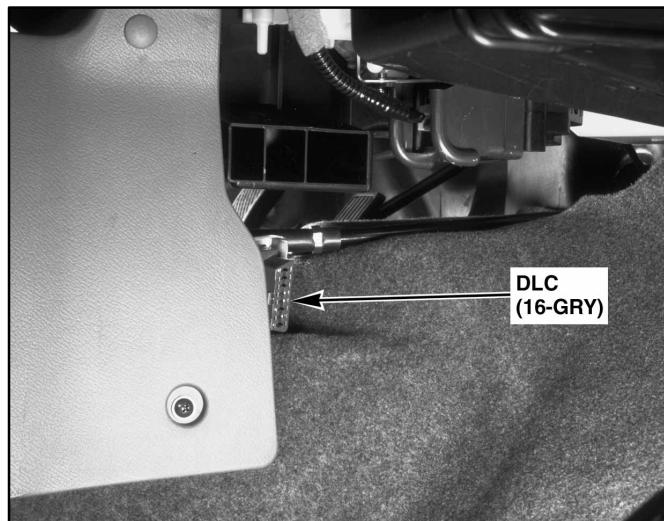


69. Under Middle of Dash

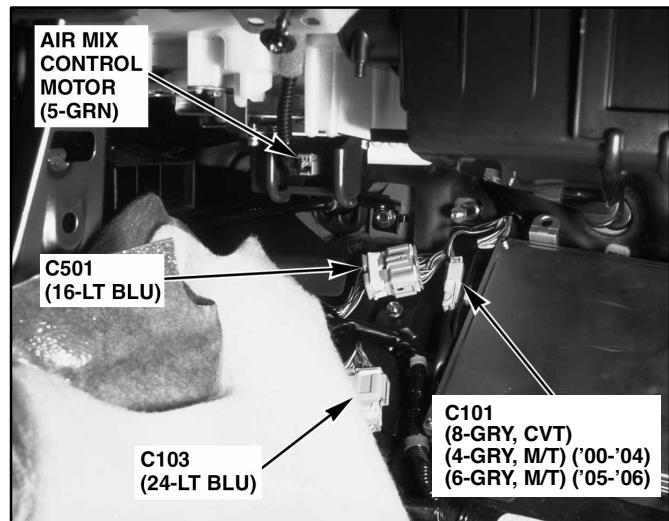


70. Right Side of Floor

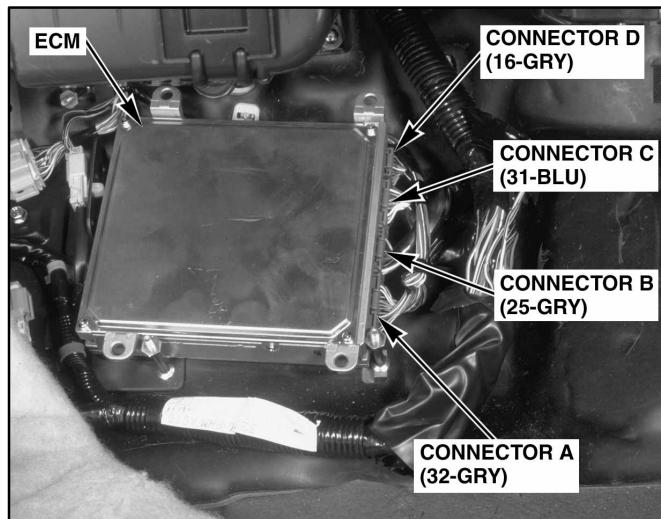


71. Right Side of Floor

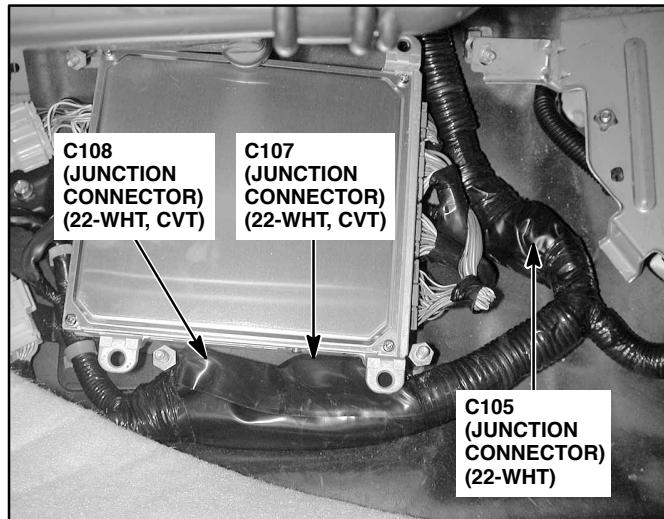


72. Under Right Side of Dash

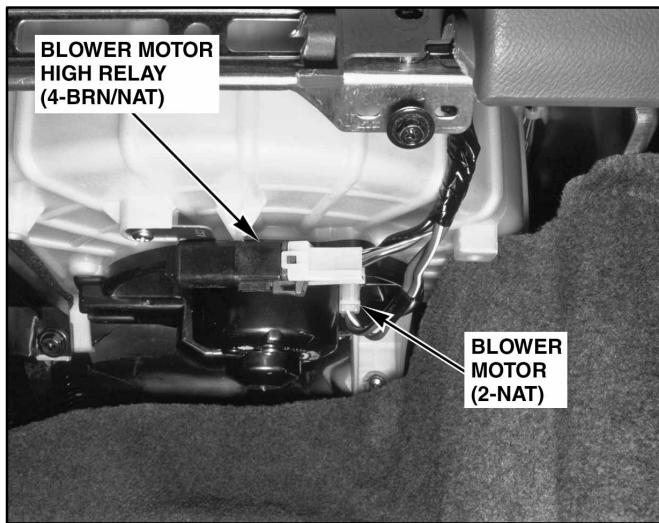


73. Under Right Side of Kick Panel (M/T)

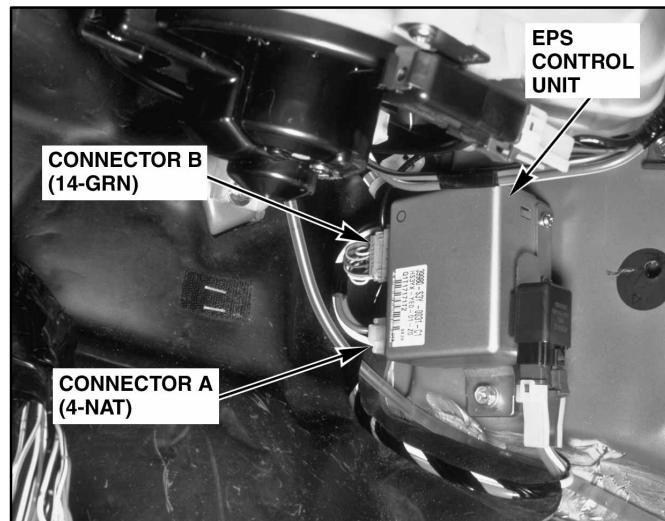

74. Under Right Side of Kick Panel

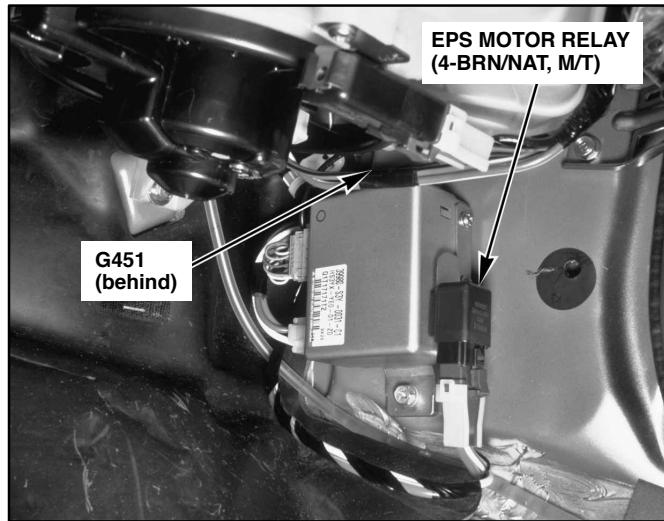


75. In Driver's Door (Passenger's Similar)

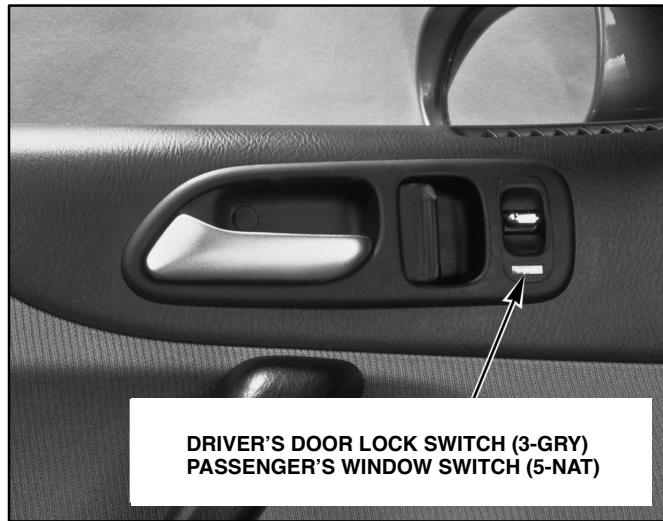


**DRIVER'S DOOR LOCK SWITCH (3-GRY)
PASSENGER'S WINDOW SWITCH (5-NAT)**


76. In Front of Driver's Door

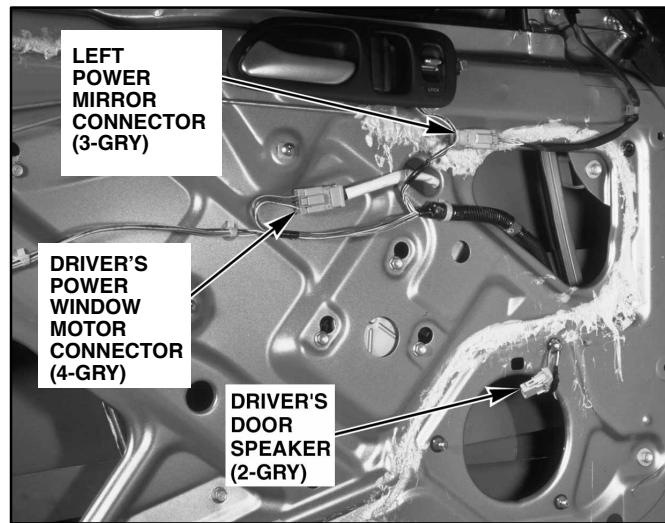


77. Rear of Driver's Door

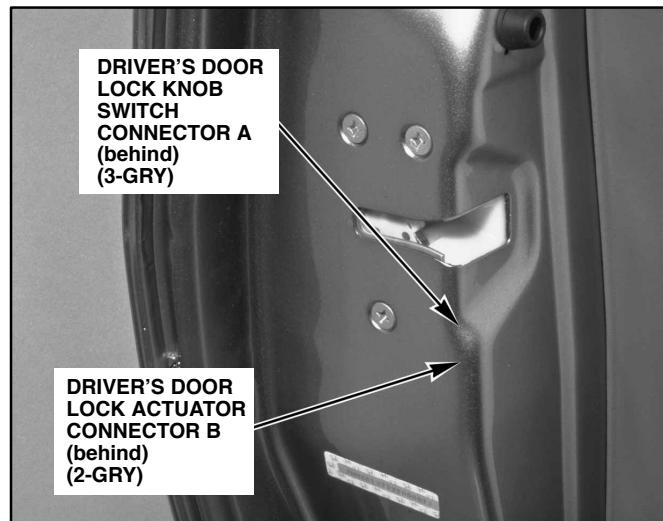


78. In Front of Passenger's Door

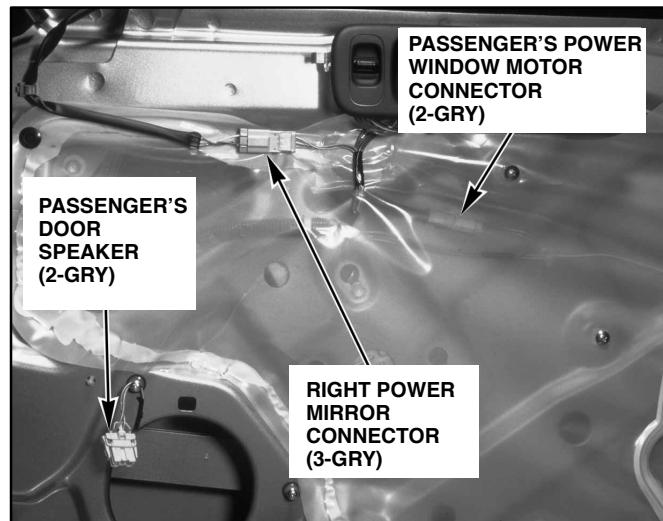


79. Rear of Passenger's Door

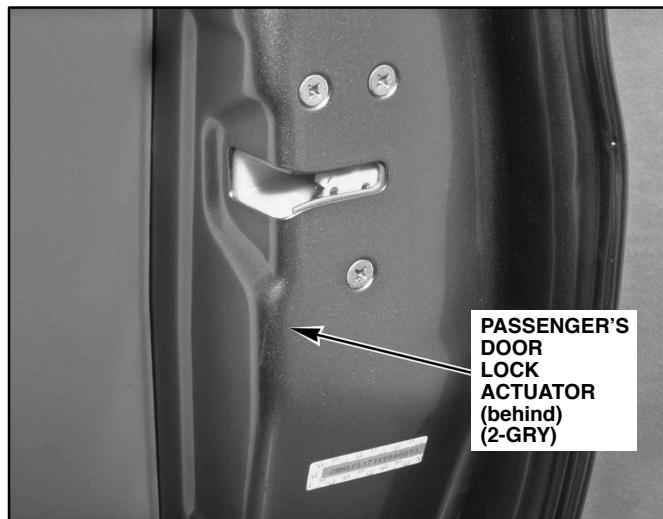


80. Middle Front of Roof

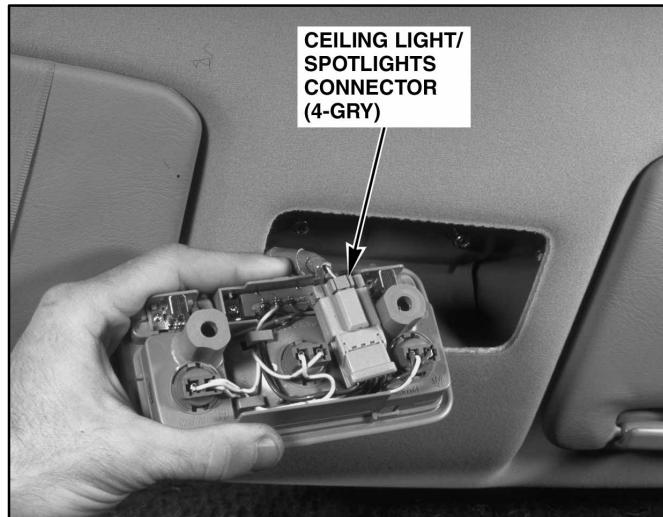


81. Middle Rear of Roof

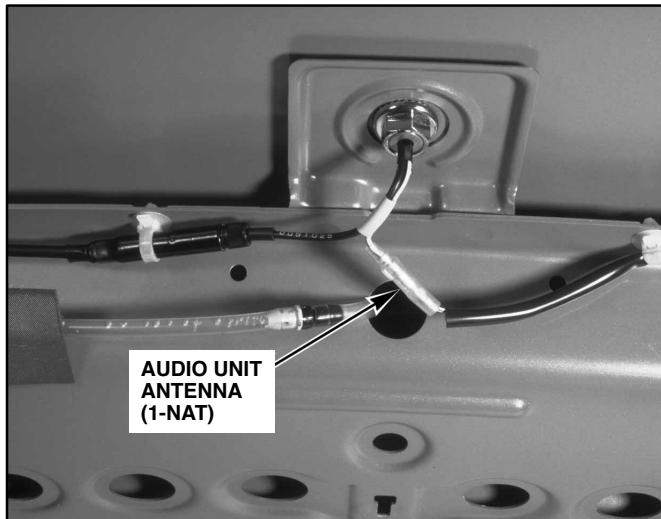


82. Middle Rear of Roof

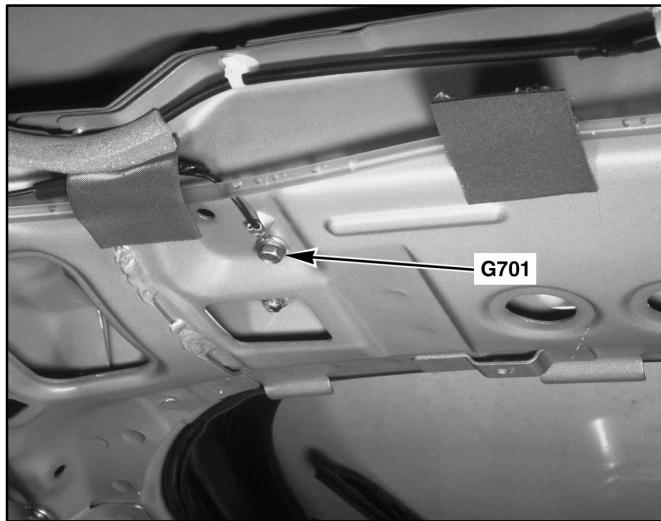


83. Under Driver's Seat

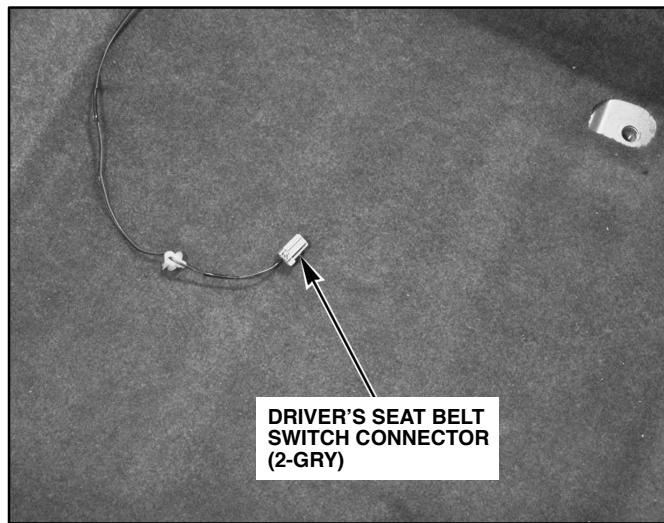


84. Middle of Floor

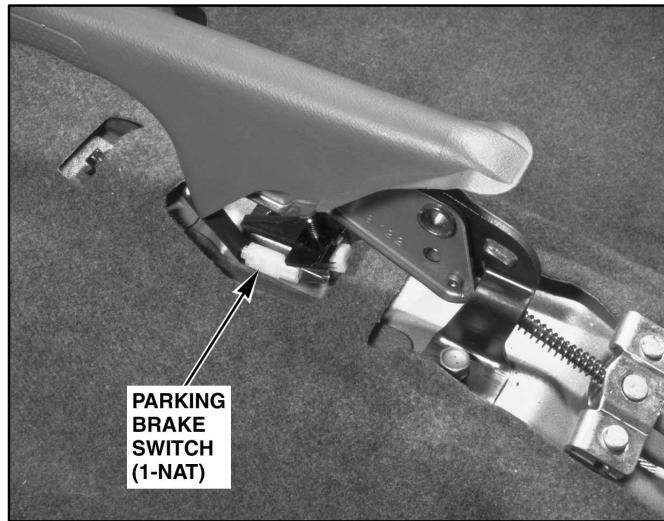


85. Left B-pillar

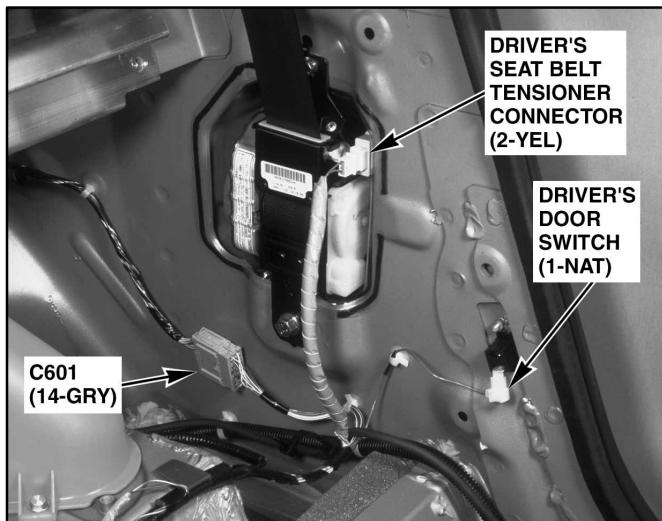


86. Behind Seat, Middle of Floor

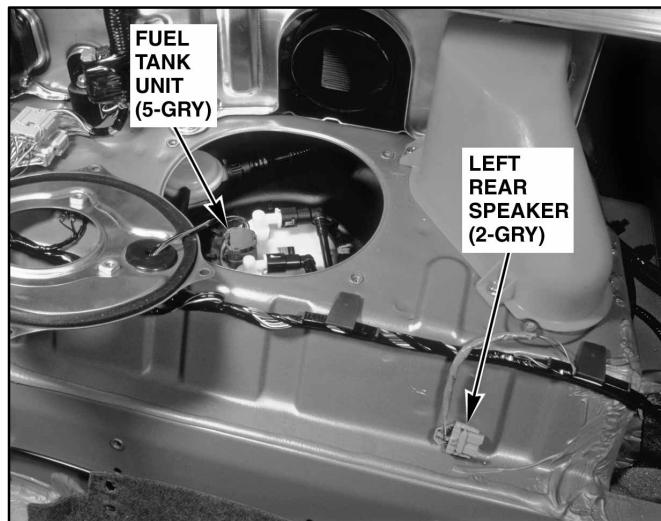


87. Behind Seat, Middle of Floor

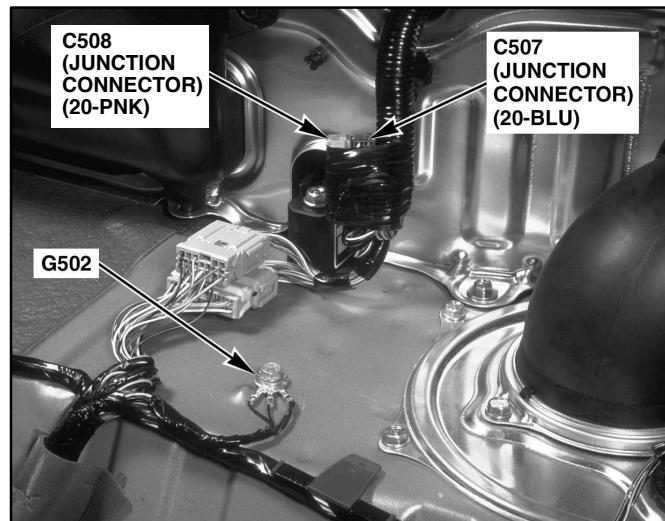


88. Behind Seat, Middle of Floor

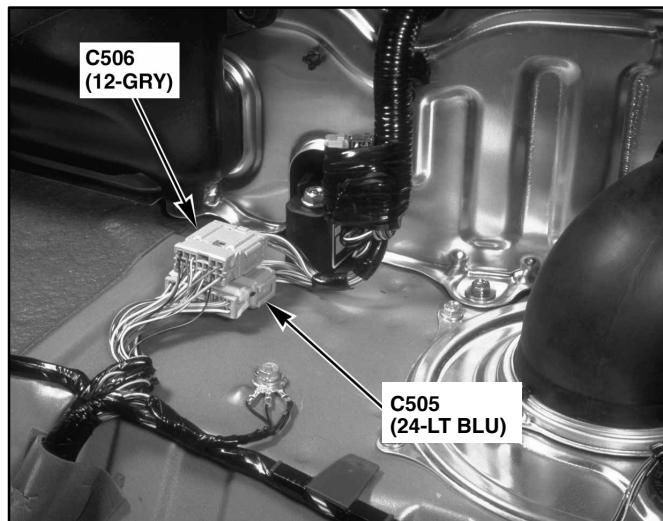


89. Behind Passenger's Seat

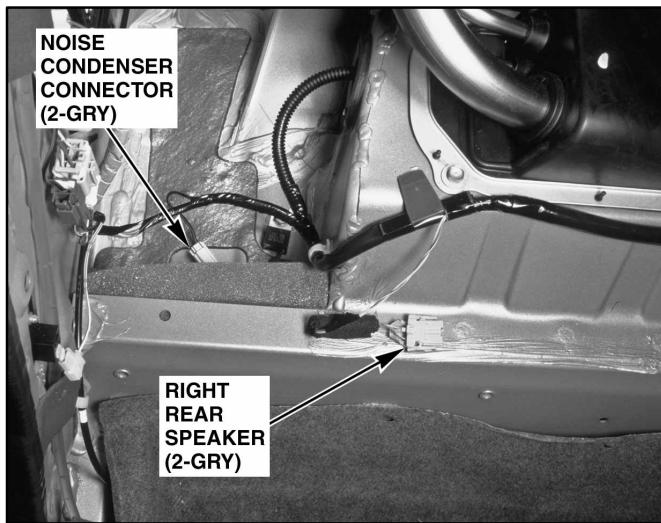


90. Right B-pillar

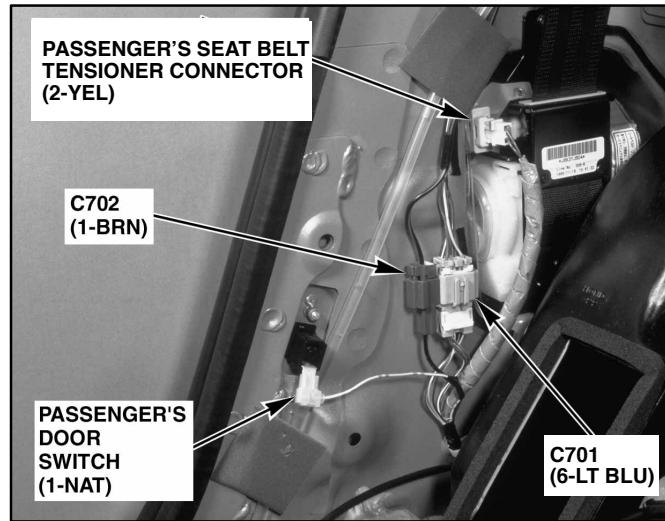


91. Left Rear Side of Floor

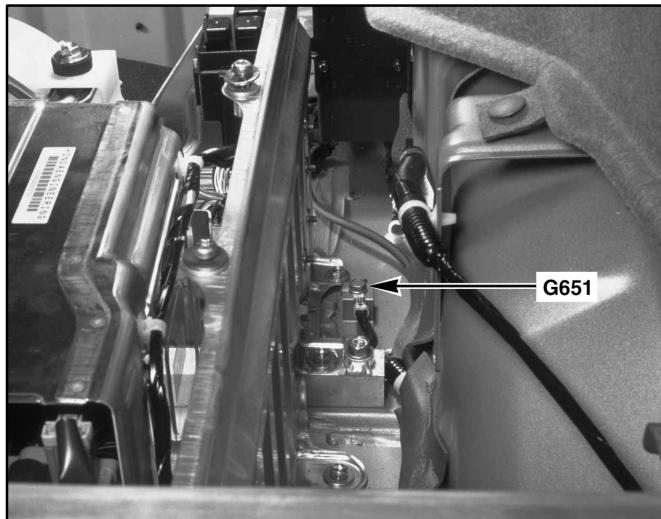


92. Left Front Side of PCU

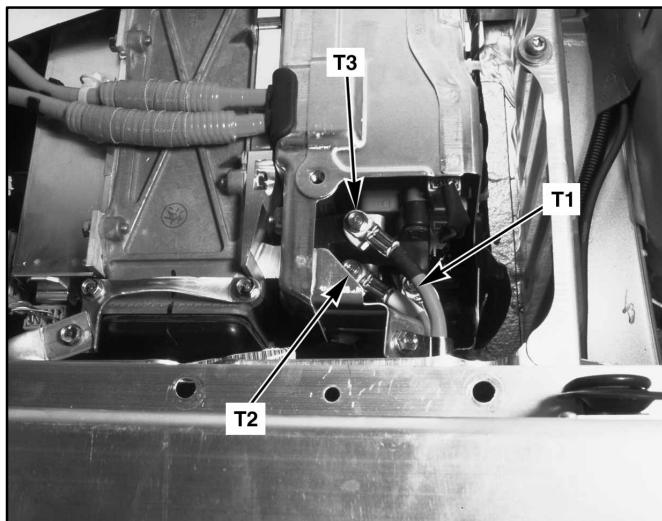


93. Left Side of PCU (PCU Removed)

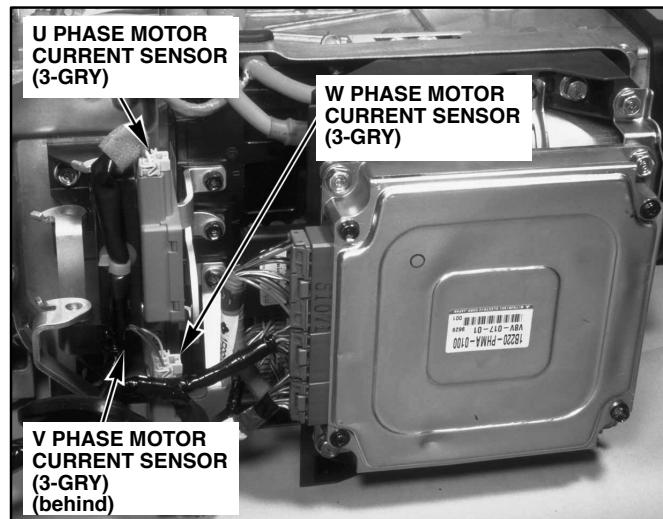


94. Left Side of PCU (PCU Removed)

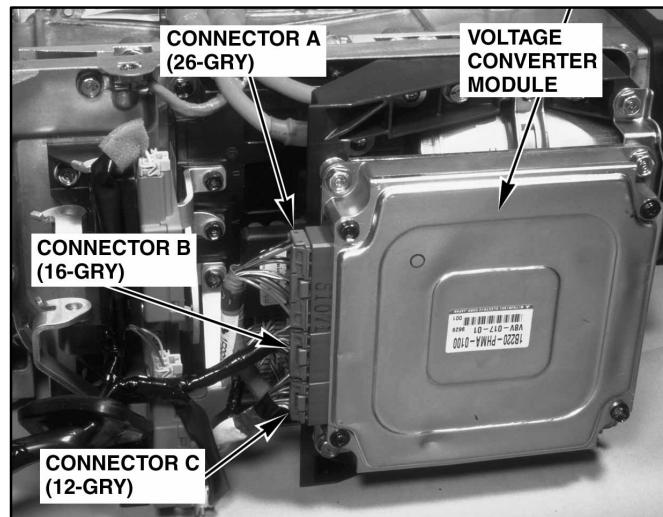


95. Left Side of PCU (PCU Removed)

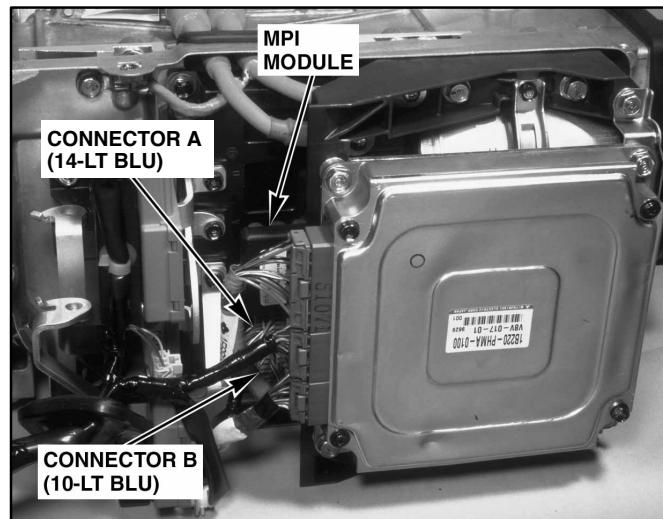


96. Left Rear Side of PCU

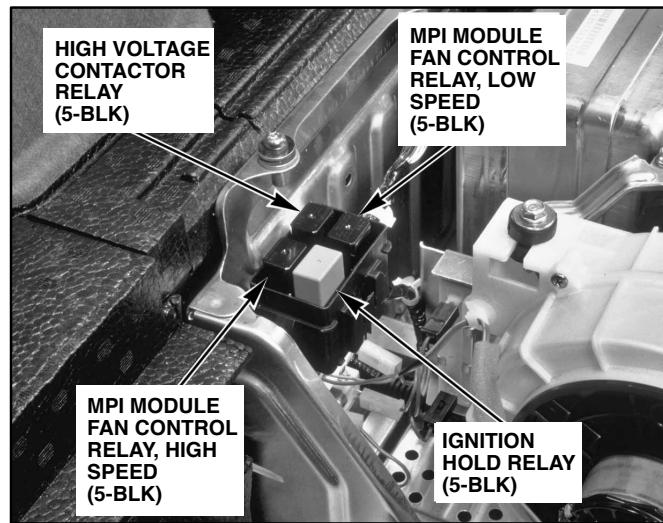

97. Left Rear Side of PCU

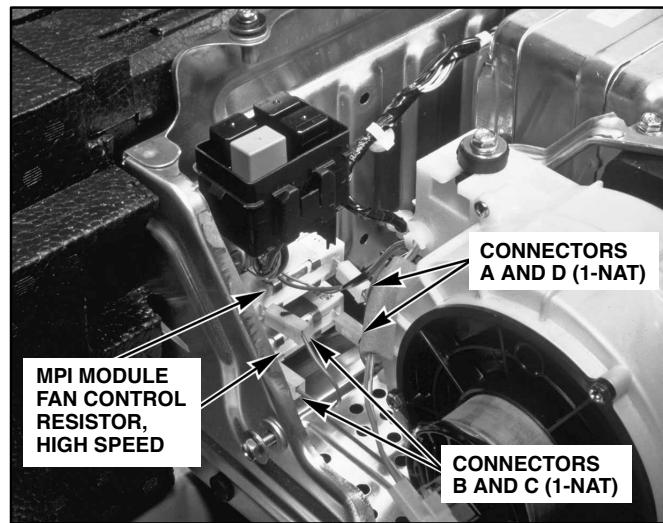


98. Left Rear Side of PCU

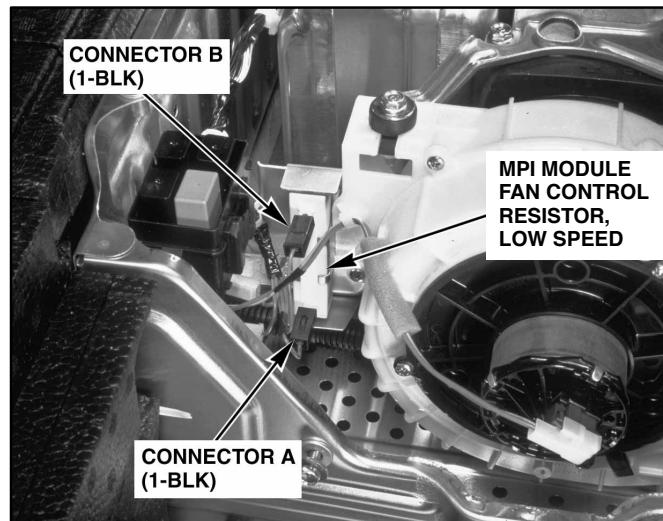


99. Left Rear Side of PCU




100. Left Front Side of Battery Module

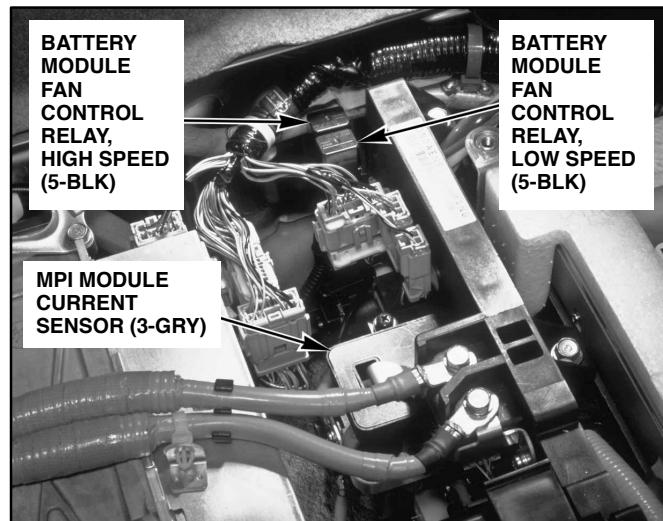


101. Left Front Side of Battery Module

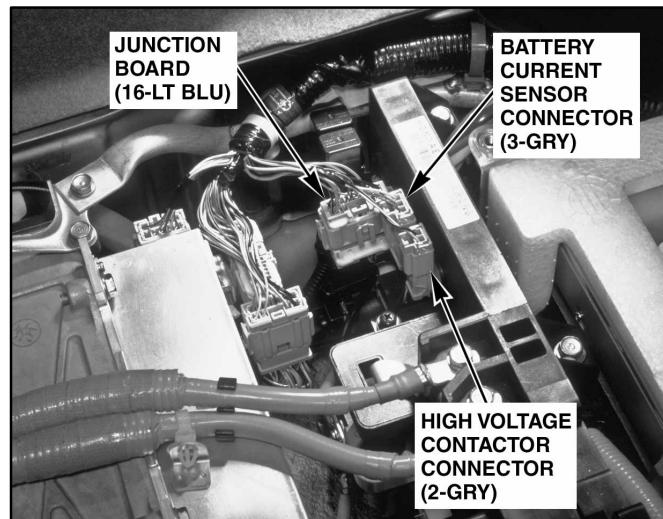


102. Right Front Side of PCU

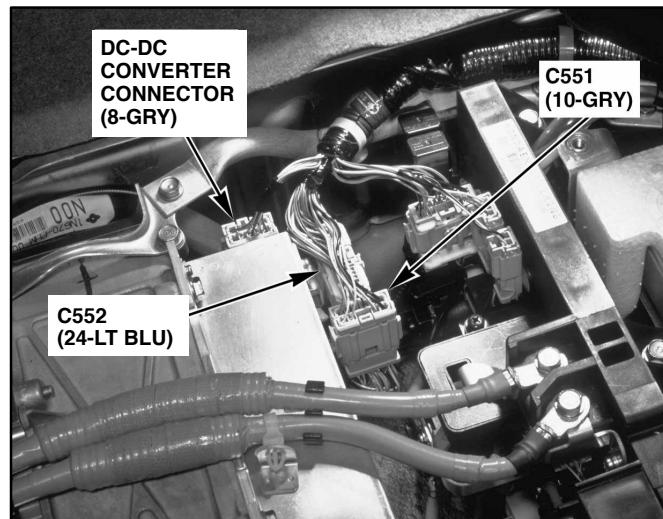


103. Lft. Frt. Side of Batt. Mod. (Conn. Disconnected)

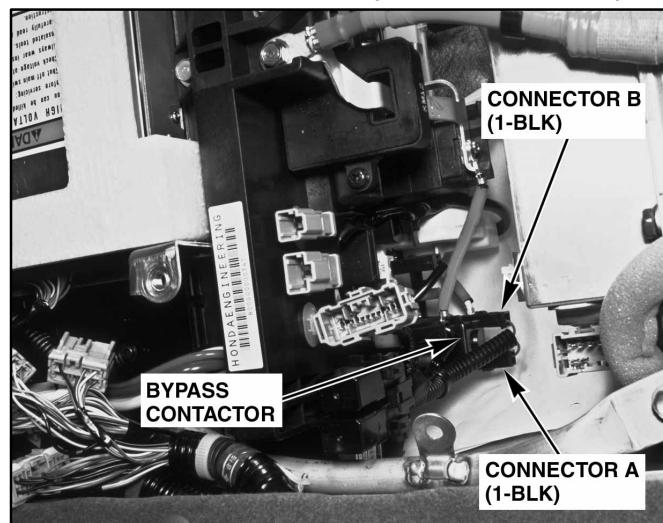


104. Lft. Frt. Side of Batt. Mod. (Conn. Disconnected)

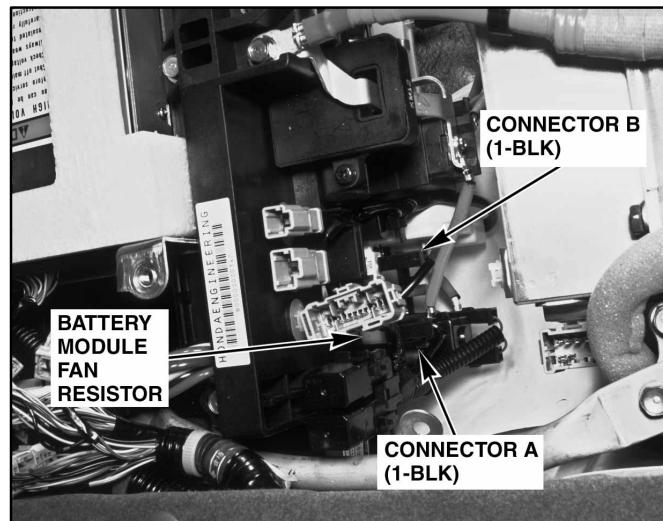


105. Left Side of Battery Module

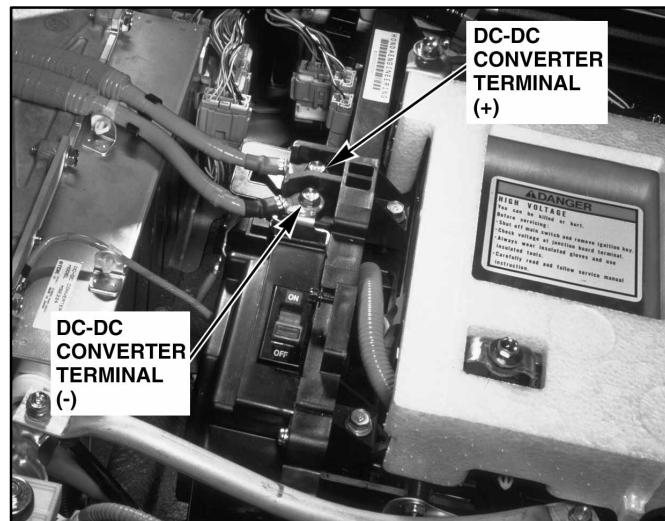


106. Below Left Side of Battery Module

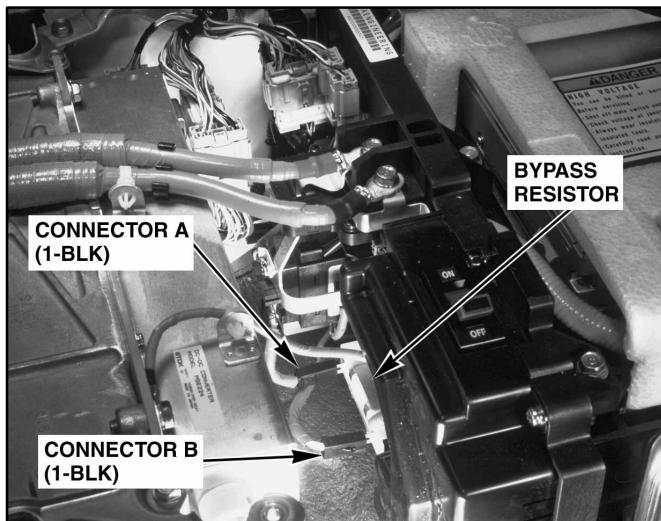


107. Top Front of Battery Module

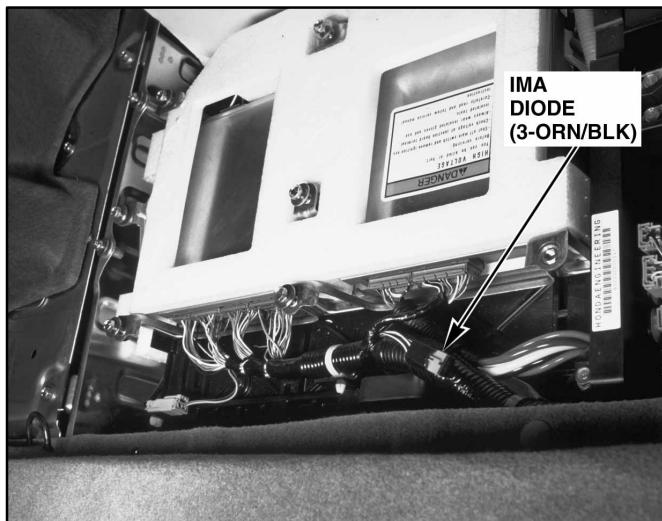


108. Top Front of Battery Module

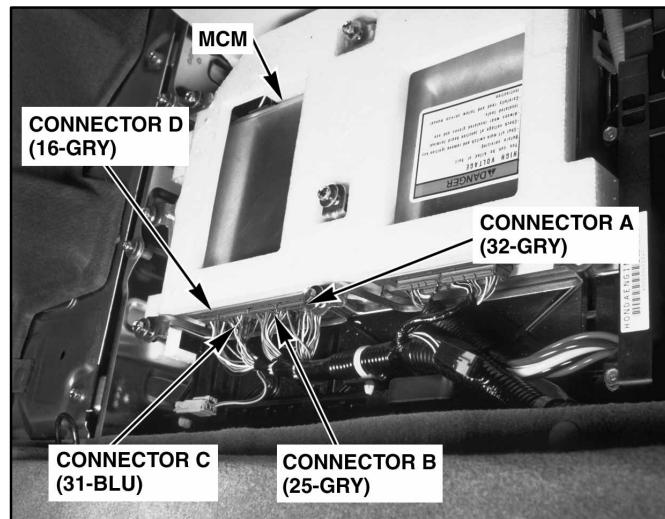


109. Top Front of Battery Module

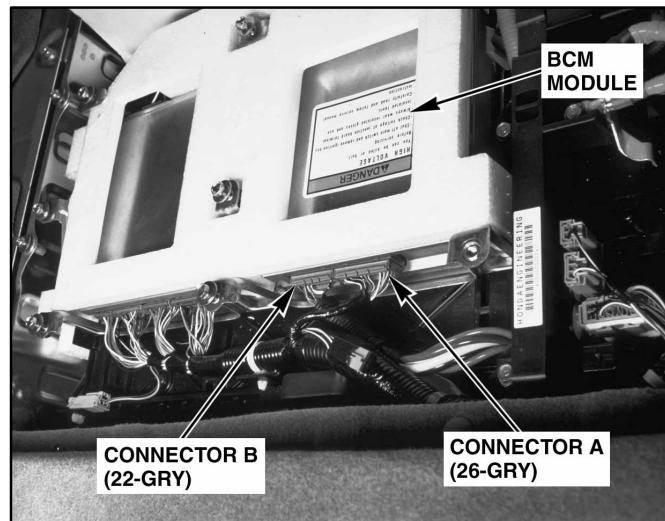


110. Top Rear of Battery Module

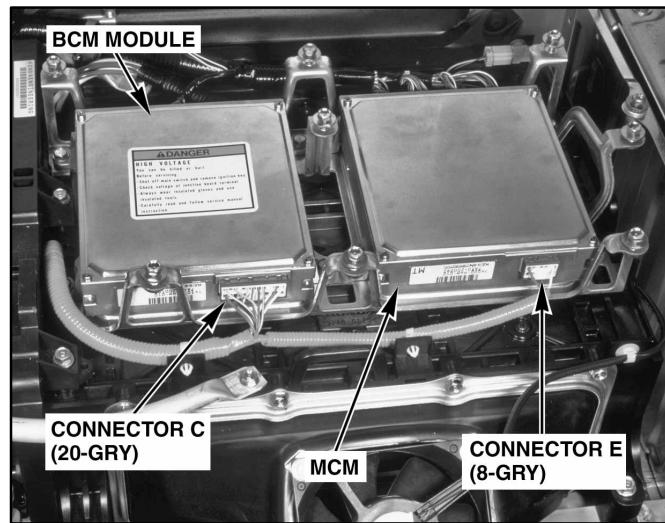


111. Top Rear of Battery Module

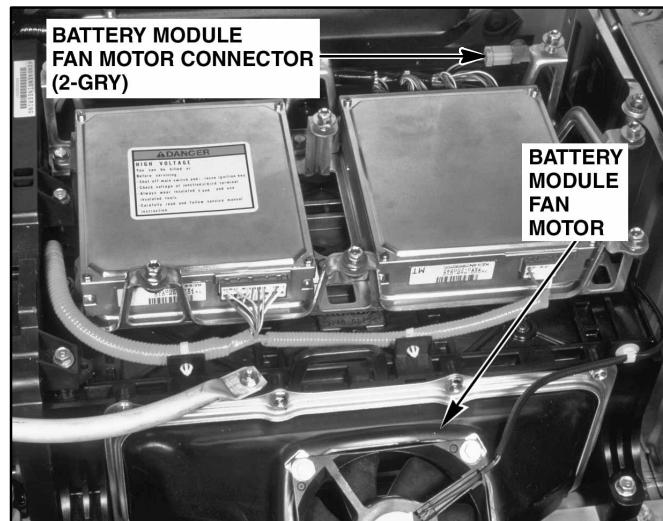


112. Left Side of Cargo Area

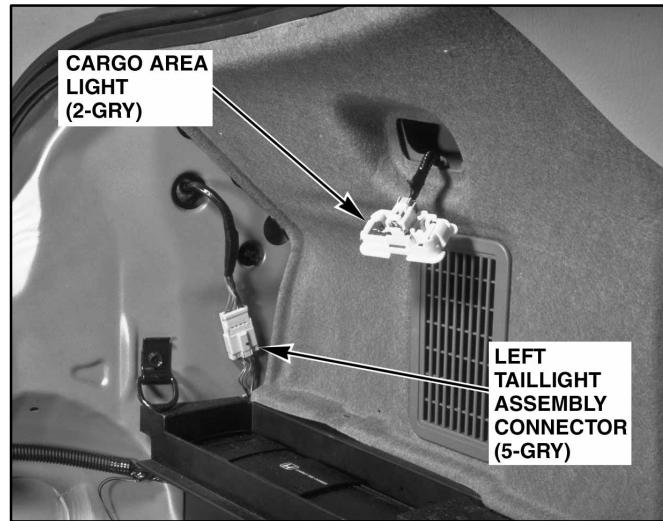


113. Below Left Side of Cargo Area

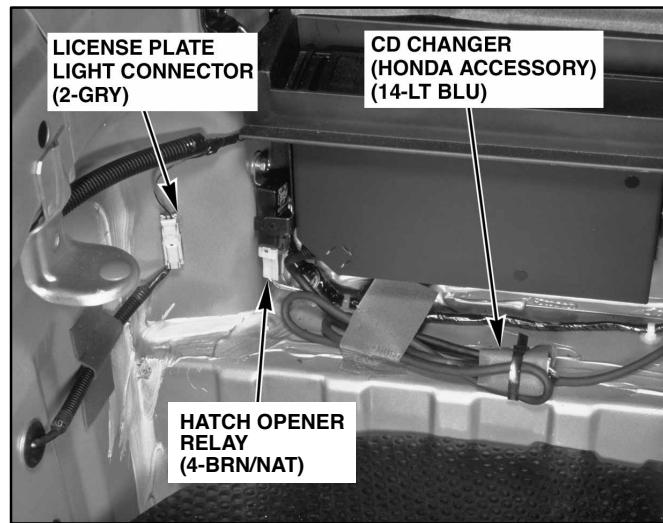


114. Middle of Cargo Area

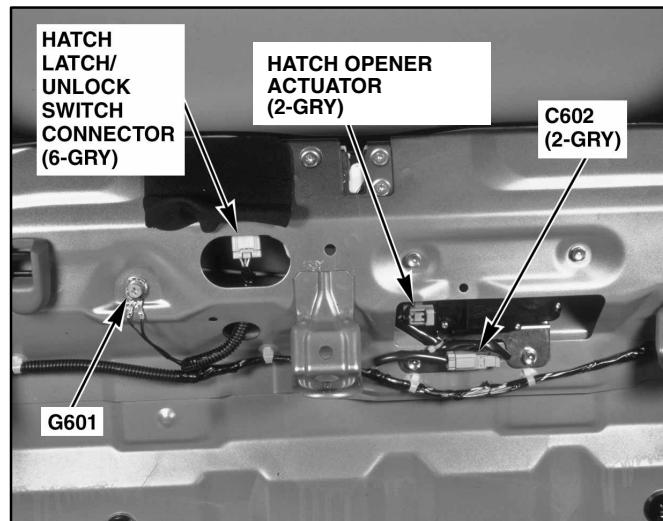


115. Right Side of Cargo Area

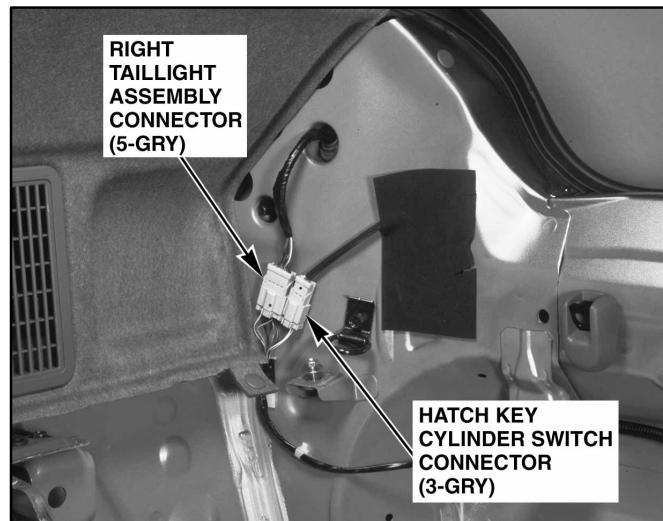


116. Left Side of Hatch (Right Similar)

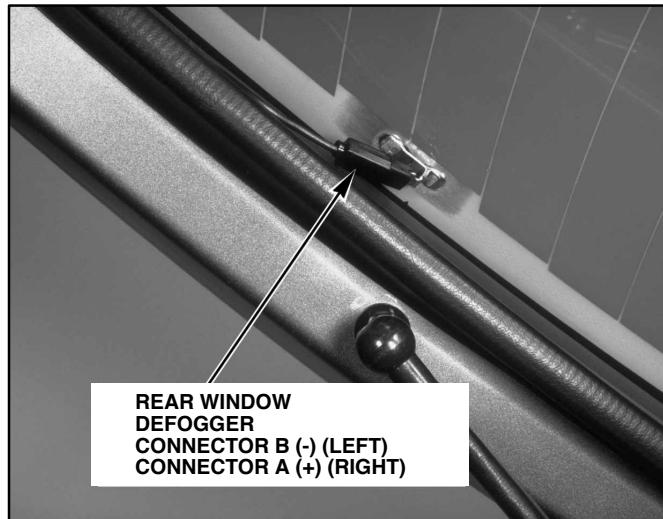


117. Left Side of Hatch

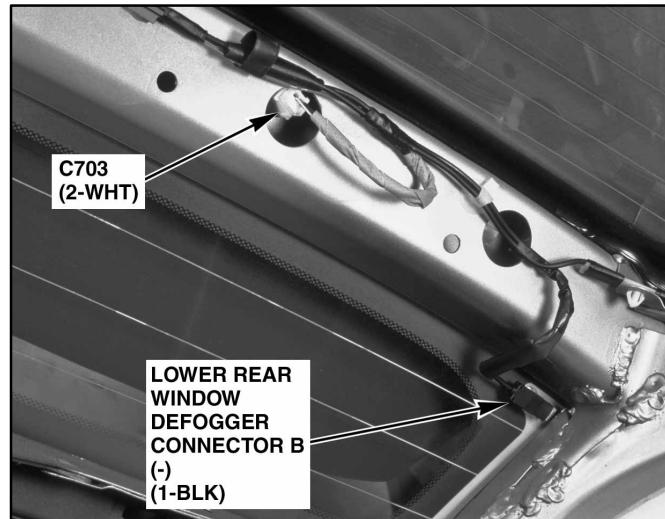


118. Middle of Hatch

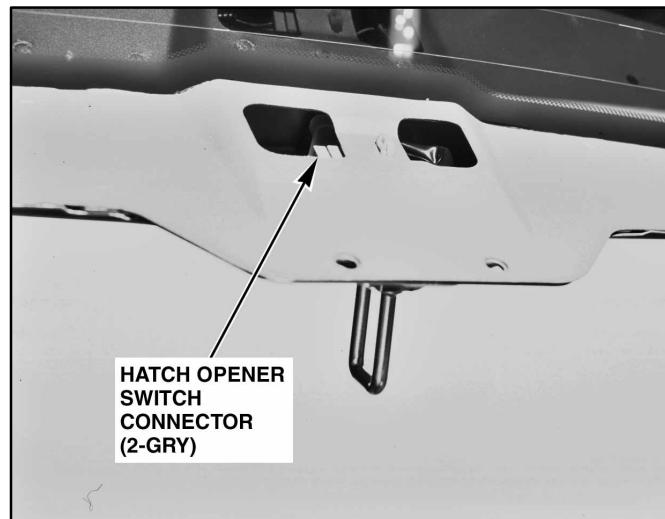


119. Right Side of Hatch

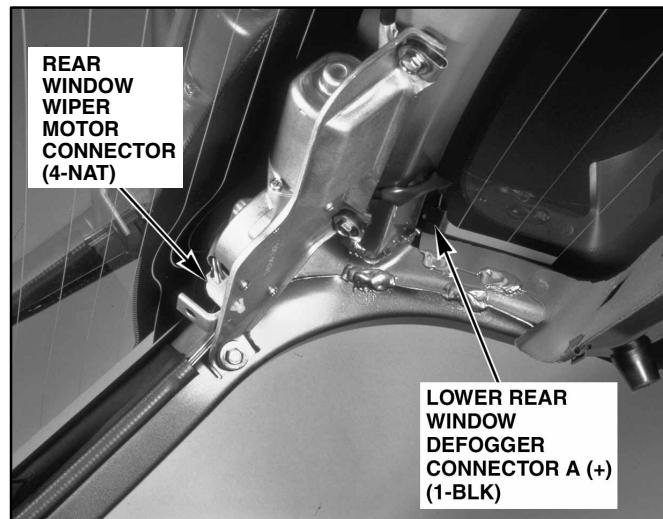


120. In Hatch

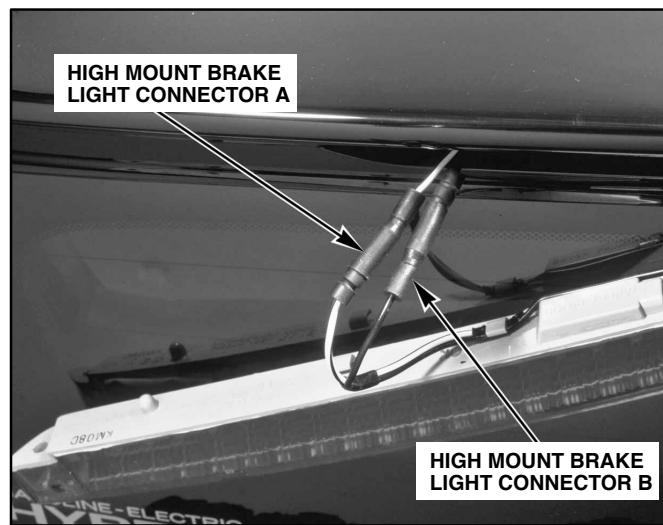


121. Above Right Front Wheel Well

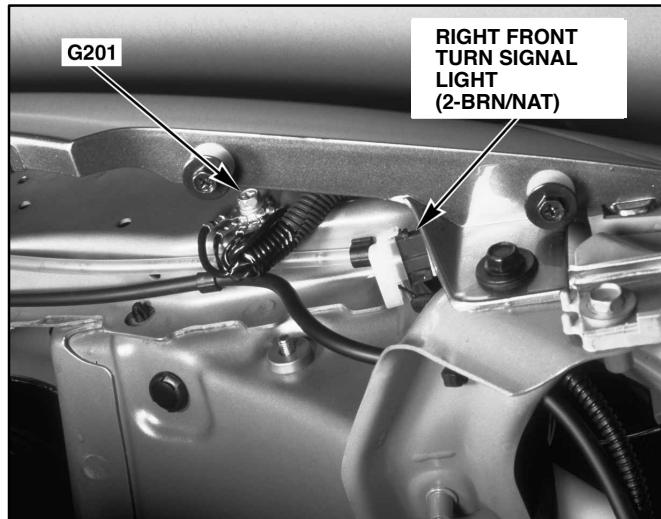


122. Below Right Front Wheel Well

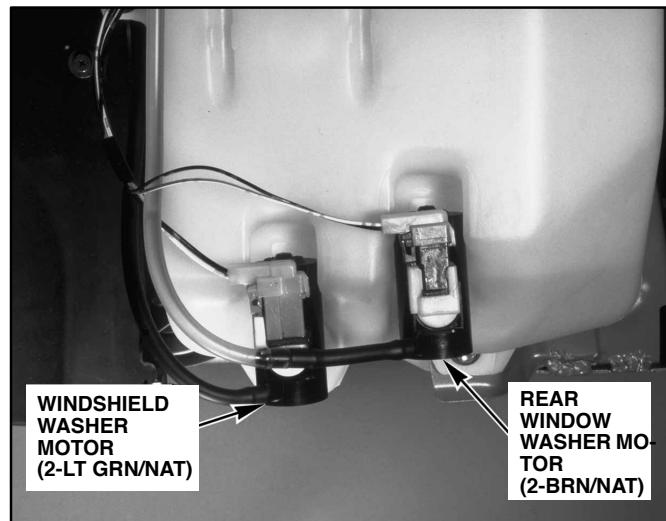


123. Above Left Front Wheel Well

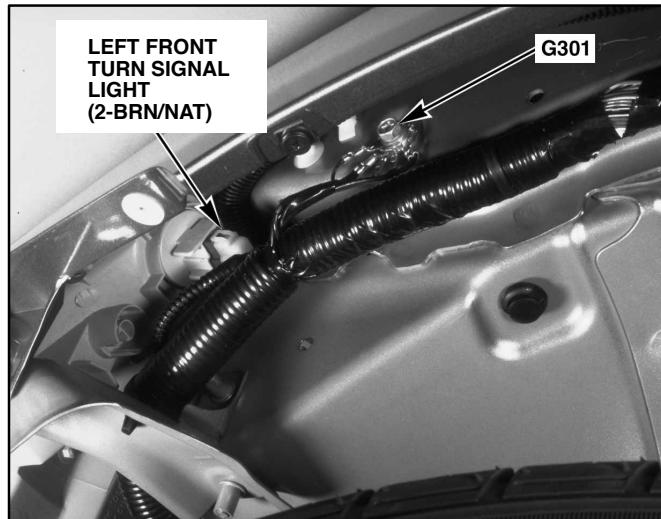


124. Below Right Front of Engine Compartment

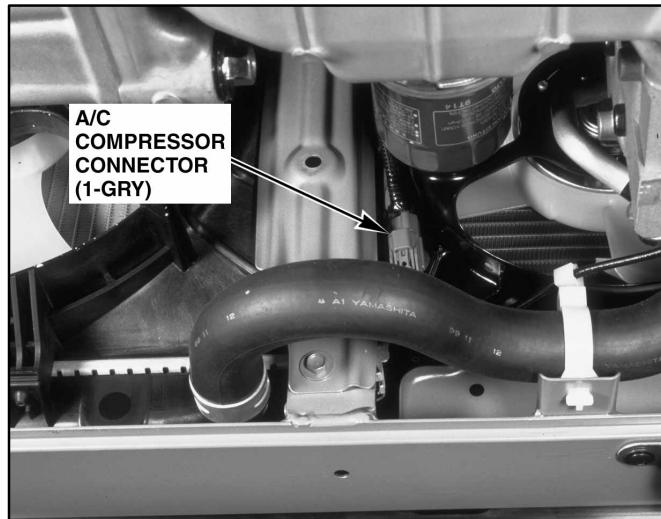


125. Below Front of Engine

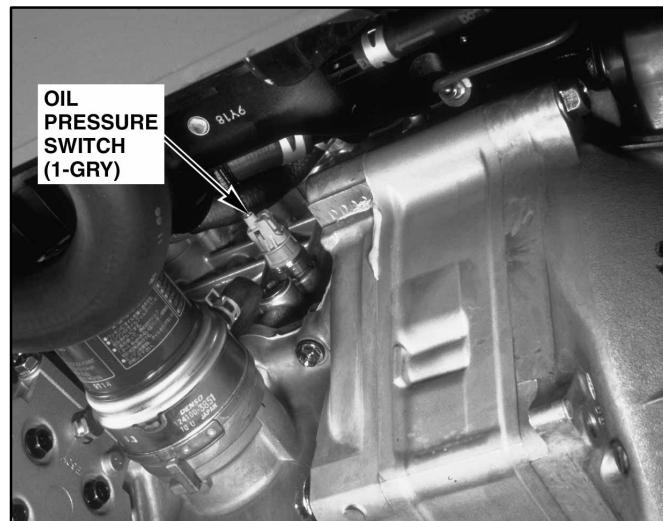


126. Below Right Side of Engine

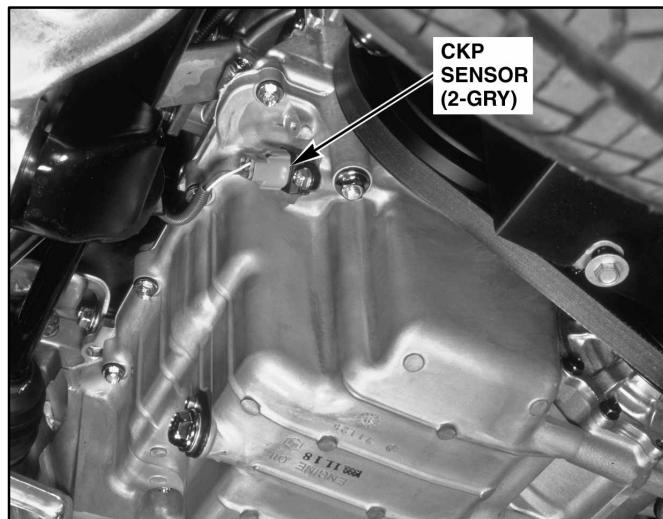


127. Below Rear of Engine

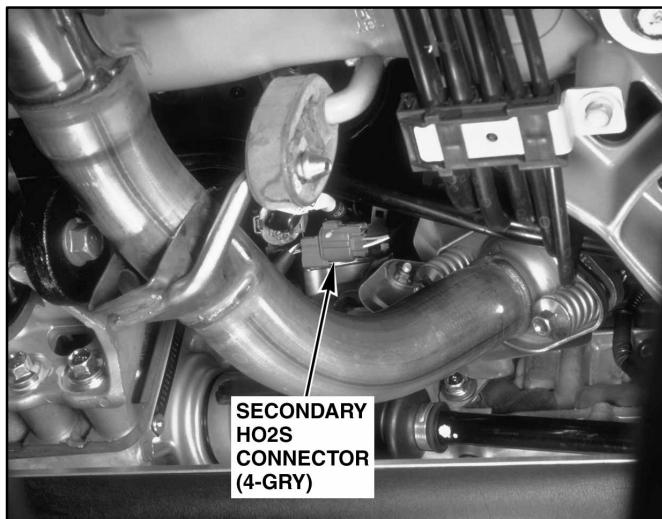


128. Right Side of Fuel Tank ('00-'05)

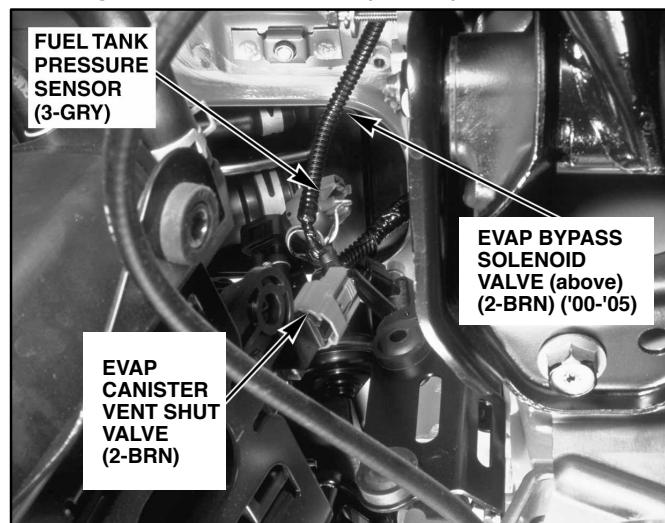


129. Right Rear Underside of Vehicle (Left Similar)

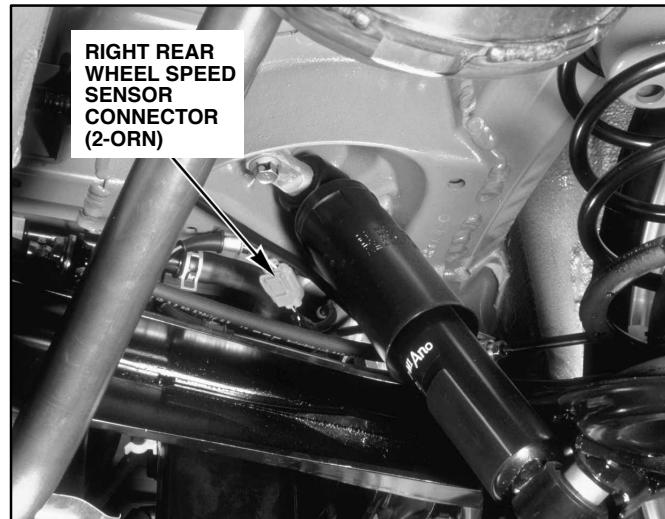


130. Transmission Housing (CVT)

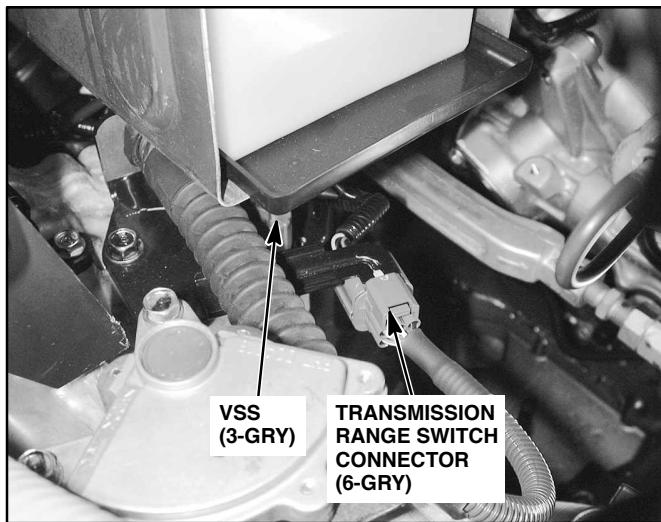


131. Left Side of Engine Compartment (CVT)

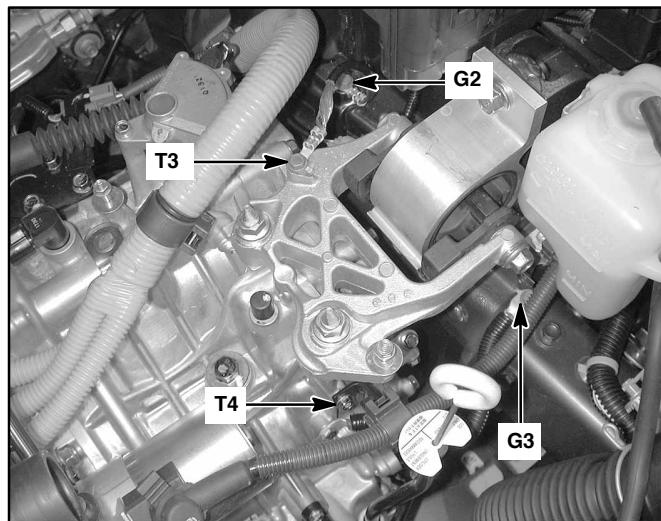


132. Valve Body (Remove) (CVT)

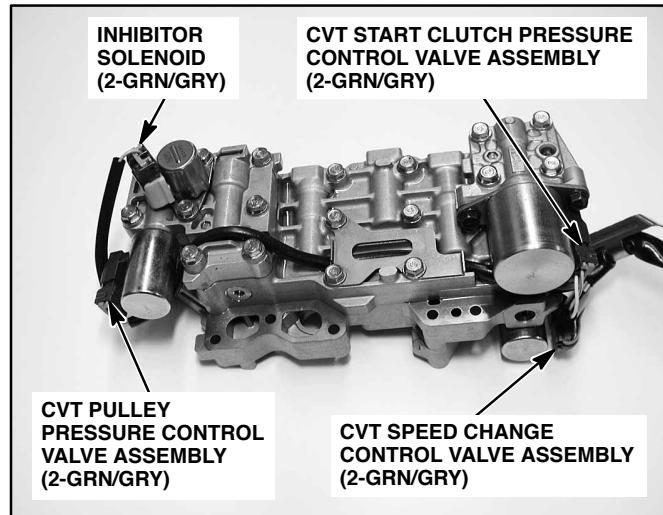


133. Middle of Floor (CVT)

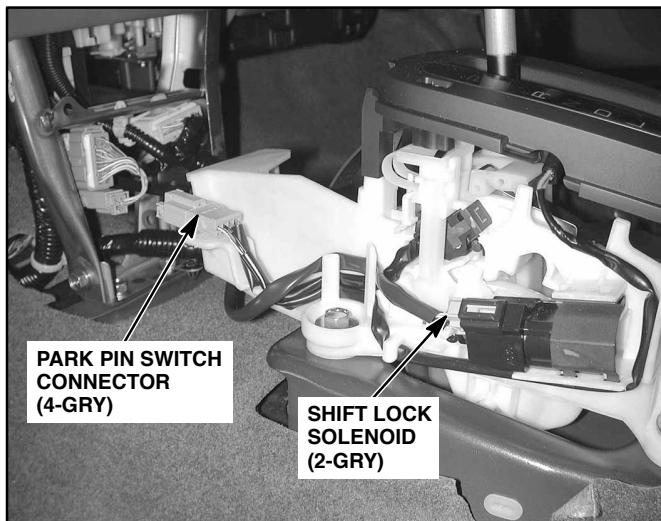

134. Under Right Side of Kick Panel (CVT)

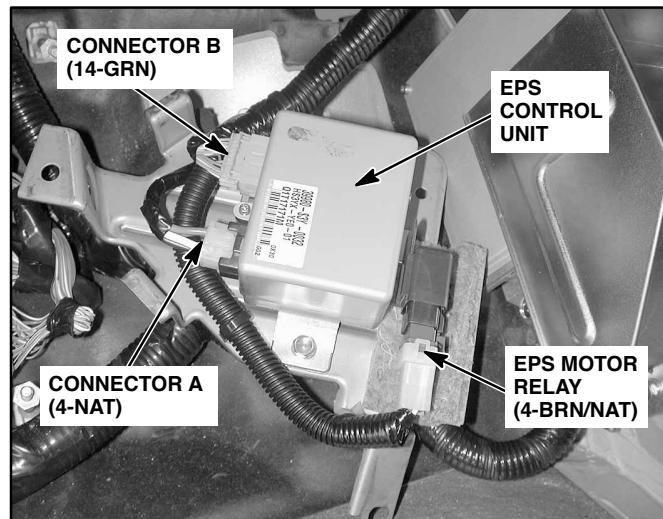

135. Under Right Side of Kick Panel (CVT)

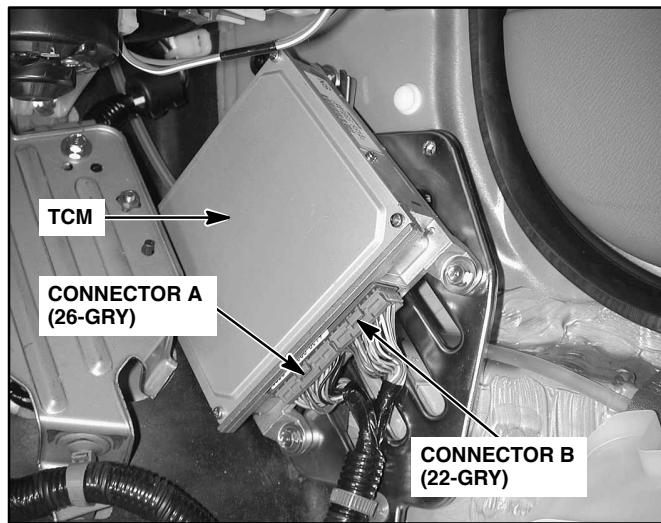

137. Under Right Rear Side of Vehicle

