

# Table of Contents

- Sheet 1A Table of Contents
- Sheet 1B Space Duel™ Upright Wiring Diagram (037937-01 A)
- Sheet 2A Space Duel Cocktail Wiring Diagram (038027-01 A)
- Sheet 2B Color X-Y Power Supply Wiring Diagram (037394-01 B)  
Regulator/Audio II Schematic Diagram (035435-04 B)
- Sheet 3A Fluorescent Light and Speaker Wiring Diagram (035833-01 A)  
Coin Door Wiring Diagram (037542-01 A)  
Utility Panel Wiring Diagram (038004-01 A)
- Sheet 3B Guide to Game PCB Schematic (036837-01, or -02 B) Sheets 4A-8A
- Sheet 4A Power Input, Clock, Power-on Reset, Watchdog
- Sheet 4B Test Connector, Microprocessor, Address Decoder
- Sheet 5A Read-Only Memory, Random-Access Memory, High-Score Table
- Sheet 5B Coin Door and Control Panel Input, Option Switch Input and Audio Output,  
Coin Door and Control Panel Output
- Sheet 6A Vector Address Decoder, Vector Read-Only Memory, Vector Random-Access  
Memory, Vector Memory Data Buffer, Vector Address Selector
- Sheet 6B Vector Data Shifters, OP Code and Intensity Latches
- Sheet 7A State Machine, State Machine Clock, State Machine Clock Logic, Decoder  
Disable, Address Controller
- Sheet 7B Normalization Flag, Center Flag, Vector Flag, Halt Flag, Go Flag, Vector Scaling,  
Vector Timer
- Sheet 8A Z Intensity and Blanking, R-G-B Output
- Sheet 8B DAC Reference and Bipolar Current Sources, X-Axis Output,  
Y-Axis Output
- Sheet 9A Color X-Y Display Schematic Diagram (92-053 A)
  
- Troubleshooting with the CAT Box:
- Sheet 9B Memory Map, Troubleshooting with Read/Write Controller
  - A. CAT Box Preliminary Set-up
  - B. Address and Data Lines
  - C. RAM
  - D. Option Switch Inputs
  - E. Custom Audio I/O Chips
- Sheet 10A F. Player and Option Switch P10/11 Inputs
  - G. Analog Vector-Generator
  - H. LED, Coin Counter, and Invert Outputs
- Sheet 10B Troubleshooting with Signature Analysis
  - A. Signature Analysis Set-up
  - B. Address Lines
  - C. Address Decoder
  - D. ROM and Data Lines
- Watchdog

**NOTE**  
This staple temporarily holds the schematic package together. Remove the staple before using the schematics.

# Schematic Package Supplement to




# Operation, Maintenance and Service Manual



 A Warner Communications Company


© ATARI INC. 1982

# Space Duel™ Upright Wiring Diagram

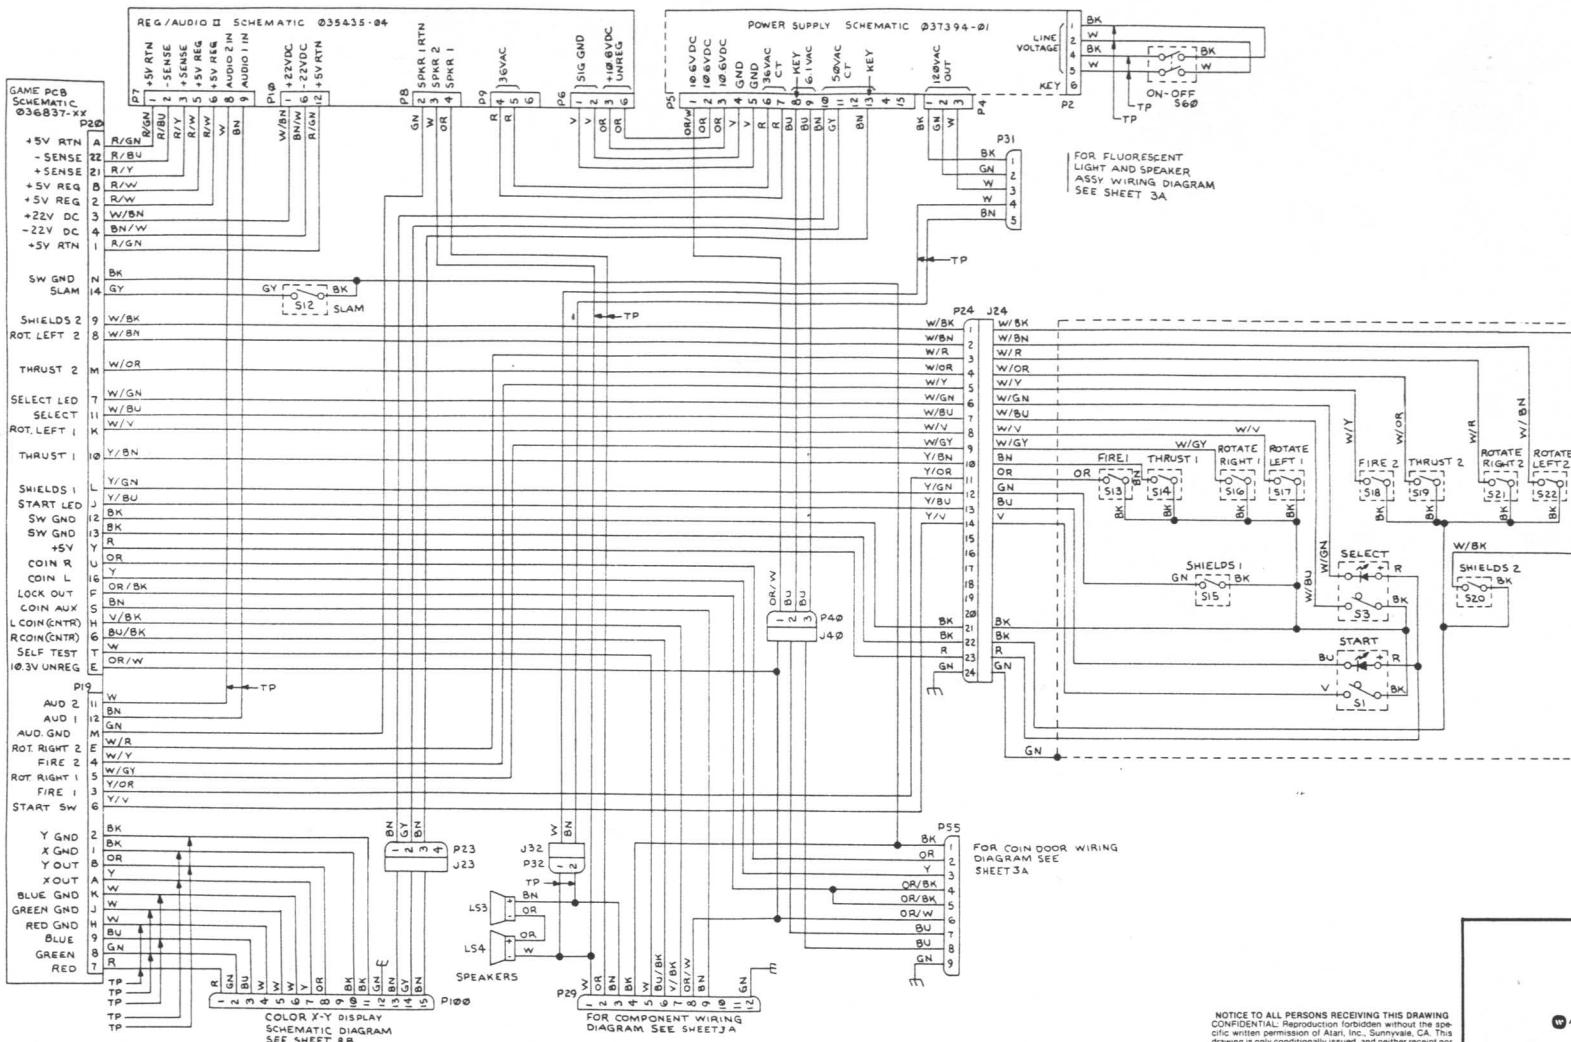

**Space Duel™**


# Space Duel™ Cocktail Wiring Diagram

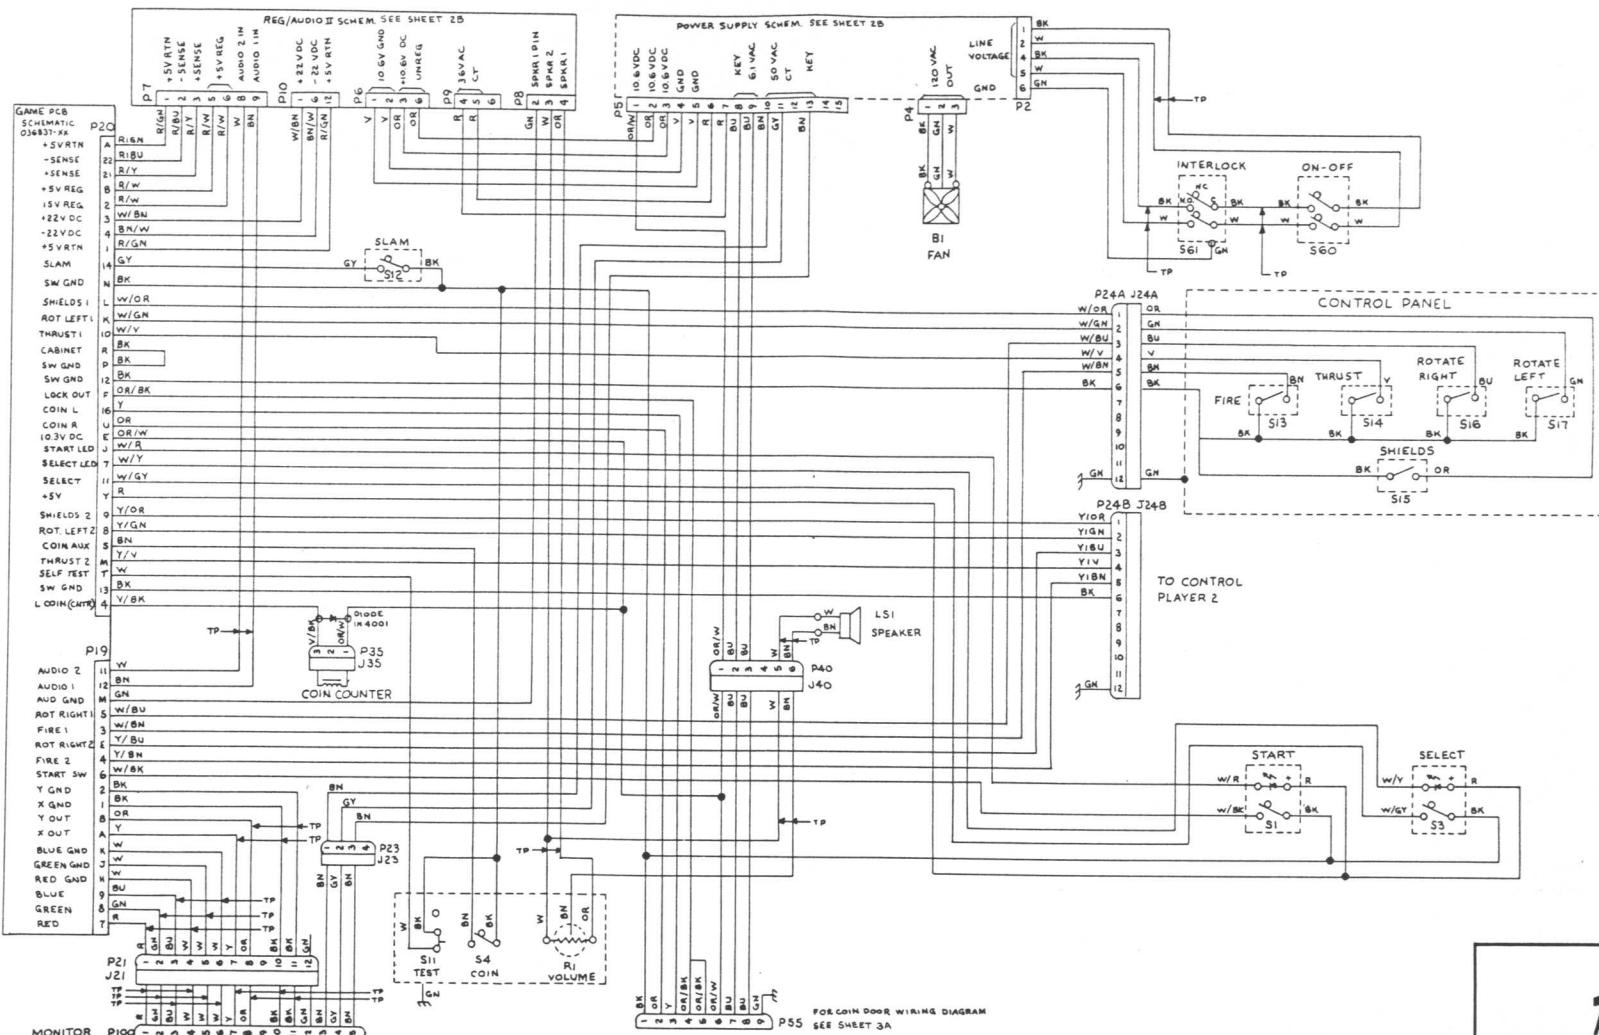


**ATARI**  
A Warner Communications Company

**Space Duel™**

## Regulator/Audio II PCB Schematic Diagram

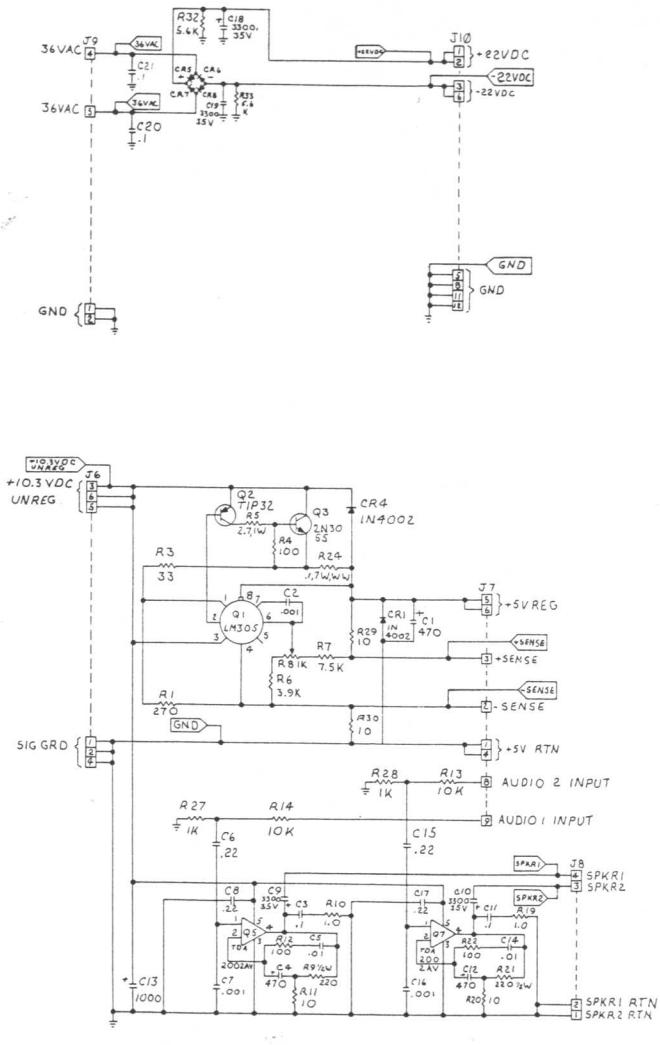

## Color X-Y Power Supply Wiring Diagram

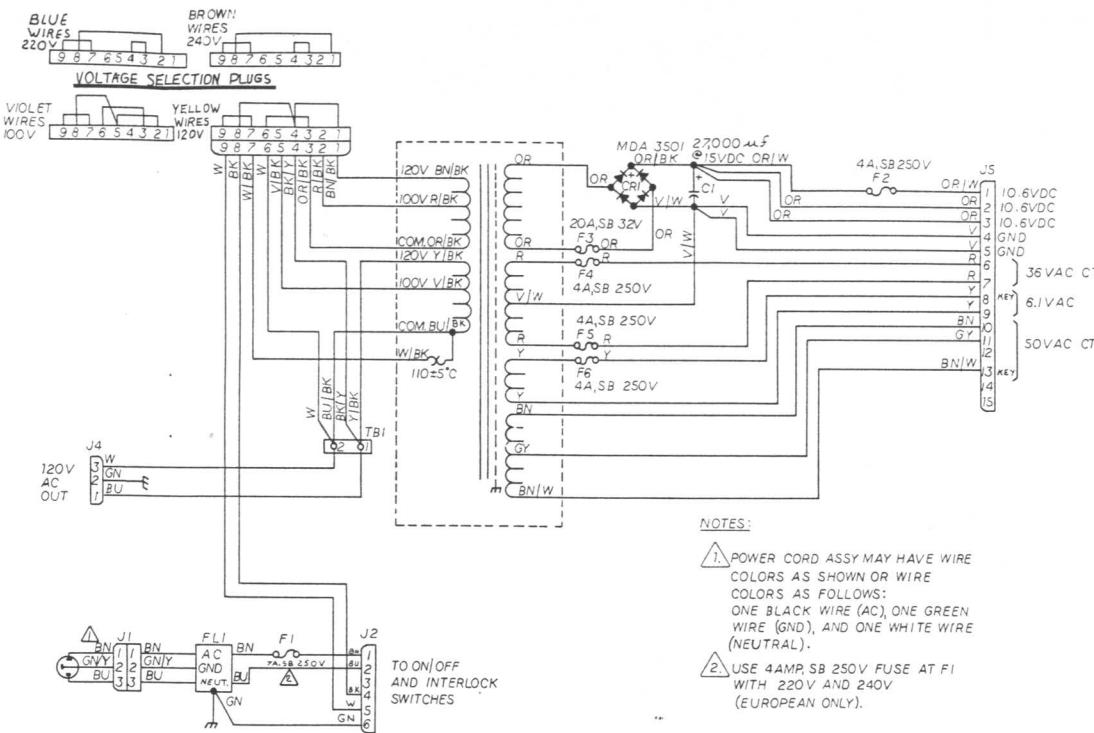


**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL. Reproduction forbidden without the specific written permission of Alcan, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither recipient nor possessor may make any copy or derivative drawing, or design to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce the drawing or any part thereof, except for internal use by Alcan, Inc., or for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter therein, unless it is done with the agreement with written permission from the corporation.




Space Duel™


### Coin Door Wiring Diagram

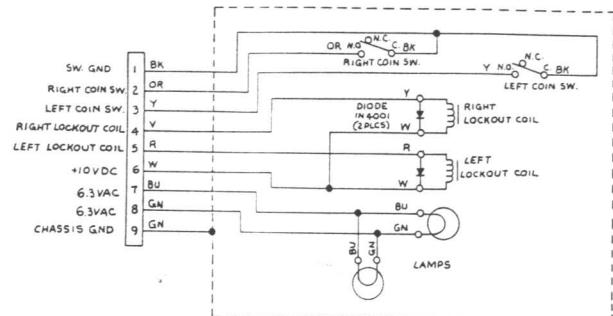

### Utility Panel Wiring Diagram

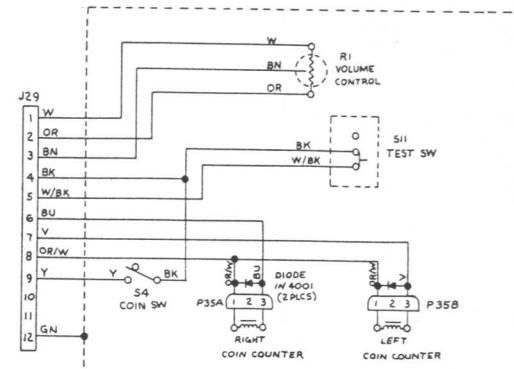

### Fluorescent Light And Speaker Wiring Diagram

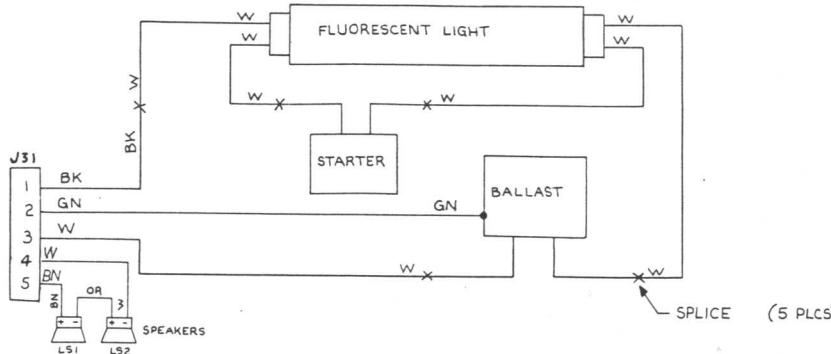



NOTICE TO ALL PERSONS RECEIVING THIS DRAWING  
CONFIDENTIAL. Reproduction forbidden without the spe-  
cific written permission of Atari, Inc. This drawing  
is only conditionally issued, and neither receipt nor  
possession thereof, conveys or transfers any right in, or  
license to use, any subject matter shown in the drawing.  
The design or technical information shown thereon, nor any right  
to reproduce the drawing or the subject matter thereof, un-  
less by written agreement with or written permission from  
the corporation.



**Space Duel™**

SP-181 Sheet 3A  
2nd printing 3L



## Guide to Game PCB Schematics

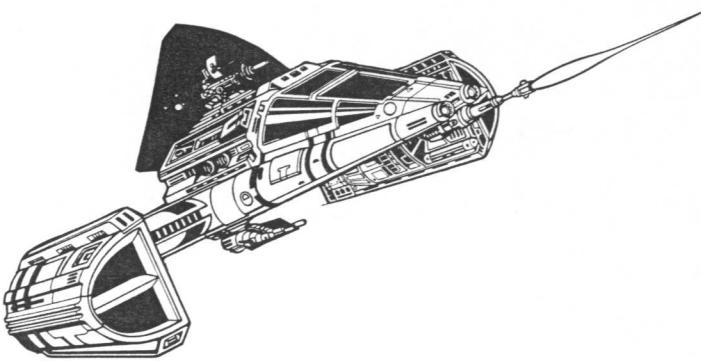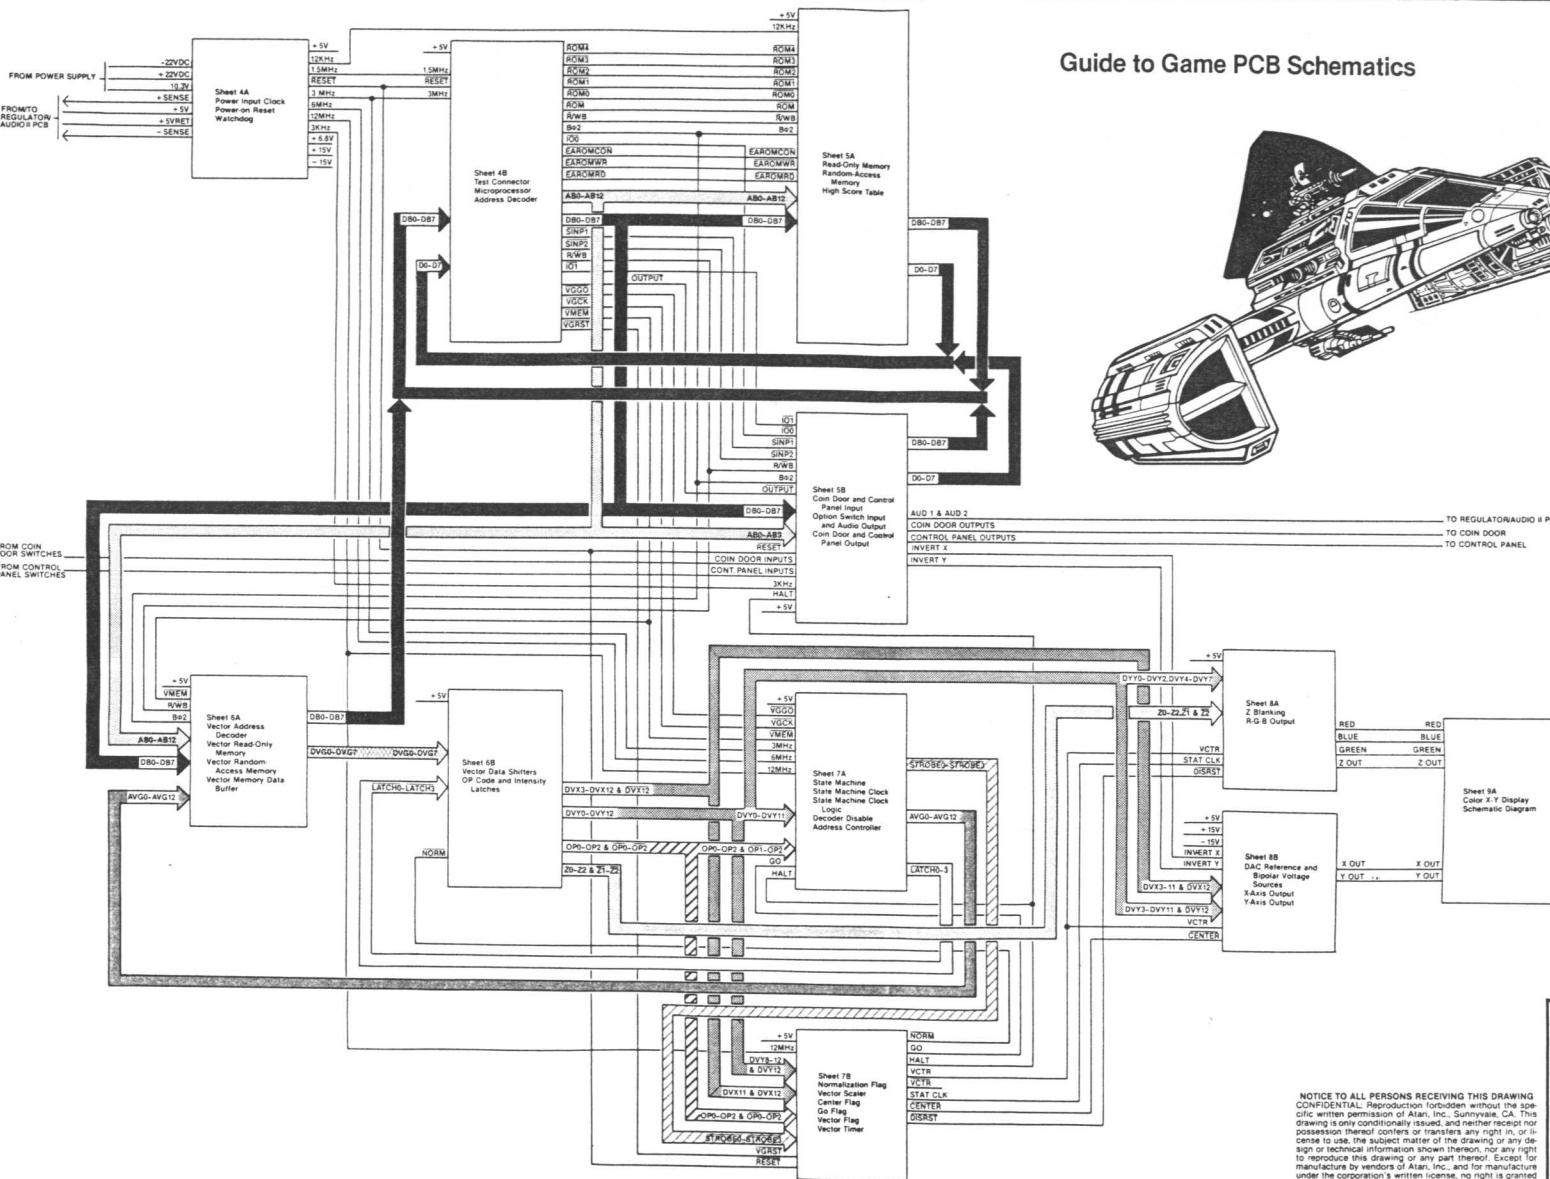

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL - Reproduction, storage, transmission or disclosure without written permission of Alaris, Inc., Sunnyvale, CA. This drawing is only conditionally issued and neither receipt nor possession thereof conveys or transfers any right in, or license to copy, reproduce, store, transmit or disclose any technical or signal or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manual reproduction by an employee of the corporation or under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless in written agreement with or written permission from the corporation.

The Atari logo consists of a stylized 'A' shape composed of two thick, curved lines that meet at the top, with the word "ATARI" in a bold, sans-serif font underneath it. A small registered trademark symbol (®) is located to the right of the 'I'. Below the main logo, there is a smaller circular emblem containing a stylized 'W' or 'A' shape, followed by the text "A Warner Communications Company".

Space Duel™

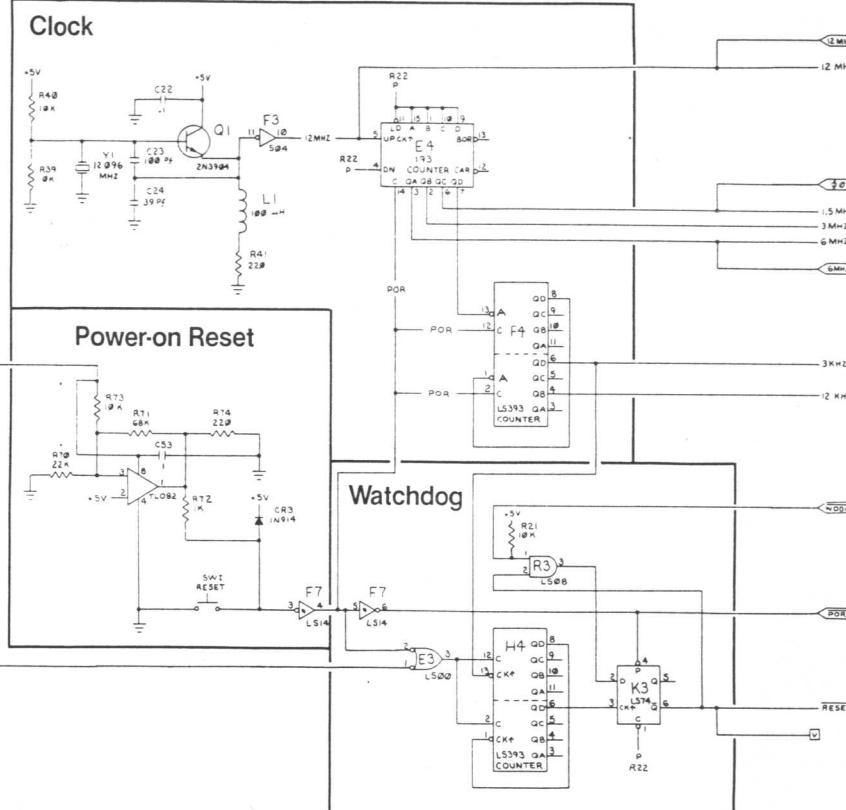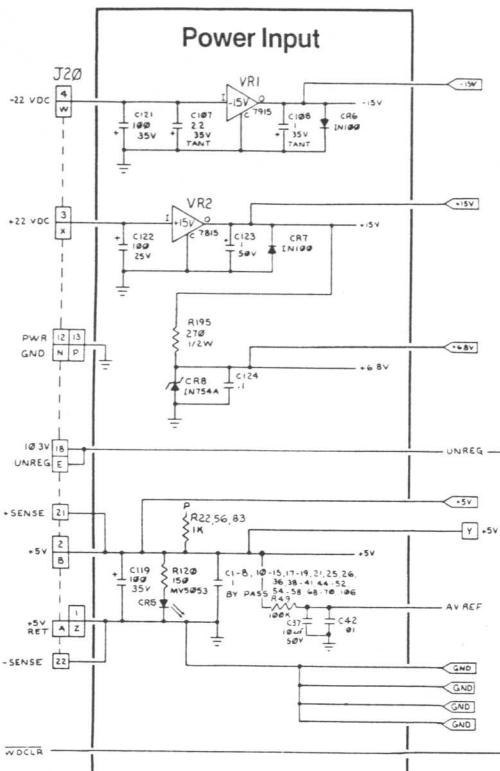

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING  
CONFIDENTIAL: Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing contains confidential information and its disclosure or possession thereof conveys or transfers any right in, or license to use, the subject matter of the drawing or any portion or revision of information shown therein, nor any right to reproduce this drawing or any part thereof. Except for manufacturing and assembly purposes, and for internal testing under the corporation's written license, no right is granted to reproduce this drawing or its subject matter thereof, unless so granted in writing, with or without permission from the corporation.





Space Duel™


© ATARI INC. 1982

SP-181 Sheet 4A  
2nd printing 3L

## Test Connector

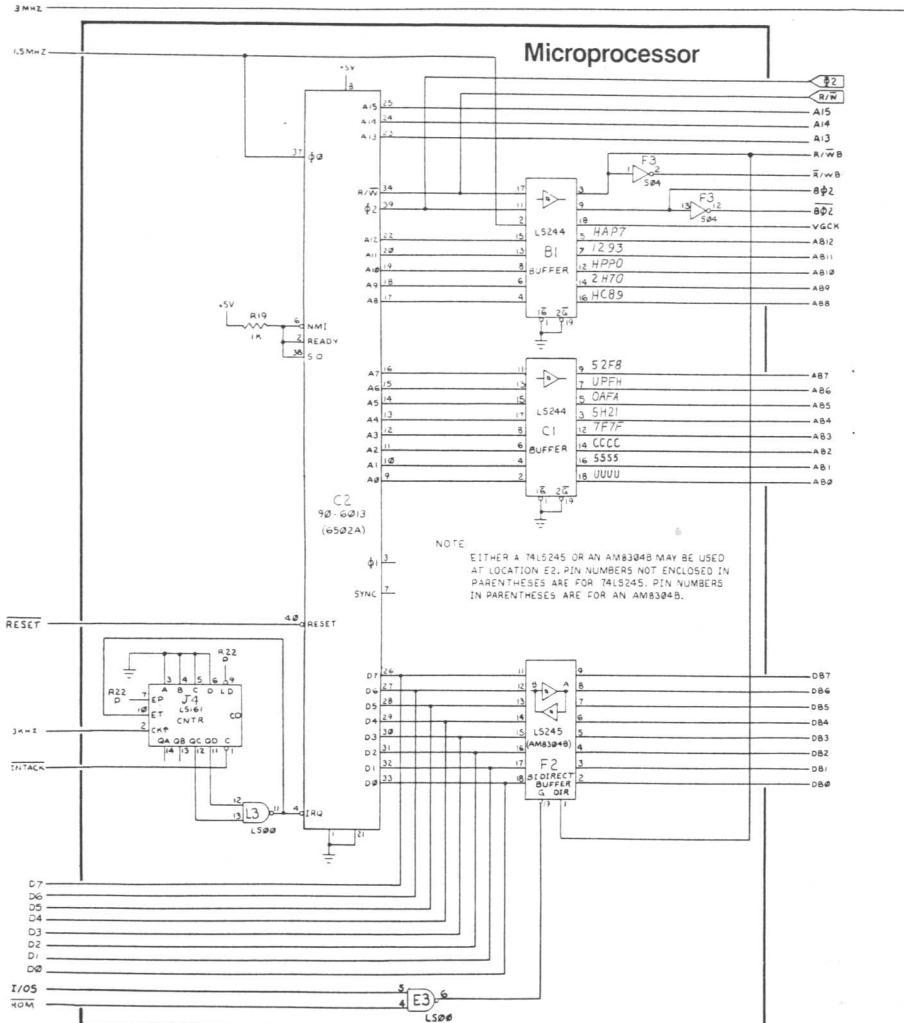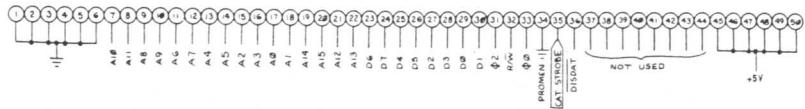

## Address Decoder

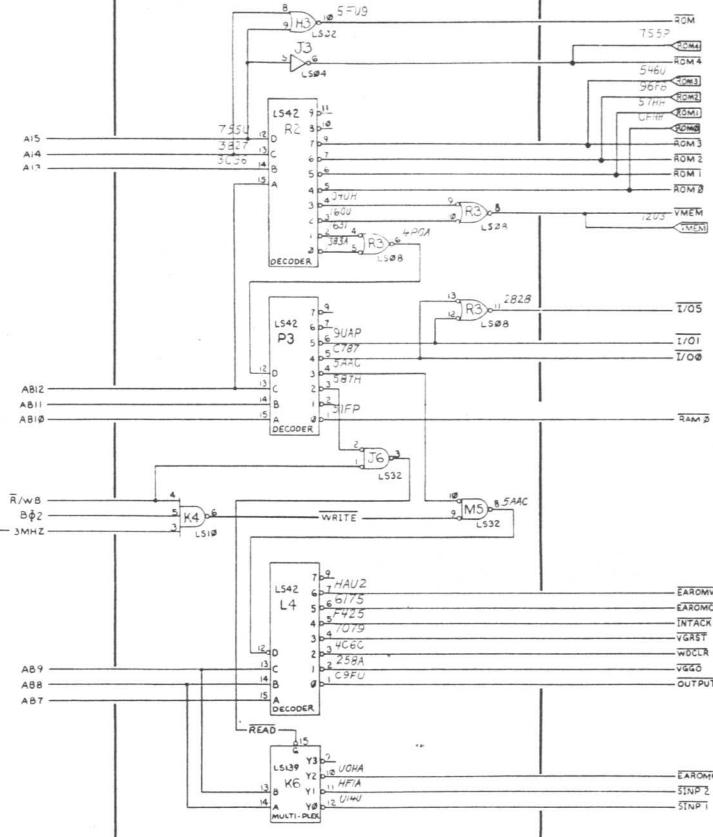


**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL: Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession of this drawing or the subject matter thereof conveys the right to use the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof, except by manufacture by vendor of Atari, Inc., and for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.





Space Duel™

## Read-Only Memory

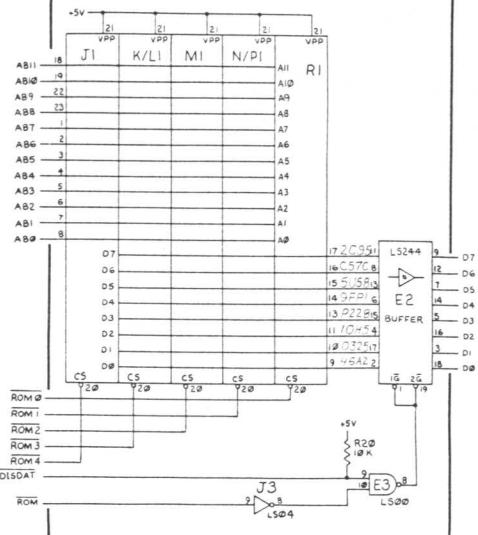


## Random-Access Memory

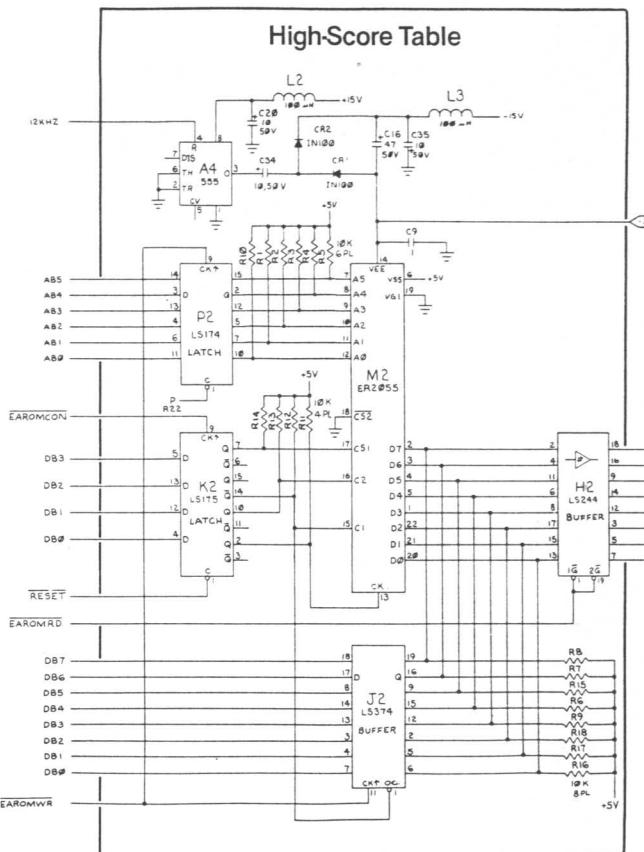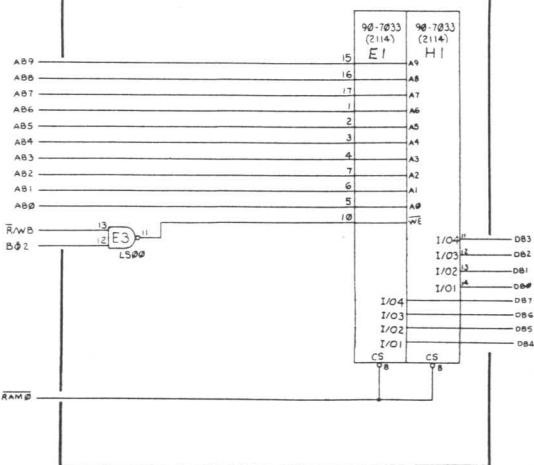


**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL. Reproduction forbidden without the specific written permission of Atan, Inc., Sunnyvale, CA. This drawing is only conditionally issued, and neither receipt nor possession thereof conveys any right or license to reproduce or to use the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for manufacture by the recipient for its own use, or for manufacture under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless so agreed to in writing with or written permission from the corporation.


## Coin Door And Control Panel Input

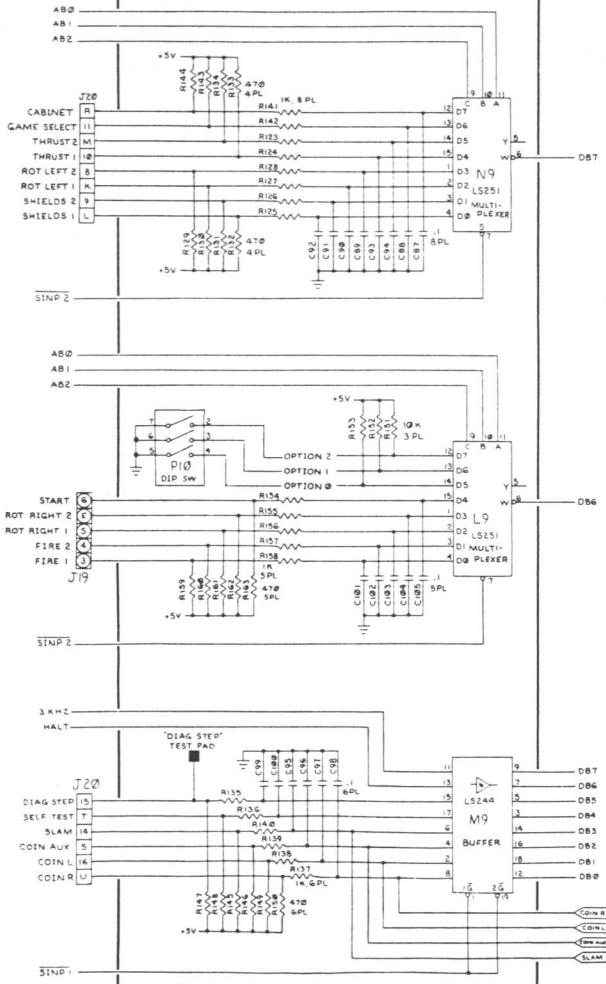

#### **Option Switch Input And Audio Output**



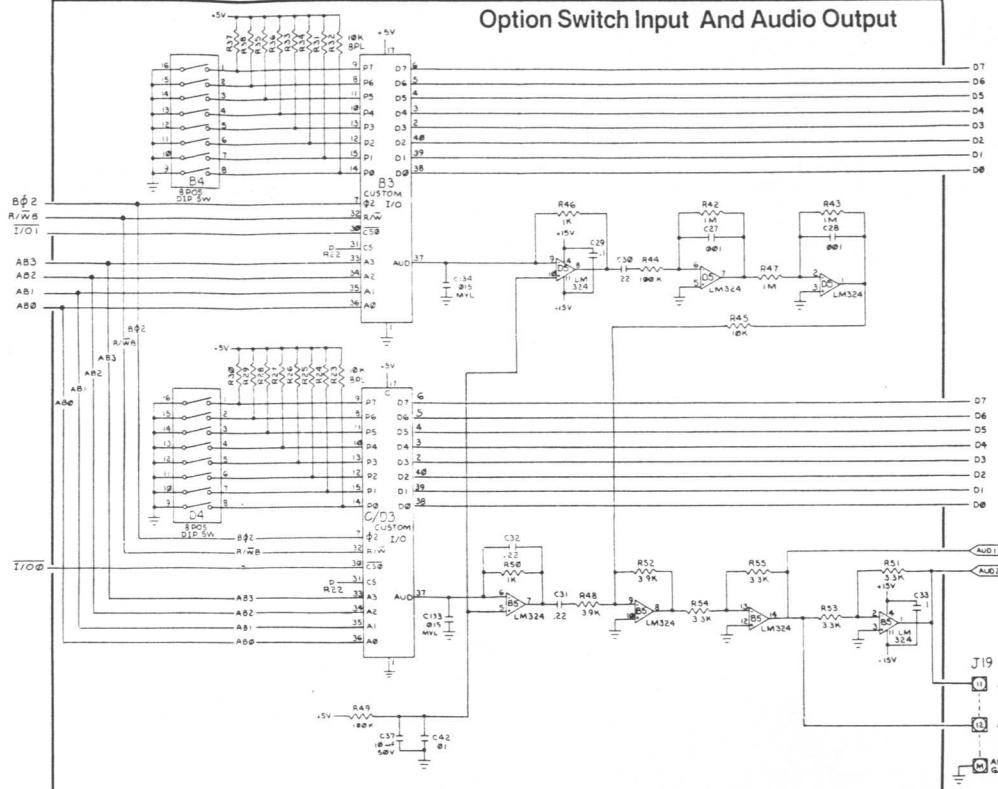


#### **Coin Door And Control Panel Output**

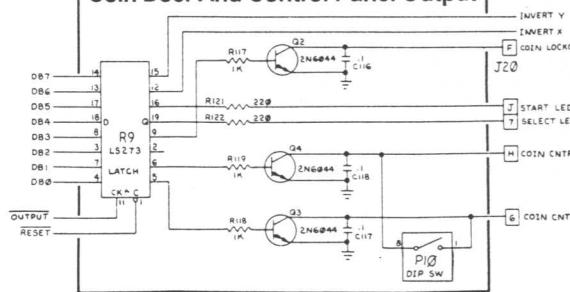

Space Duel™



**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL. Reproduction forbidden without the specific written permission of Atan, Inc., Sunnyvale, CA. This drawing is the property of Atan, Inc. The right to reproduce or otherwise use this drawing or the subject matter thereof, or any portion thereof, or any design or technical information shown thereon, or any right to reproduce this drawing or any part thereof, except for manufacture by vendors of Atan, Inc., and for manufacture under the corporation's writing license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

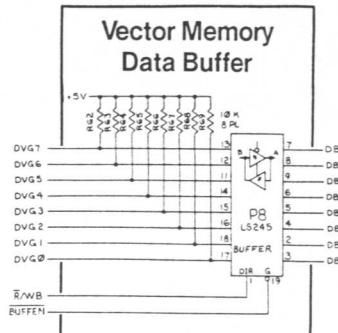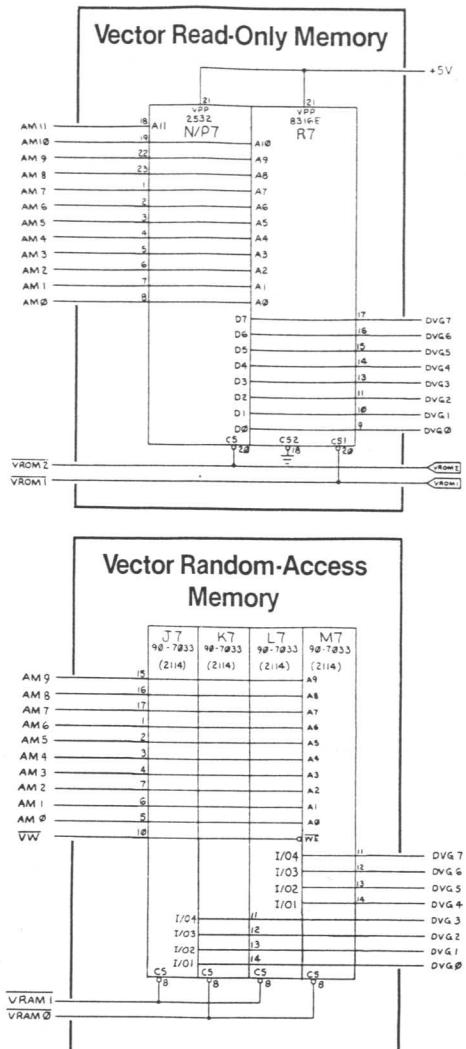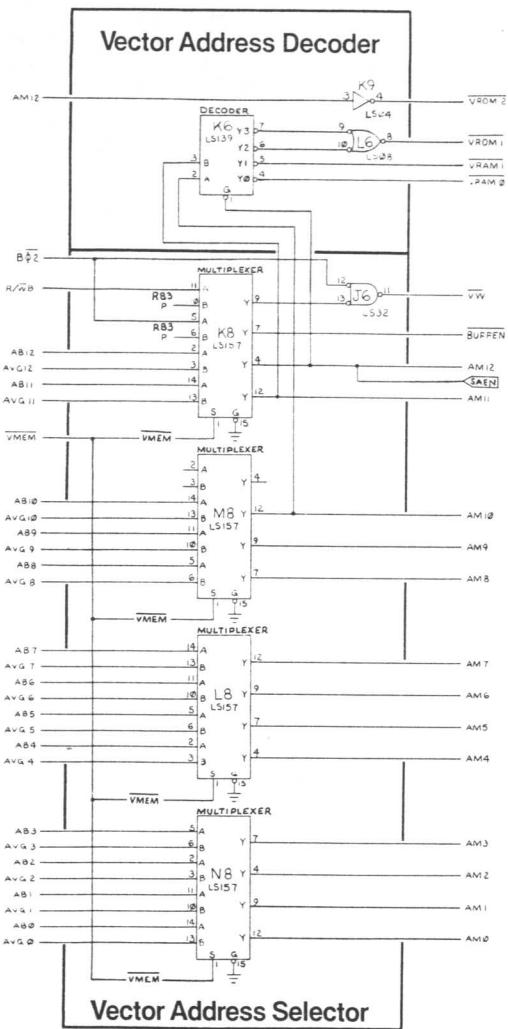

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
**CONFIDENTIAL.** Reproduction, copying without the  
written permission of Alaris Inc., Sunnyvale, CA. This  
drawing is on conditionally loaned by Alaris Inc. and neither receipt nor  
possession thereof conveys or transfers any right in, or license to use,  
the subject matter of the drawing or any de-  
sign or technical information shown thereon, nor any right  
to reproduce this drawing or any part thereof. Except for  
internal use, reproduction, copying or manufacture  
under the corporation's written license, no right is granted  
to reproduce this drawing or the subject matter thereof, un-  
less by written agreement with or written permission from  
the corporation.



Space Duel™

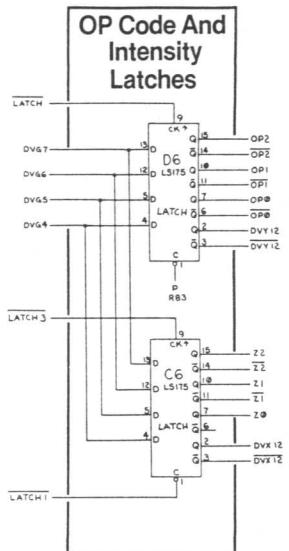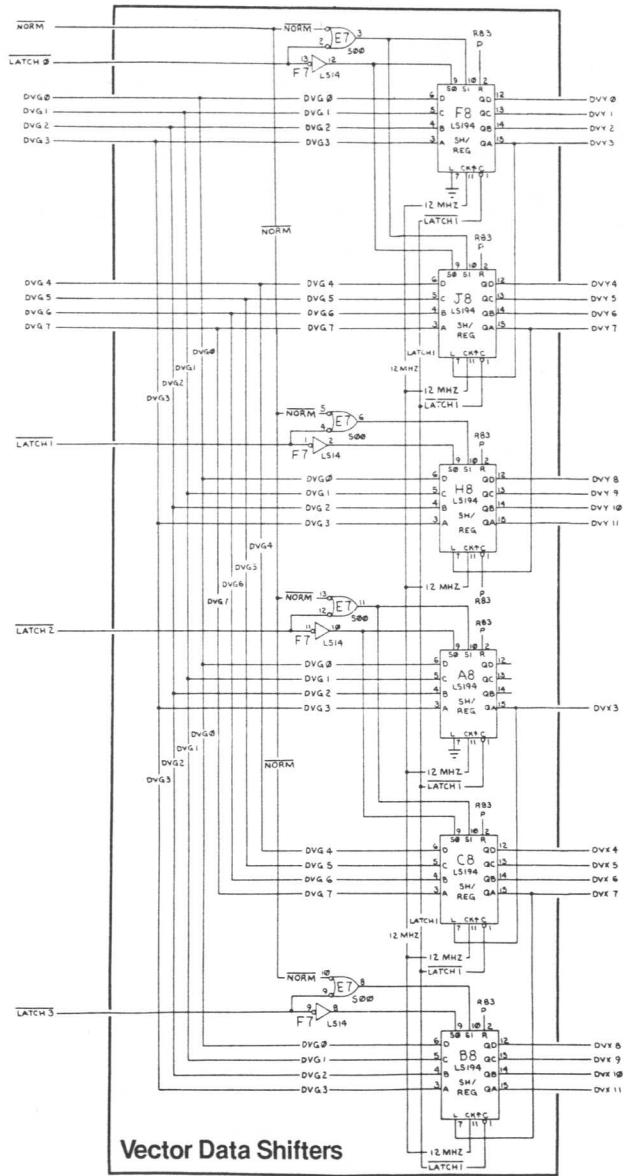


NOTICE TO ALL PERSONS RECEIVING THIS DRAWING  
CONTAINED HEREIN: ATARI, INC., SUNNYVALE, CA,  
DOES NOT GRANT EXPRESS OR IMPLIED LICENSES  
OR CONVEYS ANY OWNERSHIP INTEREST IN, OR  
PERMITS THE USE OF, ANY TRADE SECRETS OR  
PATENTS OWNED BY ATARI, INC. IN THIS DRAWING.  
REPRODUCTION OF THIS DRAWING OR ANY PART THEREOF  
IS PROHIBITED UNLESS EXPRESS WRITTEN PERMISSION  
IS OBTAINED FROM ATARI, INC. ATARI, INC. IS THE  
REGISTERED TRADEMARK OF ATARI, INC. AND IS  
NOT A REGISTERED TRADEMARK OF ATARI, INC.



**Space Duel™**


SP-181 Sheet 6B  
2nd printing 3L

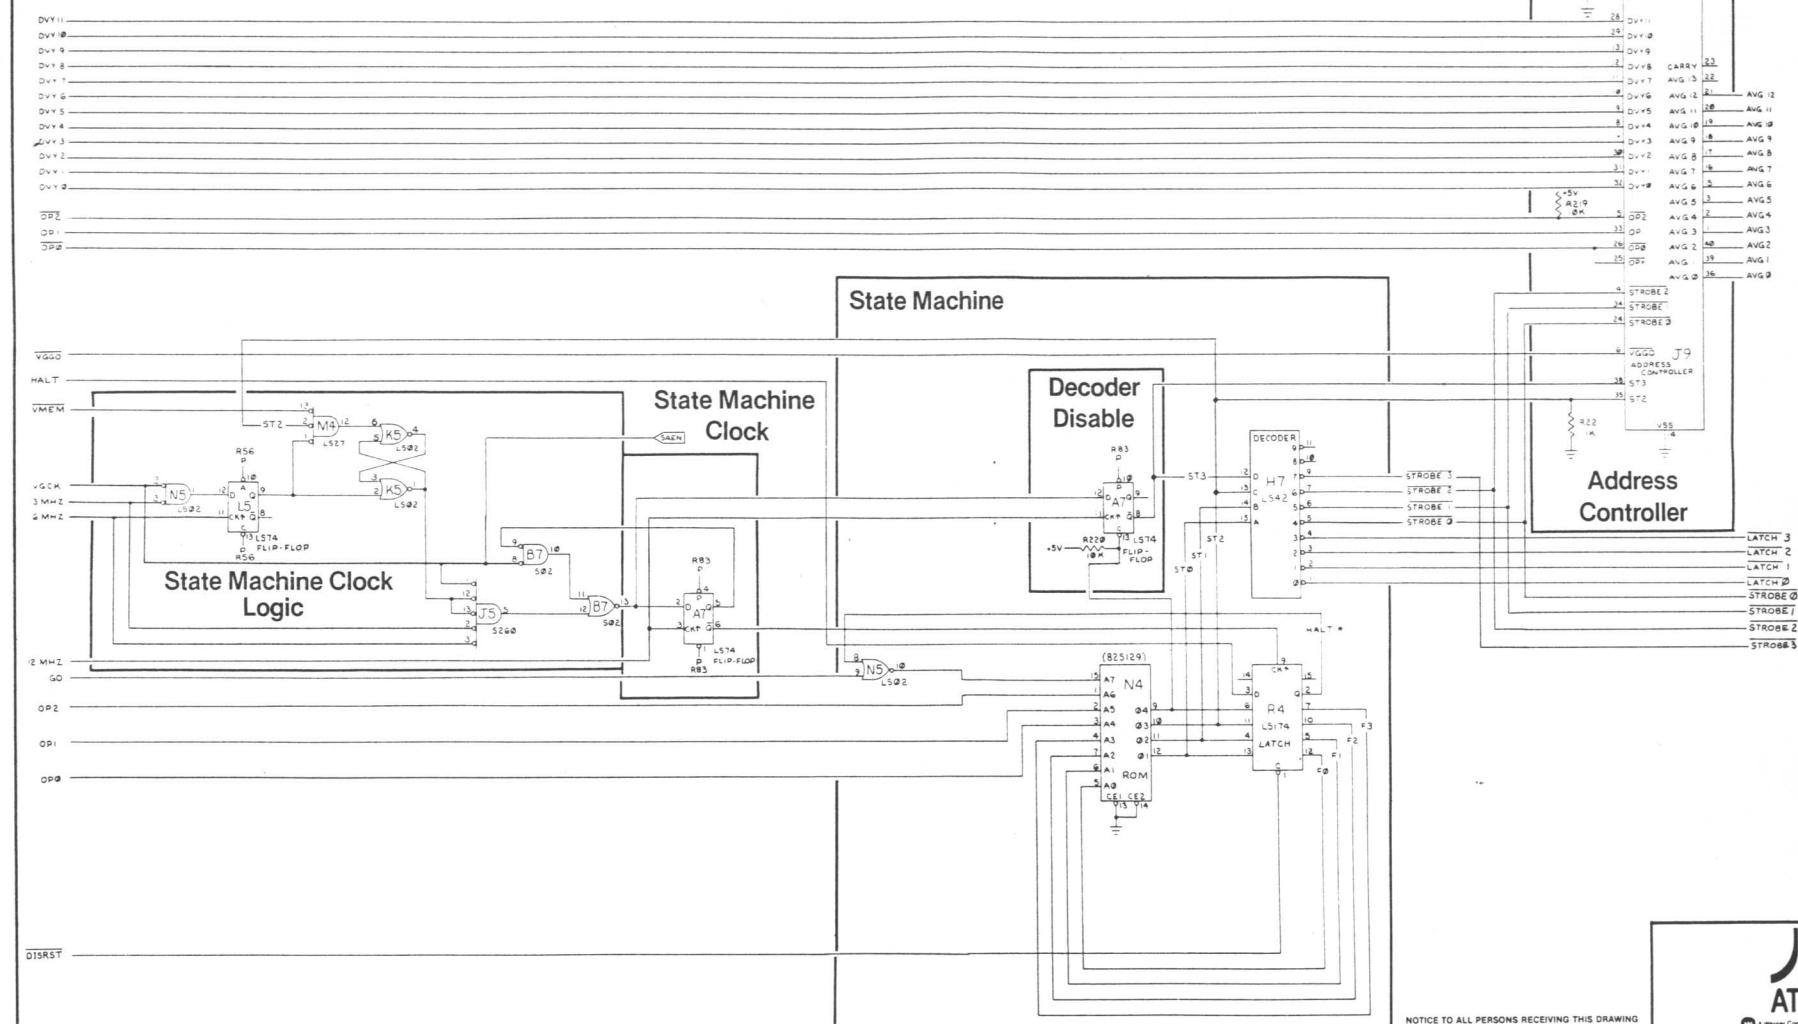

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
**CONFIDENTIAL:** Reproduction forbidden without the specific written permission of Atlan, Inc., Sunnyvale, CA. This drawing is the sole property of Atlan, Inc., and its sole possession thereof conveys or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except for the right to make a copy of this drawing for internal use under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.




Space Duel™

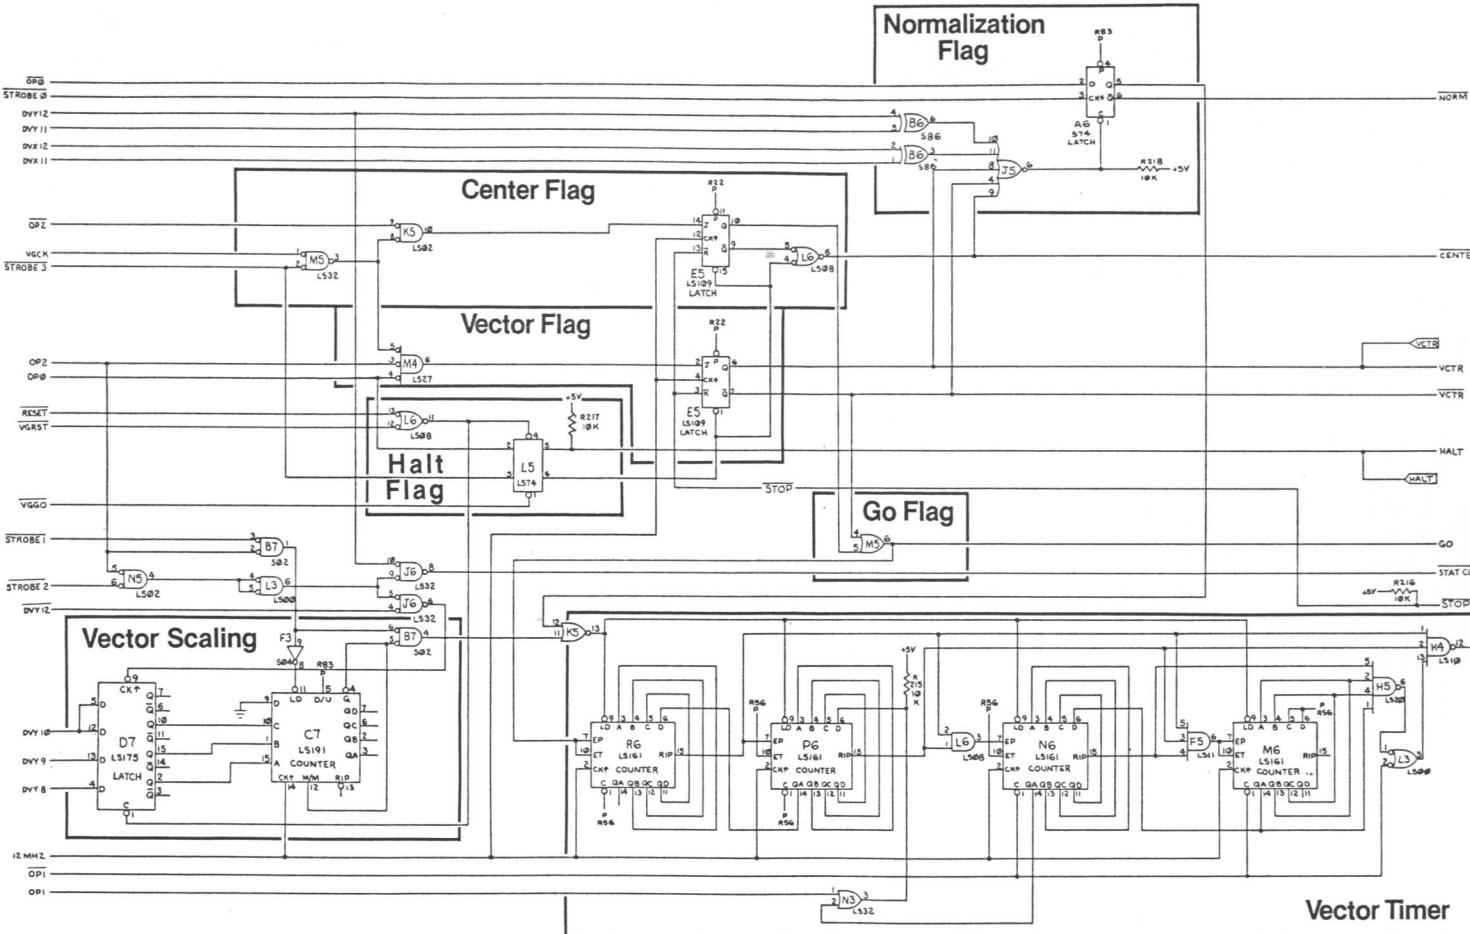

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING  
CONFIDENTIAL. Reproduction forbidden without the specific written permission of ATARI, Inc. While this drawing is held under conditions issued, and neither except nor possession thereof conveys or transfers any right in, or license to, the design or technical information shown therein, nor any right to reproduce this drawing or any part thereof. Except for manufacturing, assembly, testing, and repair for purposes under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

**ATARI**  
A Warner Communications Company  
**Space Duel™**

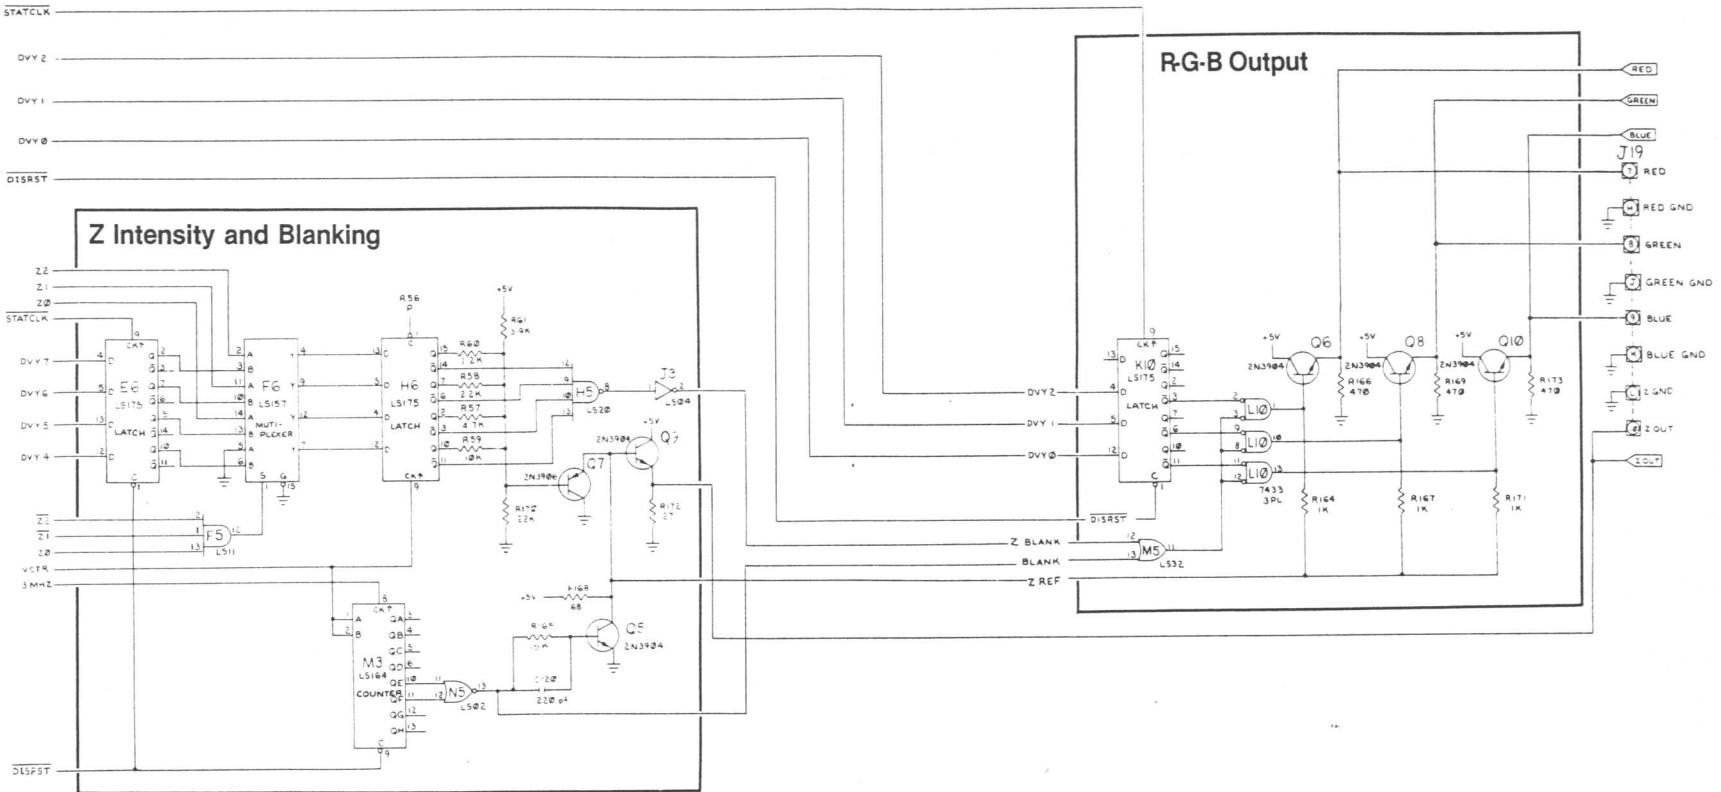


NOTICE TO ALL PERSONS RECEIVING THIS DRAWING  
CONTAINED IN OR ACCOMPANYING THIS SHEET:  
This drawing is only conditionally issued, and neither received nor  
possessed by Atari, Inc., Sunnyvale, CA. This drawing is issued under  
license to use, the subject matter of the drawing or any de-  
sign or technical information shown therein, except for  
reproduction of the drawing or any part thereof. Except for  
manufacture under license, the drawing and the subject matter thereof  
are not to be reproduced or disclosed to others without  
written agreement with or written permission from  
the corporation.



Space Duel™


## X-Axis Output

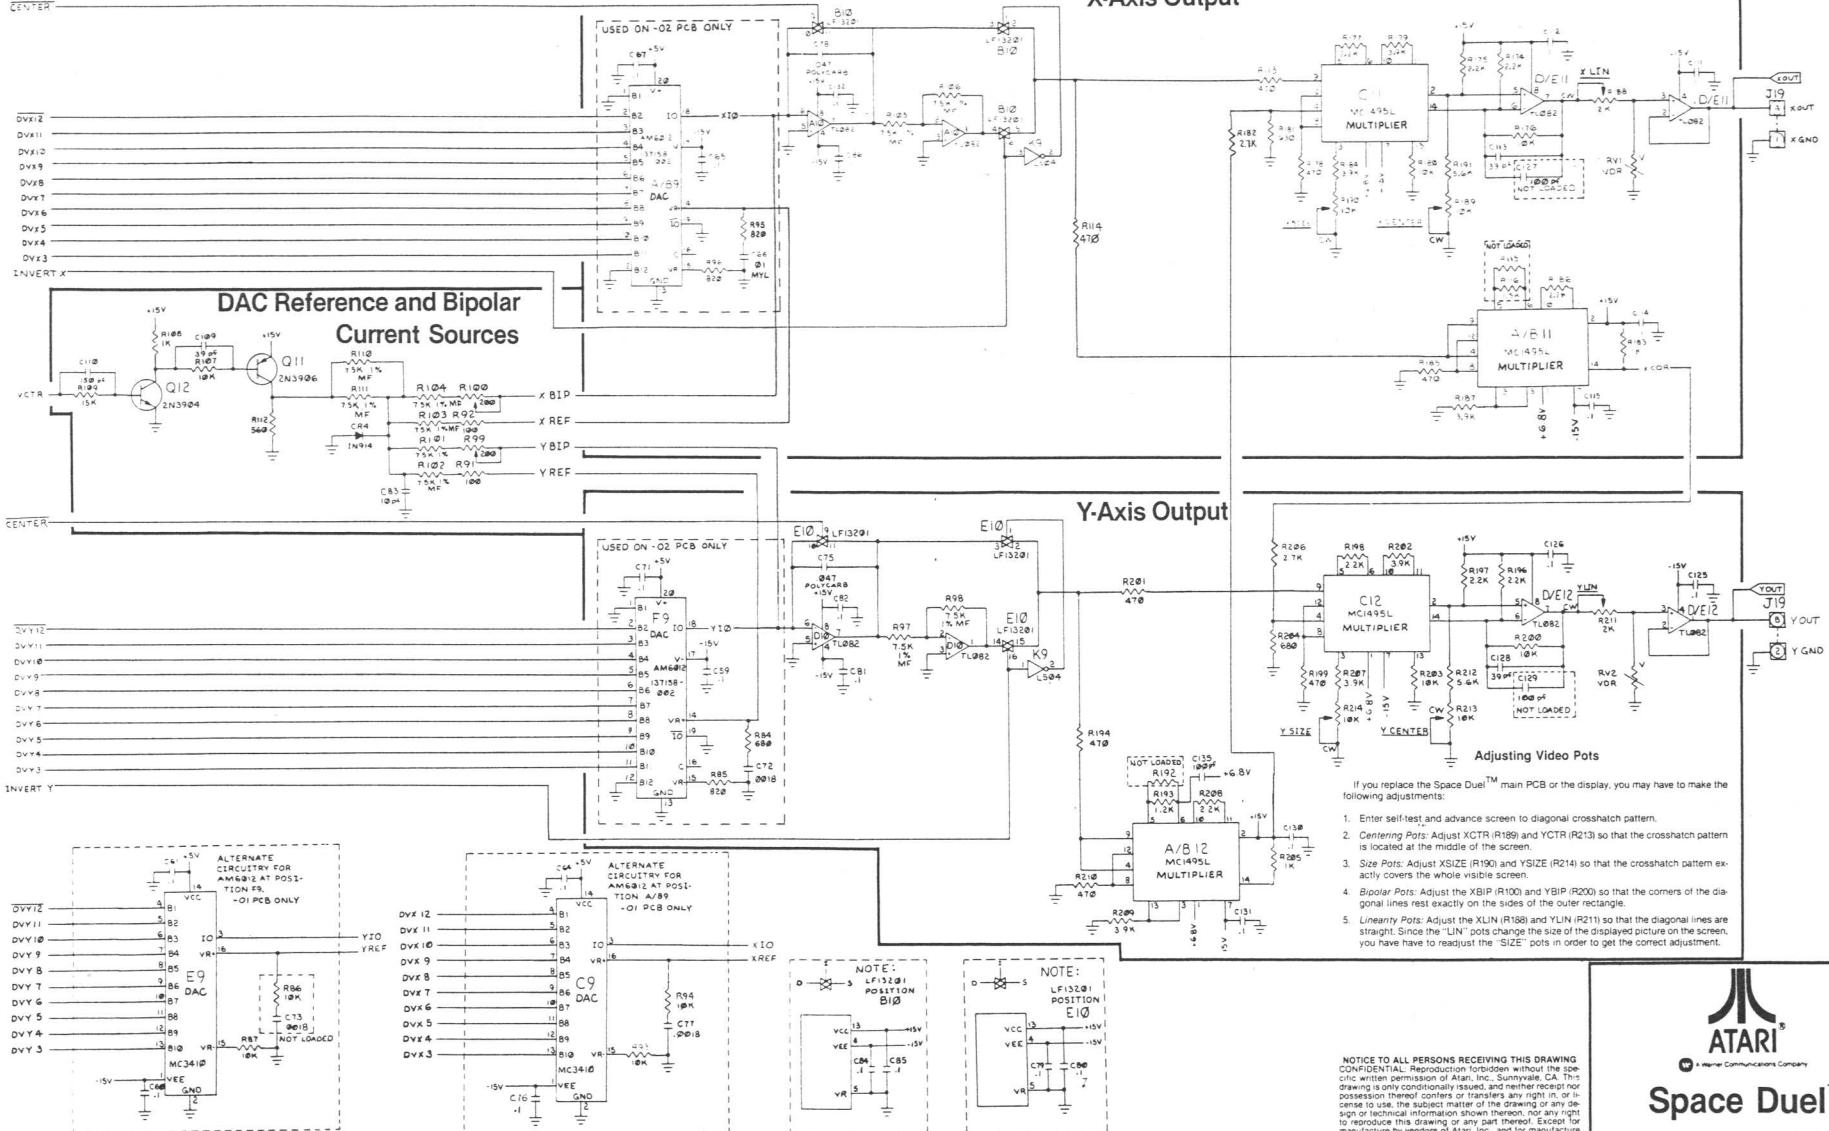

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL. Reproduction forbidden without the specific written permission of Atari, Inc., Sunnyvale, CA. This drawing is only confidential if issued in confidence. The recipient of this drawing shall not confer or transfer any right in, or any license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof. Except as may be specifically granted in writing by the corporation under the corporation's written license, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with or written permission from the corporation.

The image shows the classic Atari logo at the top, followed by the text "A Warner Communications Company". Below that is the title "Space Duel" in large, bold, black letters, with a small "TM" symbol at the end.

## Color X-Y Display Schematic Diagram

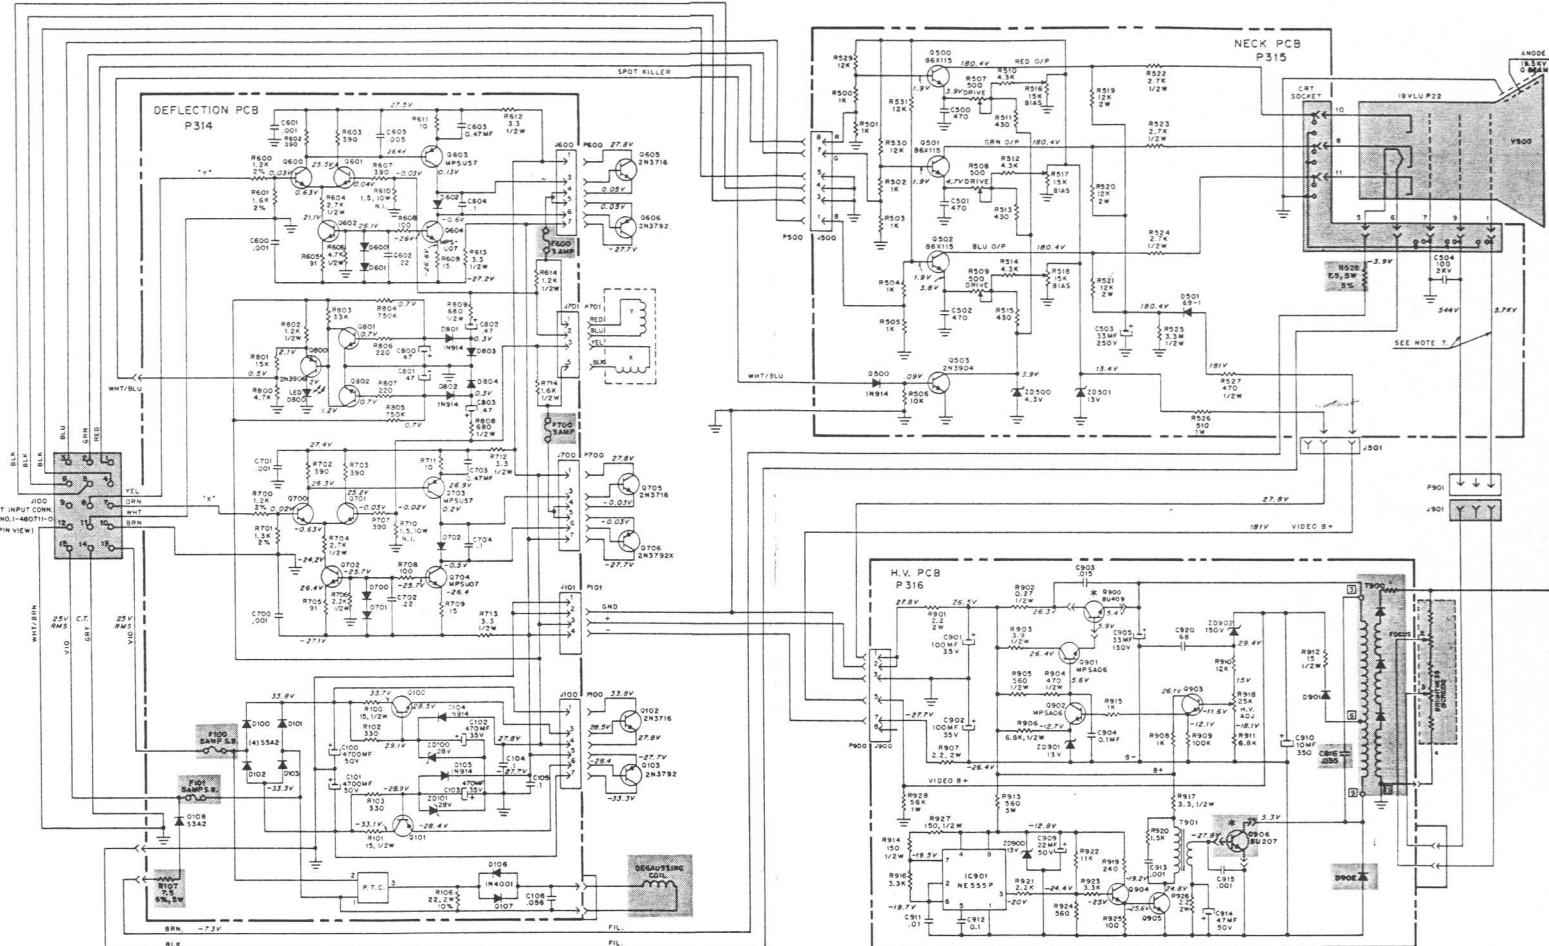

## GENERAL NOTES

- Resistance values in ohms,  $\pm 5\%$ , unless otherwise noted, K = 1,000, M = 1,000,000
  - Capacitance value of 1 or less is in microFarads, about 1% in picofarads, unless otherwise noted.
  - \* Q900 and Q906 are not in High-Voltage PCB.
  - All DC voltages are  $\pm 10\%$  measured from point indicated to ground, using a high-impedance meter. Voltages are measured with no signal input and controls are in a normal operating position.
  - Circle numbers indicate location of waveform reading.
  - ZD100-101 uses (66X0400-007) zener diode in series with (340X311-934) 330-ohm resistor in early production models.
  - Use a 1,000:1 probe when measuring G2 (screen) or focus voltage.

**! WARNING !**

**Components identified by shading have special characteristics important to safety and should be replaced only with identical types.**

**NOTICE TO ALL PERSONS RECEIVING THIS DRAWING**  
CONFIDENTIAL. REPRODUCTION forbidden without the  
written permission of Atari, Inc. or the manufacturer.  
This drawing is only conditionally issued, and neither its receipt nor  
possession thereof conveys or transfers any right, or  
license to use, the subject matter of the drawing or any de-  
sign or technical information shown thereon, nor any right  
to reproduce this drawing or any part thereof. Except for  
manufacture by licensees of Atari, Inc., and for manufacture  
under the manufacturer's written license, no right is granted  
to reproduce this drawing or the subject matter thereof,  
unless by written agreement with or written permission from  
the corporation.



Space Duel™

# Troubleshooting with the CAT Box

## Memory Map

HEXA-DECIMAL ADDRESS	R/W	D7	D6	D5	D4	D3	D2	D1	D0	FUNCTION
0000-03FF		D	D	D	D	D	D	D	D	1K Program RAM0
0800	R	D								3 KHz Input HALT Input (0 = Halted) MAG STEP Input (0 = On) Self-Test Input (0 = On) SLAM Input (0 = On) Utility Coin Input (0 = On) Left Coin Input (0 = On) Right Coin Input (0 = On)
0900	R	D								SHIELD1 Input (1 = On) FIRE1 Input (1 = On) SHIELD2 Input (1 = On) FIRE2 Input (1 = On)
0901	R	D								ROTATE LEFT1 (1 = On) ROTATE LEFT2 (1 = On) ROTATE RIGHT1 (1 = On) ROTATE RIGHT2 (1 = On)
0902	R	D								START Input (1 = On) THRUST2 Input (1 = On)
0903	R	D								Option Input (1 = On) GAME SELECT Input (1 = On)
0904	R	D								Option Input (1 = On) Option Input (1 = On)
0905	R	D								Cabinet Input 1 = Upright, 0 = Cocktail
0906	R	D								Option Input (1 = On)
0907	R	D								R D
0A00	R	D	D	D	D	D	D	D	D	EARMRD
0C00	W	D								INVERT X (1 = Invert) INVERT Y (1 = Invert) START LED (0 = On) SELECT LED (0 = On)
	W	D								Coin Lockout Output (0 = On) Left Coin Counter Right Coin Counter
0C80	W									VGGO
0D00	W									WDCLR
0D80	W									VGRST
0E00	W									INTACK
0E80	W		D		D		D		D	EARM Con-CS1 EARM Con-C1 (Inverted) EARM Con-C2 EARM Con-CK
0F00-0F3F	W	D	D	D	D	D	D	D	D	EARMWR
1000-100F	D	D	D	D	D	D	D	D	D	Custom I/O 0 (Unfiltered)
1400-140F	D	D	D	D	D	D	D	D	D	Custom I/O 1 (Filtered)
2000-27FF	D	D	D	D	D	D	D	D	D	2K VRAM0-VRAM1
2800-3FFF	R	D	D	D	D	D	D	D	D	6K VROM1-VROM2
4000-87FF	R	D	D	D	D	D	D	D	D	20K Program ROM0-ROM4

## Troubleshooting with the Read/Write Controller

### A. CAT Box Preliminary Set-up

#### 1. Remove:

- The electrical power from the game.
- The wiring harness from the game PCB.
- The game PCB from the game cabinet.
- The microprocessor chip C2 from the game PCB.

#### 2. Connect:

- The harness from the game to the game board. (Use extender cables if available.)
- f0 and f2 test points together with the shortest possible jumper.
- WDDIS test point to ground.
- The CAT Box flex cable to the game PCB test edge connector.

#### 3. Power Up:

- The game.
- The CAT Box.

#### 4. Set CAT Box Switches:

- TESTER SELF-TEST: (OFF)
- TESTER MODE: R/W
- Press TESTER RESET

### B. Address and Data Lines

- Perform the CAT Box preliminary set-up.
- Connect the DATA PROBE to the CAT Box and the game ground test point.
- TESTER MODE: R/W
- BYTES: 1
- PULSE MODE: UNLATCHED
- R/W MODE: (OFF)
- R/W: WRITE
- Key in address pattern on the keyboard (use AAAA to start)
- Push DATA SET
- Key in data pattern on the keyboard (use AA to start)
- R/W MODE: STATIC
- Probe the IC-pin with the data probe and check for the 1 or 0 LED as indicated in Table 2-2. Repeat this step for each address and data line.
- Repeat steps 6-12 using 5555 in step 7 and 55 in step 9.

Table 2-2 Address and Data Lines

When writing AAAA pattern	Address and data lines	When writing 5555 pattern
Logic State	IC-Pin	Logic State
1	R2-12	0
0	R2-13	1
1	R2-14	0
0	R2-15	1
1	B1-7	0
0	B1-12	1
1	B1-14	0
0	B1-16	1
1	C1-9	0
0	C1-7	1
1	C1-5	0
0	C1-3	1
1	C1-12	0
0	C1-14	1
1	C1-16	0
0	C1-18	1
1	F2-9	0
0	F2-8	1
1	F2-7	0
0	F2-6	1
1	F2-5	0
0	F2-4	1
1	F2-3	0
0	F2-2	1

### C. RAM

- Perform the CAT Box preliminary set-up.
- Set the CAT Box switches as follows:
  - Press TESTER RESET
  - DBUS SOURCE: ADDR
  - BYTES: 1024
  - R/W MODE: (OFF)
  - R/W: WRITE
  - Enter 0000 on the keypad
  - Toggle R/W MODE to PULSE and back to (OFF)
  - R/W: READ
  - Toggle R/W MODE to PULSE and back to (OFF)
- If the CAT Box reads an address that doesn't compare, the COMPARE ERROR LED lights up, the ADDRESS/SIGNATURE display shows the failing address location, and the ERROR DATA DISPLAY switch is enabled. Using this switch, determine if the error is in the high-or low-order RAM.
- Repeat the test with DBUS SOURCE set to ADDR.
- Repeat steps 2-4, entering 2000 on the keypad (step f).
- Repeat steps 2-4, entering 2400 on the keypad (step f).

### D. Option Switch Inputs

- Perform the CAT Box preliminary set-up.
- BYTES: 1
- R/W: WRITE
- R/W MODE: (OFF)
- Key in 100F
- Push DATA SET
- Key in 00
- R/W: READ
- R/W MODE: (OFF)
- Key in 100B
- R/W MODE: STATIC, then to (OFF)
- R/W: READ
- Key in 1008
- R/W MODE: STATIC
- Activate each option switch toggle at location D4 while monitoring the DATA display. The DATA display will change if the switches are operating properly.
- Repeat steps 3-15, entering 140B in step 5 and 1408 in step 10, and activate switches at location B4.


### E. Custom Audio I/O Chips

#### NOTE

Space Duel™ has two custom audio I/O chips. Each must be tested separately. There are several ways to test the chips:

- Perform the self-test.
- Substitute good part for defective part.
- Use the procedure that follows.

- Perform the CAT Box preliminary set-up.
- BYTES: 1
- R/W: WRITE
- R/W MODE: (OFF)
- Enter address from Table 2-3
- Press DATA SET
- Enter the data from Table 2-3
- R/W MODE to PULSE and back to (OFF)
- Repeat steps 5-8 for each address and data, and note the test results.

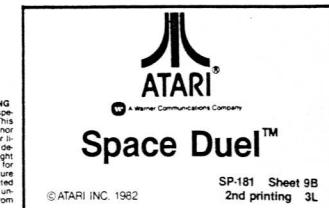

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING  
COPYRIGHT © 1982, ATARI, INC. All rights reserved.  
Unauthorized distribution of this drawing is illegal.  
This drawing is only conditionally issued, and neither recipient nor anyone else may copy it or use it except under the conditions set forth in the accompanying terms of license to use. The subject matter of the drawing or any design or technical information shown therein, nor any right to reproduce it, may be sold, given away, or otherwise transferred to another party without the express written consent of Atari, Inc., and for manufacture under the conditions set forth in the accompanying terms of license to use. Except for the purpose of this drawing, the subject matter thereof, unless by written agreement with or written permission from the corporation.

Table 2-3 Custom Audio I/O Chips

ADDRESS	DATA	TEST RESULTS
100F	00	
100F	03	
1000	55	
1001	AF	Custom Audio I/O Chip #1 channel 1 produces pure tone.
1001	00	Custom Audio I/O Chip #1 channel 1 off.
1002	55	
1003	AF	Custom Audio I/O Chip #1 channel 2 produces pure tone.
1003	00	Custom Audio I/O Chip #1 channel 2 off.
1004	55	
1005	AF	Custom Audio I/O Chip #1 channel 3 produces pure tone.
1005	00	Custom Audio I/O Chip #1 channel 3 off.
1006	55	
1007	AF	Custom Audio I/O Chip #1 channel 4 produces pure tone.
1007	00	Custom Audio I/O Chip #1 channel 4 off.
140F	00	
140F	03	
1400	55	
1401	AF	Custom Audio I/O Chip #0 channel 1 produces pure tone.
1401	00	Custom Audio I/O Chip #0 channel 1 off.
1402	55	
1403	AF	Custom Audio I/O Chip #0 channel 2 produces pure tone.
1403	00	Custom Audio I/O Chip #0 channel 2 off.
1404	55	
1405	AF	Custom Audio I/O Chip #0 channel 3 produces pure tone.
1405	00	Custom Audio I/O Chip #0 channel 3 off.
1406	55	
1407	AF	Custom Audio I/O Chip #0 channel 4 produces pure tone.
1407	00	Custom Audio I/O Chip #0 channel 4 off.

## F. Player and Option Switch P10/11 Inputs

1. Perform the CAT Box preliminary set-up.
2. BYTES: 1
3. R/W: READ
4. For each address of Table 2-4, do the following:  
R/W MODE: (OFF)  
Enter address  
R/W MODE: STATIC  
Activate input switch for address.

## Table 2-4 Player and DIP Switch Inputs

ADDRESS	INPUT SWITCH	TEST RESULTS
0800	Right coin switch Left coin switch Self-test switch Slam switch	Lower nibble (right digit) of DATA display changes when right or left coin, or self-test switches are activated. Upper nibble of DATA display is unstable, but has noticeable change when slam switch is activated.
0900	SHIELDS, Player 1 FIRE, Player 1	Upper nibble of DATA display changes when each input switch is activated.
0901	SHIELDS, Player 2 FIRE, Player 2	Upper nibble of DATA display changes when each input switch is activated.
0902	ROTATE LEFT, Player 1 ROTATE RIGHT, Player 1	Upper nibble of DATA display changes when each input switch is activated.
0903	ROTATE LEFT, Player 2 ROTATE RIGHT, Player 2	Upper nibble of DATA display changes when each input switch is activated.
0904	THRUST, Player 1 START	Upper nibble of DATA display changes when each input switch is activated.
0905	THRUST, Player 2 DIP switch at location P10/11, toggle 4	Upper nibble of DATA display changes when each input switch is activated.
0906	GAME SELECT DIP switch at location P10/11, toggle 3	Upper nibble of DATA display changes when each input switch is activated.
0907	Connector J20, pin R DIP switch at location P10/11, toggle 2	Upper nibble of DATA display changes when J20-R is grounded and ungrounded, or when DIP switch P10/11 toggle 2 is set to on and off.

## G. Analog Vector-Generator

### 1. Test

1. Perform the CAT Box preliminary set-up.
2. DATA SOURCE: DATA
3. R/W: WRITE
4. R/W MODE: (OFF)
5. Key in address from Table 2-5 or press ADDRESS INCR.
6. Press DATA SET
7. Key in data from Table 2-5
8. Set R/W MODE to PULSE and then to (OFF)
9. Repeat steps 5-8 for each address in Table 2-5

### CAUTION

You may damage the circuitry of the X-Y display if you key in the VGGO signal without first checking all the addresses and data. Check the data by reading each address location using steps 10-14:

10. R/W: READ
11. R/W MODE: (OFF)
12. Key in address or press ADDRESS INCR.
13. R/W MODE: PULSE
14. Check the data in the DATA display against the data in Table 2-5.

If you are sure the data is correct, proceed to steps 15-19:

15. R/W MODE: WRITE
16. R/W: (OFF)
17. Key in VGGO address 0C80
18. R/W to PULSE and then back to (OFF)
19. After writing to the VGGO address, the screen should show a large plus sign. Failure of the horizontal or vertical circuits shows up as a single line drawn on the screen. If the screen does not display a large plus sign, contact Atari Field Service.

## Table 2-5 Analog Vector-Generator Data

ADDRESS	DATA	ADDRESS	DATA
2000	00	200C	00
2001	70	200D	21
2002	40	200E	80
2003	80	200F	1F
2004	77	2010	80
2005	64	2011	1F
2006	00	2012	00
2007	00	2013	01
2008	80	2014	00
2009	1F	2015	00
200A	00	2016	00
200B	00	2017	E0

## H. LED, Coin Counter and Invert Outputs

1. Perform the CAT Box preliminary set-up.
2. DBUS SOURCE: DATA
3. BYTES: 1
4. R/W: WRITE
5. R/W MODE: (OFF)
6. Enter address 0C00

### CAUTION

If you write ON data to activate a solenoid, deactivate the solenoid immediately by writing the OFF data. If you leave a solenoid activated for more than 10 seconds, you may have to replace the solenoid and/or its driver, due to overheating.

7. For each DATA output of Table 2-6, do the following:

- To activate output:
  - Press DATA SET
  - Enter ON-DATA for desired output
  - R/W MODE: STATIC, then (OFF)
- To deactivate output:
  - Press DATA SET
  - Enter OFF-DATA of activated output
  - R/W MODE: STATIC, then (OFF)

## Table 2-6 LED and Coin Counter Outputs

Key in address 0C00 for the seven outputs below.

ON-DATA	OFF-DATA	OUTPUT DEVICE
39	38	Right Coin Counter
3A	38	Left Coin Counter
30	38	Coin Door Lockout
28	38	GAME SELECT LED
18	38	START LED
78	38	INVERTX*
B8	38	INVERTY**

\*When INVERTX is activated, check for logic 1 on pin 16 of IC B10.

\*\*When INVERTY is activated, check for logic 1 on pin 16 of IC E10.



Space Duel™

# Troubleshooting with Signature Analysis

## A. Signature Analysis Set-up

1. Perform the CAT Box preliminary set-up.
2. Connect the three BNC to E-Z clip cables (supplied with the CAT Box) to the SIGNATURE ANALYSIS CONTROL START, STOP and CLOCK jacks on the CAT Box.
3. Attach the three black E-Z clips to a ground loop on the Space Duel™ game PCB.
4. Attach the CAT Box data probe to the DATA jack on the CAT Box.
5. The colored E-Z clips on the cables will be moved about for each group of signatures to be taken.
6. Set the CAT Box switches as follows:
  - TESTER MODE: SIG
  - TESTER SELF-TEST: OFF
  - PULSE MODE: LATCHED
  - START: As indicated
  - STOP: As indicated
  - CLOCK: As indicated
7. Power up the game board and the CAT Box.

## B. Address Lines

### 1. CAT Box Settings for Address Bus Test

Probe	Trigger	IC-Pin	Test Pt.
Start	—	R2-12	
Stop	—	R2-12	
Clock	—	C2-39	Φ2

Verify CAT Box settings and connections as follows:

- probe GND test point = 0000 signature
- probe +5V test point = 0001 signature

### 2. Signatures

Logic Probe on IC-Pin	Signal Name	Signature Should Be
C1-18	AB0	UUUU
C1-16	AB1	5555
C1-14	AB2	CCCC
C1-12	AB3	7F7F
C1-3	AB4	5H21
C1-5	AB5	0AFA
C1-7	AB6	UPFH
C1-9	AB7	52F8
B1-16	AB8	HC89
B1-14	AB9	2H70
B1-12	AB10	HPP0
B1-7	AB11	1293
B1-5	AB12	HAP7
R2-14	A13	3C96
R2-13	A14	3827
R2-12	A15	755U

## C. Address Decoder

### CAUTION

While testing decoders and ROMs, it may be necessary to add 270 pF capacitors to ADDR 12, 13, 14 and 15 to eliminate unstable signatures.

### 1. CAT Box Settings for Address Decoder Test

Probe	Trigger	IC-Pin	Test Pt.
Start	—	R2-12	
Stop	—	R2-12	
Clock	—		Φ2

### 2. Signatures

Verify CAT Box settings and connections as follows:

- probe GND test point = 0000 signature
- probe +5V test point = 0001 signature

Logic Probe on IC-Pin	Logic Probe on Test Pt.	Signal Name	Signature Should Be
R2-2			7631
R2-1			383A
R3-6			4P0A
R2-4			04UH
R2-3			160U
VMEM	VMEM		12U3
ROM0	ROM0		CFHH
ROM1	ROM1		57HH
ROM2	ROM2		96F8
ROM3	ROM3		546U
ROM4	ROM4		755P
ROM	ROM		5FU9
H3-10			

Jumper R/W test point to +5V test point.

Logic Probe on IC-Pin	Signal Name	Signature Should Be
K6-12	SINP1	U14U
K6-11	SINP2	HF1A
K6-10	EAROMRD	UOHA
P3-1	RAM0	51FP
P3-2	RAM1	6C23
P3-3		587H
P3-4		5AAC
P3-5	IO0	C787
P3-6	IO1	9UAP
R3-11	IOS	2828

Remove jumper between R/W test point and +5V test point.

**NOTE**  
If you are taking signatures on a PCB connected to a game, disconnect the connector to the coin counter(s). The coin counter will energize while K4-6 is connected to ground.

Jumper WRITE, K4-6, to GND test point.

Logic Probe on IC-Pin	Signal Name	Signature Should Be
M5-8	OUTPUT	5AAC
L4-1	VGGO	C9FU
L4-2	WDCLR	258A
L4-3		4C6C
L4-4	VGRST	7079
L4-5	INTACK	F425
L4-6	EAROMCON	6175
L4-7	EAROMWR	HAU2

## Watchdog

The Watchdog circuit will send continuous reset pulses to the microprocessor if a problem exists within the microprocessor circuit. If the self-test fails to run, it is a good practice to check the reset line.

RESET is a microprocessor input (pin 40). In a properly operating game, reset should occur during power-up or when the reset pushbutton is activated. A pulsing RESET line indicates that something is causing the microprocessor to lose its place within its program. Typical causes are:

1. Open or shorted address or data bus lines
2. Bad microprocessor chip
3. Bad bus buffers
4. Bad ROM
5. Bad RAM
6. Any bad input or output that causes an address or data line to be held in a constant high or low state

A pulsing RESET signal indicates a problem exists somewhere within the microprocessor circuitry rather than within the Analog Vector-Generator.

## D. ROM and Data Lines

We are providing only the signatures for ROM4. This ROM contains the self-test procedure that tests all the other ROMs and displays a number representing a ROM failure.

### NOTE

When taking signatures of ROM4, install 270 pF capacitors between IC R2, pin 12 and ground and IC R2, pin 14 and ground.

### 1. CAT Box Settings for ROM4 Test (I.C. J1 for ROM part no. 136006-201)

Probe	Trigger	Test Pt.
Start	—	ROM4
Stop	—	ROM4
Clock	—	Φ2

Verify CAT Box settings and connections as follows:

- probe GND test point = 0000 signature
- probe +5V test point = 755U signature

### 2. Signatures

Logic Probe on IC-Pin	Signal Name	Signature Should Be
J1-9	D0	46A2
J1-10	D1	0325
J1-11	D2	10H5
J1-13	D3	P228
J1-14	D4	9FP1
J1-15	D5	5U58
J1-16	D6	C57C
J1-17	D7	2C95

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING  
CONFIDENTIAL: Reproduction forbidden without the specific written permission of Atari, Inc., San Jose, CA.  
This drawing contains confidential information and is the property of Atari, Inc. It is to be held in confidence and not possessed, copied or transferred by right in, or license to use, the same. The information contained herein is the sole property of Atari, Inc. and is to be used only for the purpose for which it was supplied. No part of this drawing or any part thereof, except for manufacturing purposes, may be reproduced or otherwise used without the corporation's written license. Except for manufacturing purposes, no part of this drawing or any part thereof, may be reproduced or otherwise used without the corporation's written license, unless so agreed in writing with the corporation.

