




www.se-audiotechnik.com
www.se-audiotechnik.co.kr

USER'S MANUAL

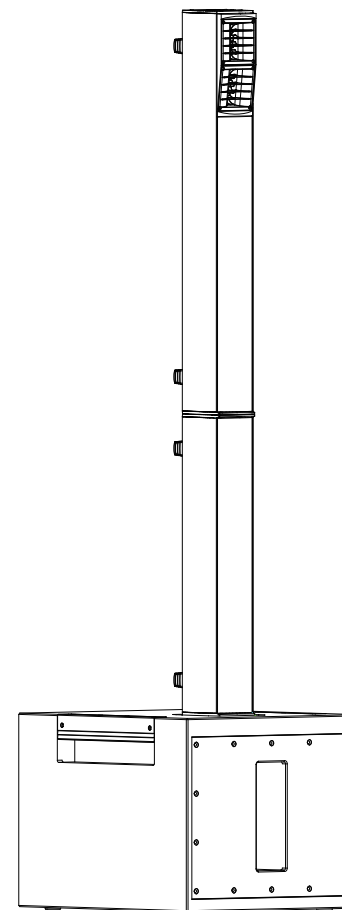

ALL IN ONE ARRAY SYSTEM
M-A8

SUBWOOFER EXTENSION
M-A8SE

You've made the right choice!

We have designed this product to operate reliably over many years. s)))e audiotechnik stands for this with its name and many years of experience as a manufacturer of high-quality audio products.

Please read this User's Manual carefully, so that you can begin making optimum use of your s)))e audiotechnik product quickly.

You can find more information about s)))e audiotechnik at our Internet site **WWW.SE-AUDIOTECHNIK.COM**
WWW.SE-AUDIOTECHNIK.CO.KR

Introduction

The s)))e audiotechnik M-A8 Column PA System has been designed for professional use. The PA system offers high quality components, DSP-controlled amplifiers and a sound that is balanced across the entire frequency range. The digital signal processing of the s)))e LECC DSP includes features such as crossover, equalizer, compressor and limiter, and is specifically designed to support the M-A8 PA system, in order to provide an optimal audio performance at any time.


Designed as a "plug and play" system, it requires no additional cables or stands and can therefore be quickly and easily assembled and disassembled.

M-A8

COMPACT COLUMN PA SYSTEM ACTIVE

M-A8SE

SUBWOOFER EXTENSION

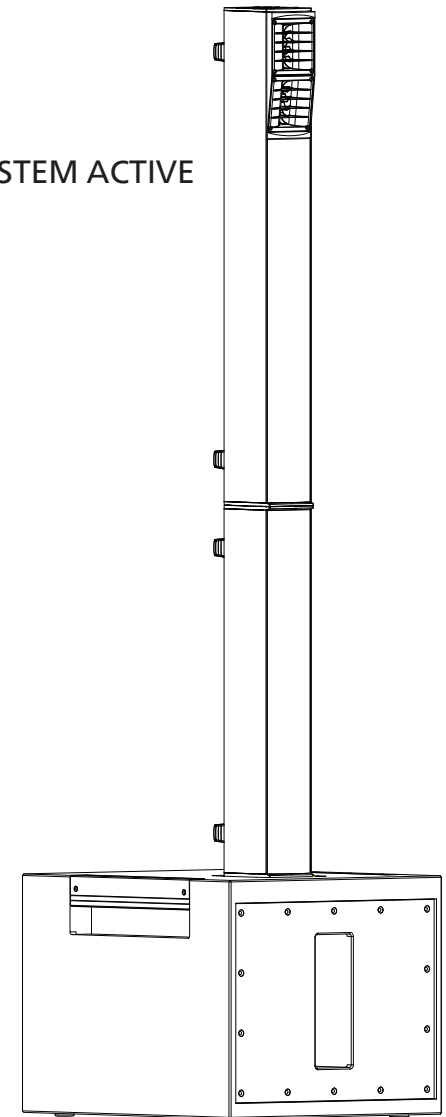

PREVENTIVE MEASURES:

1. Please read these instructions carefully.
2. Keep all information and instructions in a safe place.
3. Follow the instructions.
4. Observe all safety warnings. Never remove safety warnings or other information from the equipment.
5. Use the equipment only in the intended manner and for the intended purpose.
6. Use only sufficiently stable and compatible stands and/or mounts (for fixed installations). Make certain that wall mounts are properly installed and secured. Make certain that the equipment is installed securely and cannot fall down.
7. During installation, observe the applicable safety regulations for your country.
8. Never install and operate the equipment near radiators, heat registers, ovens or other sources of heat. Make certain that the equipment is always installed so that it is cooled sufficiently and cannot overheat. Avoid direct sunlight!
9. Never place sources of ignition, e.g., burning candles on the equipment.
10. Ventilation slits must not be blocked.
11. Do not use this equipment in the immediate vicinity of water (does not apply to special outdoor equipment - in this case, observe the special instructions noted below. Do not expose this equipment to flammable materials, fluids or gases.
12. Make certain that dripping or splashed water cannot enter the equipment. Do not place containers filled with liquids, such as vases or drinking vessels, on the equipment.
13. Make certain that objects cannot fall into the device.
14. Use this equipment only with the accessories recommended and intended by the manufacturer.
15. Do not open or modify this equipment.
16. After connecting the equipment, check all cables in order to prevent damage or accidents, e.g., due to tripping hazards.
17. During transport, make certain that the equipment cannot fall down and possibly cause property damage and personal injuries.
18. If your equipment is no longer functioning properly, if fluids or objects have gotten inside the equipment or if it has been damaged in another way, switch it off immediately and unplug it from the mains outlet (if it is a powered device). This equipment may only be repaired by authorized, qualified personnel.
19. Clean the equipment using a dry cloth.
20. Comply with all applicable disposal laws in your country. During disposal of packaging, please separate plastic and paper/cardboard.
21. Plastic bags must be kept out of reach of children.

FOR EQUIPMENT THAT CONNECTS TO THE POWER MAINS:

22. CAUTION: If the power cord of the device is equipped with an earthing contact, then it must be connected to an outlet with a protective ground. Never deactivate the protective ground of a power cord.
23. If the equipment has been exposed to strong fluctuations in temperature (for example, after transport), do not switch it on immediately. Moisture and condensation could damage the equipment. Do not switch on the equipment until it has reached room temperature.
24. Before connecting the equipment to the power outlet, first verify that the mains voltage and frequency match the values specified on the equipment. If the equipment has a voltage selection switch, connect the equipment to the power outlet only if the equipment values and the mains power values match. If the included power cord or power adapter does not fit in your wall outlet, contact your electrician.
25. Do not step on the power cord. Make certain that the power cable does not become kinked, especially at the mains outlet and/or power adapter and the equipment connector.
26. When connecting the equipment, make certain that the power cord or power adapter is always freely accessible. Always disconnect the equipment from the power supply if the equipment is not in use or if you want

SAFETY:

- to clean the equipment. Always unplug the power cord and power adapter from the power outlet at the plug or adapter and not by pulling on the cord. Never touch the power cord and power adapter with wet hands.
27. Whenever possible, avoid switching the equipment on and off in quick succession because otherwise this can shorten the useful life of the equipment.
 28. IMPORTANT INFORMATION: Replace fuses only with fuses of the same type and rating. If a fuse blows repeatedly, please contact an authorised service center.
 29. To disconnect the equipment from the power mains completely, unplug the power cord or power adapter from the power outlet.
 30. If your device is equipped with a Volex power connector, the mating Volex equipment connector must be unlocked before it can be removed. However, this also means that the equipment can slide and fall down if the power cable is pulled, which can lead to personal injuries and/or other damage. For this reason, always be careful when laying cables.
 31. Unplug the power cord and power adapter from the power outlet if there is a risk of a lightning strike or before extended periods of disuse.



CAUTION:

Never remove the cover, because otherwise there may be a risk of electric shock. There are no user serviceable parts inside. Have repairs carried out only by qualified service personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions.

CAUTION – HIGH VOLUME LEVELS WITH AUDIO PRODUCTS!

This equipment is intended for professional use. Therefore, commercial use of this equipment is subject to the respectively applicable national accident prevention rules and regulations. As a manufacturer, s)))e audiotechnik is obligated to notify you formally about the existence of potential health risks.

Hearing damage due to high volume and prolonged exposure: When in use, this product is capable of producing high sound-pressure levels (SPL) that can lead to irreversible hearing damage in performers, employees, and audience members. For this reason, avoid prolonged exposure to volumes in excess of 90 dB.



To prevent possible hearing damage, avoid listening at high volume levels over long periods of time. Even exposure to short bursts of loud noise can result in hearing loss. Please keep the volume constantly at a comfortable level.

SETUP, CONNECTION AND **STARTUP:**

GENERAL INSTRUCTIONS

The subwoofer of the M-A8 system, as well as the subwoofer extension M-A8SE must be placed on a level surface on its rubber feet before use. Never operate your system on a trolley, as there is a risk that the entire system might be unstable. Accidents and damage may result. The cooling of the power amplifier is via the vents in the connector panel on the back of the subwoofer. To ensure adequate cooling, during operation a minimum distance of 50 cm must be maintained between the back of the subwoofer and other objects such as walls for example.

Please ensure the correct connection of audio and power connections for the system and all connected devices such as mixers, CD players, etc. Use only undamaged cables of suitable diameter and always unwind cable reels completely. If necessary, use cable bridges to avoid tripping over loose cables. Never place the device directly on an edge. Do not place the subwoofer on a table. To avoid unwanted background noise when turning on connected devices, always turn on the system last and turn it off first.

SETUP

The M-A8 PA system consists of three components:


- A** A Subwoofer with integrated electronics for all system components.
- B** The lower vertical array column with eight 3.5" speakers, 2 multi-pin connectors and the guide pins. Since the lower column is equipped with special circuitry, and the connector panels at both ends are identical, it is irrelevant which of the two power terminals is plugged into the subwoofer.
- C** The upper vertical array column with eight 3.5" speakers, the tweeters and a multi-pin connector on the bottom.

Once the subwoofer has been placed in the desired location, the lower array column should then be plugged into the subwoofer. Sturdy steel pins help ensure that the multi-pin connectors of both speakers are perfectly interlocked. The upper vertical array column is simply plugged into the lower column in the same way. To facilitate transportation, as well as assembly and disassembly, handles at the top and bottom are attached on the back of the array columns. The handles can be removed if necessary using a 5 mm Allen key.

As a rule, the M-A8 subwoofer extension can be positioned both next to and under the M-A8 column system. For positioning under the M-A8 column system, there are 4 recesses on the top of the subwoofer into which the rubber feet of the M-A8 subwoofer fit exactly. This effectively prevents slipping of the M-A8 column system on the M-A8 subwoofer. Place the array columns on the M-A8 subwoofer only after you have set both subwoofers one above the other.

CONNECTION AND OPERATION


The device allows both the volume of the entire system and the volume of the subwoofer in relation to the total volume to be adjusted separately. Source devices can be connected using both balanced and unbalanced cables (XLR / 6.3 mm jack / RCA). If the M-A8SE subwoofer is used as an extension for the M-A8 column system, optimal control is achieved by the M-A8 column system in accordance with the following steps: Move the DSP MODE switch to the right position SLAVE (M-A8SE) and connect the line output SLAVE SUB OUT (M-A8) of the M-A8 column system with the line input SLAVE SUB IN (M-A8SE) of the M-A8 subwoofer using a balanced XLR Cable. If the DSP MODE switch is in SLAVE position (M-A8SE), the SUB LEVEL, SUB FREQ and SUB PHASE controls, as well as the left line input LINE INPUT LEFT are disabled.

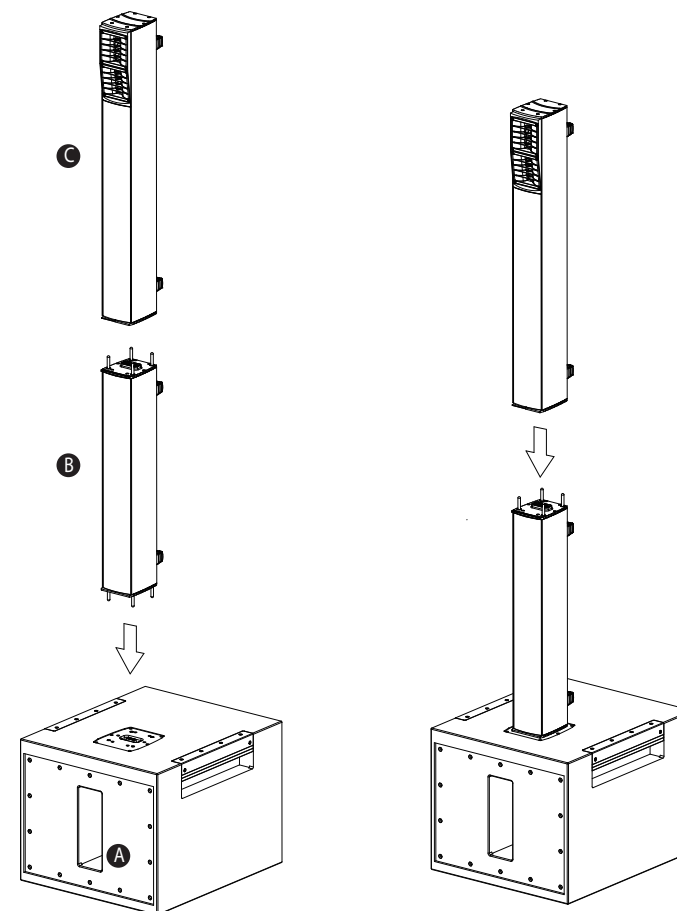

SETUP:

CONNECTIONS, **CONTROLS**, AND INDICATORS:

M-A8

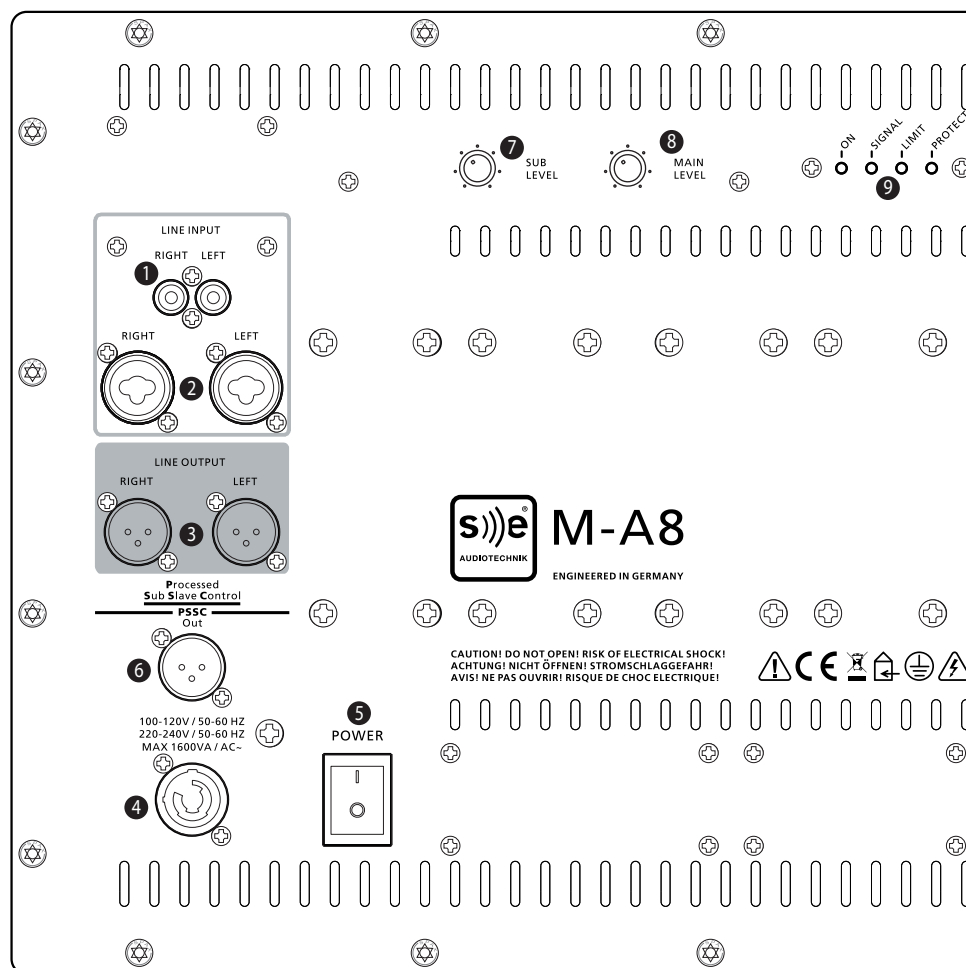

1 LINE INPUT LEFT / RIGHT

Unbalanced line input with 2 RCA jacks to connect a playback device (e.g. mixer). An incoming stereo signal is mono summed internally.

CONNECTIONS, **CONTROLS**, AND INDICATORS:

2 LINE INPUT LEFT / RIGHT

Balanced line input with 2 female XLR / 6.3 mm jacks (combo jacks) to connect a playback device (e.g. mixer). An incoming stereo signal is mono summed internally.

3 LINE OUTPUT LEFT / RIGHT

The balanced line outputs (2 x male XLR male jack) can be used to control other active speakers or amplifiers. The output signal corresponds to the input signal.

4 NEUTRIK POWERCON MAINS SOCKET

An appropriate mains cord is included in the package. The M-A8 PA system is intended for 2 operating voltage ranges (100 V - 120 V AC and 200 V - 240 V AC). The conversion is done automatically.

5 POWER

Illuminated On / Off switch for the power supply of the device. Before switching the active speaker on or off, always adjust the volume to zero (MAIN LEVEL all the way to the left).

6 SLAVE SUB OUT (M-A8SE)

Balanced line output with XLR socket. Use this line-out exclusively for controlling the M-A8SE subwoofer extension.

7 SUB LEVEL

Adjusting the volume ratio of the subwoofer to the column loudspeaker.

8 MAIN LEVEL

Overall volume adjustment. The subwoofer volume is also adjusted in accordance with the preset level on the SUB LEVEL controller.

9 INDICATOR LEDS

ON: Lights up once the system is properly connected to the power mains and switched on.

SIGNAL: Lights up as soon as an audio signal is present. The signal acquisition is performed before the MAIN LEVEL controller.

LIMIT: Lights up if the loudspeaker system is operating in the clipping range. A short flash of the LED is not critical. To protect the system, an excessive signal level is gently turned down by the built-in limiter. If the limiter LED lights up permanently or for longer periods, reduce the volume level. Failure to do so may result in a distorted sound and damage to the speaker system.

PROTECT: Lights up if the system is overloaded/overheated. The amplifiers are muted automatically. Upon reaching normal operating conditions, the device reverts to normal operating mode, after a few minutes.

FREQUENCY ALLOCATION:

TWEETER 1 with Waveguide

TWEETER 2 with Waveguide
and a 7 degree tilt for
coverage of the "close proximity"

Passive crossover


UPPER MIDS/TREBLE
Amplifier power 200 W (RMS)

MIDS
Amplifier power 200 W (RMS)

MIDS
Amplifier power 200 W (RMS)


LOWER MIDS
Amplifier power 200 W (RMS)

SUBWOOFER
Amplifier power 800 W (RMS)

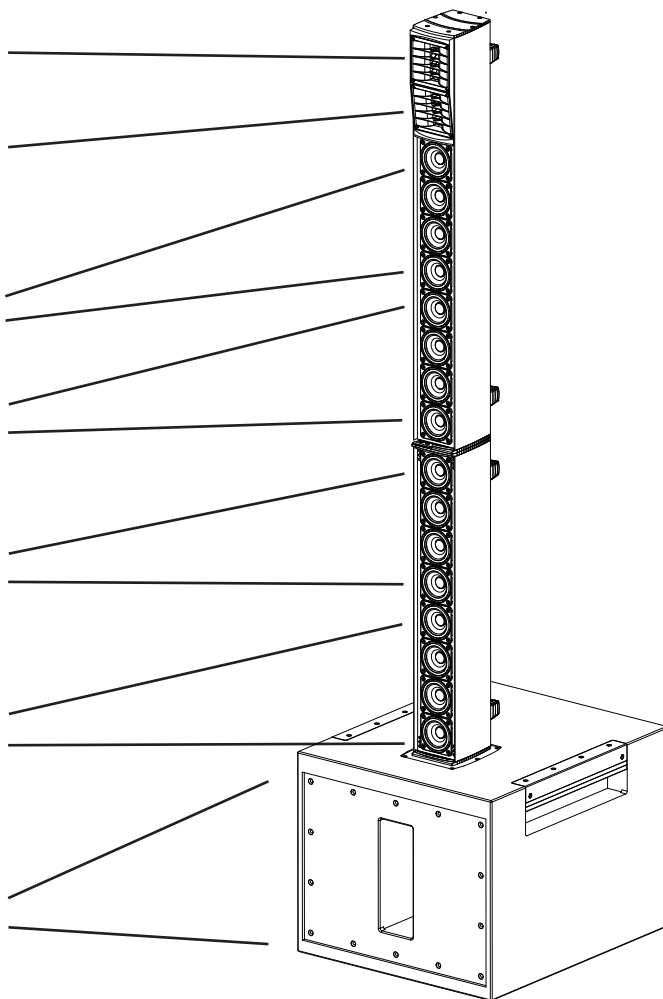


The DSP based amplification of the M-A8 speaker system ensures a clear, dynamic and balanced sound across the entire frequency range. The array configuration and the use of tweeters with Waveguide ensure an improved sound field coverage and an especially balanced dispersion pattern throughout the whole venue.

DSP BLOCK DIAGRAM (M-A8) :

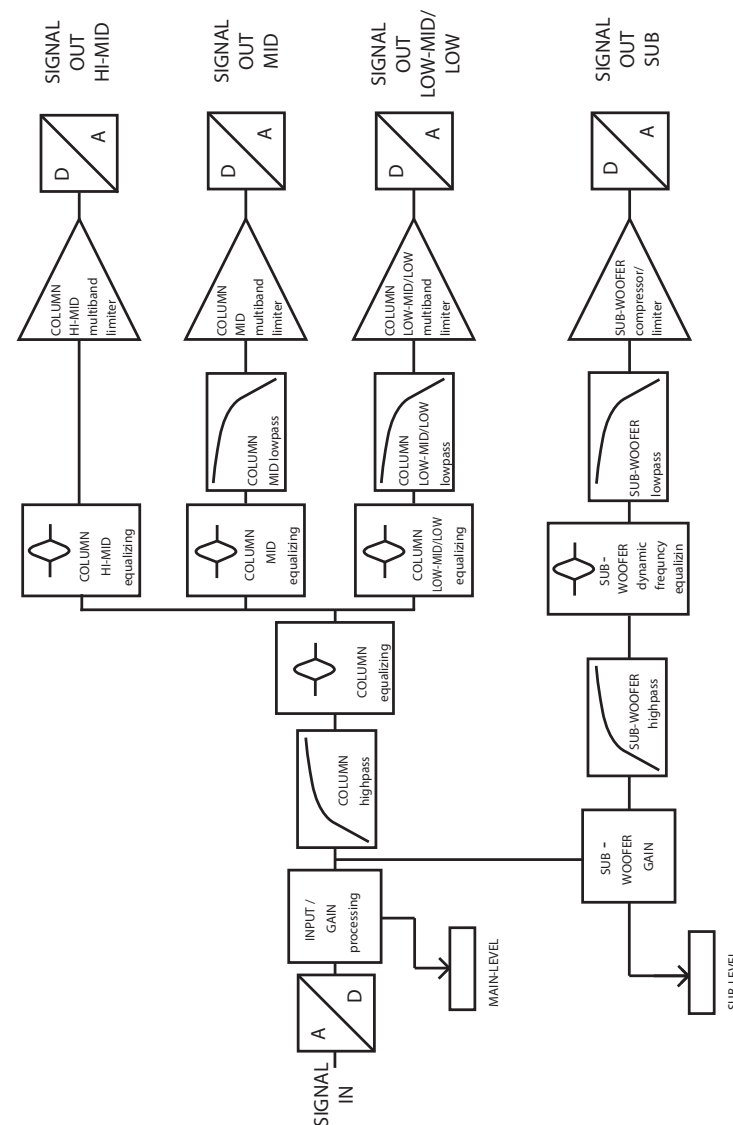

CONNECTIONS, **CONTROLS**, AND INDICATORS:

M-A8SE

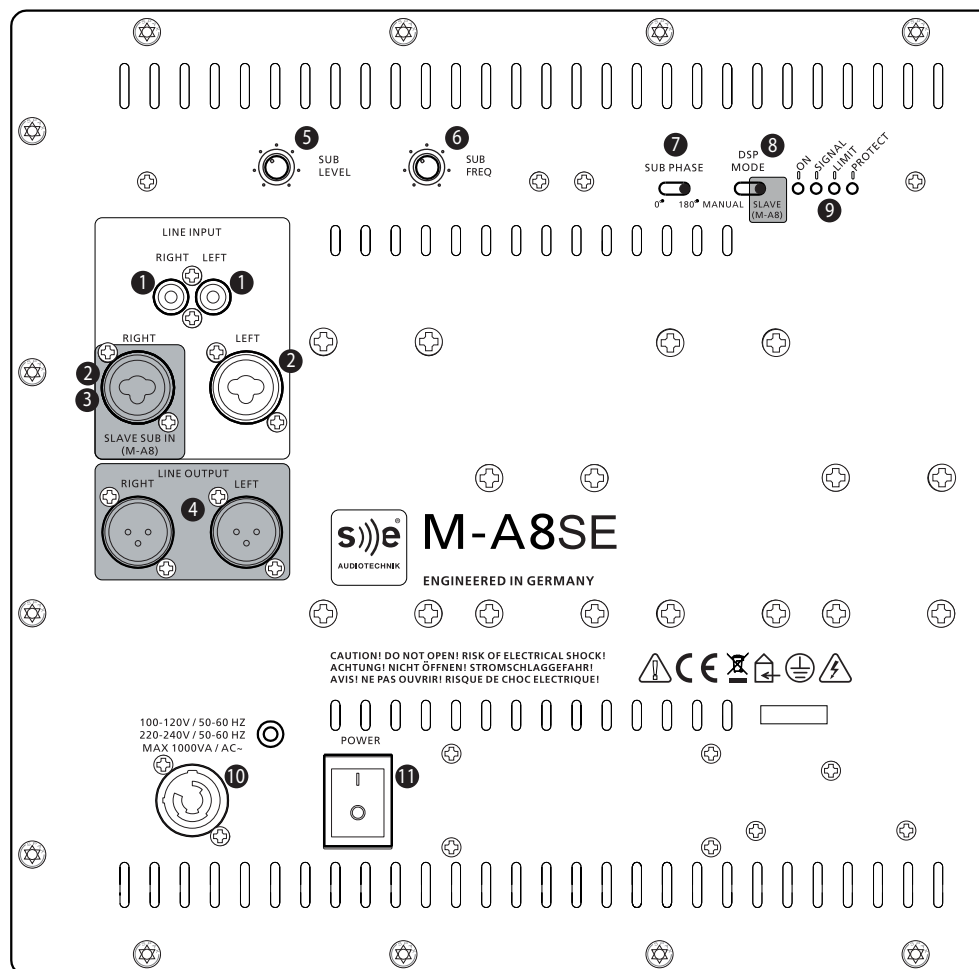

CONNECTIONS, **CONTROLS**, AND INDICATORS :

Important notes about using the M-A8SE subwoofer extension:

If PA subwoofer M-A8SE subwoofer is to be used as stand-alone, set the **DSP MODE** switch to the left position **MANUAL**. The connectors LINE INPUT LEFT / RIGHT, and LINE OUTPUT LEFT / RIGHT can now be used to connect playback devices and to control other speakers or amplifiers. Also, the SUB LEVEL, SUB FREQ and SUB PHASE controls can be used for customised settings.

If the M-A8SE subwoofer is used as an extension for the M-A8 column system, set the **DSP MODE** switch to the right position **SLAVE (M-A8SE)** and connect the line output SLAVE SUB OUT (M-A8) of the M-A8 column system with the line input SLAVE SUB IN (M-A8SE) of the M-A8SE subwoofer. If the switch is in SLAVE position (M-A8SE), the SUB LEVEL, SUB FREQ and SUB PHASE controls, as well as the left line input LINE INPUT LEFT are disabled.

1 LINE INPUT LEFT / RIGHT

Unbalanced line input with 2 RCA phono jacks. An incoming stereo signal is mono summed internally. If the M-A8SE subwoofer is to be used as stand-alone PA subwoofer, set the DSP MODE switch to the left position MANUAL.

2 LINE INPUT LEFT / RIGHT

Balanced line input with 2 female XLR / 6.3 mm jack (combo jack). An incoming stereo signal is mono summed internally. If the M-A8SE subwoofer is to be used as stand-alone PA subwoofer, set the DSP MODE switch to the left position MANUAL.

3 SLAVE SUB IN

Balanced line input with XLR / 6.3 mm jack (combo jack). If the M-A8SE subwoofer is used as an extension for the M-A8 column system, optimal control is achieved by the M-A8 column system in accordance with the following steps: Move the DSP MODE switch to the right position SLAVE (M-A8SE) and connect the line output SLAVE SUB OUT (M-A8) of the M-A8 column system with the line input SLAVE SUB IN (M-A8SE) of the M-A8SE subwoofer using a balanced XLR Cable. If the DSP MODE switch is in SLAVE position (M-A8SE), the SUB LEVEL, SUB FREQ and SUB PHASE controls, as well as the left line input LINE INPUT LEFT are disabled. Now, the control of the volume on the subwoofer of the M-A8 column system and the M-A8SE subwoofer is done via the SUB LEVEL controller on the M-A8 column system.

4 LINE OUTPUT LEFT / RIGHT

Balanced line output with 2 male XLR connectors. The output signal corresponds to the input signal.

5 SUB LEVEL

Volume controller for the M-A8SE subwoofer. If the DSP MODE switch is in position SLAVE (M-A8SE), the volume control SUB LEVEL is disabled.

6 SUB FREQ

Setting the upper cut-off frequency of the subwoofer from 80 Hz to 140 Hz. If the DSP MODE switch is in position SLAVE (M-A8SE), this feature is disabled.

CONNECTIONS, CONTROLS, AND INDICATORS:

7 SUBPHASE 0° / 180°

The phase reverse switch for the subwoofer (0°, 180°) is factory set to 0°. This setting is suitable for the majority of applications. In unfavourable acoustic conditions, the setting of 180° may have a positive effect on the overall sound. If the DSP MODE switch is in position SLAVE (M-A8SE), this feature is disabled.

8 DSP MODE

MANUAL: If the M-A8SE subwoofer is to be used as stand-alone PA subwoofer, set the switch to the left position MANUAL. The connectors LINE INPUT LEFT / RIGHT, and LINE OUTPUT LEFT / RIGHT can now be used to connect playback devices and to control other active speakers or amplifiers. Also, the SUB LEVEL, SUB FREQ and SUB PHASE controls can be used for customised settings.

SLAVE (M-A8SE): If the M-A8SE subwoofer is used as an extension for the M-A8 column system, set the DSP MODE switch to the right position SLAVE (M-A8SE) and connect the line output SLAVE SUB OUT (M-A8) of the M-A8 column system with the line input SLAVE SUB IN (M-A8SE) of the M-A8SE subwoofer. If the switch is in SLAVE position (M-A8SE), the SUB LEVEL, SUB FREQ and SUB PHASE controls, as well as the left line input LINE INPUT LEFT are disabled.

9 INDICATOR LEDS

ON: Lights up once the system is properly connected to the power mains and switched on.

SIGNAL: Lights up as soon as an audio signal is present. The signal acquisition is performed before the MAIN LEVEL controller.

LIMIT: Lights up if the loudspeaker system is operating in the clipping range. A short flash of the LED is not critical. To protect the system, an excessive signal level is gently turned down by the built-in limiter. If the limiter LED lights up permanently or for longer periods, reduce the volume level. Failure to do so may result in a distorted sound and damage to the speaker system.

PROTECT: Lights up if the system is overloaded/overheated. The amplifiers are muted automatically. Upon reaching normal operating conditions, the device reverts to normal operating mode, after a few minutes.



10 NEUTRIK POWERCON MAINS SOCKET

An appropriate mains cord is included in the package. The M-A8 PA system is intended for 2 operating voltage ranges (100 V - 120 V AC and 200 V - 240 V AC). The conversion is done automatically.

11 POWER

Illuminated On / Off switch for the power supply of the device. Before switching the power on or off, always adjust the volume to zero (MAIN LEVEL all the way to the left).

SETUP / POSITIONING:

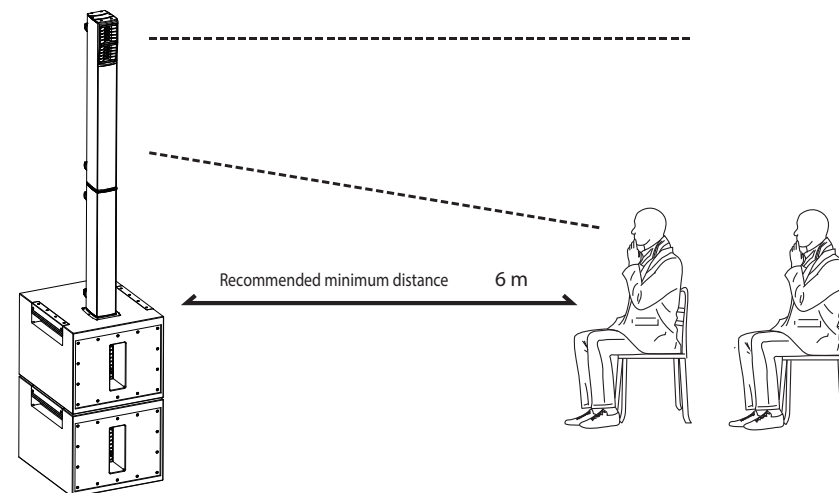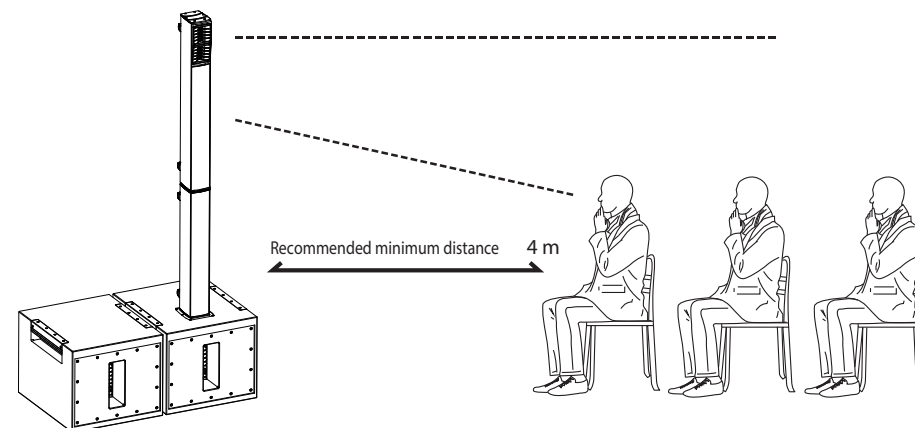


As a rule, the M-A8SE subwoofer can be positioned both next to and under the M-A8 column system. For positioning under the M-A8 column system, there are 4 recesses on the top of the subwoofer into which the rubber feet of the M-A8 subwoofer fit exactly. This effectively prevents slipping of the M-A8 column system on the M-A8SE subwoofer.

By stacking the M-A8 column system and the M-A8SE subwoofer, it is possible to increase the acoustic range of the overall system. To obtain an optimal sound, a minimum distance of approx. 6 m from the system is recommended for a seated audience.

WIRING EXAMPLE:

M-A8 + M-A8SE

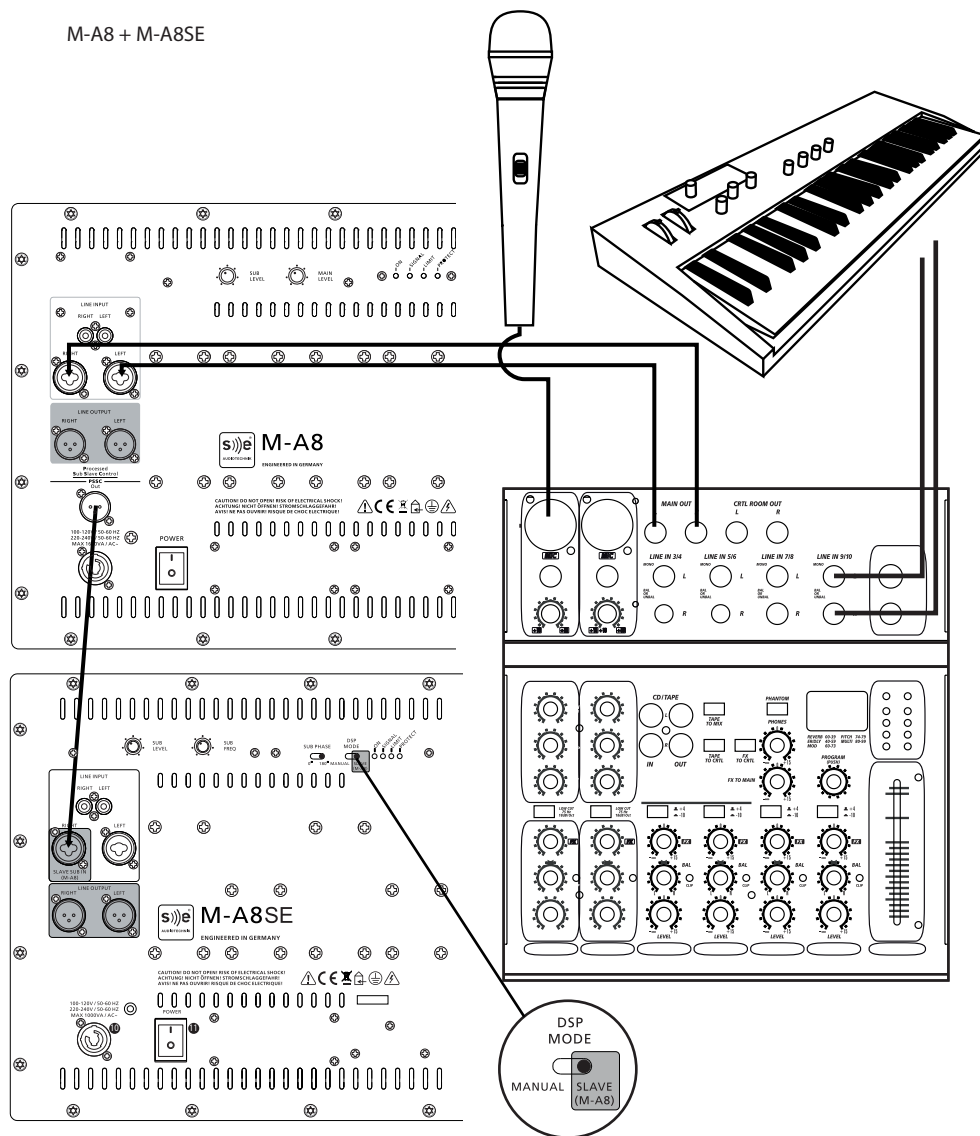

s)))e SYSTEMS LECC DSP :

WHAT DOES S)))e AUDIOTECHNIK LECC DSP STAND FOR?

DSP stands for Digital Signal Processing (Digital Signal Processing), LECC for limiter, EQ, Compressor and Crossover. The digital signal processing ensures maximum audio performance with maximum clarity and protects the PA system from overload.

WHAT EXACTLY DOES THE LECC DSP DO?

The Limiter function protects the speakers and prevents distortions caused by overload. Separate limiters for the bass, midrange and high range attenuate the signal when the level exceeds a value which could have a negative effect. Each limiter is optimised for one of the three seamlessly contiguous frequency ranges (multi-band limiter). The system can be operated in this manner with a higher overall sound pressure as extreme peaks are automatically lowered, so that the total volume does not need to be reduced.

The **Multiband EQ** works over the entire frequency range and optimises the overall sound of the system.

The **Compressor** is switched on automatically to raise the bass response and create a punchier sound. When the volume is increased, the bass boost is automatically reduced. The automatically controlled bass blends perfectly into the overall sound.

The **Crossovers** divide the audio signal according to the frequency range of the respective speakers, namely the subwoofer or the mids and tweeters of the array column. The amplitude and running-time optimisation of the crossover ensures that all frequencies are output evenly and reach the listener at the same time.

SPECIFICATIONS (M-A8) :

Model Name:	M-A8
Product Type:	ALL-IN-ONE ACTIVE COLUMN SYSTEM
Type:	active
Colour:	black
Max. SPL (peak):	131 dB
Frequency Response:	40 Hz - 20,000 Hz
Dispersion Angle (H x V):	120° (average, horizontal)
Total Height:	2180 mm
Total Weight:	58.4 kg
Features:	LECC DSP, stable steel pins for a reliable connection between the components
Subwoofer	
Woofers Size:	2 x 12"
Woofers Magnet:	neodymium
Cabinet Type:	band Pass
Cabinet Material:	18 mm plywood
Cabinet Surface:	polyurea
Subwoofer Dimensions (W x H x D):	544 x 475 x 636 mm
Subwoofer Weight:	42.5 kg
Subwoofer Features:	custom made multi-pin connectors for vertical array

SPECIFICATIONS (M-A8) :

Mid/Hi System	
Midrange Size:	16 x 3.5"
Midrange Magnet:	neodymium
Tweeter Size:	2 x 1" with Waveguide (1 x 7° tilted)
Tweeter Magnet:	ferrite
Speaker Input Connections:	custom made multi-pin connectors
Mid/Hi System Cabinet Type:	closed
Mid/Hi System Cabinet Material:	aluminium
Mid/Hi System Cabinet Surface:	powder coated
Mid/Hi System Dimensions (W x H x D):	upper column 120 x 977 x 192 mm lower column 120 x 728 x 180 mm
Mid/Hi System Weight:	upper column 9.5 kg lower column 6.5 kg
Mid/Hi System Features:	vertical array with an extremely wide sound dispersion

SPECIFICATIONS (M-A8) :


Amplifier Module	
Amplifier:	class D
Amplifier Power System (RMS)	1600 W
Amplifier Power System (peak):	6400 W
Amplifier Power Subwoofer (RMS):	800 W
Amplifier Power Subwoofer (peak):	3200 W
Amplifier Power Mid/Hi (RMS):	4 x 200 W
Amplifier Power Mid/Hi (peak):	4 x 800 W
Protection:	multiband limiter, over voltage, short circuit, overcurrent
Cooling System:	passive
Controls:	Main Level, Sub Level, Power ON / OFF
Indicators:	LEDs for: On, Signal, Limit, Protect
Power Socket:	Neutrik PowerCon
Power Supply:	switching power supply
Operating Voltage:	100 V AC - 120 V AC, 50 - 60 Hz 200 V AC - 240 V AC, 50 - 60 Hz
Power Consumption (max.):	2000 VA
Stereo Line Inputs:	2
Line Input Connectors:	XLR / 6.3 mm jack combo, RCA
Stereo Line Outputs:	1
Line Output Connectors:	2 x XLR male
Processed Sub Slave Control out	1 x XLR male
Speaker Outputs:	1
Speaker Output Connections:	custom made multi-pin
DSP Specifications	
DSP Functions:	Limiter, EQ, Compressor, Crossover
Resolution A/D - D/A:	24 Bit - 24 Bit
Sampling Rate:	48 kHz
Noise Ratio:	100 dB

SPECIFICATIONS (M-A8SE) :

Model Name:	M-A8SE
Product Type:	subwoofer expansion
Type:	active
Woofer Size:	2 x 12"
Woofer Magnet:	neodymium
Amplifier:	class D
Amplifier Power (RMS):	800 W
Amplifier Power (Peak):	3200 W
Max. SPL (peak):	131 dB
Frequency Response:	40 Hz - 140 Hz
Protection:	multiband limiter, over voltage, short circuit, overcurrent
Cooling System:	passive
Controls:	Sub Level, Sub Freq, Sub Phase, Power ON / OFF, DSP Mode
Indicators:	LEDs for: On, Signal, Limit, Protect
Power Socket:	Neutrik PowerCon
Power Supply:	switching power supply
Operating Voltage:	100 V AC - 120 V AC, 50 - 60 Hz 200 V AC - 240 V AC, 50 - 60 Hz
Power Consumption (max.):	1000 VA
Cabinet Type:	band Pass
Housing Material:	18 mm plywood
Cabinet Surface:	polyurea
Cabinet Colour:	black
Subwoofer Dimensions (W x H x D):	544 x 475 x 636 mm
Subwoofer Weight:	42.5 kg
DSP Specifications	
DSP Functions:	Limiter, EQ, Compressor, Crossover
Resolution A/D - D/A:	24 Bit - 24 Bit
Sampling Rate:	48 kHz
Noise Ratio:	100 dB

OPTIONAL ACCESSORIES:

M-A8 FC
Flight case

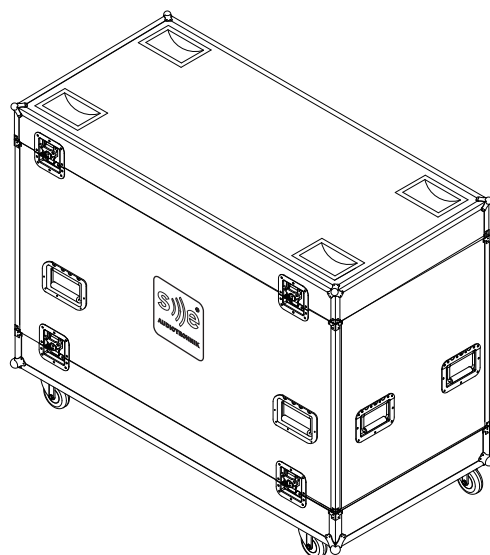

MANUFACTURER'S DECLARATIONS:

LIMITED WARRANTY

This Limited Warranty applies to the **sennheiser** **AUDIOTECHNIK** branded products.

The statutory warranty rights towards the seller are not affected by this guarantee. In fact, it justifies additional independent warranty claims towards **sennheiser**.

sennheiser warrants that the **sennheiser** product you have purchased from **sennheiser** or from an **sennheiser** authorized reseller is free from defects in materials or workmanship under normal use for a period of 1 year from the date of purchase.

The Limited Warranty Period starts on the date of purchase. In order to receive warranty services you are required to provide proof of the purchase date. Your dated sales or delivery receipt, showing the date of purchase, is your proof of the purchase date. Should products of the brands named above be in need of repair within the limited warranty period, you are entitled to warranty services according to the terms and conditions stated in this document.

This Limited Warranty extends only to the original purchaser of this **sennheiser** branded product and is not transferable to anyone who obtains ownership of the **sennheiser** branded product from the original purchaser. During the Limited Warranty Period, **sennheiser** will repair or replace the defective component parts or the product. All component parts or hardware products removed under this Limited Warranty become the property of **sennheiser**.

In the unlikely event that your **sennheiser** product has a recurring failure, **sennheiser**, at its discretion, may elect to provide you with a replacement unit of **sennheiser**'s choice that is at least equivalent to your **sennheiser** branded product in hardware performance.

sennheiser does not warrant that the operation of this product will be uninterrupted or error-free. **sennheiser** is not responsible for damage that occurs as a result of your failure to follow the instructions included with the **sennheiser** branded product.

This Limited Warranty does not apply,

- to wear parts (e.g. accumulator)
- to any product from which the serial number has been removed or that has been damaged or rendered defective as the result of an accident
- in case of, misuse, abuse, or other external causes
- by operation outside the usage parameters stated in the user's documentation shipped with the product
- by use of spare parts not manufactured or sold by **sennheiser**
- by modification or service by anyone other than **sennheiser**

These terms and conditions constitute the complete and exclusive warranty agreement between you and **sennheiser** regarding the **sennheiser** branded product you have purchased.

MANUFACTURER'S DECLARATIONS:

LIMITATION OF LIABILITY

If your Sennheiser branded hardware product fails to work as warranted above, your sole and exclusive remedy shall be repair or replacement. Sennheiser's maximum liability under this limited warranty is expressly limited to the lesser of the price you have paid for the product or the cost of repair or replacement of any hardware components that malfunction in conditions of normal use.

Sennheiser is not liable for any damages caused by the product or the failure of the product, including any lost profits or savings or special, incidental, or consequential damages. Sennheiser is not liable for any claim made by a third party or made by you for a third party.

This limitation of liability applies whether damages are sought, or claims are made, under this Limited Warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised Sennheiser of an authorized representative of Sennheiser of the possibility of any such damages. This limitation of liability however, will not apply to claims for personal injury.

This Limited Warranty gives you specific legal rights. You may also have other rights that may vary from state to state or from country to country. You are advised to consult applicable state or country laws for a full determination of your rights.

REQUESTING WARRANTY-SERVICE

To request warranty service for the product, contact Sennheiser or the Sennheiser authorized reseller from which you purchased the product.

EC DECLARATION OF CONFORMITY

These devices meet the essential requirements and further relevant specifications of Directives 2004/108/EC (EMC) and 2006/95/EC. For more information, see www.se-audiotechnik.com.

CORRECT DISPOSAL OF THIS PRODUCT (ELECTRICAL WASTE)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details on where and how they can recycle this item in an environmentally friendly manner.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

MANUFACTURER'S DECLARATIONS:

WEEE-DECLARATION



Your Sennheiser-Systems product was developed and manufactured with high quality materials and components which can be recycled and/or reused. This symbol indicates that electrical and electronic equipment must be disposed of separately from normal waste at the end of its operational lifetime. Please dispose of this product by bringing it to your local collection point or recycling centre for such equipment. This will help to protect the environment in which we all live.

BATTERIES AND ACCUMULATORS



The supplied batteries or rechargeable batteries can be recycled. Please dispose of them as special waste or return them to your specialist dealer. In order to protect the environment, only dispose exhausted batteries.

Sennheiser AUDIOTECHNIK, all rights reserved. The technical data and the functional product characteristics can be subject to modifications. The photocopying, the translation, and all other forms of copying of fragments or of the integrity of this user's manual is prohibited.